



INSTALLATION INSTRUCTION








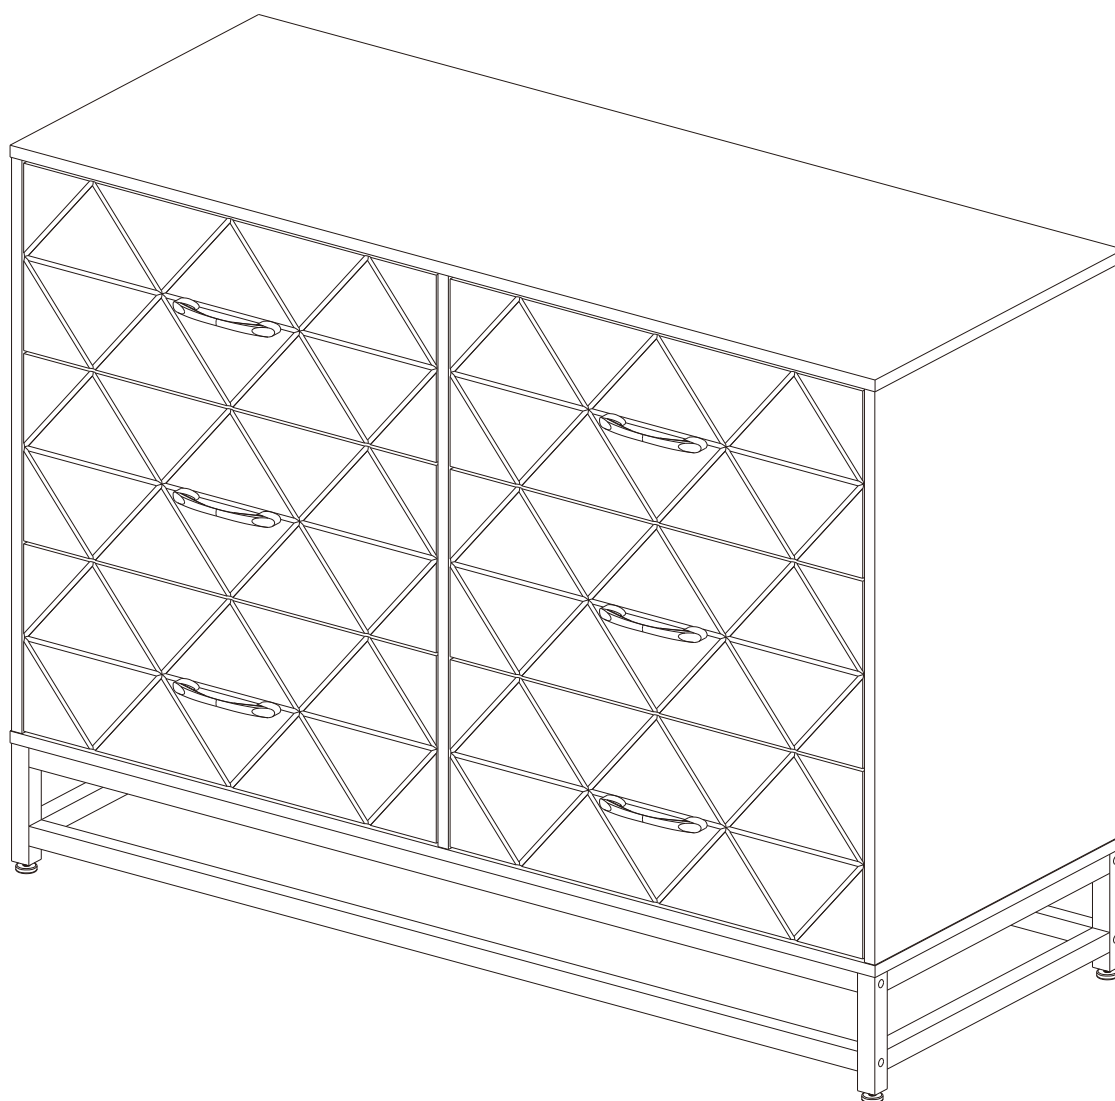


Thank you for purchasing our products. Please contact us if you have difficulty with assembly or need replacement parts. Our customer service is here to assist you. Please attach your User Name and Order ID so that we can assist you better.
support@jojoka.net

BOARD IDENTIFICATION

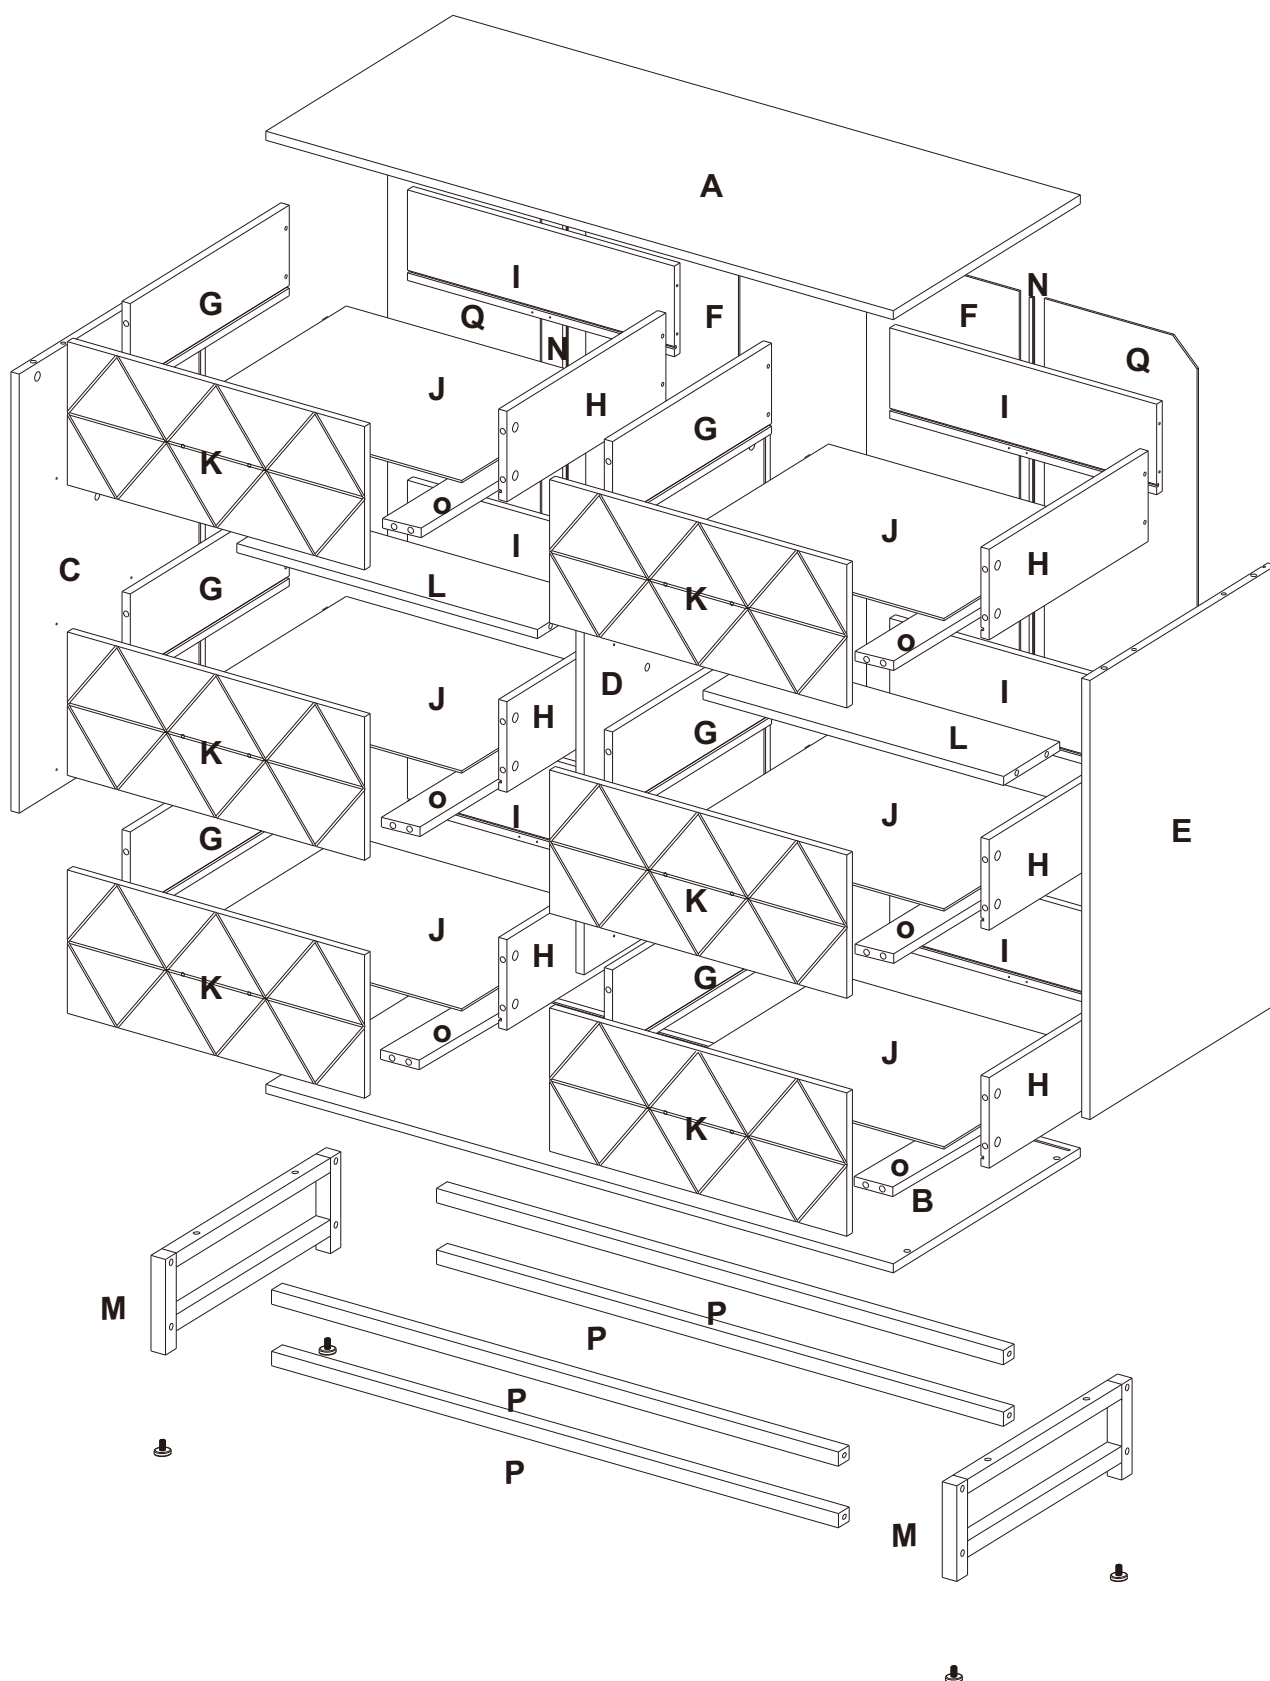


BOARD IDENTIFICATION

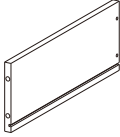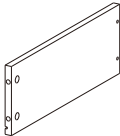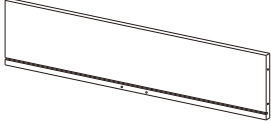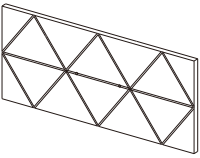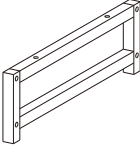				
Ax1	Bx1	Cx1	Dx1	Ex1
				
Fx2	Gx6	Hx6	Ix6	Jx6
				
Kx6	Lx2	Mx2	Nx2	Ox6
				
Px4	Qx2			

BOARD IDENTIFICATION


Installation of Eccentric Wheel Nut Set

1

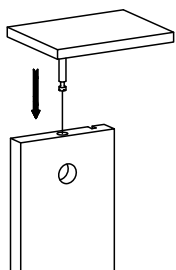


Screw the end of cambolt on the board, find the corresponding board and insert the other end.

2

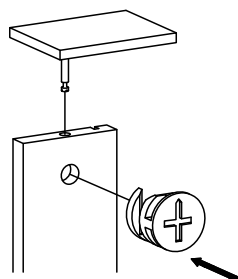


Stuff the camlock into the round hole. The arrowpoints to the cambolt.

3

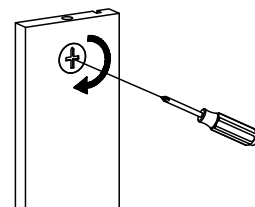


Turn clockwise about 180° to lock the plate.

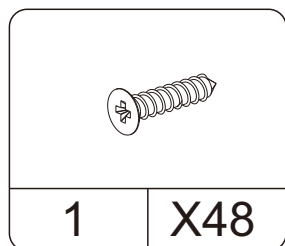

1

X48


Screws
M4X10

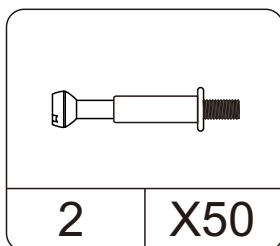

2

X50


Cam bolt
Ø6X18

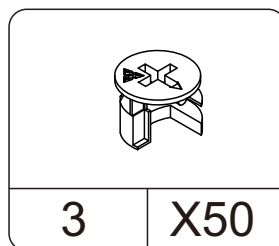

3

X50


Cam lock
Ø12X10

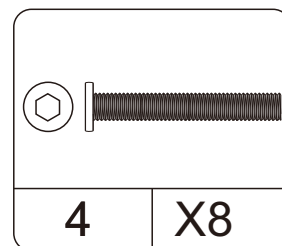

4

X8


Screws
M6x35

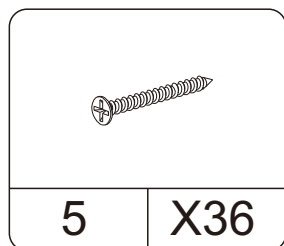

5

X36


Screws
M4x30

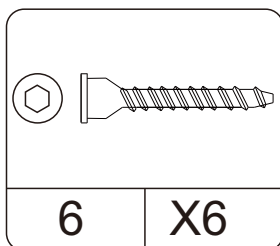

6

X6


Screws
M6.3x50

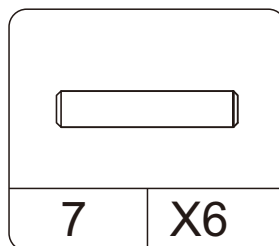

7

X6


Wood dowel
Ø6X30

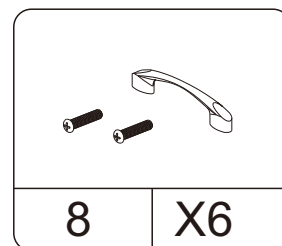

8


X6

Screws
M6.3x50

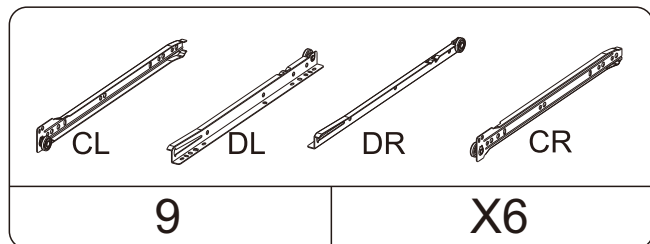


9

X6

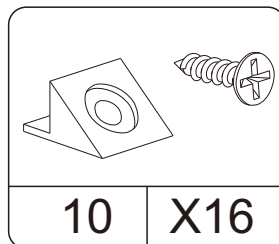


10

X16

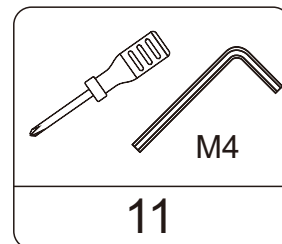


11

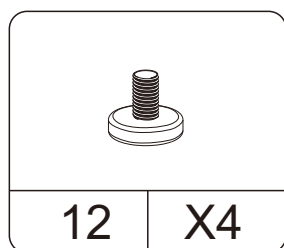

12


X4

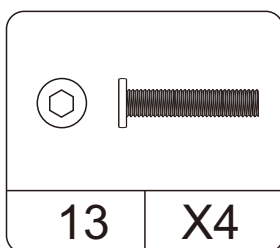

13

X4

Screws
M6x28


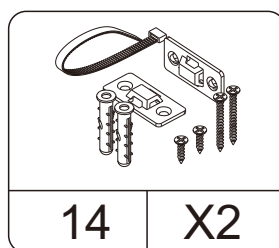


14


X2

INSTALLATION STEPS

STEP1:

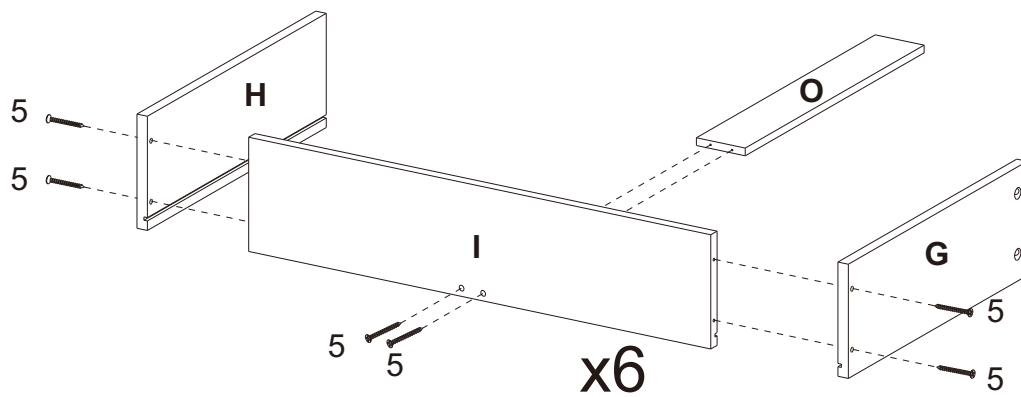
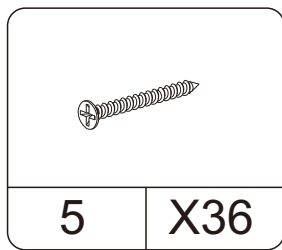


STEP2:


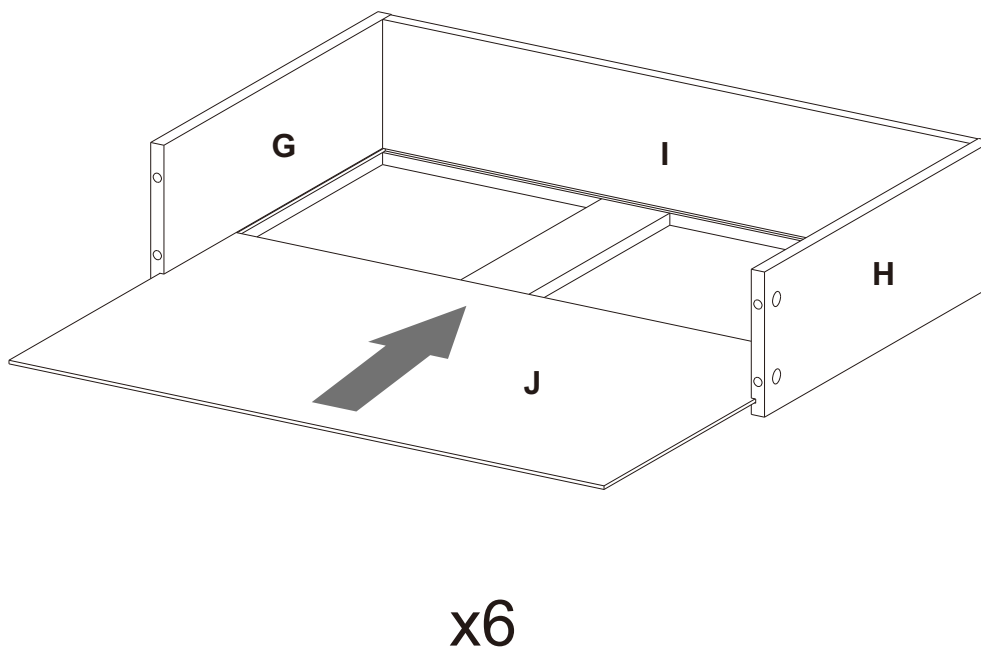


INSTALLATION STEPS

STEP3:


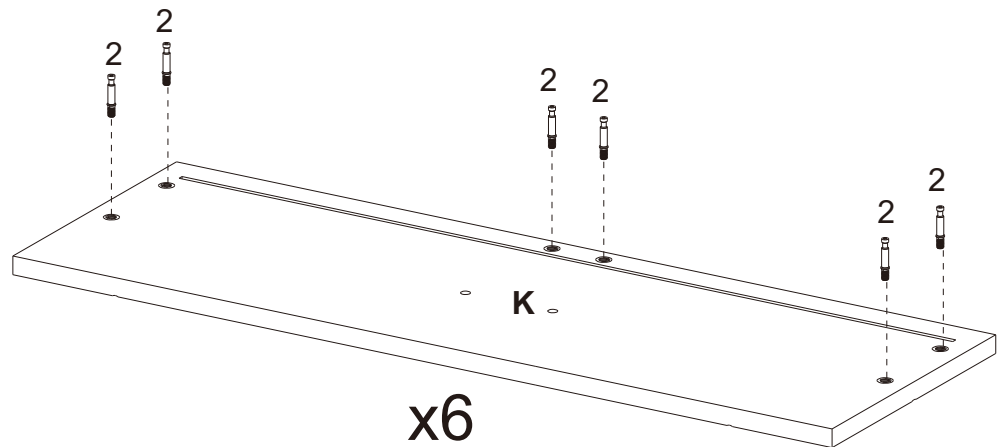
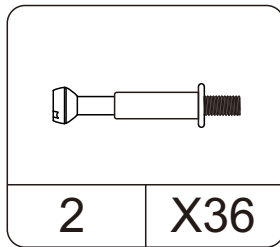


STEP4:

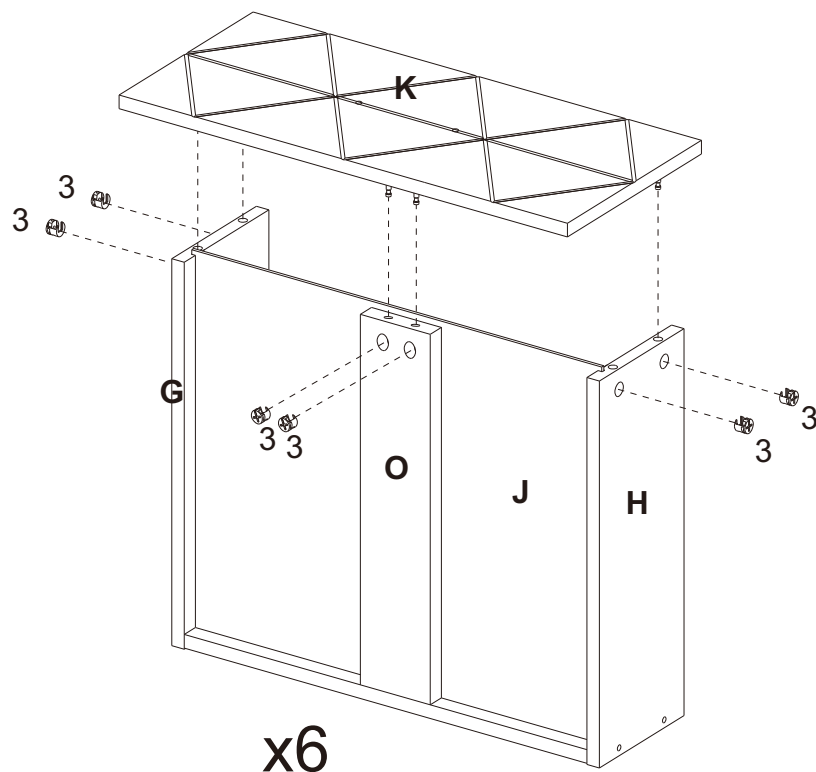
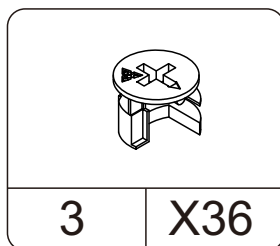


INSTALLATION STEPS

STEP5:

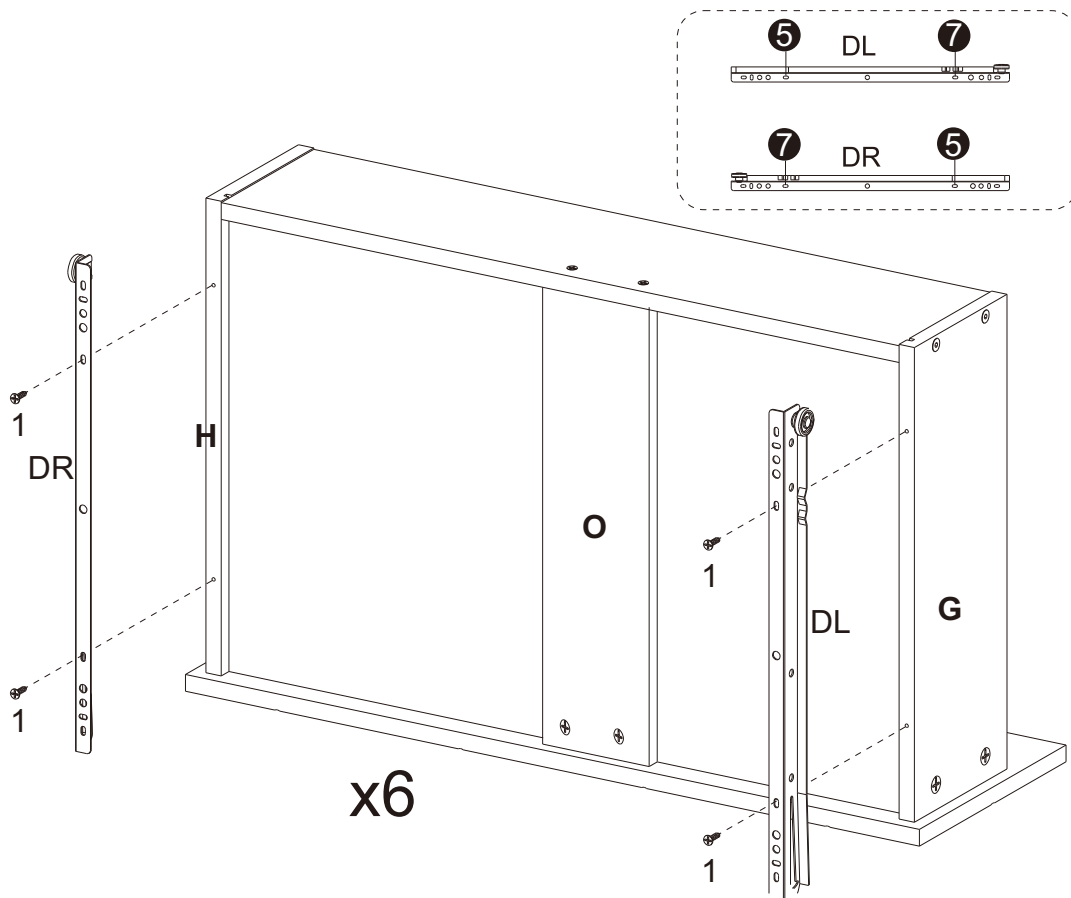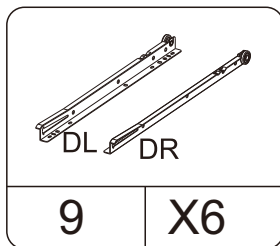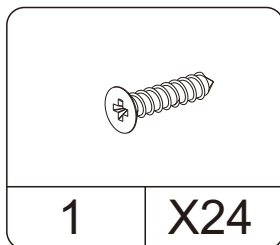


STEP6:

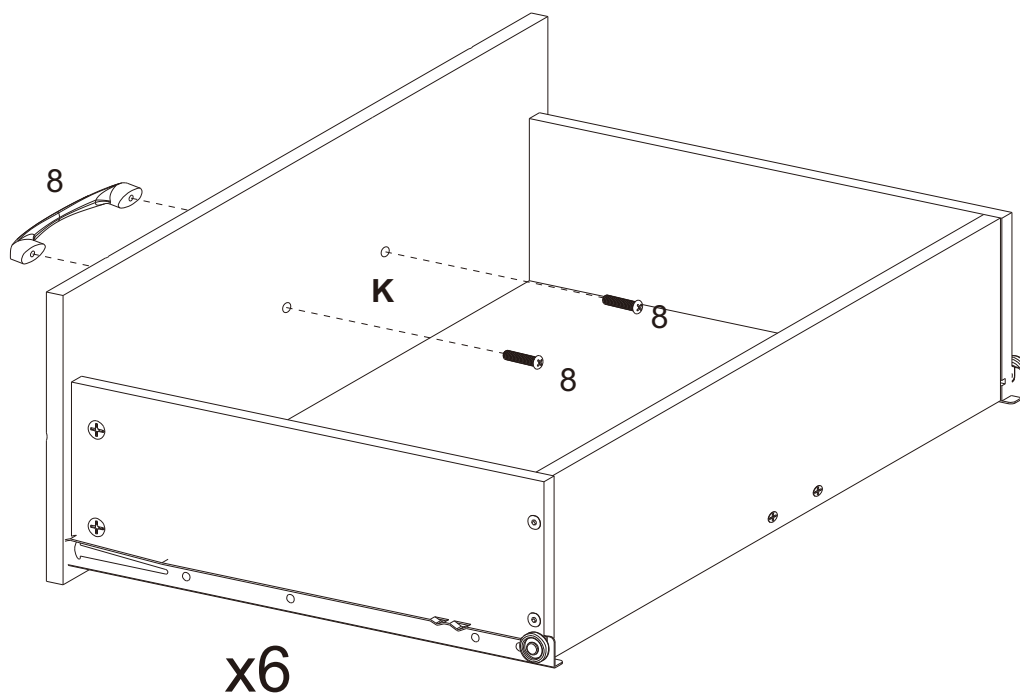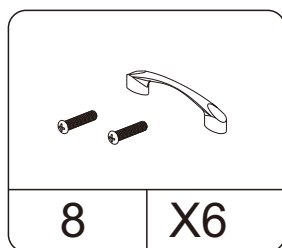


INSTALLATION STEPS



STEP7:




1 X12




2 X4

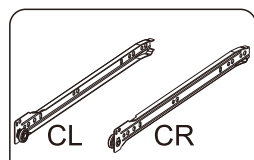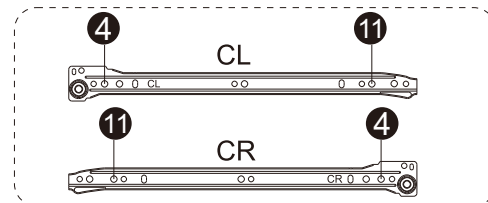


9 X3

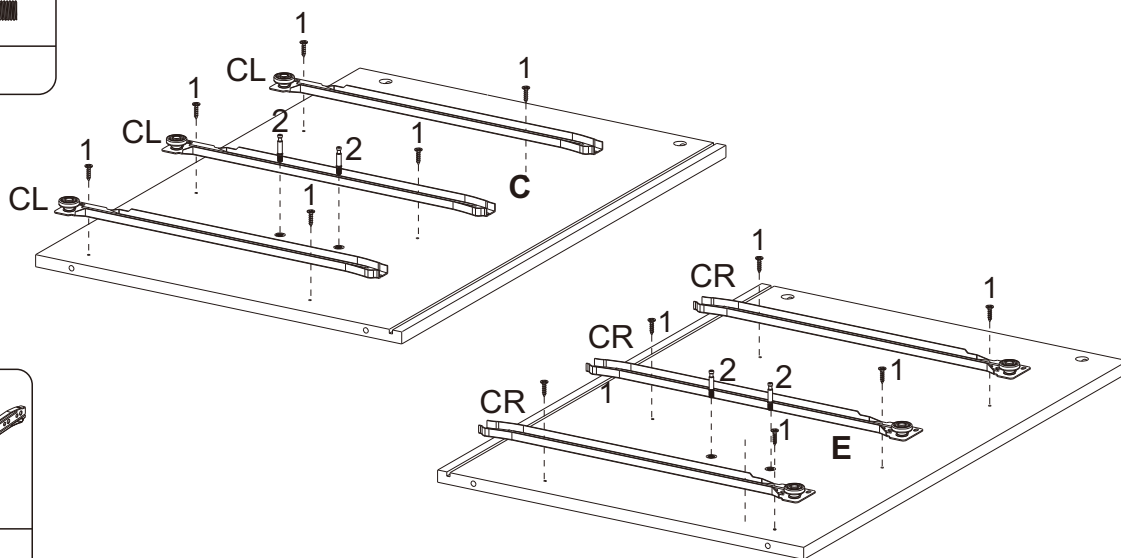



STEP8:




1 X12



2 X2

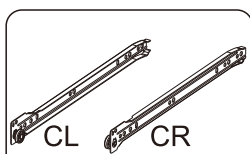
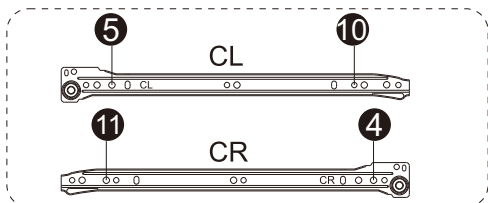


9 X3


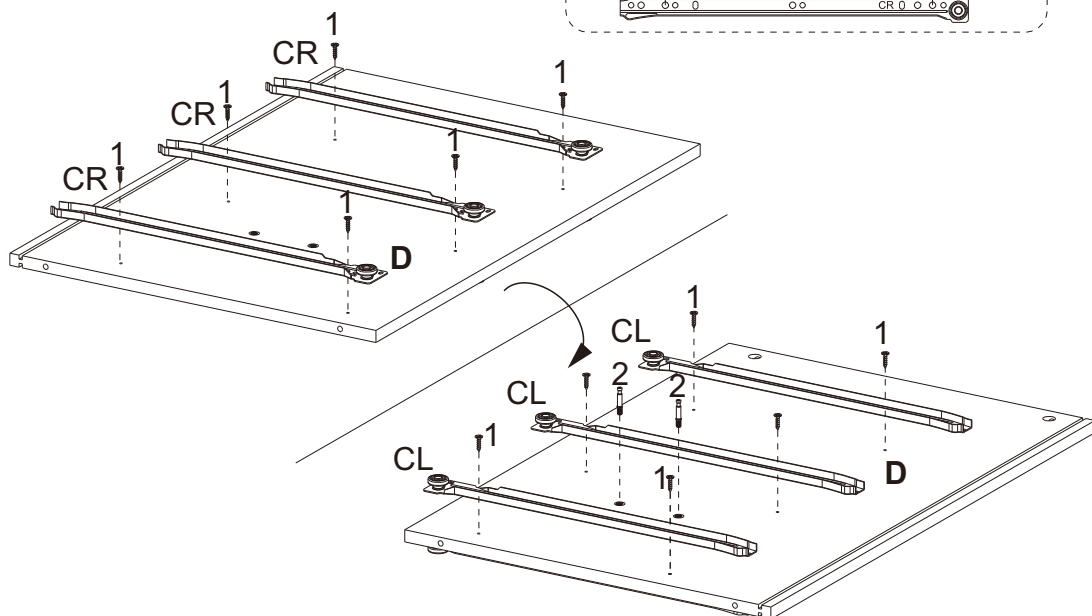


INSTALLATION STEPS

STEP9:

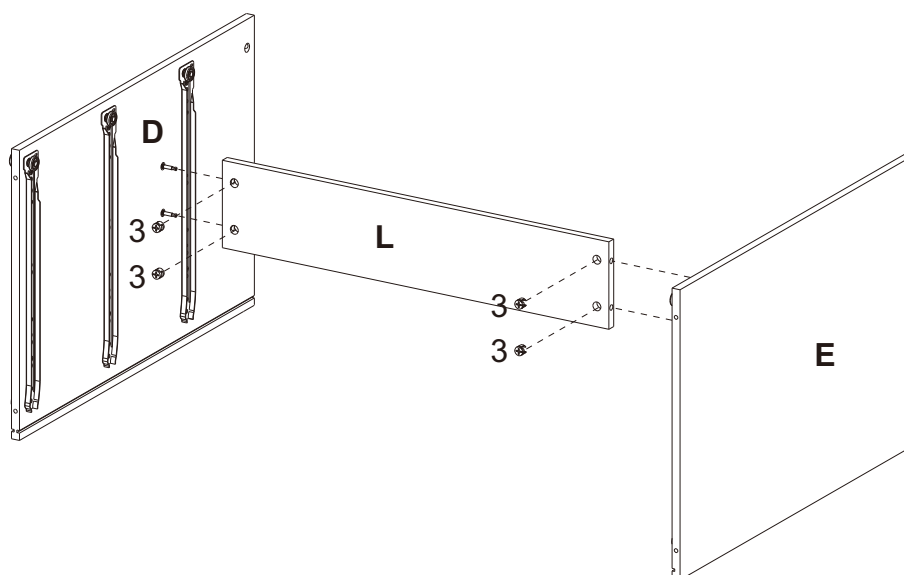
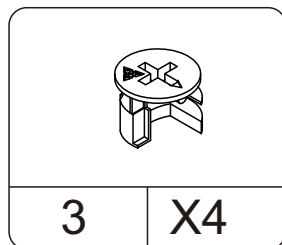


STEP10:



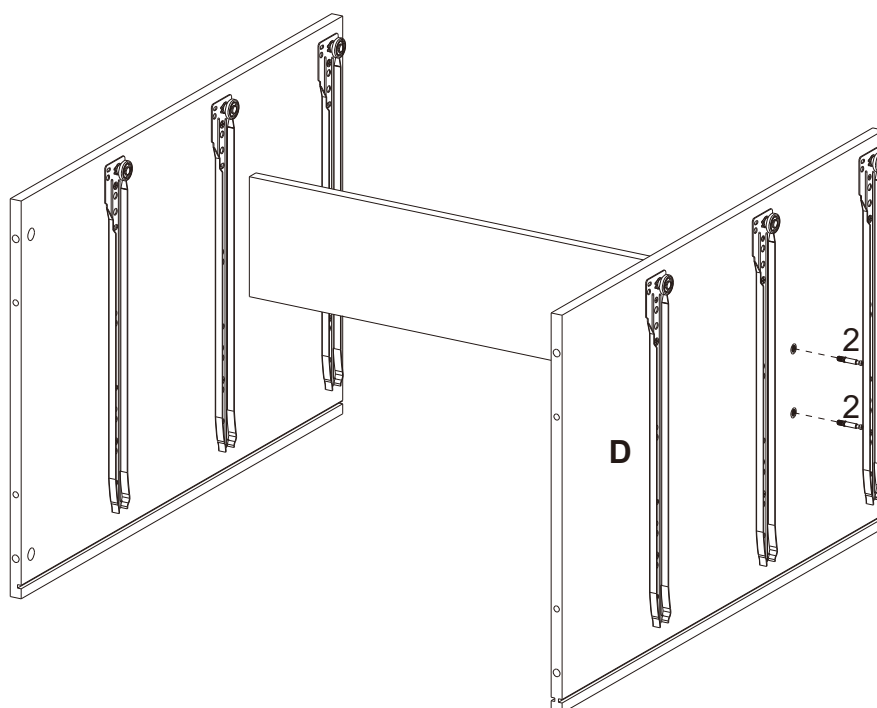
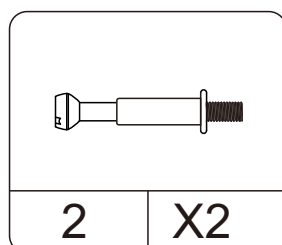


INSTALLATION STEPS

STEP11:

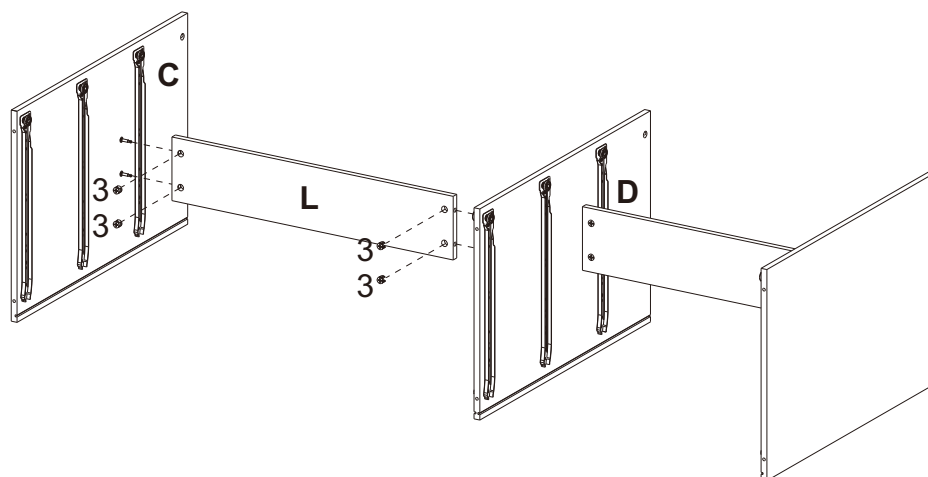
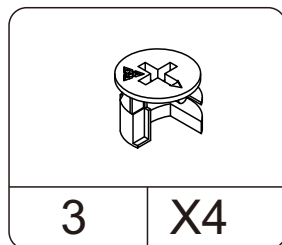


STEP12:

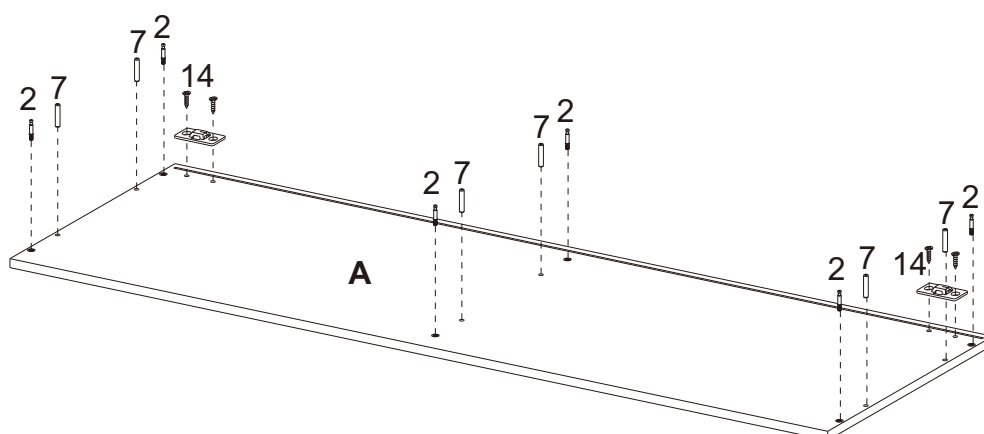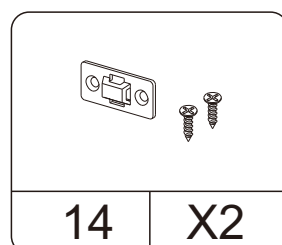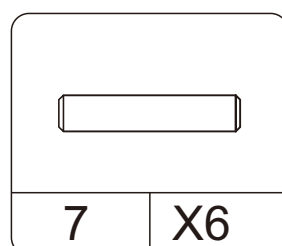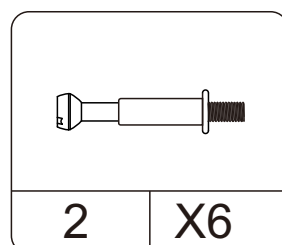


INSTALLATION STEPS

STEP13:

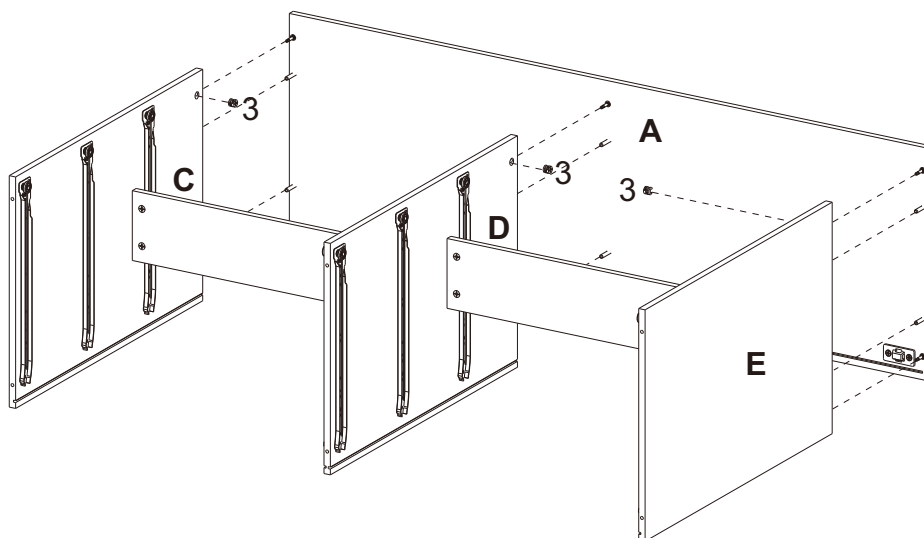
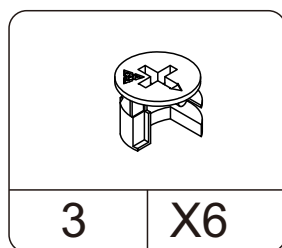


STEP14:



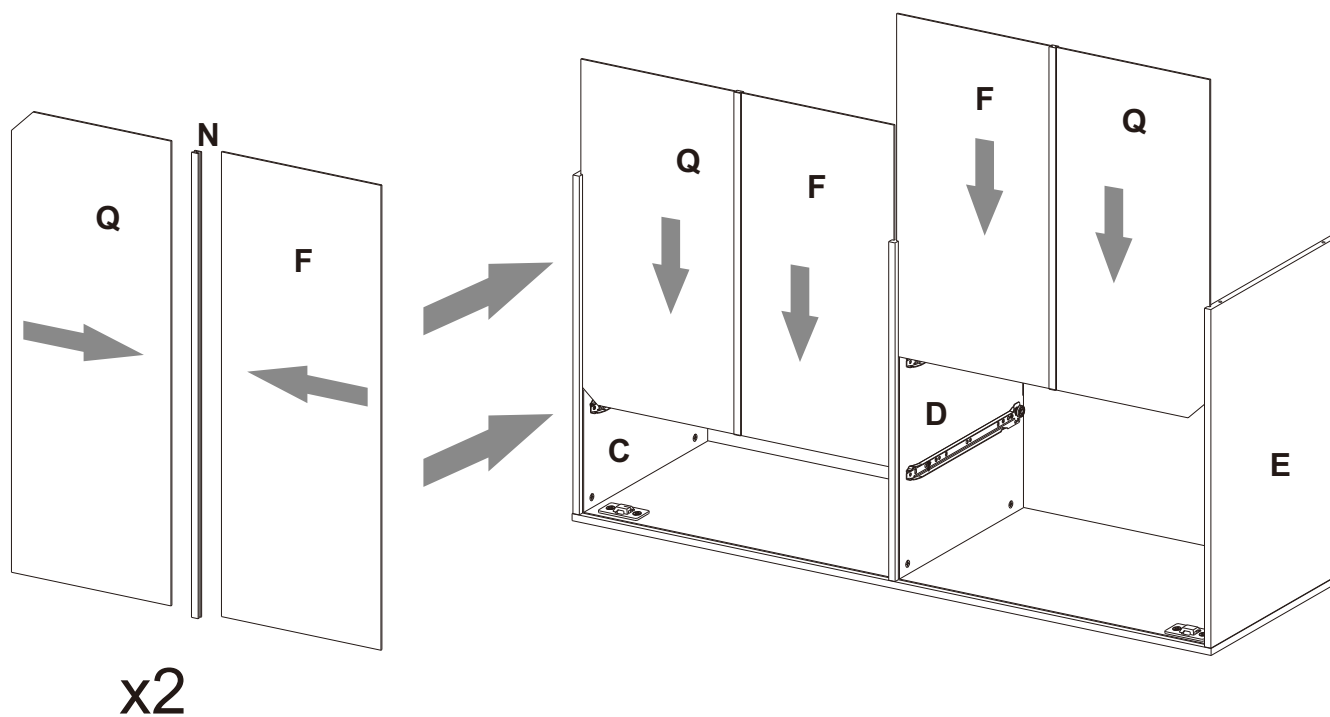


INSTALLATION STEPS

STEP15:

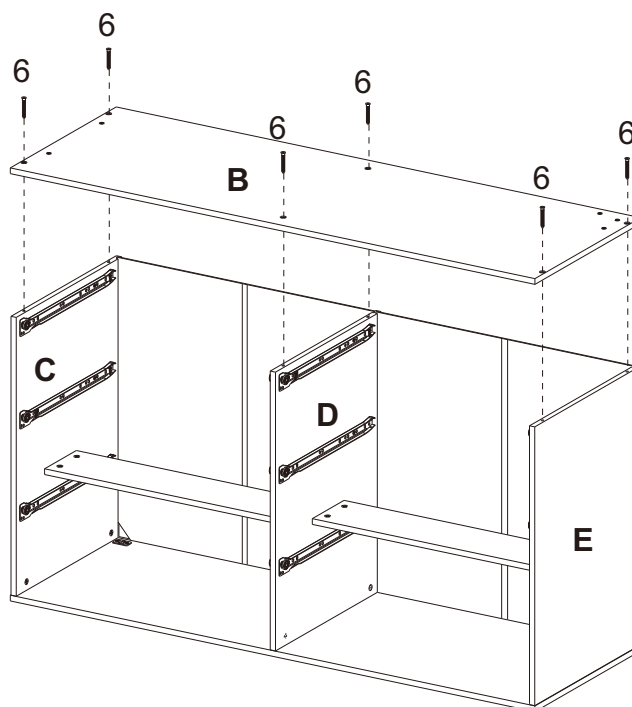
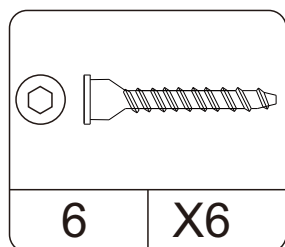


STEP16:

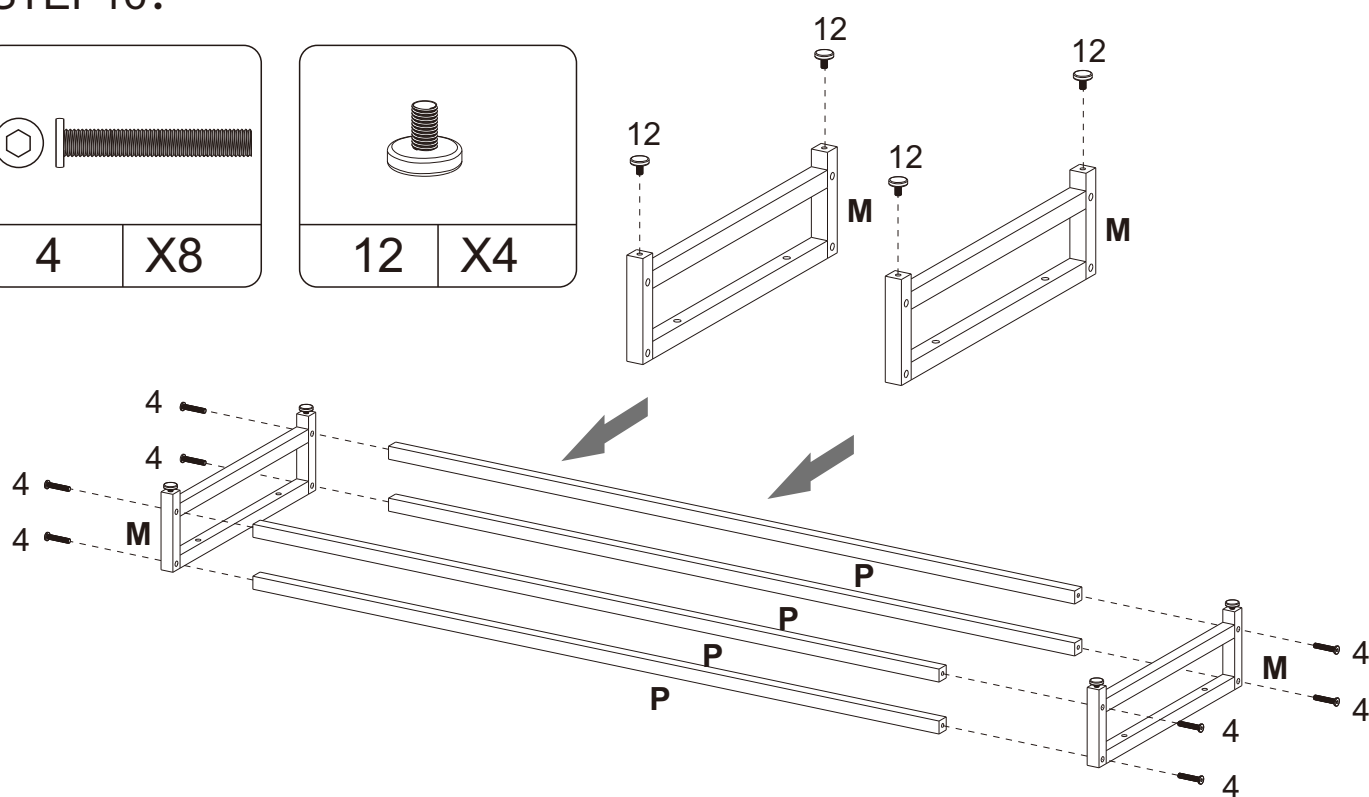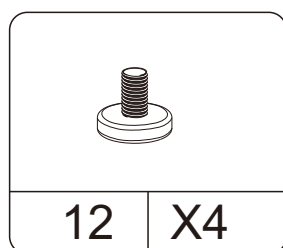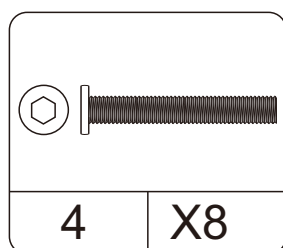


INSTALLATION STEPS

STEP17:

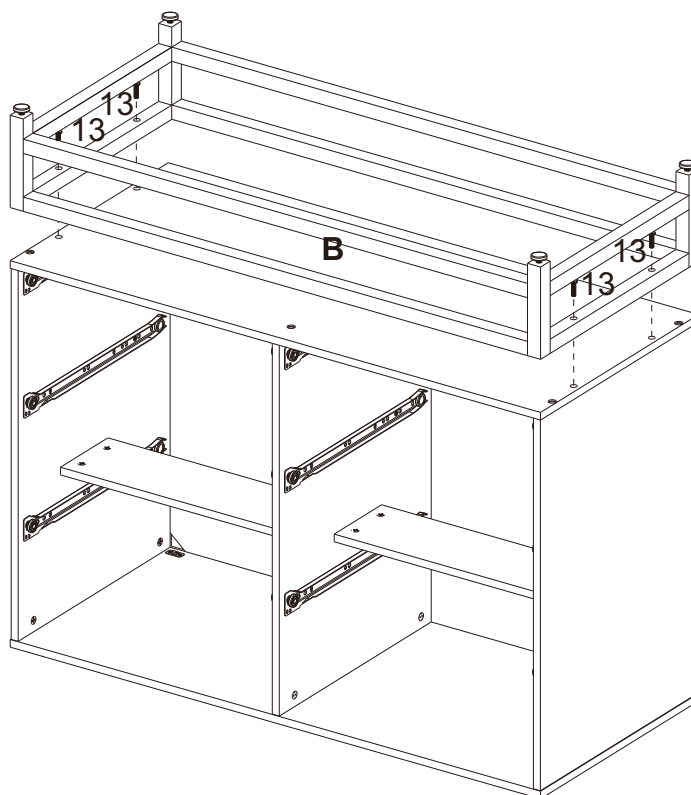
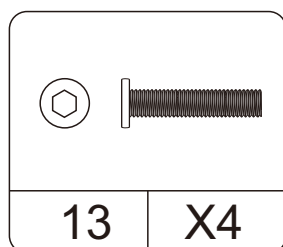


STEP18:


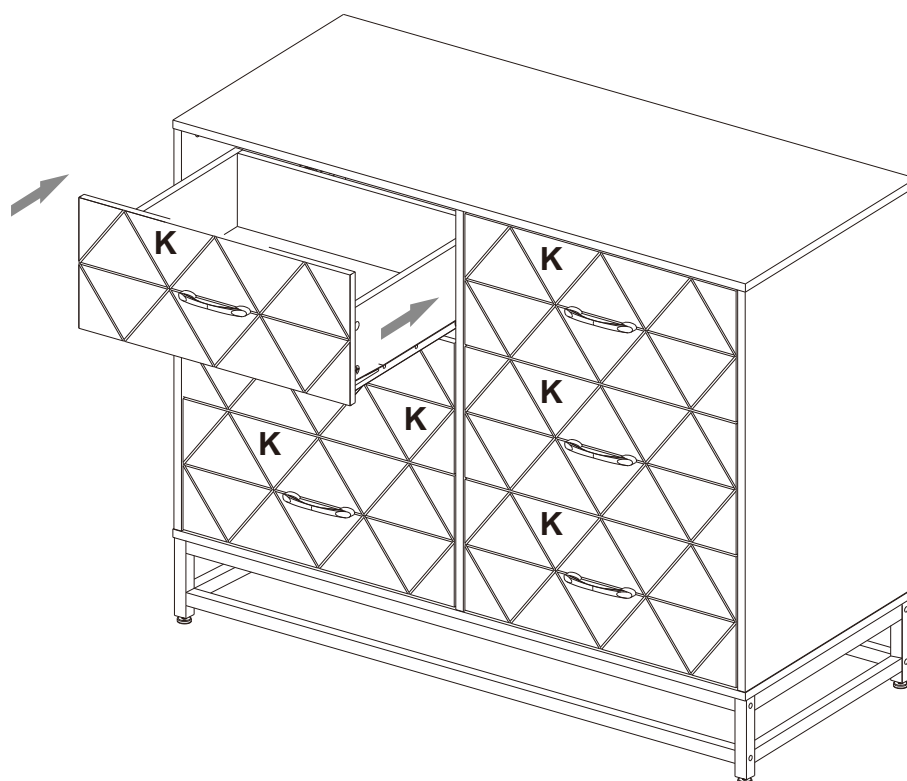


INSTALLATION STEPS

STEP19:

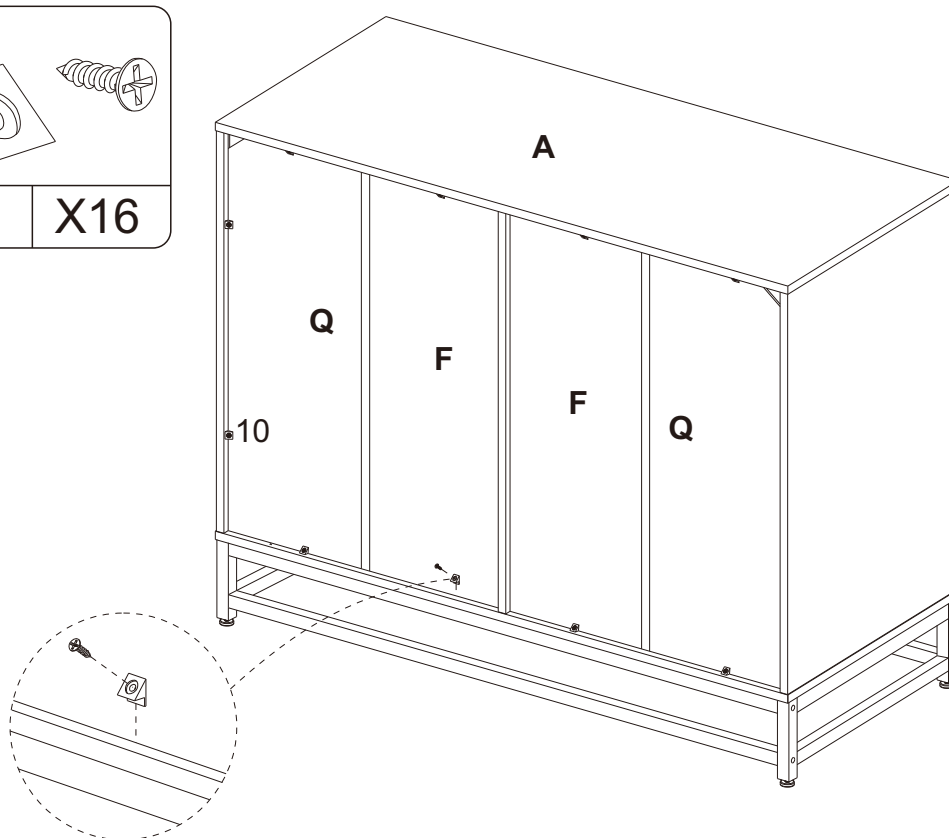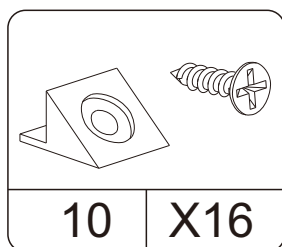


STEP20:

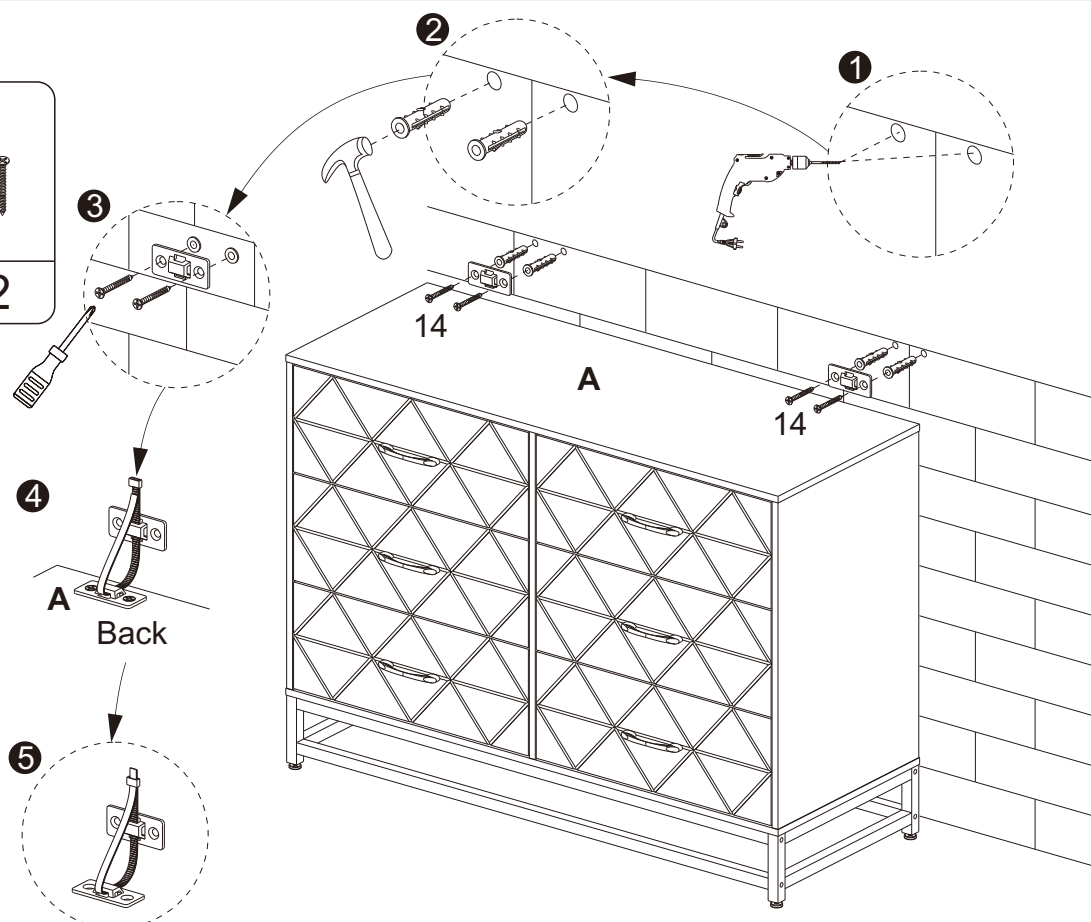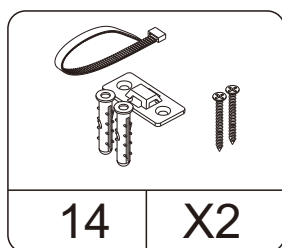

INSTALLATION STEPS

STEP21:

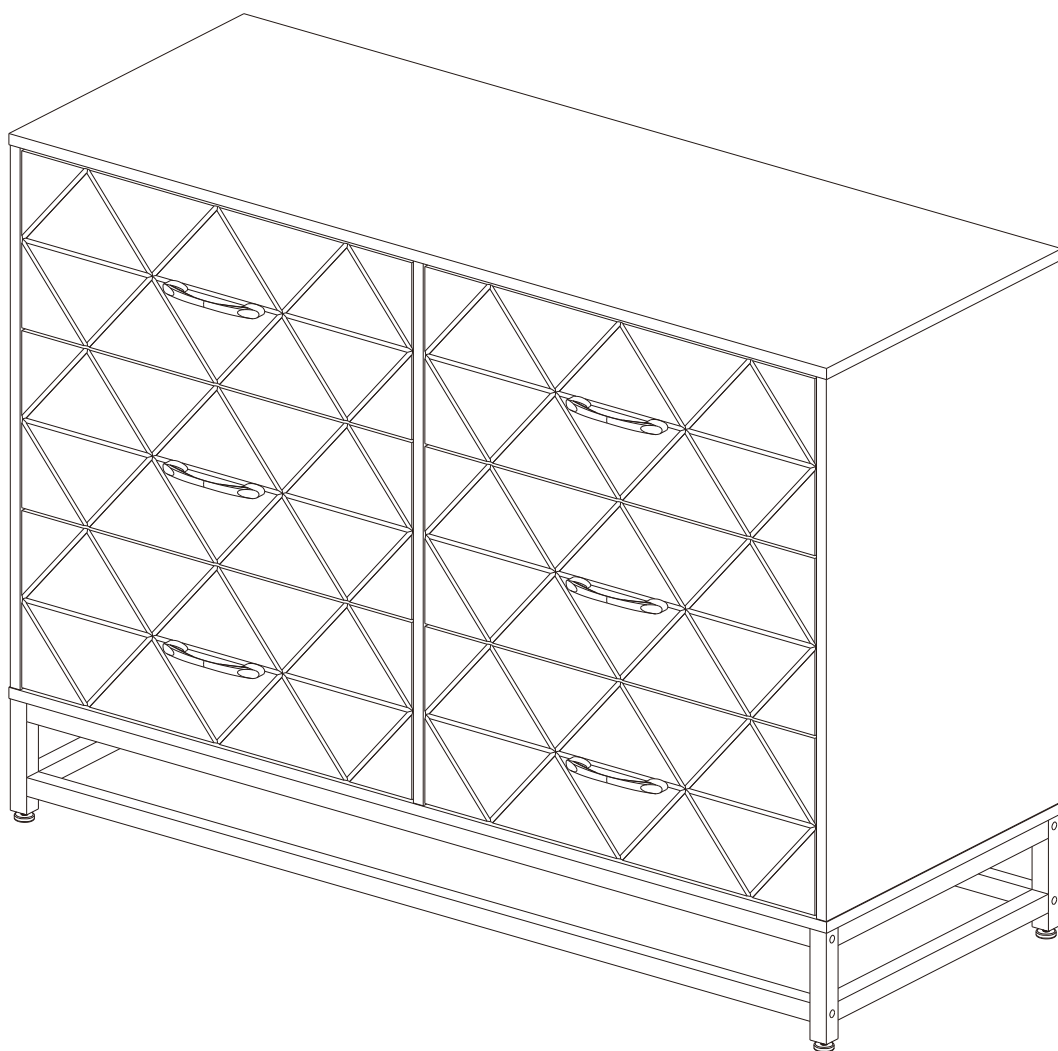

Thank you for purchasing our products. Please contact us if you have difficulty with assembly or need replacement parts. Our customer service is here to assist you. Please attach your User Name and Order ID so that we can assist you better.
support@jojoka.net