



Assembly Instructions

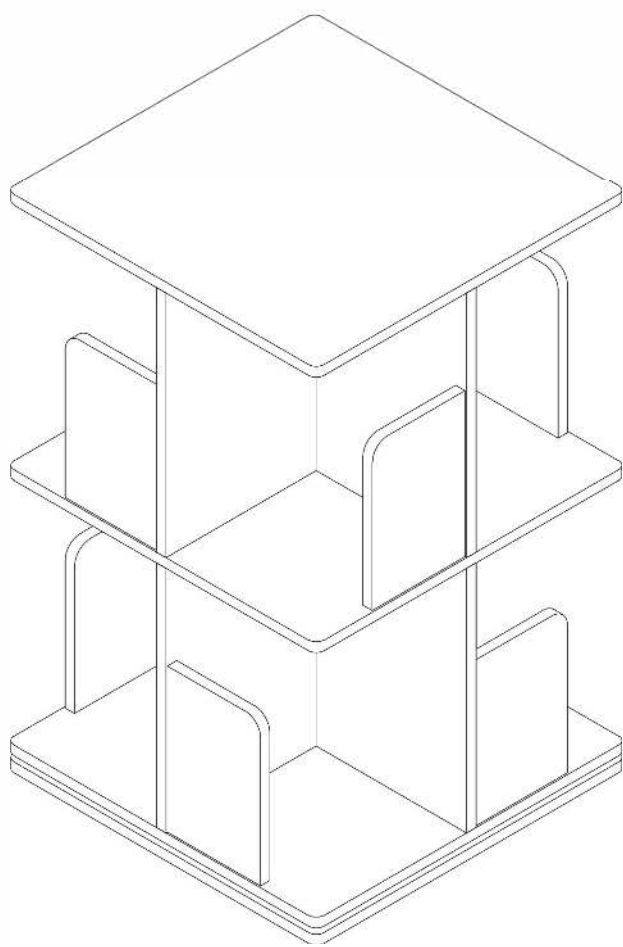

Product Attributes

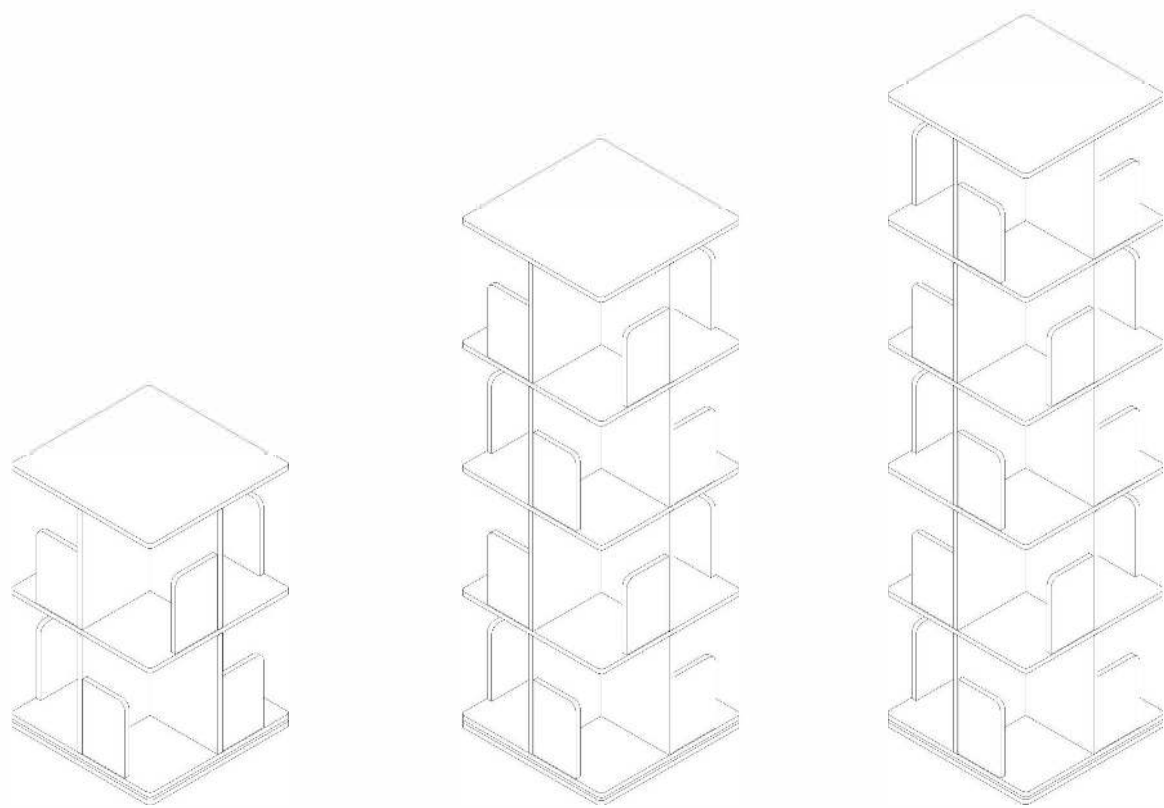

Material








Particle Board	Plywood ✓	Rubberwood
---------------------------------------	---------------------------------	-----------------------------------

Specification










2 Tiers ✓	4 Tiers	5 Tiers
---------------------------------	--------------------------------	--------------------------------

Color




✓ Walnut	Black	White	Natural
---------------------	------------------	------------------	--------------------

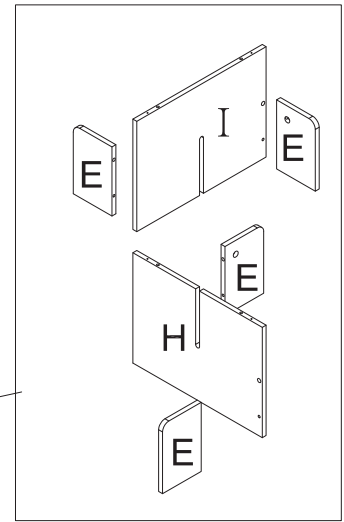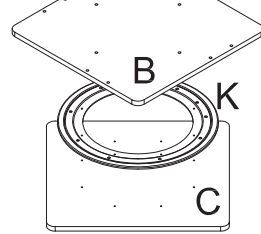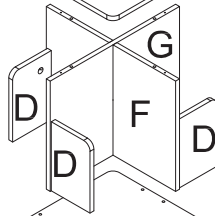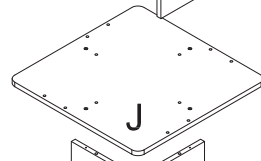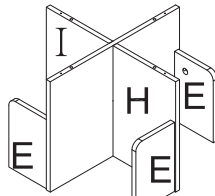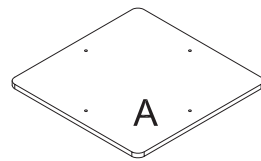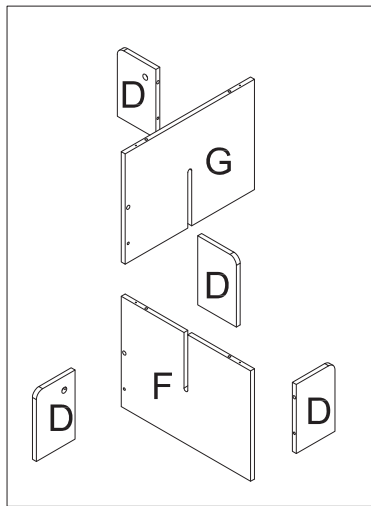

Parts & Hardware List

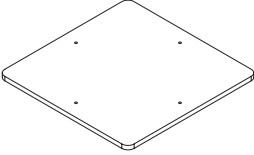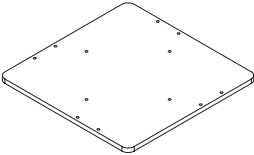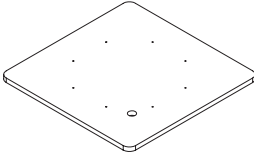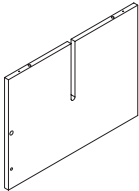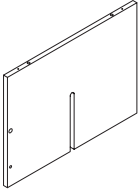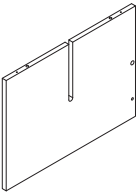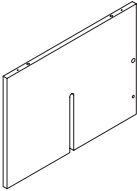
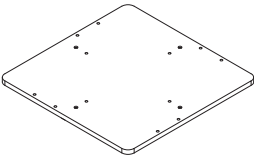

A  X1	B  X1	C  X1
D  X4	E  X4	F  X1
G  X1	H  X1	I  X1
J  X1	K  X1	

Parts & Hardware List


L	 5mm*40mm	20 +2
M	 3.5mm*12mm	8 +1
N	 35mm	8 +1
O	 15mm*9mm	8 +1
P		1
Q	 6mm*50mm	4 +1
R	 6mm*30mm	16 +1
S		1
T	 M6*10mm	4
U		4
W		4

Assembly Steps


CAM BOLT INSTALLATION AS BELOW:

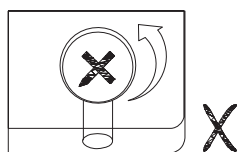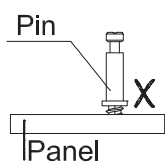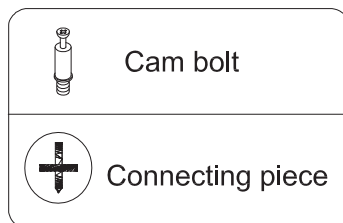

Rotate connecting piece if found in the position illustrated above.







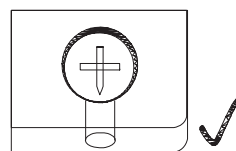


Correct orientation to receive bolts.

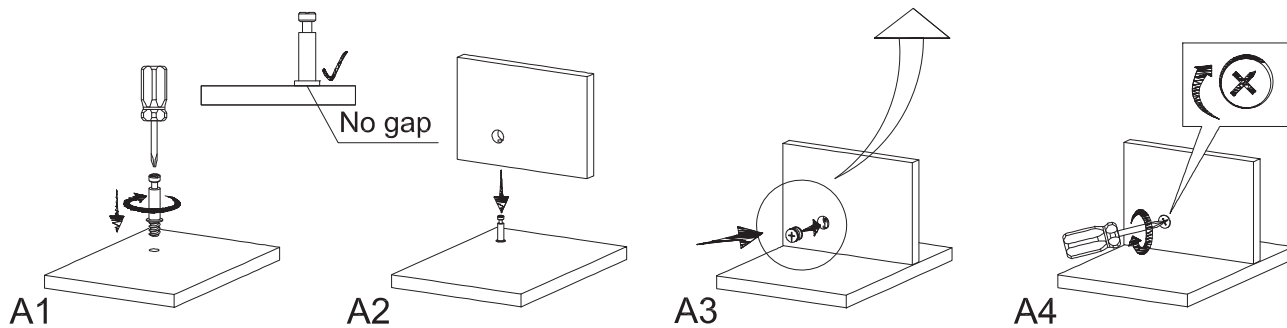







Assembly Steps

STEP 1		
N		4
R		4
O		4

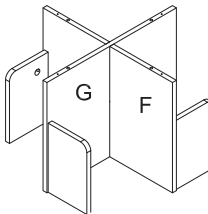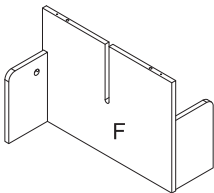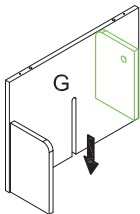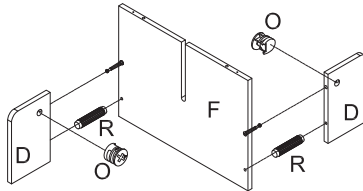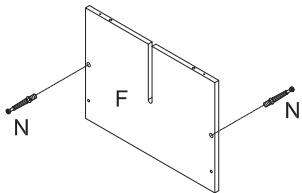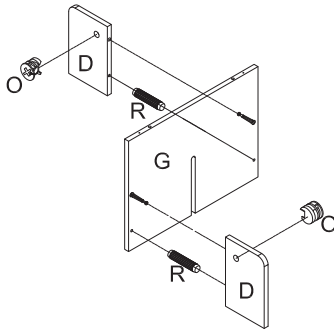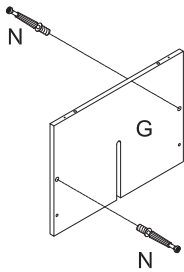



Assembly Steps

STEP 2		
N		4
R		4
O		4

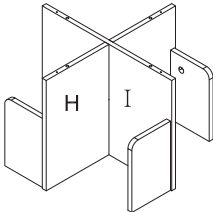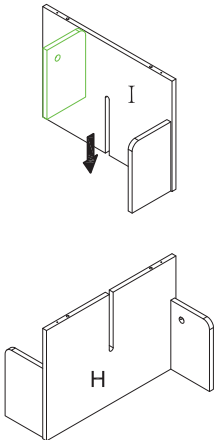
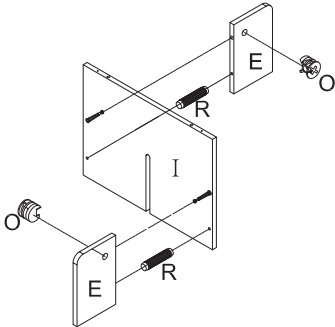
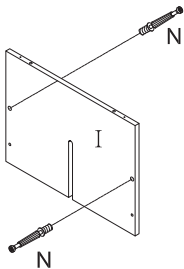
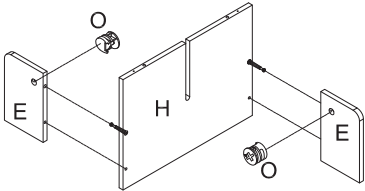
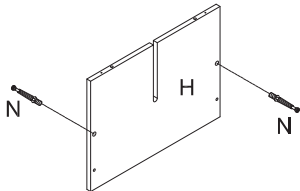


Assembly Steps

STEP 3		
L		12
P		
R		4

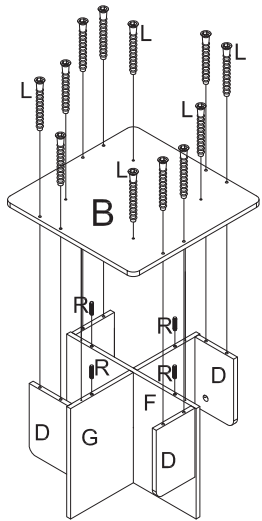
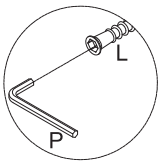


STEP 4		
M		8
T		4
U		4

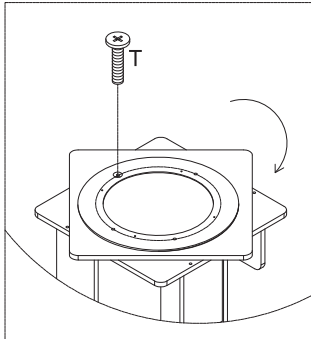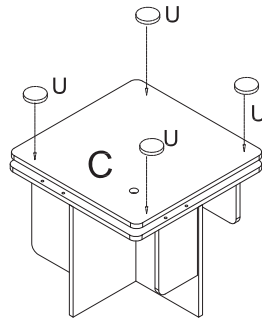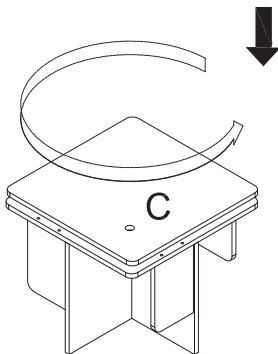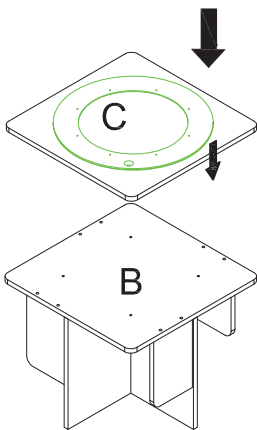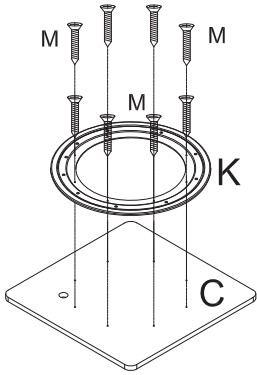



Assembly Steps

STEP 5		
Q		4
P		
L		8

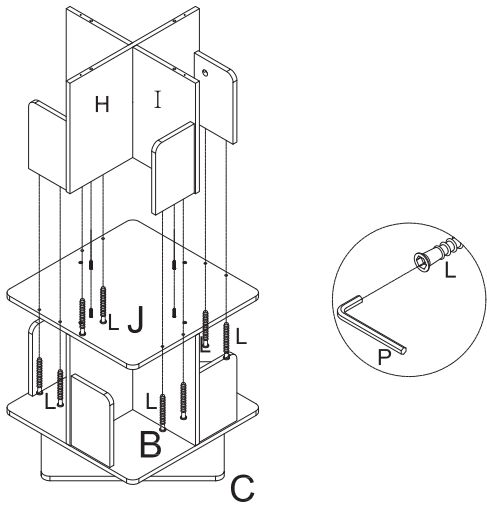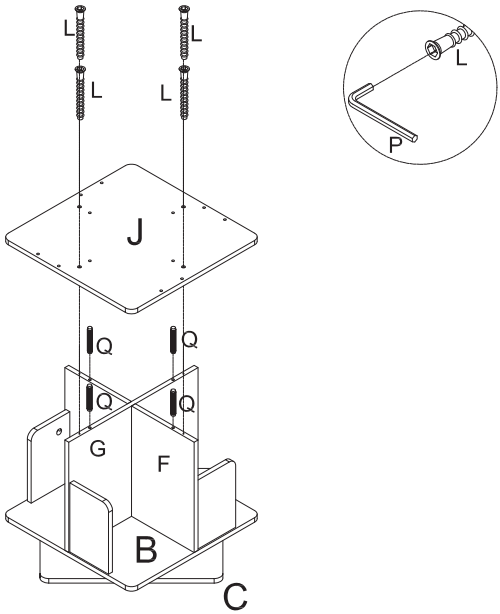

Assembly Steps

STEP 6		
Q		4
P		
W		4

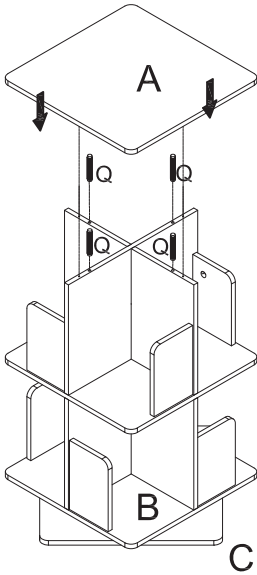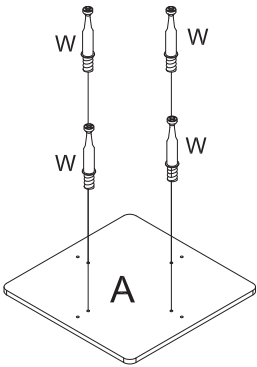

Assembly Steps

