

User's Manual

Bed Frame



Queen Size

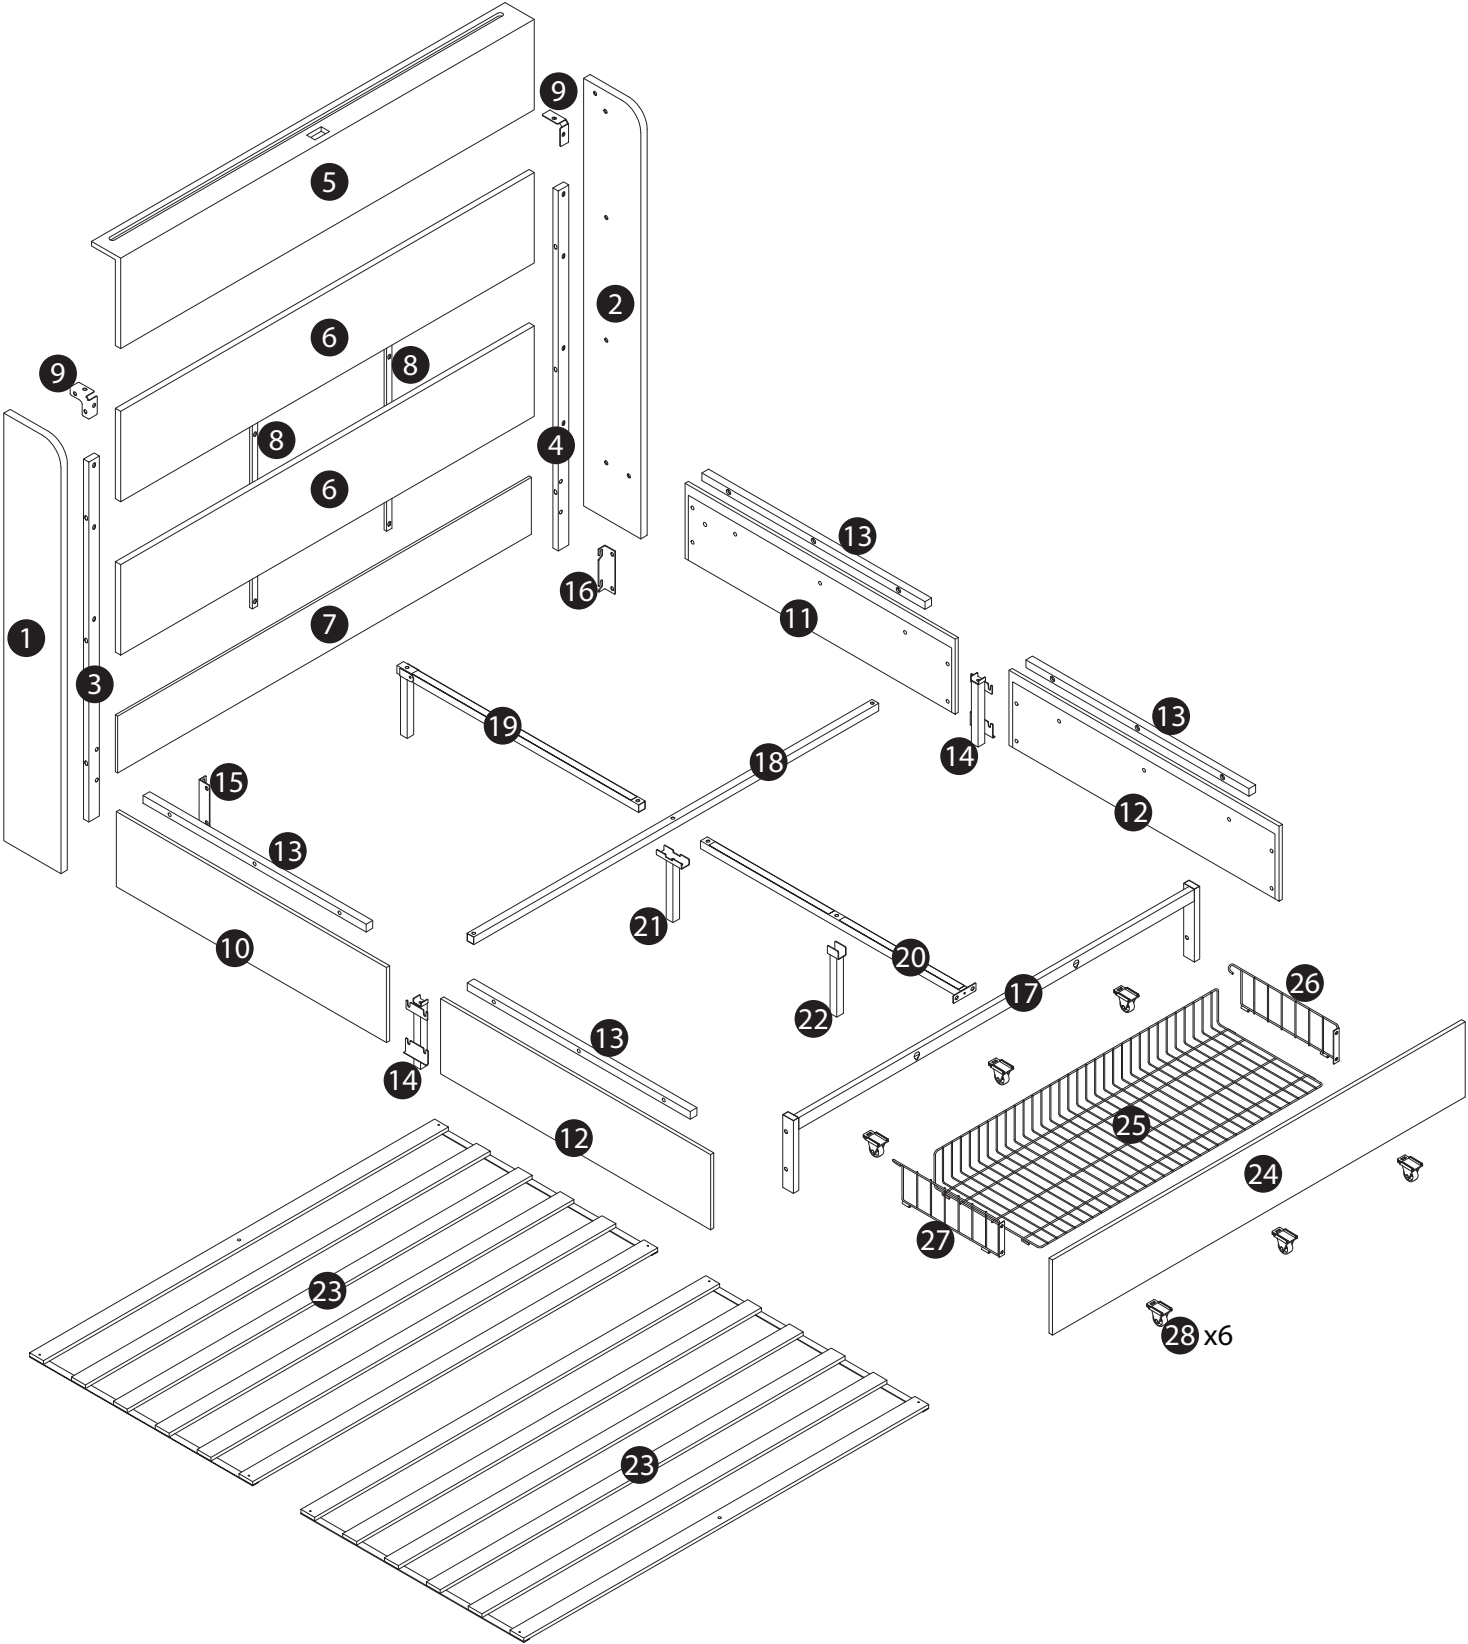
EN | ES

Contact us first if you have any problems. Replacement for missing or damaged parts will be shipped ASAP!



















EN | ES






Si tiene algún problema con su producto o pedido. ¡Reemplazamos piezas perdidas o dañadas enviándolas rápidamente

Parts list












Parts list

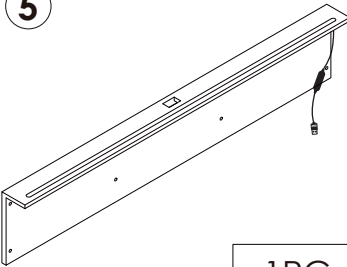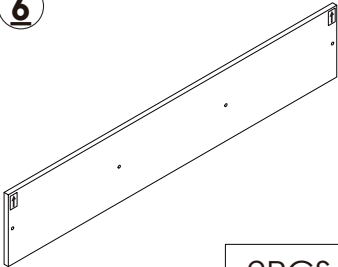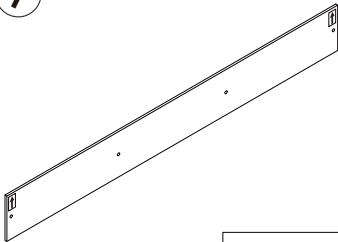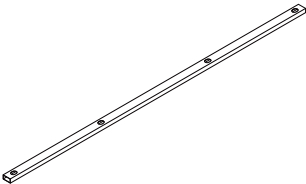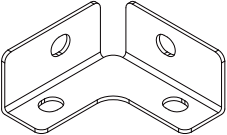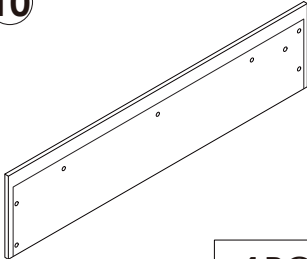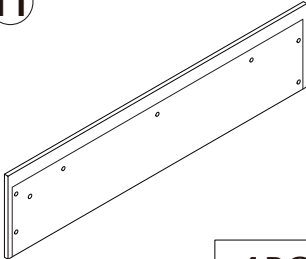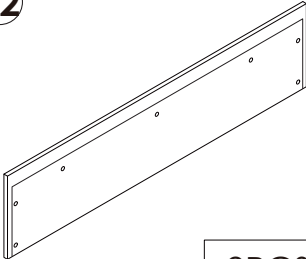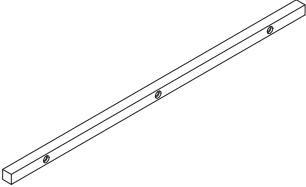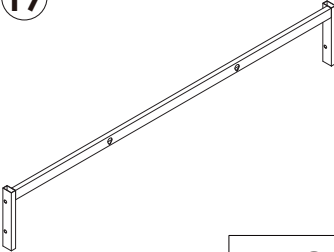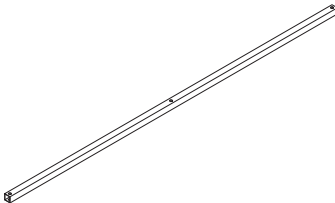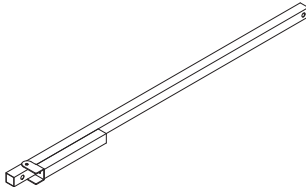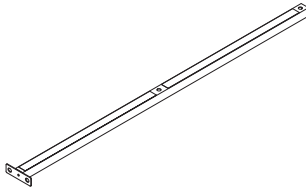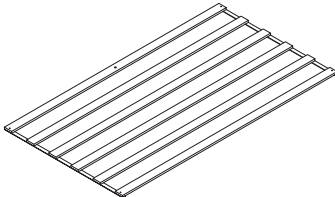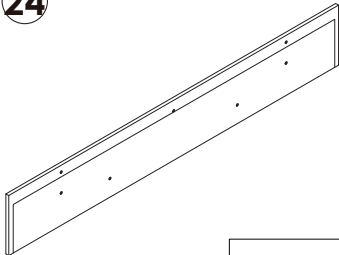 1 1PC	 2 1PC	 3 1PC	 4 1PC
 5 1PC	 6 2PCS	 7 1PC	 8 2PCS
 9 2PCS	 10 1PC	 11 1PC	 12 2PCS
 13 4PCS	 14 2PCS	 15 1PC	 16 1PC
 17 1PC	 18 1PC	 19 1PC	 20 1PC
 21 1PC	 22 1PC	 23 2PCS	 24 1PC

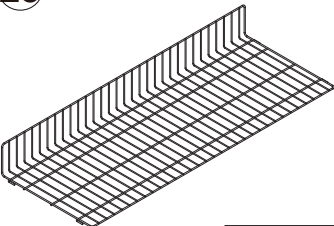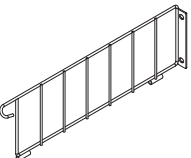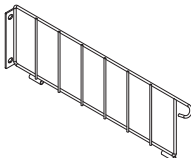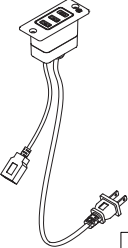25  1PC	26  1PC	27  1PC	28  6PCS
29  1PC	30  WITHOUT BATTERY 1PC		

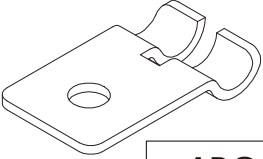
Hardware List

A  5/16x16mm 18+2PCS	B  5/16x19mm 16+2PCS	C  5/16x30mm 2+1PCS	D  5/16x35mm 29+2PCS
E  5/16x55mm 7+1PCS	F  1/4x13mm 5+1PCS	G  1/4x16mm 2+1PCS	H  1/4 3+1PCS
J  M3.5x13mm 2+1PCS	K  M4x25mm 8+2PCS	L  1PC	M  4mm 1PC
N  1PC	P  1/4x55mm 1+1PCS		

Assembly Instruction

STEP 1



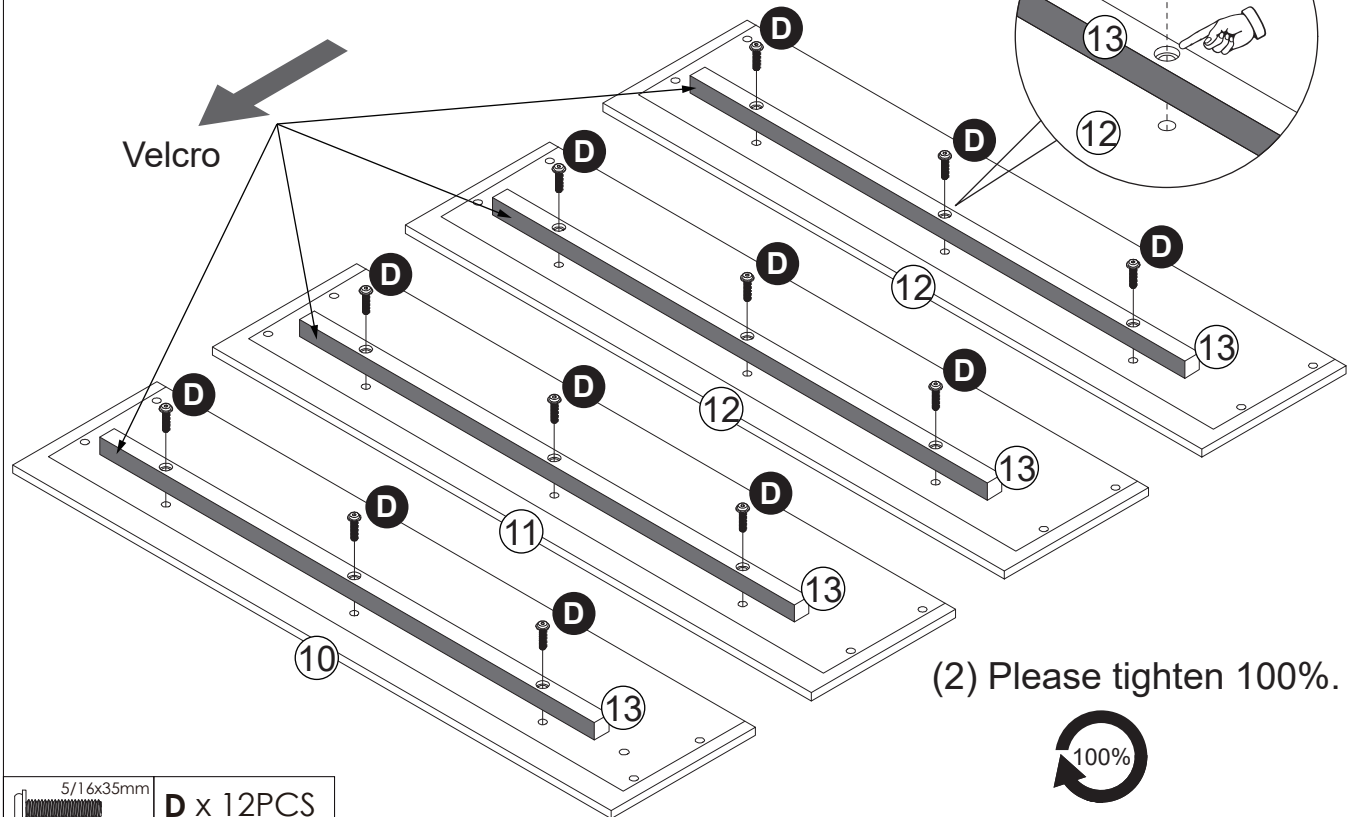
(1) Please align all bolts and then tighten 50% first.



(2) Please tighten 100%.



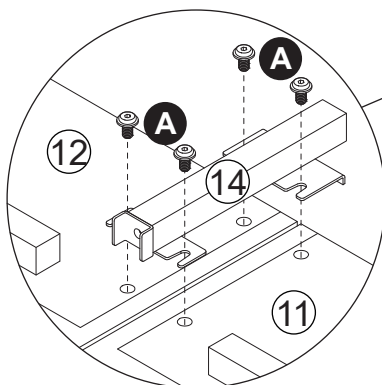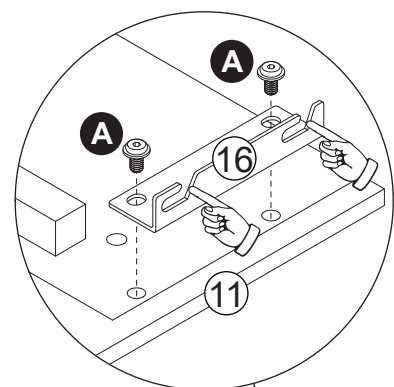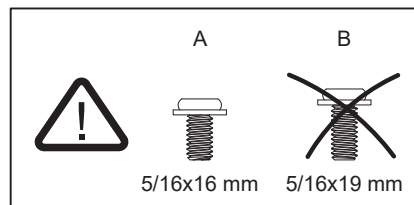STEP 2



(1) Please align all bolts and then tighten 50% first.

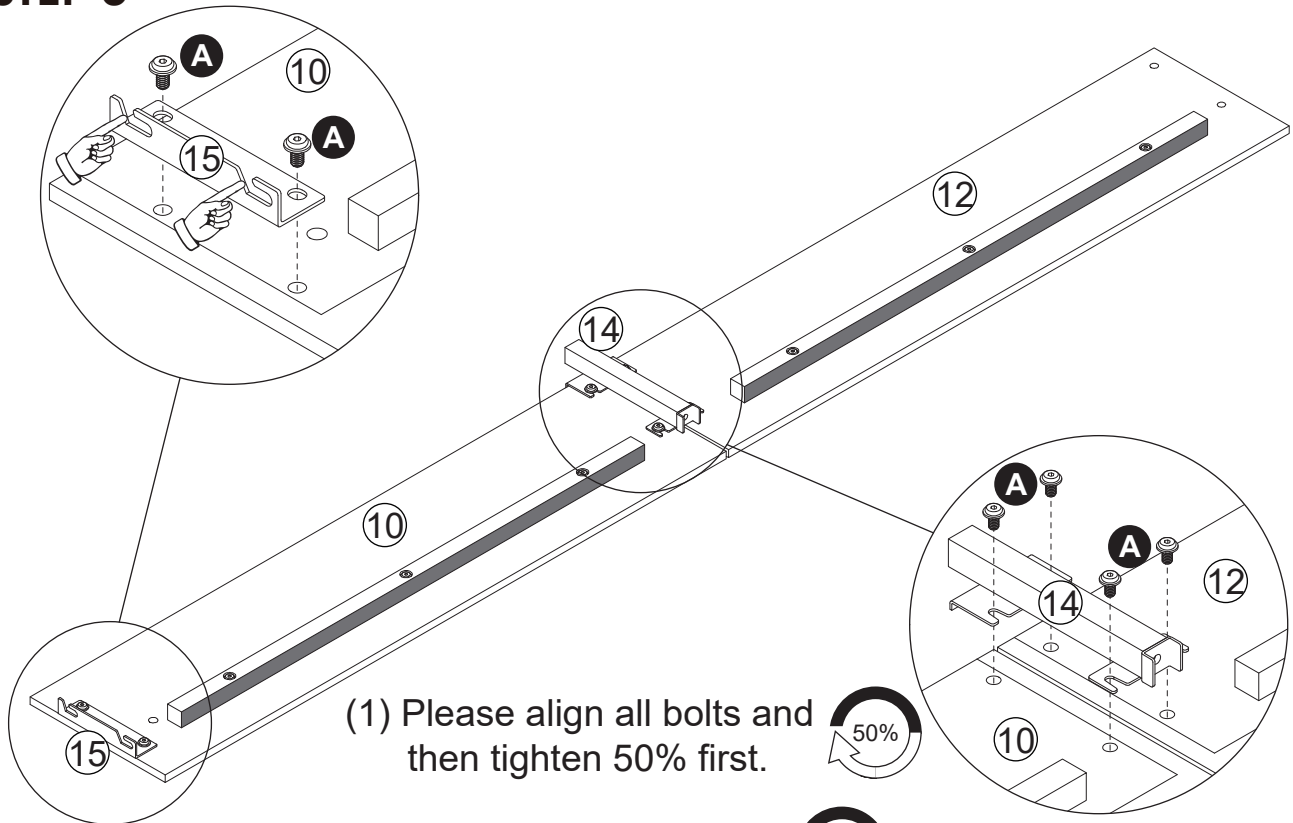


(2) Please tighten 100%.




Assembly Instruction

STEP 3



5/16x16mm
A x 6PCS



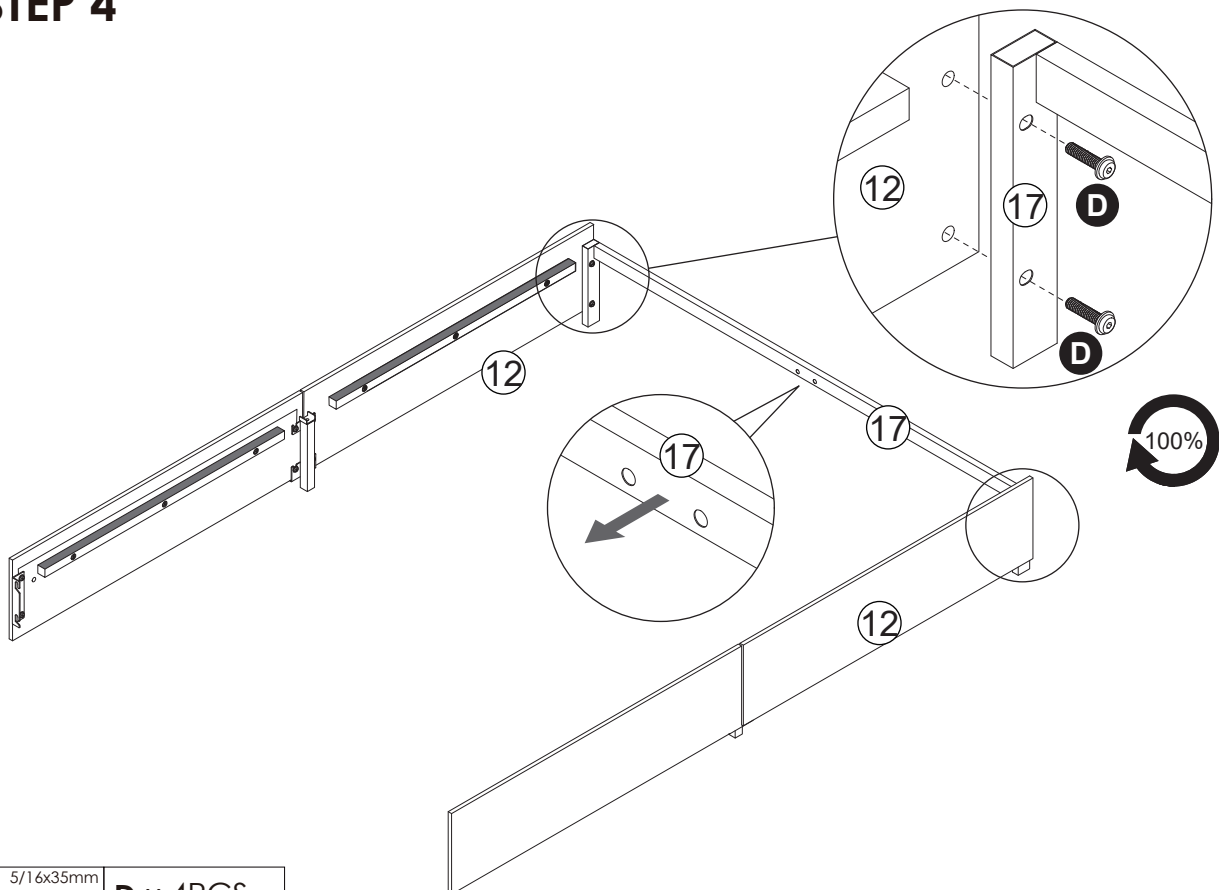
STEP 4



5/16x35mm
D x 4PCS

Assembly Instruction

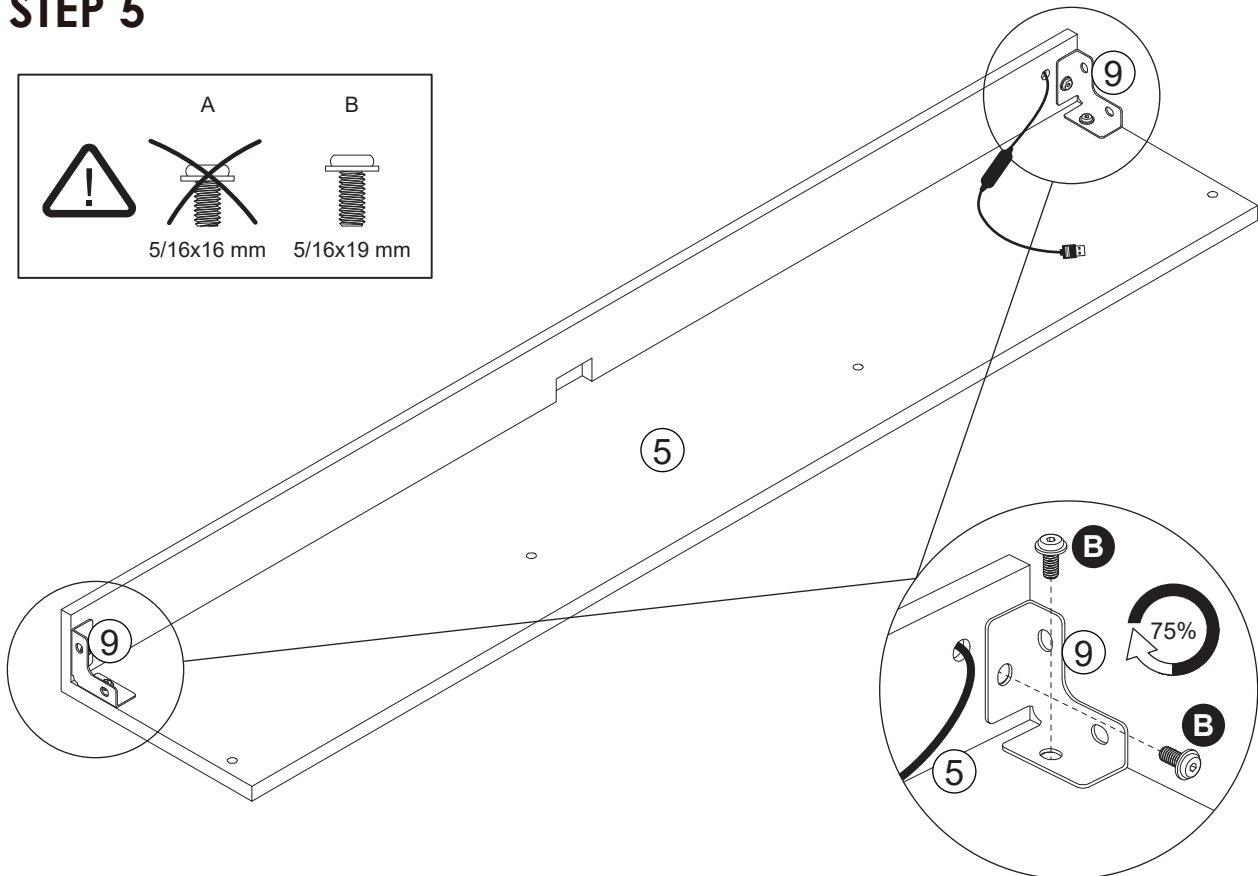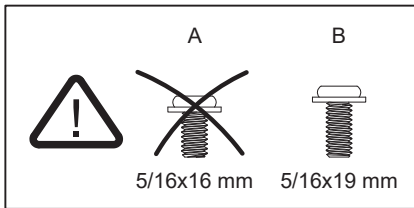STEP 5




B x 4PCS

Please align all the bolts first, don't tighten bolts 100%.

STEP 6

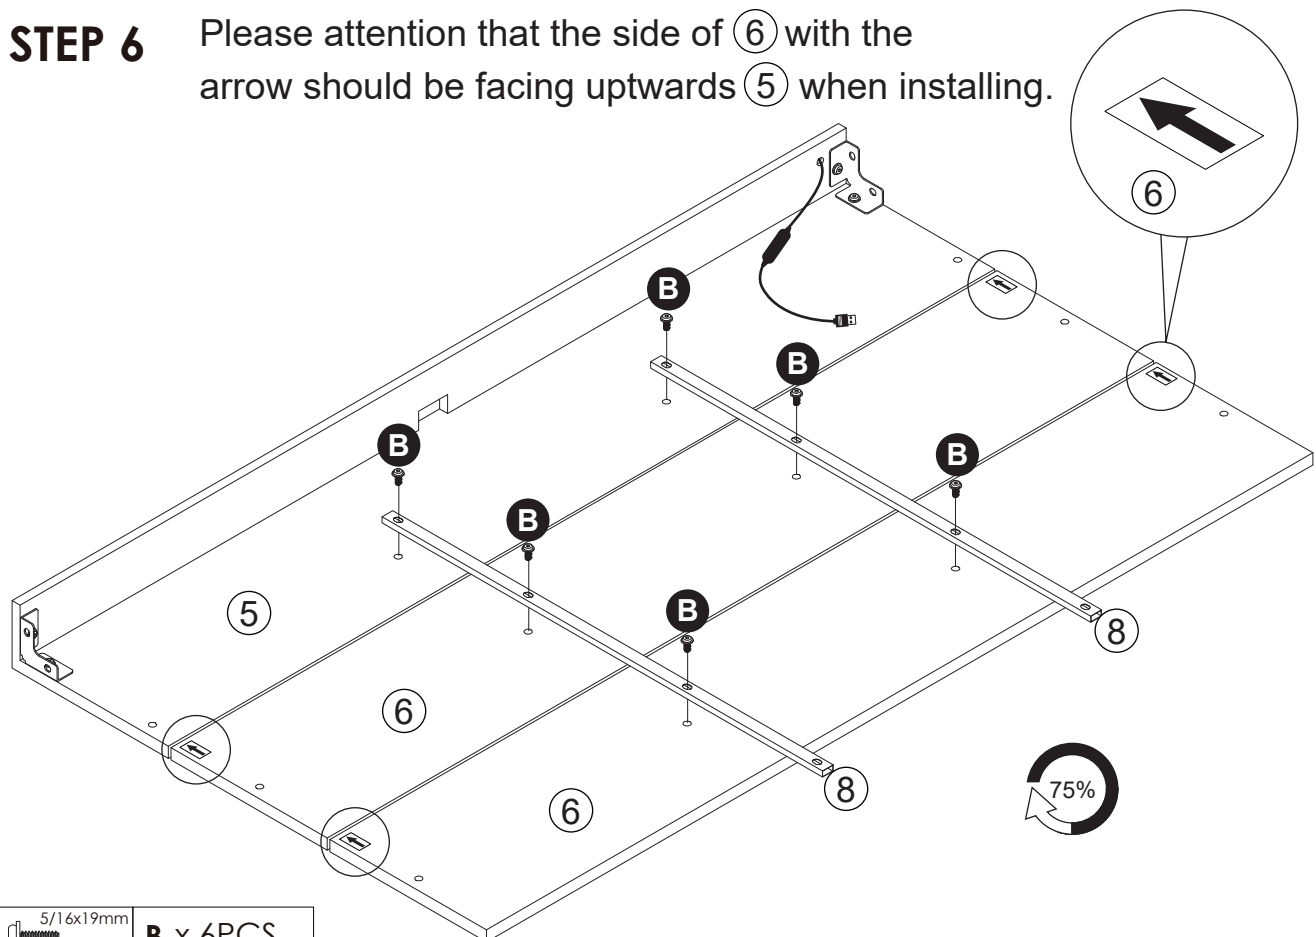
Please attention that the side of (6) with the arrow should be facing upwards (5) when installing.



B x 6PCS

Assembly Instruction

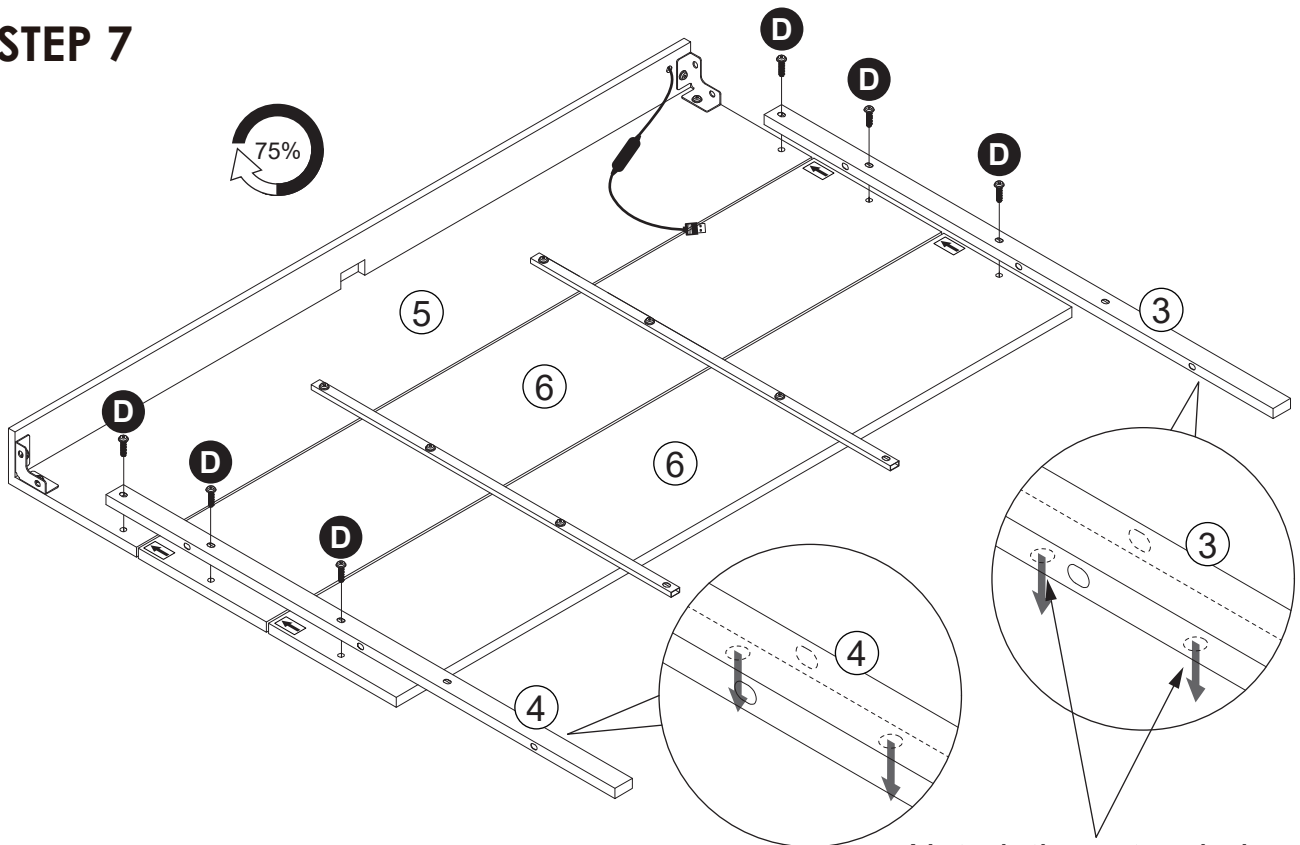
STEP 7




5/16x35mm
D x 6PCS

STEP 8

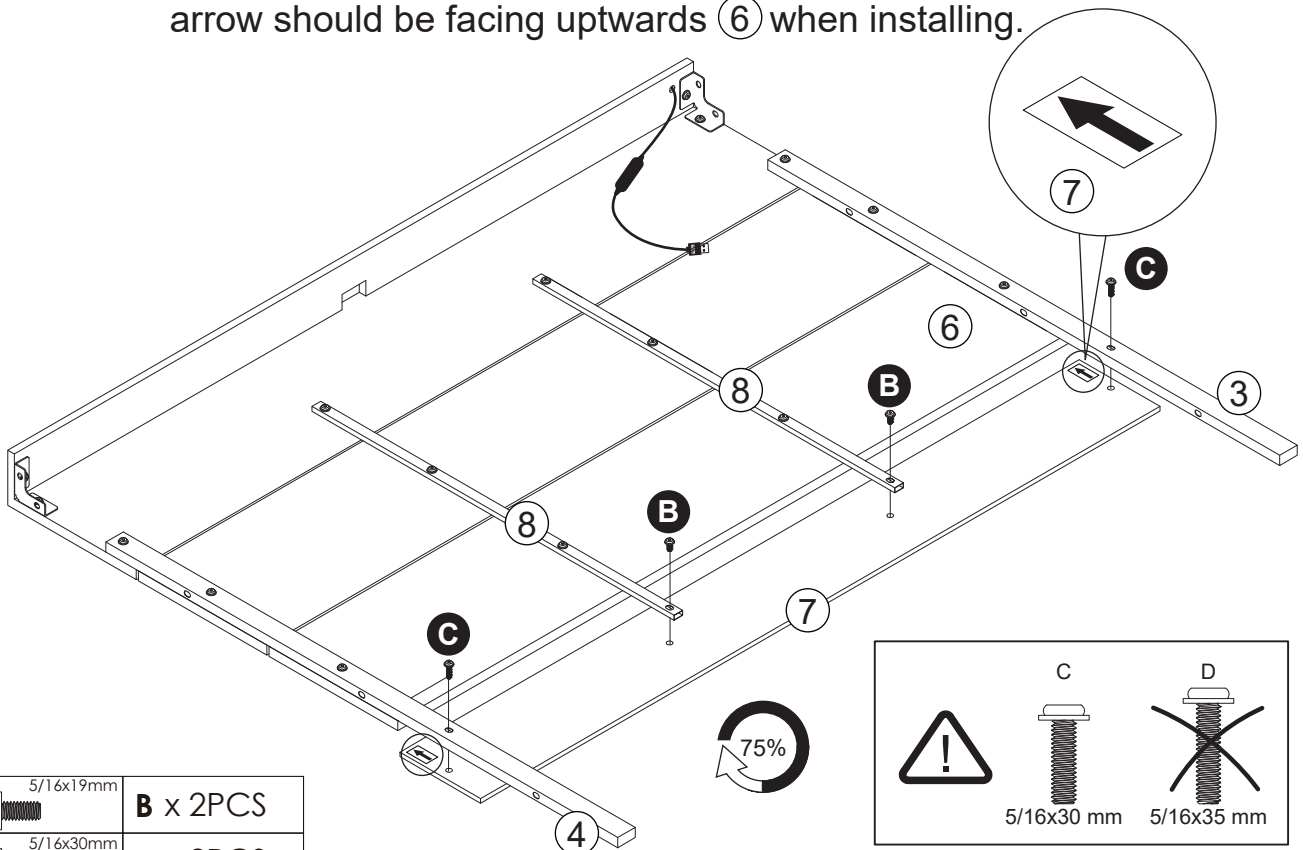Please attention that the side of ⑦ with the arrow should be facing upwards ⑥ when installing.




5/16x19mm
B x 2PCS
5/16x30mm
C x 2PCS

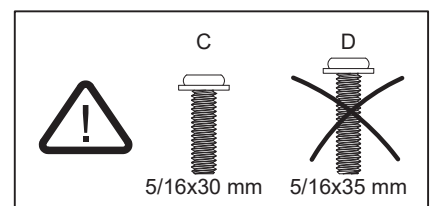


Assembly Instruction

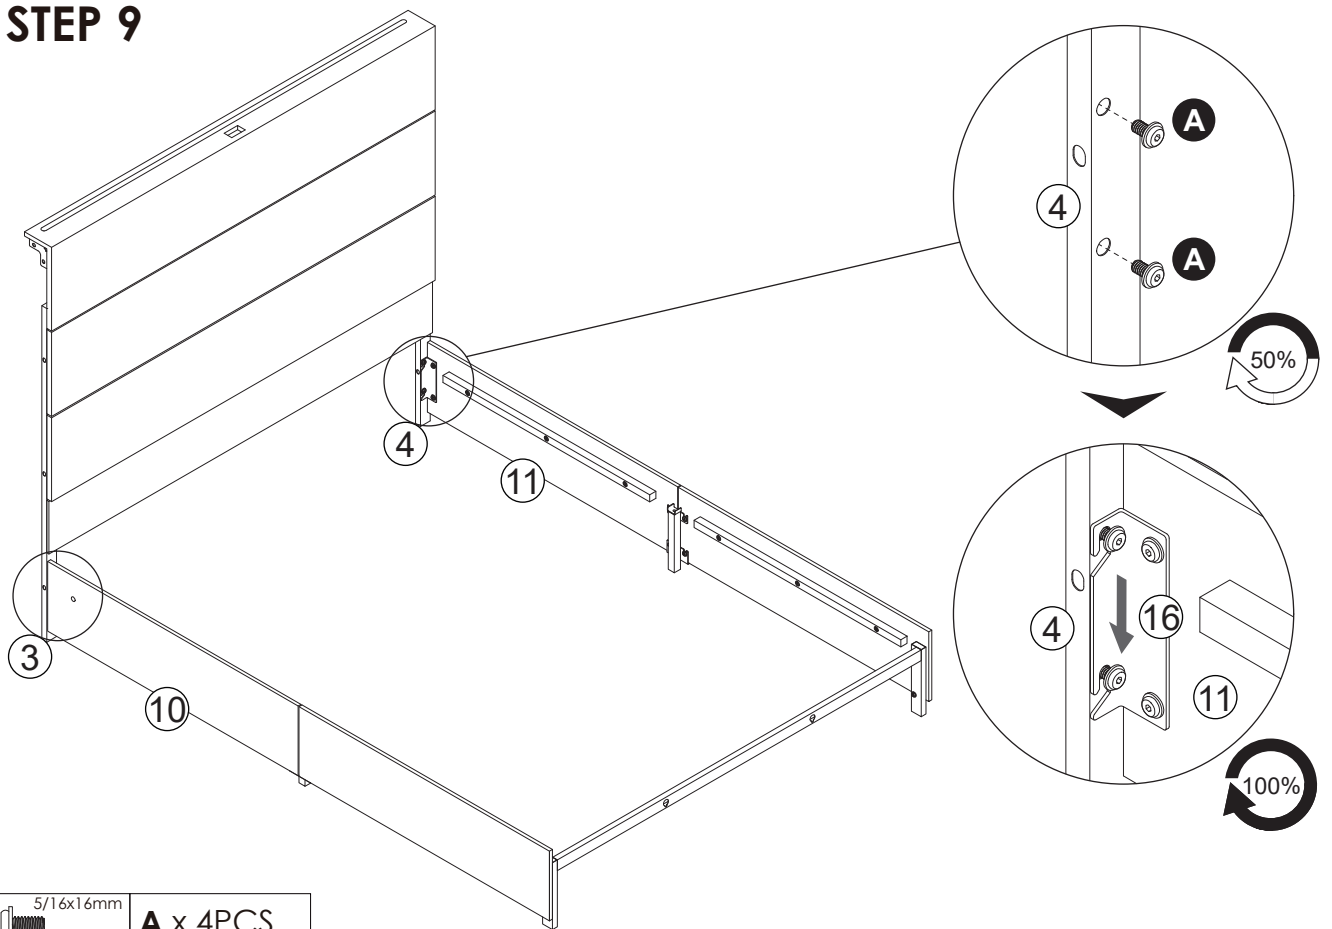STEP 9




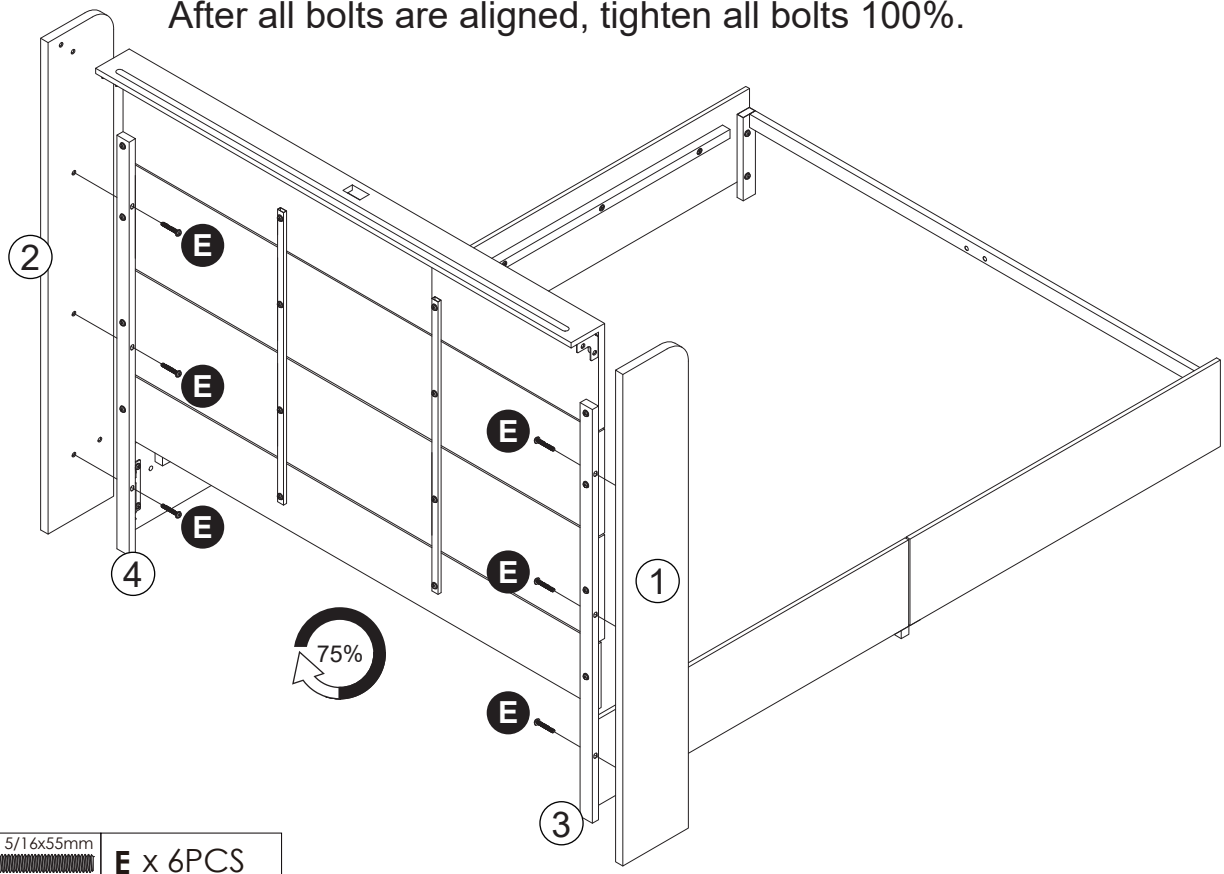STEP 10 If the **E** can't align with ① or ②, please loose the bolts of ③ or ④. After all bolts are aligned, tighten all bolts 100%.



Assembly Instruction

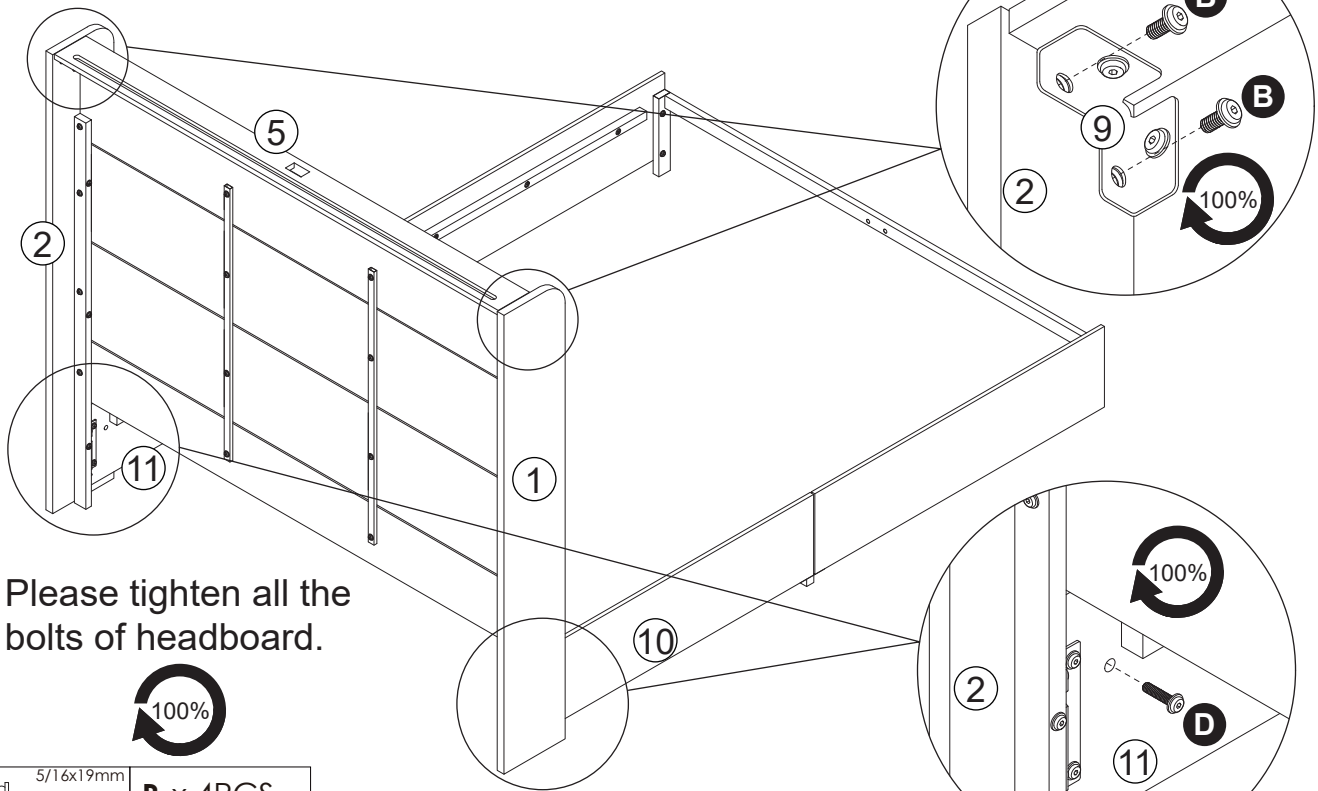STEP 11




Please tighten all the bolts of headboard.



	B x 4PCS
	D x 2PCS

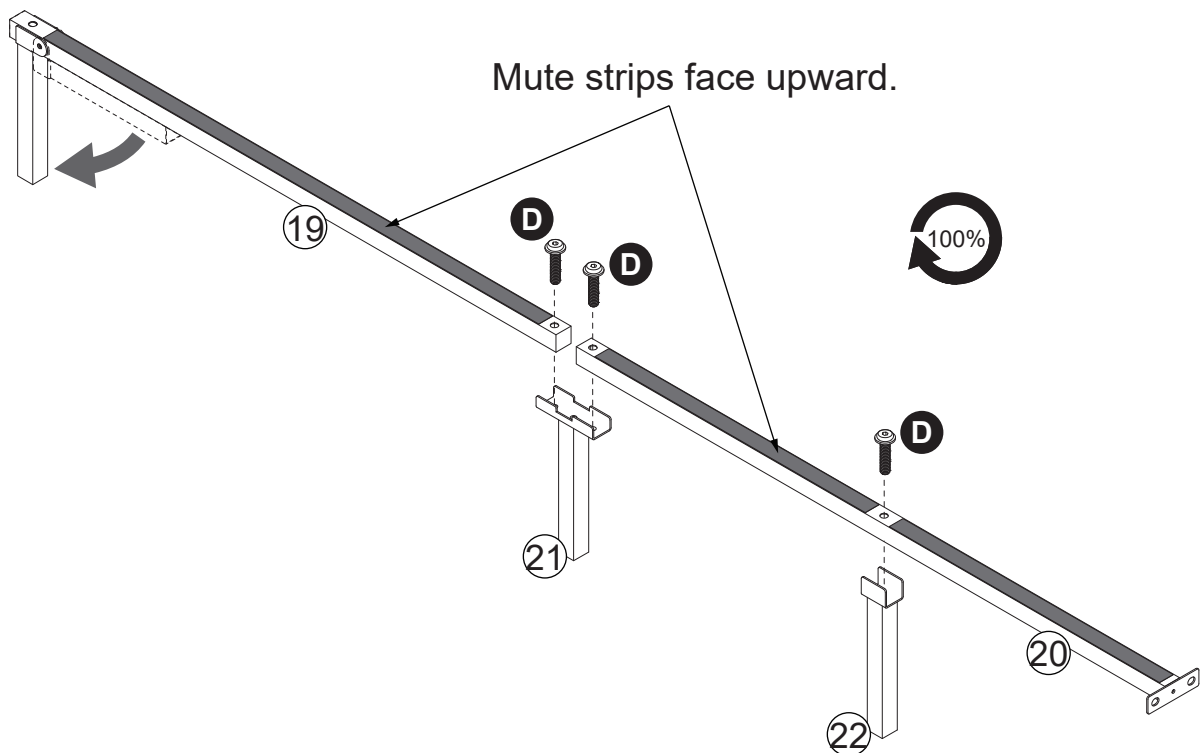STEP 12




Mute strips face upward.



	D x 3PCS
---	-----------------


Assembly Instruction

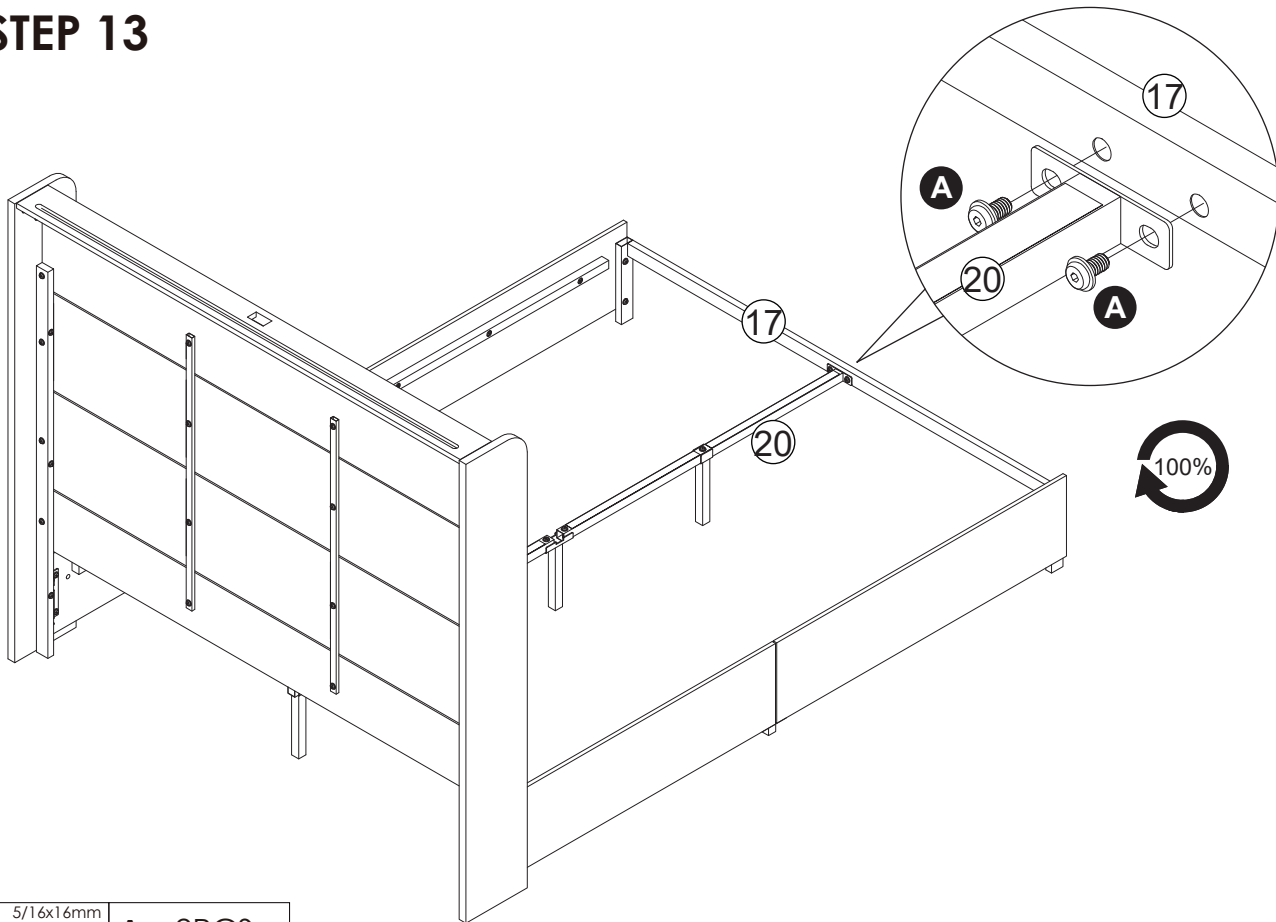STEP 13



5/16x16mm
A x 2PCS

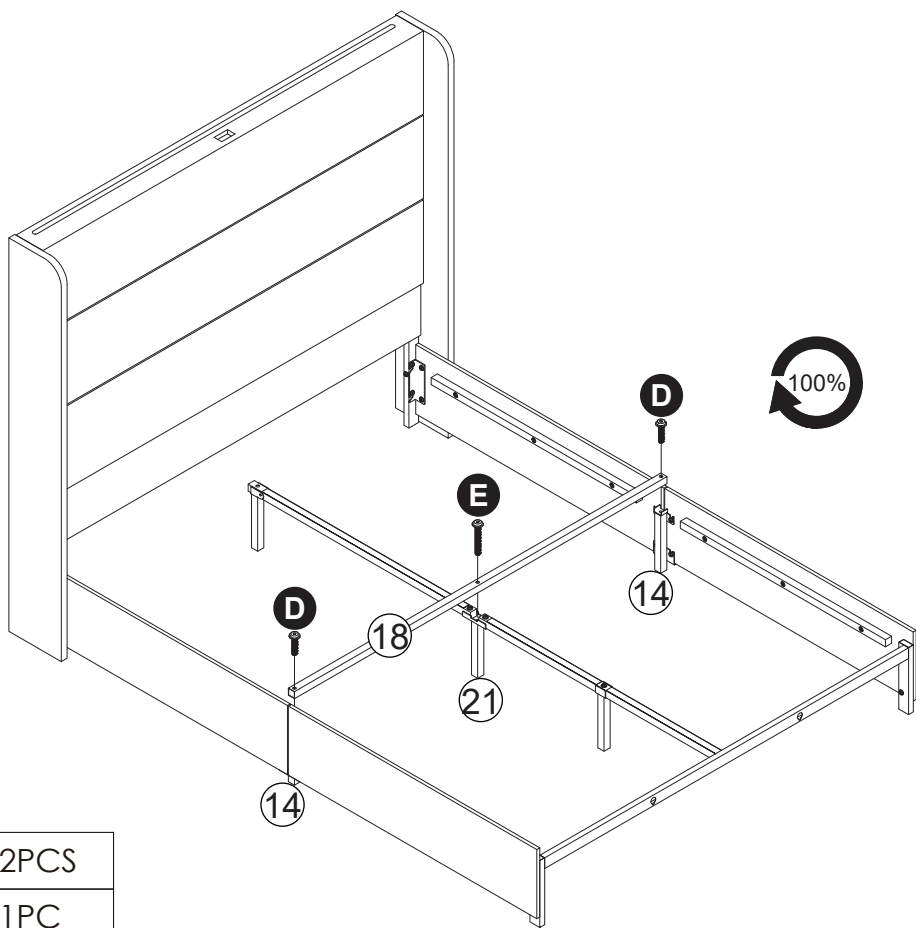
STEP 14




5/16x35mm
D x 2PCS
5/16x55mm
E x 1PC

Assembly Instruction

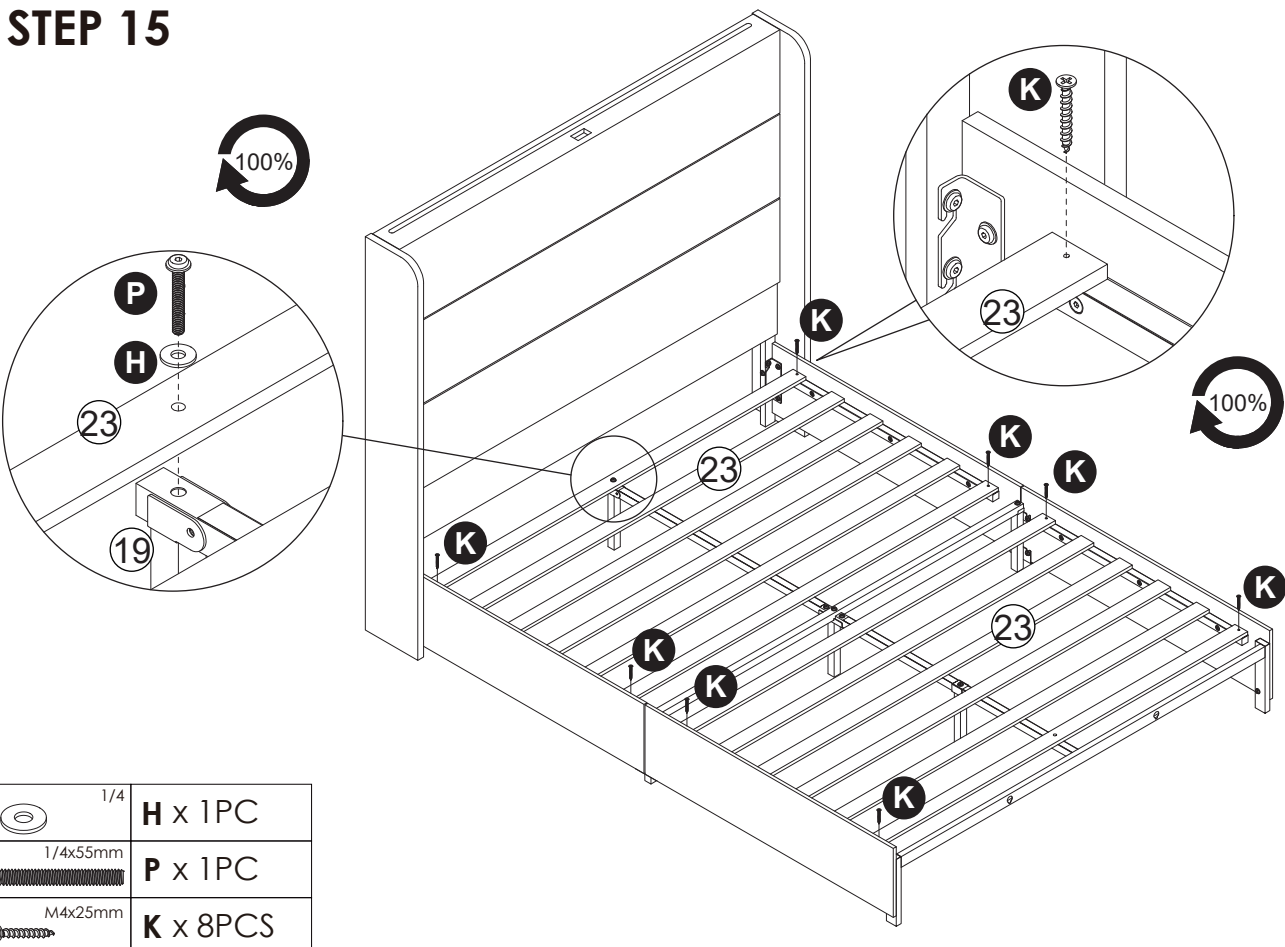STEP 15




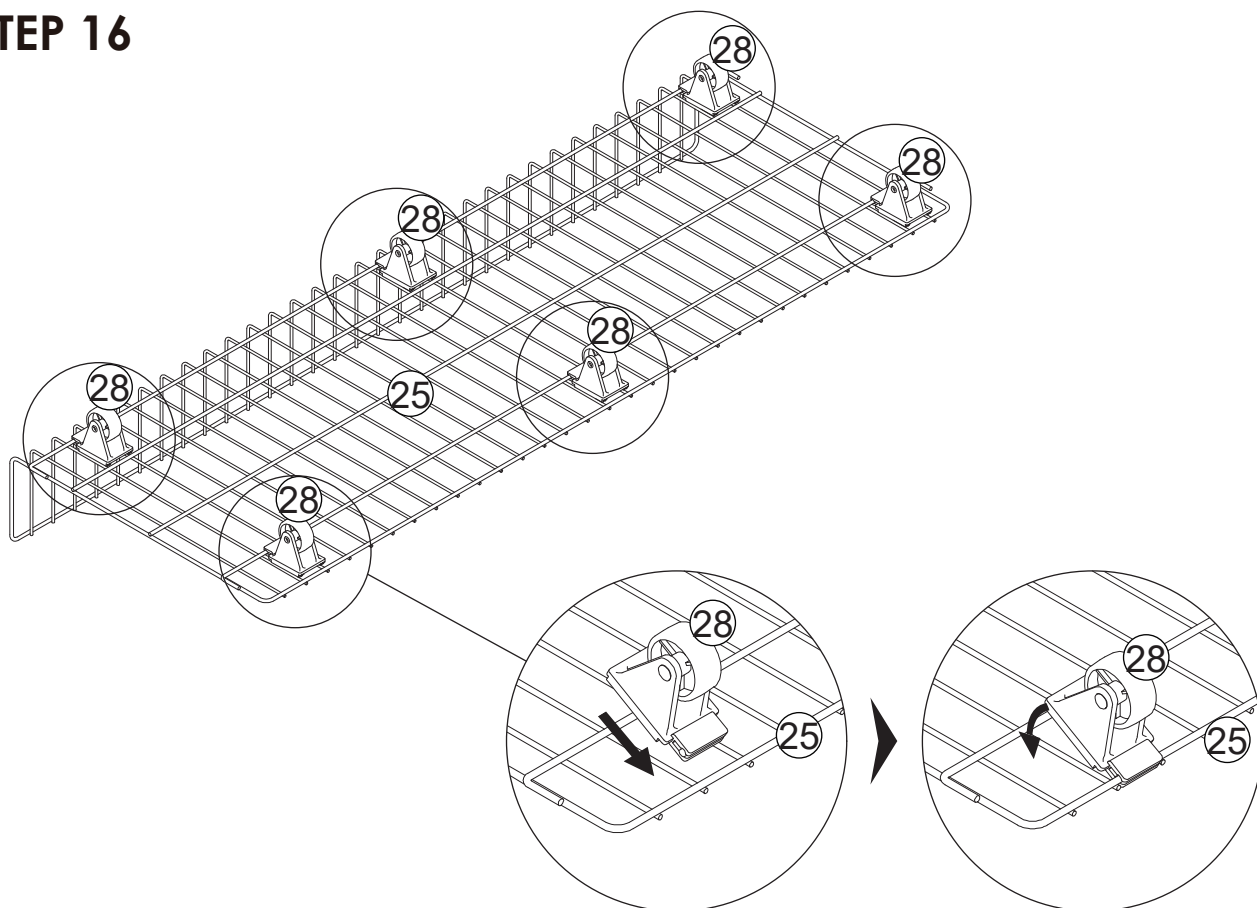STEP 16




Assembly Instruction

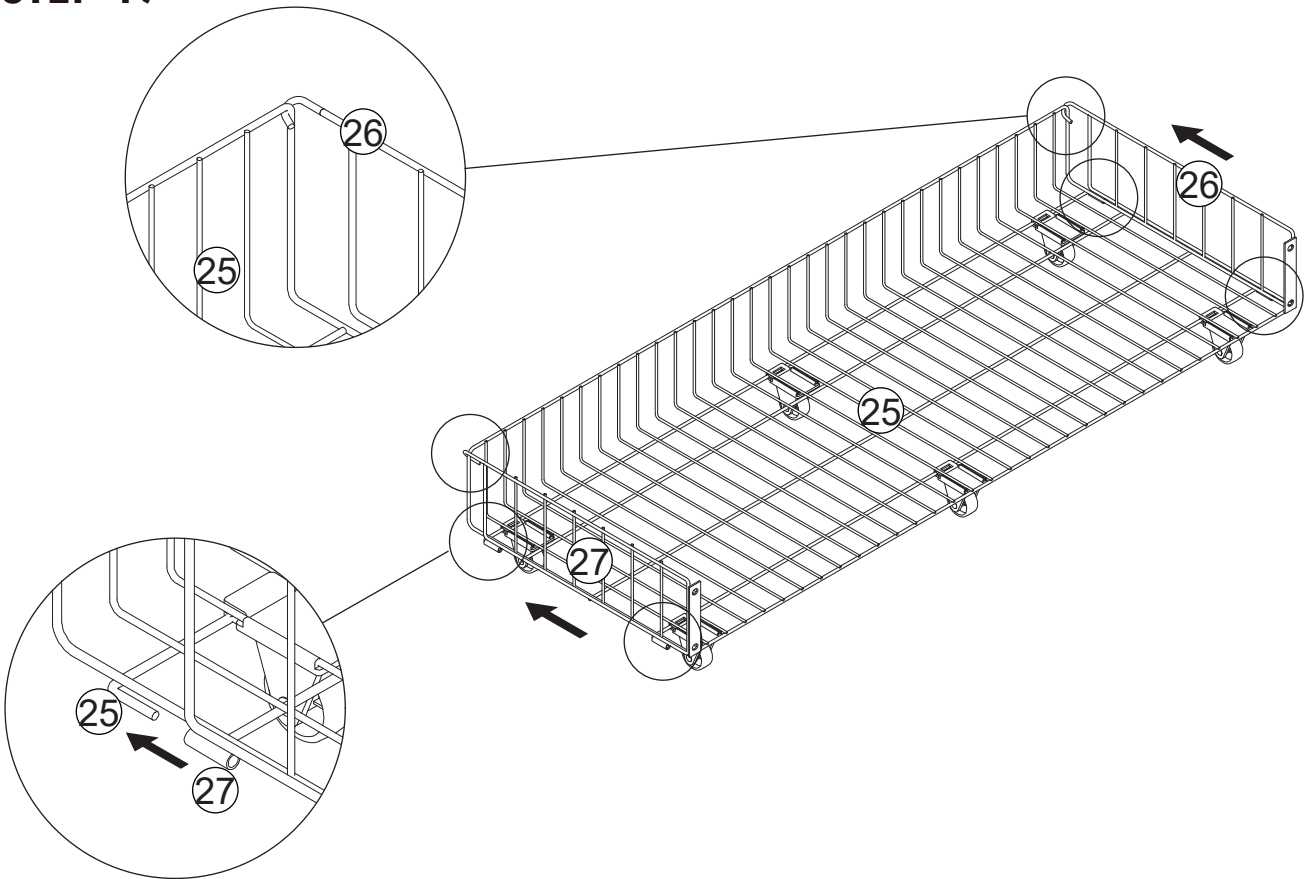STEP 17



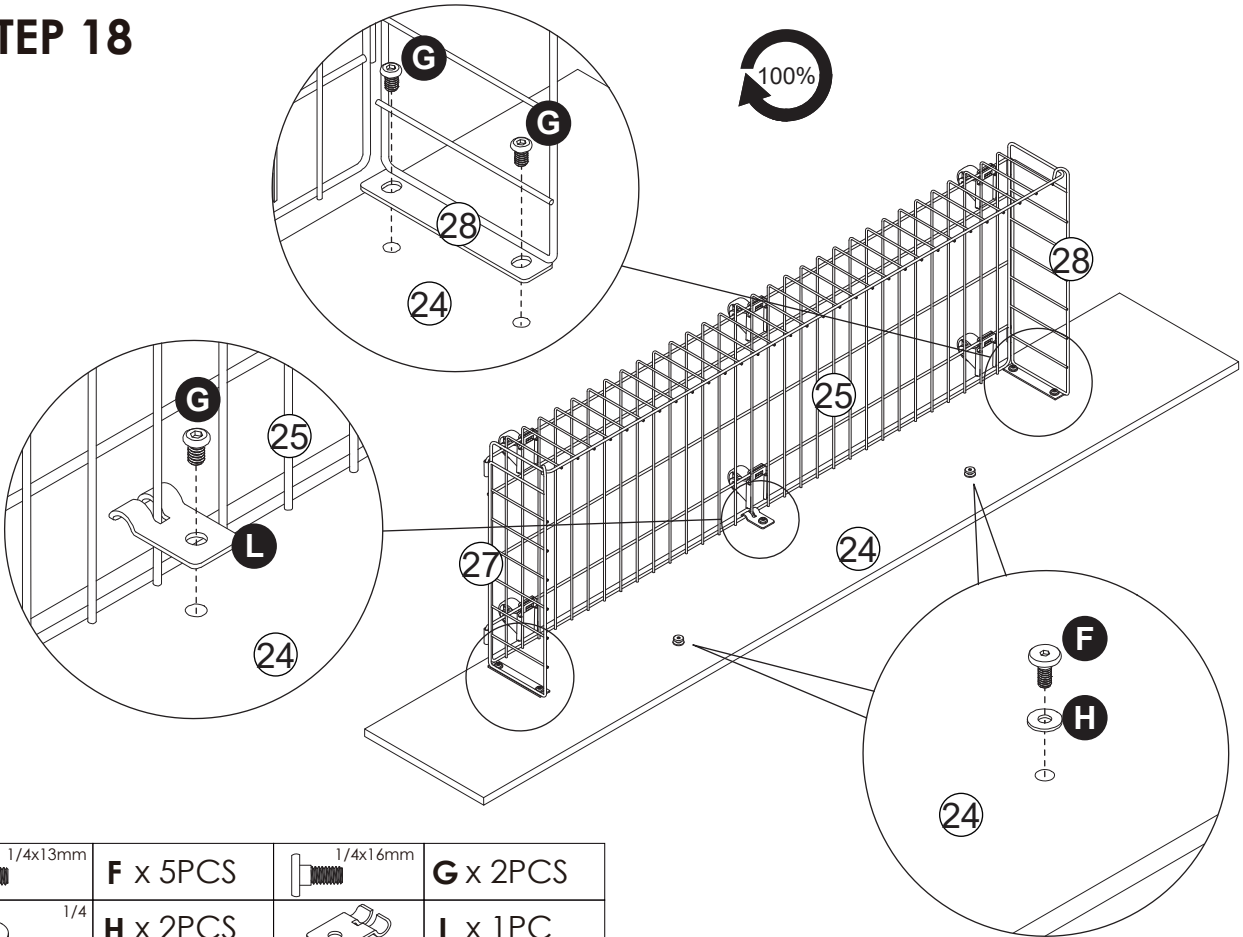
STEP 18



 1/4x13mm	F x 5PCS	 1/4x16mm	G x 2PCS
 1/4	H x 2PCS		L x 1PC

Assembly Instruction

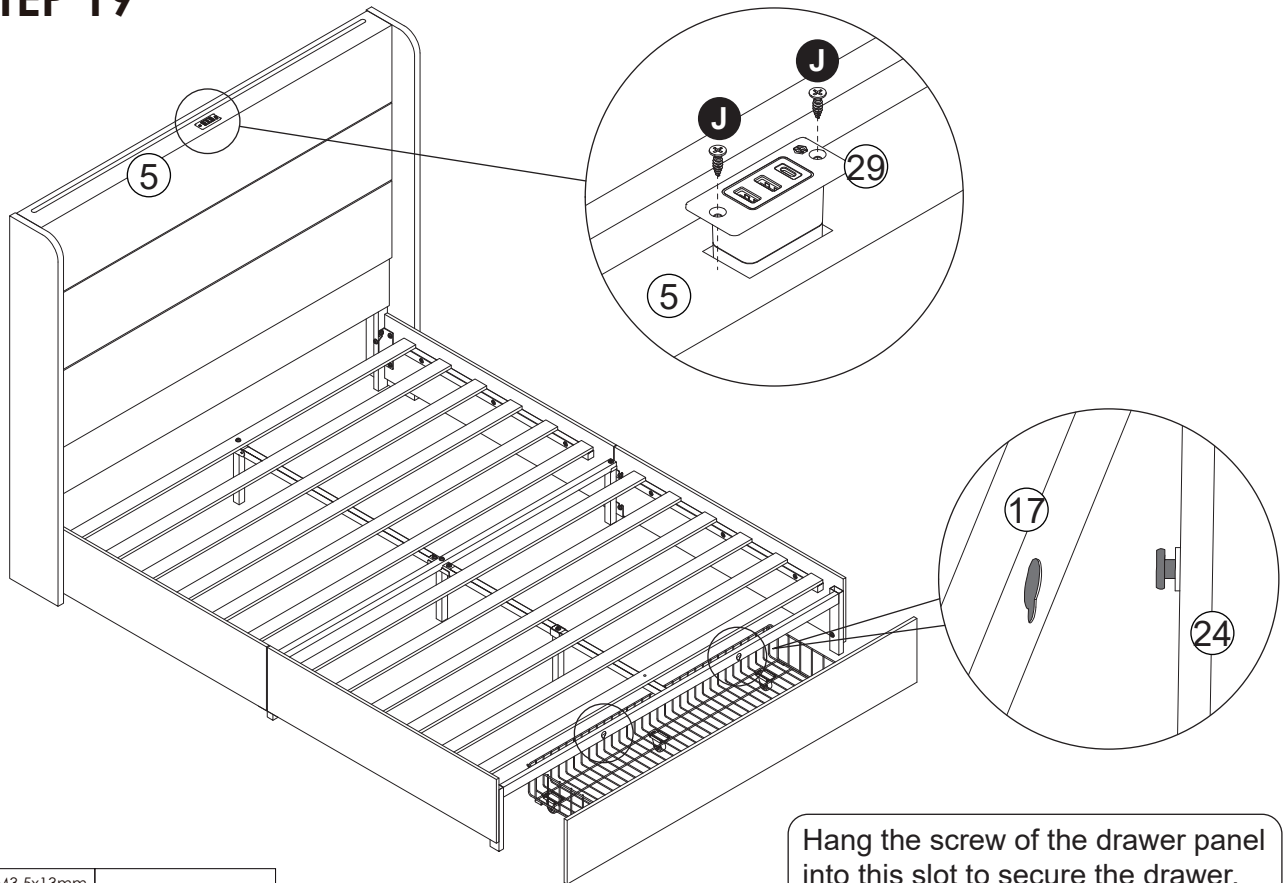STEP 19




M3.5x13mm


J x 2PCS

Hang the screw of the drawer panel into this slot to secure the drawer.

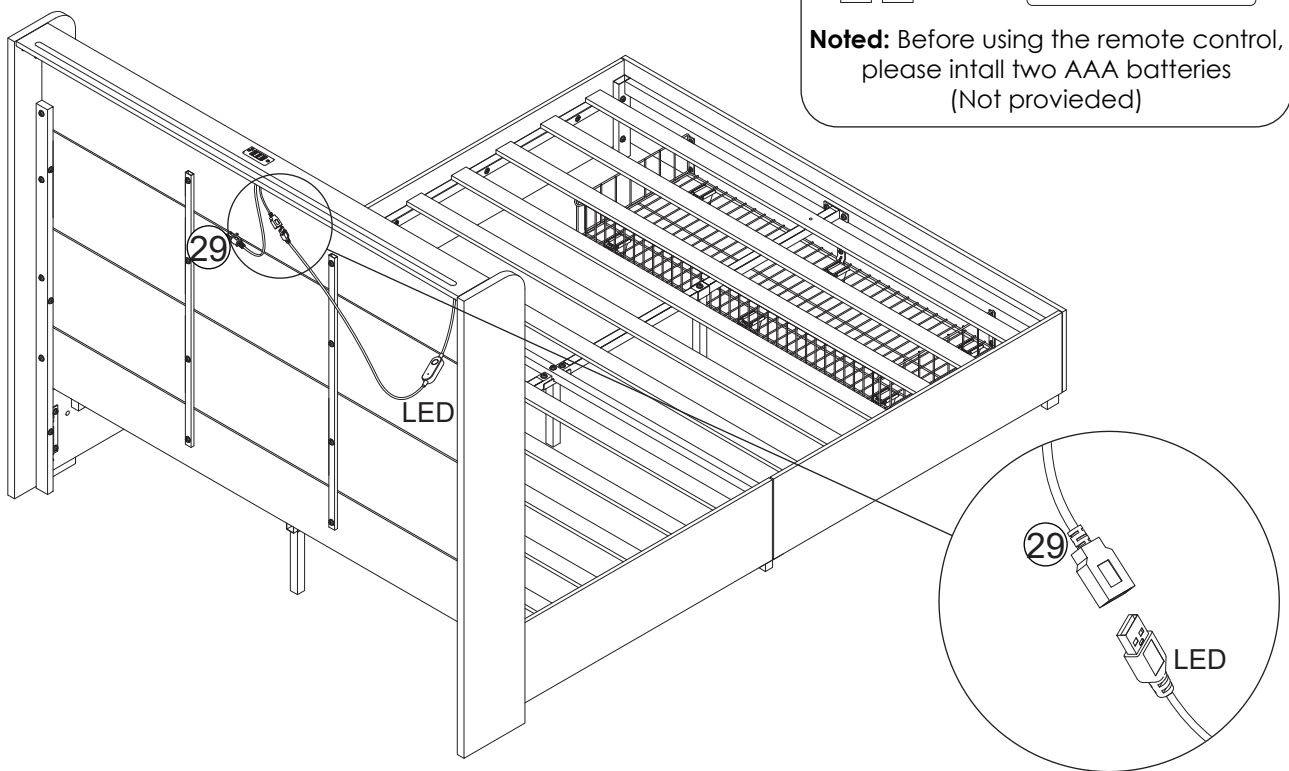STEP 20



AAA

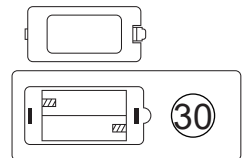

Noted: Before using the remote control, please install two AAA batteries (Not provided)