


Recesso Lighting Installation Instructions

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING

STEP 1: Mount Twist & Lock Ceiling Ring Around Recessed Light.

- You will need to locate junction box prior to installation (See Tips & Helpful Hints for how to locate a junction box.) First, hold Ceiling Ring centered around recessed fixture. Use a pencil and mark slots. Remove ring and use a small drill bit to make pilot holes within the marked slots on the ceiling in a triangular pattern. If you touch metal, reposition the hole to avoid that area and try again. Do not drill into the junction box.
- Remove the Ceiling Ring and expand the three pilot holes using a power drill with 3/32" to 1/8" drill bit. Pre-install the Anchor screws; remove Anchor screws; re-position the Ring; screw in the Anchor bolts to secure the ring to the ceiling.

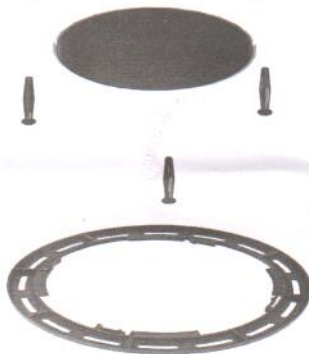


Helpful Hint:

How do I locate my junction box?

All recessed light designs vary. Most have junction boxes on one side, typically about an inch away from the can housing. This is where all of the wiring for the recessed light is located, which is why you should avoid drilling into this box. Some boxes are located on top of fixtures, so if you do not contact metal when drilling your pilot holes, that is probably the reason.

Once the junction box is located, position the Twist & Lock ceiling ring to secure the recessed can housing without hitting the box. You may need to try a few positions before finding the best locations for the placement of the holes within the mounting slots provided.

Suggested mounting hole location

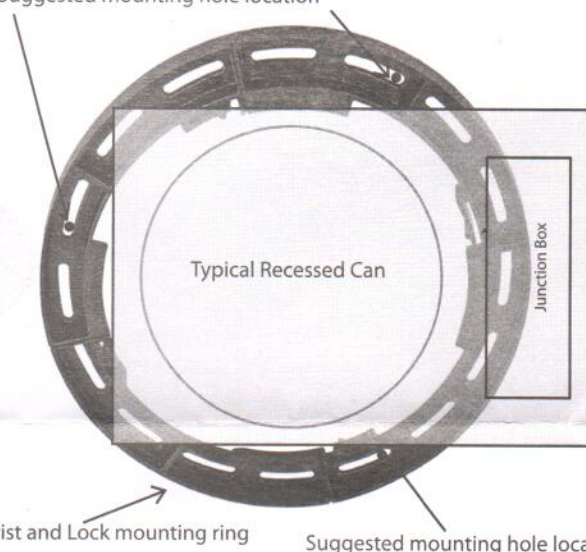

STEP 2: HANG FIXTURE

Align the fixture with the Twist & Lock Ceiling Ring and secure fixture to ring with a clockwise twist.



NOTE:

The Turno fixture is shown, but these instruction steps apply to all Recesso Lighting fixtures.


TOOLS REQUIRED:

- Power drill with 3/32" or 1/8" bit
- Philips Screw Driver

NOTE: To ensure fixture is secure, rotate until a slight "click" is felt

ADDITIONAL INSTRUCTIONS FOR SQUARE OR RECTANGULAR DESIGNS

To ensure that square or round designs are lined up properly with adjacent walls, use the "ALIGNMENT" marking on the ceiling ring and install the ceiling ring so that the alignment lines are parallel or at a ninety-degree angle to the adjacent walls.

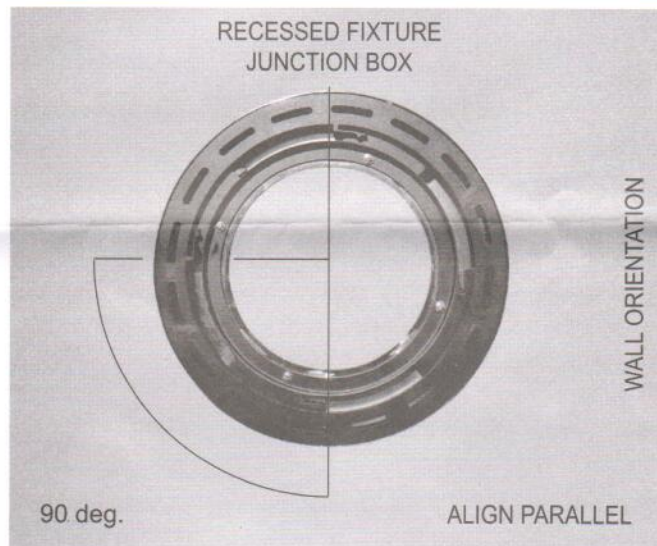

For more information and to watch online how to install Recesso Lighting fixtures, go to

Recessolighting.com