

COFFEE TABLE

Assembly Instructions - Please keep for future reference

CT-002



Dimensions

Width-47.24inch

Depth-25.59inch

Height-15.75inch

Important-Please read these instructions fully before starting assembly




Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

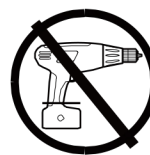

- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.







Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

Components - Fittings


Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

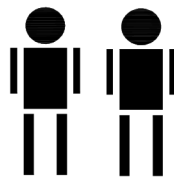A  35MM x2+1	B  Ø14.5 x2+1	C  Ø8*30 x8+1	D  M6*60 x4	E  M4 x1
F  M8*70 x6	G  M8 x6	H  M8 x6	I  x1	J  Ø50 x6
K  Ø22 x2	L  x1	 Person x2		


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

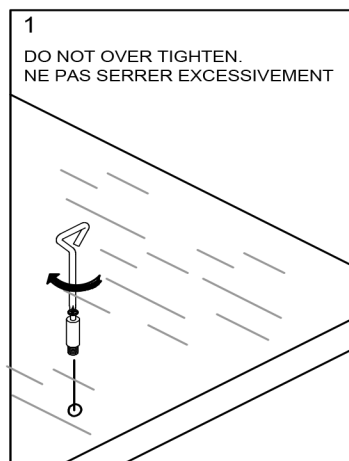

Step 2


Push the male camlock into the entry hole.

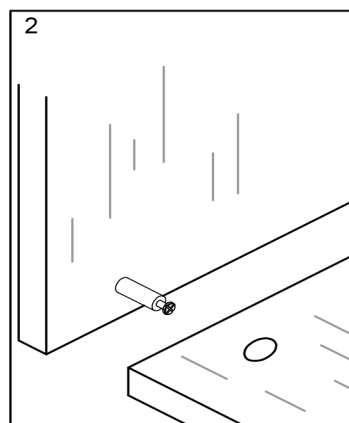

Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

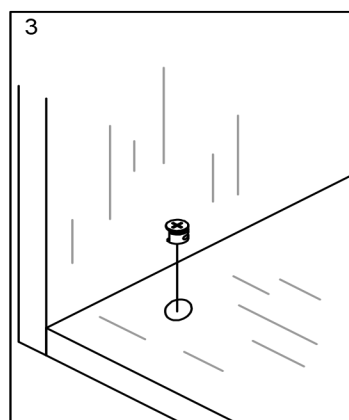


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.

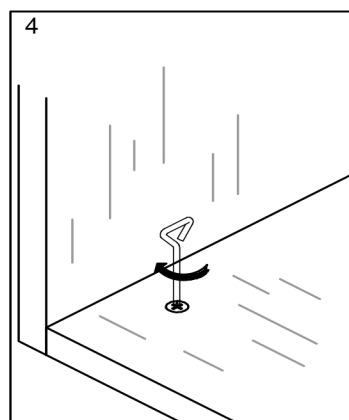

Using Camlocks 4 in 1


Step 1

Push the male camlock into the entry hole.

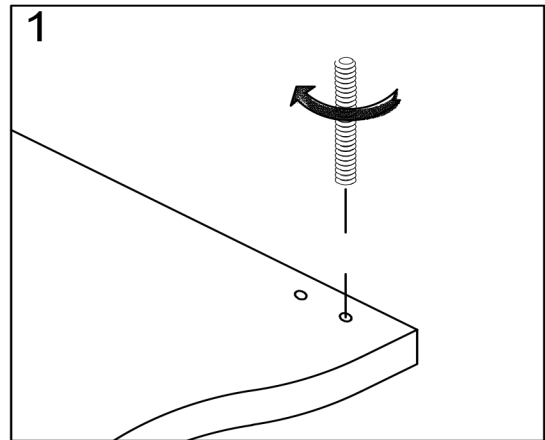


Step 2

Push the male camlock into the entry hole.

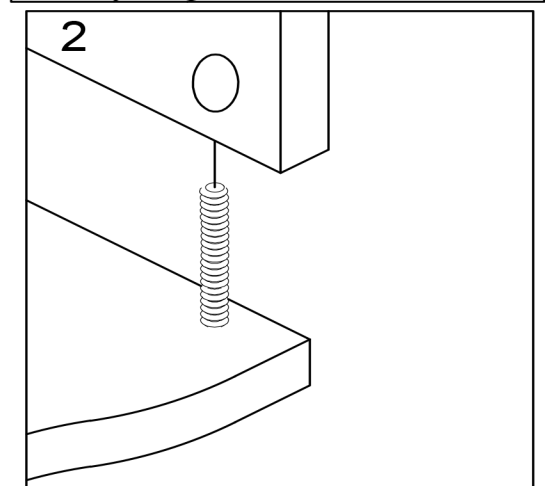


Step 3

Insert the female camlock (half-moon cam and screw nut) to ensure the female camlock hole points towards the screw pole of the male camlock.

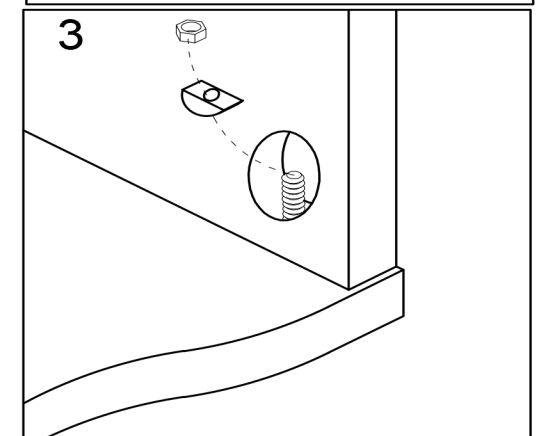


Step 4

Turn the female camlock clockwise with a wrench till the camlock is locked tightly.

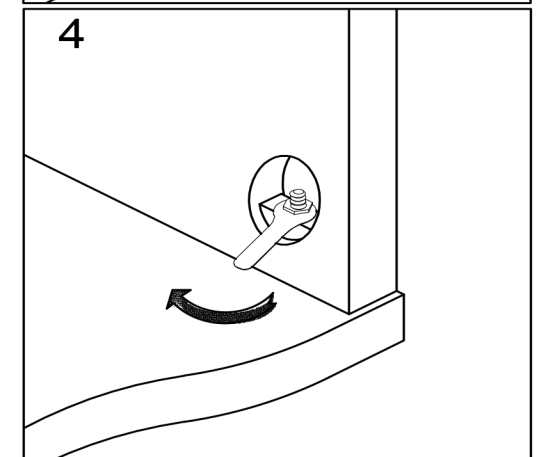


Assembly Instructions

① *1

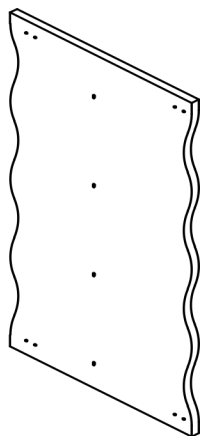

1200*650*25mm

② *2

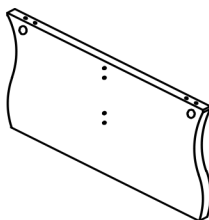

368*644*25mm

③ *1



1146*50*25mm

④ *1








1146*50*50mm

Assembly Instructions

Step 1



WARNING: Before assembling the furniture, please thoroughly inspect the work area and remove any small debris to prevent scratches on the product surface.

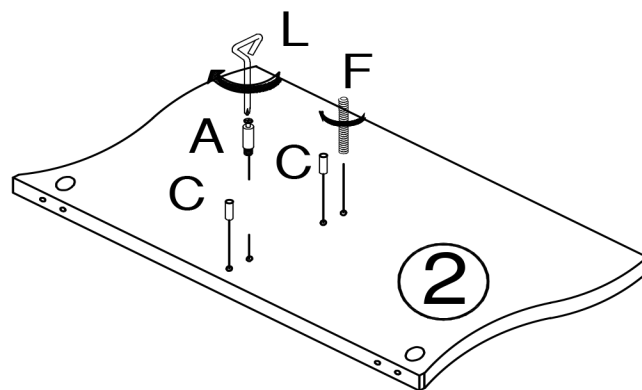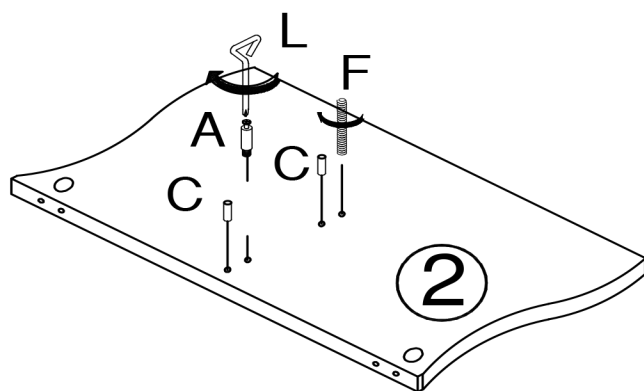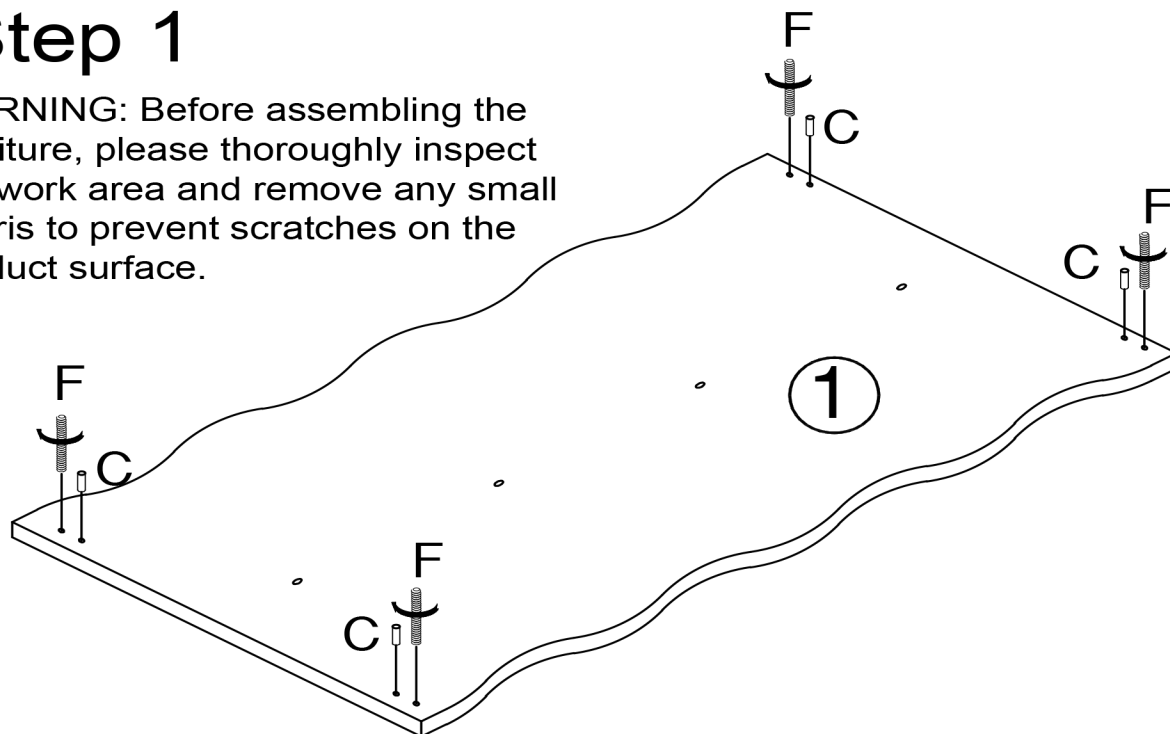

A  35MMx2	C  ø8*30 x8	F  M8*70 x6	L  x1	 Person x2
---	---	---	---	--

Assembly Instructions



Step 2

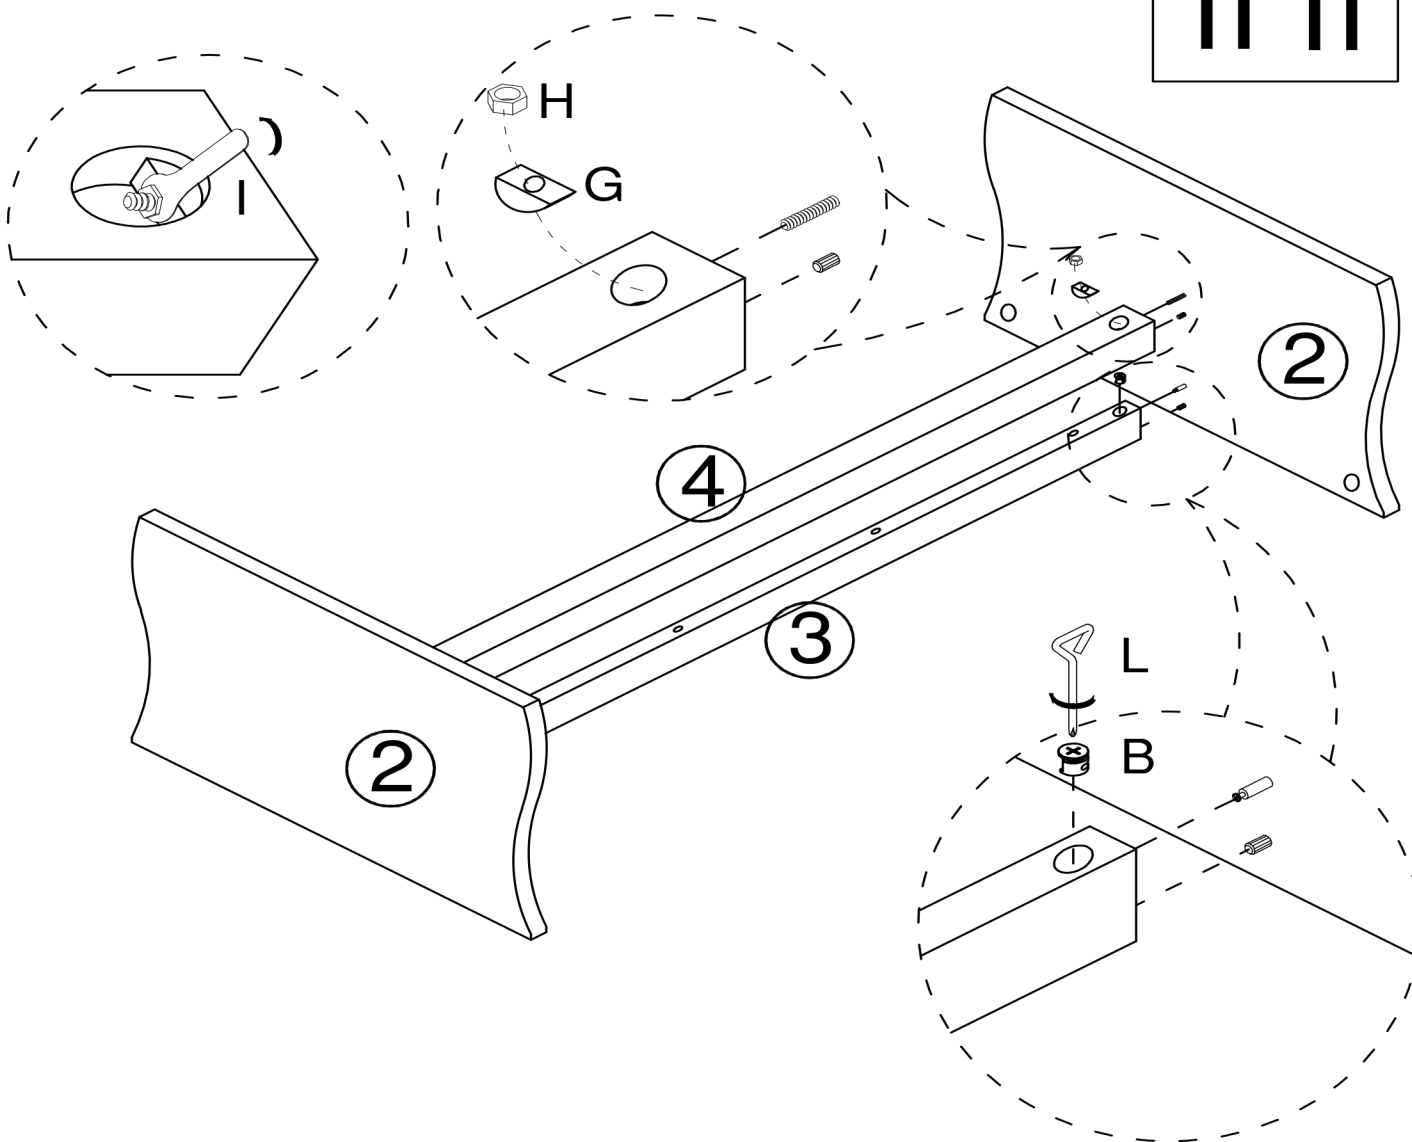
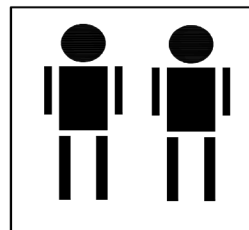


B  ø14.5 x2	G  M8 x2	H  M8 x2	I  x1	L  x1	 Person x2
--	---	---	--	--	--


Assembly Instructions


Step 3

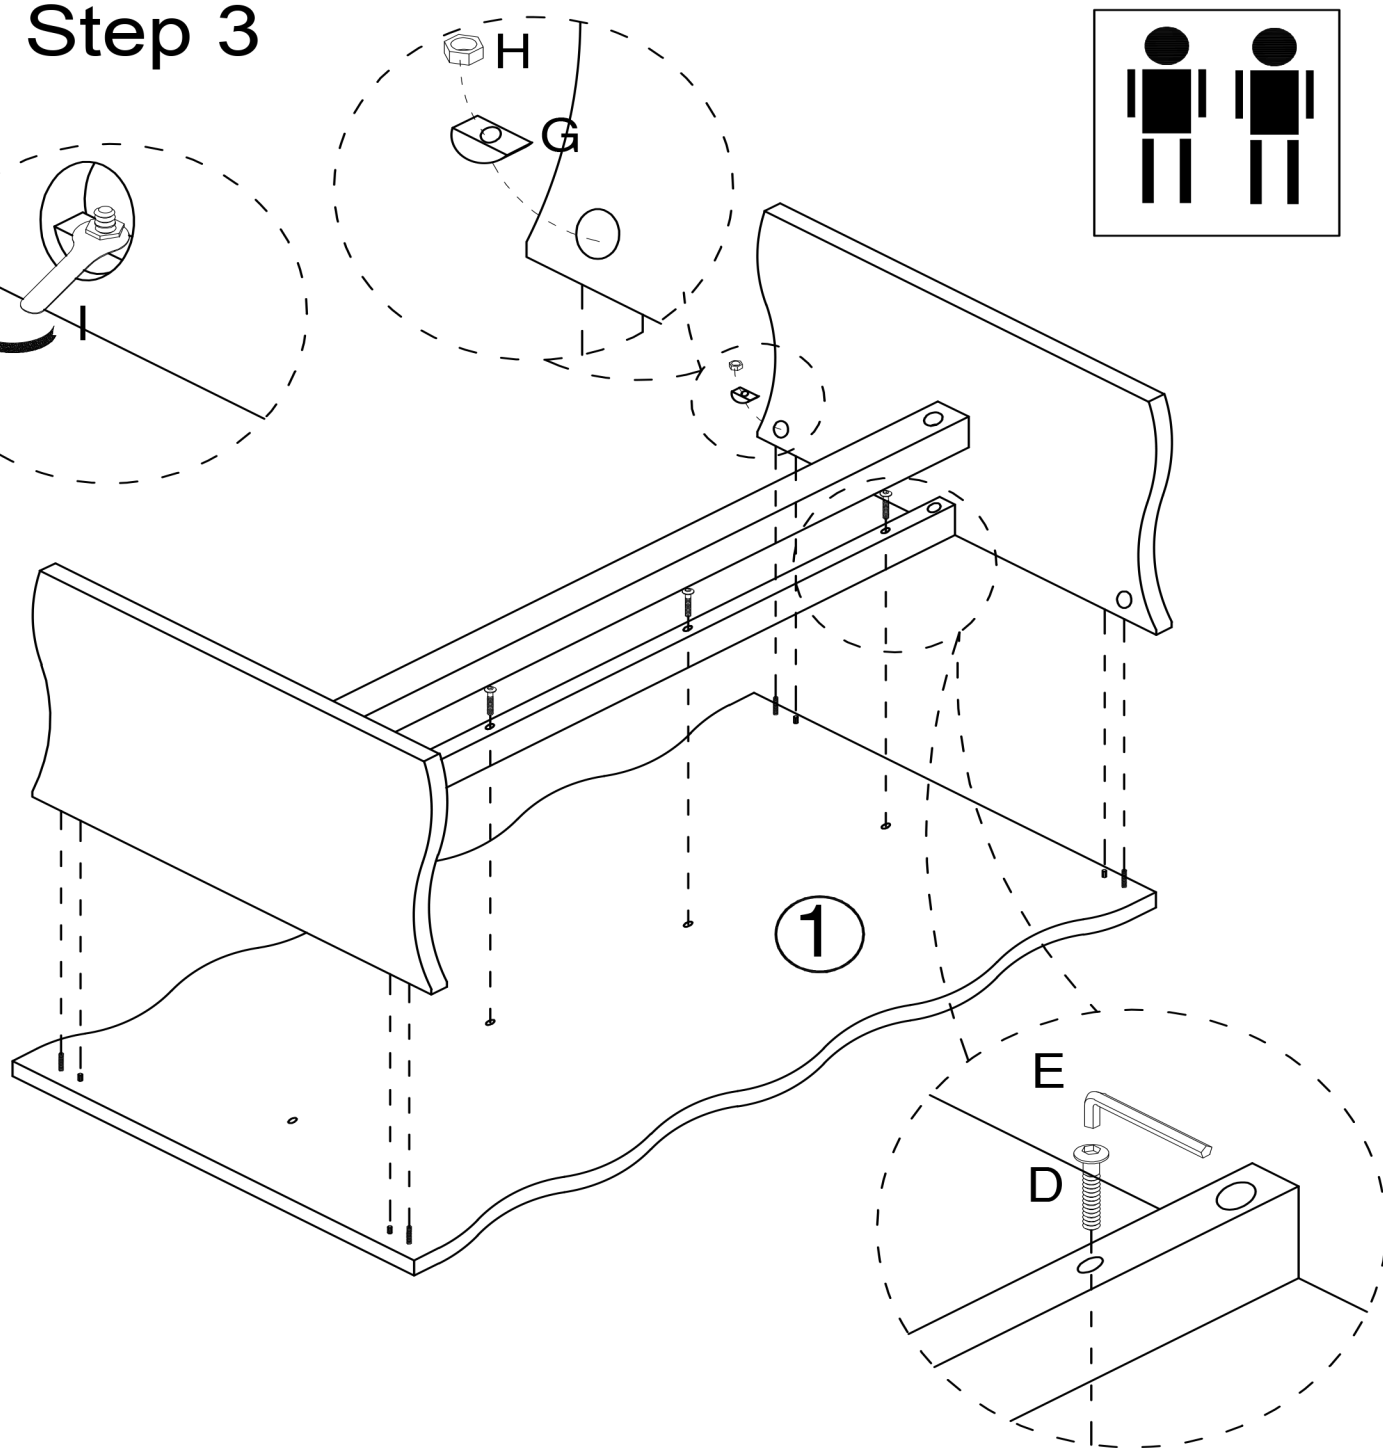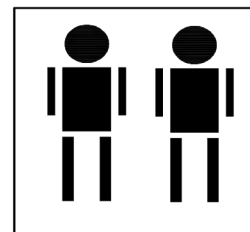

D  M6*60 x4	E  M4 x1	G  M8 x4	H  M8 x4	I  x1	 Person x2
--	---	---	---	--	--

Step 4

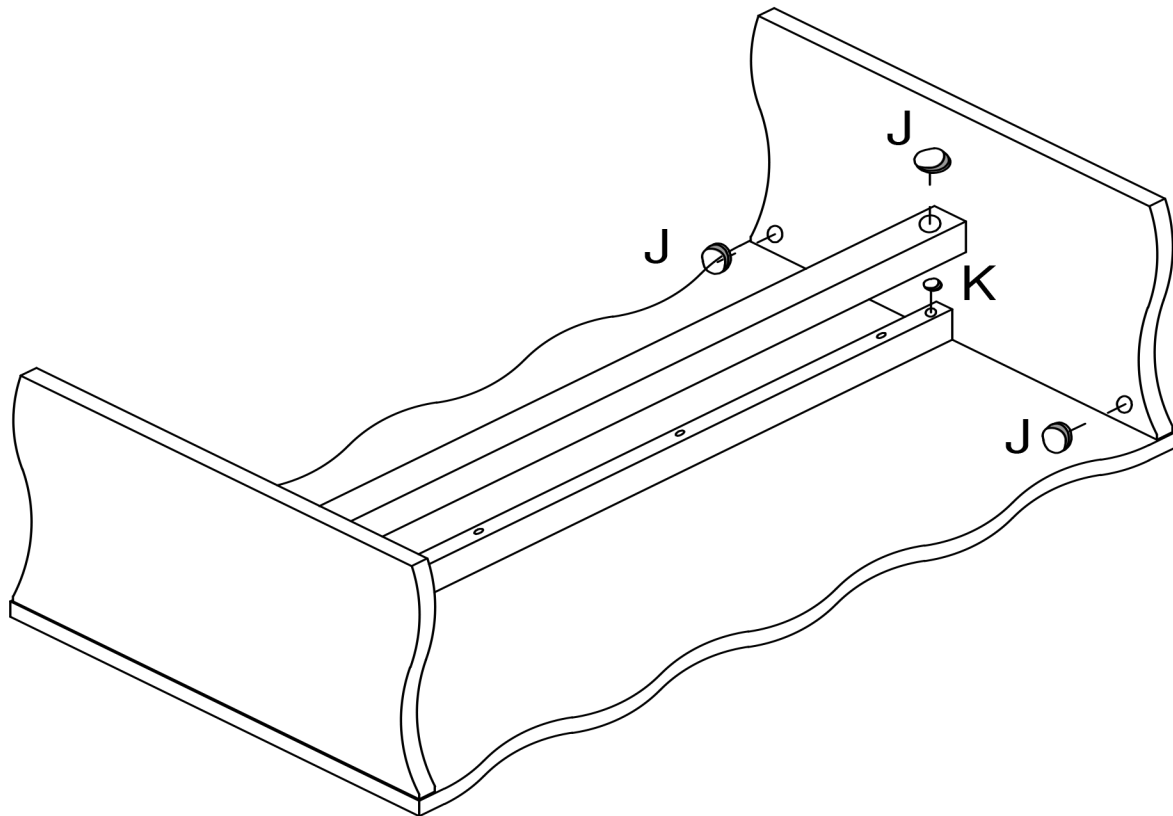

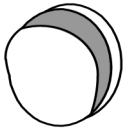J	K	
		
ø50 x6	ø22 X2	Person x2

Step 5

