
Assembly Guide

Keep manual for future reference.

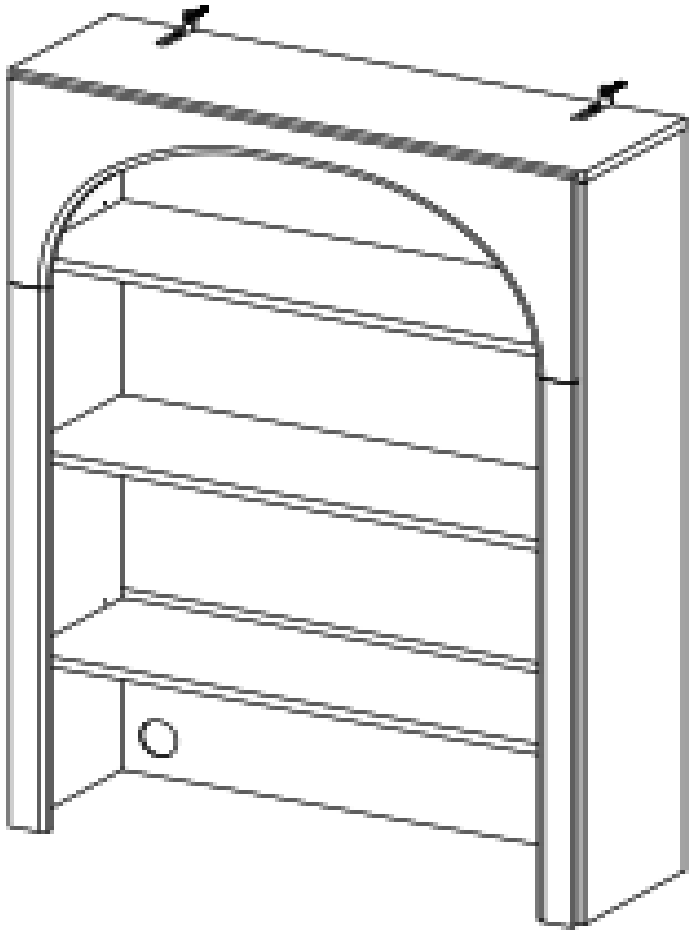

Have an assembly question or need a replacement part? Please contact us through the purchasing platform. We are here to help.

Inform

Assembly Instructions

Before beginning the assembly process, please read and save these instruc- tions for reference.Following these guidelines will ensure a smooth and successful assembly of your product secure the components without excessive tightening.

1.Part Identification:
Carefully separate and identify all the parts included in your package. Confirm that you have all the components listed in the instruction manual. This step will help you avoid any missing or misplaced parts during assembly.

2.Work Surface:
To prevent any scratches or damage to the product, assemble it on a soft mat or a similar protective surface. This will provide a cushioned area for the components and protect the surfaces from unwanted marks.

3.Step-by-Step Assembly:
Follow the assembly instructions provided, proceeding one step at a time. Take care to understand each step properly before proceeding to the next one.This sequential approach ensures that the assembly is done correctly and minimizes the chance of errors.


4.Proper Screw Seating:
all screws are correctly seated. By partially tightening each screw and nut initially, you can ensure that they are aligned properly and fit securely before final tightening.


5.Avoid Over-Tightening:
While each screw and nut should be tightened correctly, it is crucial not to over-tighten them. Over-tightening can cause damage to the product or compromise its structural integrity. Use the appropriate amount of force to secure the components without excessive tightening.

customer help center:


If you encounter any questions or problems during the assembly process,please do not hesitate to contact us.
We strive to provide excellent customer support and will respond to your inquiries within 24 hours.Our team will offer you a suitable solution to address any concerns you may have.


Get to know your Boards

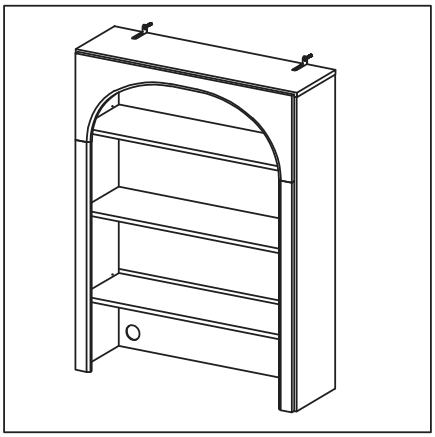


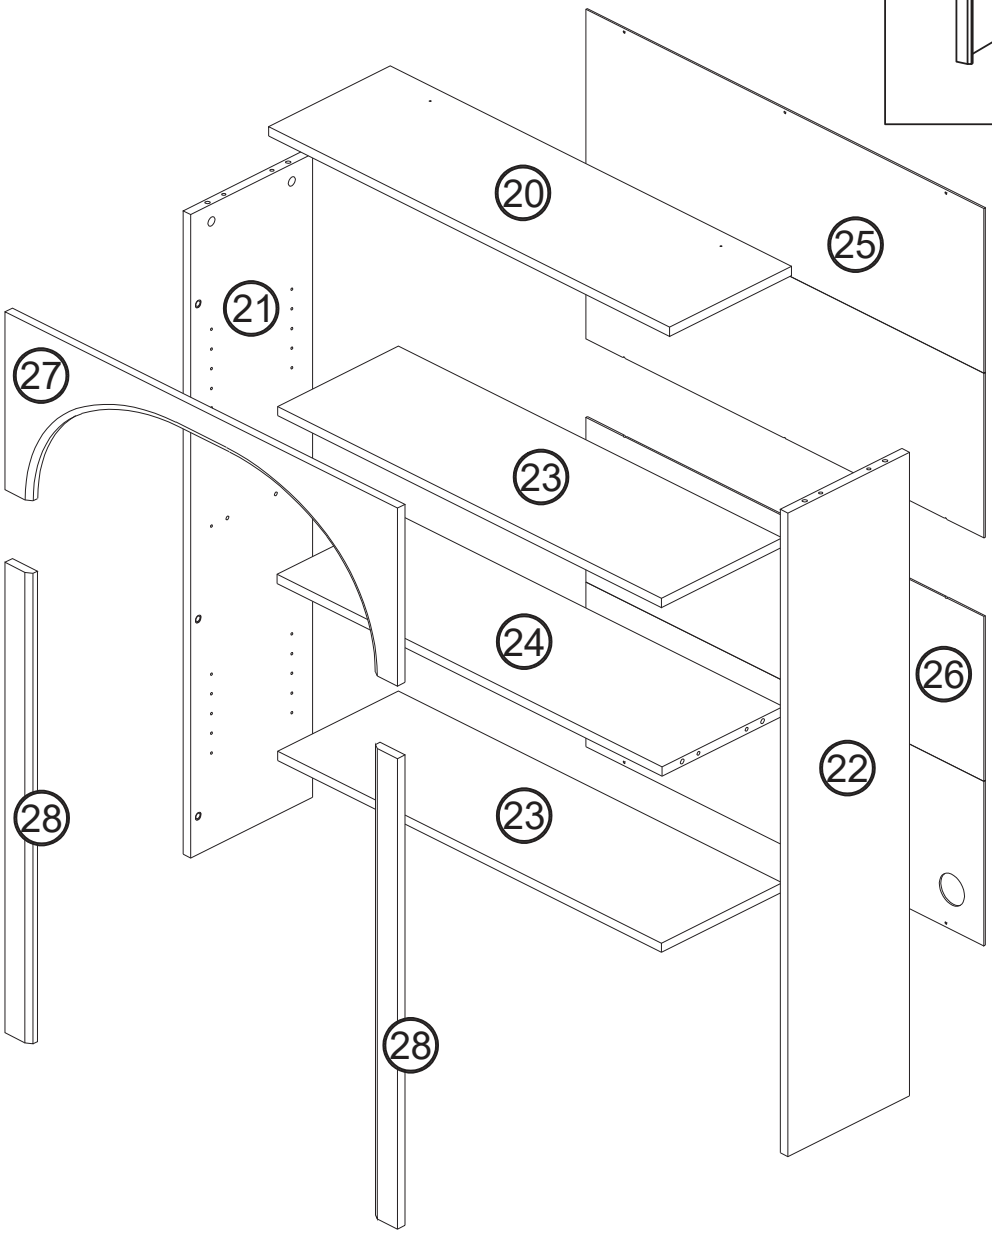



Parts List

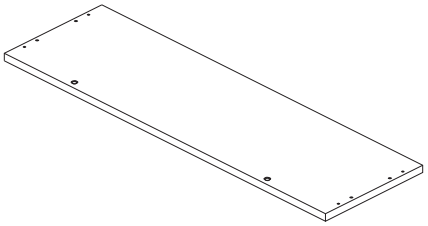
20  [1]

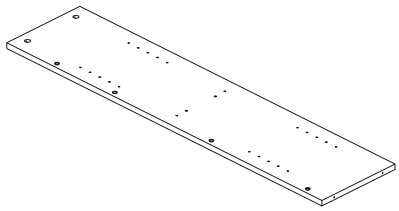
21  [1]

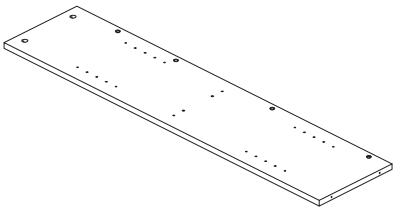
22  [1]

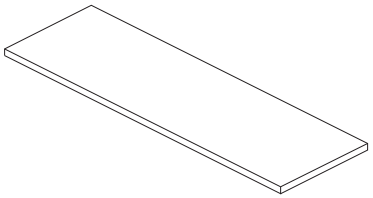
23  [2]

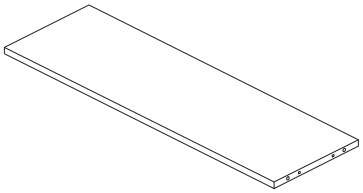24  [1]

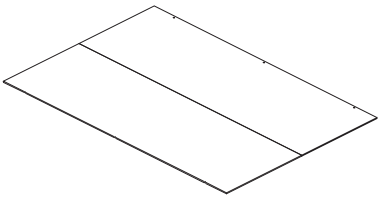25  [1]

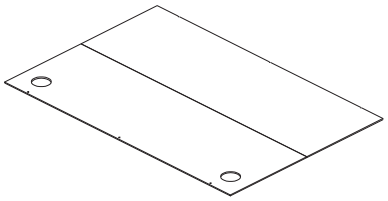
26  [1]

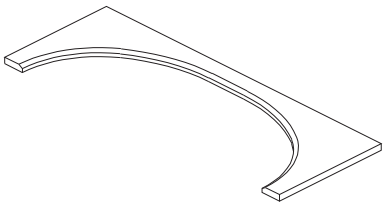27  [1]

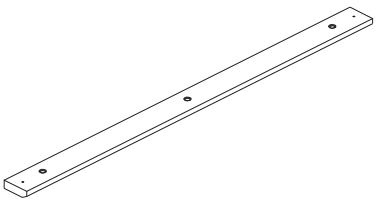28  [2]

Fasteners

Fasteners are shown actual size 1:1

Ⓐ  [8]


KD Bolt
M6x35mm

Ⓑ  [8]


KD Cam
Ø15x9.5mm

Ⓒ  [8]


Wood Dowel
6 x 30mm

Ⓟ  [4]

ST4.8x50mm


Ⓠ  [9]

ST3.5x12mm


Ⓡ  [20]

M6x12mm


Get to know your Hardware

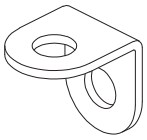Ⓢ  [10]

L Bracket

Ⓚ  [8]


Shelf Pin

Ⓣ  [16]

Nail

Ⓤ  [2]


Wrench

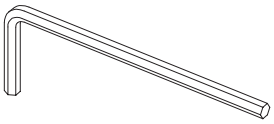Ⓥ  [1]


Wrench

Get to know your Hardware

TIP OVER RESTRAINT HARDWARE

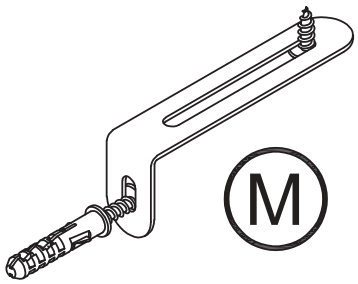


M1 [2]



ST4.0x38mm

M2 [2]




ST4.0x12mm

M3 [2]




Ø5.0x30mm

M4 [2]

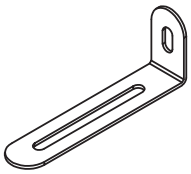



75*25*25*1mm

STEP 1


Ⓐ  [4]

KD Bolt
M6x35mm

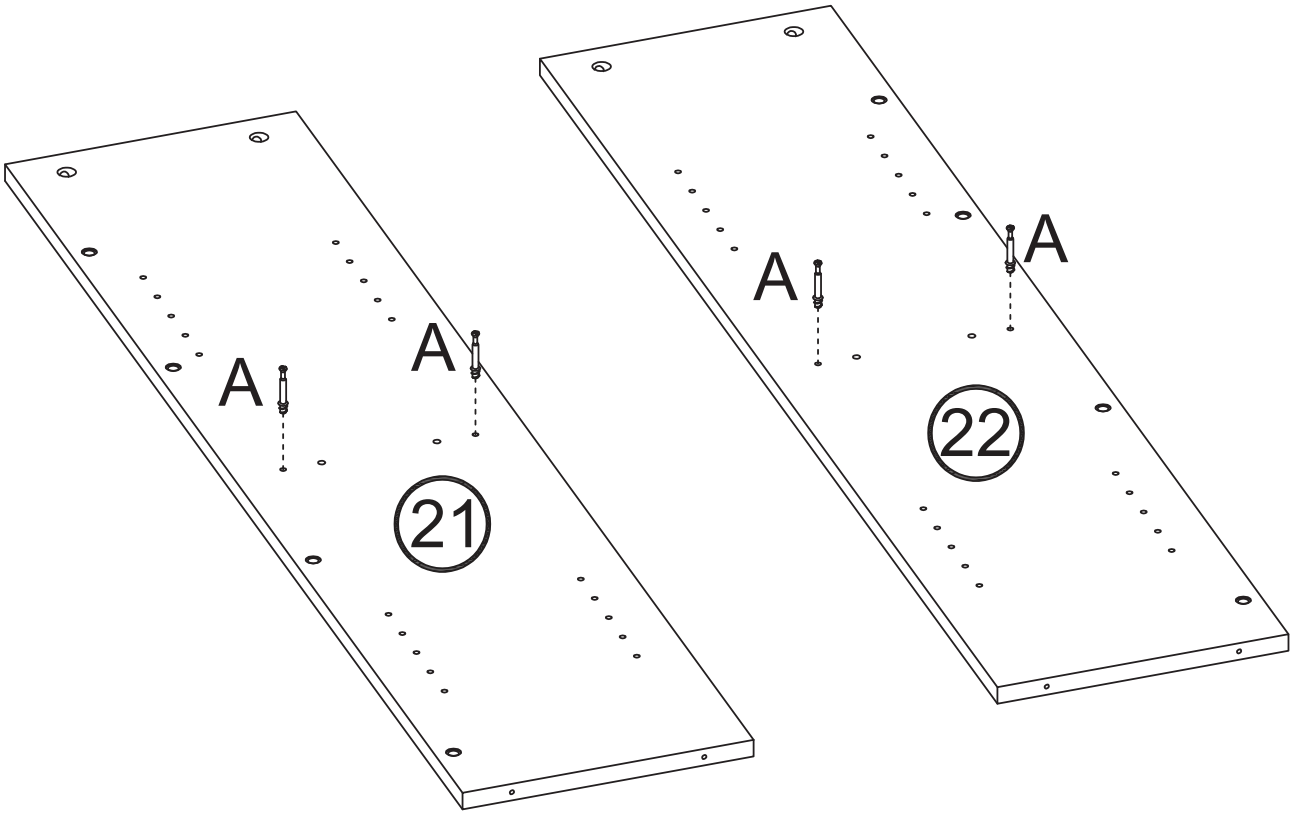

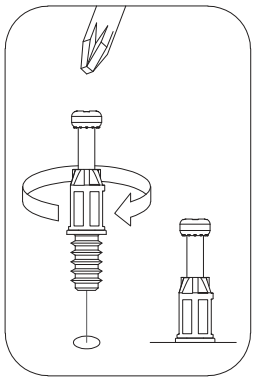


STEP 2


Ⓑ  [4]

KD Cam
Ø15x9.5mm


Ⓒ  [4]

Wood Dowel
6 x 30mm

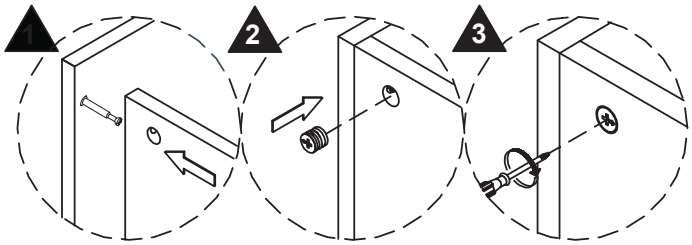

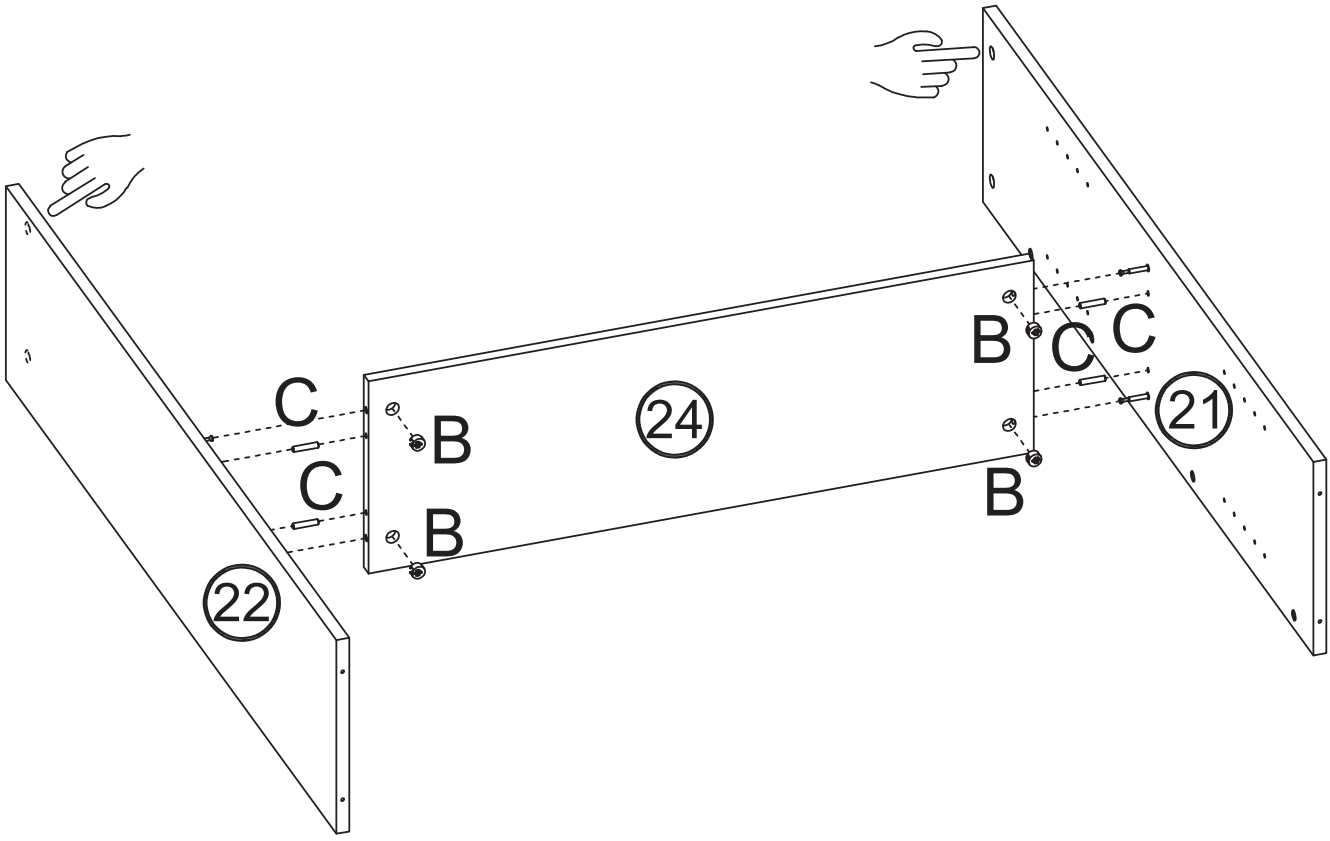

STEP 3

Ⓐ  [4]


KD Bolt
M6x35mm


Ⓜ  [2]

M4




M2

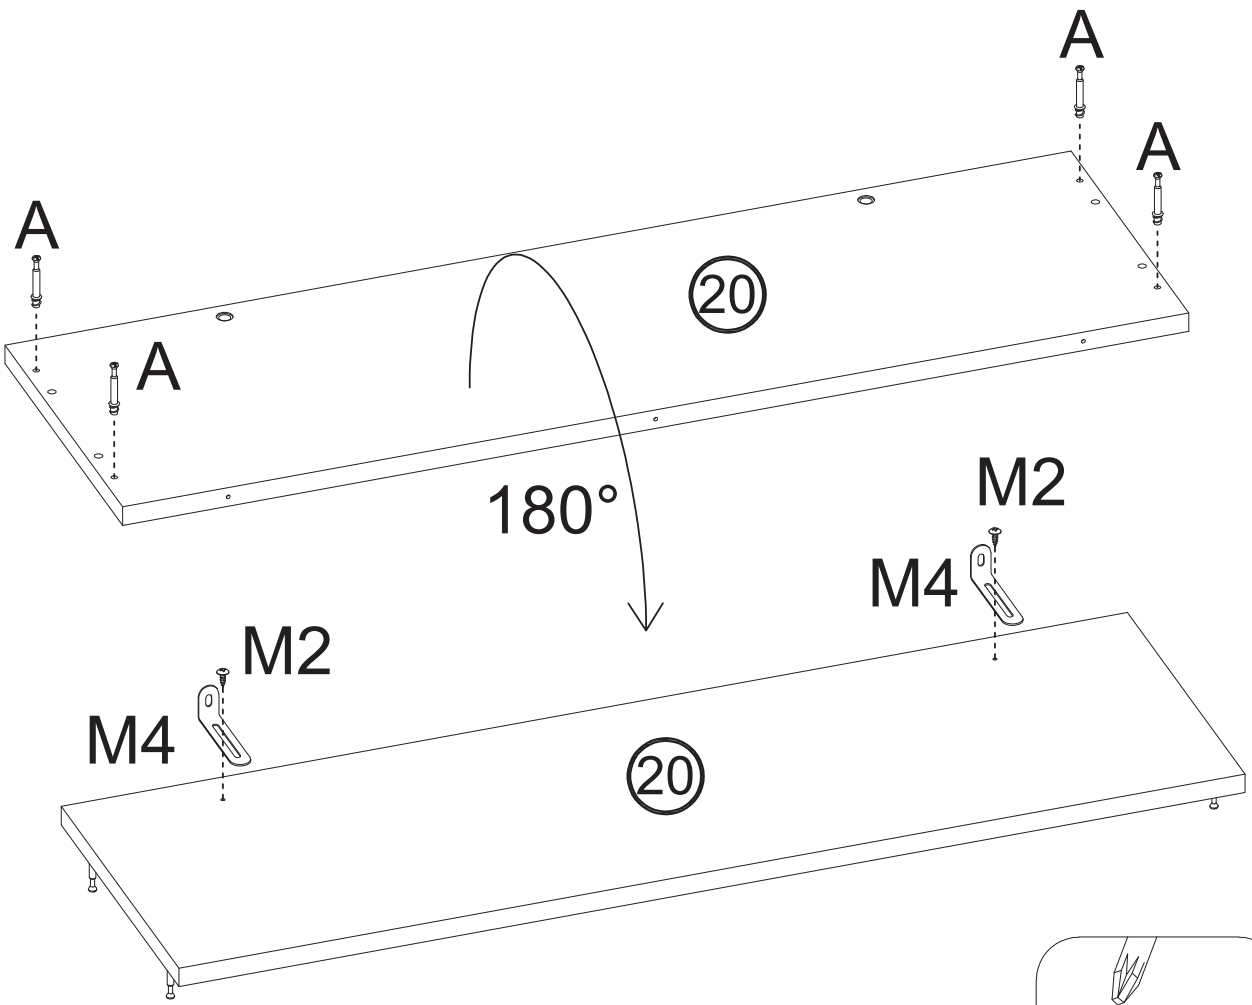

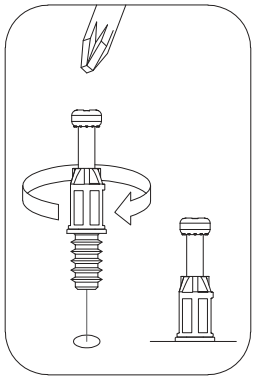

STEP 4

Ⓑ 


KD Cam
Ø15x9.5mm


[4]

Ⓒ 


Wood Dowel
6 x 30mm


[4]

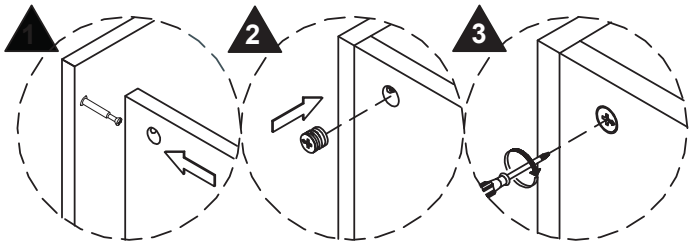


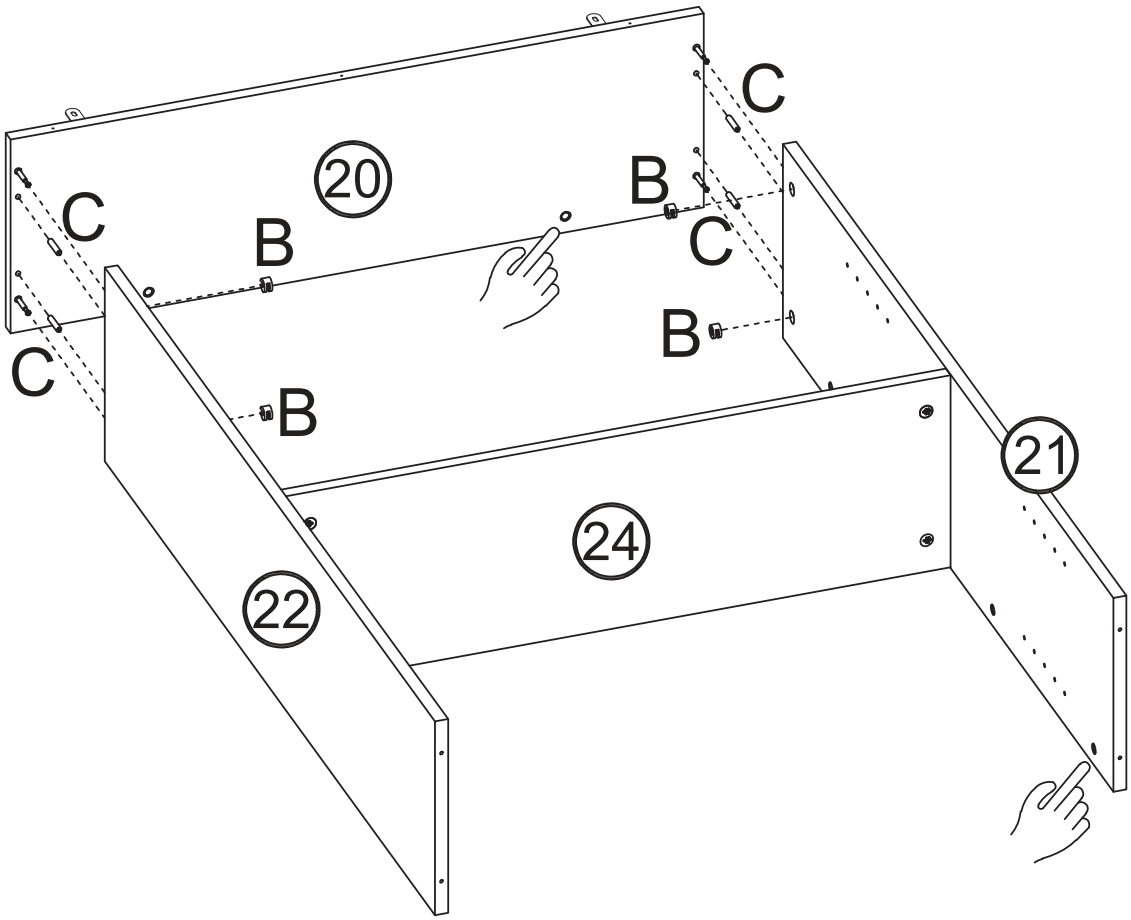

STEP 5

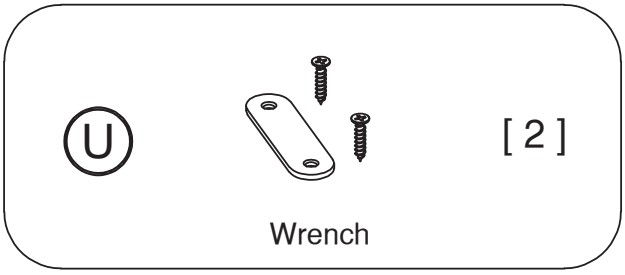


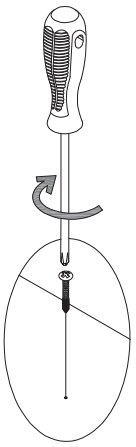

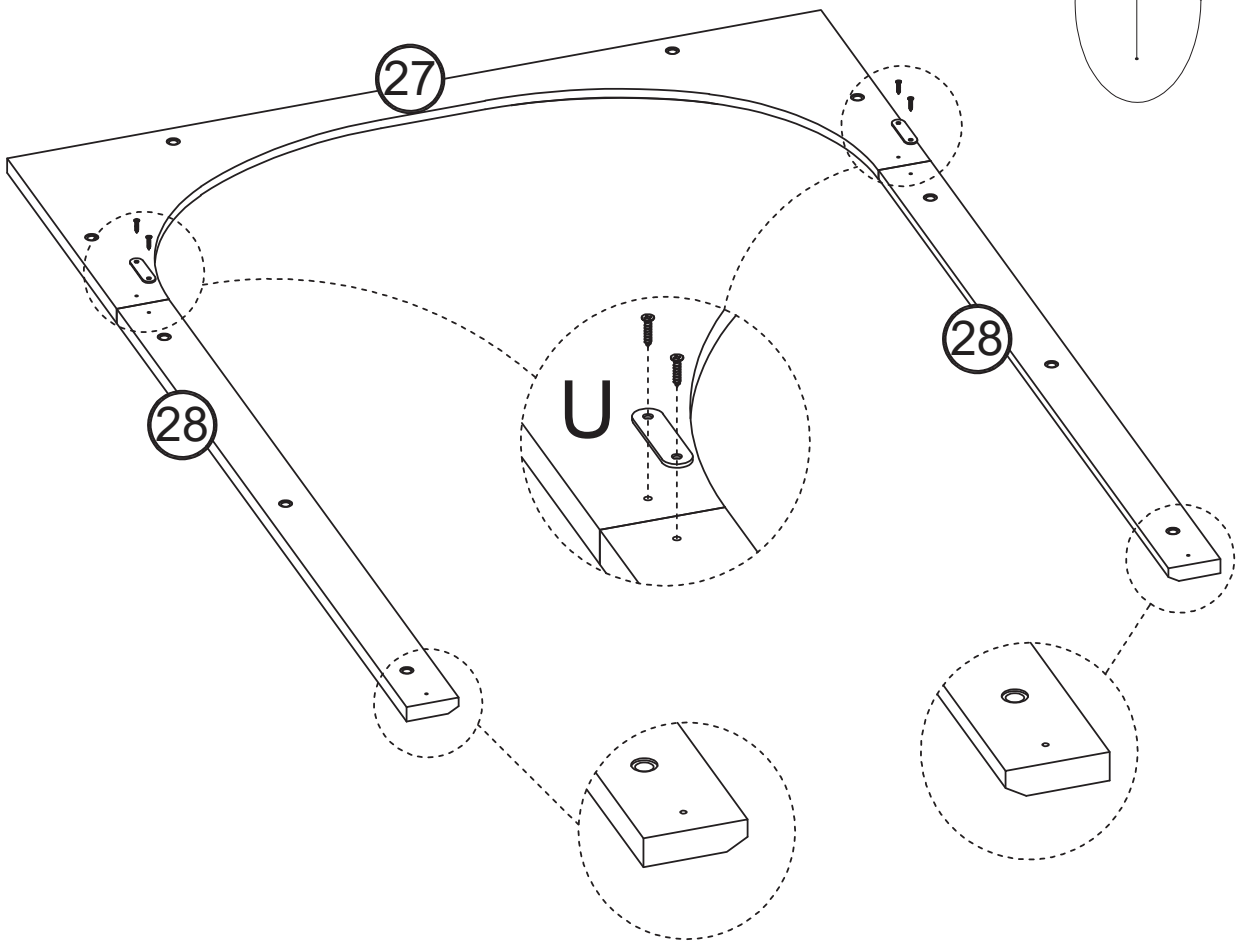


Assemble on a flat
clean and soft surface.


STEP 6


Ⓡ  [20]

M6x12mm

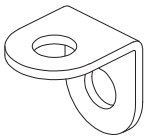Ⓢ  [10]


L Bracket

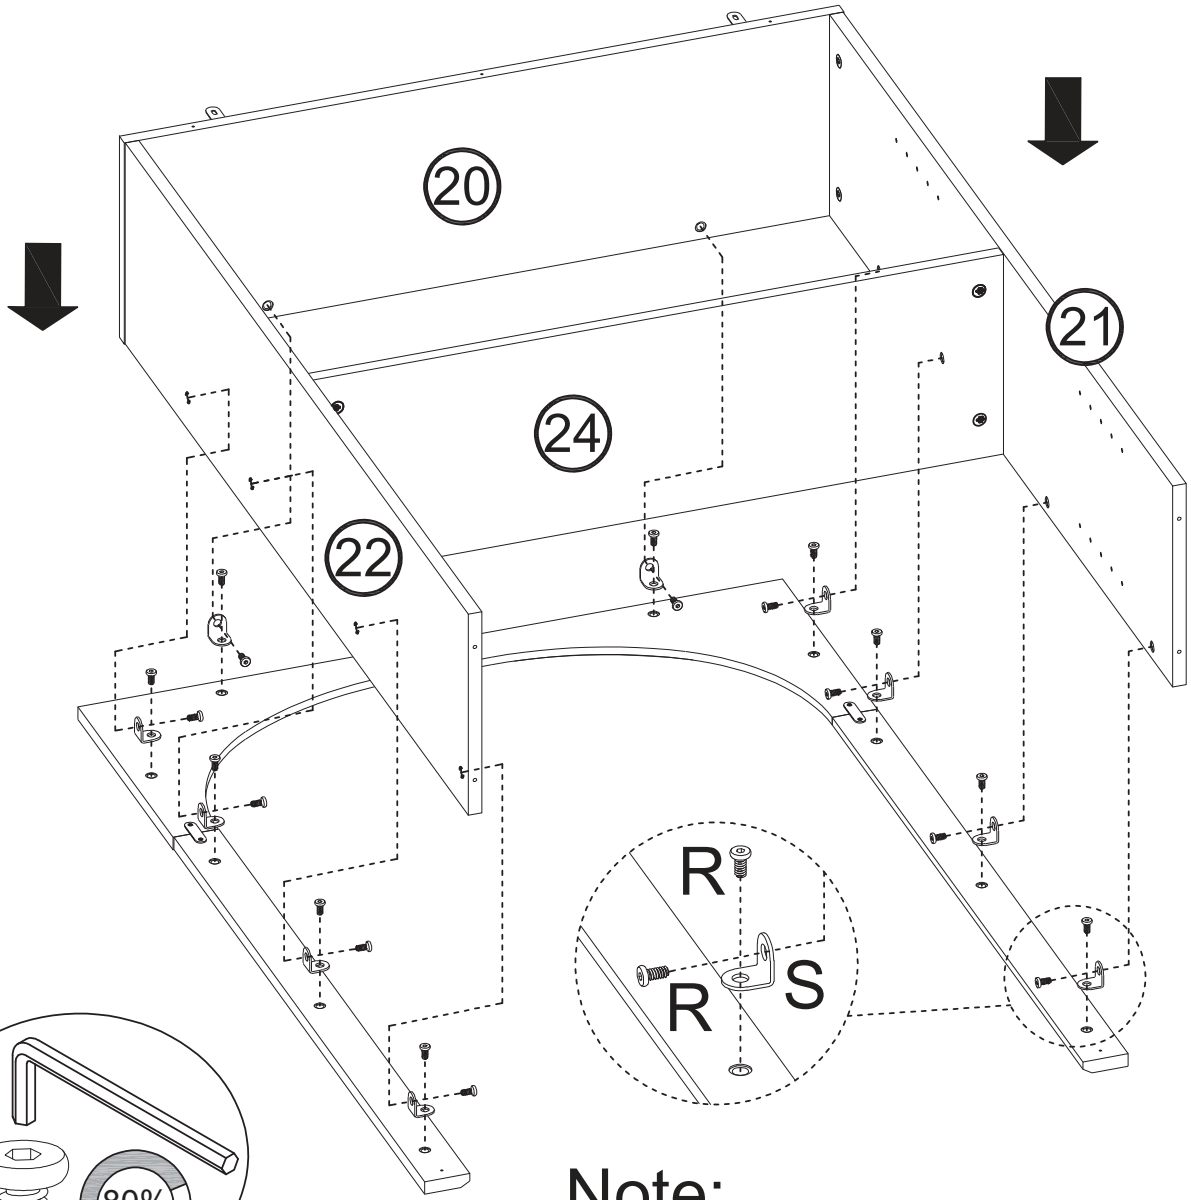


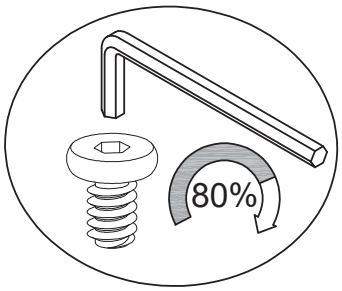


Note:
Do Not over-tighten

STEP 7

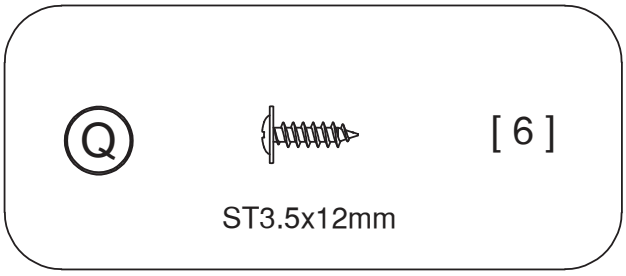


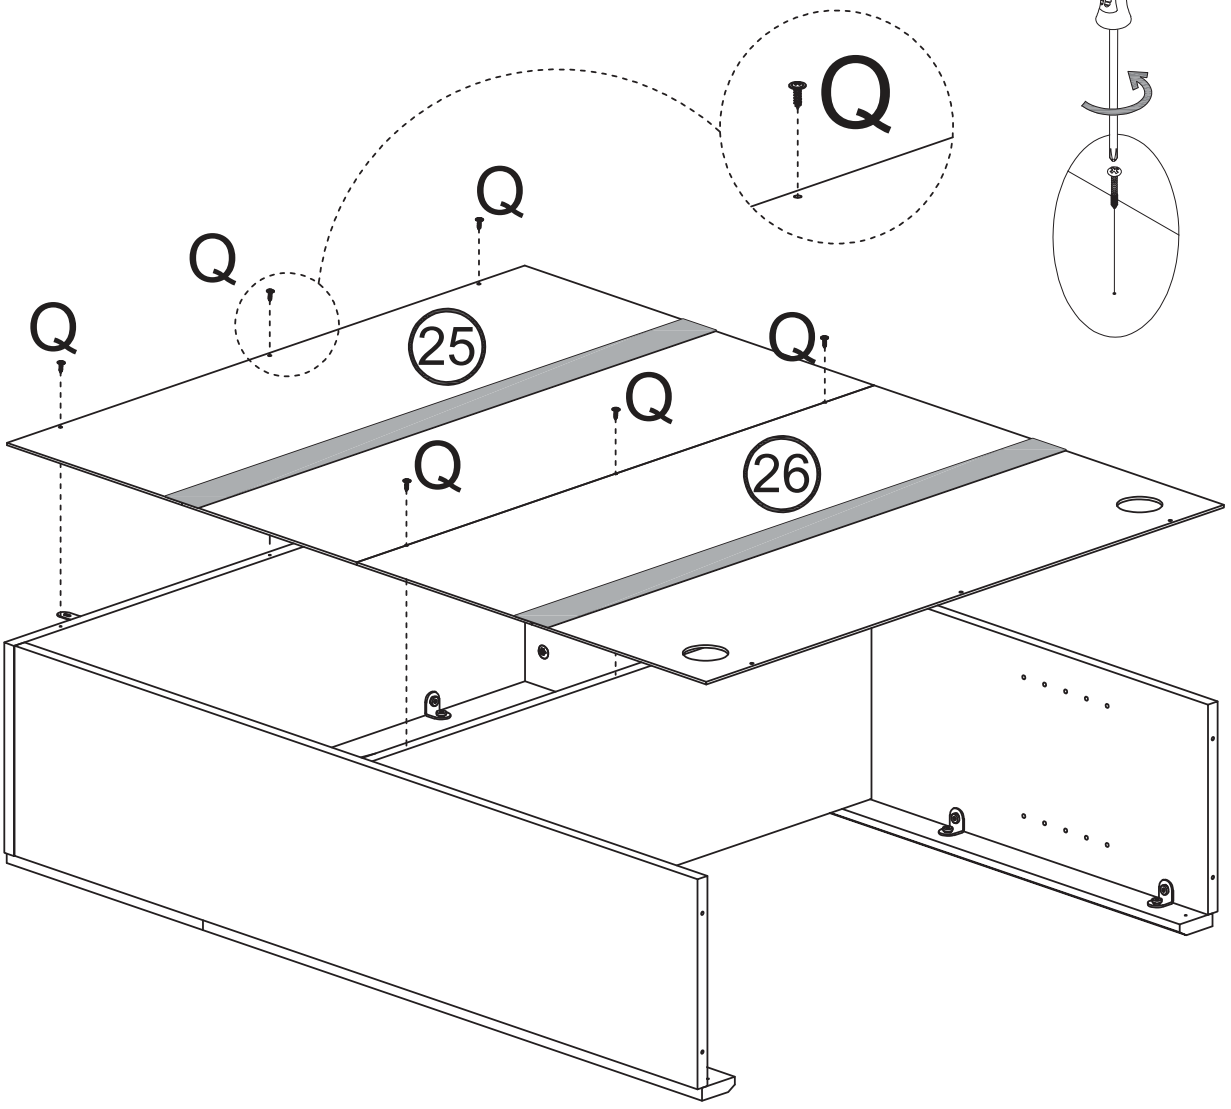

STEP 8


Ⓣ  [16]

Nail

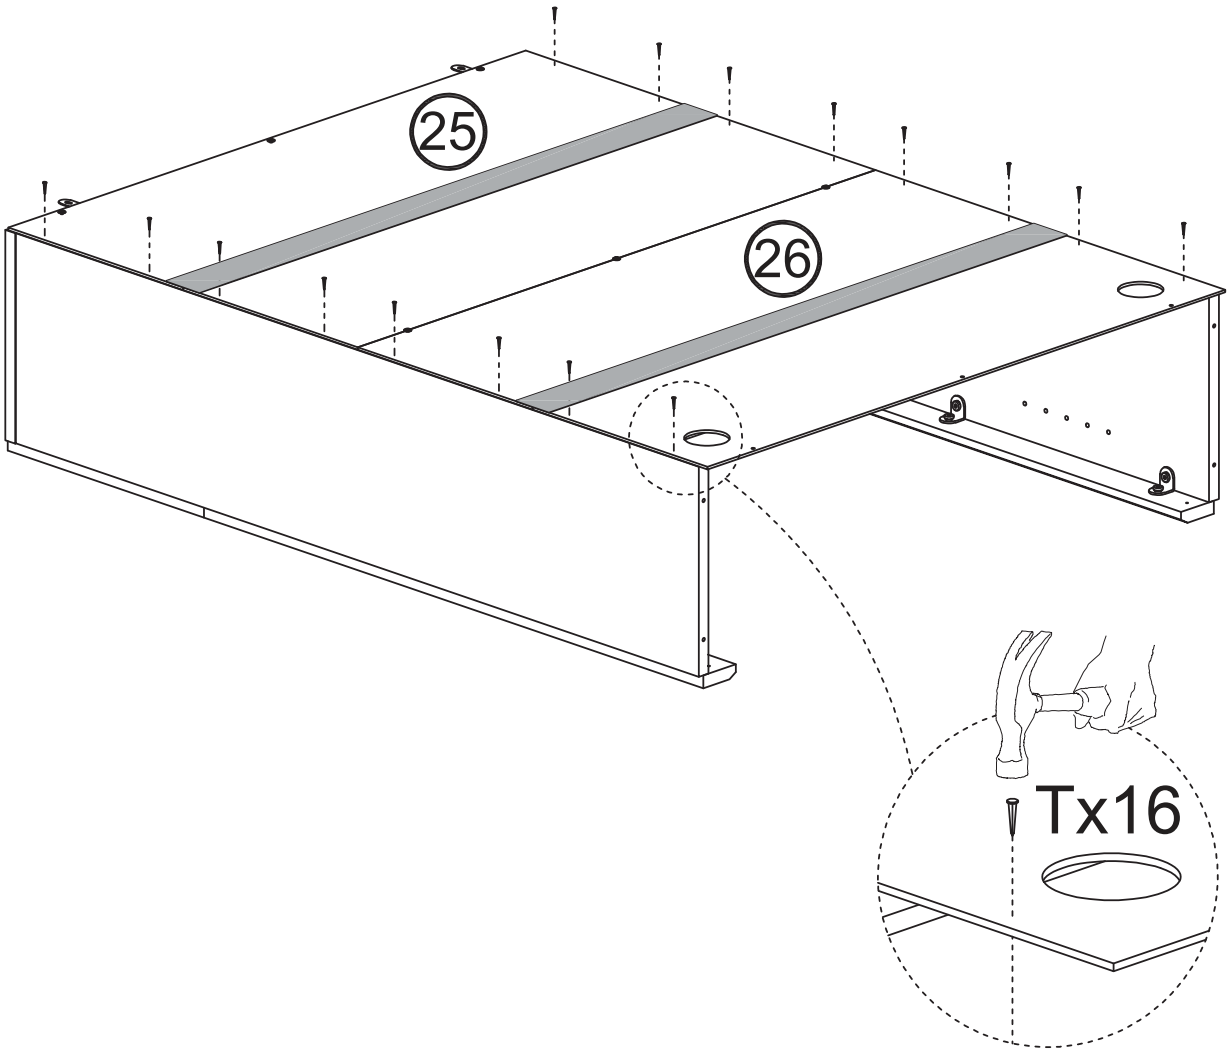


Effects demonstration


Note: If you purchased the lower cabinets (A004~A15) first and have already assembled them, the following steps guide you on how to remove the top panel of the lower cabinets and install them.

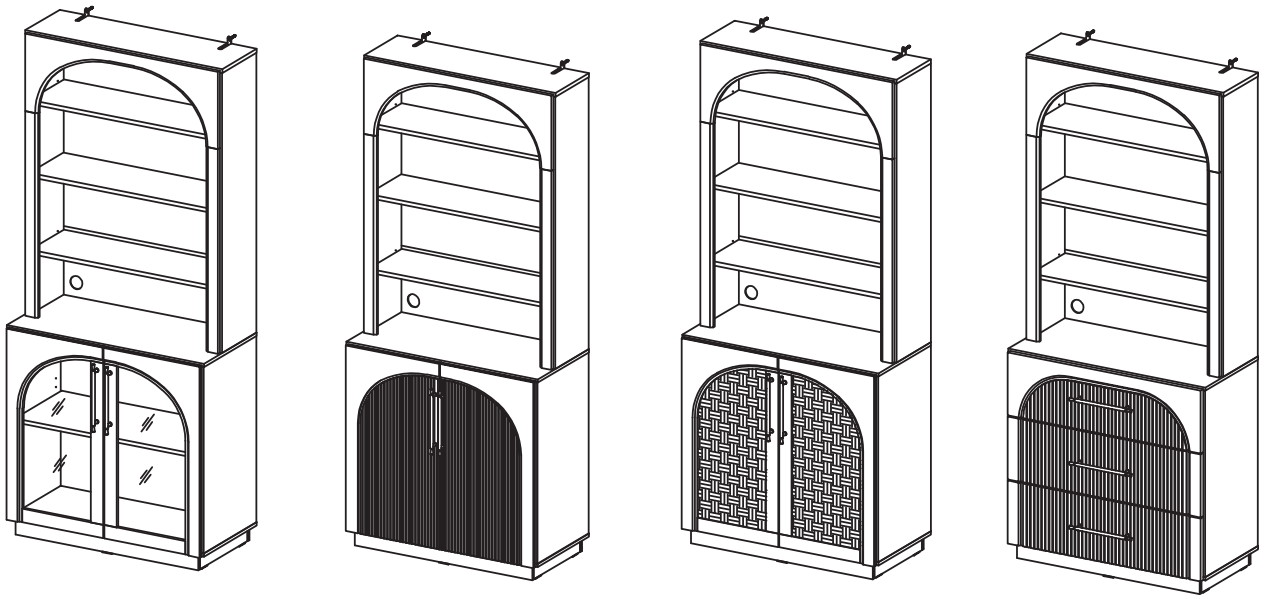


STEP 9

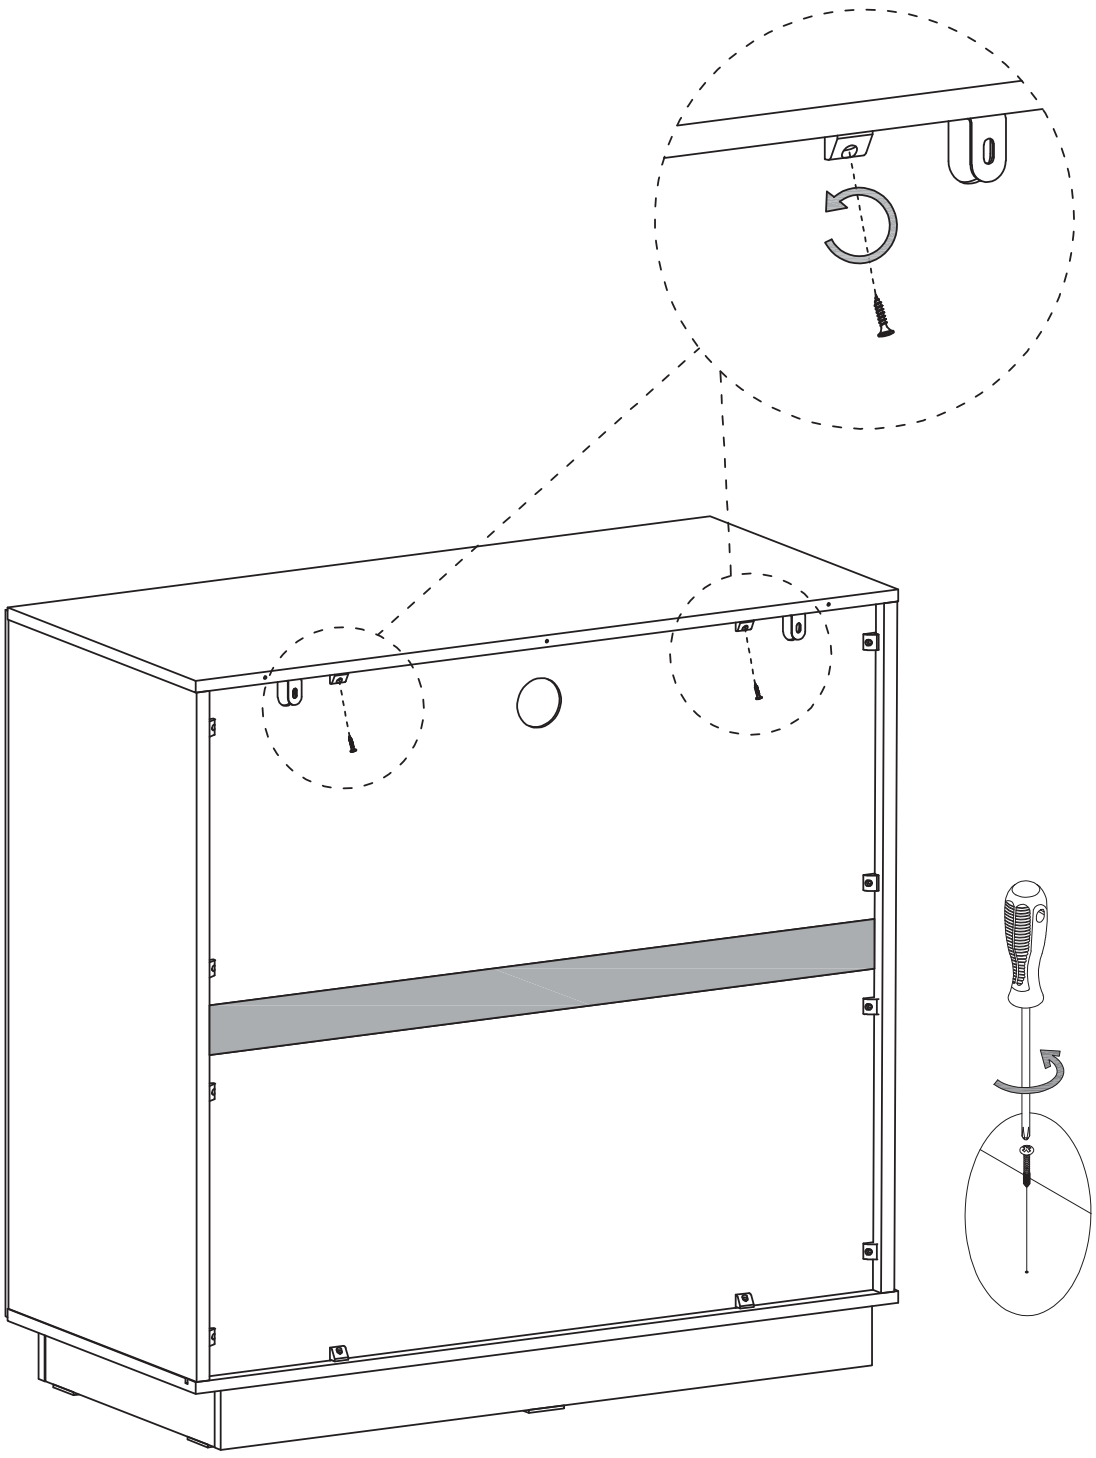


STEP 10

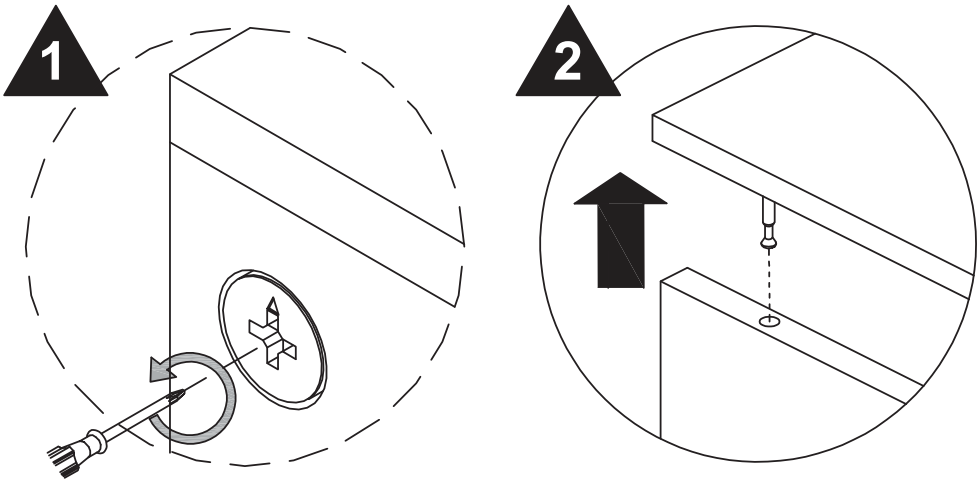

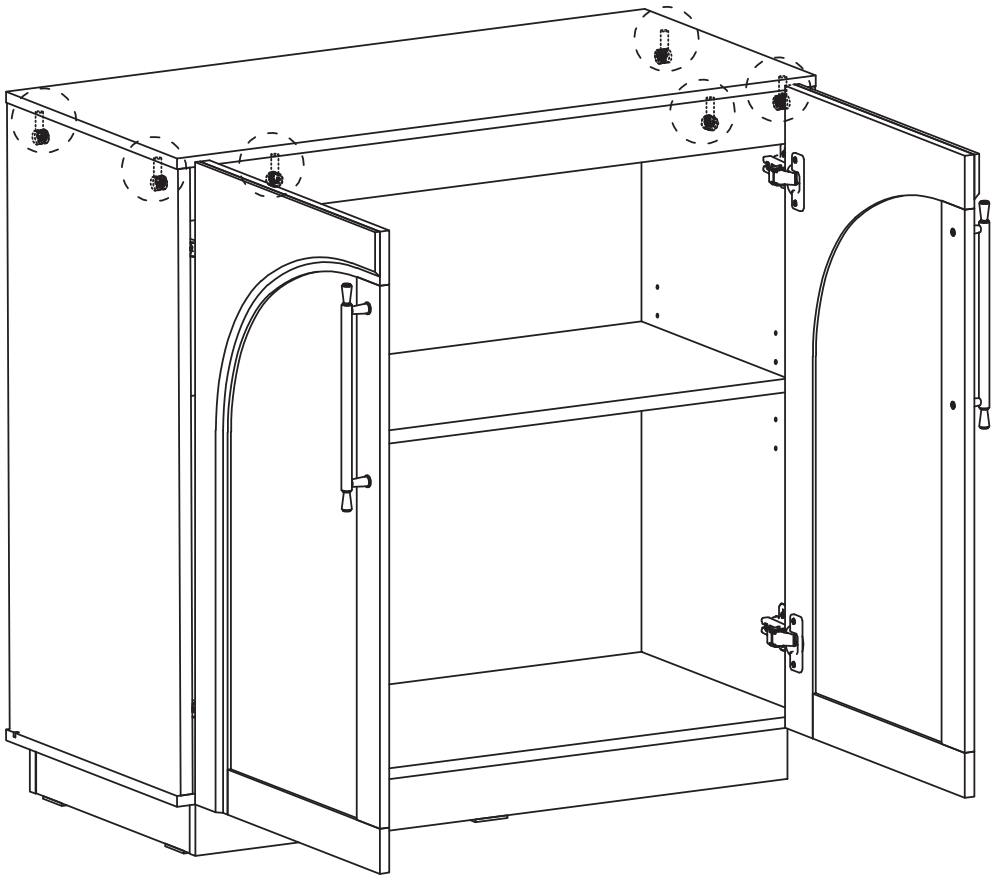



STEP 11

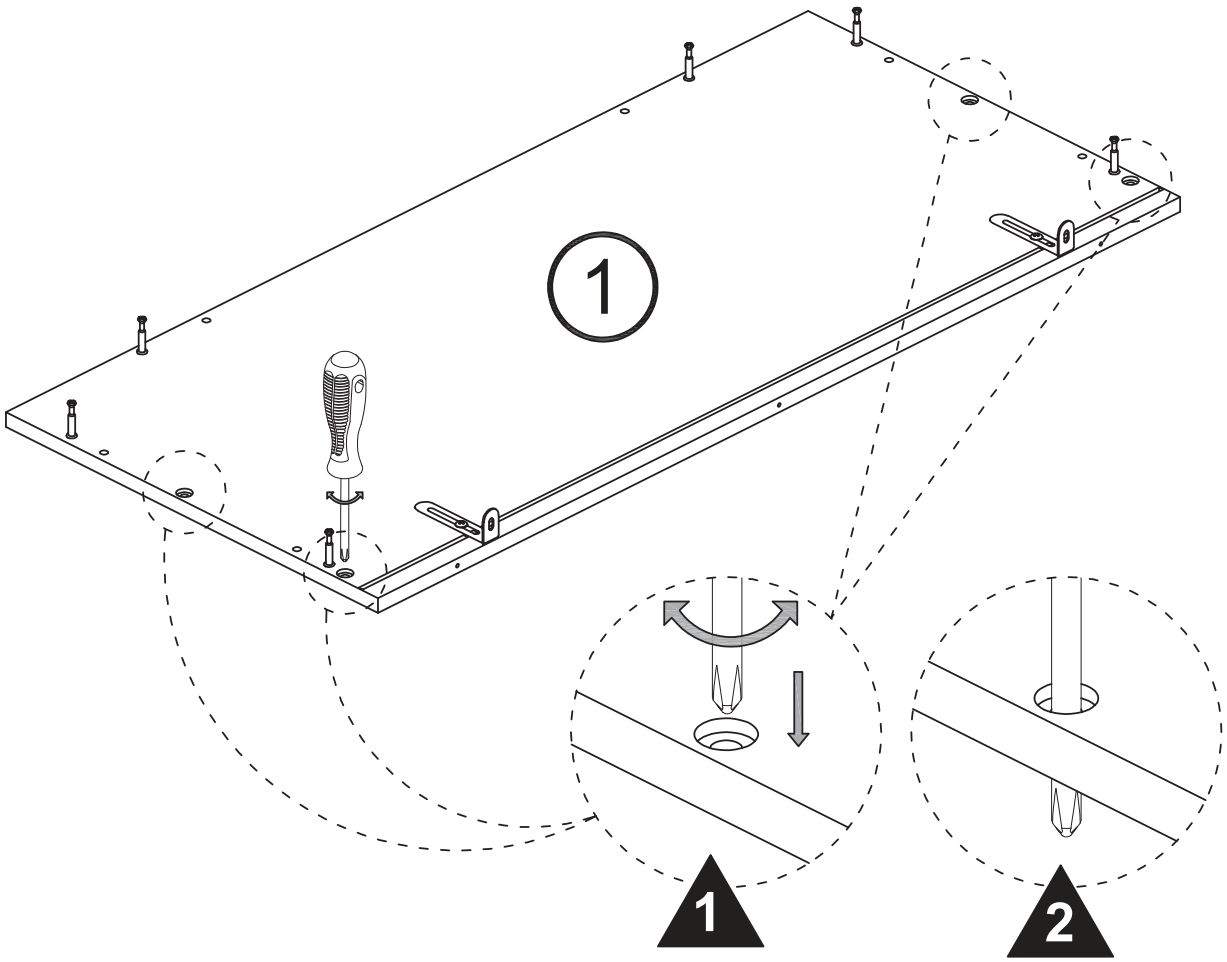

Nota: Work on waste cardboard boxes for panel processing.

STEP 12

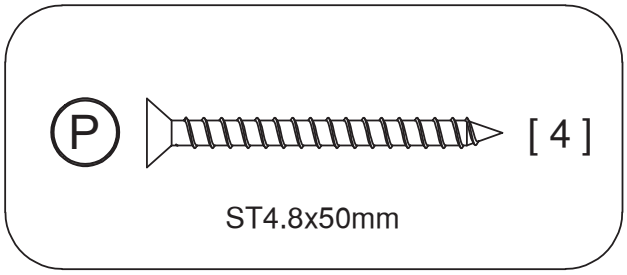


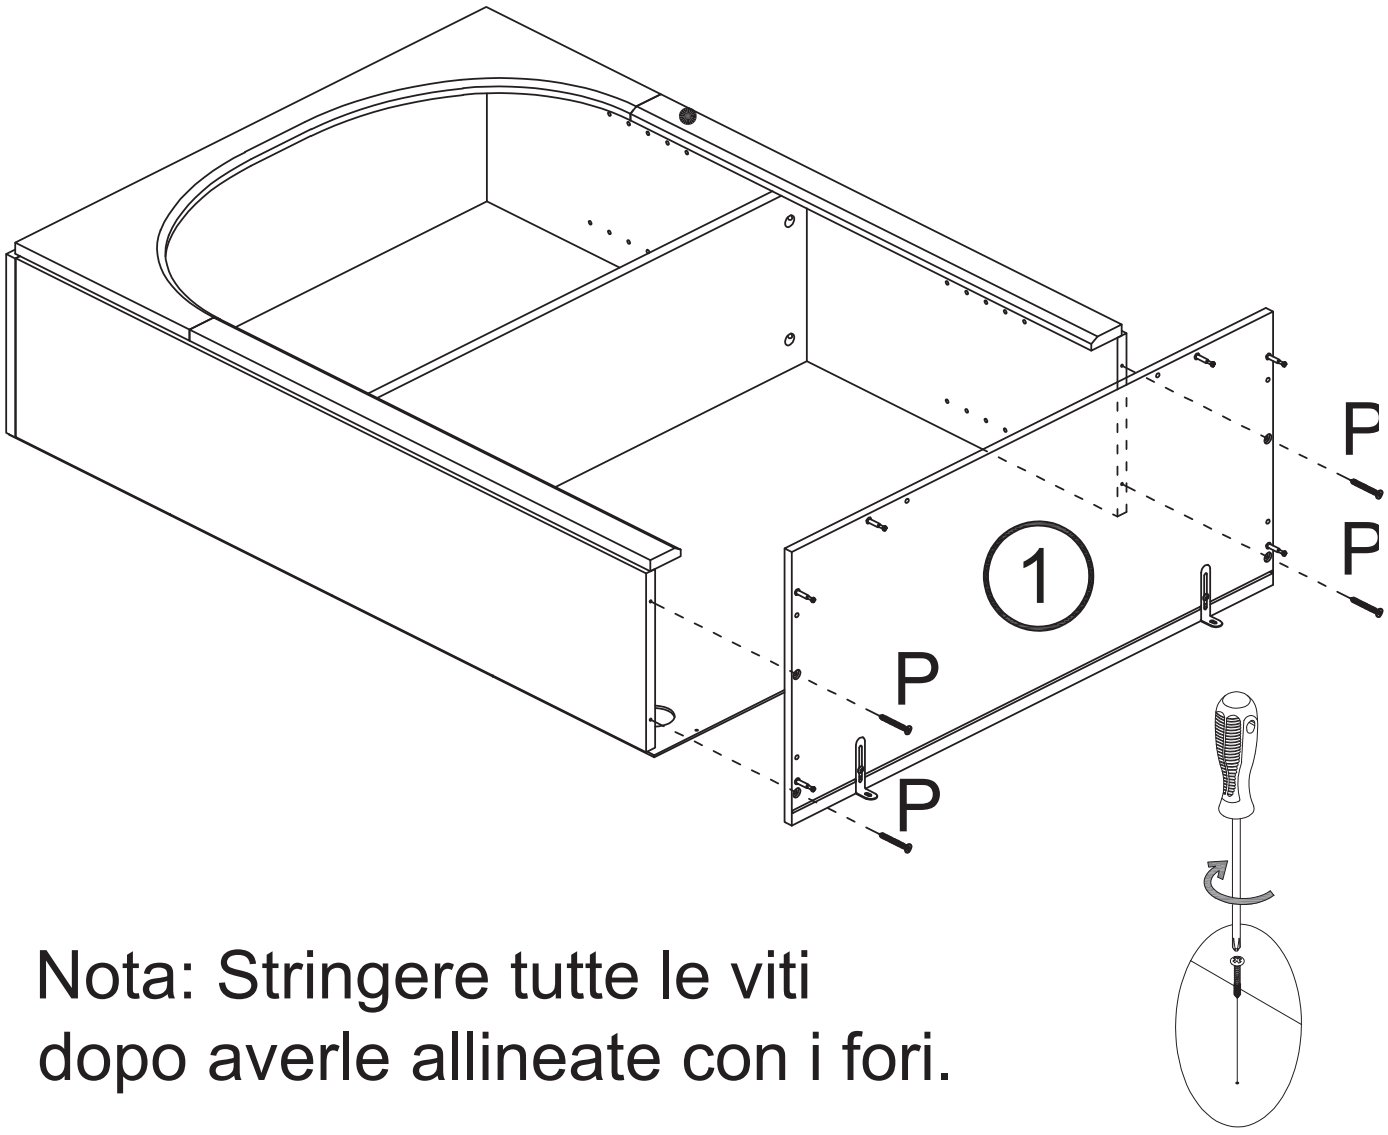

Nota: Stringere tutte le viti
dopo averle allineate con i fori.


STEP 13


Ⓑ




KD Cam
Ø15x9.5mm

[6]

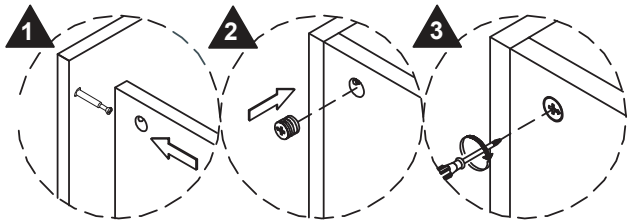


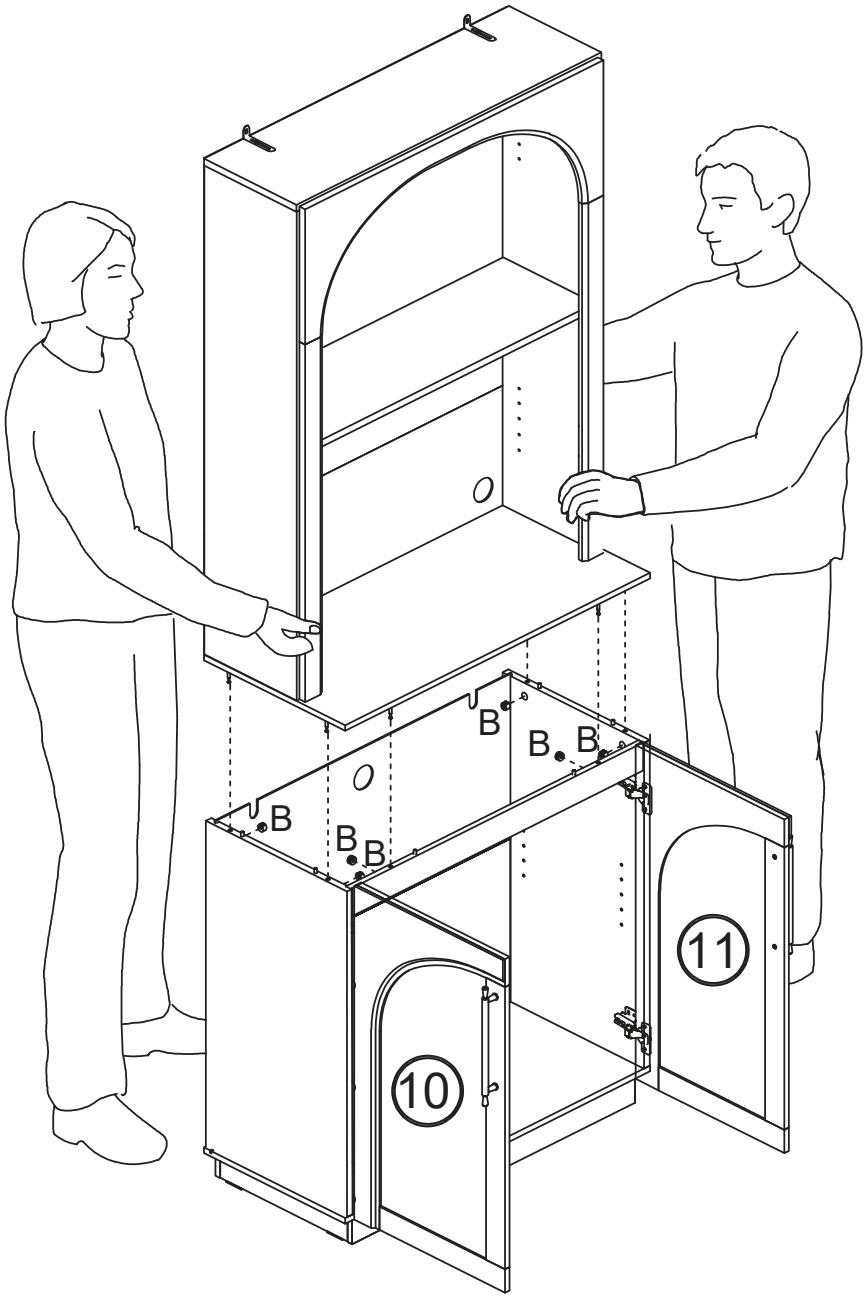


STEP 14

Ⓕ  [2]


ST3.0x16mm

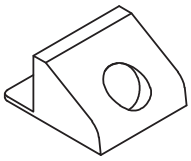
Ⓘ  [2]


Back Clip


Ⓠ  [3]

ST3.5x12mm

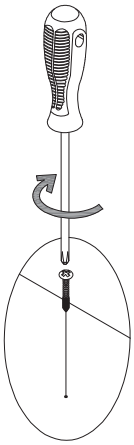


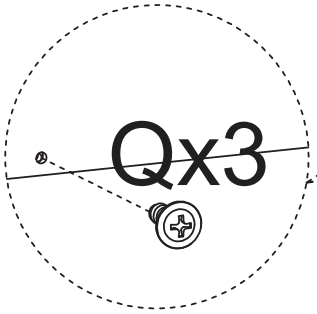


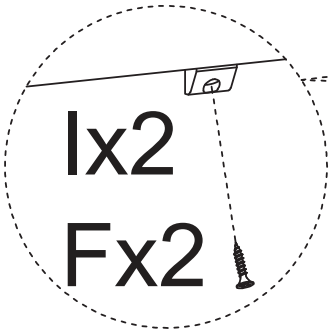


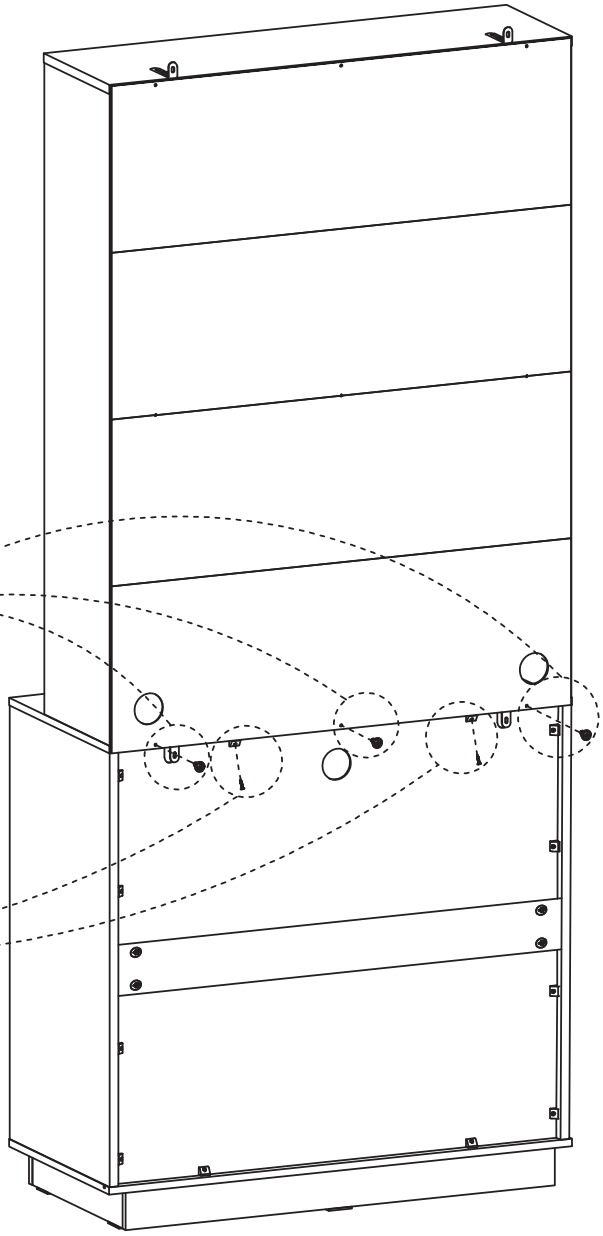


STEP 15

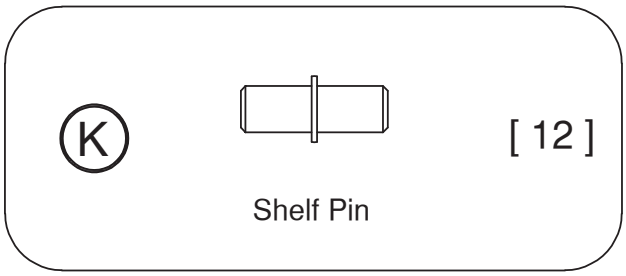

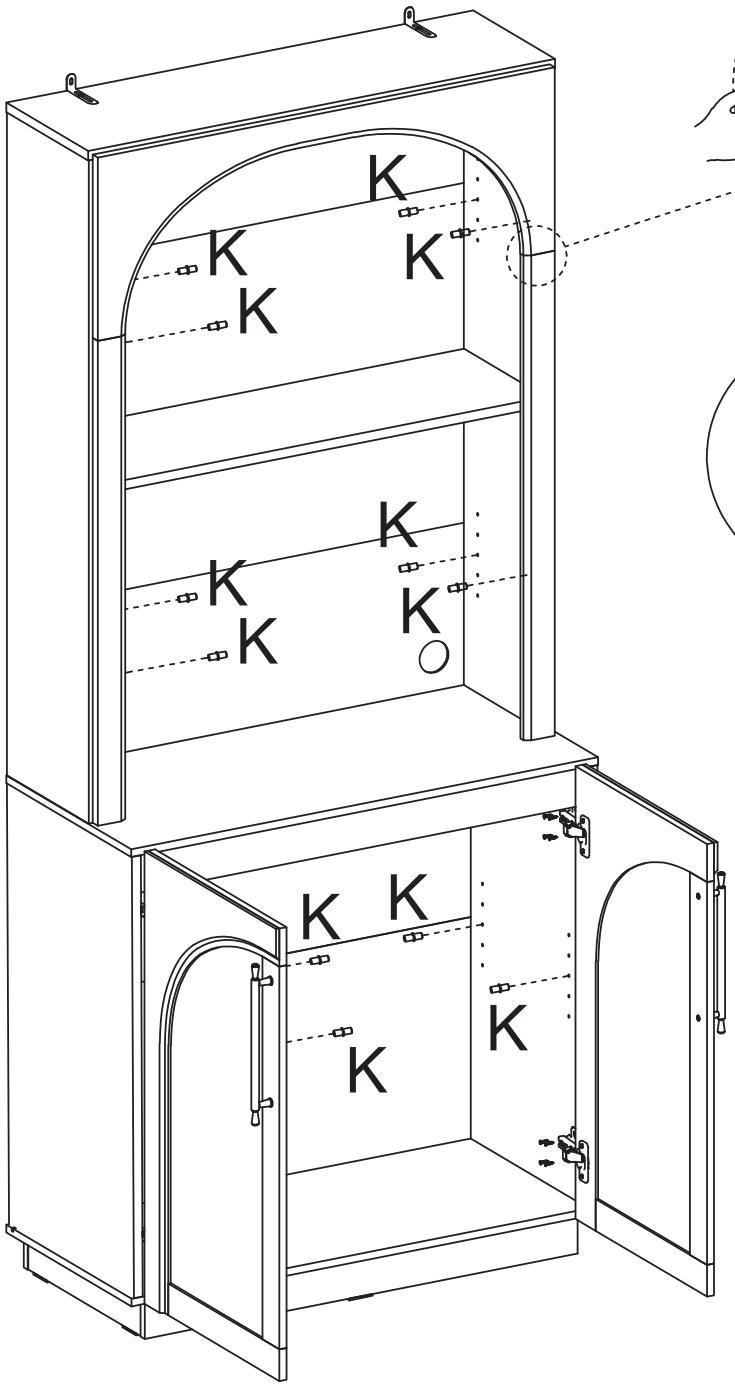


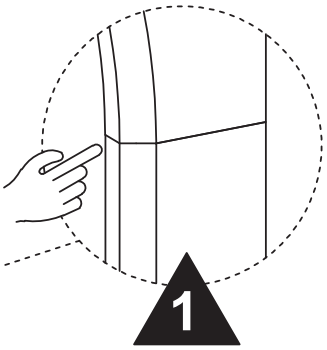

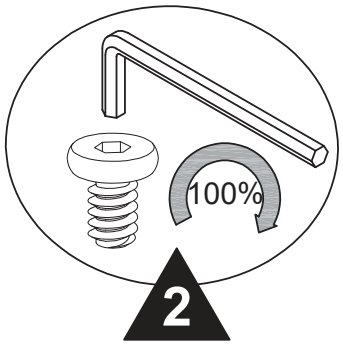

Nota: Align first, then tighten the screws.


STEP 16

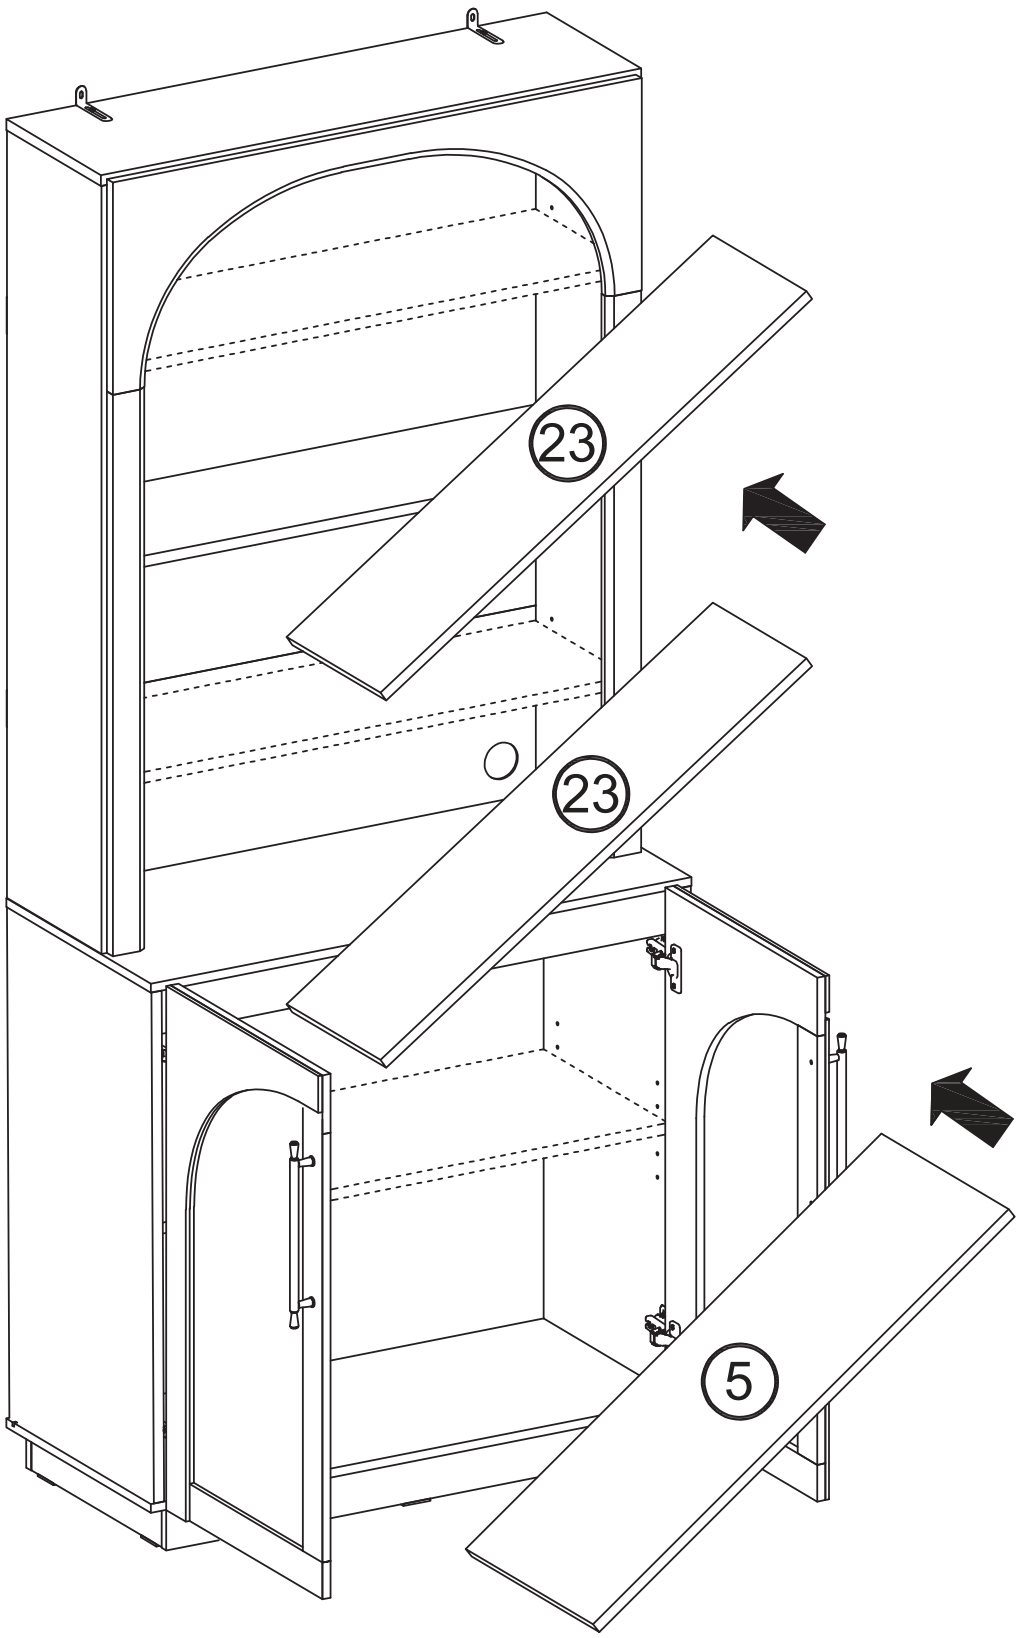

STEP 17


Method 1：For solid or concrete wall.

1.Choose your desired location on the wall. Have your friend hold the product in place and use a pencil to mark where the anchor will go.

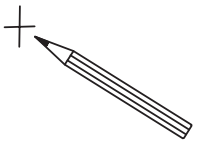





2.Pre-drill holes on the wall with a drill bit that is larger than the diameter of the wall anchors.

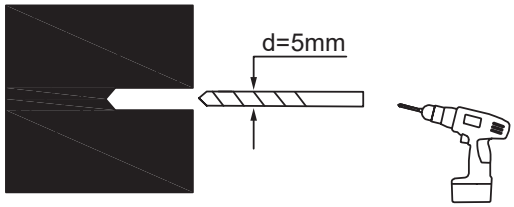


3.Gently insert the wall anchor into the pre-drilled hole.

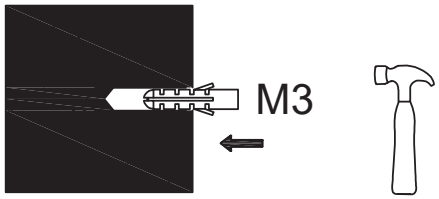


4.Insert the screws into the wall anchor with a screwdriver to complete the installation.

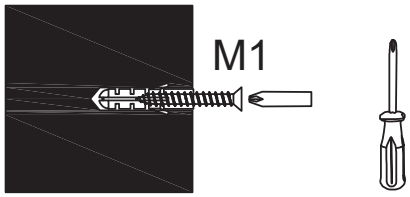


Ⓜ M3 M1 [4]

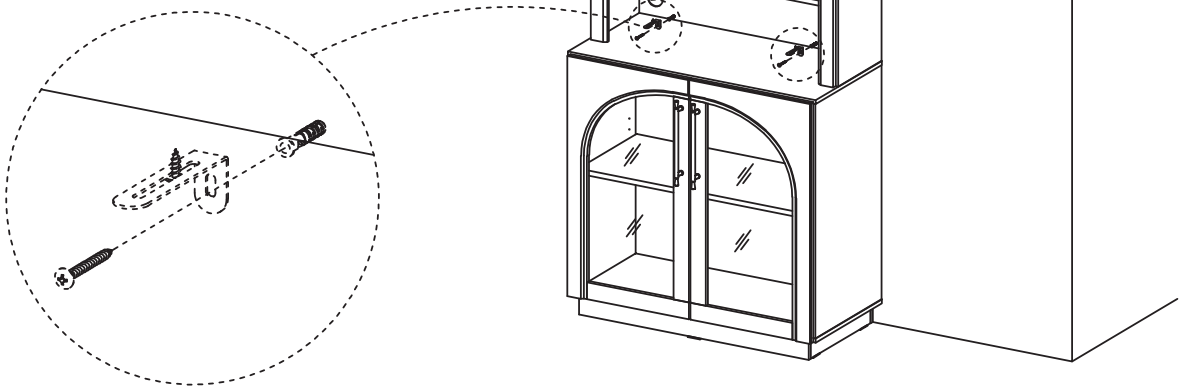


STEP 18

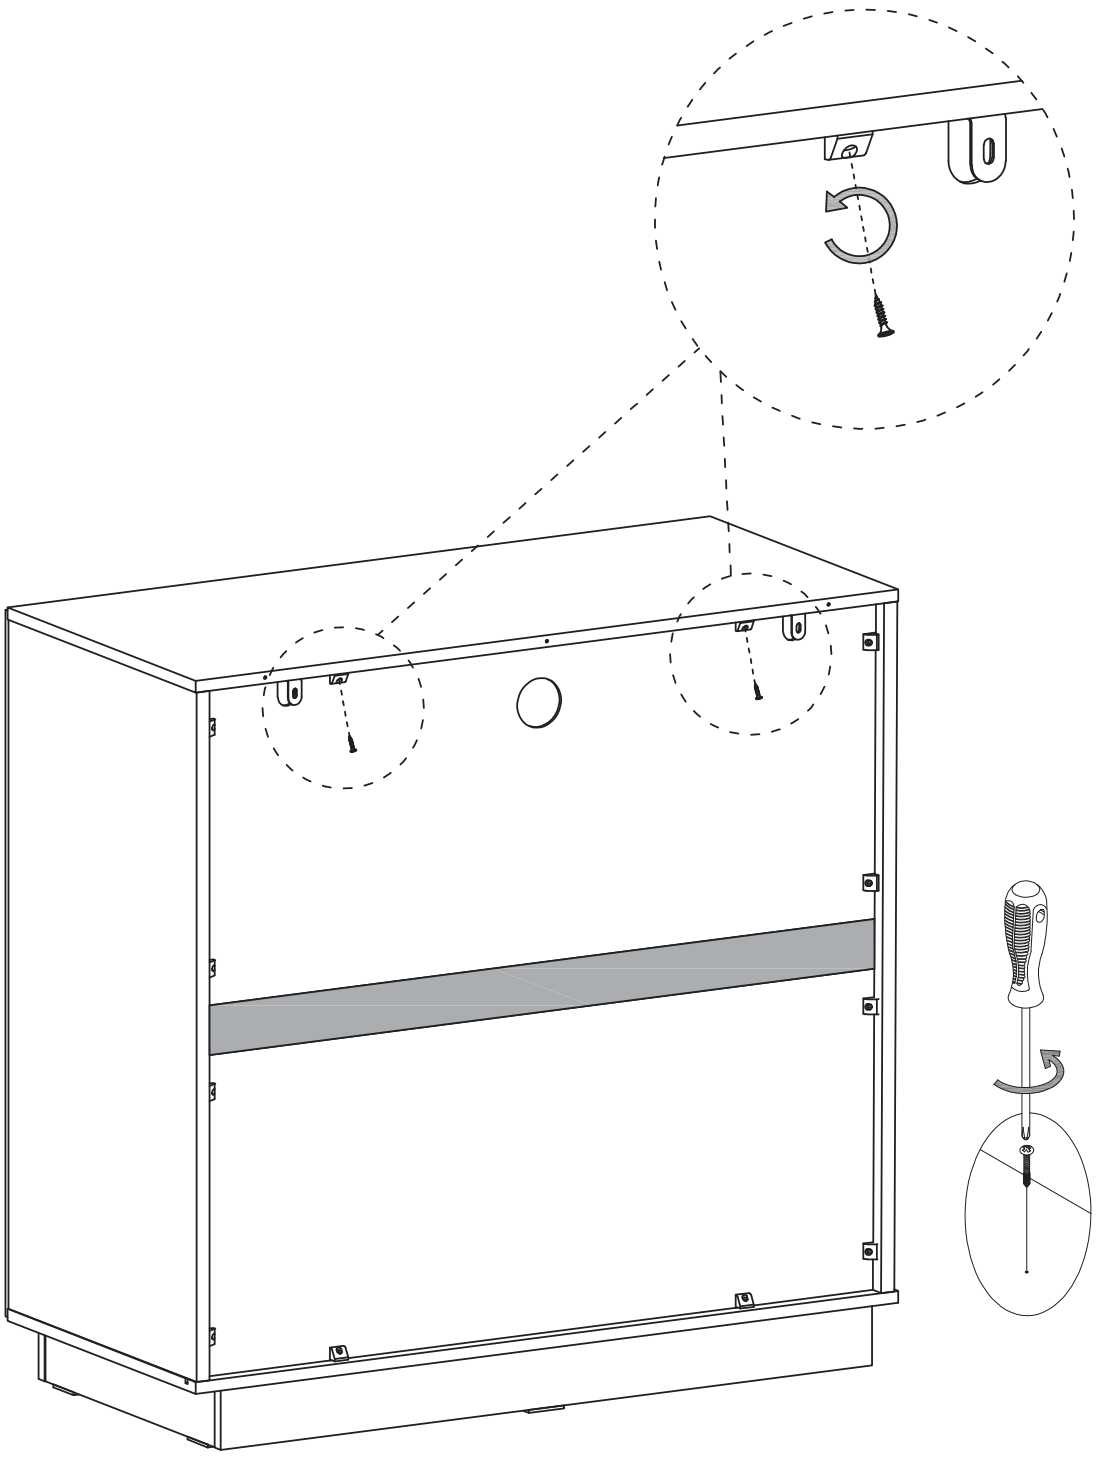


STEP 19

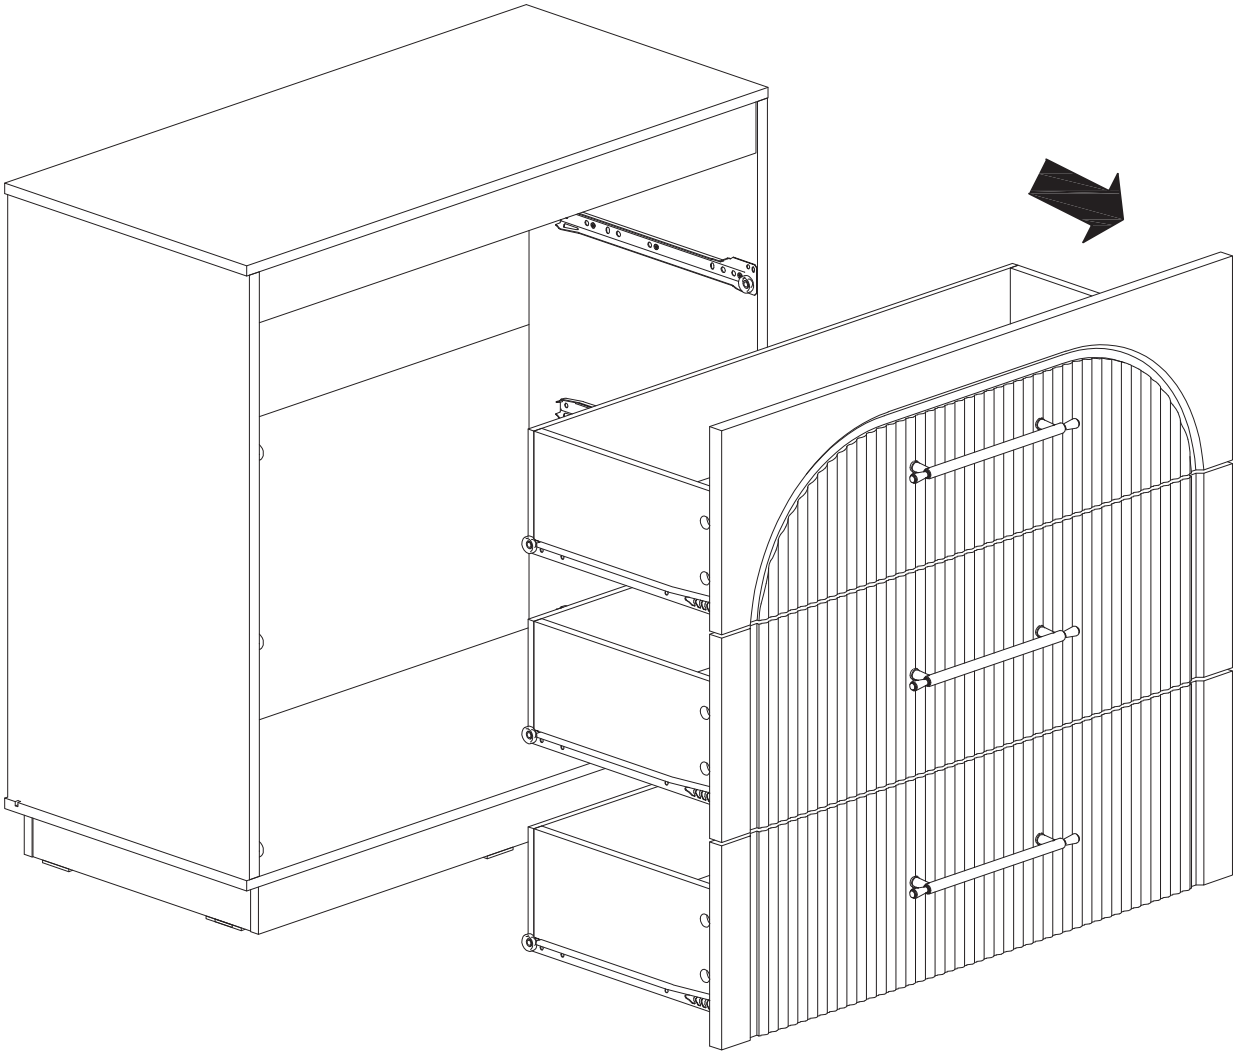


Please note that the drawers should be removed in the direction of the arrow.

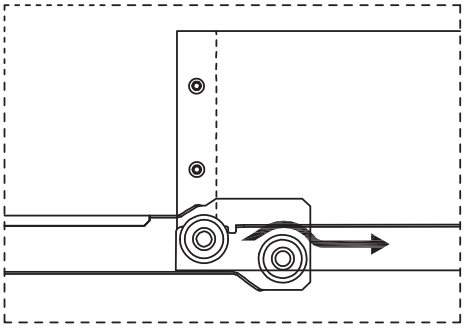


STEP 20

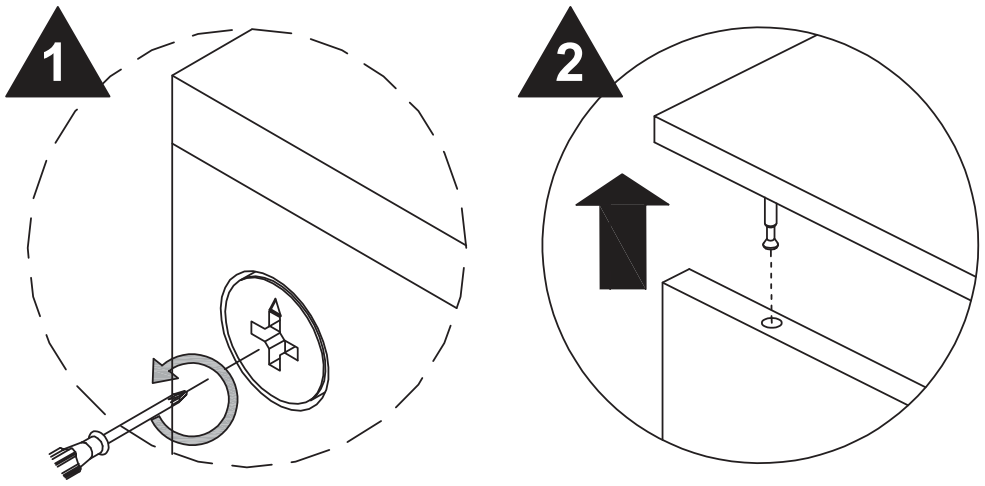

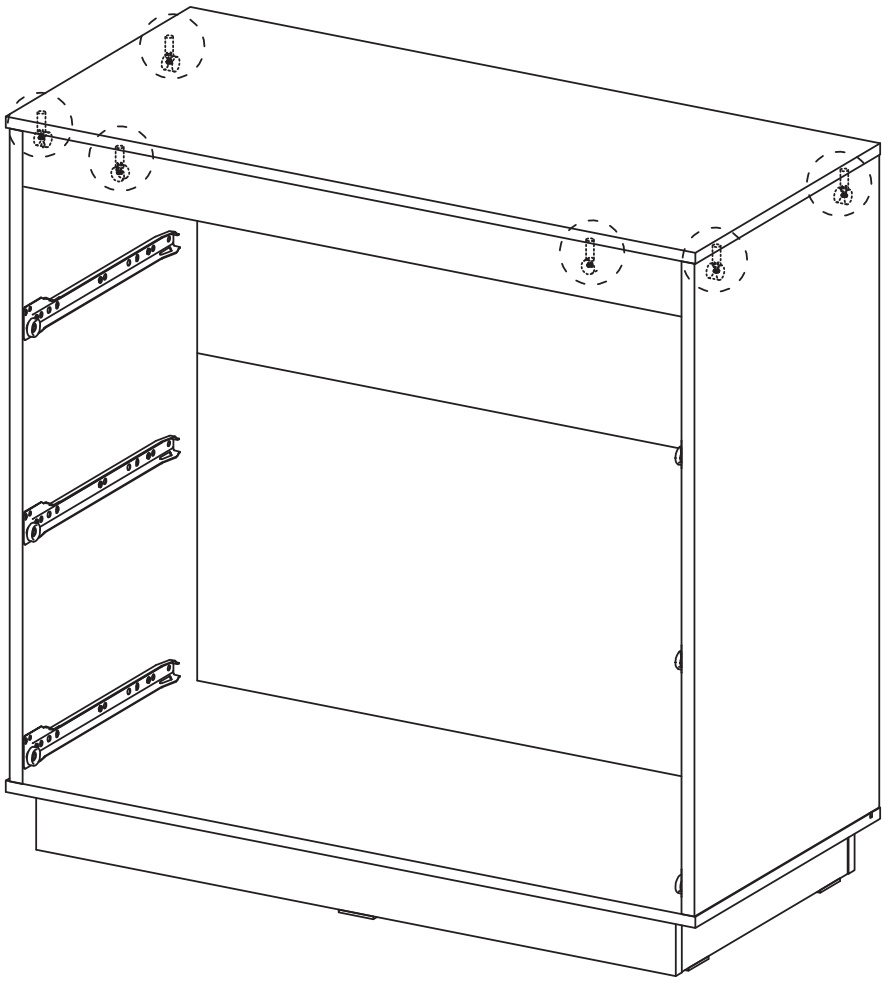



STEP 21

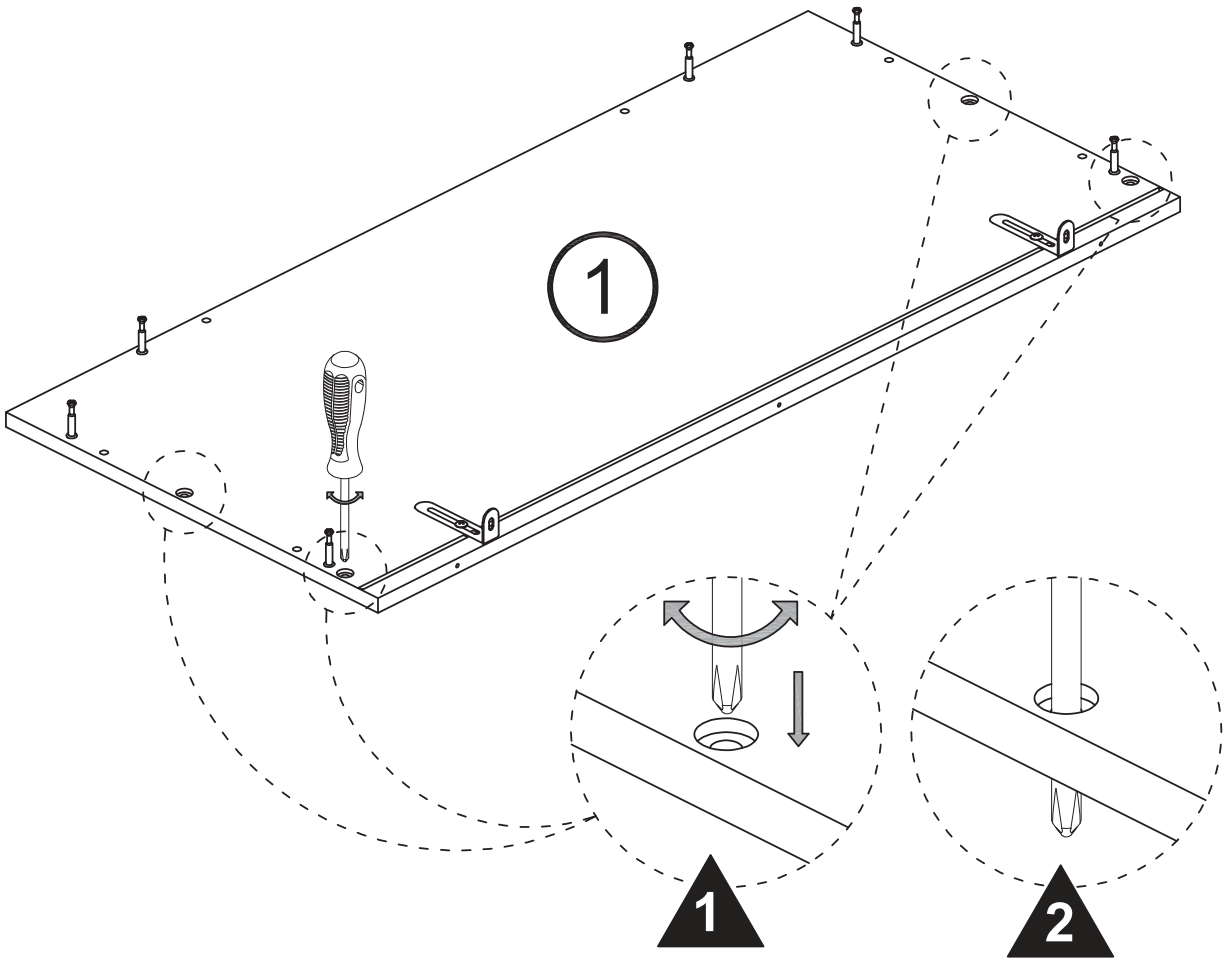

Nota: Work on waste cardboard boxes for panel processing.

STEP 22

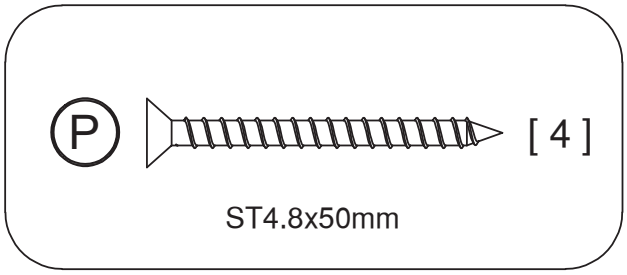


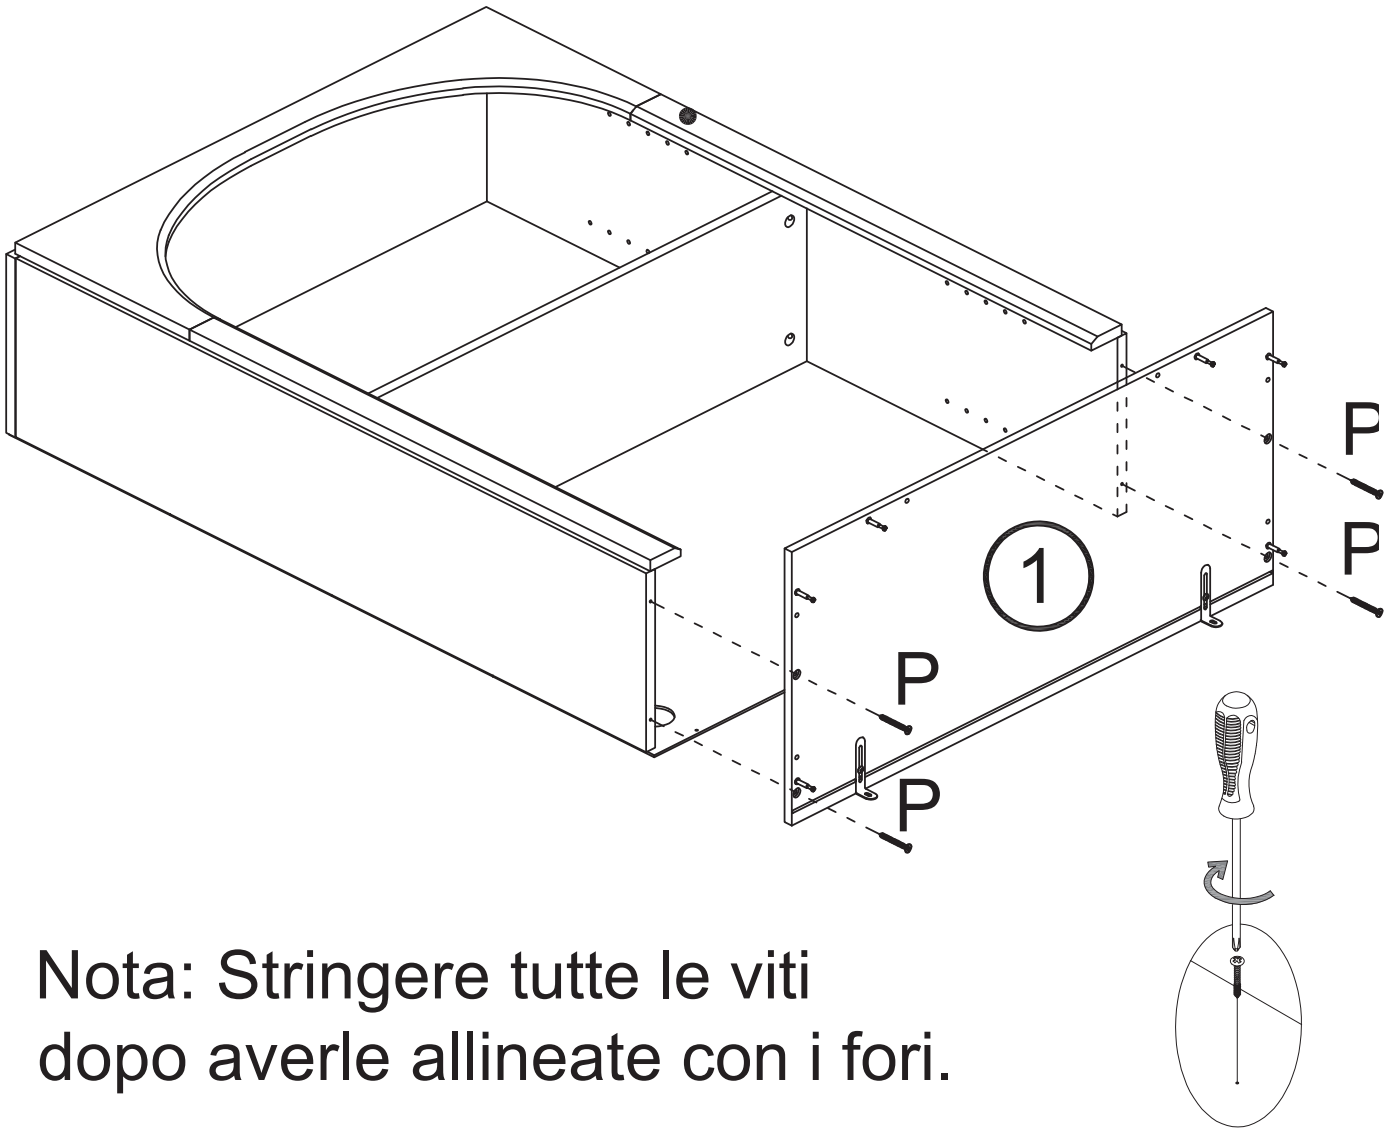

Nota: Stringere tutte le viti
dopo averle allineate con i fori.


STEP 23


Ⓑ




[6]

KD Cam
Ø15x9.5mm

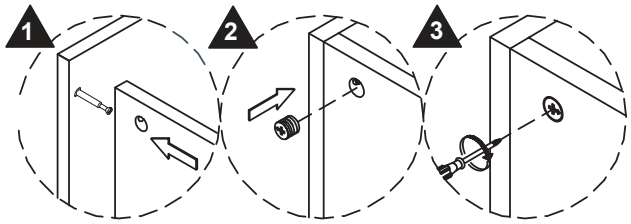


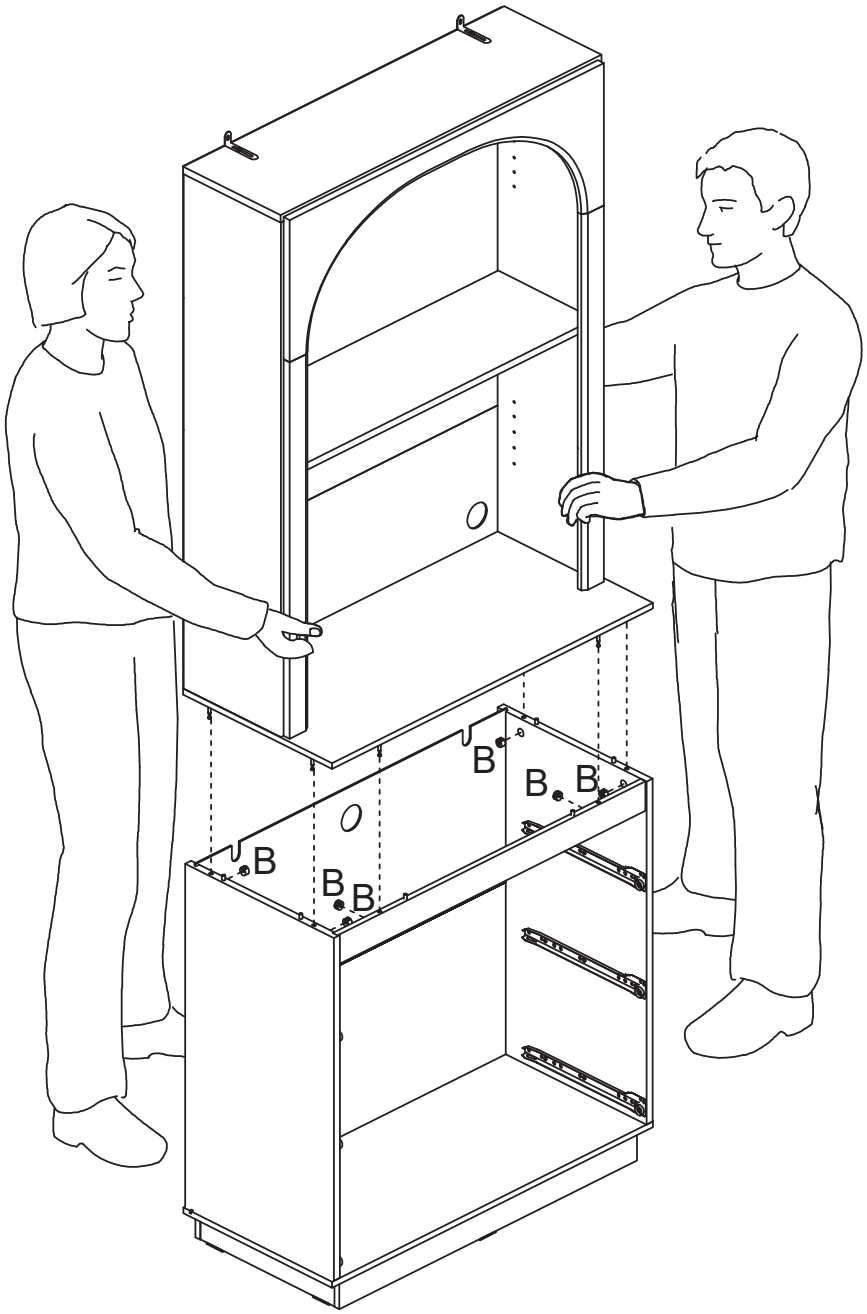


STEP 24

Ⓕ  [2]


ST3.0x16mm

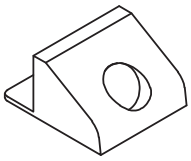
Ⓘ  [2]


Back Clip


Ⓠ  [3]

ST3.5x12mm

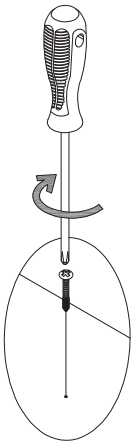

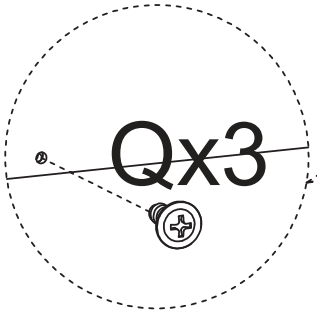

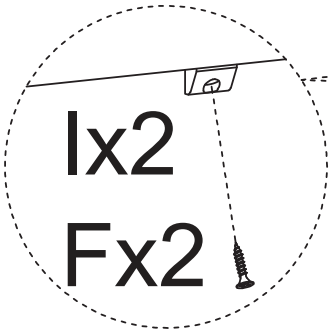


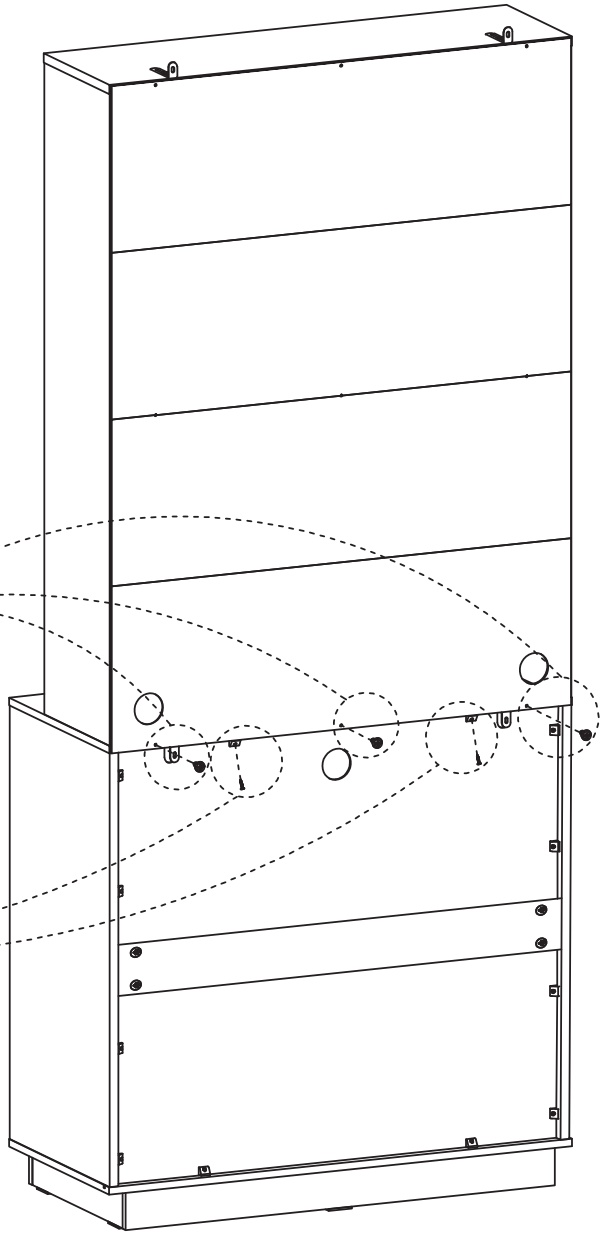

STEP 25


Method 1：For solid or concrete wall.

1.Choose your desired location on the wall. Have your friend hold the product in place and use a pencil to mark where the anchor will go.

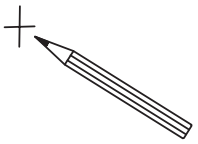





2.Pre-drill holes on the wall with a drill bit that is larger than the diameter of the wall anchors.

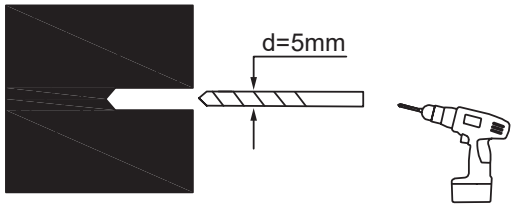


3.Gently insert the wall anchor into the pre-drilled hole.

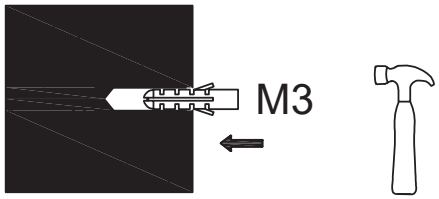


4.Insert the screws into the wall anchor with a screwdriver to complete the installation.

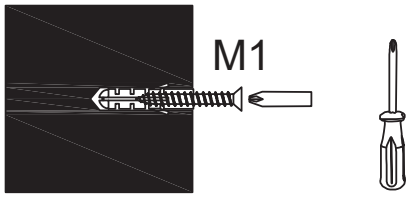


Ⓜ

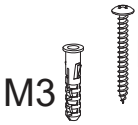



[4]

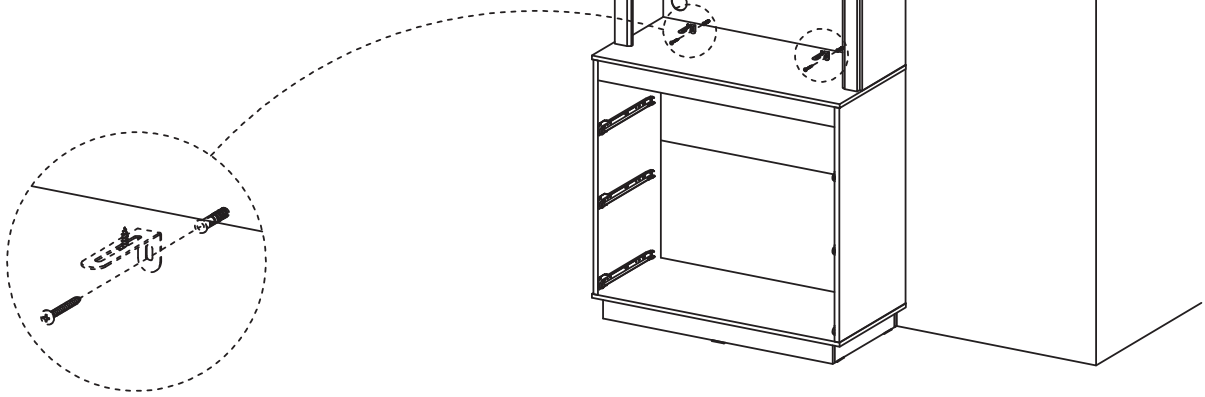


STEP 26

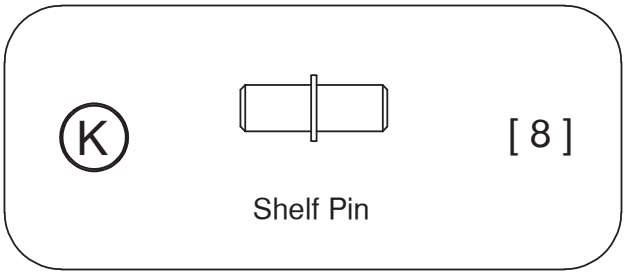

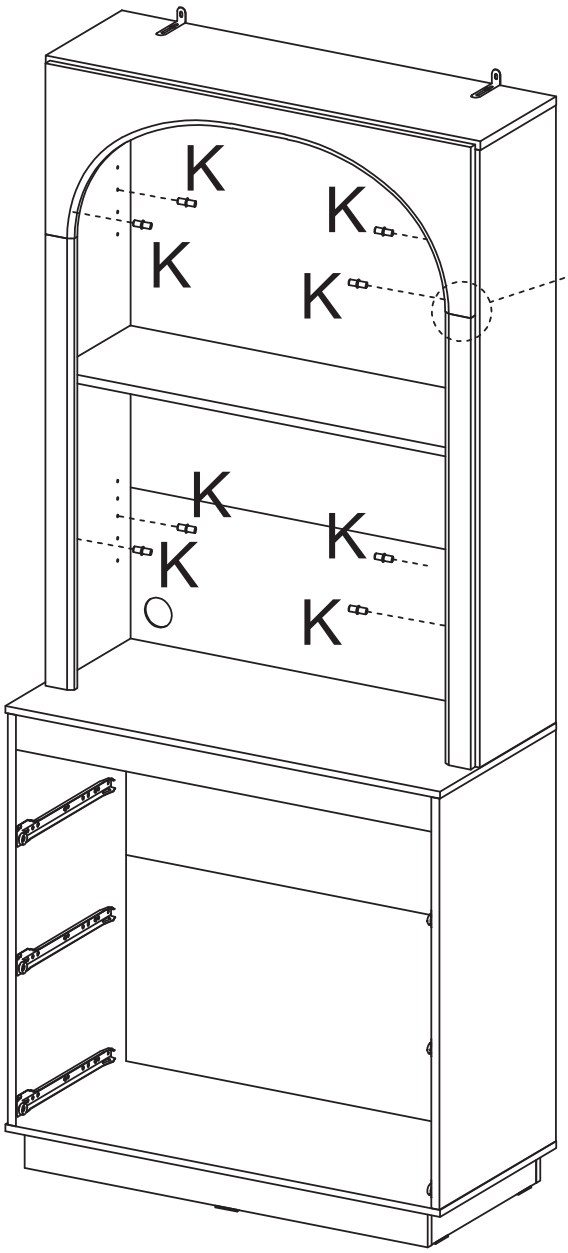


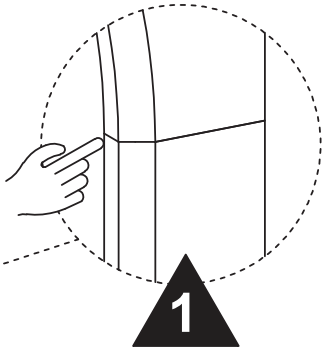


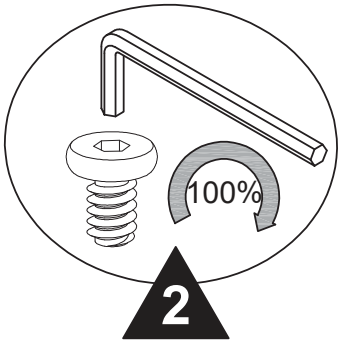


Nota: Align first, then tighten the screws.

STEP 27

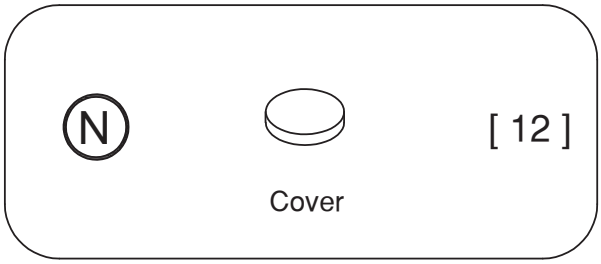

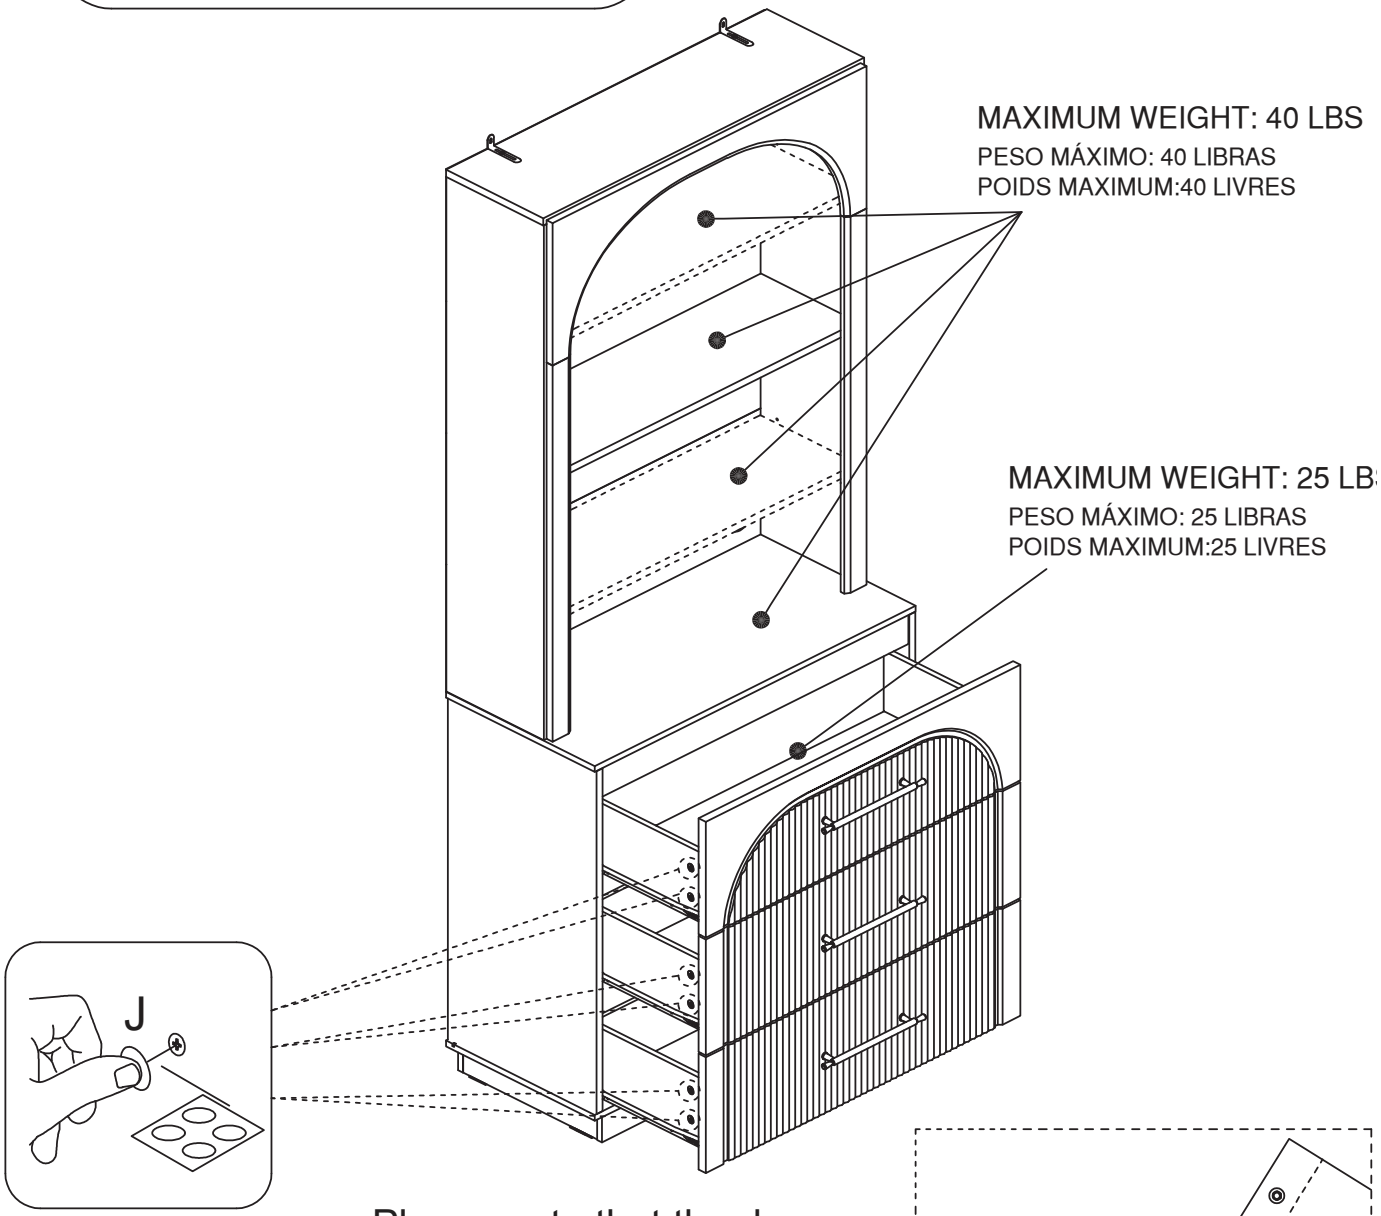

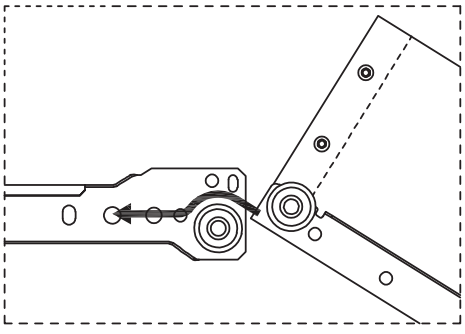

Please note that the drawers must be installed as indicate by the arrows.

MODEL 2
Installation complete

STEP 28

