






Modular Sofa

ASSEMBLY INSTRUCTIONS



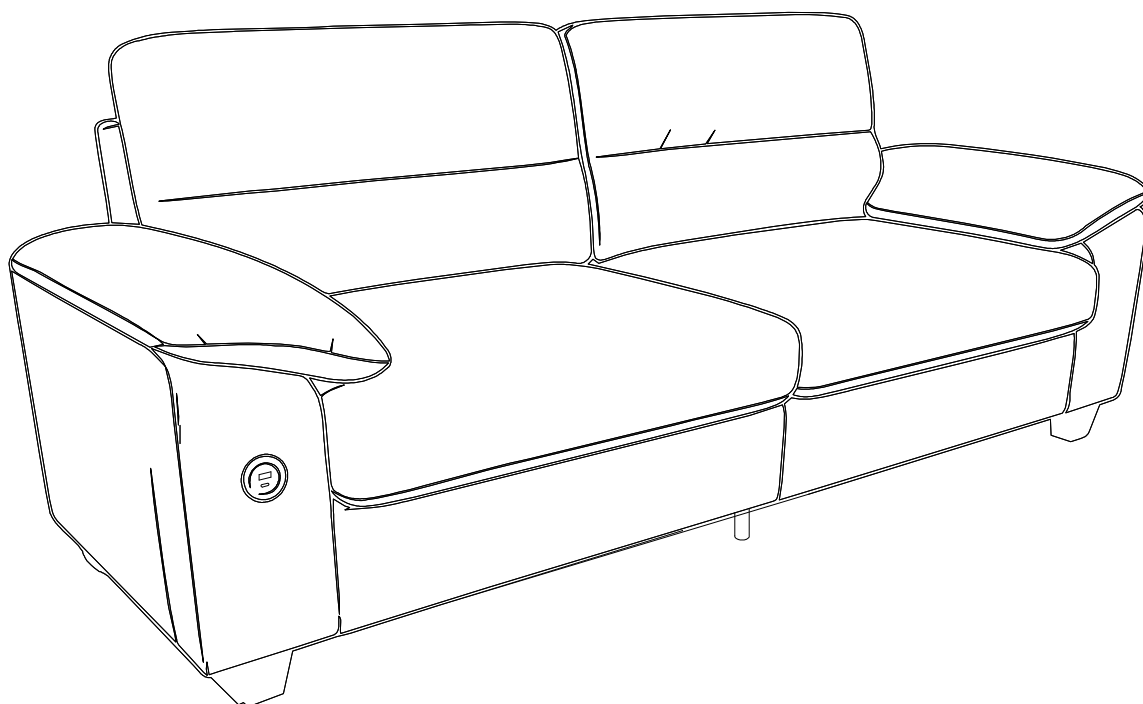


Parts List

BOX A

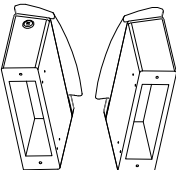
H  Armrest Frame	1  M8x50mm	2  M8x35mm	3  M6x35mm	4  Wing Nut
2PCS	8PCS	4PCS	8PCS	4PCS
5  Flat Washer	6  Lock Washer	7  Allen Key		
24PCS	4PCS	1PCS		

BOX B

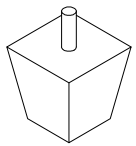A  Seat Frame	B  Backrest Frame	C  Seat Cushions	D  Backrest Cushions	E  Base Leg
2PCS	2PCS	2PCS	2PCS	2PCS
F  Feet				
4PCS				


Assembly Instructions

The cushions are vacuum-sealed and may arrive wrinkled. Smooth creases with an iron, or fluff up cushions by gentle tapping.

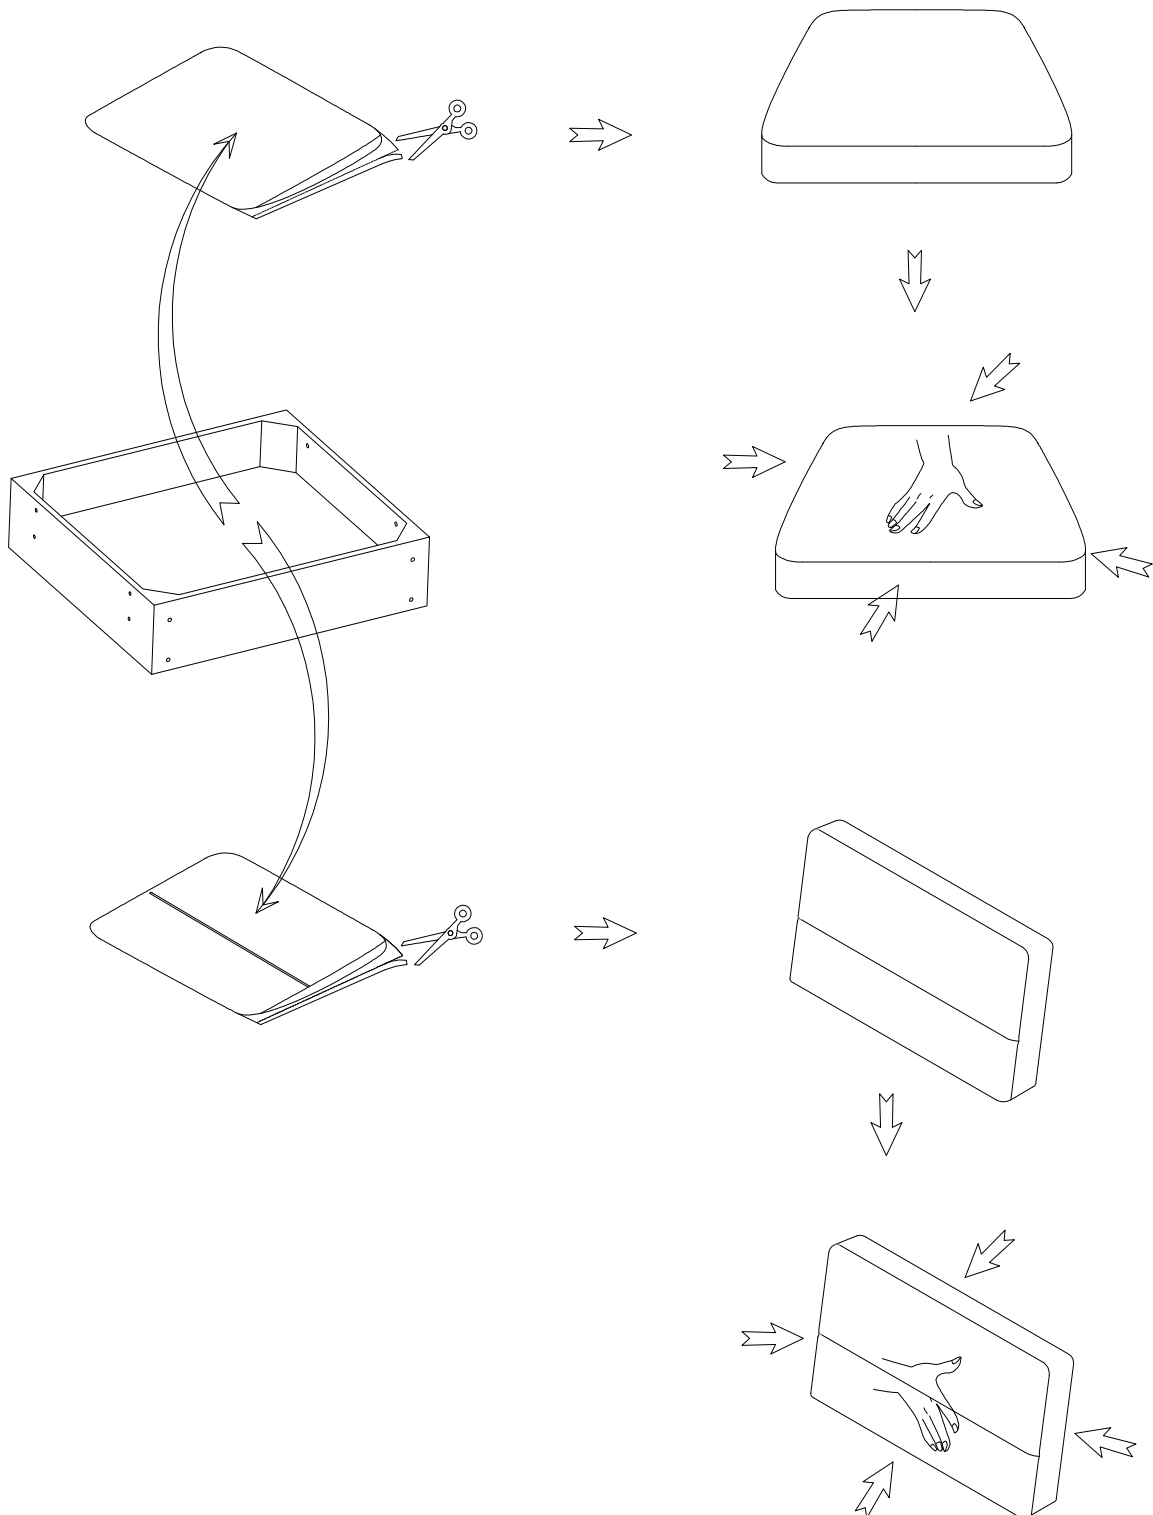

Assembly Instructions


Step 1

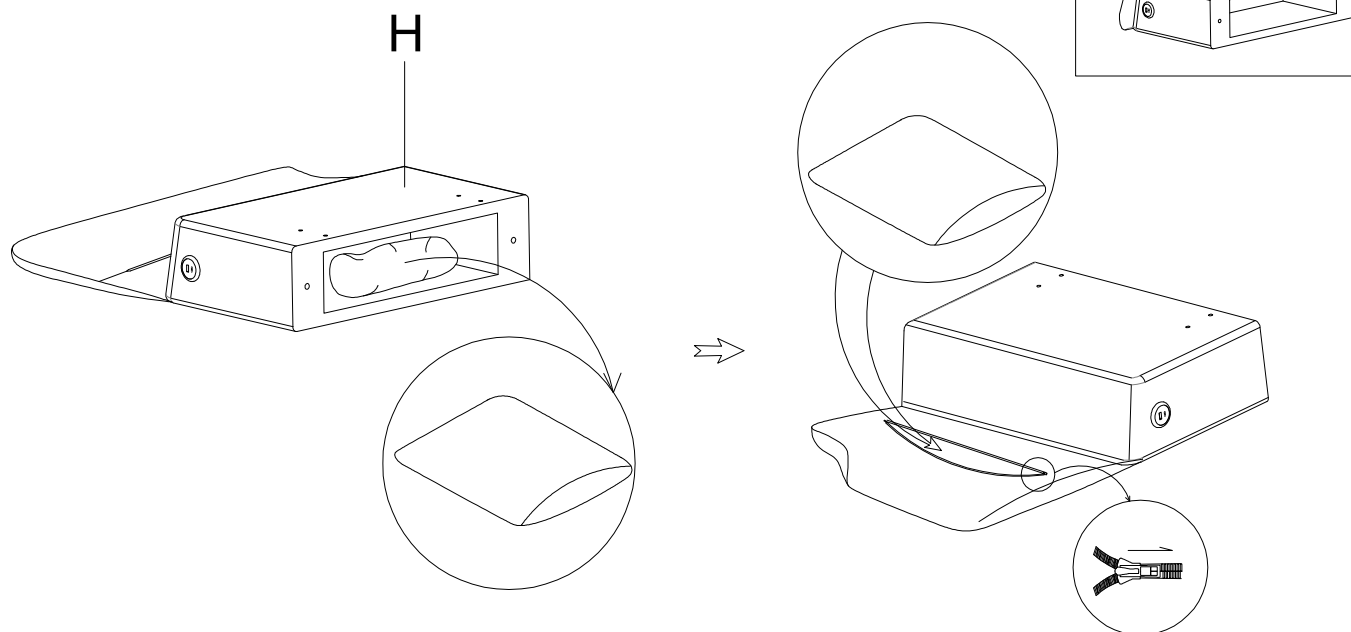

Remove armrest cushion from the armrest frame (H), then open the armrest zipper, insert the cushion, and tap to fluff.

Step 2

EX 2



5



X8

1



X4

4





X4

7



X1

AX 2

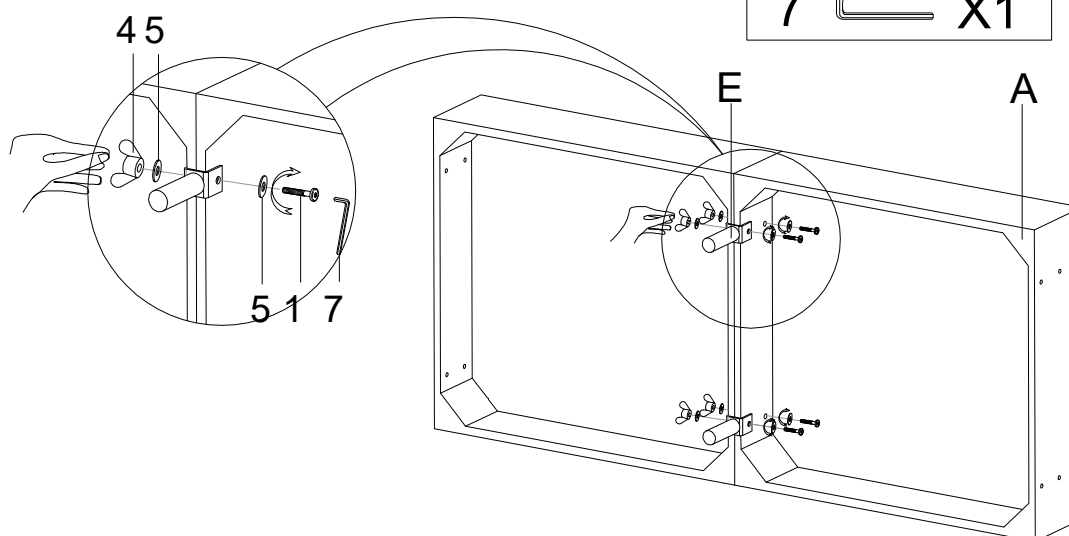



Insert the base leg(E) into the top and bottom of the middle base frame. Secure them with the M8x50mm screws, flat washers(5), and wing nuts(4).

Assembly Instructions

Step 3

7		X1
2		X4
5		X4

HX 1

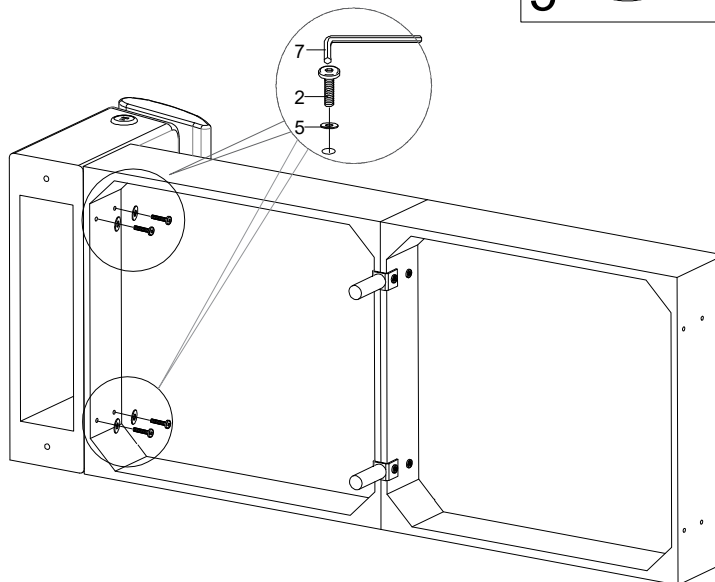
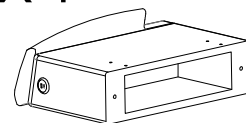


Attach the left armrest (H) to the frame using the M8x35mm screws, flat washers(5), and Allen key(7).

Step 4

7		X1
2		X4
5		X4

HX 1

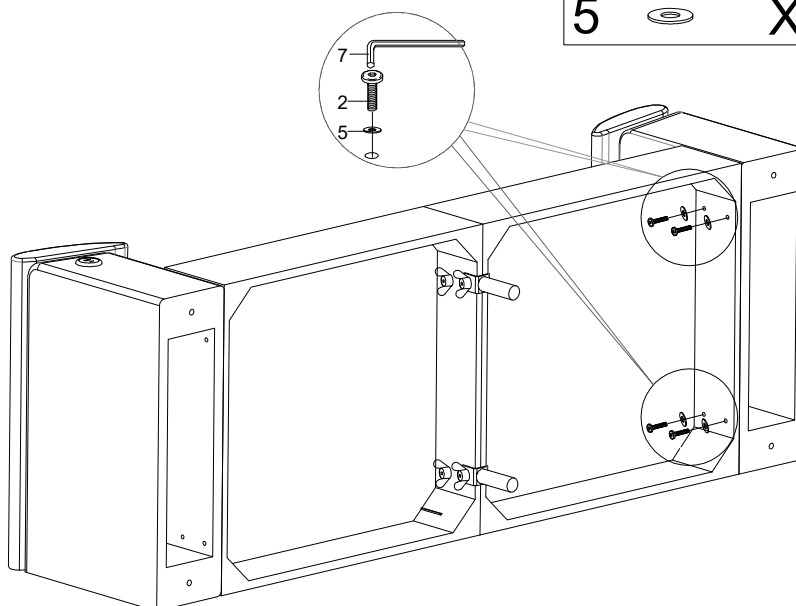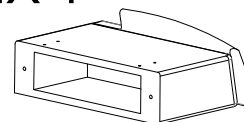


Attach the right armrest (H) to the frame using the M8x35mm screws, flat washers(5), and Allen key(7).

Assembly Instructions

Step 5

6		X4
F		X4


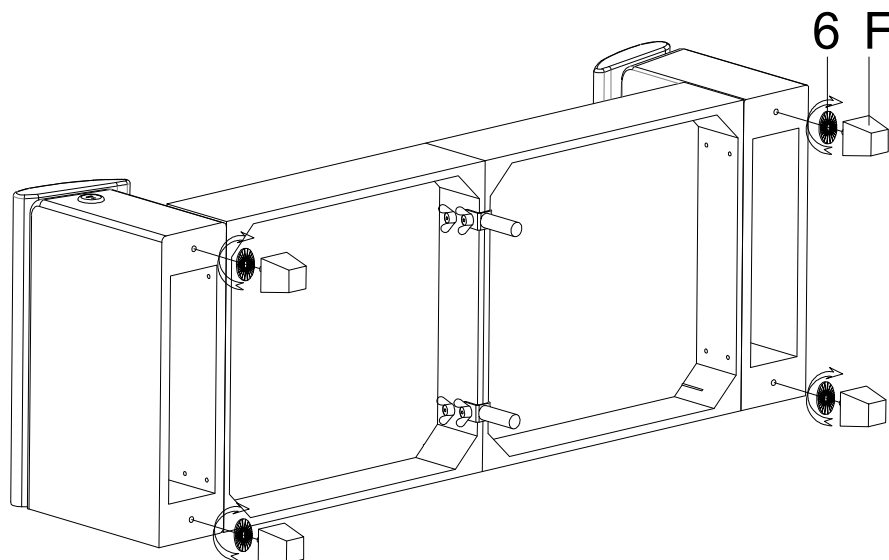


Attach the 4 feet(F) to the sofa frame with lock washers(6).

Step 6

7		X1
3		X8
5		X8

BX 2

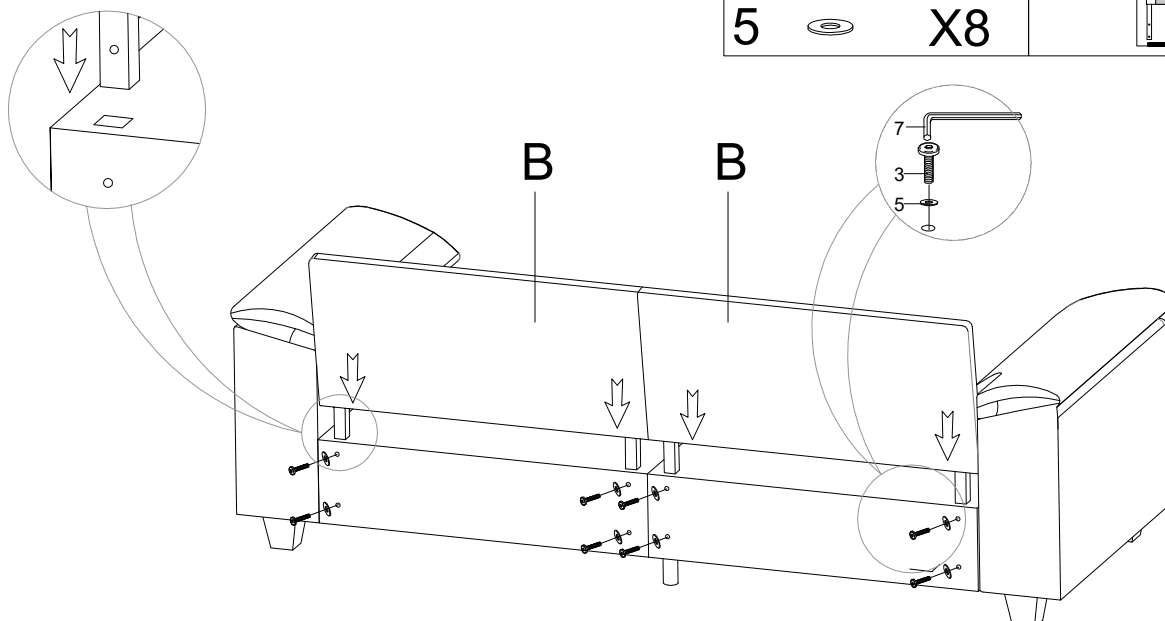


Align pins of backrest frame into seat frame holes. Use Allen key (7) to fasten M6x35mm screws (3) and flat washers (5) from outside inward.

Assembly Instructions

Step 7


CX 2

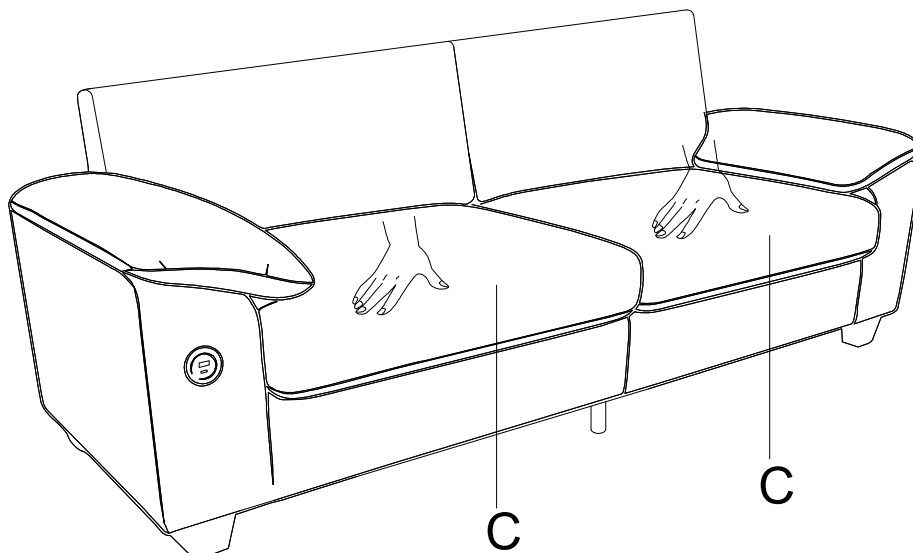

Place the 2 Seat Cushions onto the sofa frame, then pat gently to fluff them up.

Step 8

DX 2

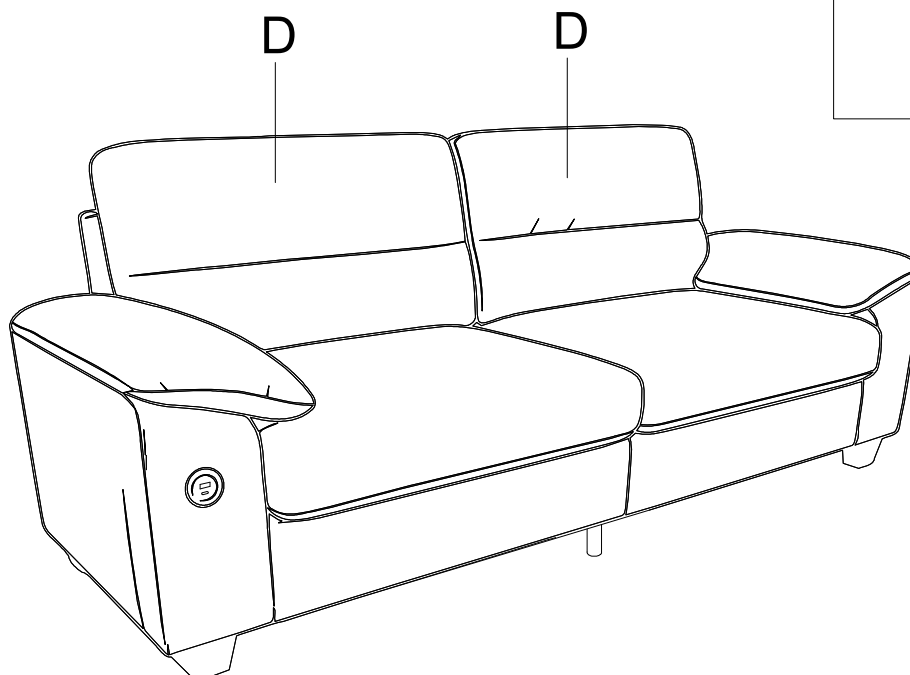

Place the 2 Back Cushions onto the sofa backrests, then pat gently to fluff them up.