

ASSEMBLY INSTRUCTION

ITEM # : WF289187AAL + WF289188AAL 6 DRAWERS CABINET

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside carton during shipment. Identify and count all parts and compare with the parts list below.



ASSEMBLY INSTRUCTION :



1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy.





WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.
3. Two persons are required for assembly.
4. Approximate assembly time : 1/2 hours.
5. Component parts and fittings contained in the box.
Please sort out all parts before you begin to assemble the item.
This is to make sure you always use the correct part.
6. It is **STRONGLY RECOMMENDED** that you **ANCHOR** this product .
Toppling furniture can cause serious injuries and death.
This product has not been fitted with an anchor strap.
To prevent your furniture from tipping forward it is strongly recommended that you securely attach this product to a wall or other solid surface, using the anchor straps provided and appropriate fixings.

BOX: WF289187AAL





No.	Component	Q'ty
B	 Left Side Panel	1
C	 Right Side Panel	1
F	 Drawer Front Panel	6
G	 Drawer Left Side Panel	6
H	 Drawer Right Side Panel	6
I	 Drawer Bottom Panel	6
K	 Legs	5
M	 Center Panel	1




No.	Component	Q'ty
1	 Handle	6
2	 Handle Screw 22mm	12
3	 Wood Dowels	14
4	 Allen Bolt 25mm	46
5	 Allen Wrench	1
6	 Tipping Restraint Hardware Kit	2

TOOLS EXCLUDED: Phillips Screwdriver




BOX: WF289188AAL

No.	Component		Q'ty
(A)		Top Panel	1
(D)		Top Back Panel	1
(E)		Bottom Panel	1
(J)		Drawer Back Panel	6


No.	Component		Q'ty
(L)		Divider Panel	4
(N)		Bottom Back Panel	1
(O)		Behind Crossbar	2

Step 1. Attach the wood dowels (3) to the behind crossbar (O) by placing the wood dowels into the round hole and toward the front.

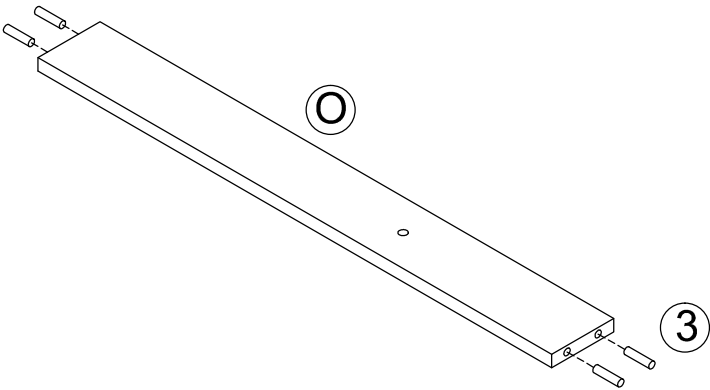


Step 2. Attach the divider panel (L) to the right side panel (C) by placing the plastic pieces into the slots and sliding the divider panel (L) toward down.


Note: make sure the metal tracks are facing inward.

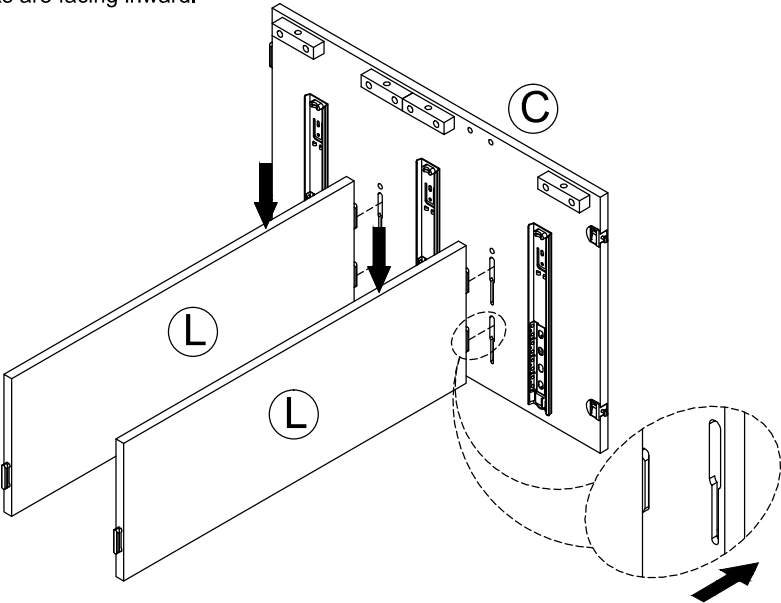

Step 3. Attach the divider panel (L) and the behind crossbar (O) to the center panel (M) by placing the wood dowels into the round hole and toward the front. Simultaneously, placing the plastic pieces into the slots and sliding the divider panel (L) toward down.

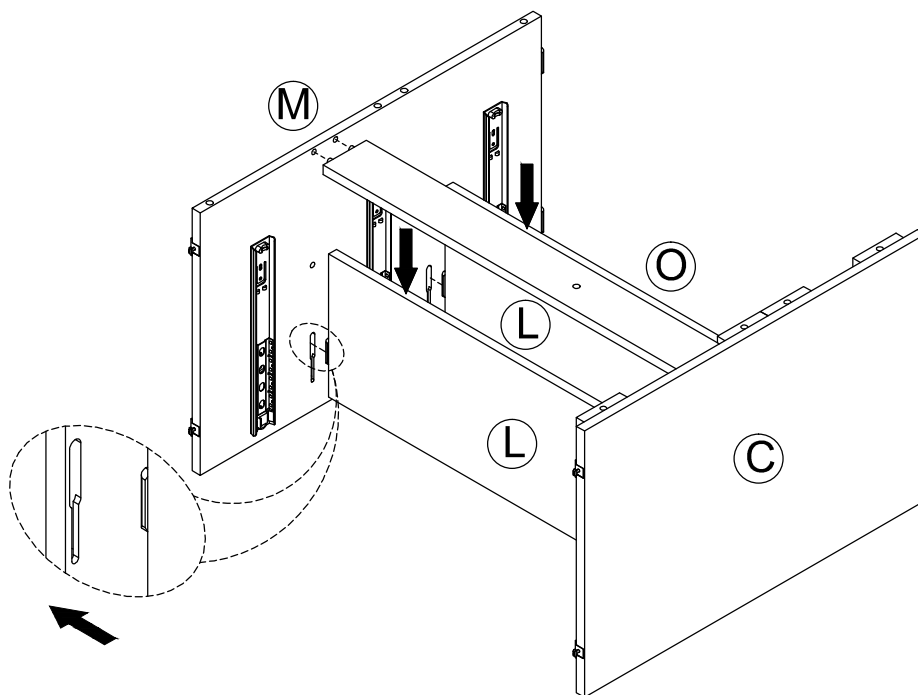


Step 4. Attach the divider panel (L) to the center panel (M) by placing the plastic pieces into the slots at the left, and sliding the divider panel (L) toward down.

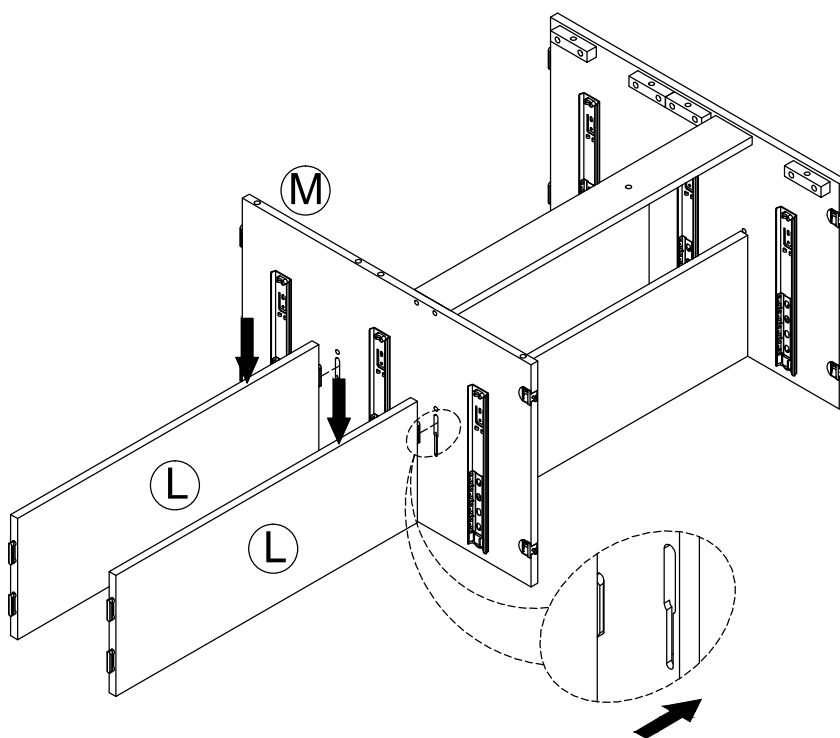


Step 5. Attach the divider panel (L) and the behind crossbar (O) to the left side panel (B) by placing the wood dowels into the round hole and toward the front. Simultaneously, placing the plastic pieces into the slots and sliding the divider panel (L) toward down.

Note: make sure the metal tracks are facing inward.

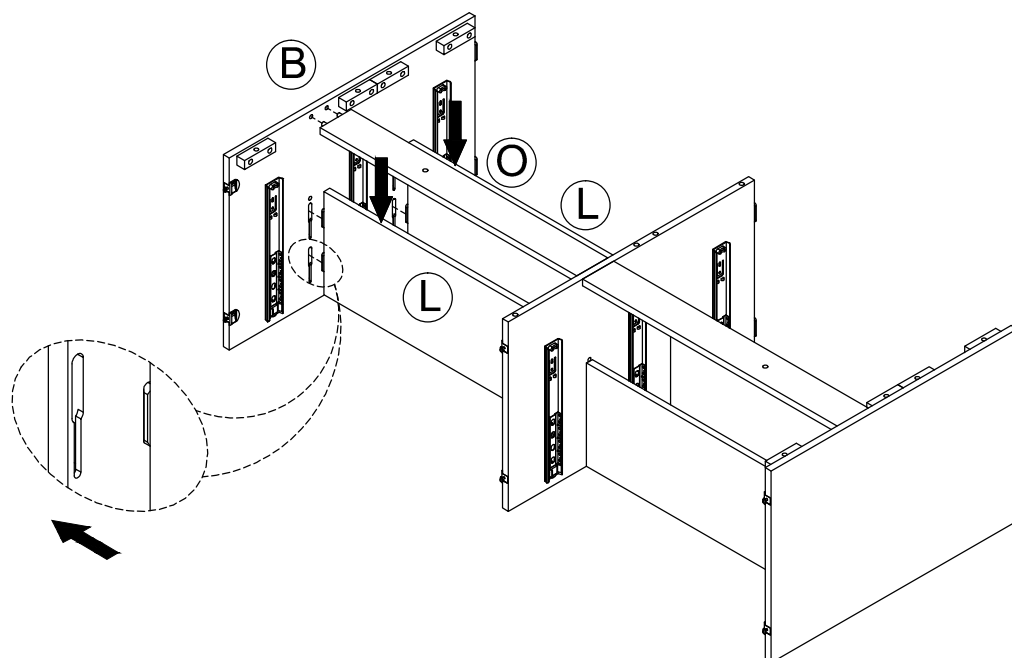


Step 6. Attach the wood dowels (3) to the side panels (B,C) and the center panel (M) by placing the wood dowels into the round hole and toward the front.

Note: make sure the divider panel (L) are under the round hole.

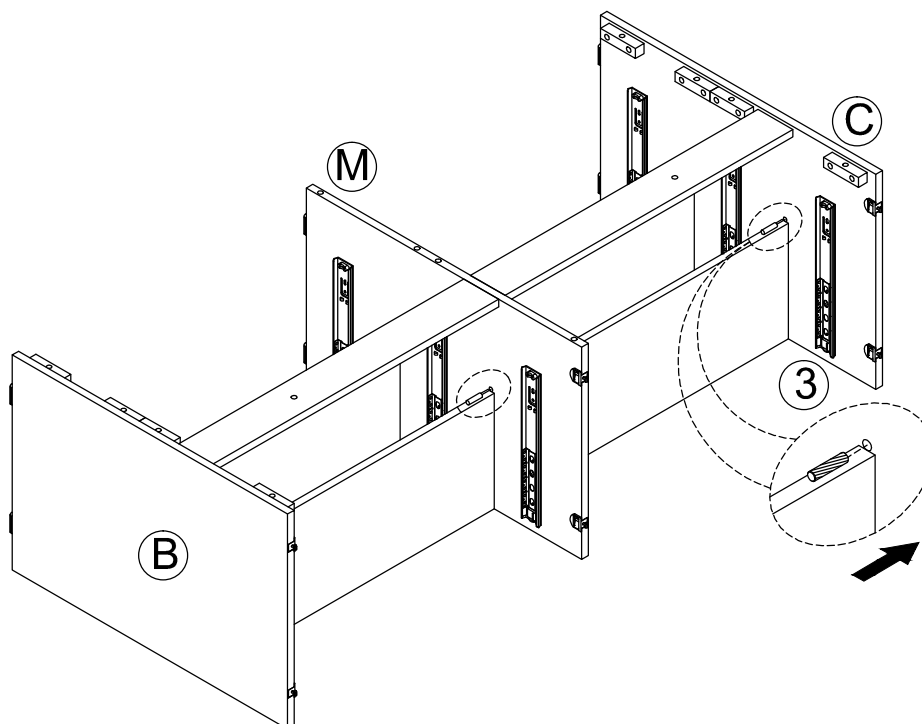


Step 7. Attach the legs (K) to the bottom panel (E) by rotating the legs from left to right clockwise.


Note: make sure the mounting blocks are facing upward.

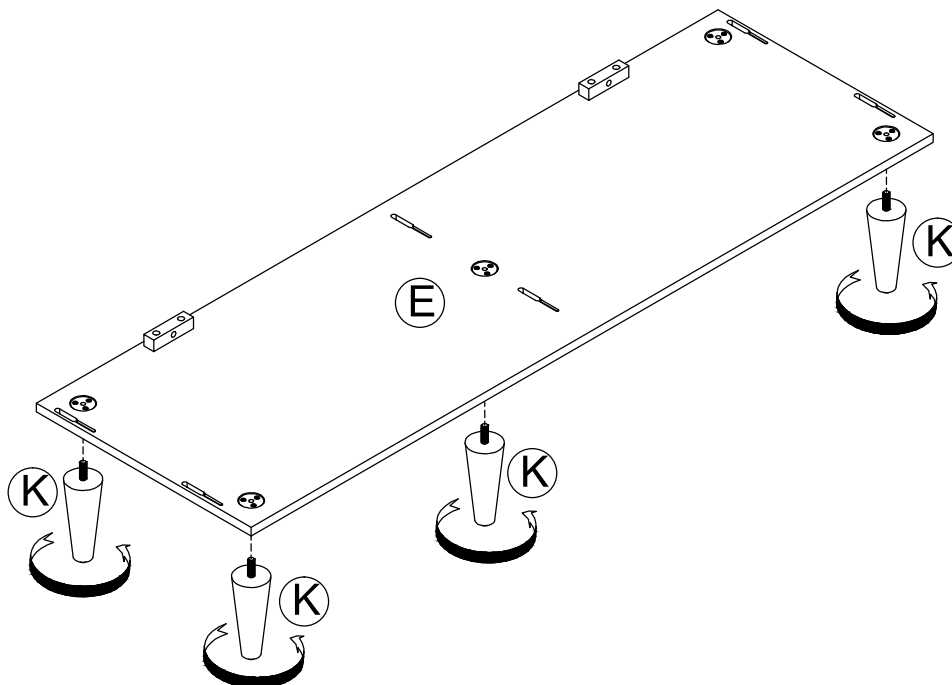


Step 8. Attach the left side panel (B), the right side panel (C) and the center panel (M) to the bottom panel (E) by placing the plastic pieces into the slots and sliding the side panels (B,C) toward down.

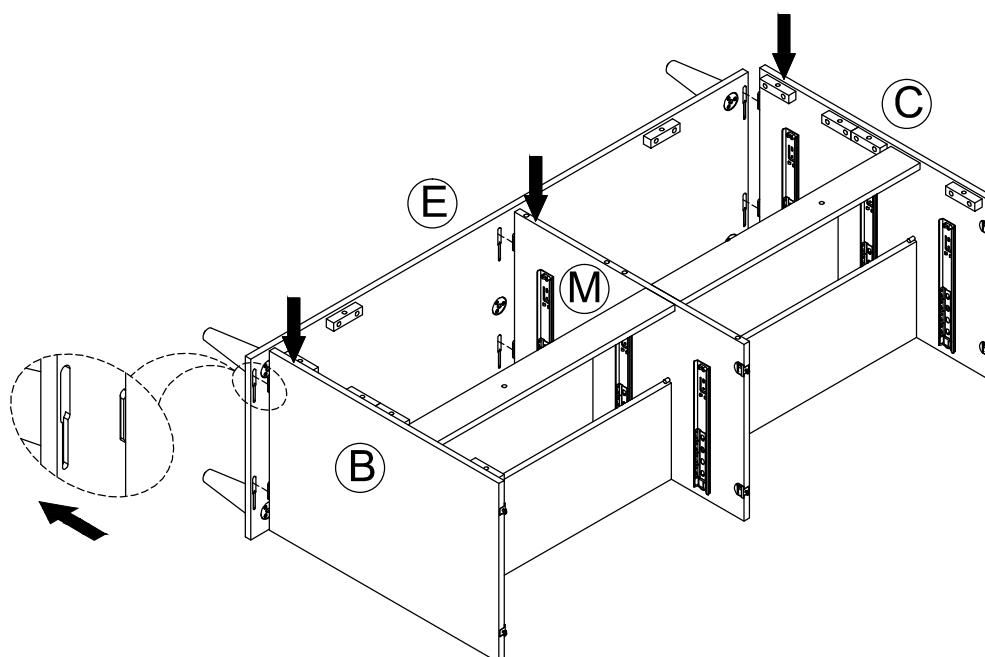

Step 9. Place the top panel (A) onto the side panels (B,C), the center panel (M) and flip the levers on the side panels to the "closed" position.

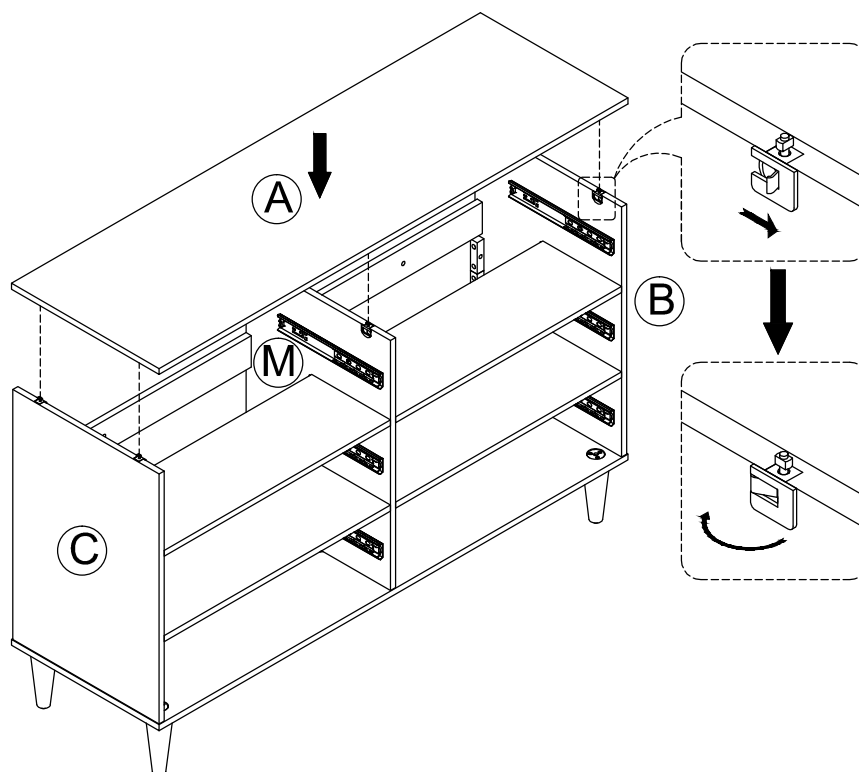


Step 10. Secure the top back panel (D) and bottom back panel (N) to the mounting blocks by using the Allen bolts (4) and the Allen wrench (5).

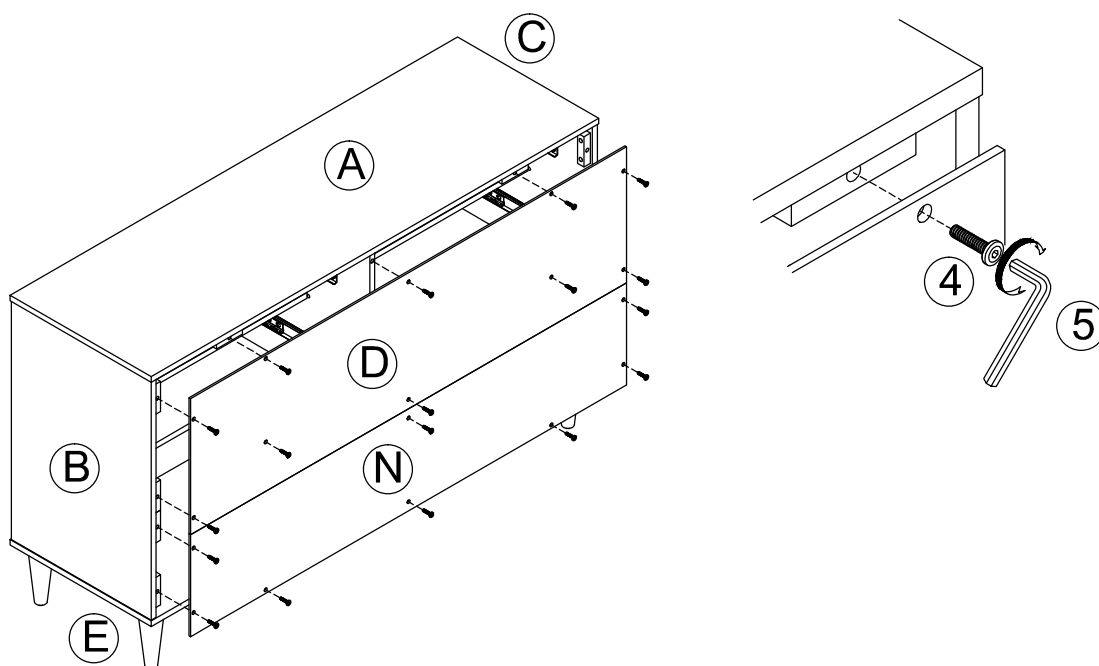


Step 11. Attach the drawer left side panel (G) and the drawer right side panel (H) to drawer front panel (F) by placing the plastic pieces into the slots and sliding the drawer side panels (G,H) toward down.

Note: make sure the metal tracks are facing outward.

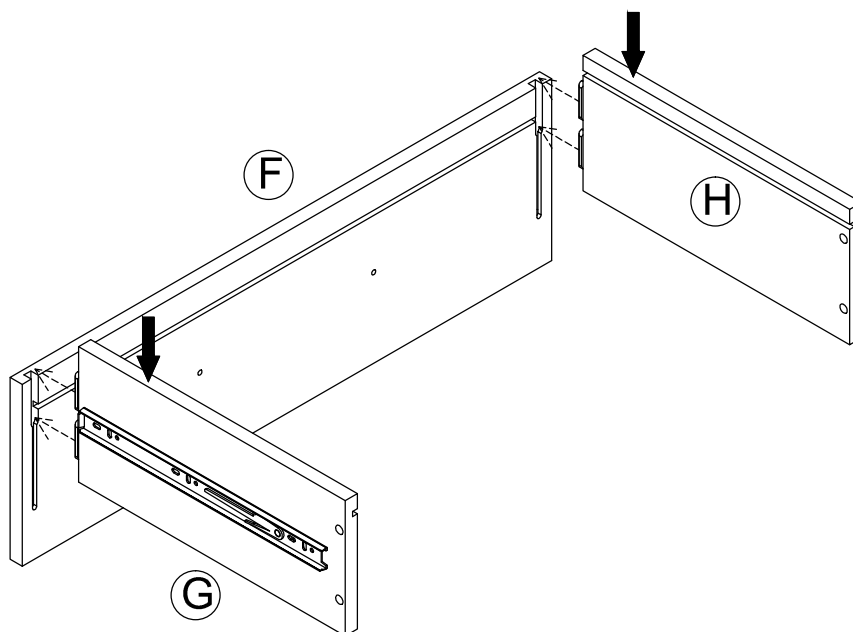


Step 12. Slide the drawer bottom panel (I) into place.

Then, attach the drawer back panel (J) to the drawer side panels (G,H) by using the Allen bolts (4) and the Allen wrench (5).

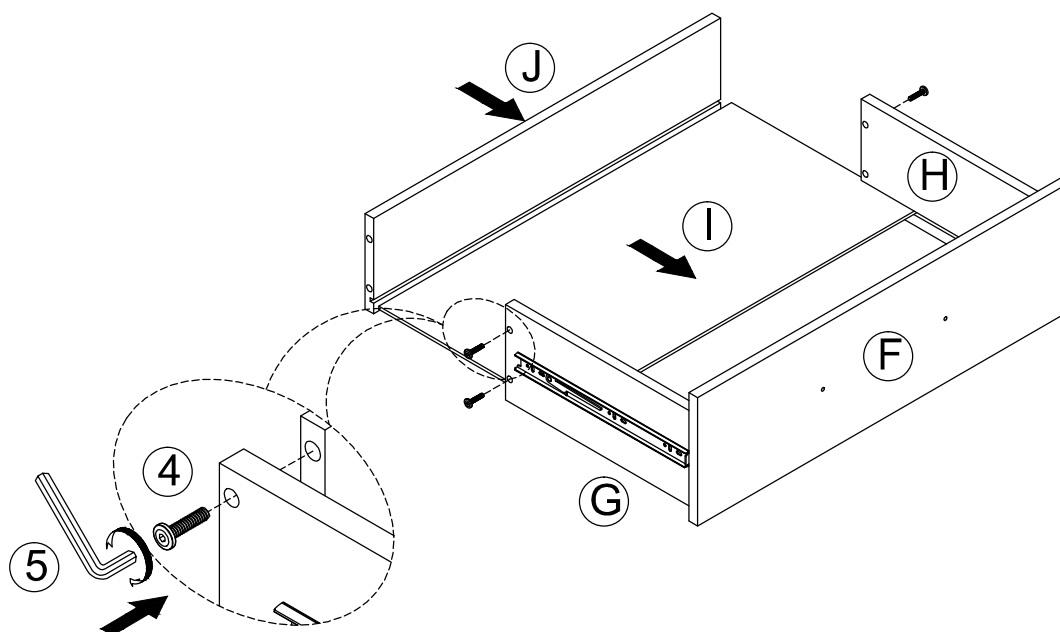


Step 13. Attach the handle (1) to the drawer front panel (F) by using the Handle screw (2) and the Phillips screwdriver.

Repeat steps 11-13 for each drawer.

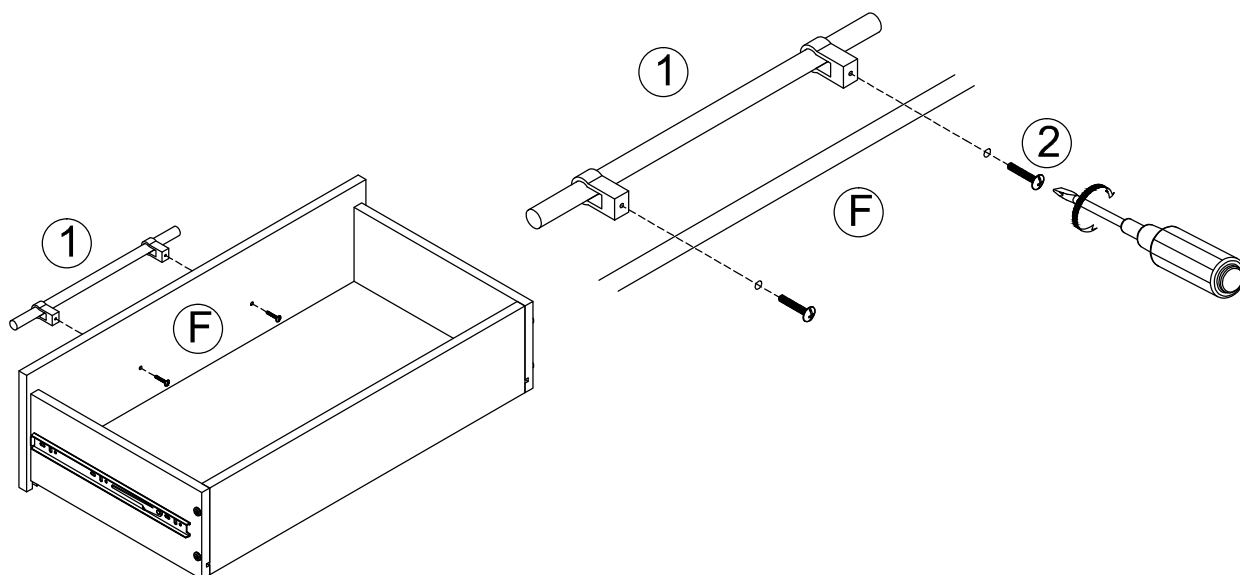

Step 14. Place the drawers into the dresser frame on the metal tracks and slowly work the drawer into place until fully closed.

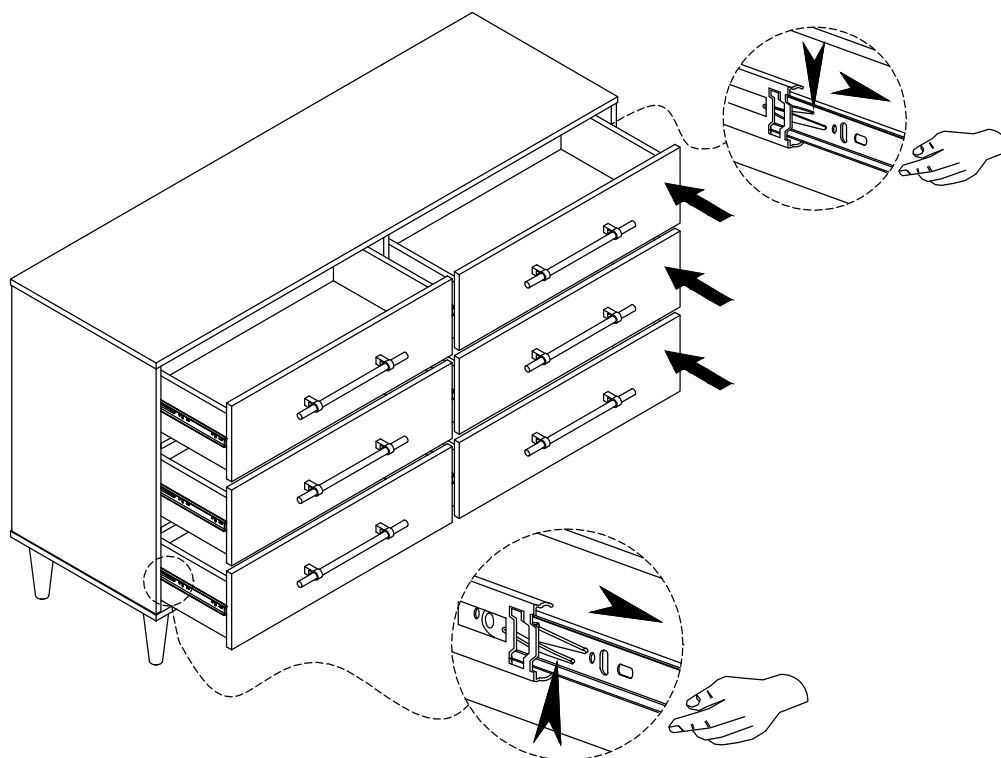

Step 15. Attach a bracket securely to the back top rail of the dresser using the 5/8" screw provided, through the smaller hole.

Locate the other bracket on the wall over a wall stud and 2 inches below the mounting bracket secured to the back of your unit. Attach the wall stud using the 2" screw provided, through the smaller hole.

Place the dresser into position so both mounting brackets are vertically inline.

Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slice the flat end through the locking end and draw it through until all slack is removed.

Confirm that the strap is securely laced and locked.

