


CONSOLE TABLE

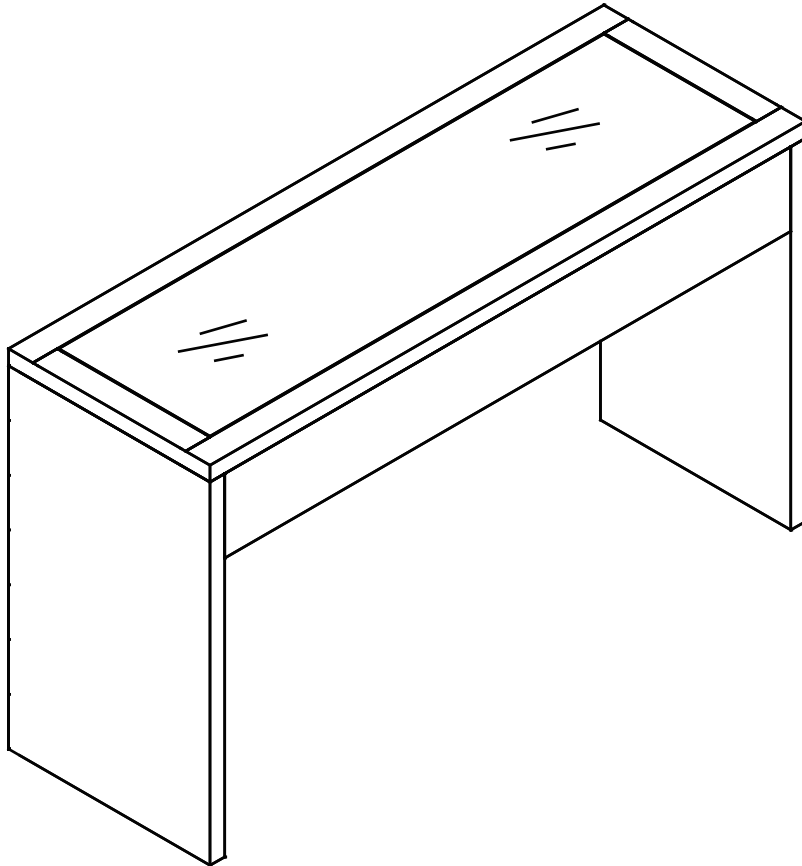

ASSEMBLY INSTRUCTIONS







We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish . Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .






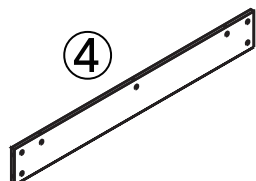
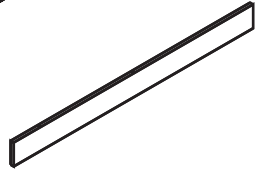
Please do not return to the store
Broken or missing parts?
Need help with assembly?

Our Illinois based customer service team is ready to help with any problems or questions you may have.


Hardware List

| | | | | | |
|---|---|---|---|---|---|
| A  | B  | C  | D  | E  | F  |
| Cam bolt (18pcs) | Cam lock (18pcs) | Wood dowel (4pcs) | Sticker (18pcs) | Polishing cloth (1pc) | Glue (1pc) |





Panel List
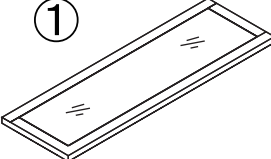
| | | | | |
|---|---|---|--|---|
| ①  | ②  | ③  | ④  | ⑤  |
| Top Panel (1pc) | Left Side Panel (1pc) | Right Side Panel (1pc) | Back Panel (1pc) | Front Panel (1pc) |

Exploded Views

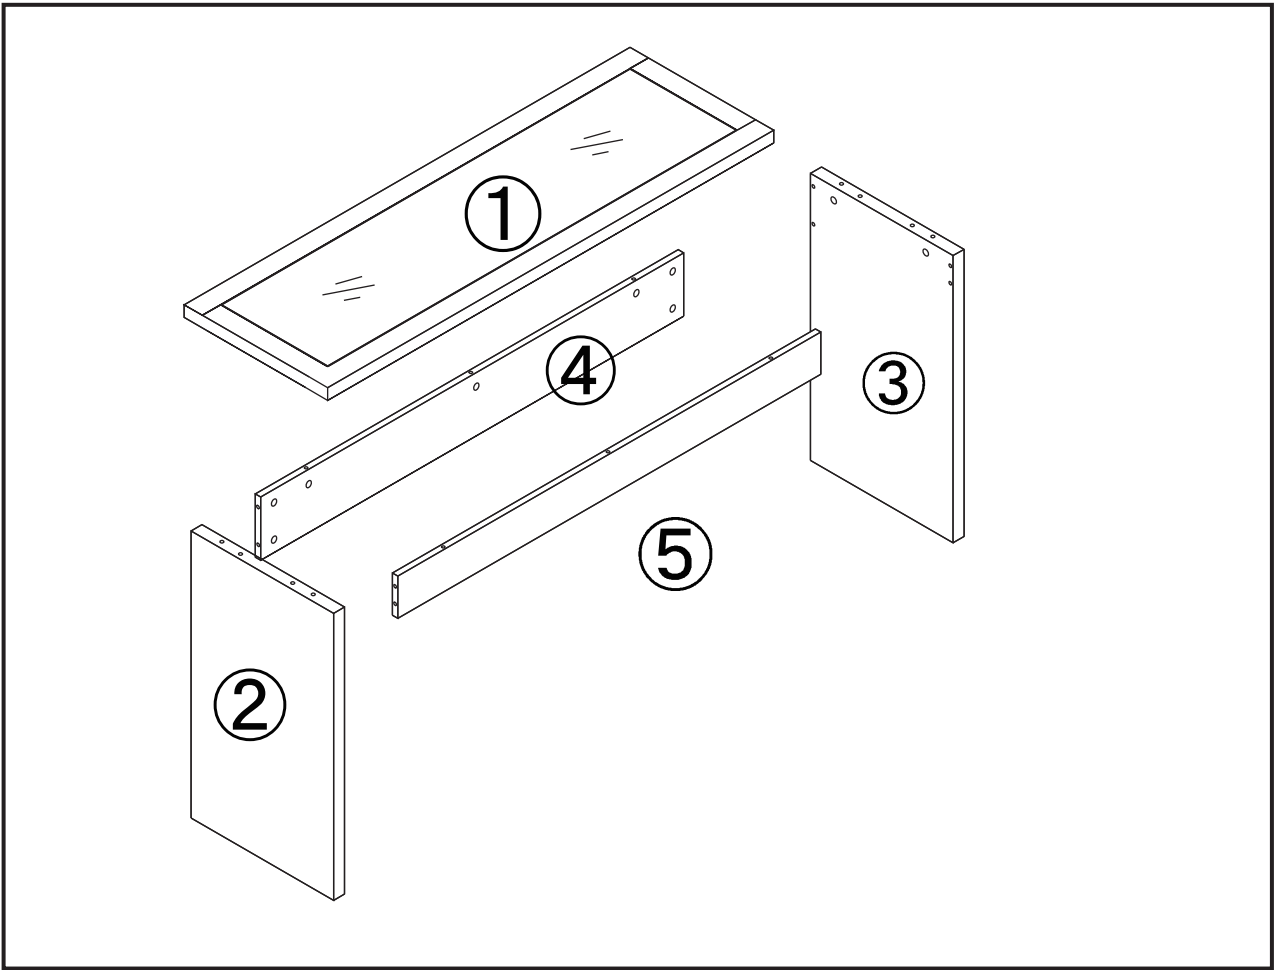




Assembling the unit with camlocks and wood dowels.
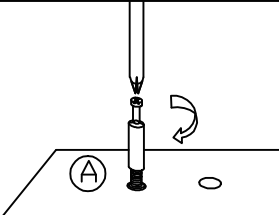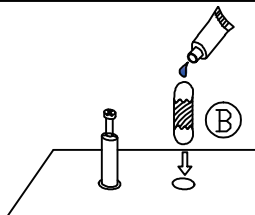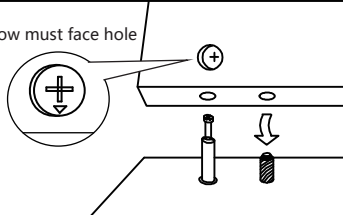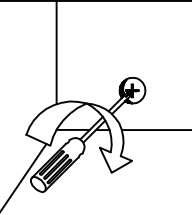
| | | | |
|---|---|---|---|
|  |  |  |  |
| Gently screw cam bolt into the threaded anchor. | Lightly glue one end of the wood dowel and tap halfway into hole. | Lightly glue wood dowel and connect to second panel by inserting dowels into holes. | Screw the camlock firmly into locked position. |

Step 1


1. Screw cambolts (A) into top panel ① left side panel ② and right side panel ③ as shown .

1. Insert wood dowels (C) into top panel ① as shown .

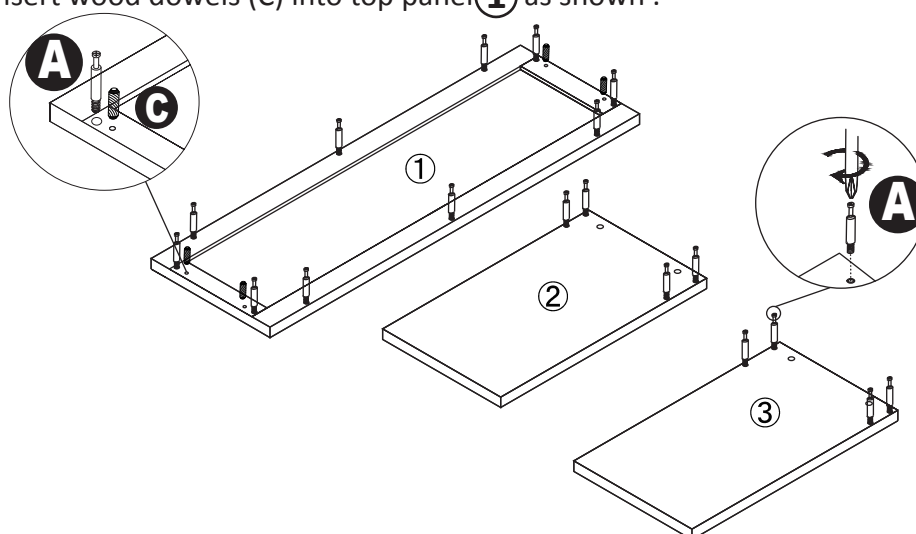



Step 2

1. Attach right side panel ③ front panel ⑤ back panel ④ to left side panel ② as shown using camlocks (B) , gently tighten camlocks.

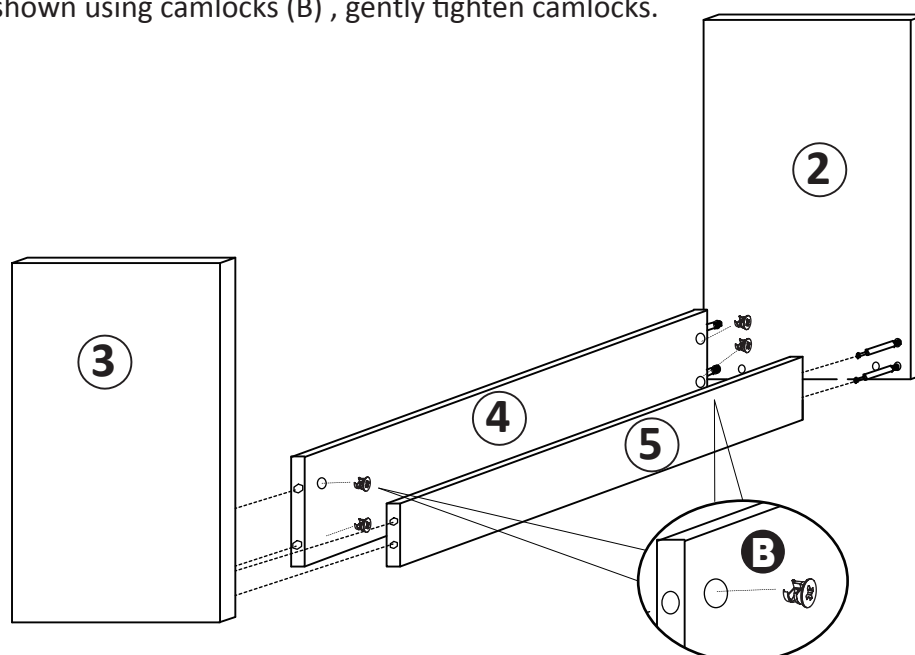

Step 3

1. Place top panel ① upside down on carpet or another soft surface .
2. Attach top panel ① to assembly as shown using camlocks (B) , gently tighten camlocks.
3. Place hole stickers (D) over screw holes.

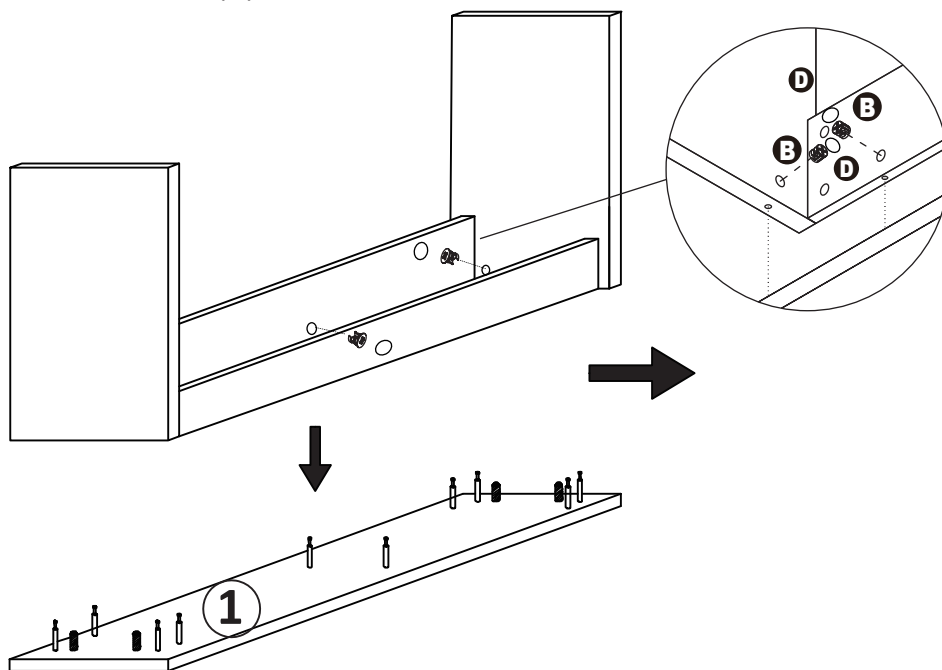

Step 4

1. Enjoy.

