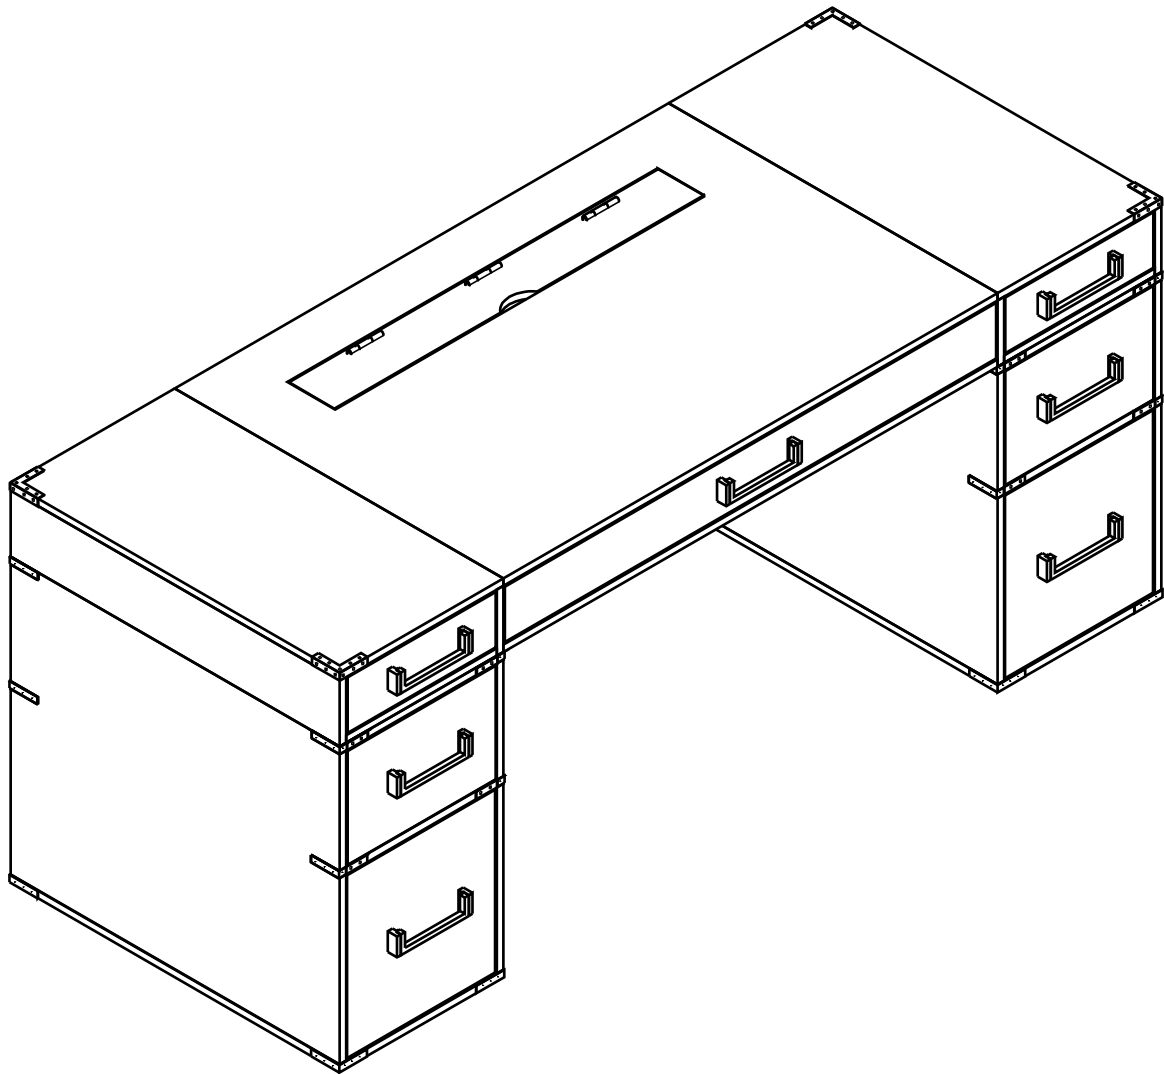


Desk

Assembly Instruction- Please keep for future reference



Dimensions

Width-70inch

Depth-28inch

Height-30inch

Important-Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightened properly.

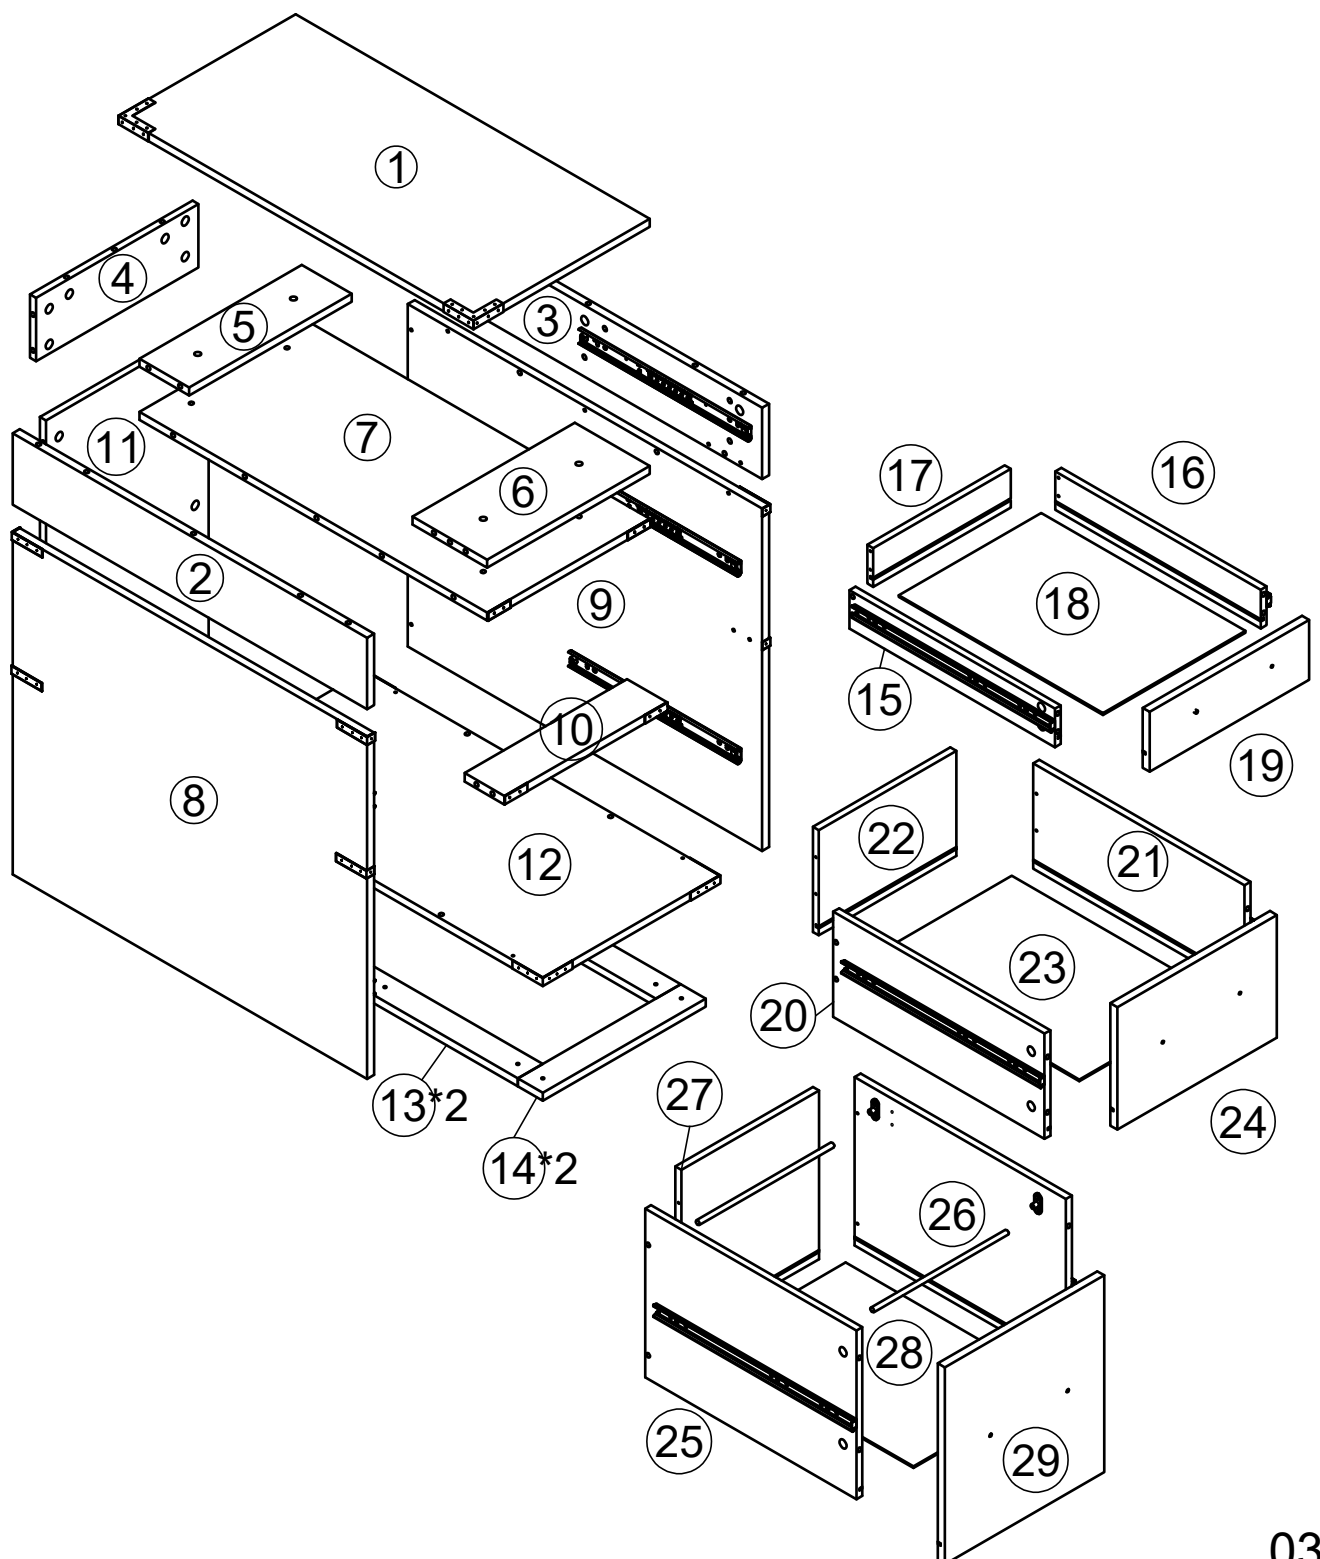
WARNING
**In order to help prevent overturning –
please follow these instructions**

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


PART LIST

BOX:1/3




PART LIST

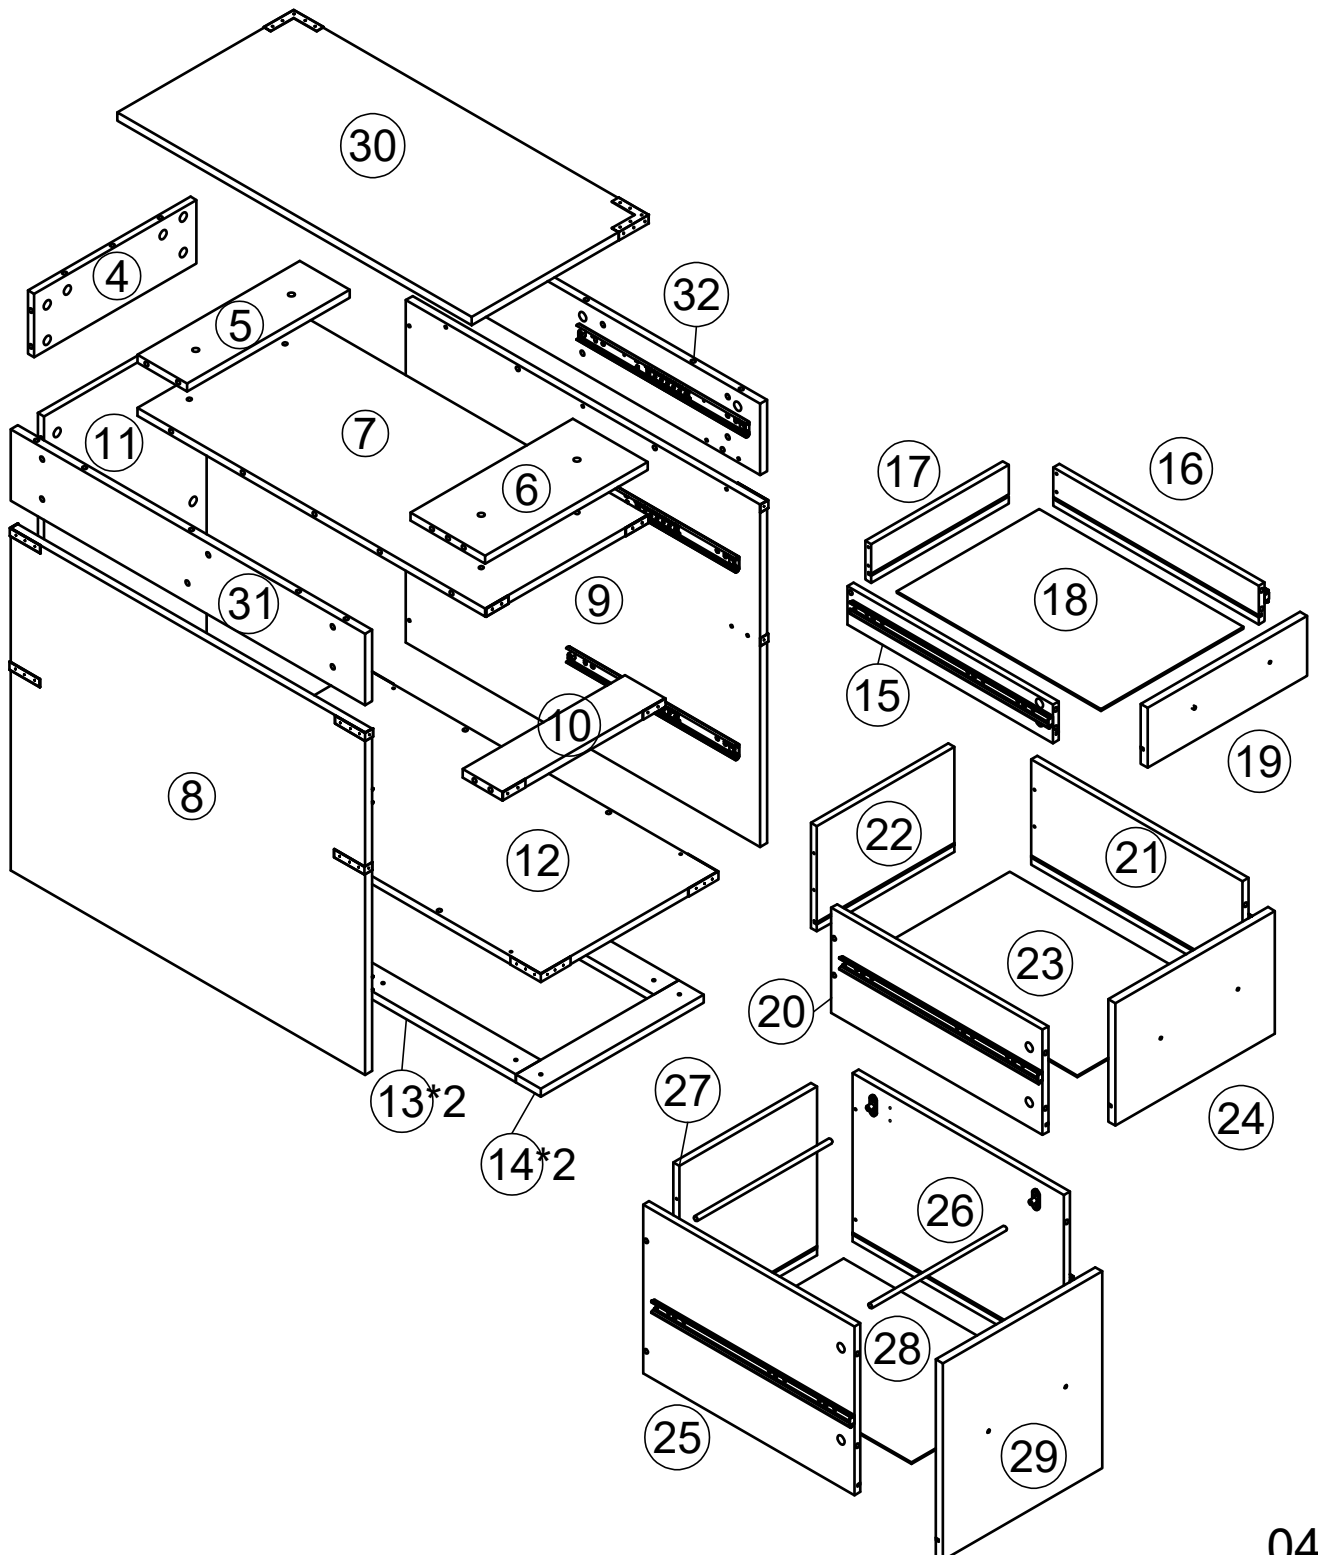BOX:2/3





















PART LIST










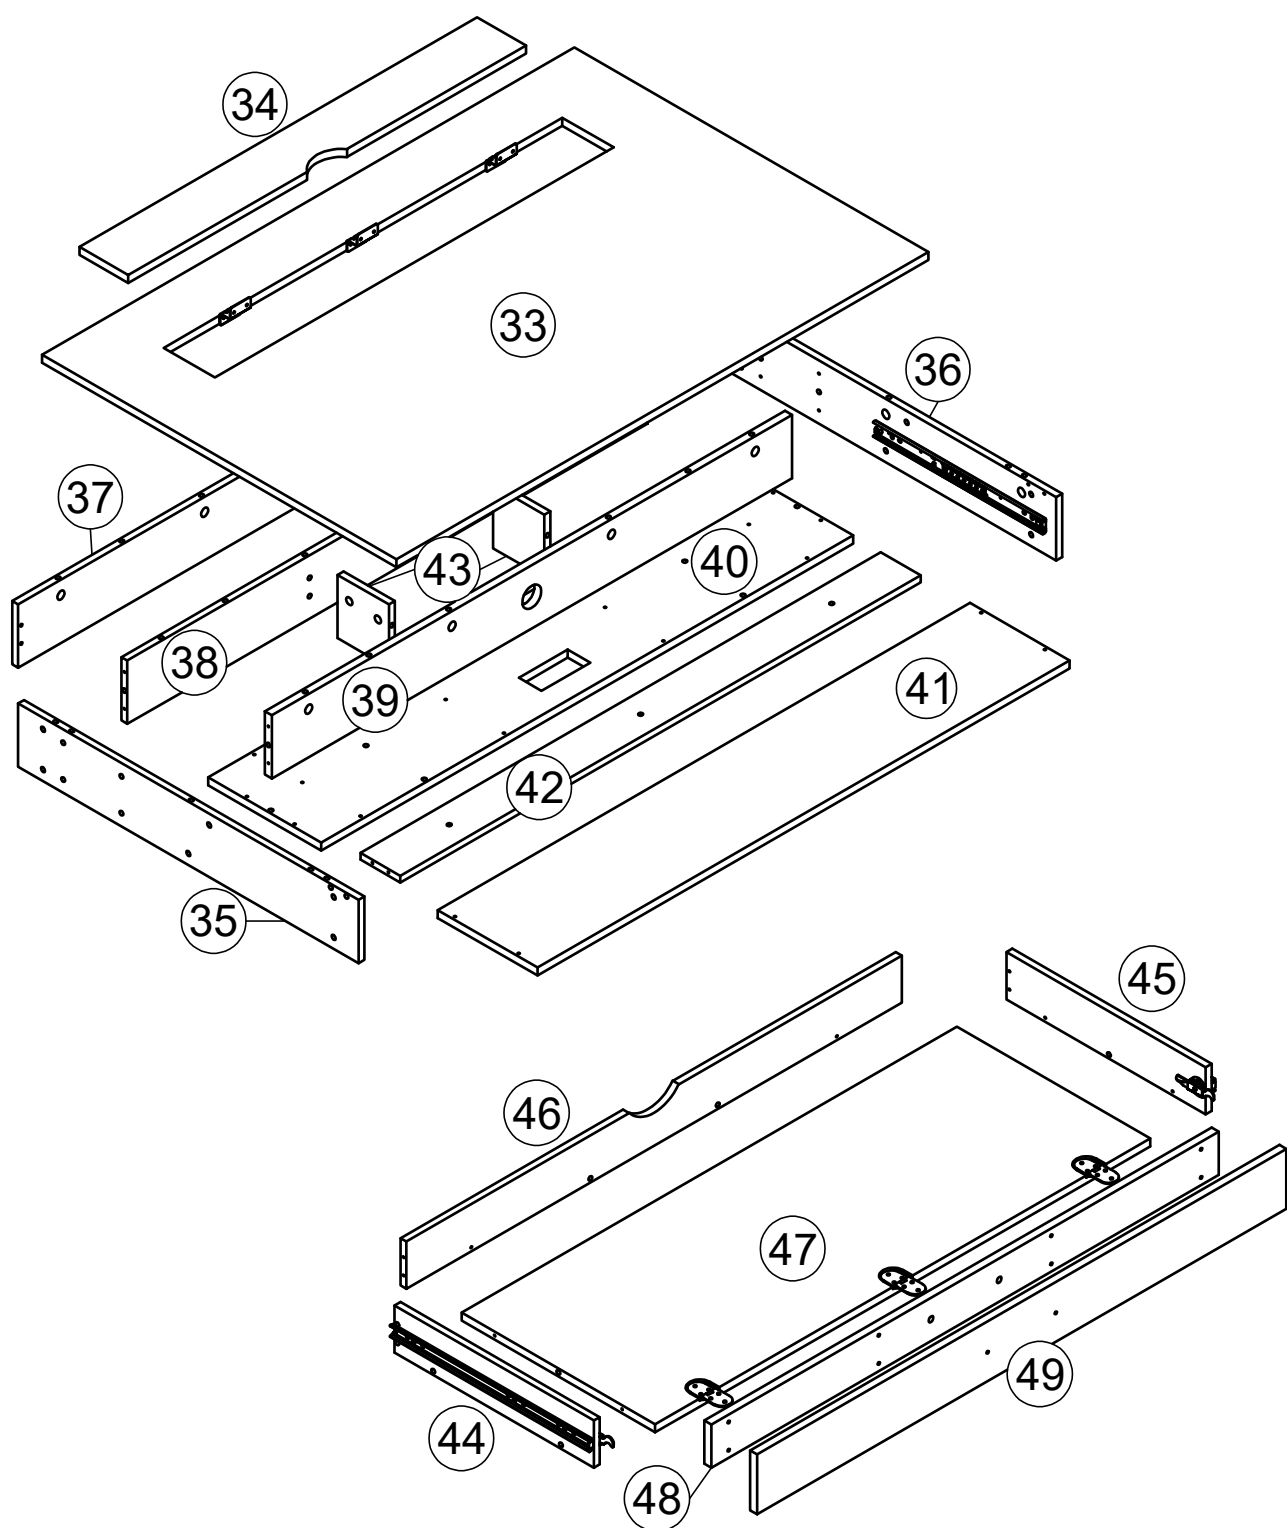
BOX:3/3




















PART LIST

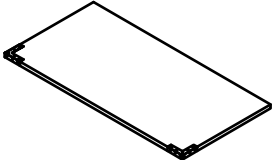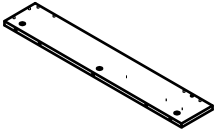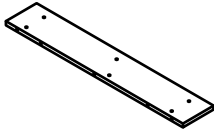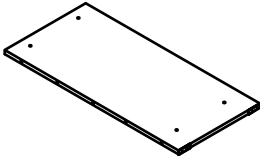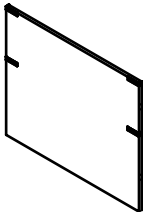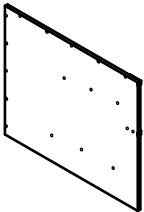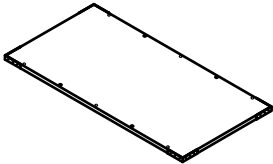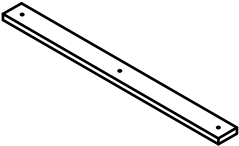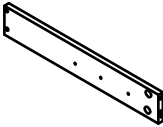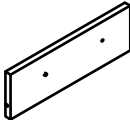① 1PC 	② 1PC 	③ 1PC 	④ 1PC 
⑤ 1PC 	⑥ 1PC 	⑦ 1PC 	⑧ 1PC 
⑨ 1PC 	⑩ 1PC 	⑪ 1PC 	⑫ 1PC 
⑬ 2PCS 	⑭ 2PCS 	⑮ 1PC 	⑯ 1PC 
⑰ 1PC 	⑱ 1PC 	⑲ 1PC 	

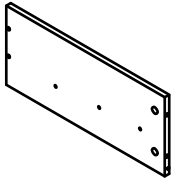
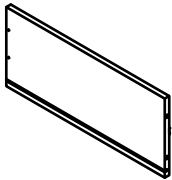


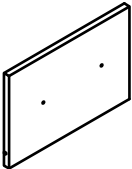
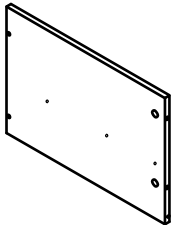
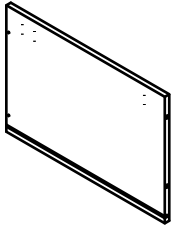

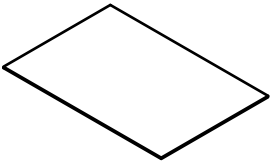

PART LIST

20 1PC 	21 1PC 	22 1PC 	23 1PC 
24 1PC 	25 1PC 	26 1PC 	27 1PC 
28 1PC 	29 1PC 		


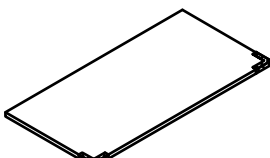
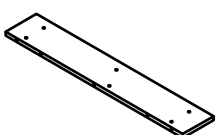
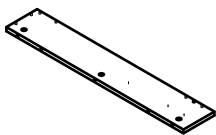



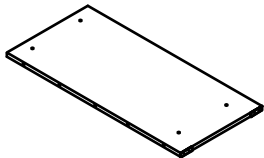
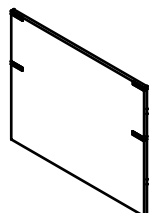
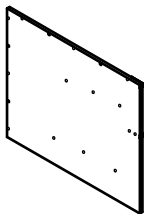


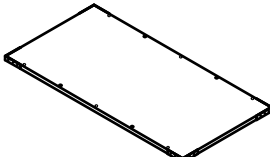
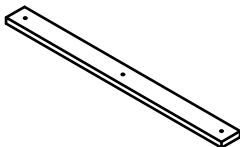
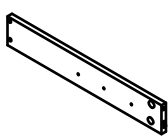


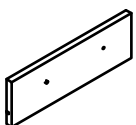
PART LIST

③① 1PC 	③① 1PC 	③① 1PC 	①④ 1PC 
①⑤ 1PC 	①⑥ 1PC 	①⑦ 1PC 	①⑧ 1PC 
①⑨ 1PC 	①⑩ 1PC 	①⑪ 1PC 	①⑫ 1PC 
①⑬ 2PCS 	①⑭ 2PCS 	①⑮ 1PC 	①⑯ 1PC 
①⑰ 1PC 	①⑱ 1PC 	①⑲ 1PC 	

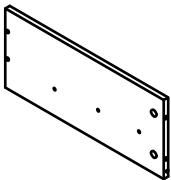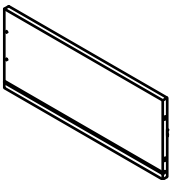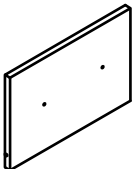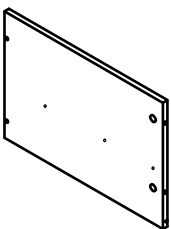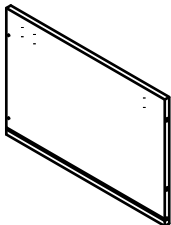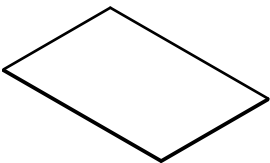PART LIST

20 1PC 	21 1PC 	22 1PC 	23 1PC 
24 1PC 	25 1PC 	26 1PC 	27 1PC 
28 1PC 	29 1PC 		

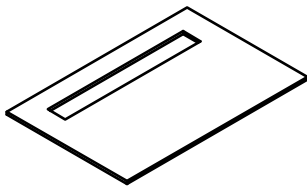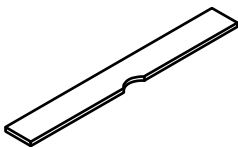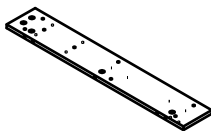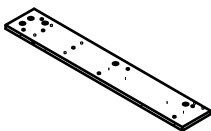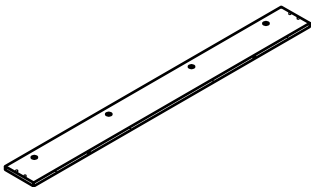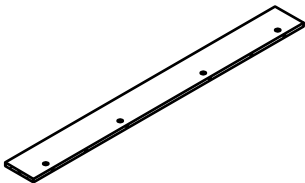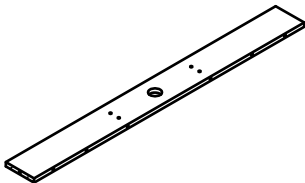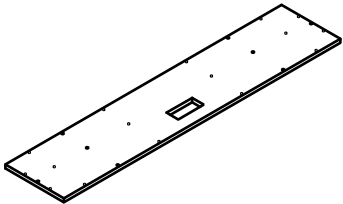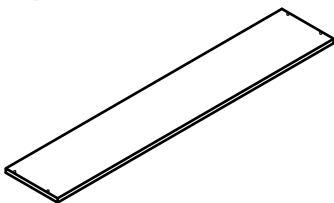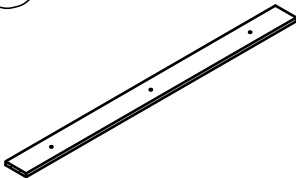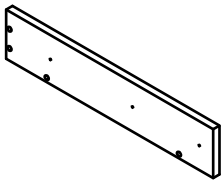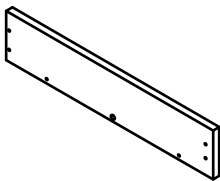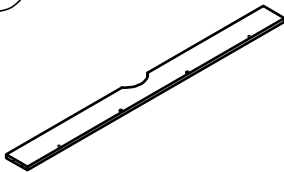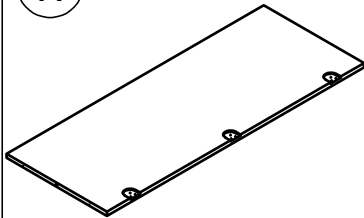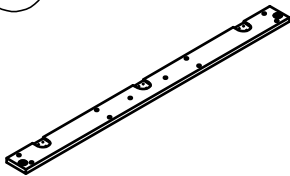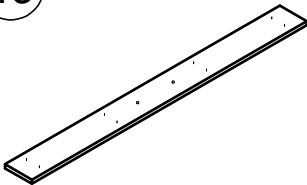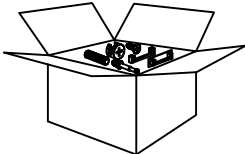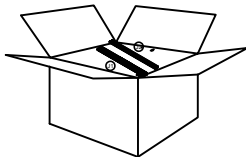PART LIST








33 1PC 	34 1PC 	35 1PC 	36 1PC 
37 1PC 	38 1PC 	39 1PC 	40 1PC 
41 1PC 	42 1PC 	43 2PCS 	44 1PC 
45 1PC 	46 1PC 	47 1PC 	48 1PC 
49 1PC 	 HARDWARE		

HARDWARE LIST

Please check you have all the panels listed below

Note: the quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than required.

BOX:3/3

A  Cam Bolt 122pcs	B  Cam Lock 122pcs	C  Ø8x40 Dowel 68 pcs	D  #3.5x35mm Screw 78pcs
E  #3.5x20mm Screw 31pcs	F  #3.5x12mm Screw 153pcs	G  Handle 7pcs	H  M4x25mm Screw 14pcs
I  20pcs	J  Drawer slide 14pcs	K  2pcs	L  8pcs
M  4pcs Ø4x265mm Round Bar	N  Hinge 03 pcs	O  Hinge 03 pcs	P  1pc
Q  1pc Tool Not Supplied			

Before Installation








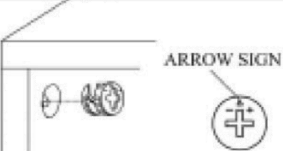
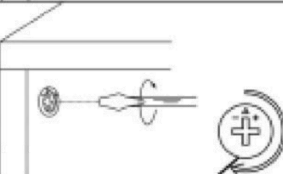
Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.



If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions

		Insert Cam Bolt into hole as shown in diagram A.	
		Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
		Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

STEP 1

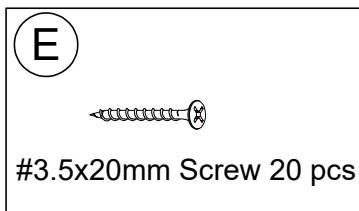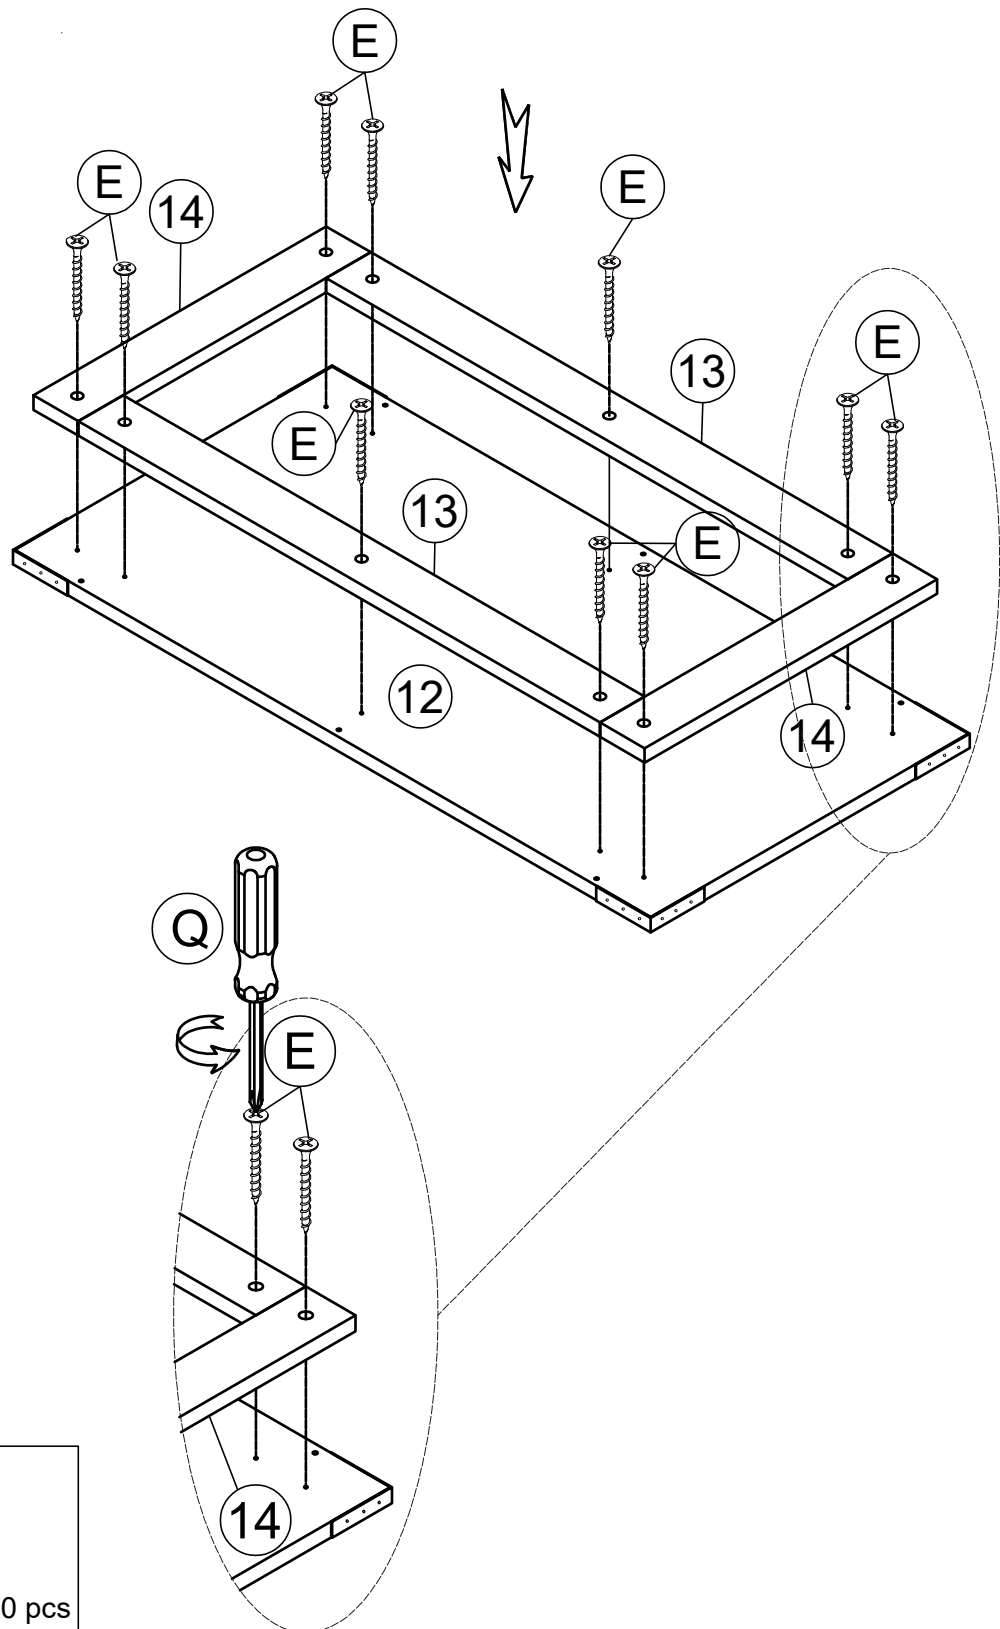X2







STEP 2


X2

back front



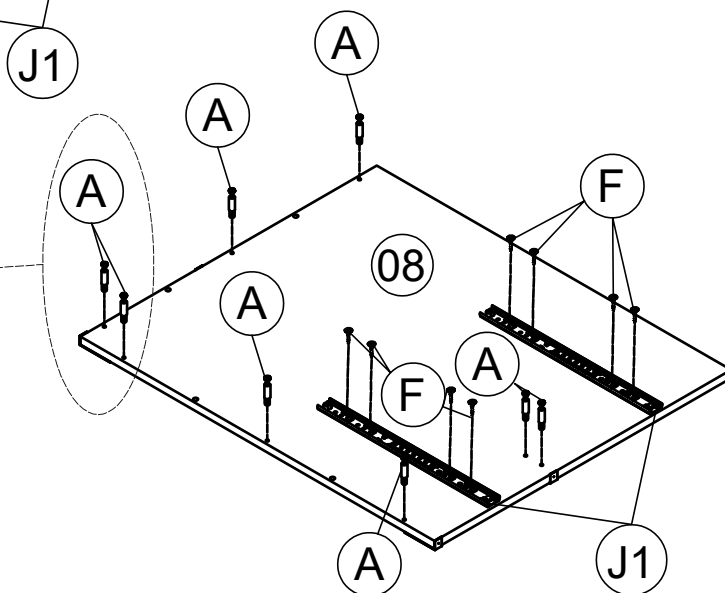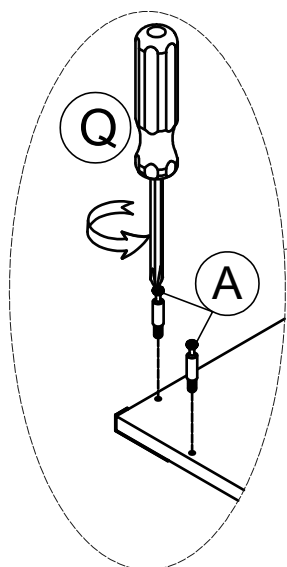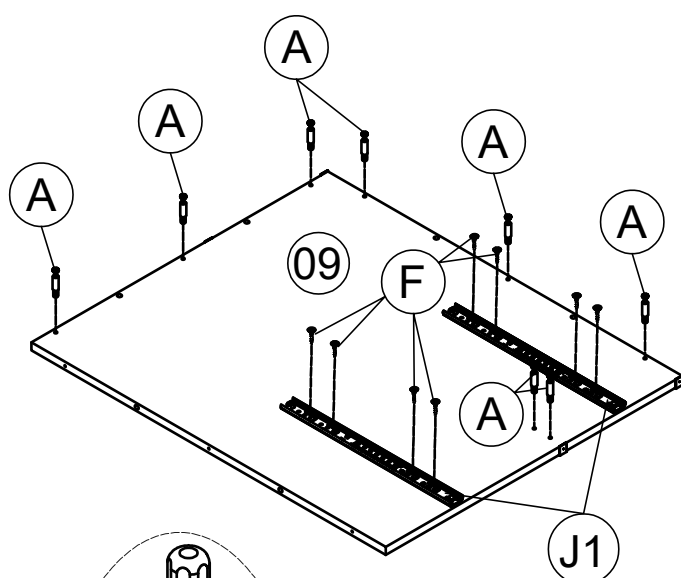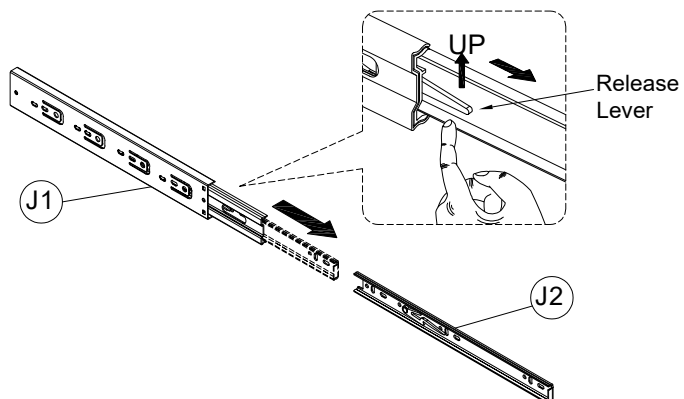
J1




A  Cam Bolt 32 pcs	F  #3.5x12mm Screw 32pcs	J1  Drawer slide 8pcs
---	---	---

STEP 3

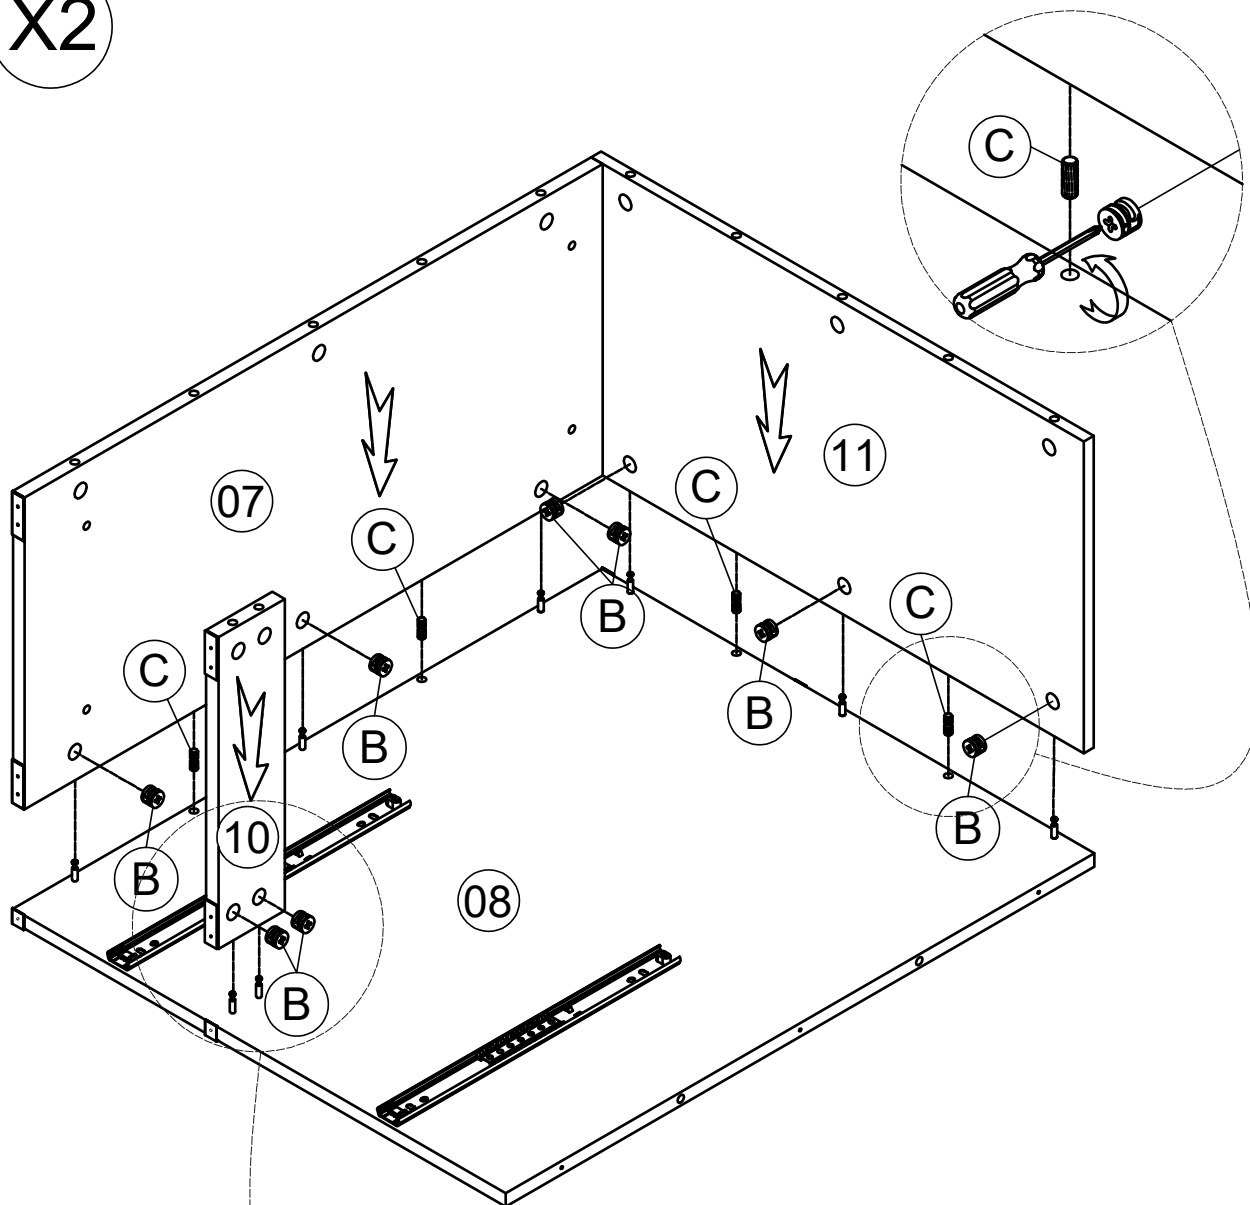X2




B  Cam Lock 16pcs	C  Ø8x40 Dowel 8 pcs
---	--

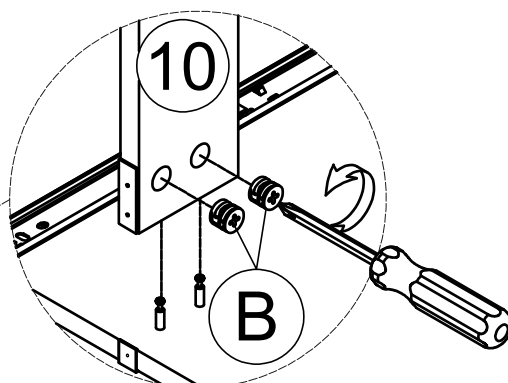


STEP 4

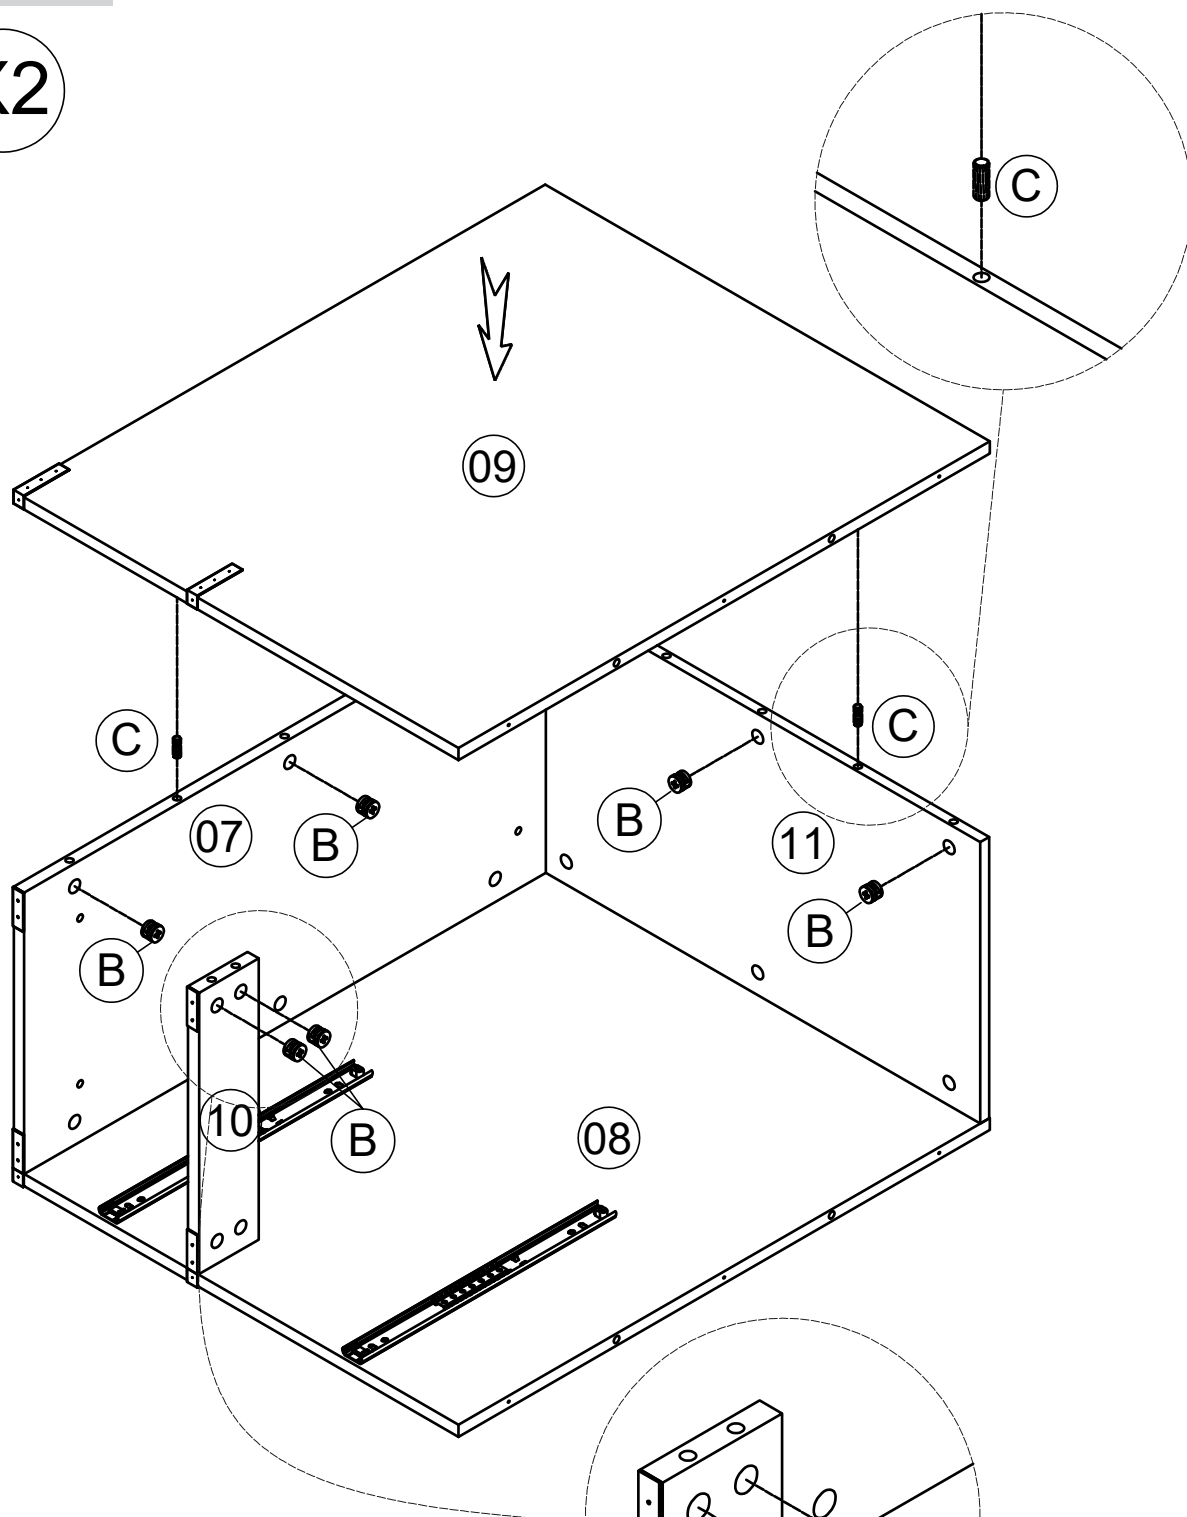X2





B  Cam Lock 16 pcs	C  Ø8x40 Dowel 8pcs
--	---

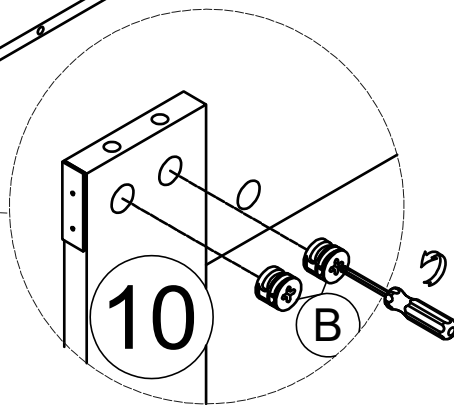

STEP 5

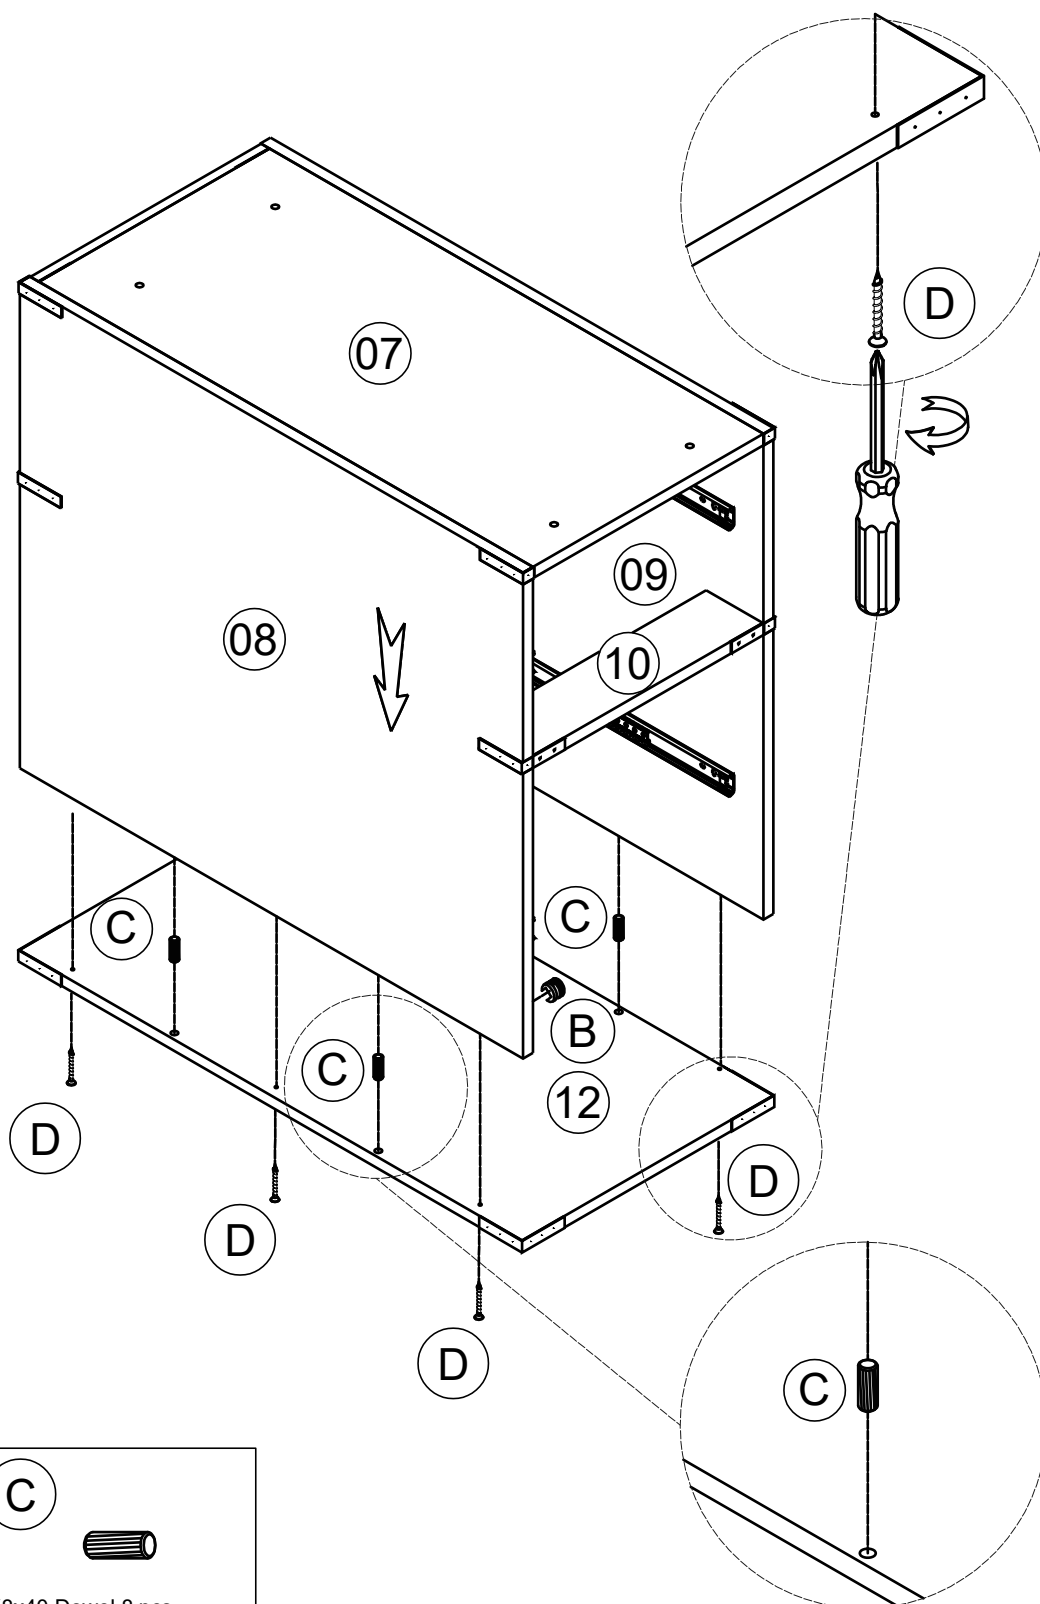

X2



(D)  #3.5x35mm Screw 12 pcs	(C)  Ø8x40 Dowel 8 pcs
--	---

STEP 6

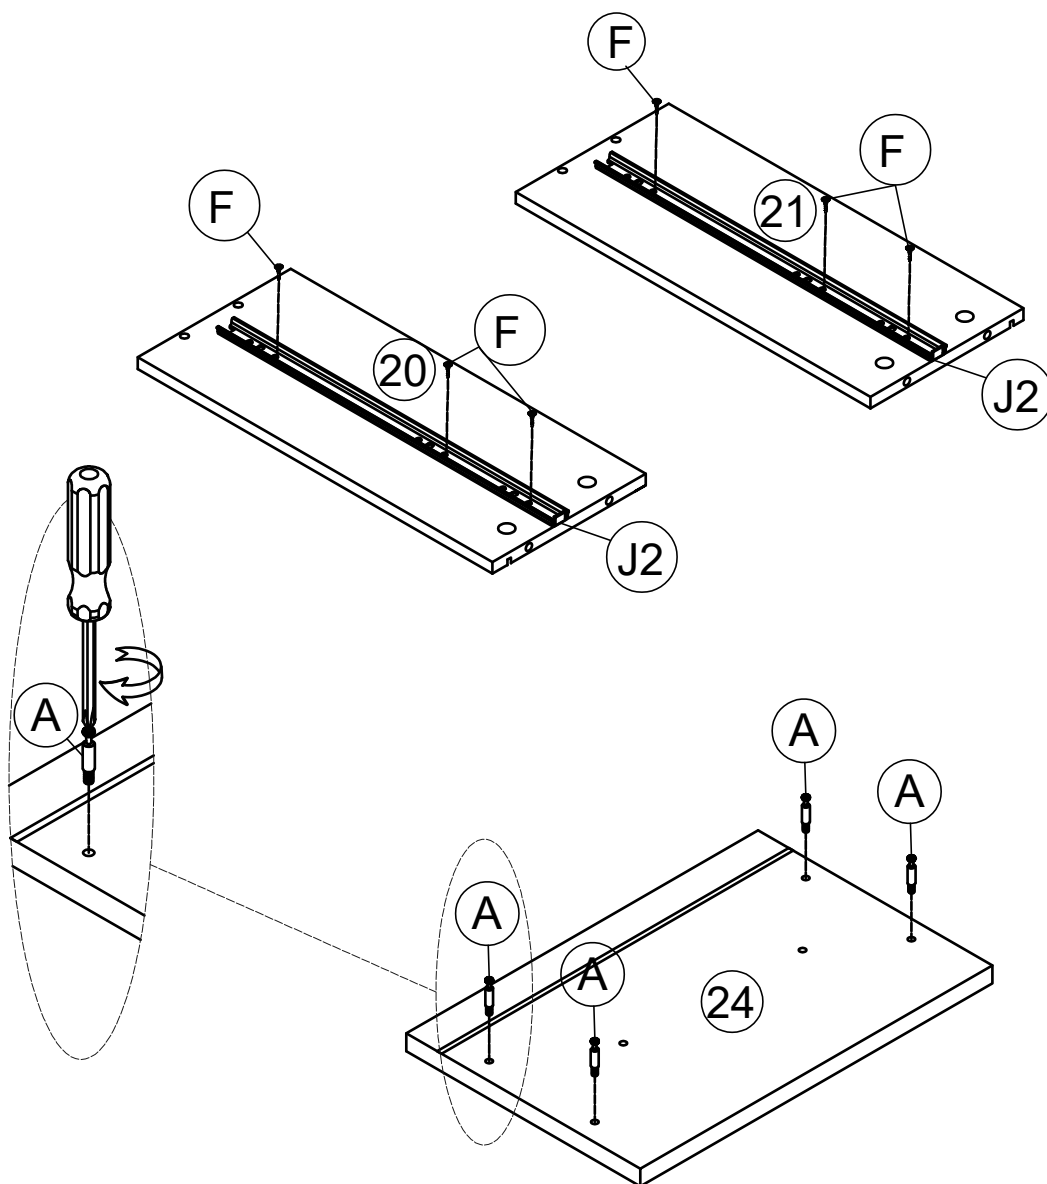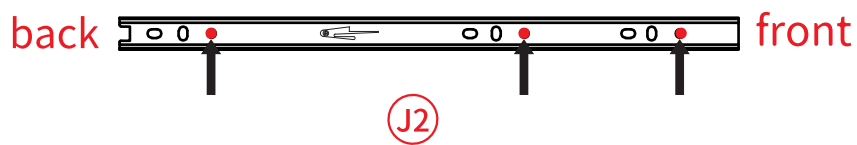X2



1




2


A  Cam Bolt 8pcs	F  #3.5x12mm Screw 12pcs	J2  Drawer slide 4pcs
---	---	---

STEP 7

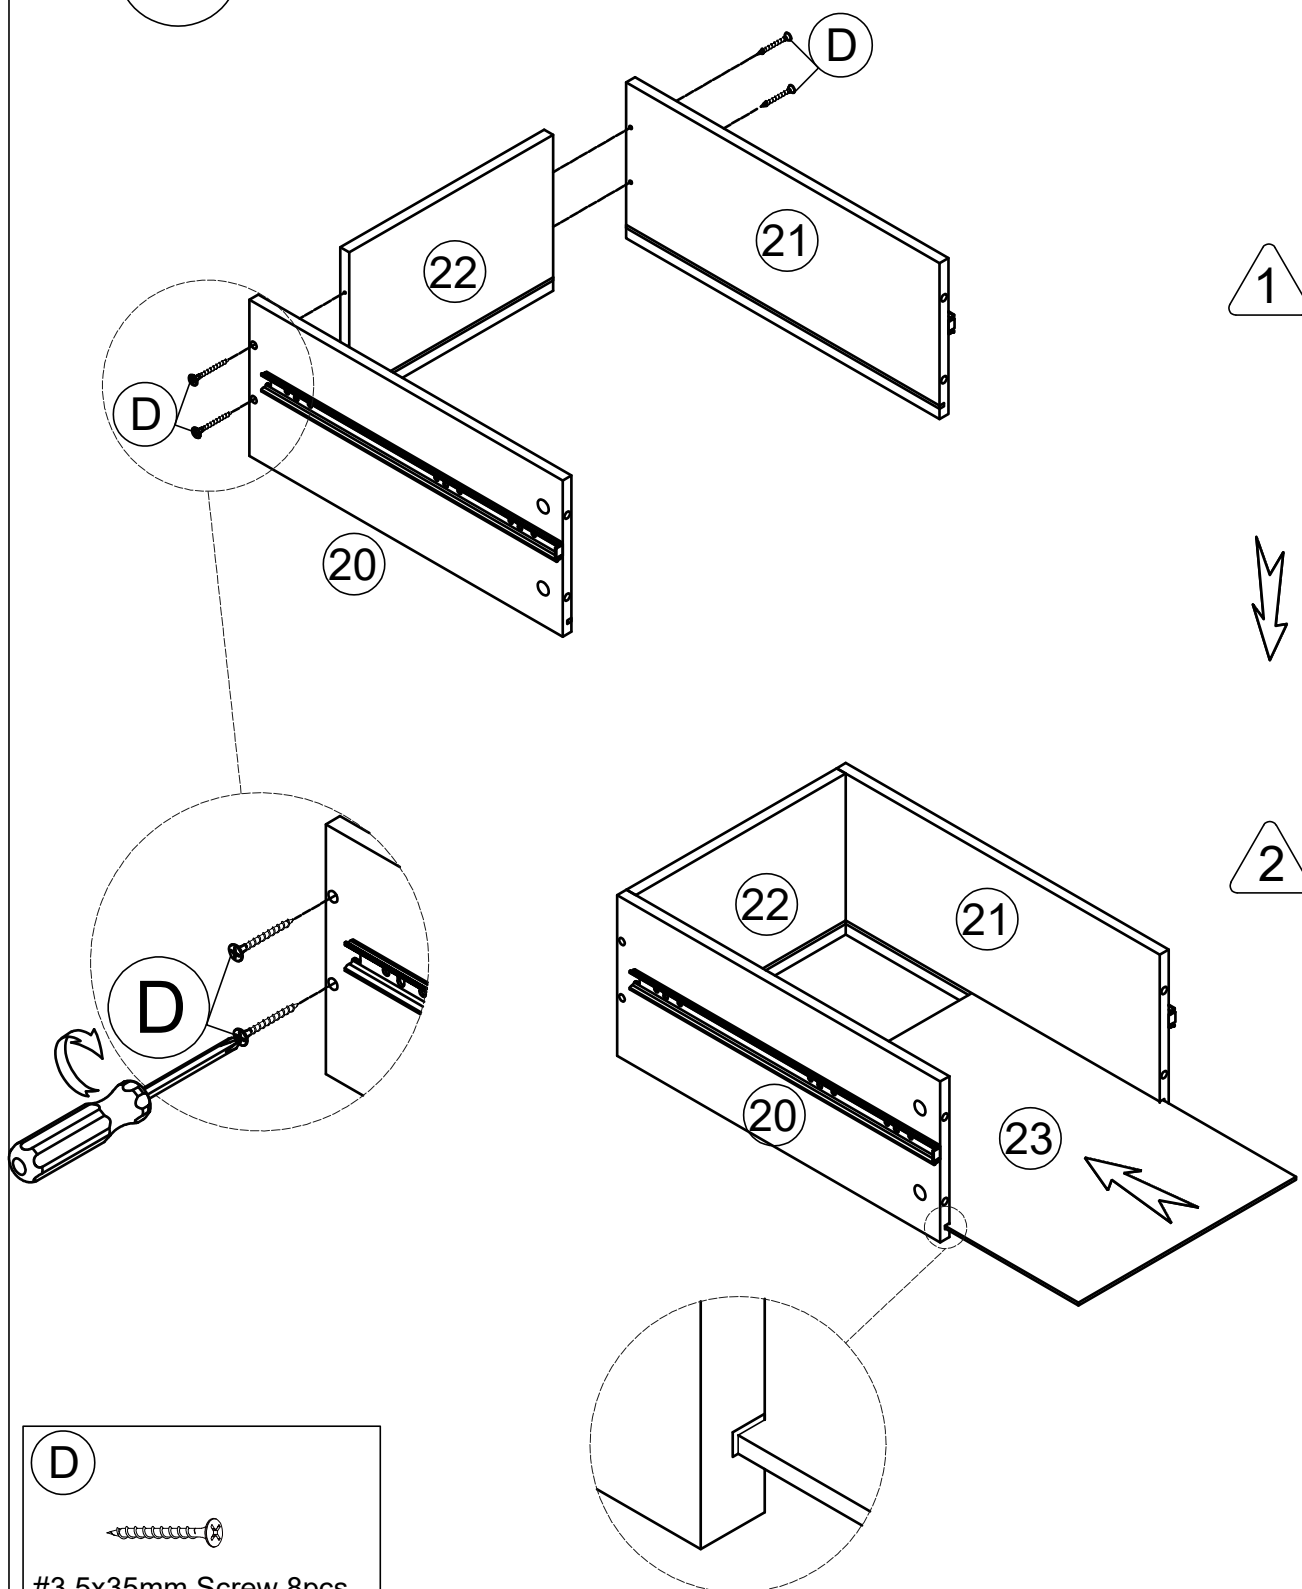X2





D



#3.5x35mm Screw 8pcs



STEP 8

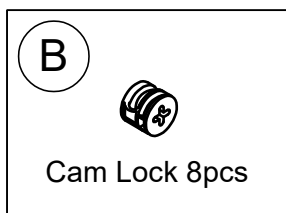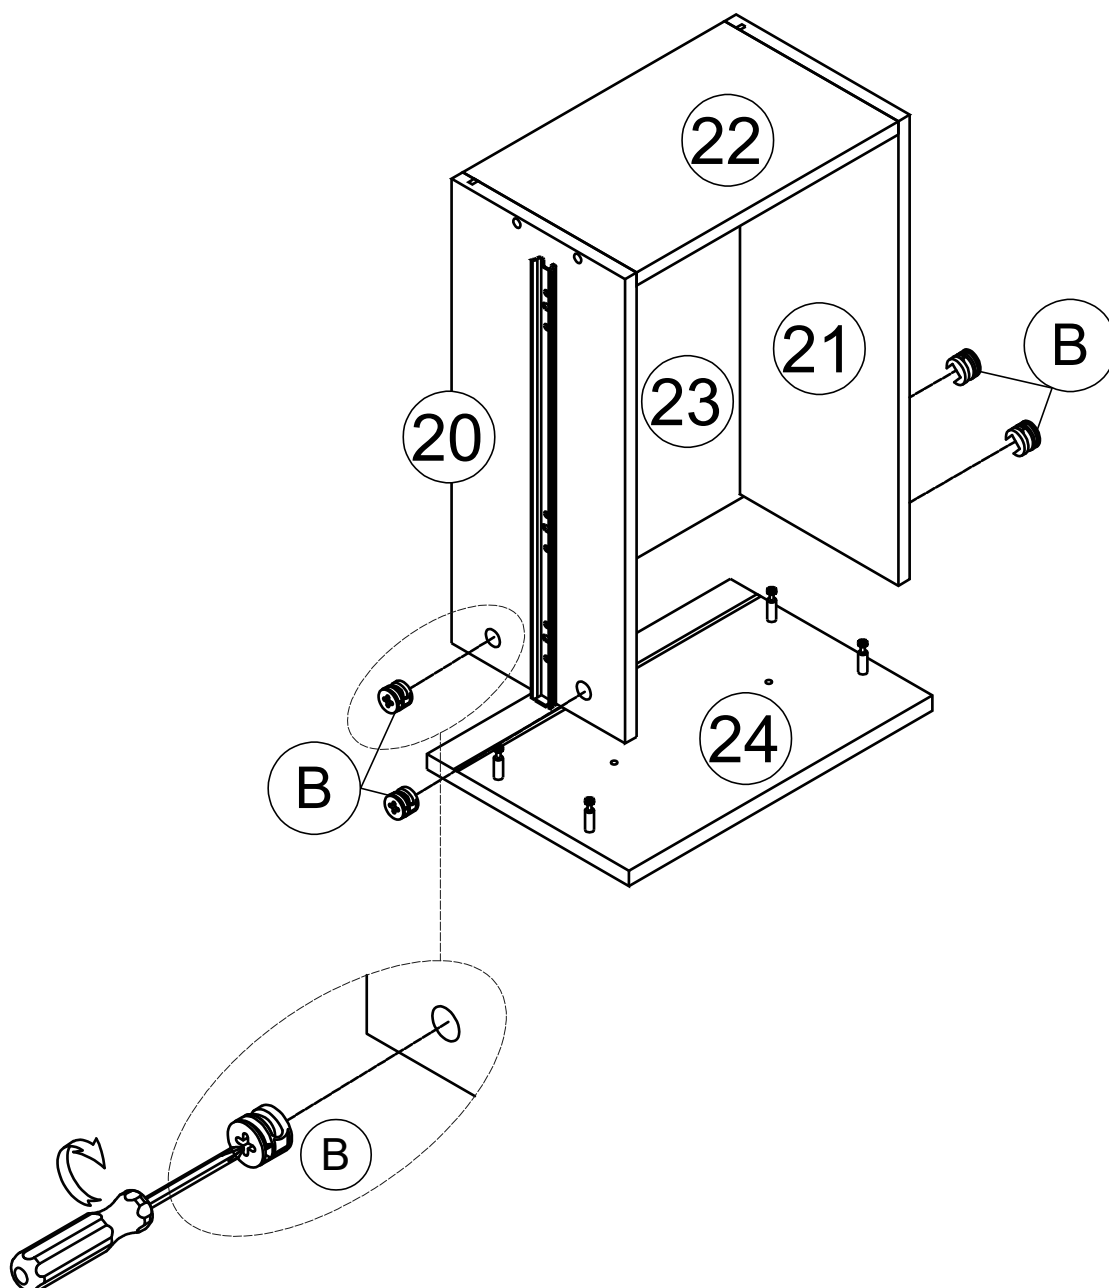X2



STEP 9

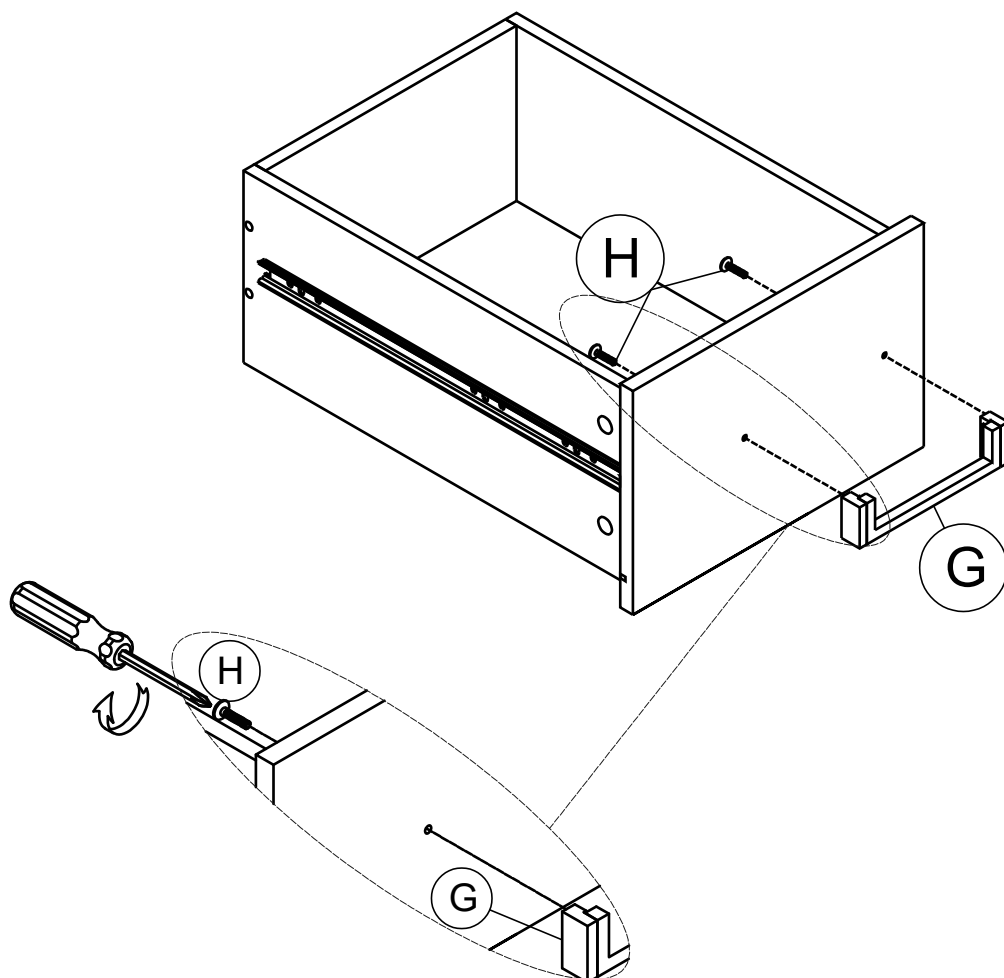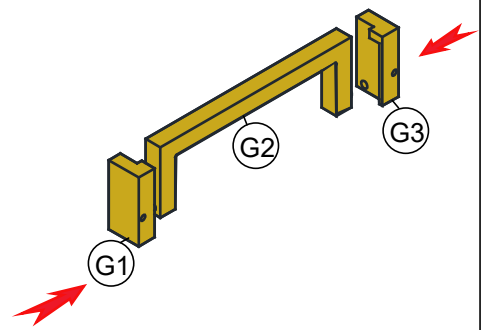X2




H



M4x25mm Screw 4pcs





G



Handle 2pcs

STEP 10

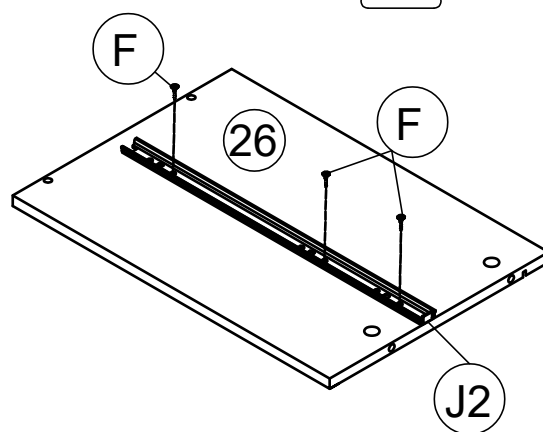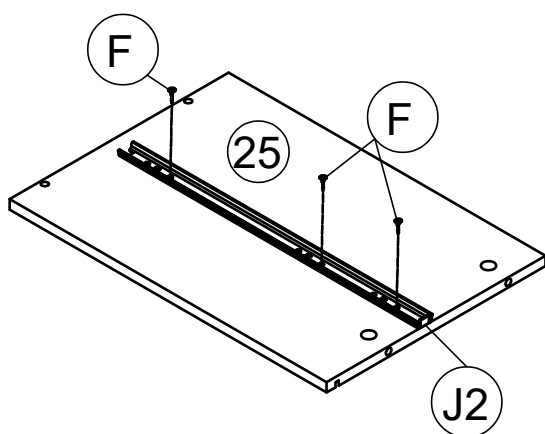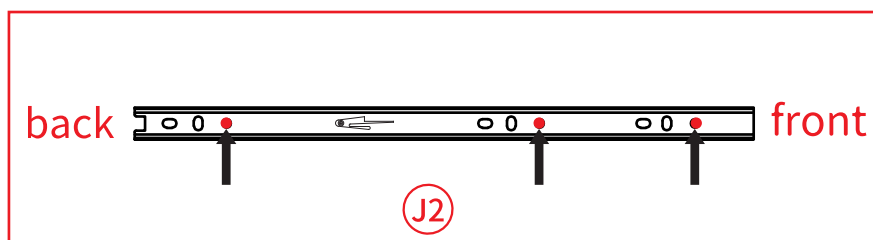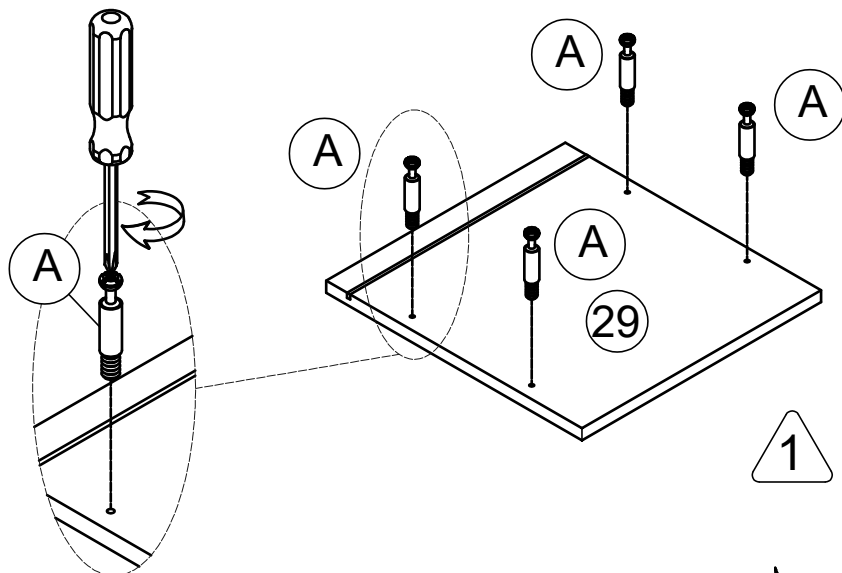
X2





(A)  Cam Bolt 8pcs	(F)  #3.5x12mm Screw 12 pcs	(J2)  Drawer slide 4pcs
---	--	---

STEP 11

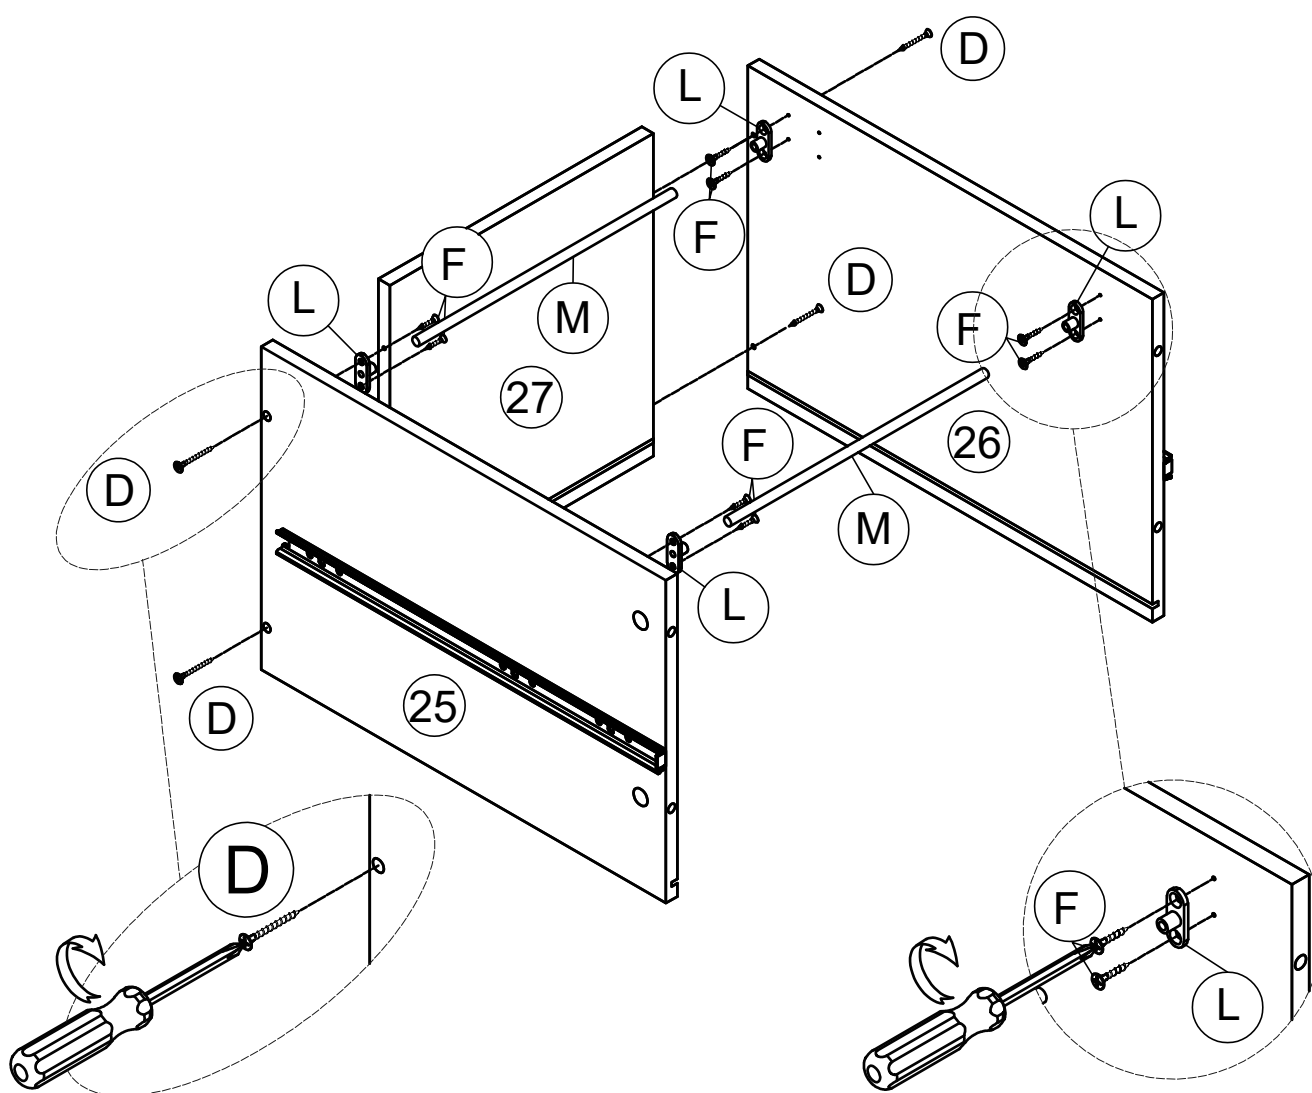
X2



(L)  8pcs	(M)  4pcs Ø4x265mm Round Bar	(D)  #3.5x35mm Screw 8pcs	(F)  #3.5x12mm Screw 16 pcs
--	---	--	--

STEP 12

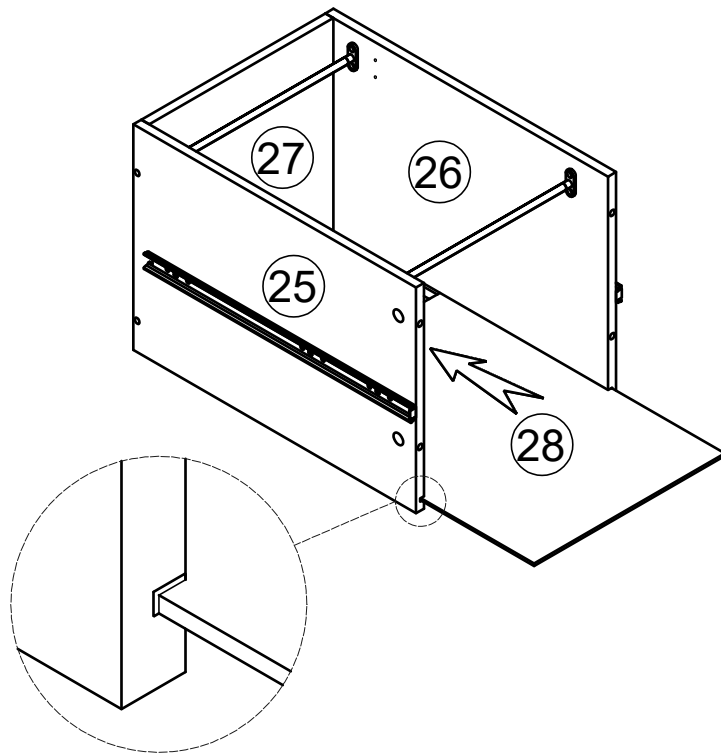
X2



1



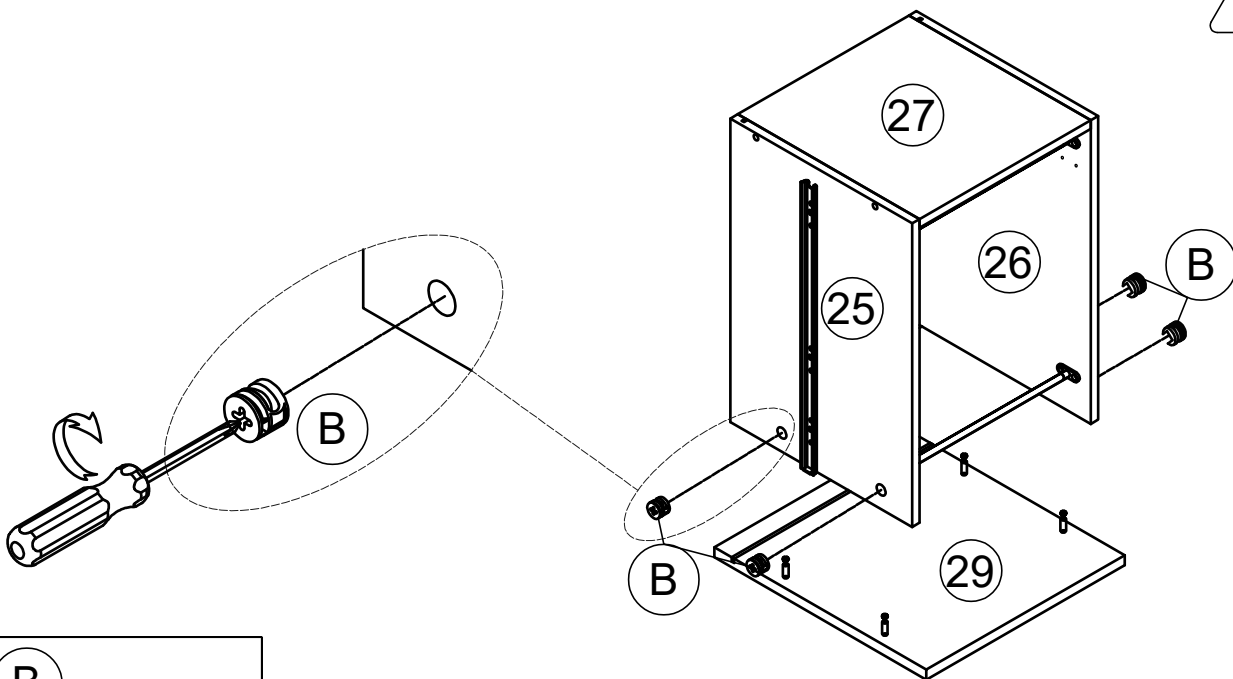2





B




Cam Lock 8pcs





STEP 13

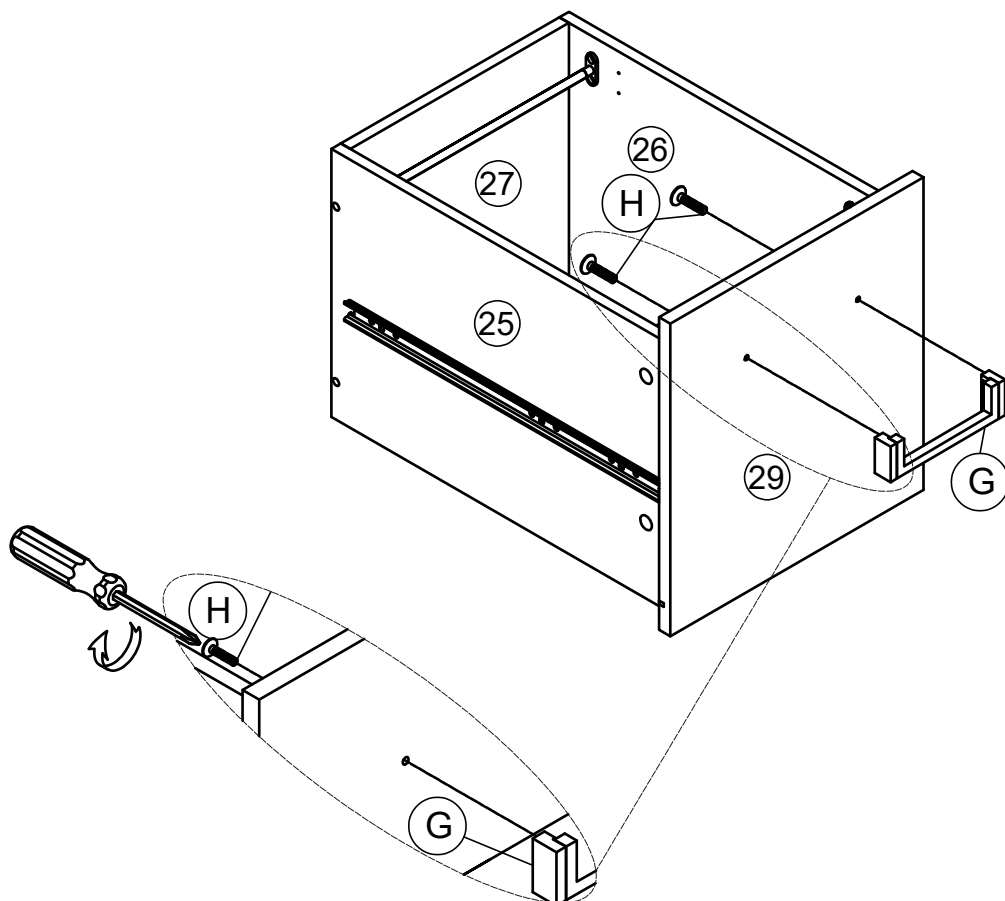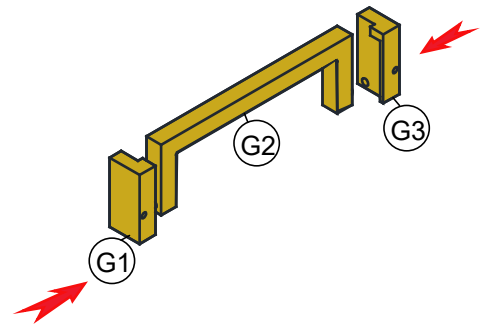X2





(H)  M4x25mm Screw 4pcs	(G)  Handle 2pcs
--	---

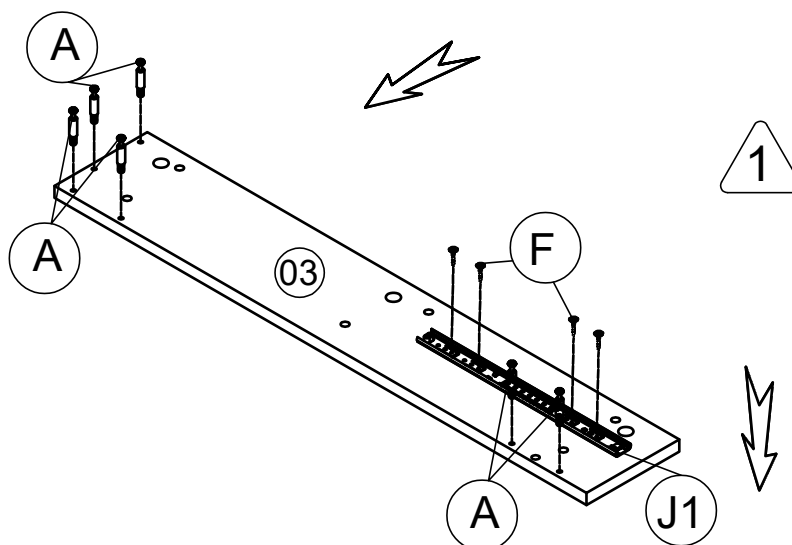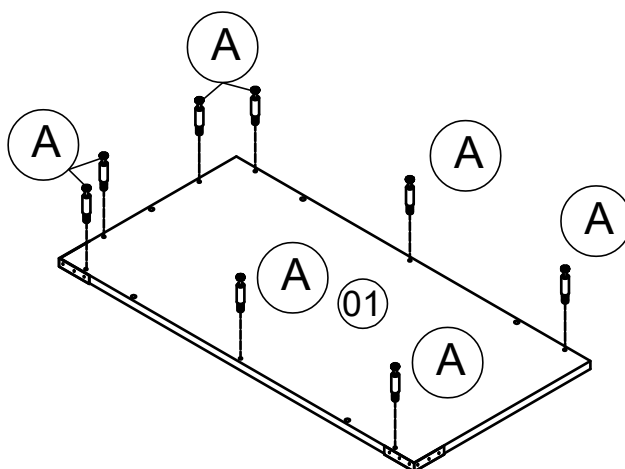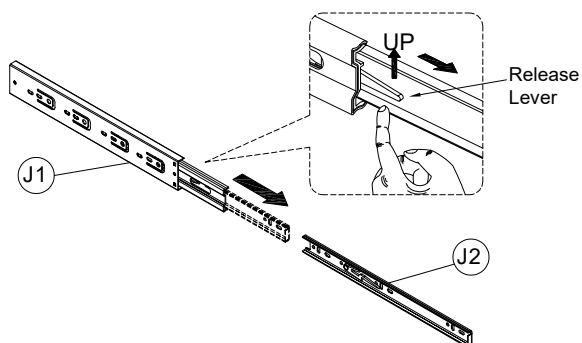STEP 14




1

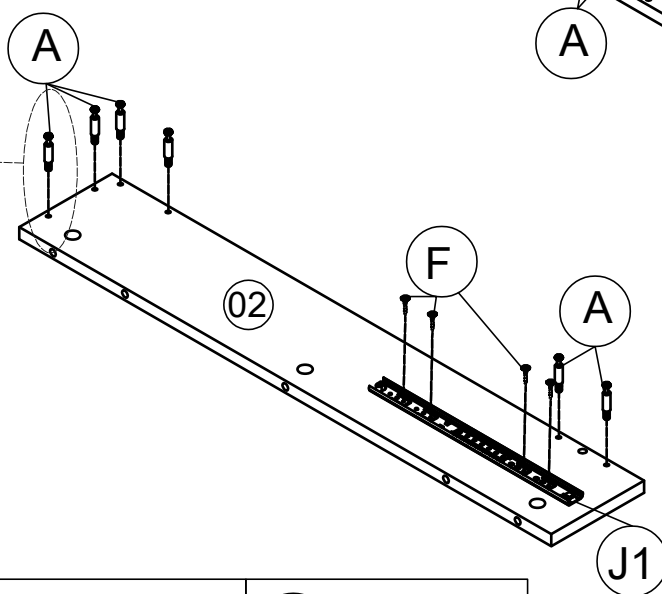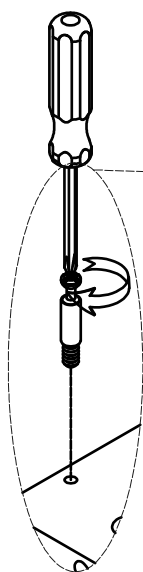

2


A  Cam Bolt 20pcs	F  #3.5x12mm Screw 8 pcs	J1  Drawer slide 2pcs
--	---	---

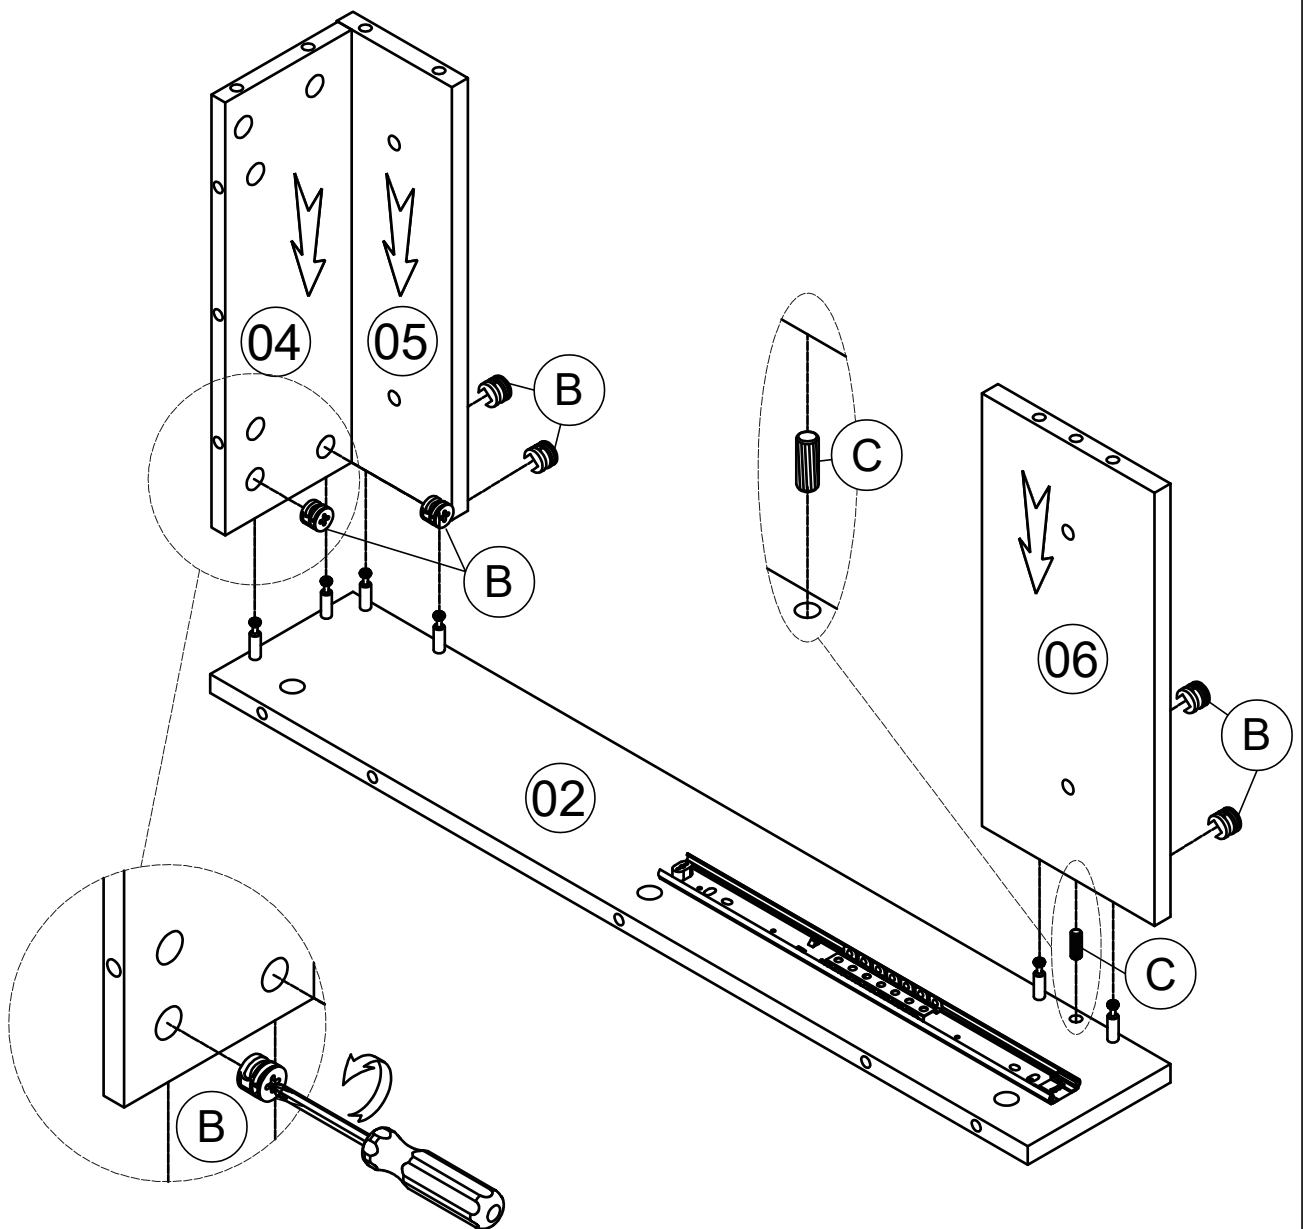STEP 15





B  Cam Lock 6pcs	C  Ø8x40 Dowel 1 pc
--	---

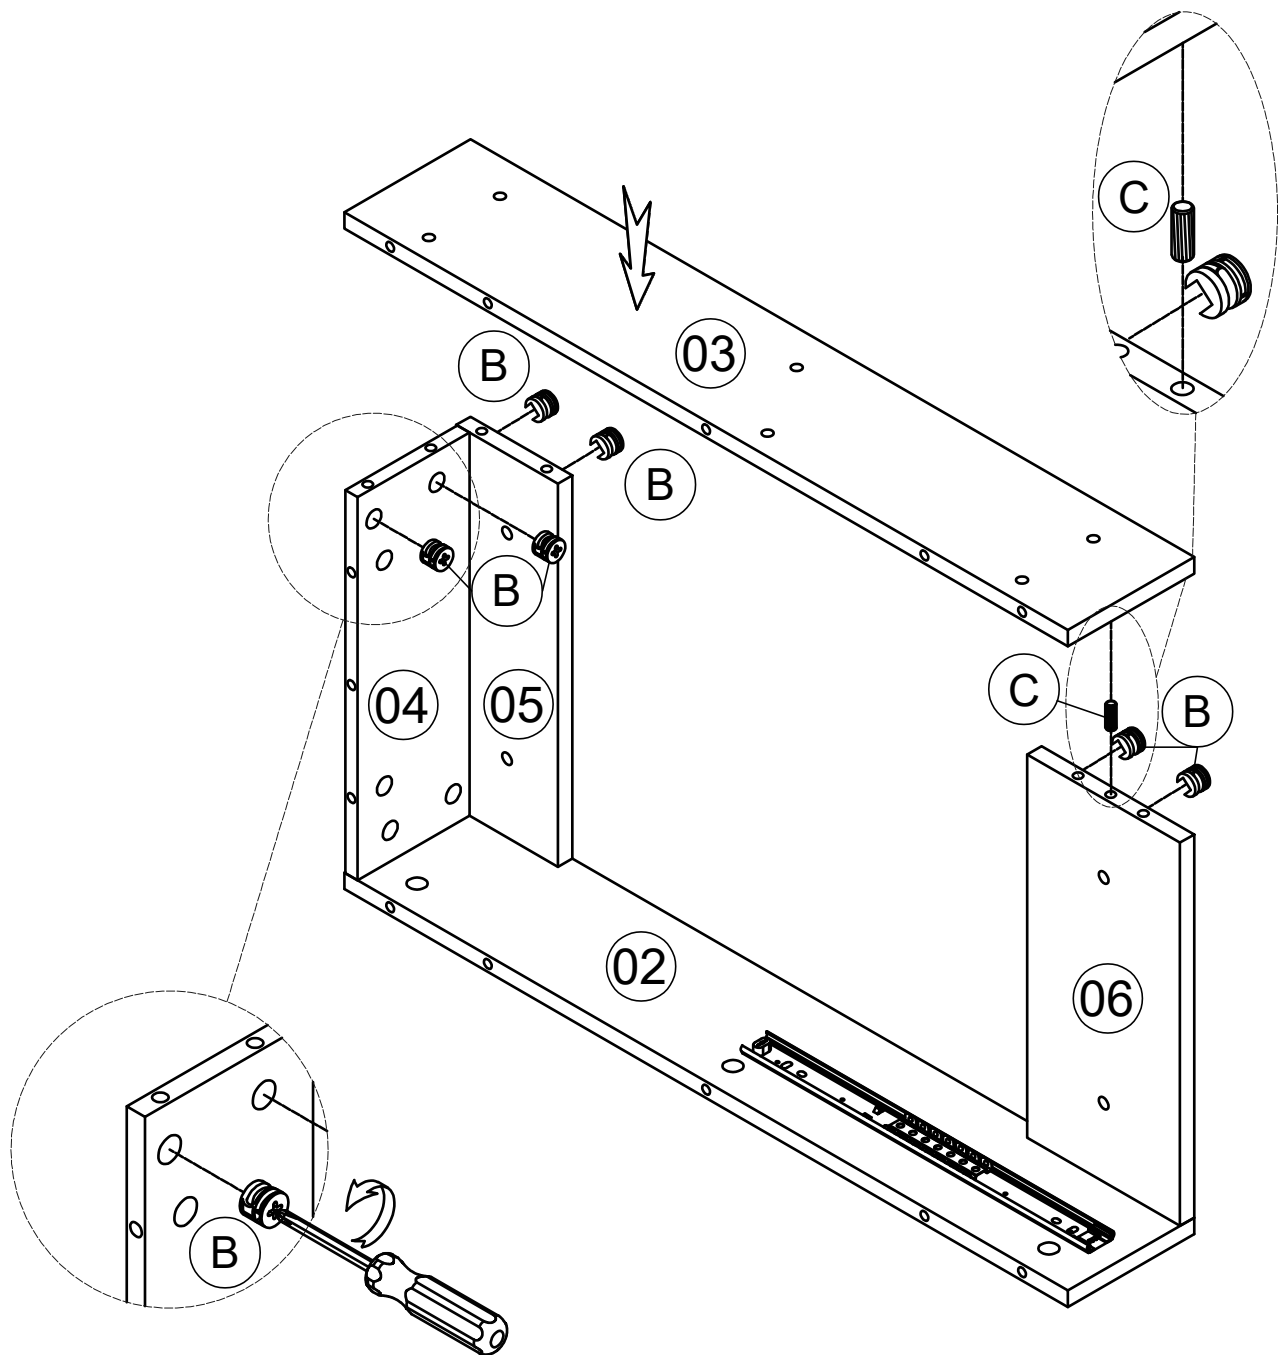STEP 16





B  Cam Lock 6pcs	C  Ø8x40 Dowel 1 pc
--	---

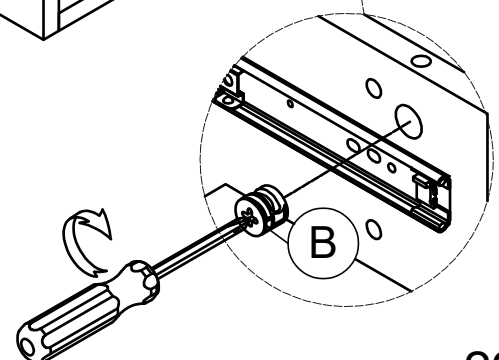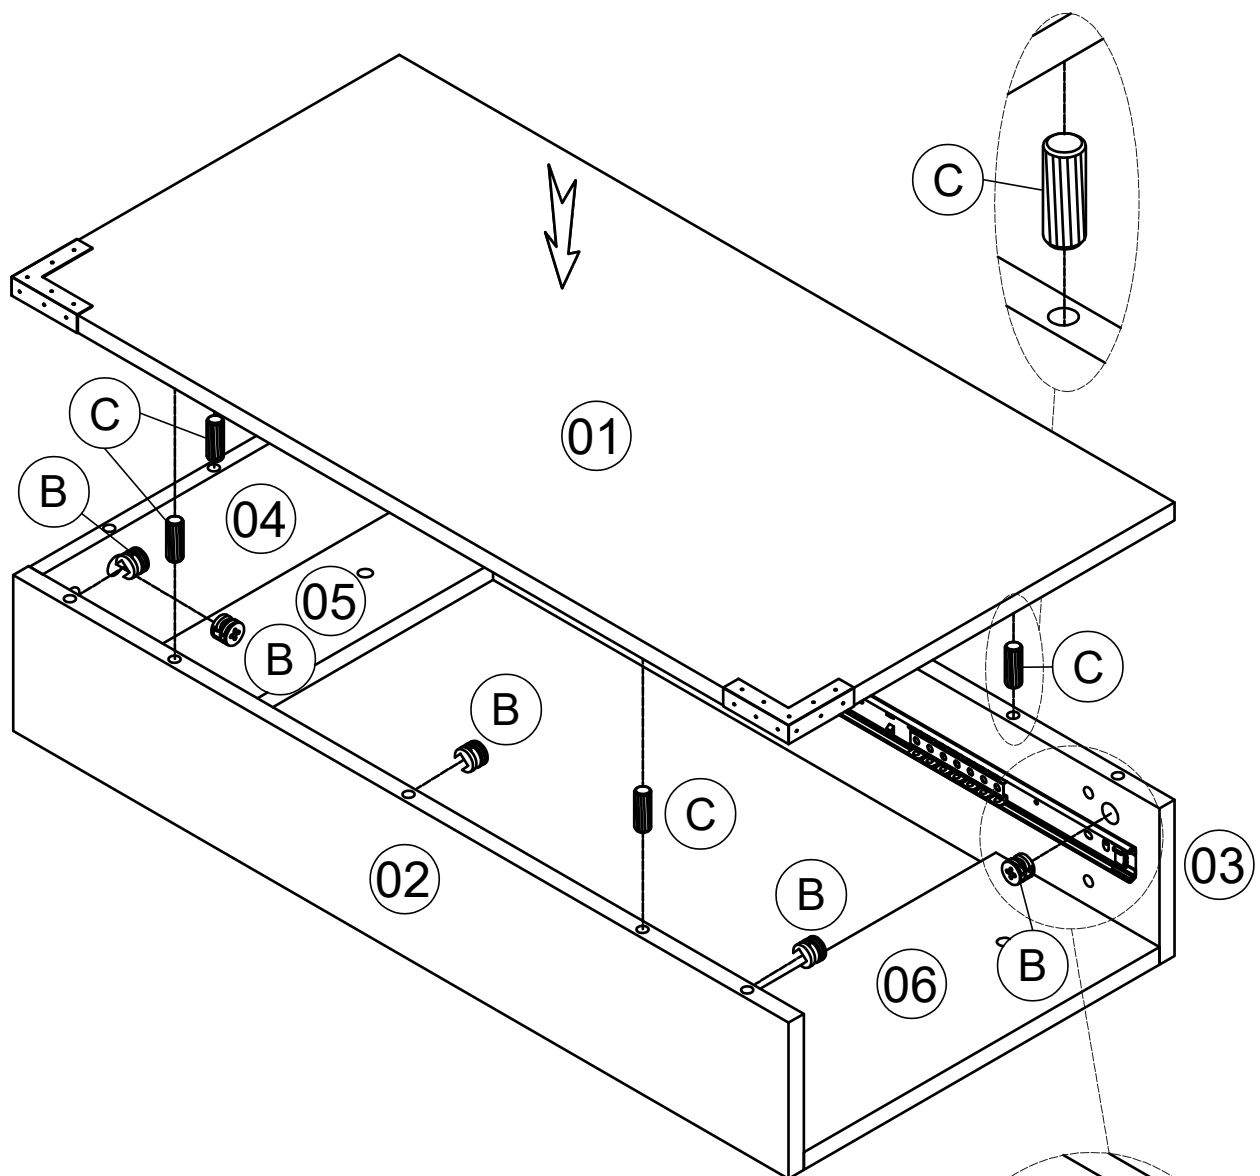STEP 17




B  Cam Lock 8pcs	C  Ø8x40 Dowel 5 pcs
--	--

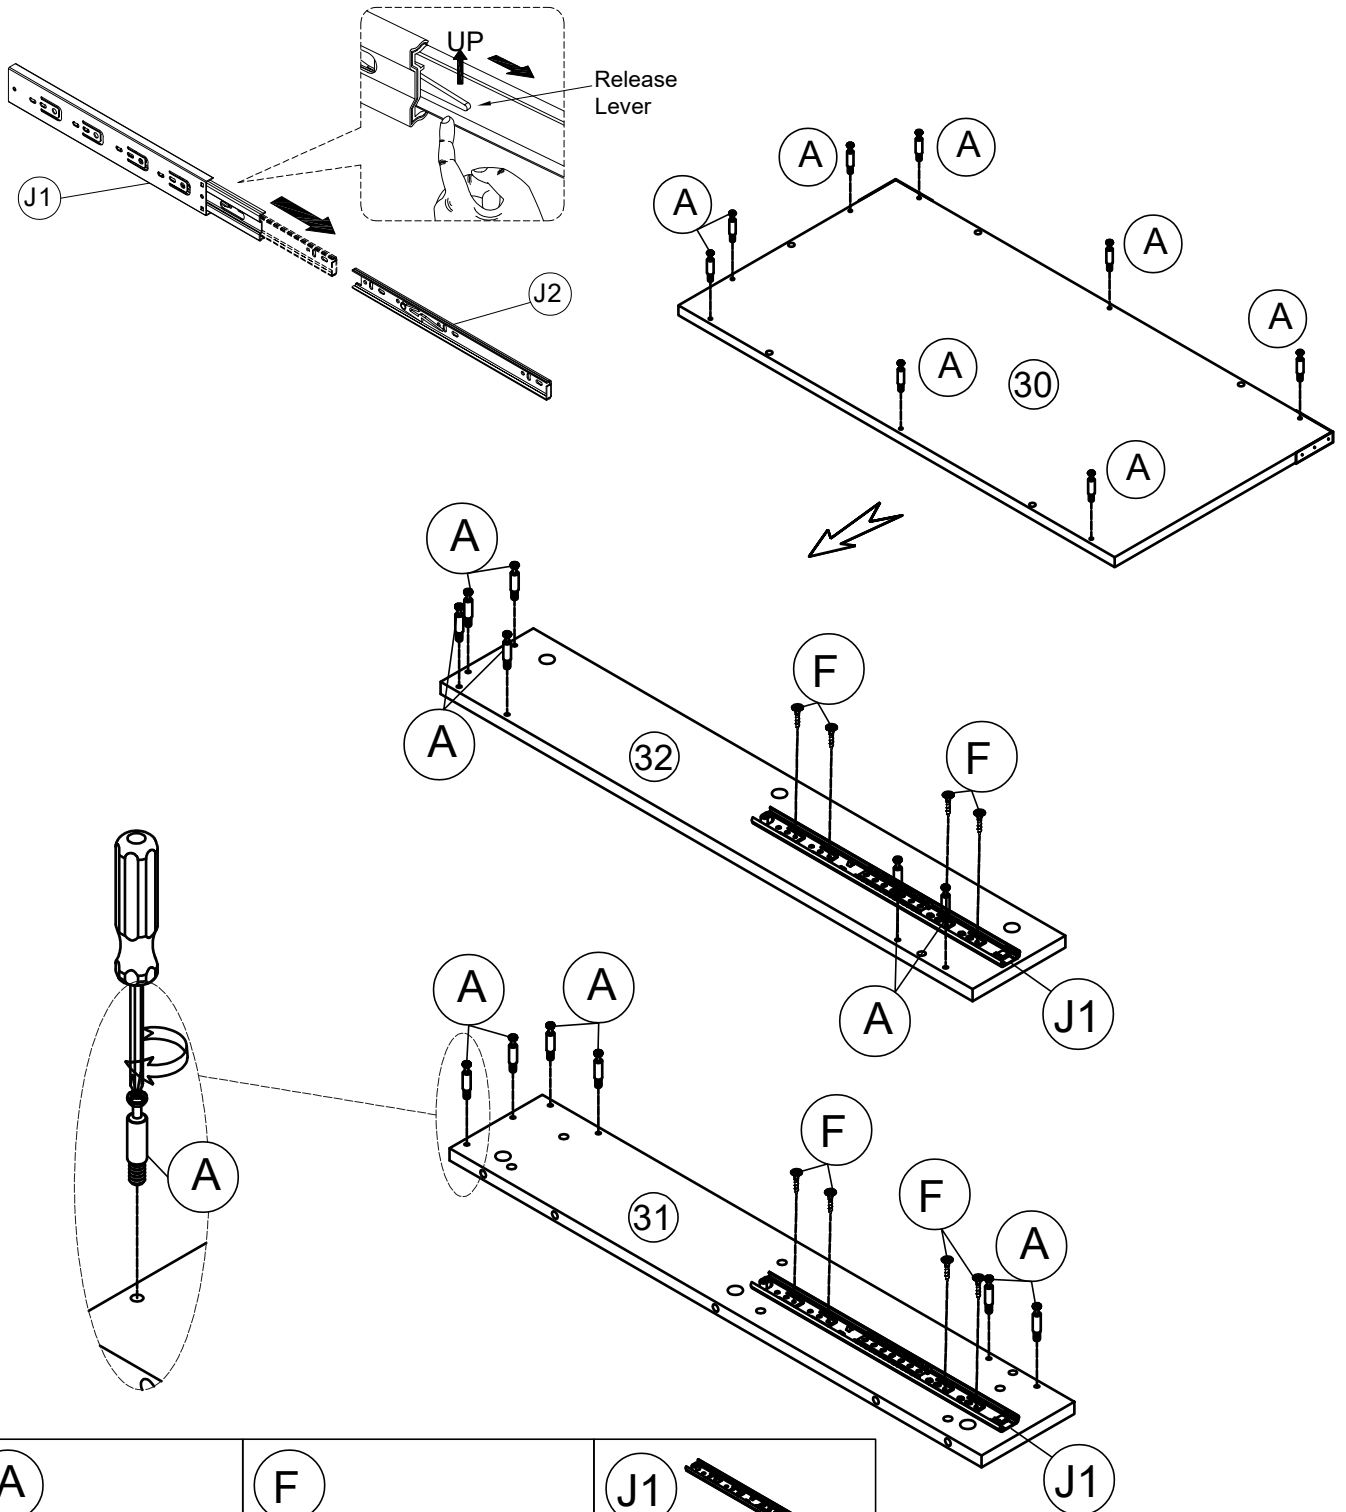STEP 18




A  Cam Bolt 20pcs	F  #3.5x12mm Screw 8pcs	J1  Drawer slide 2pcs
--	--	---

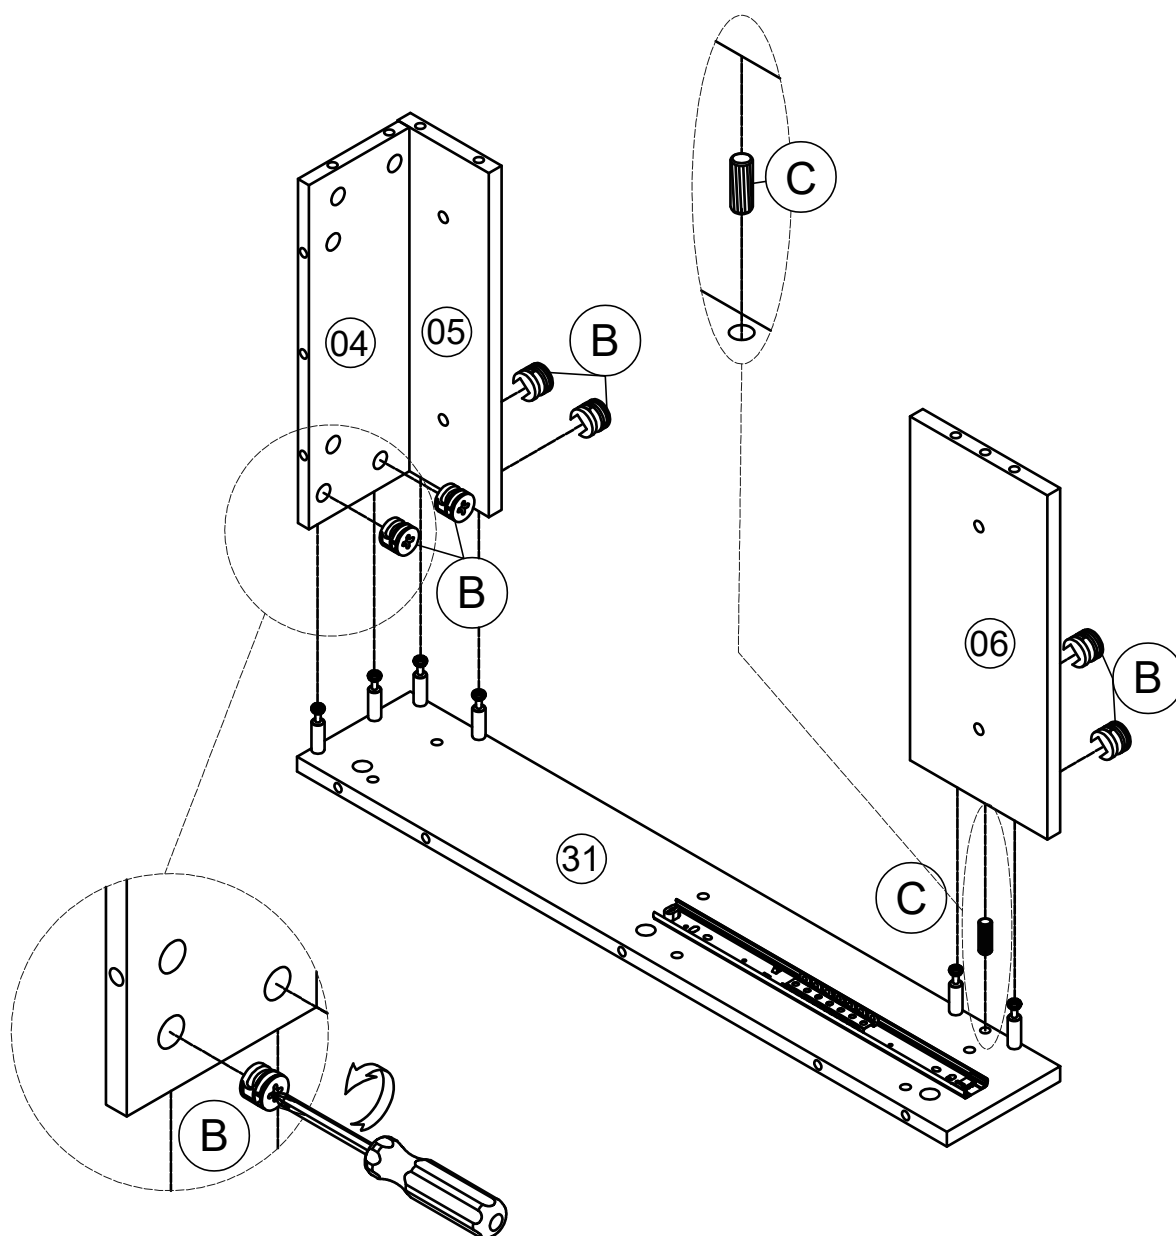STEP 19




B  Cam Lock 6pcs	C  Ø8x40 Dowel 1 pc
--	---

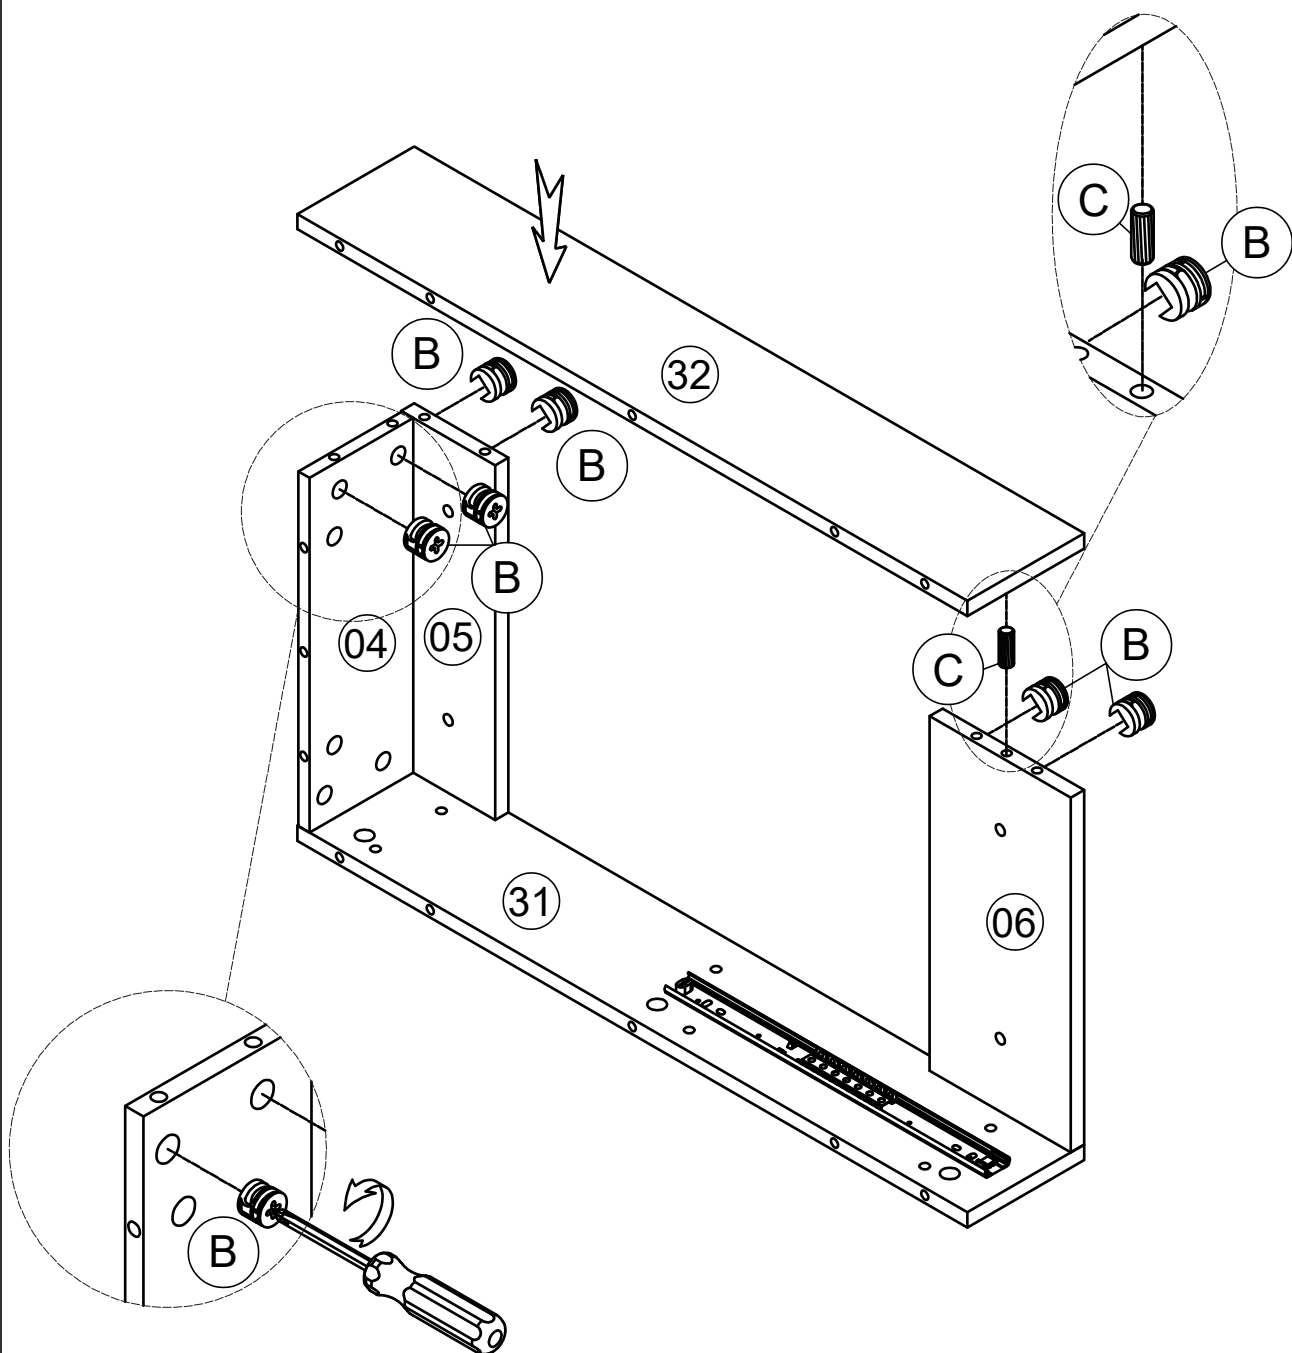STEP 20




B  Cam Lock 6pcs	C  Ø8x40 Dowel 1 pc
--	---

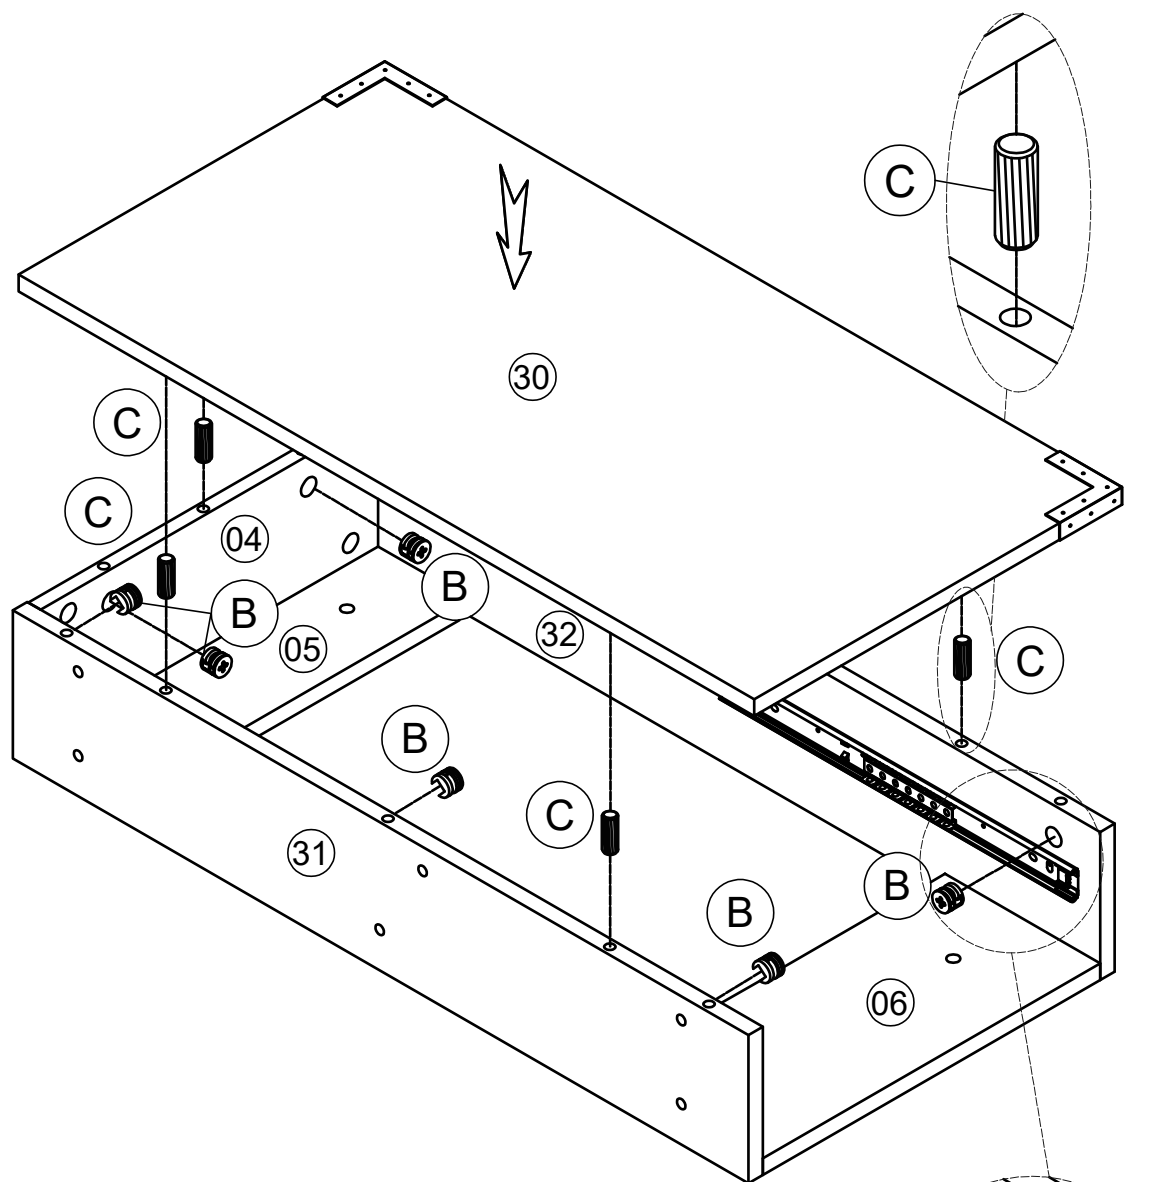STEP 21




B  Cam Lock 8pcs	C  Ø8x40 Dowel 5 pcs
--	--

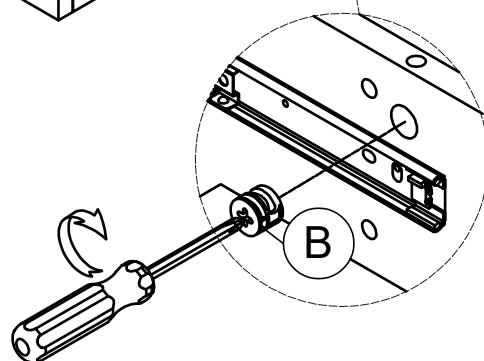


STEP 22

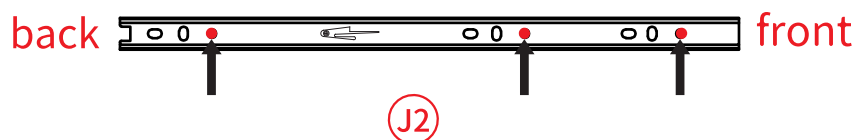
X2



1

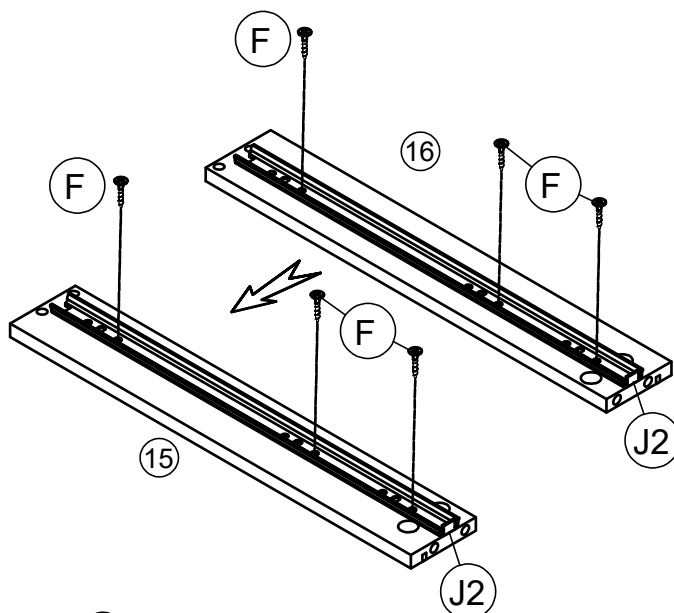


2

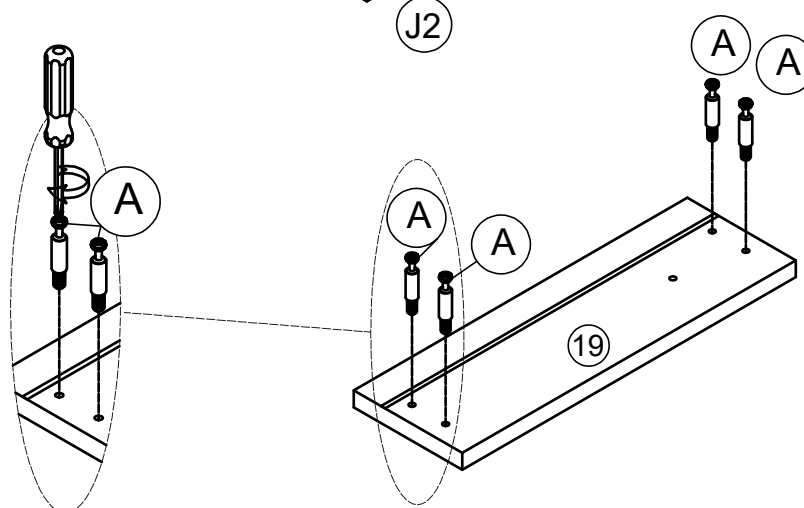


A  Cam Bolt 8pcs	F  #3.5x12mm Screw 12 pcs	J2  Drawer slide 4pcs
---	--	---

STEP 23

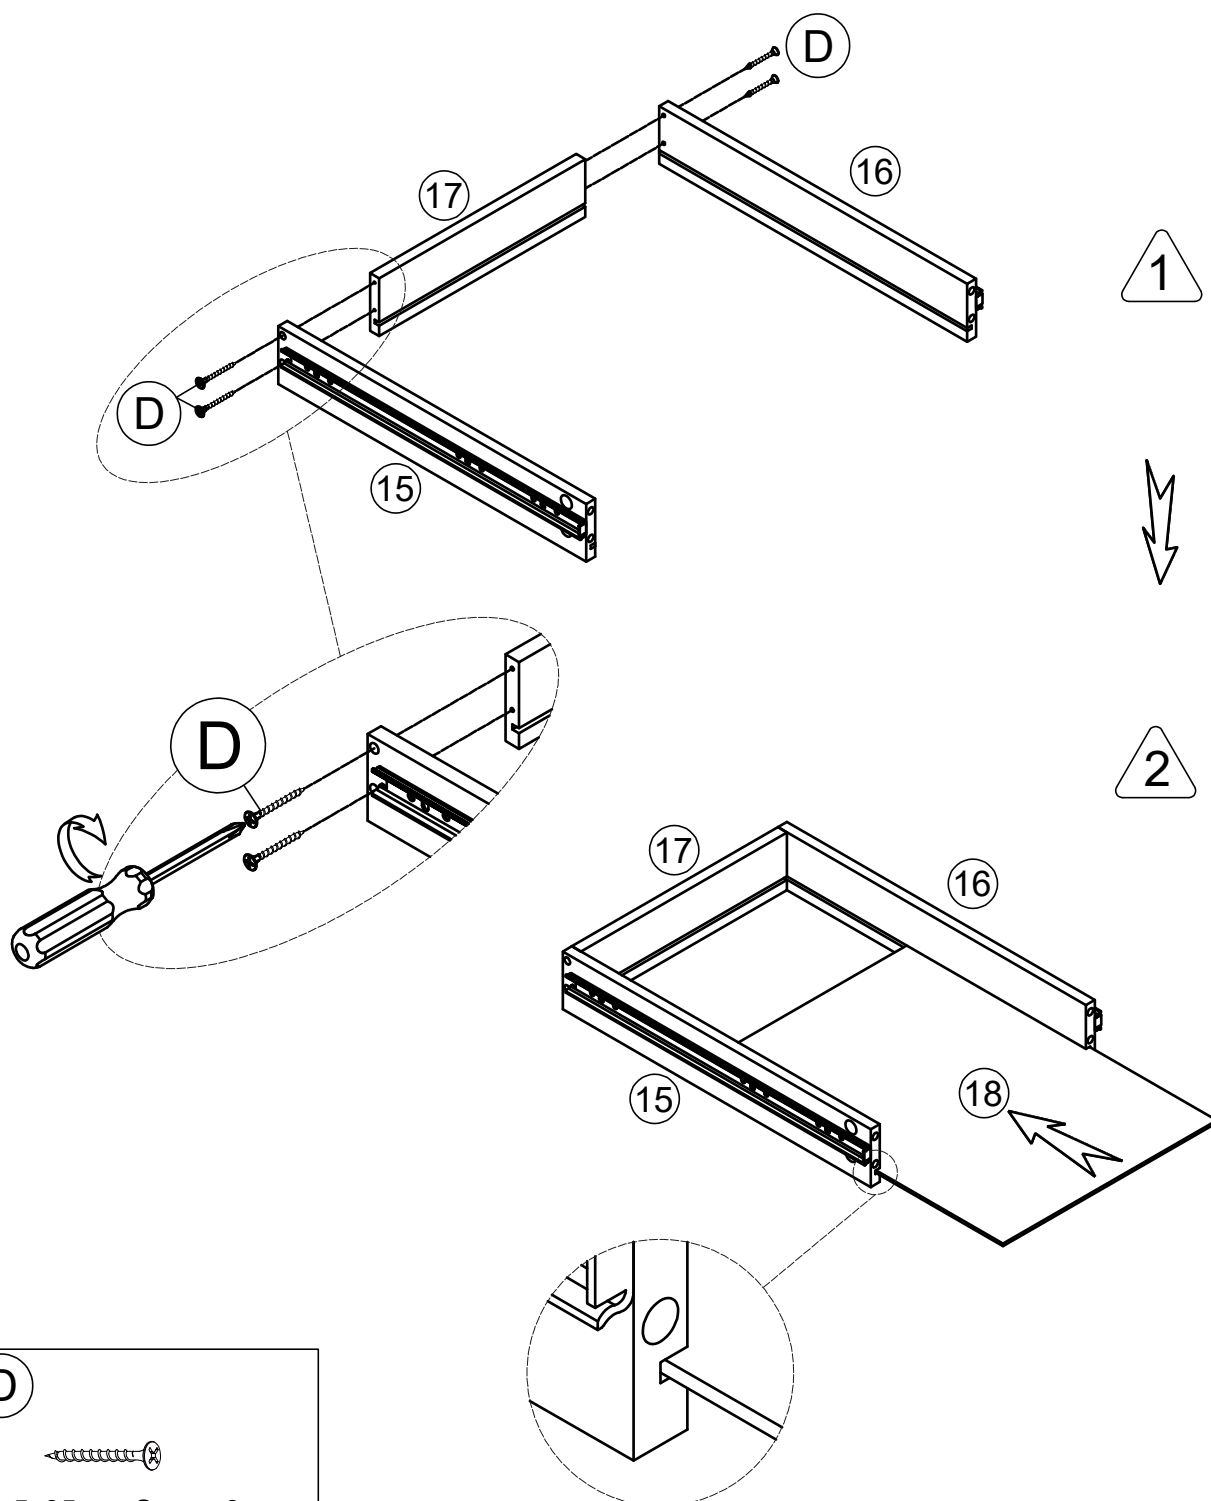X2





D




#3.5x35mm Screw 8pcs



STEP 24

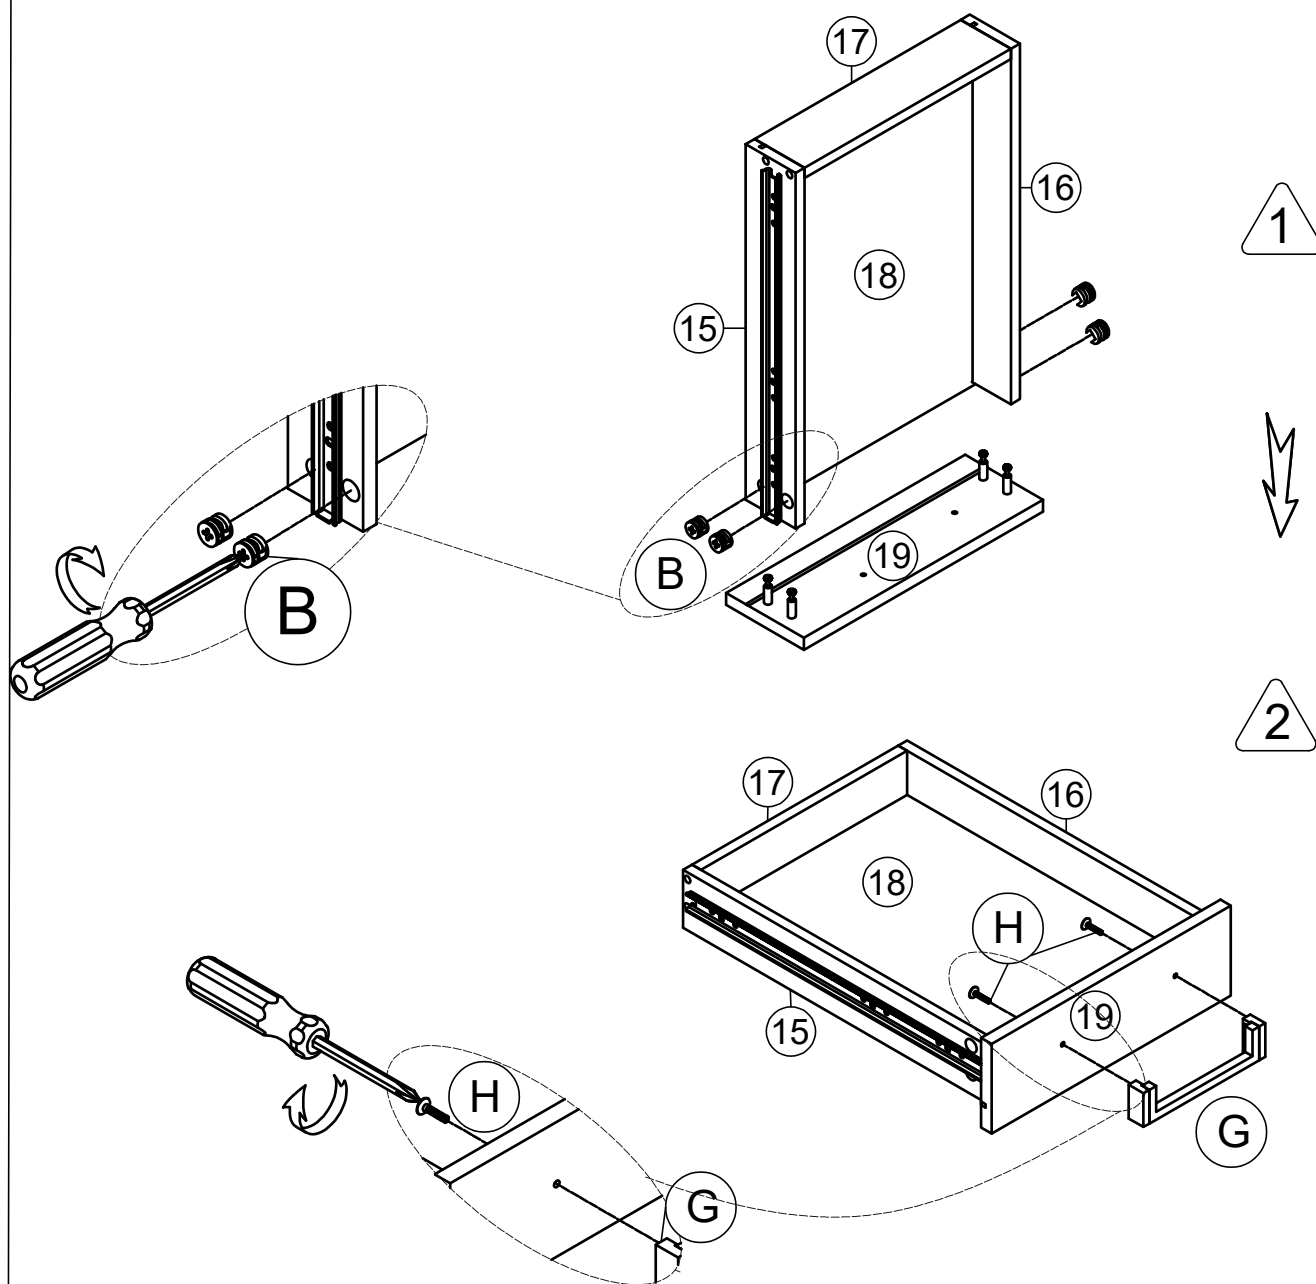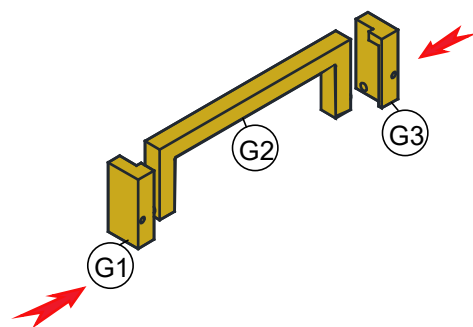X2




B  Cam Lock 8pcs	H  M4x25mm Screw 4pcs	G  Handle 2pcs
--	---	--

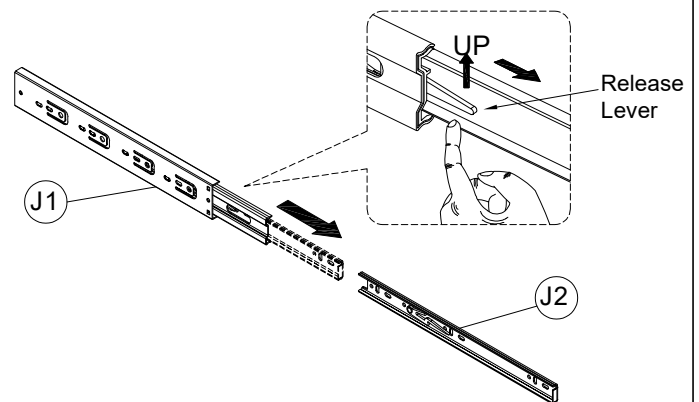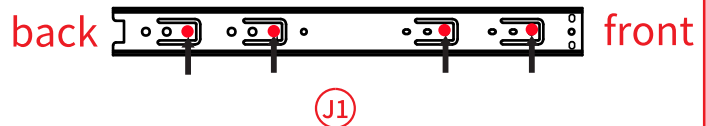
STEP 25



1

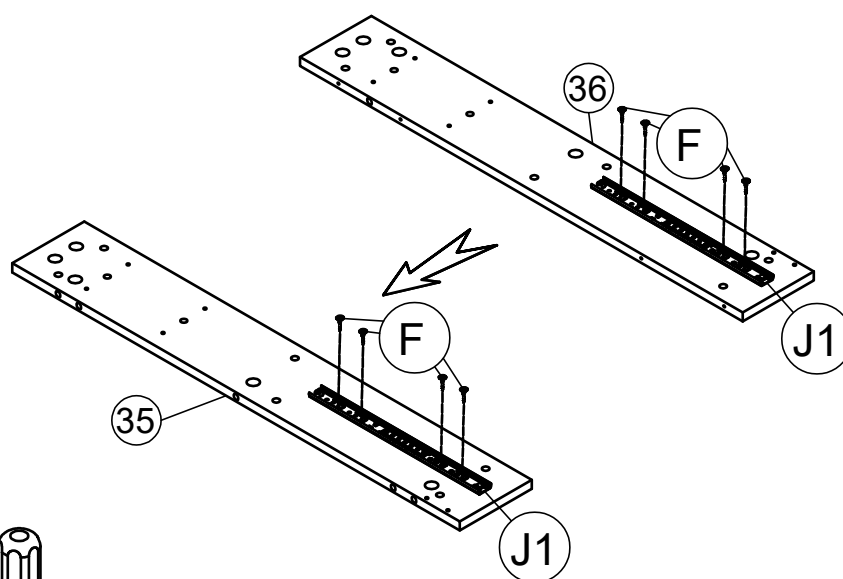


2

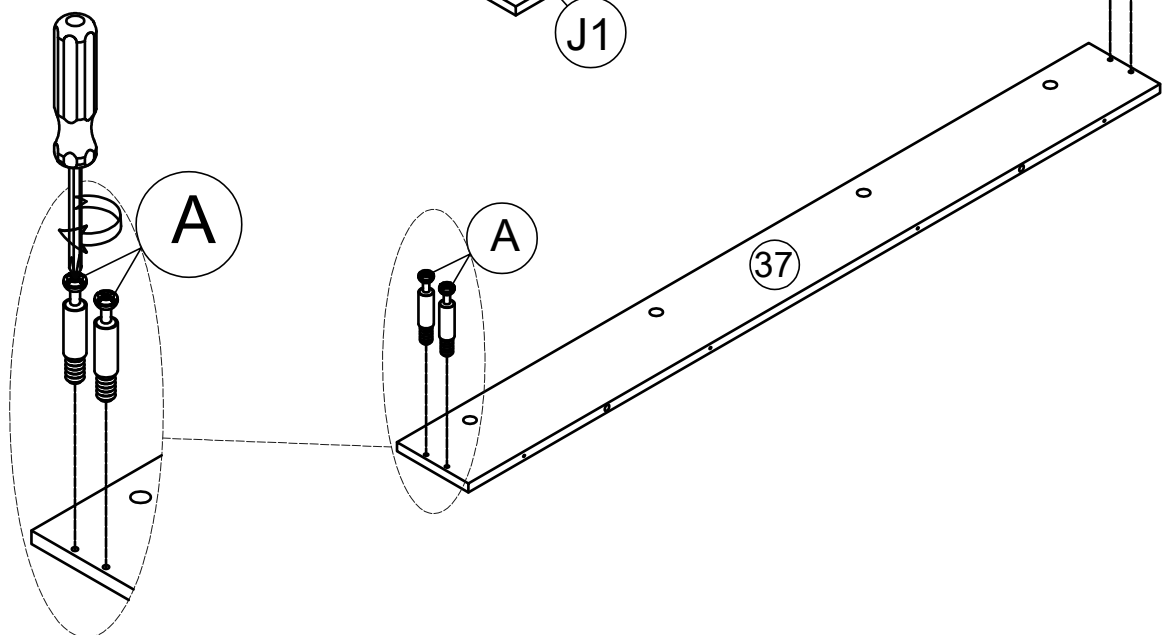


A  Cam Bolt 4 pcs	F  #3.5x12mm Screw 8 pcs	J1  Drawer slide 2pcs
--	---	---

STEP 26

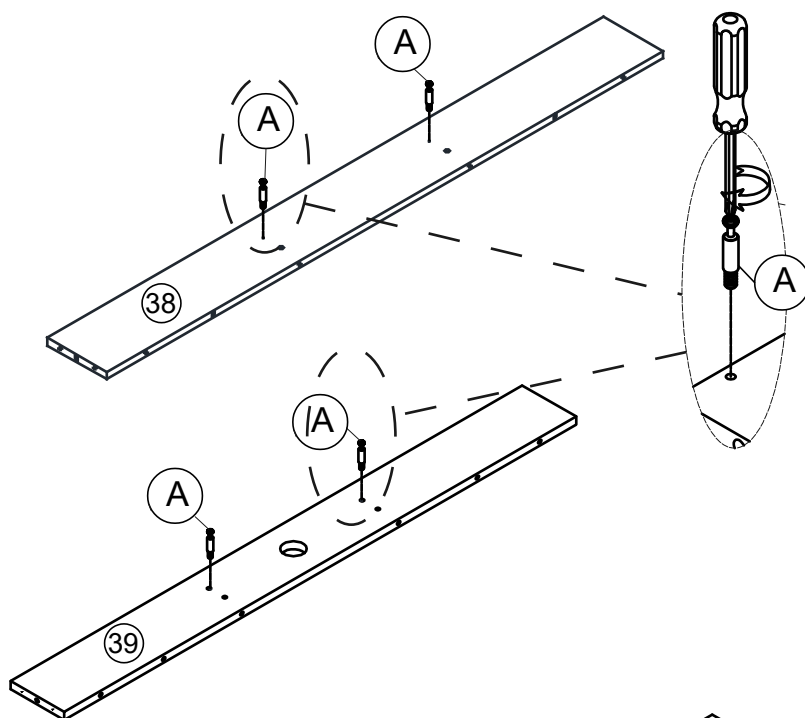1





2

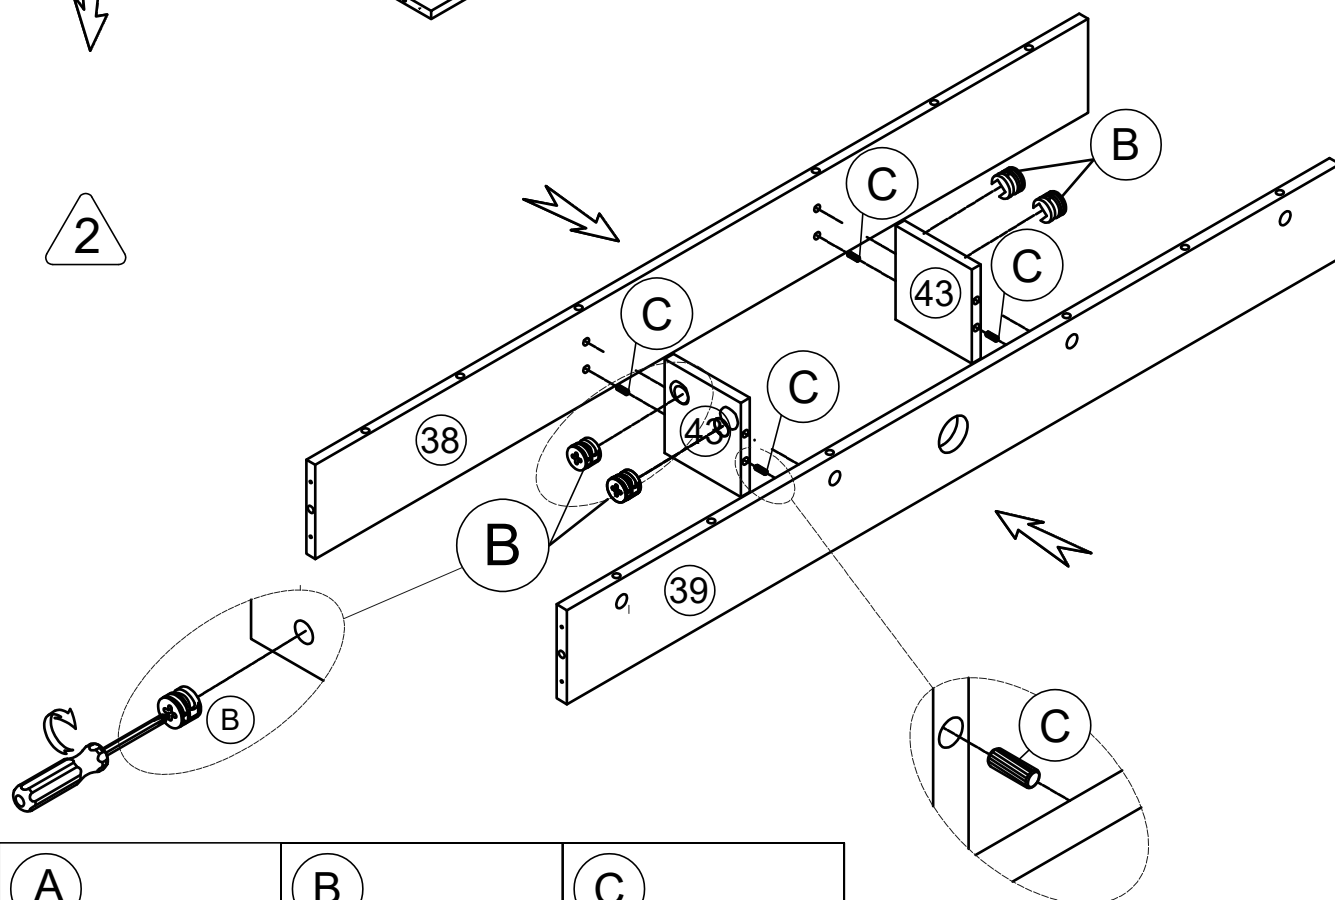



A  Cam Bolt 4pcs	B  Cam Lock 4pcs	C  Ø8x40 Dowel 4 pcs
--	--	--

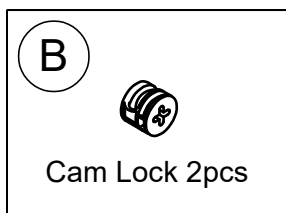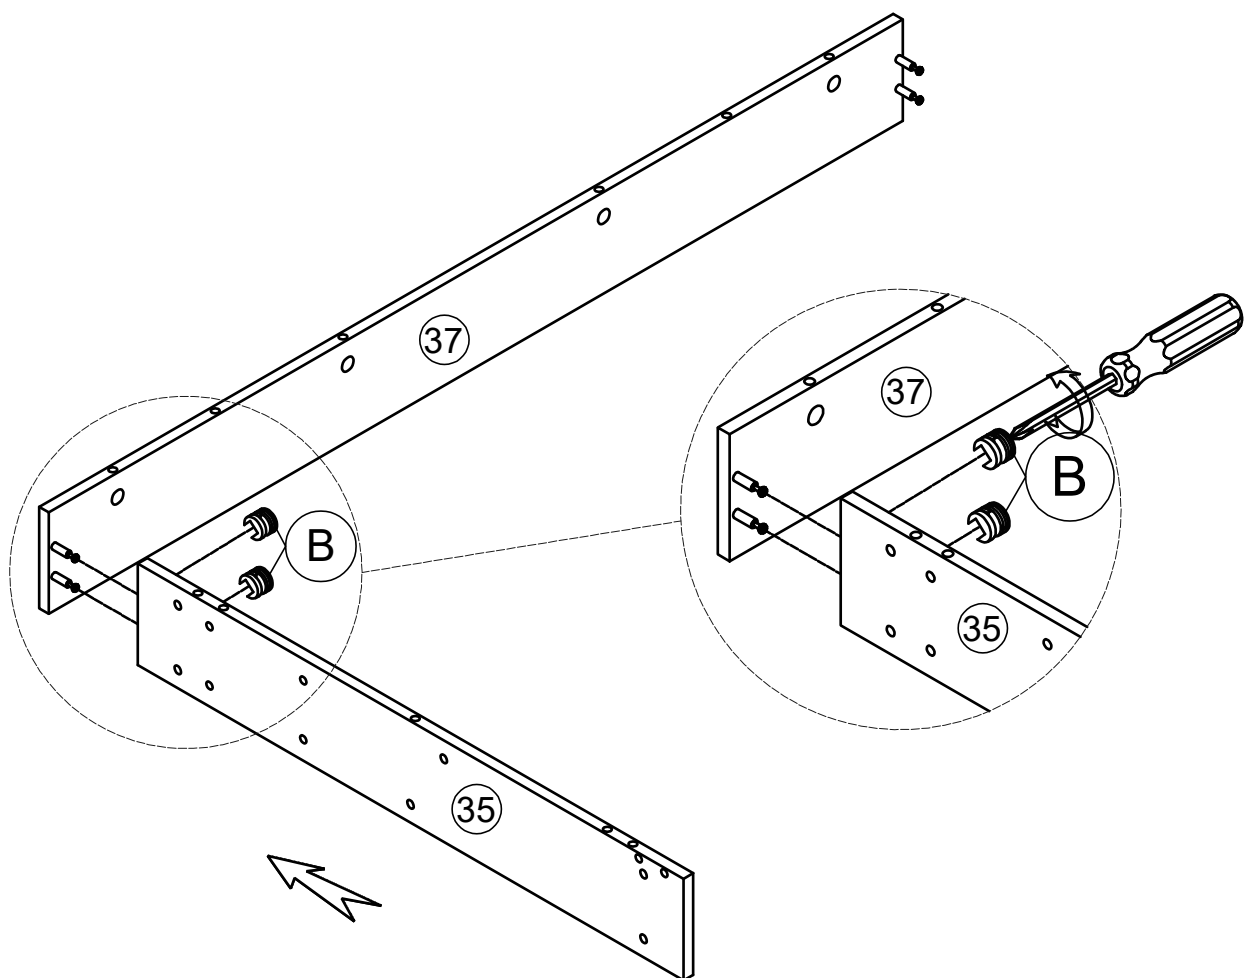STEP 27




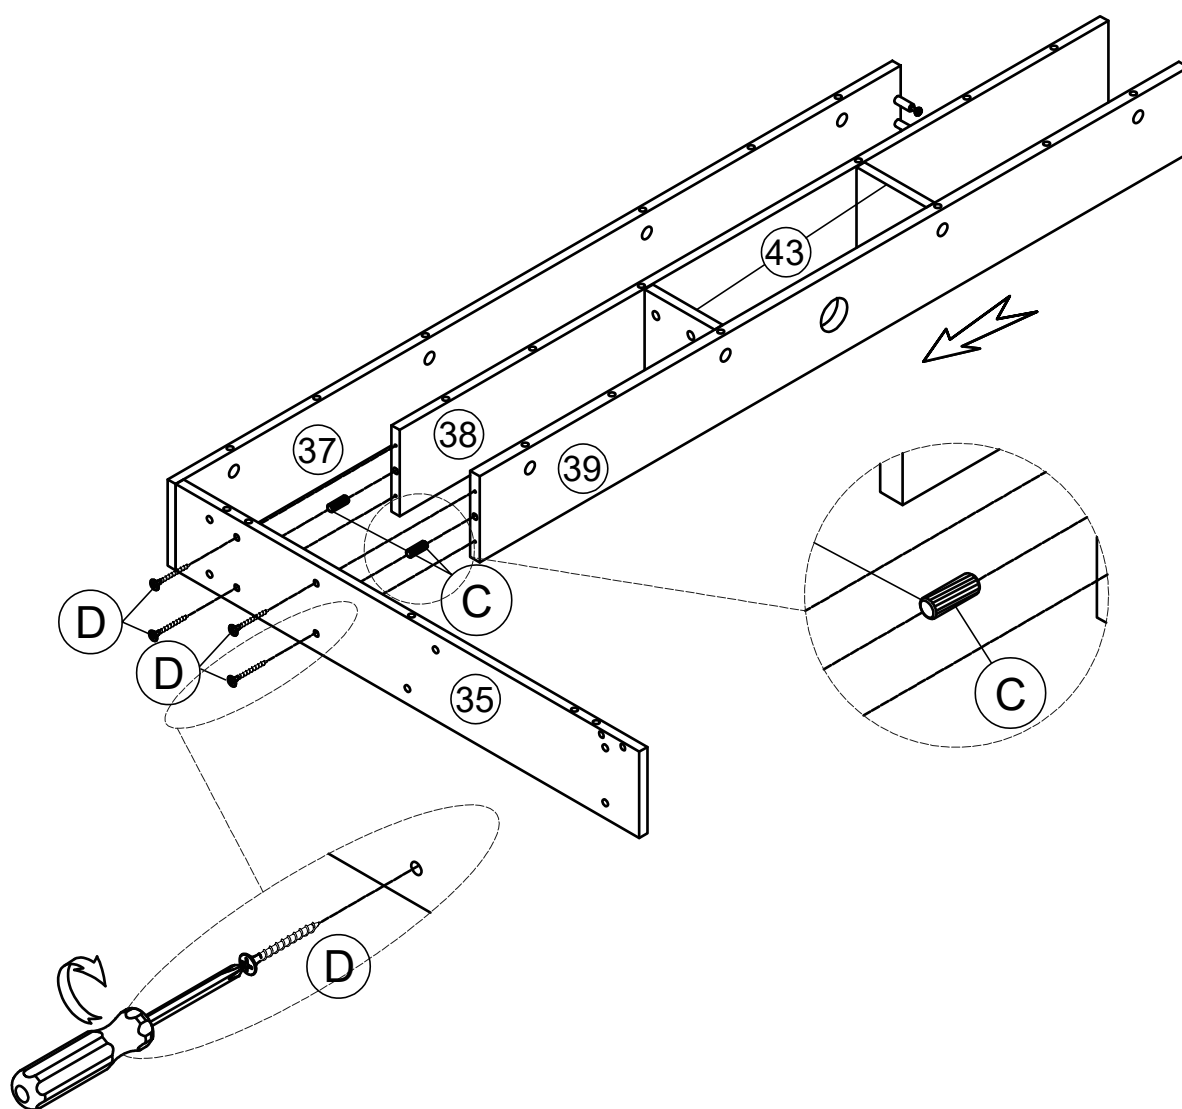
STEP 28




D  #3.5x35mm Screw 4pcs	C  Ø8x40 Dowel 2pcs
---	---

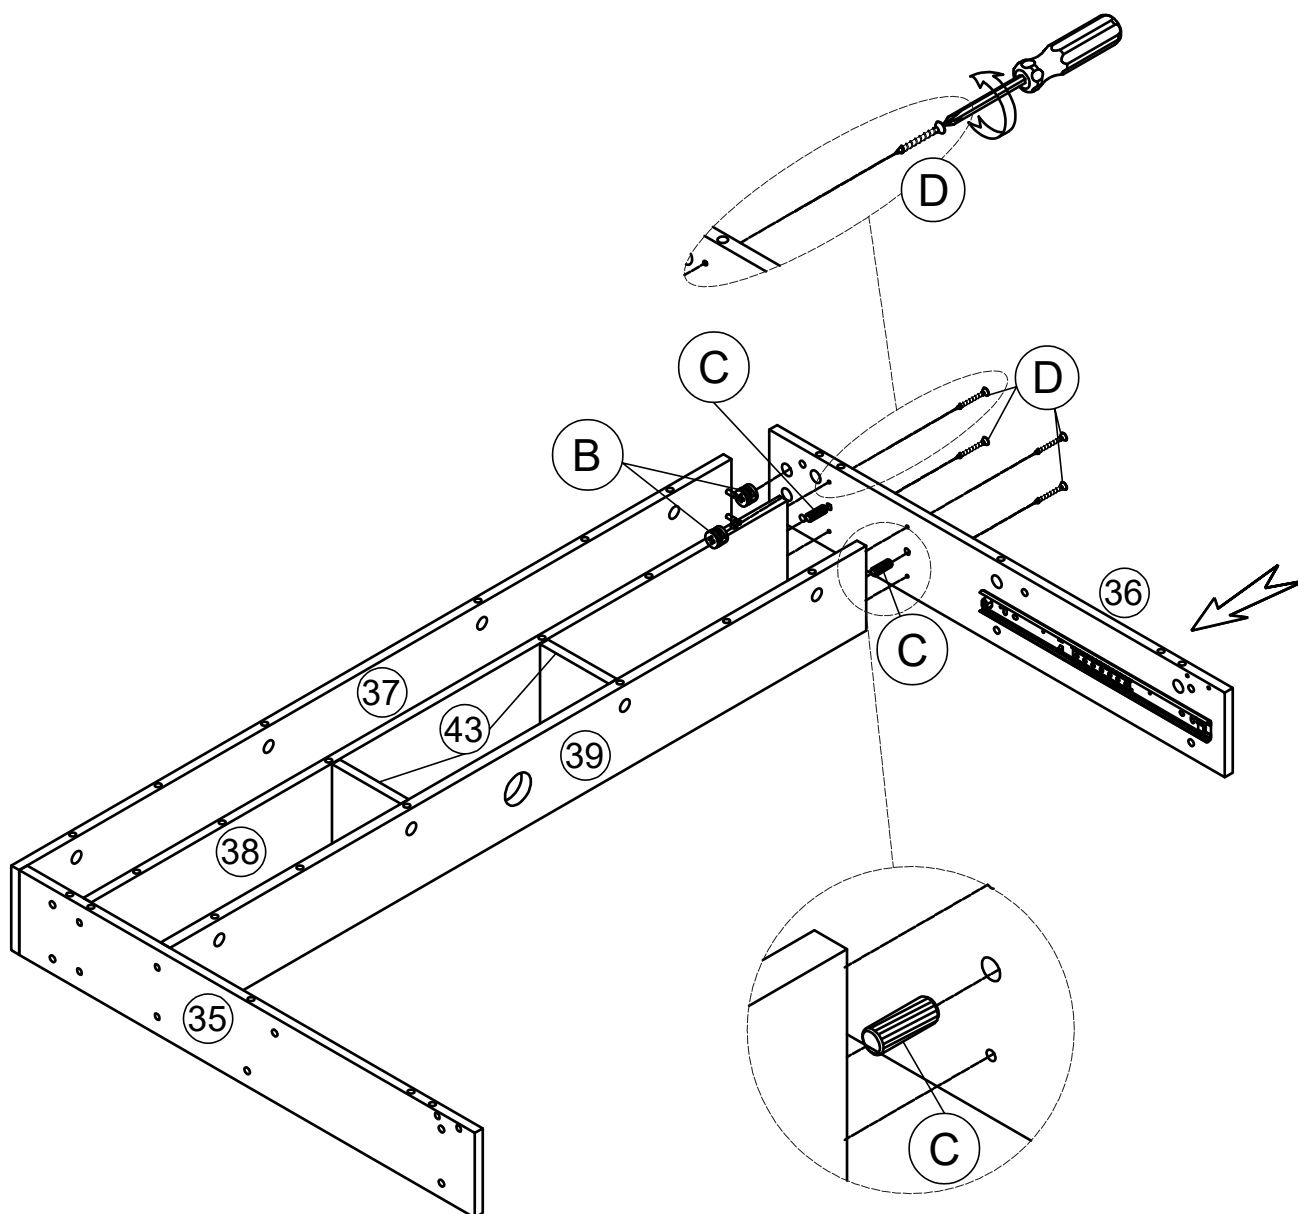
STEP 29




B  Cam Lock 2pcs	D  #3.5x35mm Screw 4pcs	C  Ø8x40 Dowel 2pcs
--	---	---

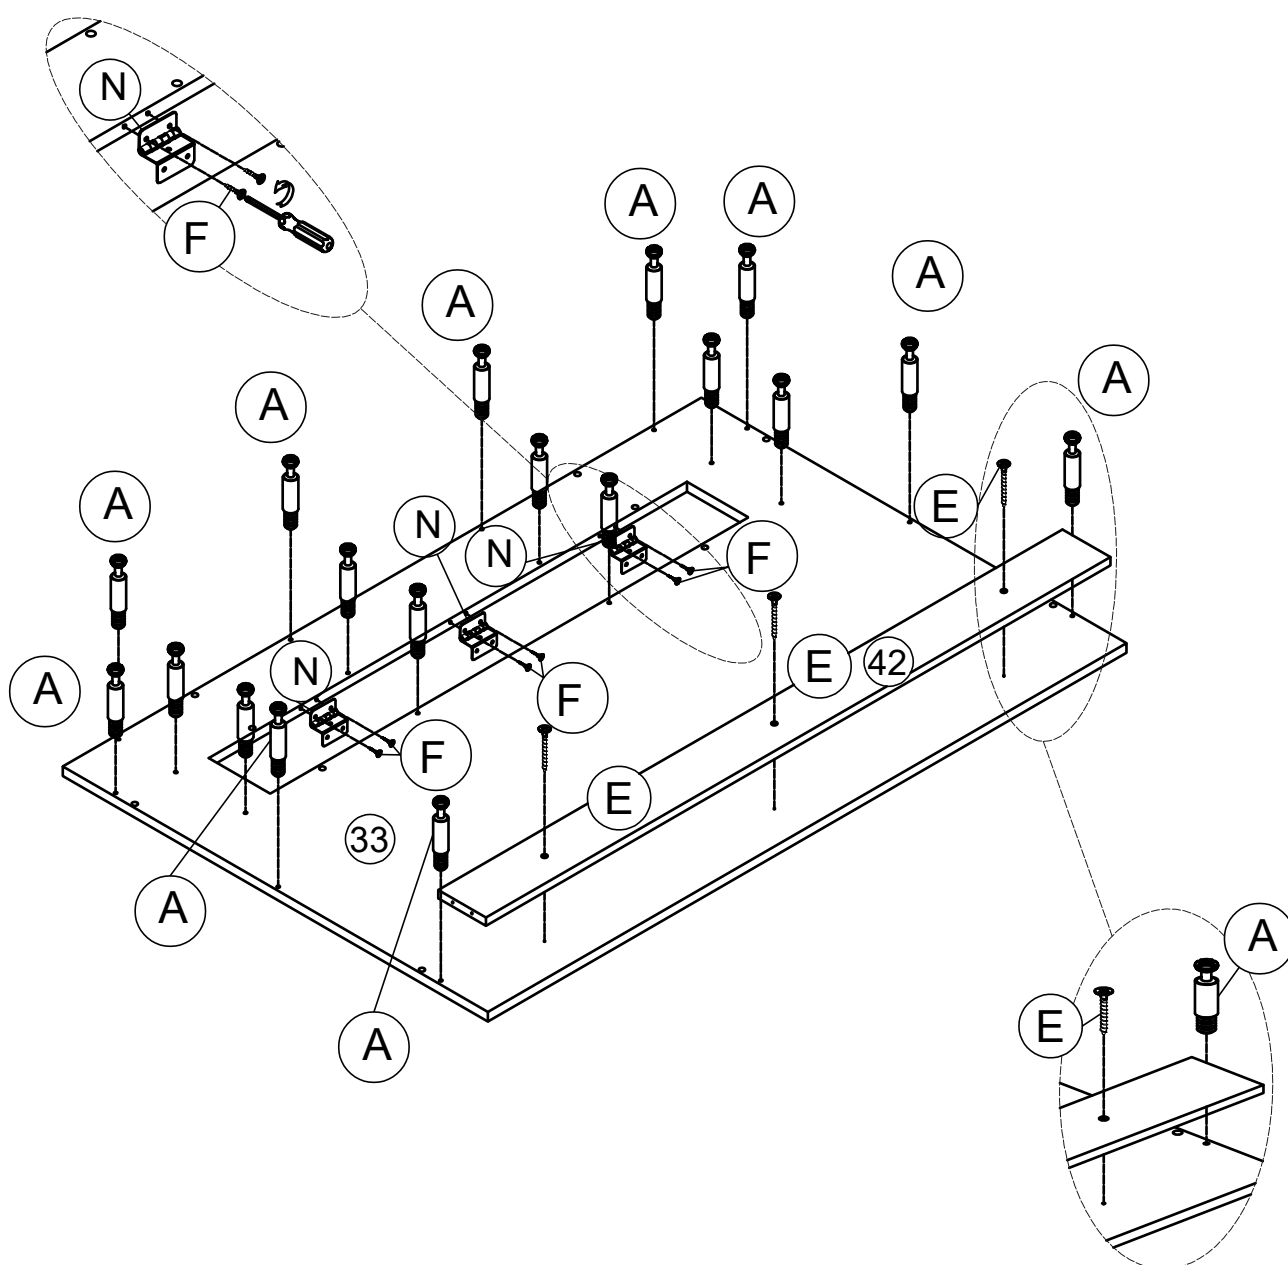
STEP 30




A  Cam Bolt 18pcs	E  #3.5x20mm Screw 3pcs	F  #3.5x12mm Screw 6 pcs	N  Hinge 03 pcs
---	---	--	---

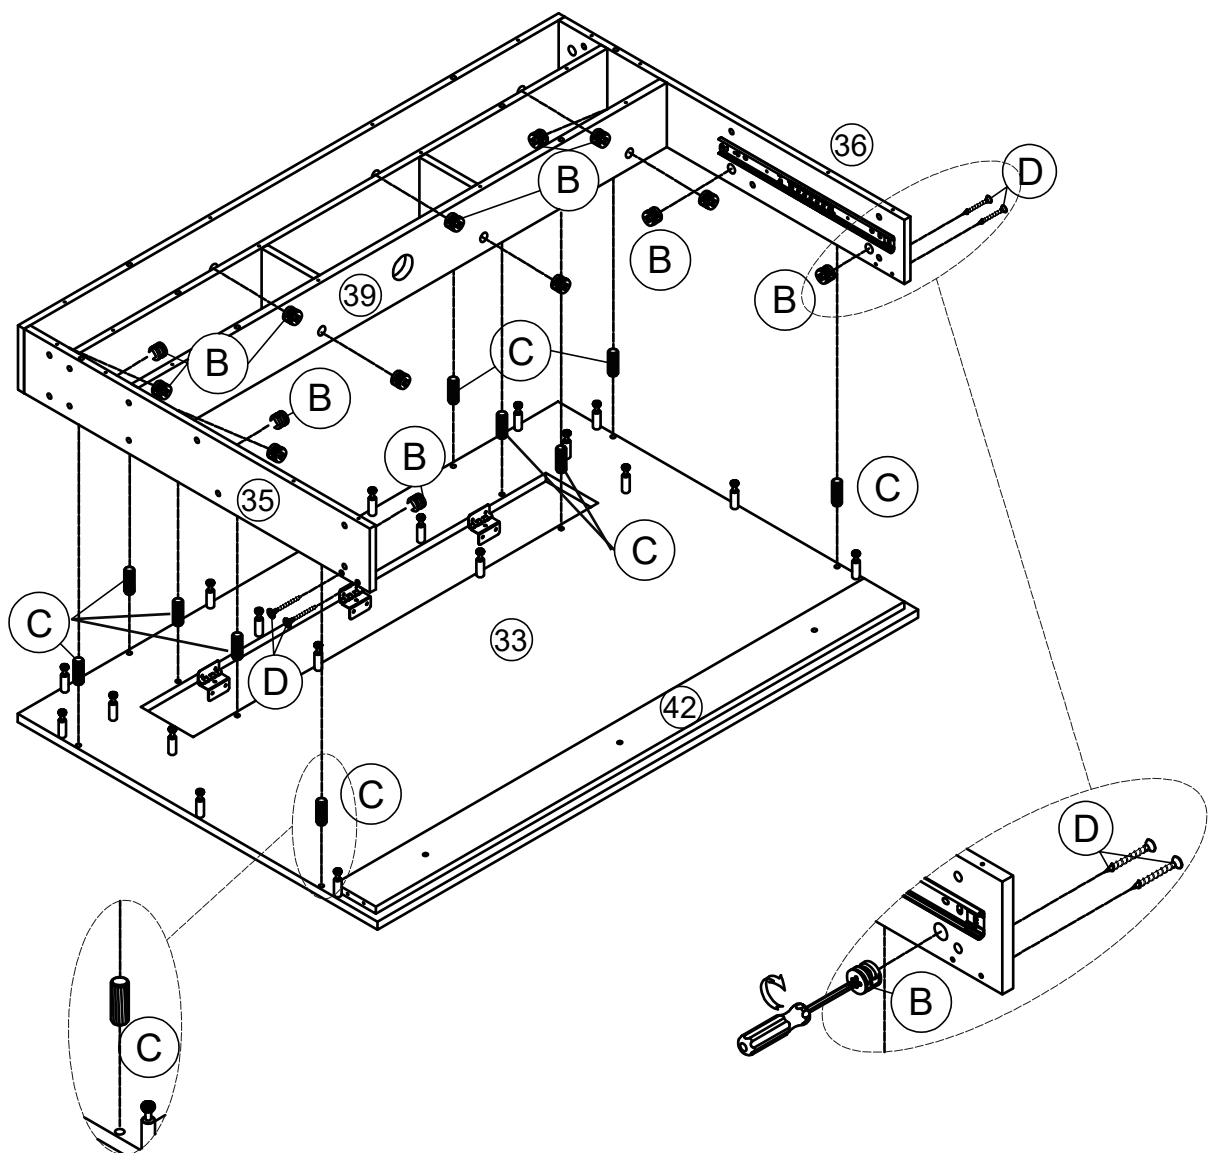STEP 31




B  Cam Lock 18pcs	C  Ø8x40 Dowel 10pcs	D  #3.5x35mm Screw 4pcs
---	--	---

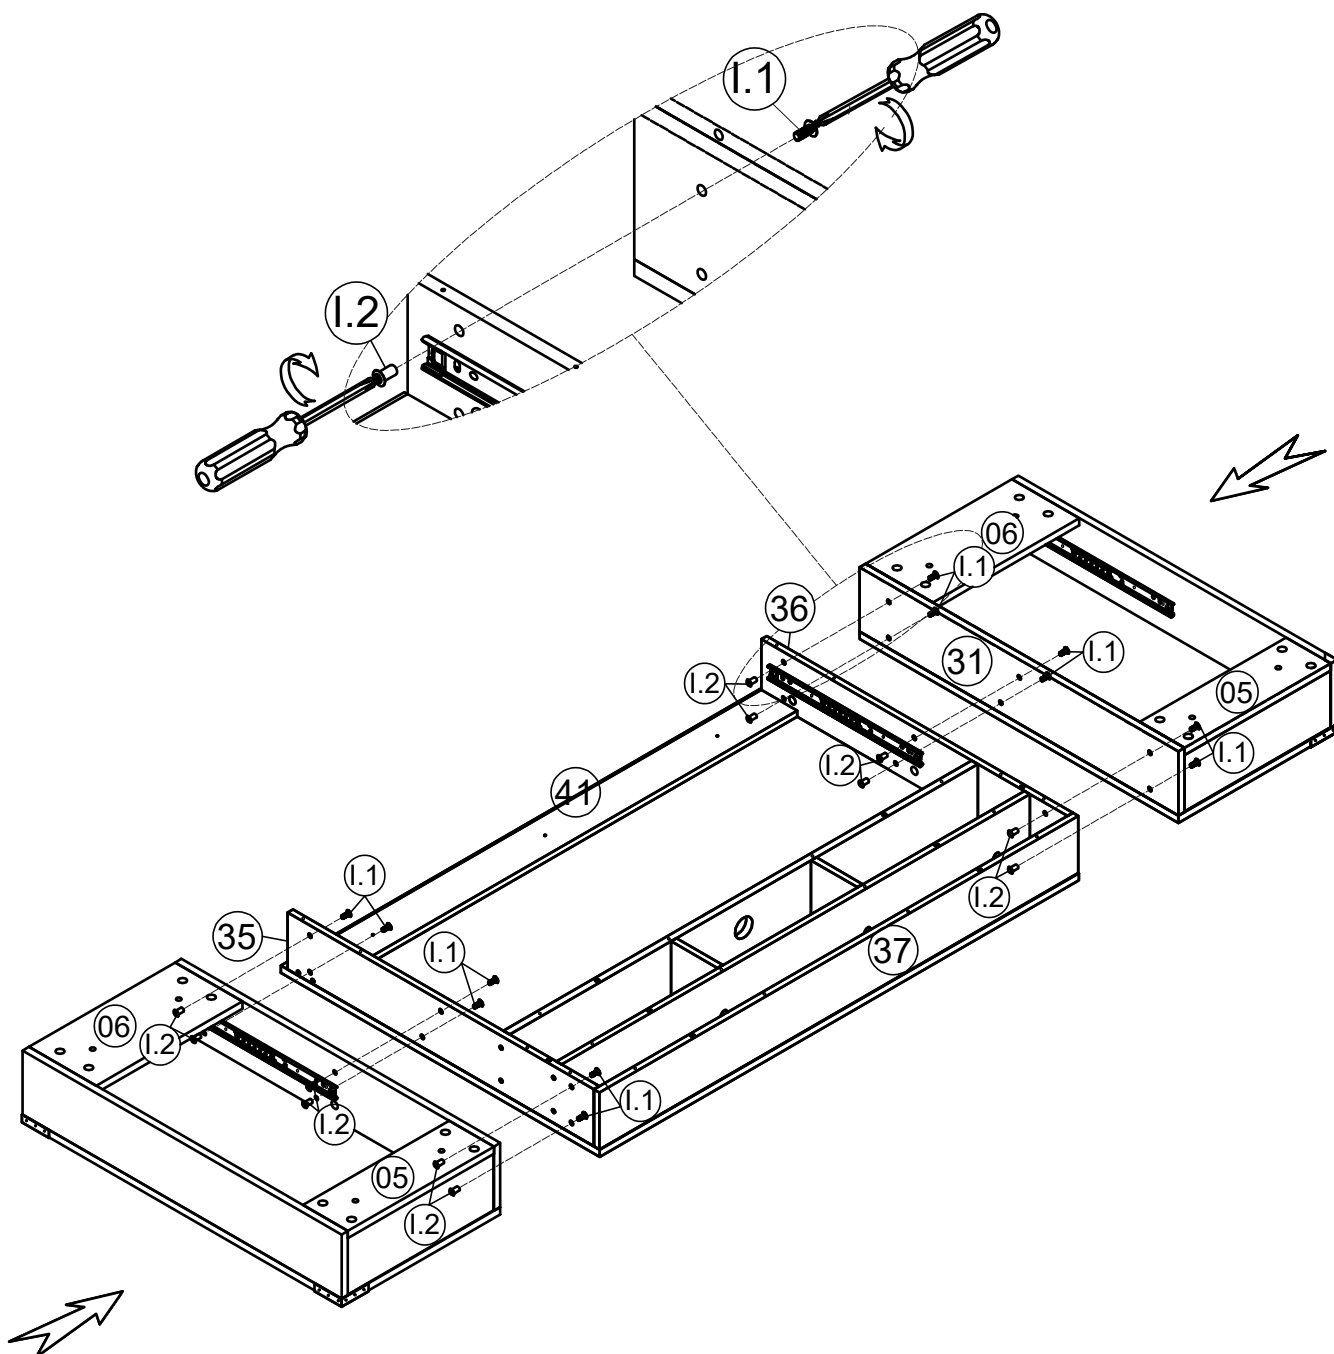
STEP 32





I	I.2	I.1
12pcs		

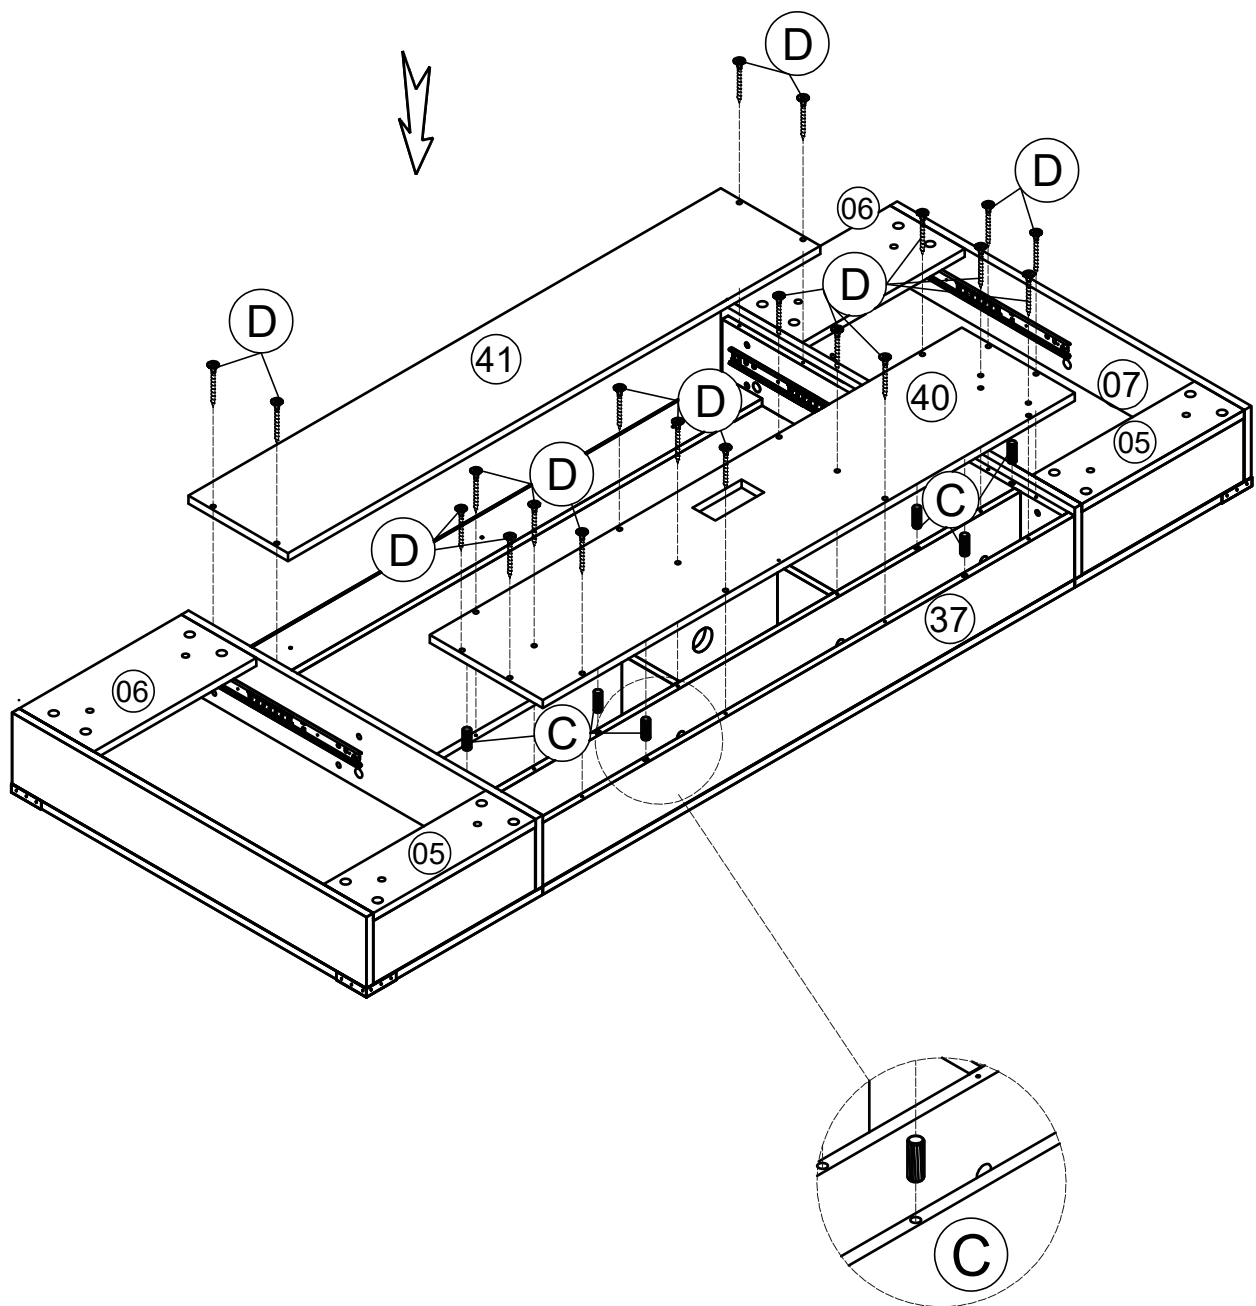STEP 33




C  Ø8x40 Dowel 8pcs	D  #3.5x35mm Screw 20pcs
---	--

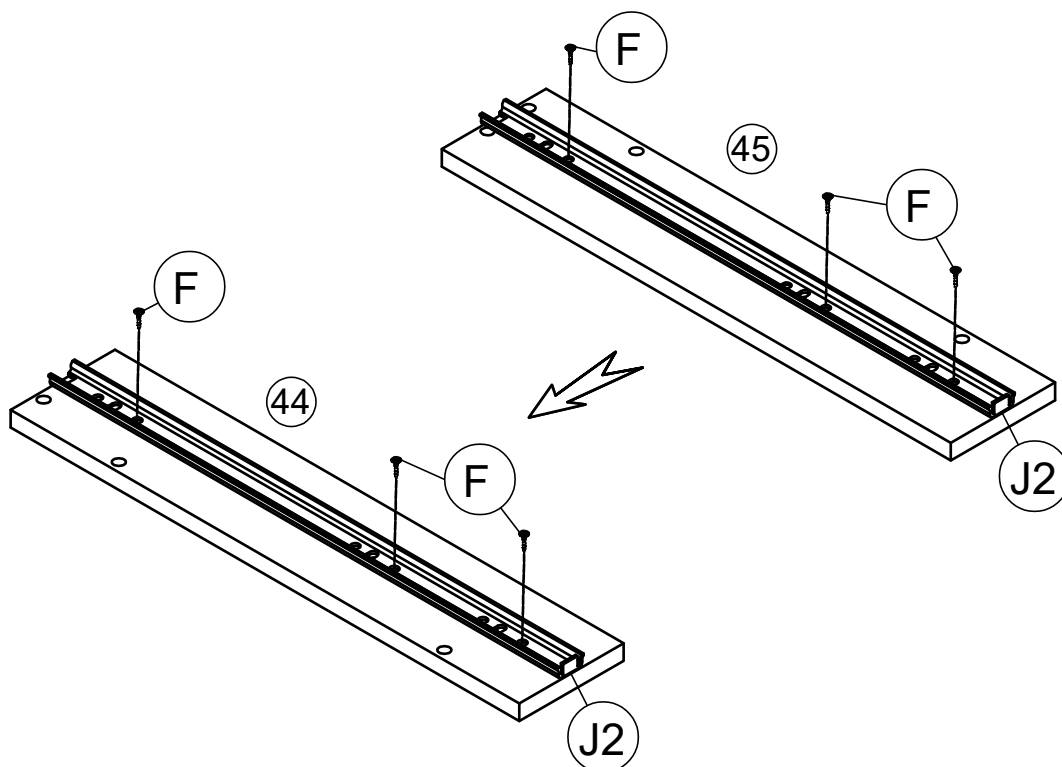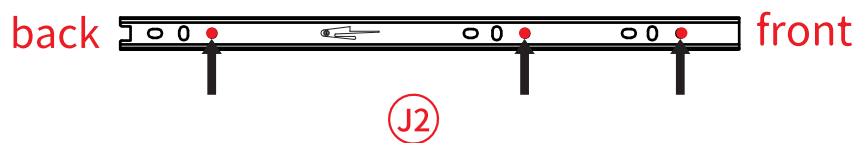
STEP 34





F  #3.5x12mm Screw 6pcs	J2  Drawer slide 2pcs
---	---

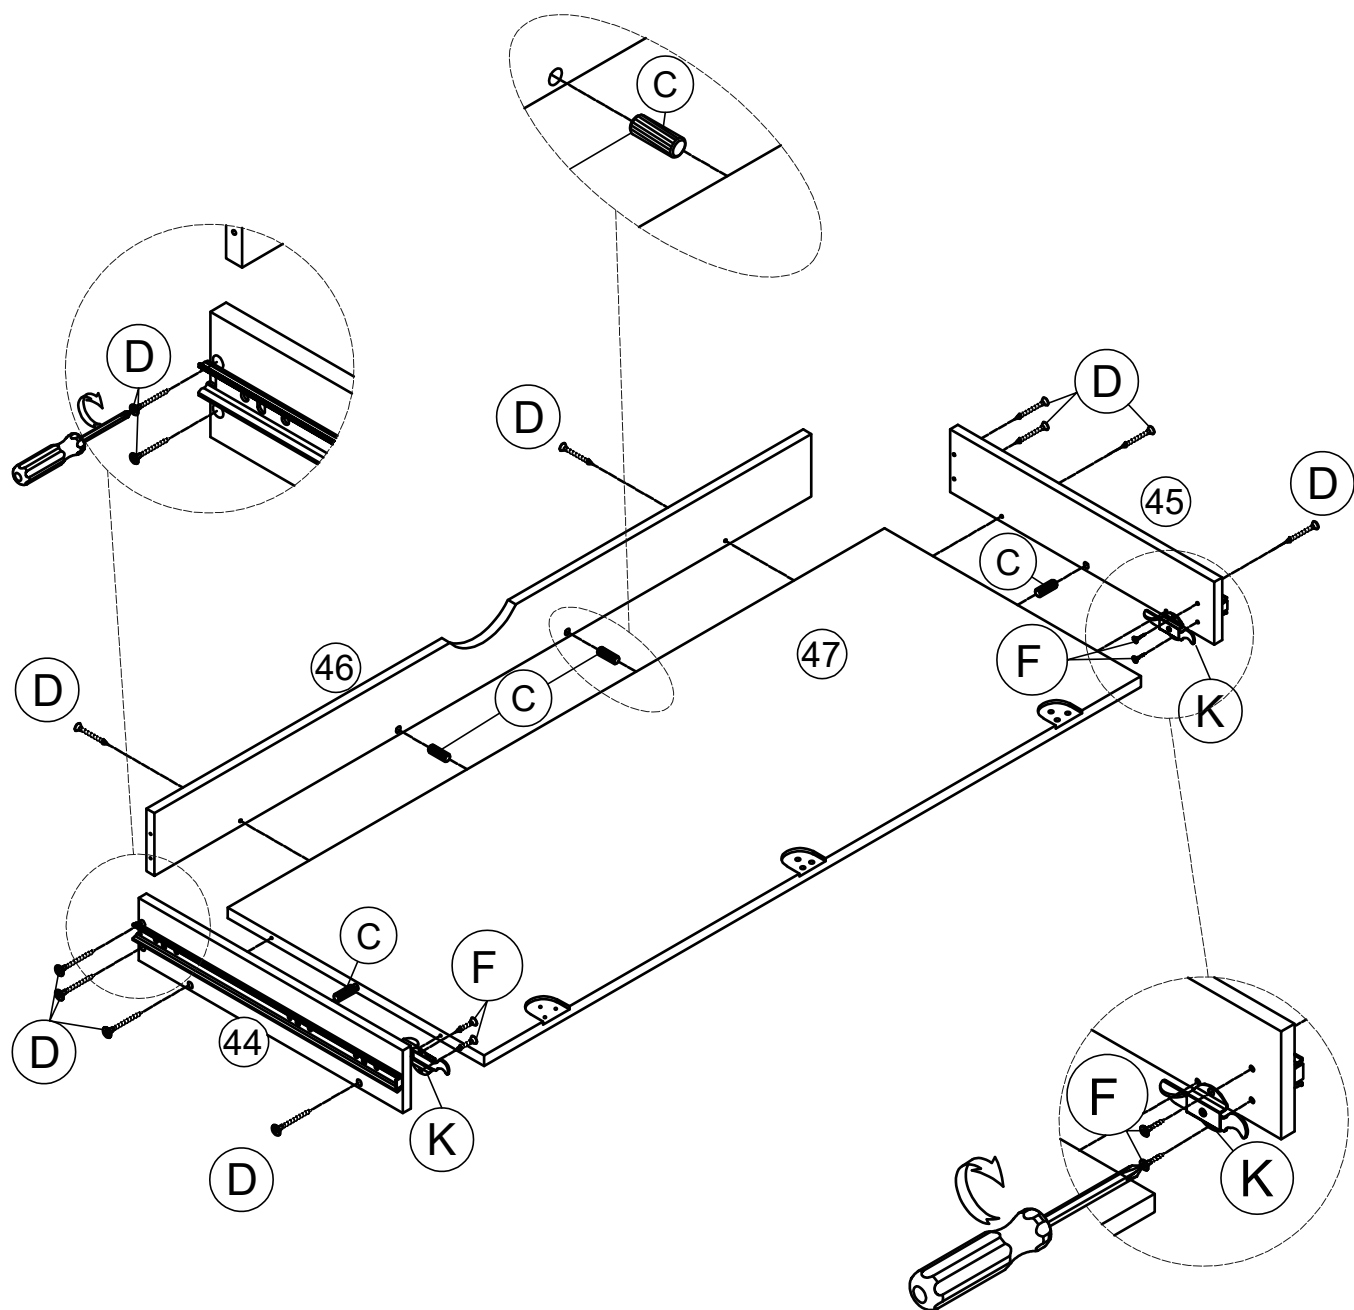STEP 35





(C)  Ø8x40 Dowel 4pcs	(D)  #3.5x35mm Screw 10pcs	(F)  #3.5x12mm Screw 4 pcs	(K)  2pcs
--	---	---	--

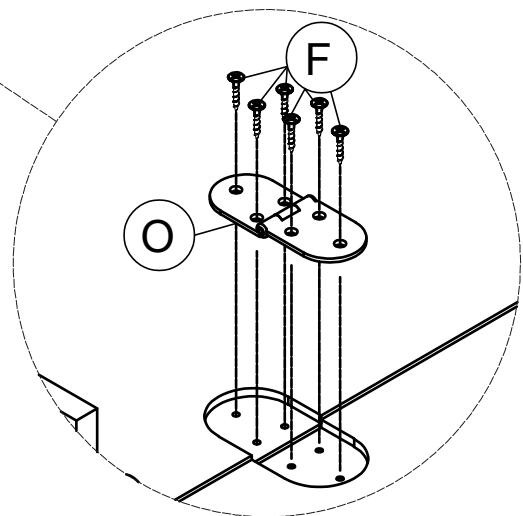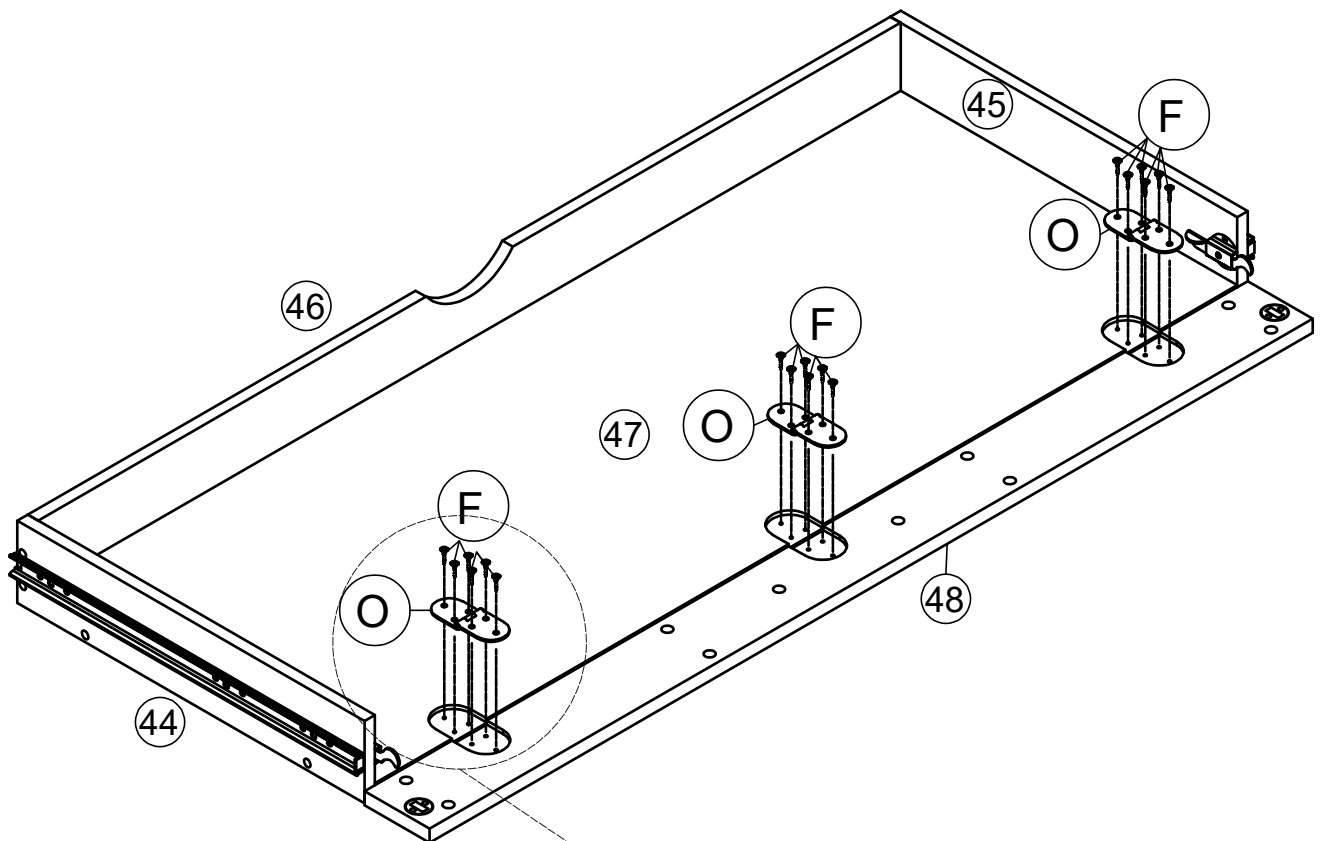STEP 36






F  #3.5x12mm Screw 18 pcs	O  Hinge 03 pcs
---	---

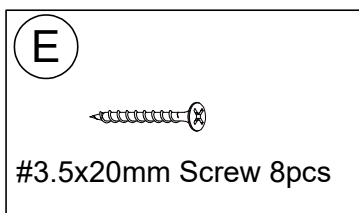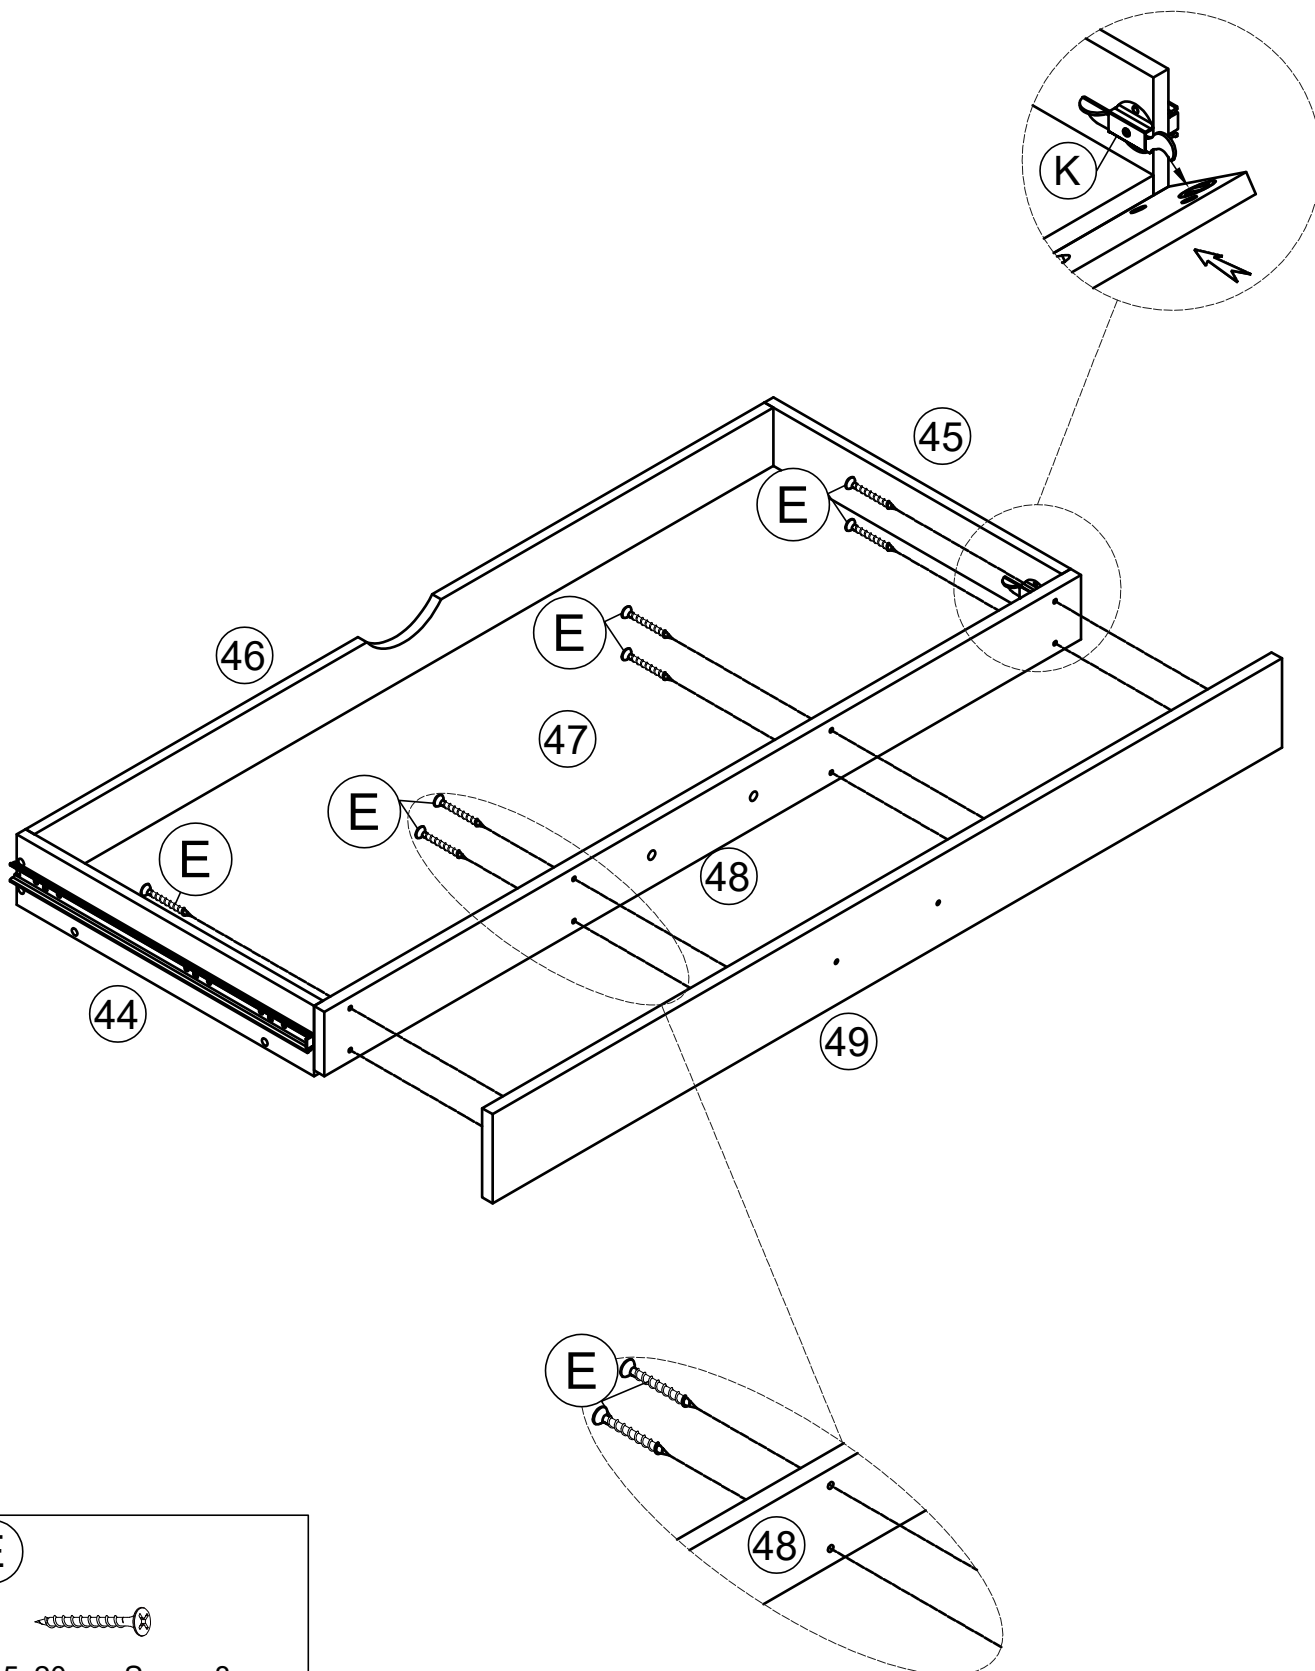STEP 37






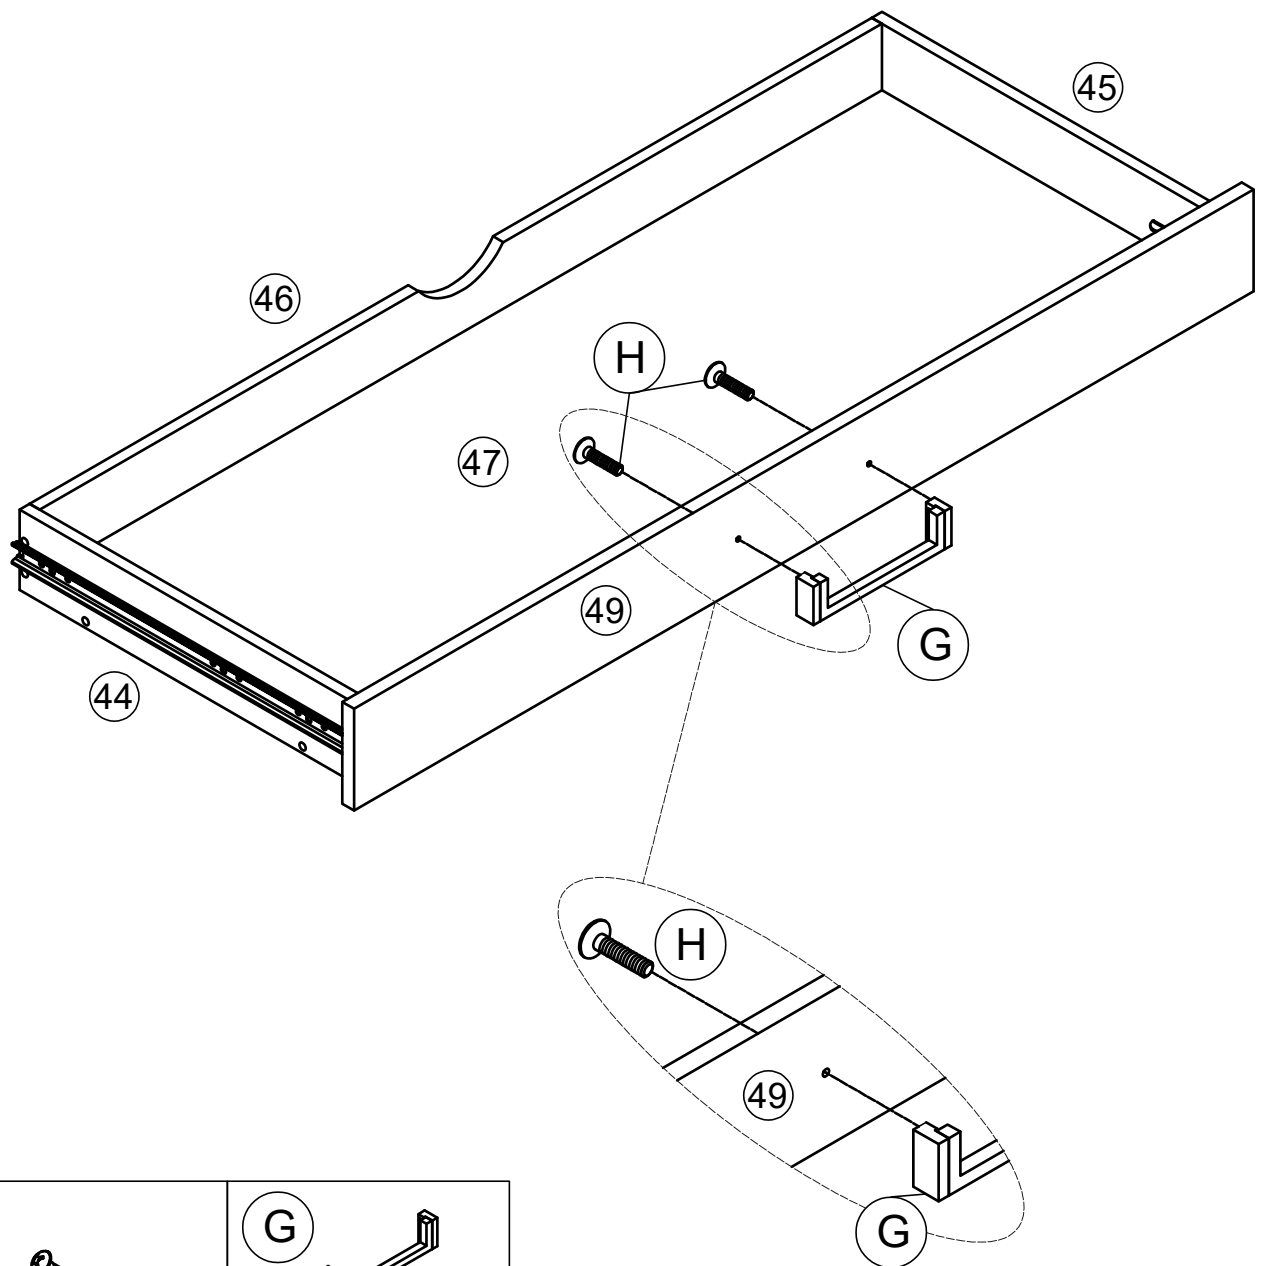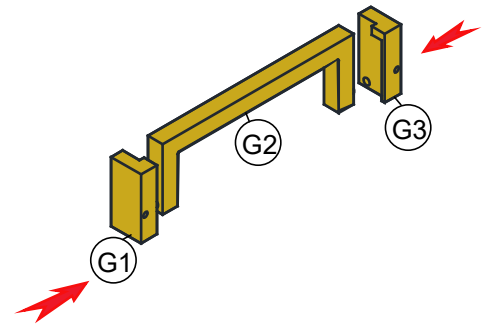STEP 38




H  M4x25mm Screw 2pcs	G  Handle 1pc
---	---

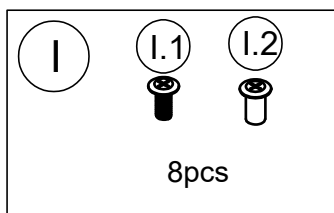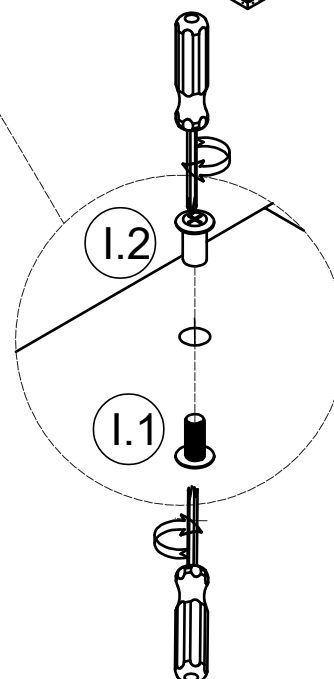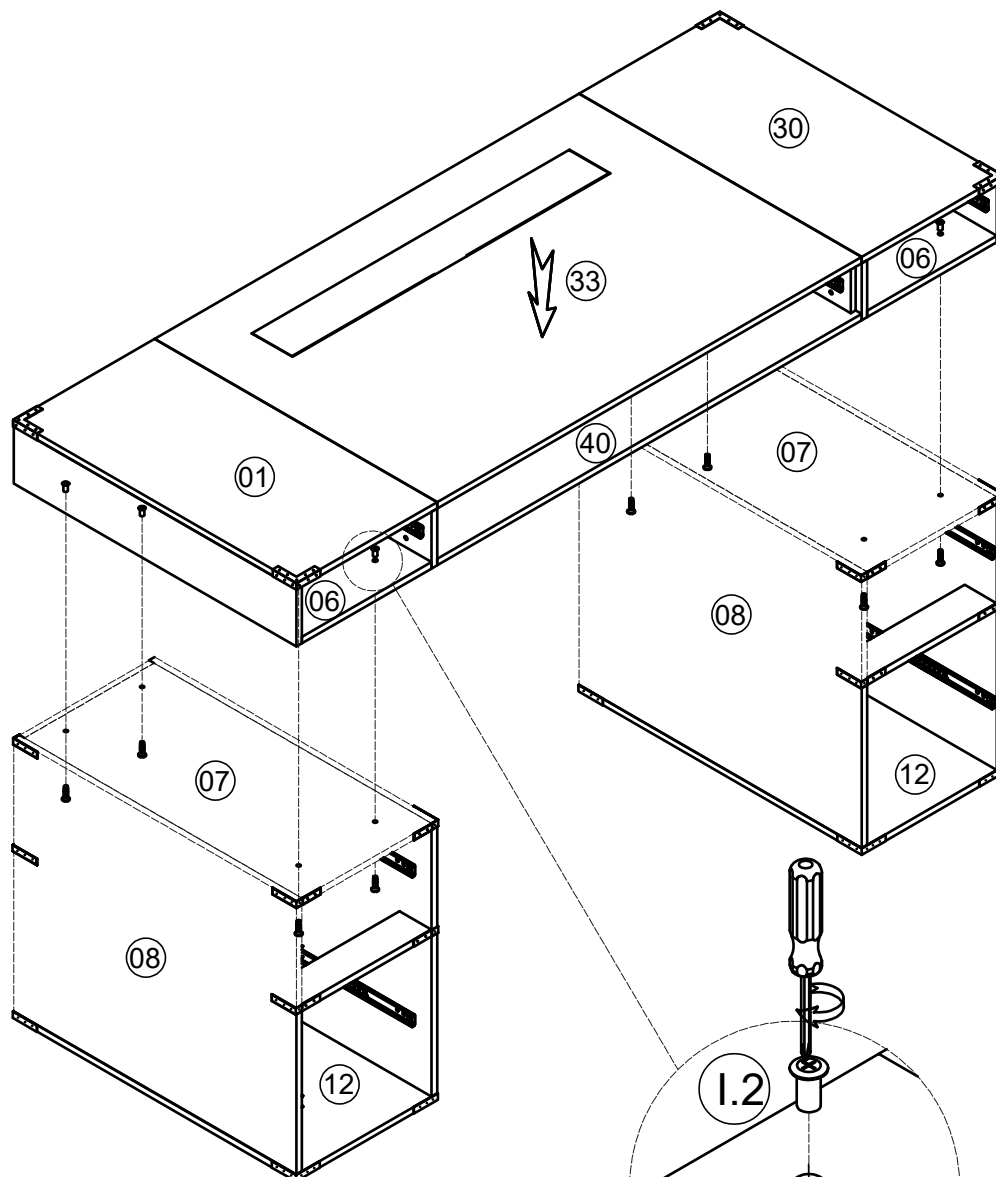STEP 39



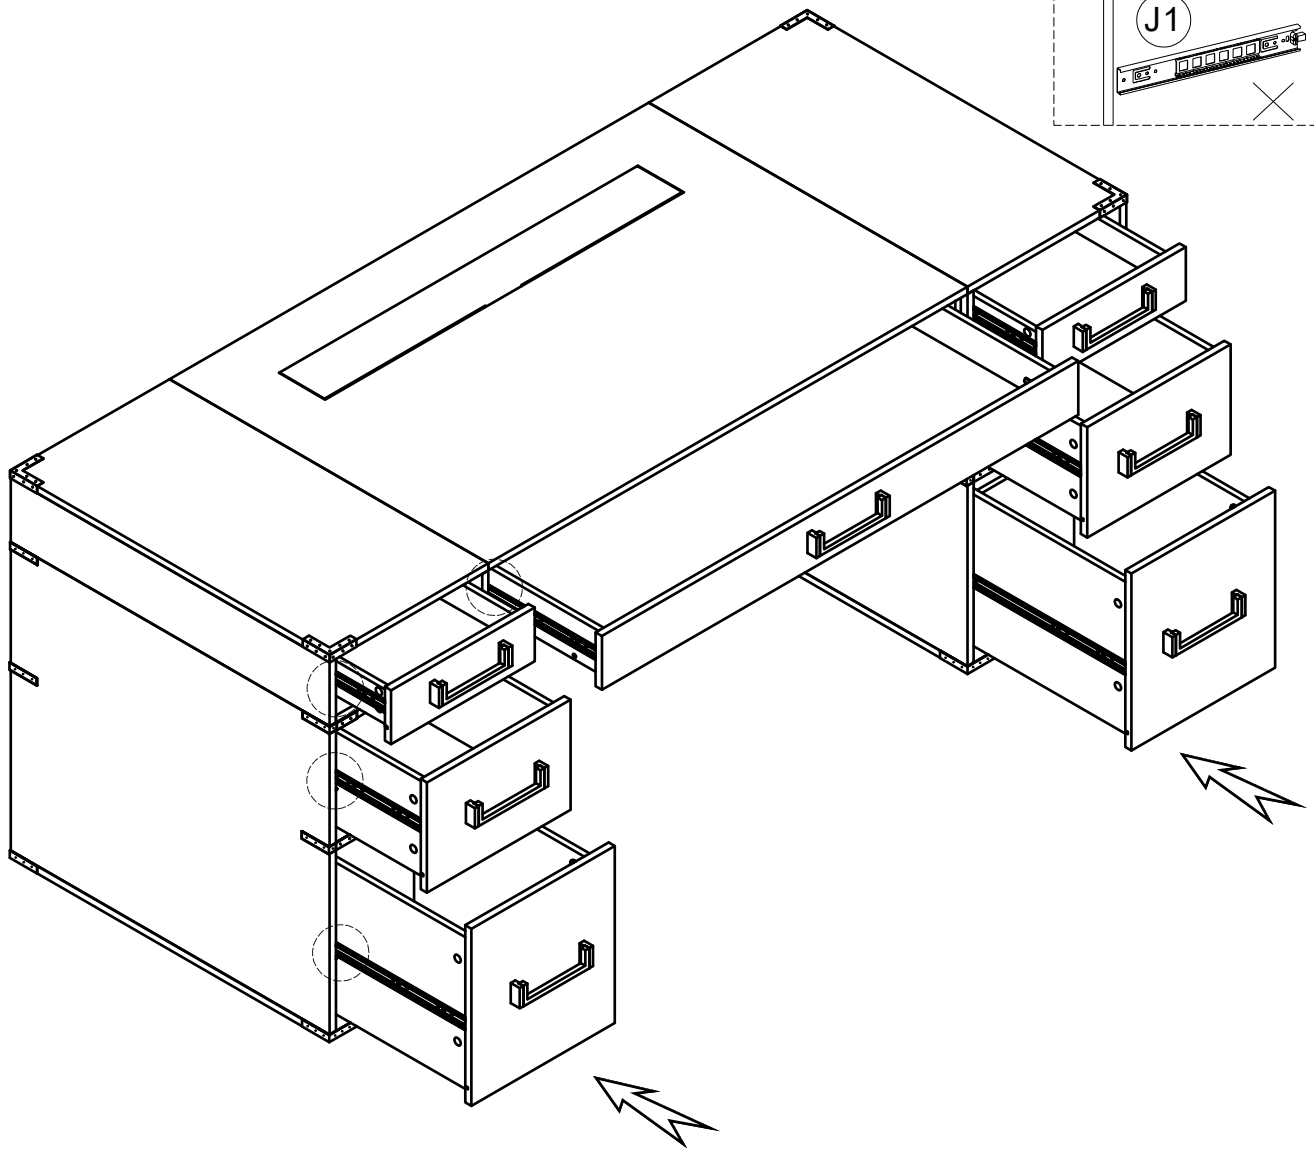
STEP 40




INSTALLING DRAWERS

Pull slides and slide carrier out to fully extended position (see illustration). Hold the slide on the cabinet while aligning it with the slide on the drawer. Slightly insert one side and repeat for the other side. Slowly push the drawer to its fully closed position to engage the slide. Open the drawer and reclose to ensure proper operation.

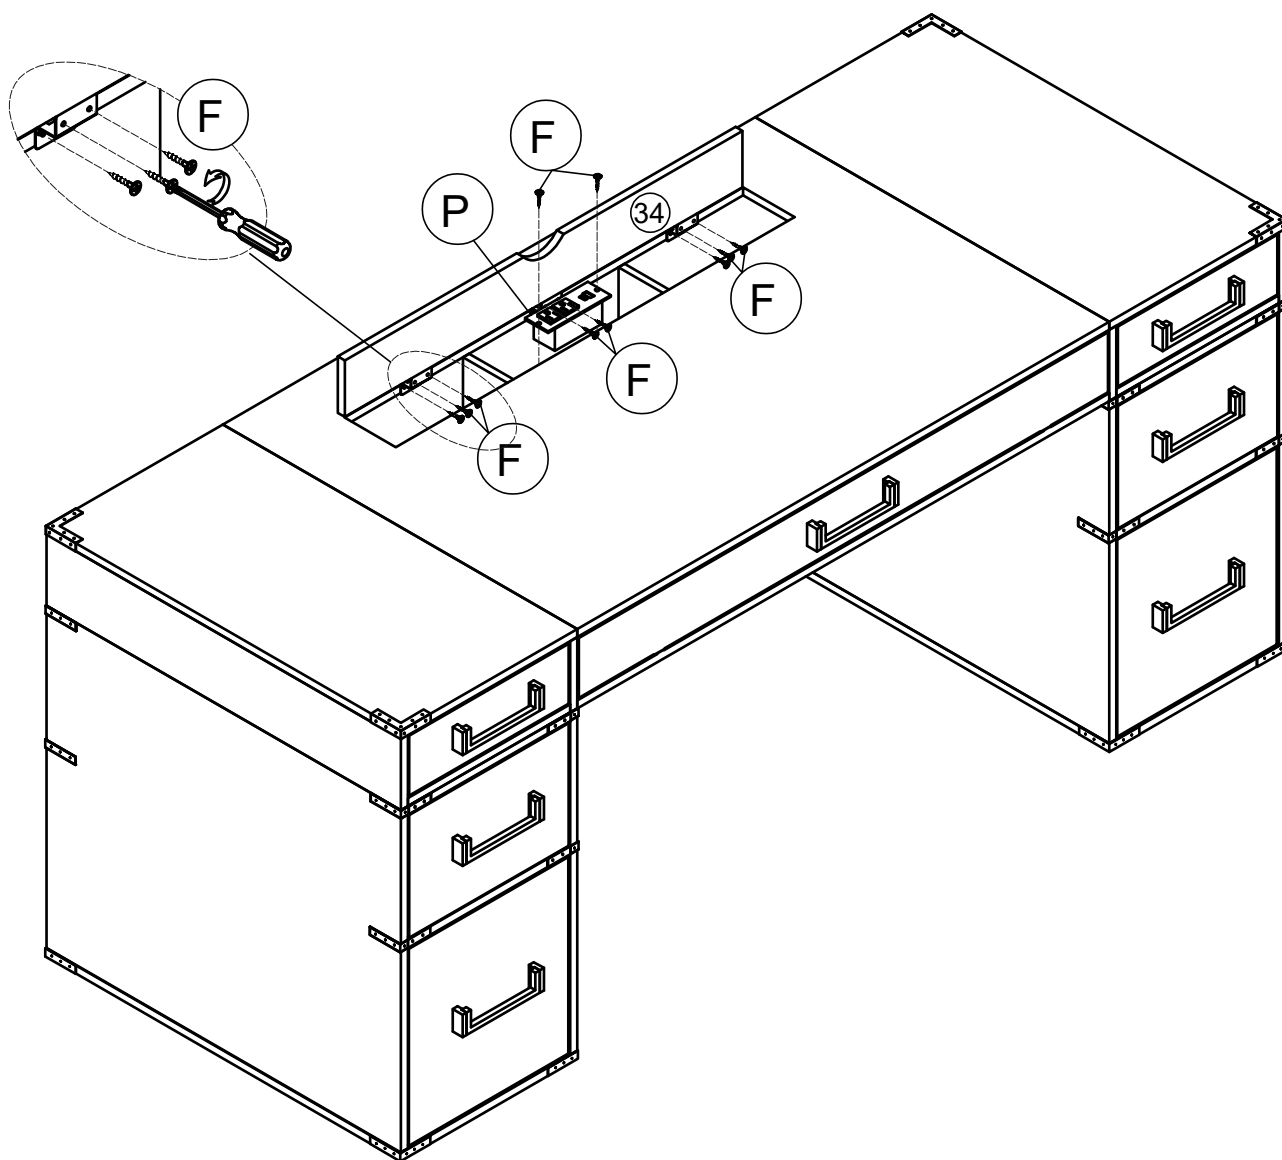STEP 41



F  #3.5x12mm Screw 11 pcs	P  1 pc
---	---

COMPLETE

