


Installation & Assembly

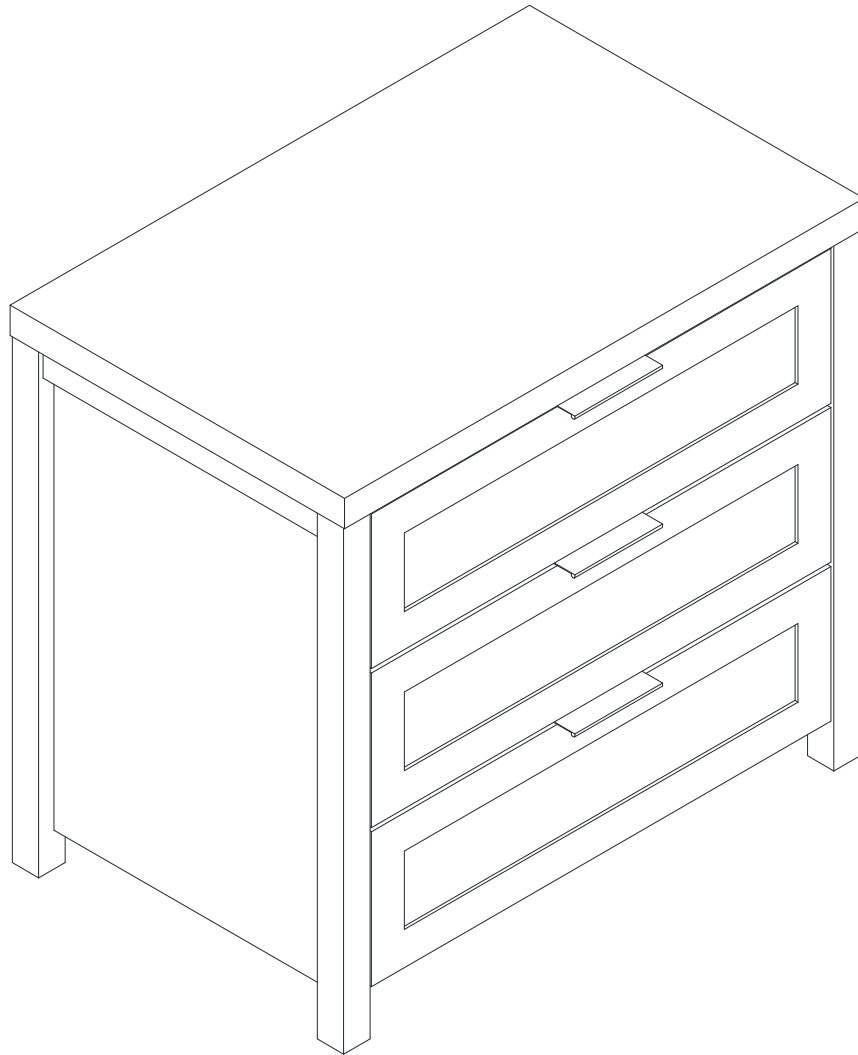

Due to the size of this product, the panels can be quite heavy. To ensure your safety and make the installation more efficient, we highly recommend teaming up with family or friends. Let' s make assembly fun—we hope you enjoy the hands-on experience !

QUESTIONS OR CONCERNS?

IMPORTANT! Please read all instructions before use and keep this manual for future reference.

Your satisfaction is very important to us. If you have any issues, **PLEASE CONTACT US** at
before initiating a **RETURN**.



ATTENTION

If you are missing parts, hardware, or if your product has been damaged during shipping



DO NOT RETURN YOUR PRODUCT

The store does not stock parts and may not be able to help you. Please contact us directly and **we will ship you the parts** you need to your shipping address **at no cost to you**. For the quickest and most efficient service. We're here to help!

※ **Stay Scratch-Free: Safeguard Your Furniture by Assembling on Carpet.**

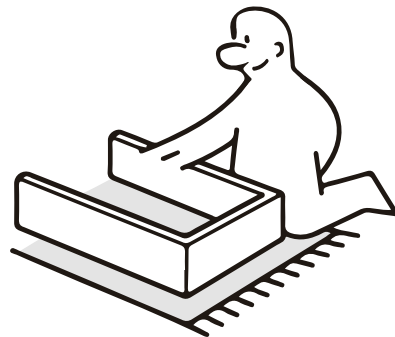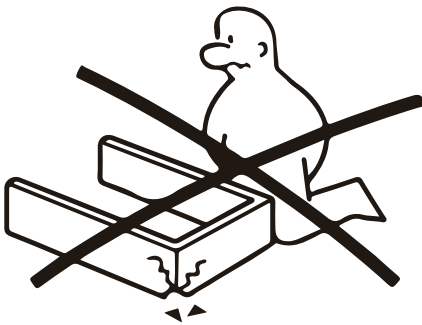

※ **Stuck in Assembly Limbo? Check out our website or contact our support team for quick solutions!**

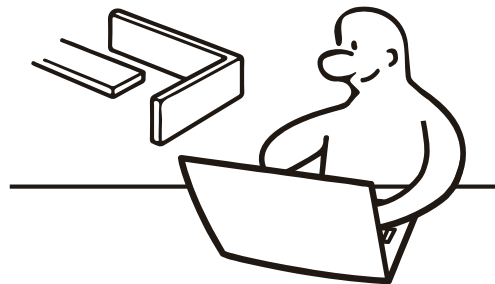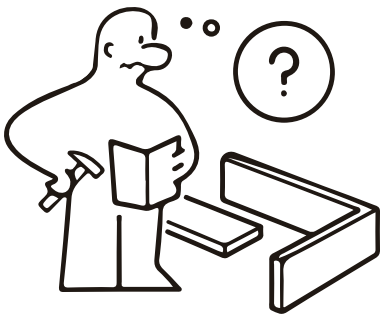

WARNING: ASSEMBLY NOTICE

Attention

Important Instructions for Assembling Your Furniture To ensure the longevity and integrity of your MDF furniture, please adhere to the following guidelines:

DO NOT USE AN ELECTRIC DRILL



Using an electric drill can cause irreversible **damage to the MDF boards**, leading to compromised structural integrity and potential voiding of your warranty.


IF AN ELECTRIC DRILL MUST BE USED

- **Set to Lowest Torque Setting :**

Ensure your drill is set to the lowest possible torque setting to avoid over-tightening and damaging the material.

- **Proceed with Caution :**


Carefully monitor the drilling process to prevent excessive force and damage.

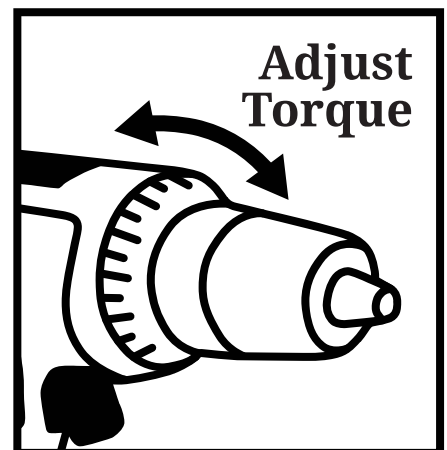











For best results and to avoid any damage, we highly recommend using the provided manual tools or a handheld screwdriver.




Thank you for your attention and understanding.

PARTS LIST








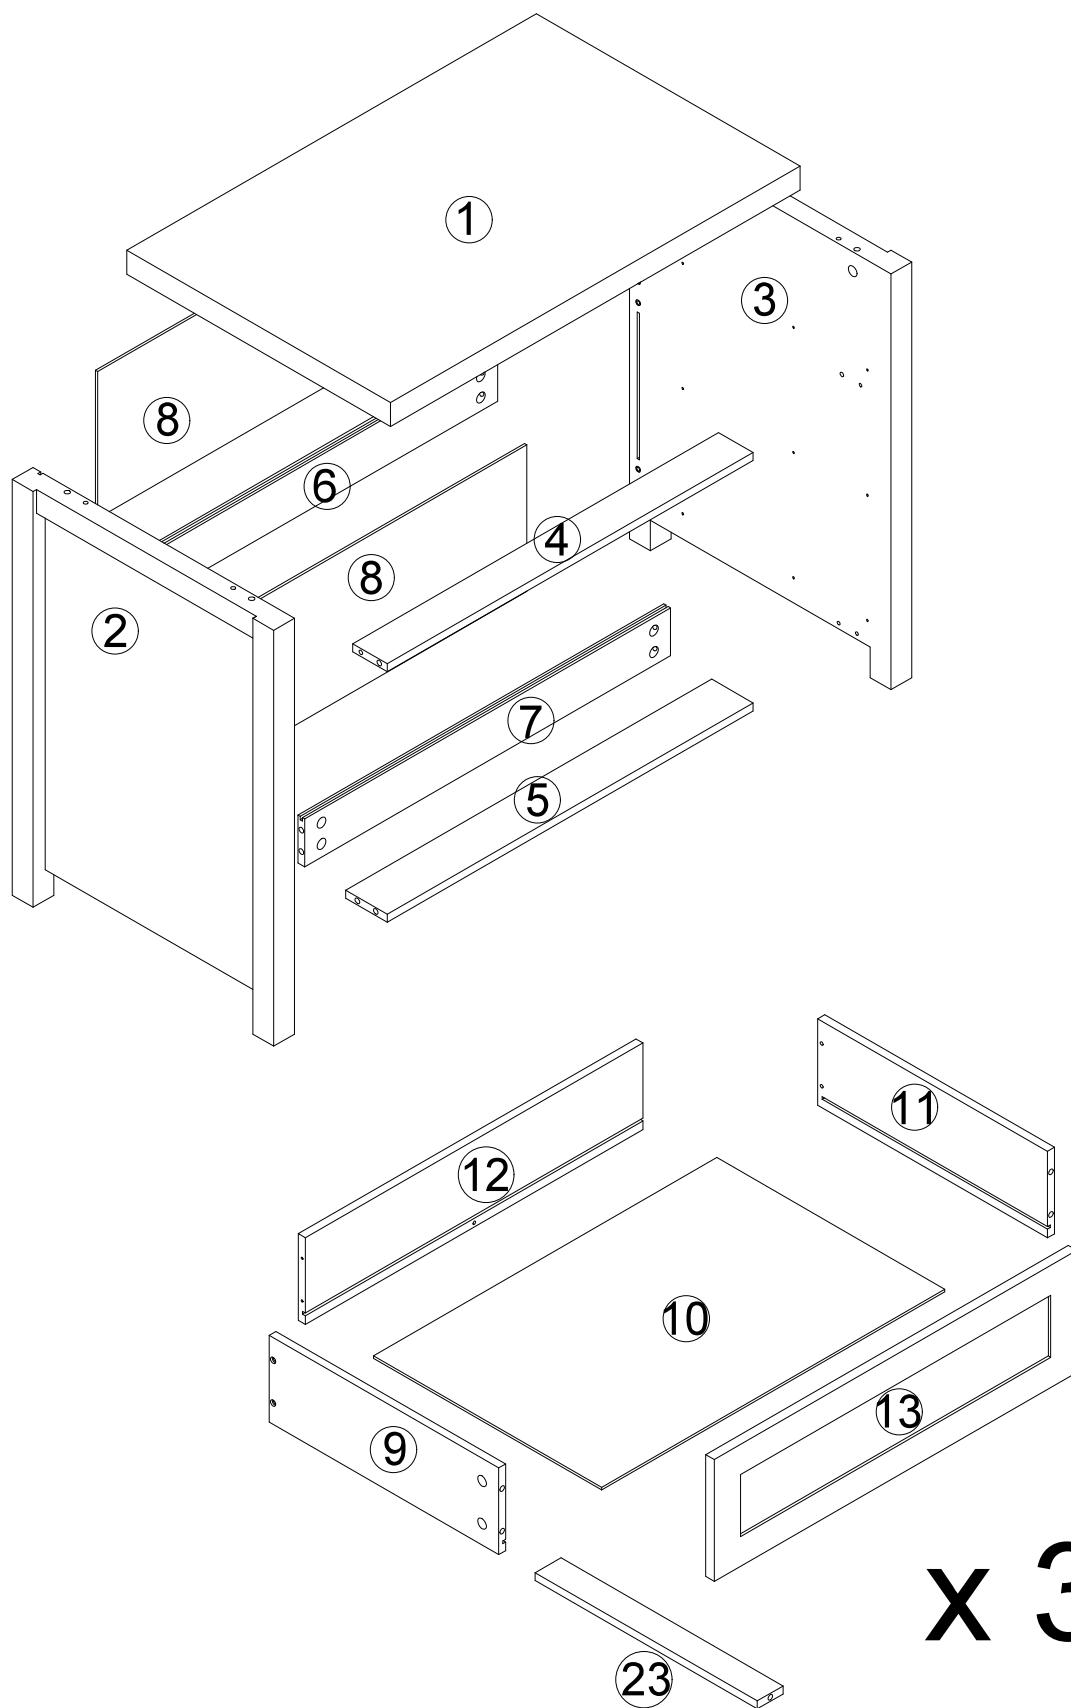


PARTS LIST

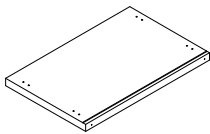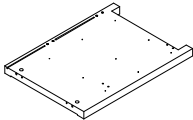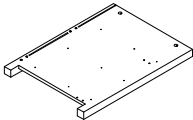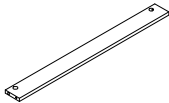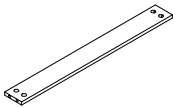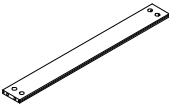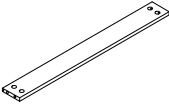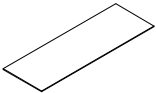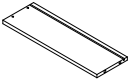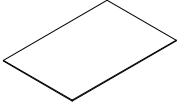Item	Reference Image	Qty
1		x1
2		x1
3		x1
4		x1
5		x1
6		x1
7		x1
8		x2
9		x3
10		x3

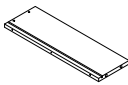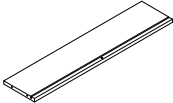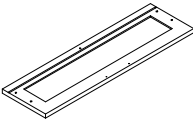
Item	Reference Image	Qty
11		x3
12		x3
13		x3
23		x3

HARDWARE
LIST

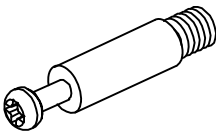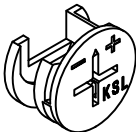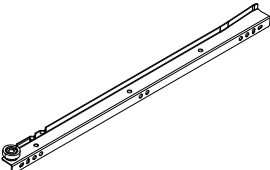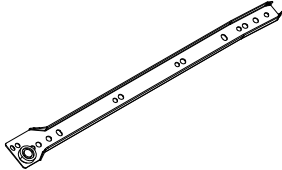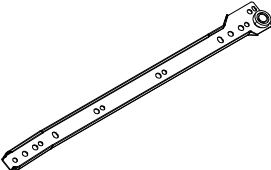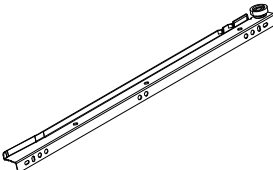A  x33	B  x33	C  ø6*30MM x6	D  M4*35 x15
E  M3*12 x42	F  x3	G  x12	H  x2
I  M3*16 x12	J  x33	DL  x3	CL  x3
CR  x3	DR  x3		


1

①


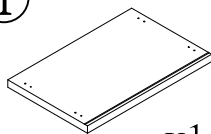






x1





A



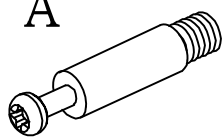


x4

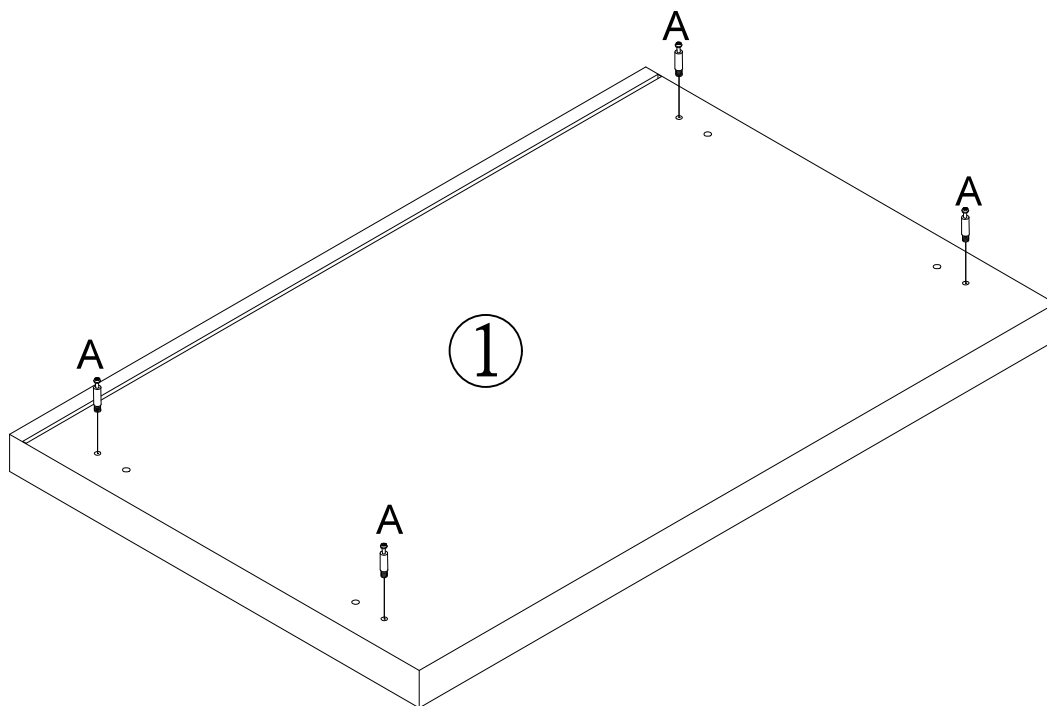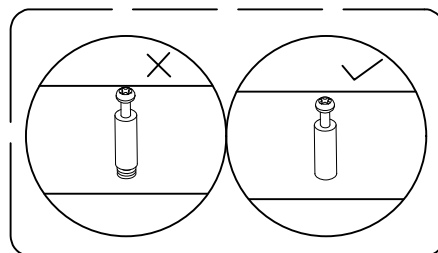


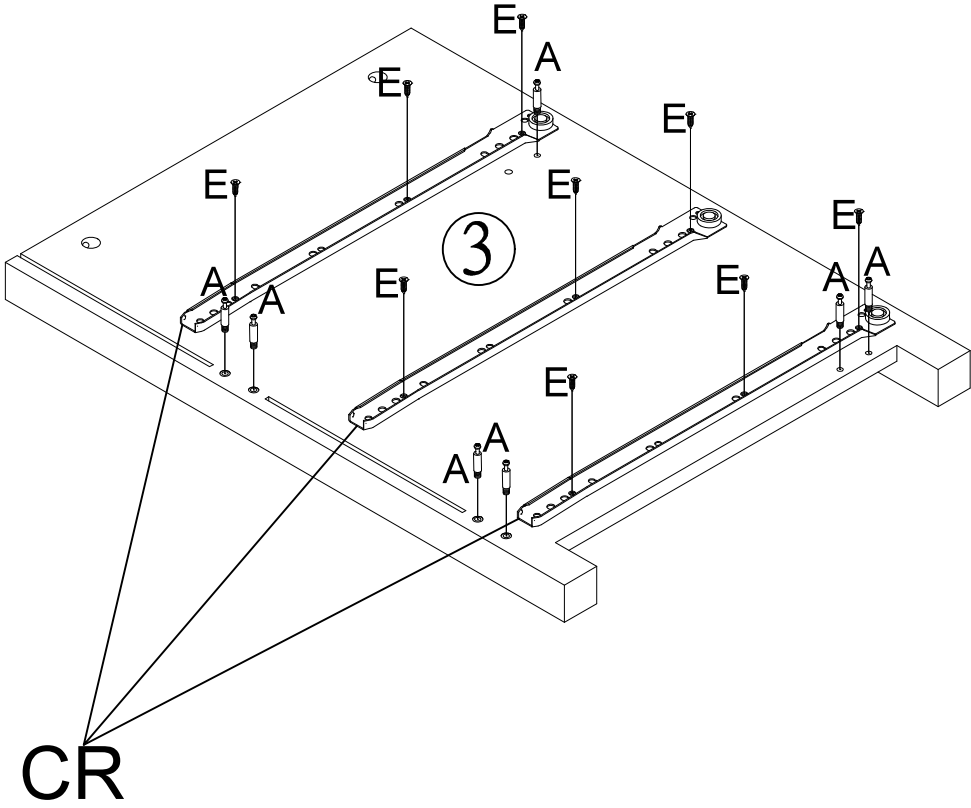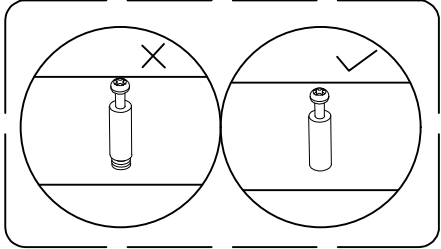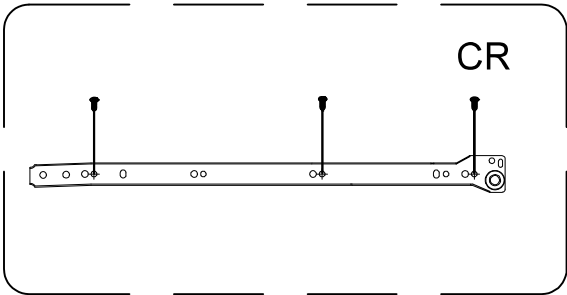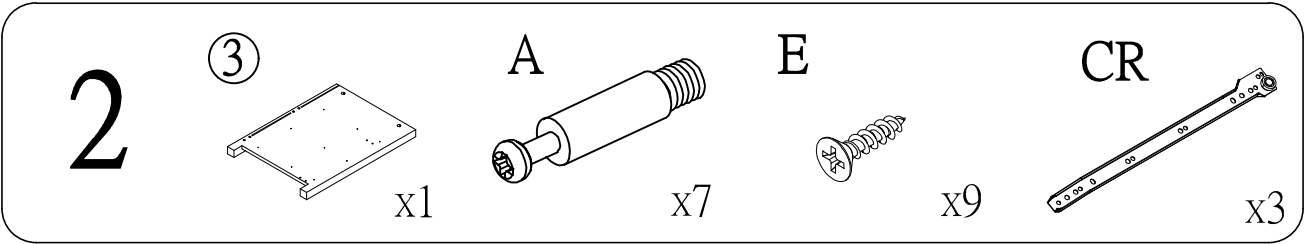

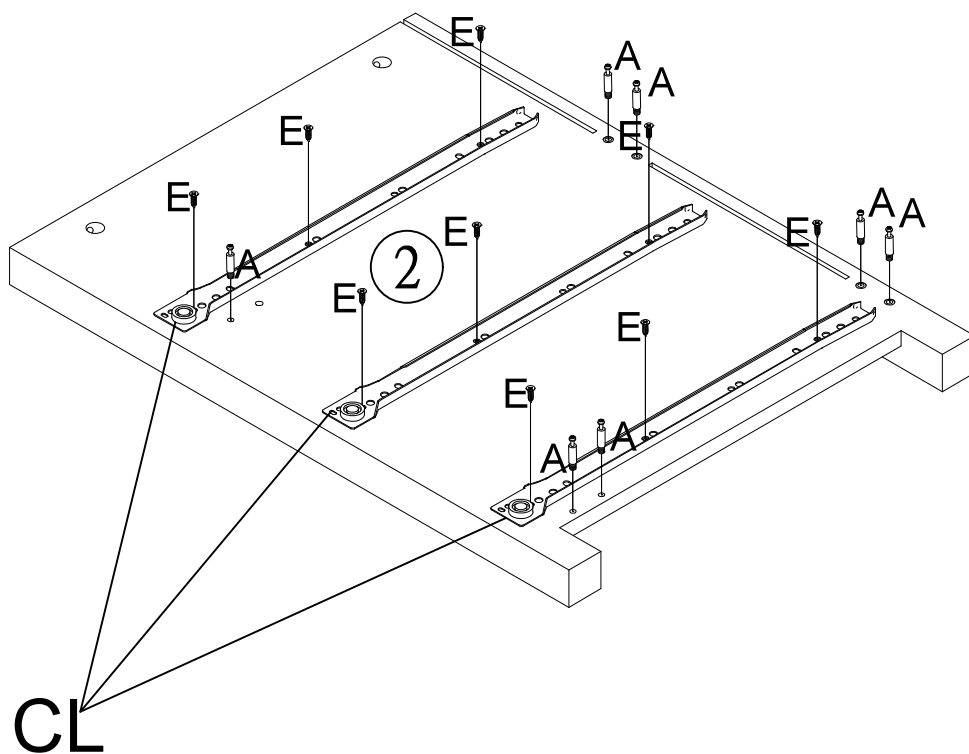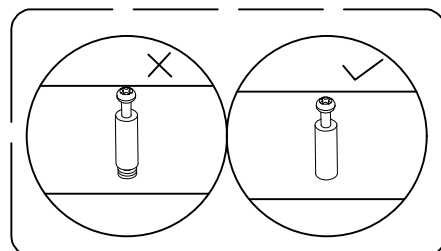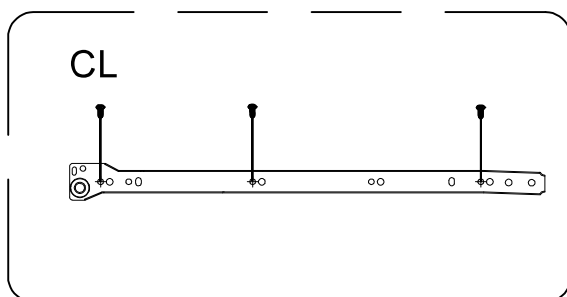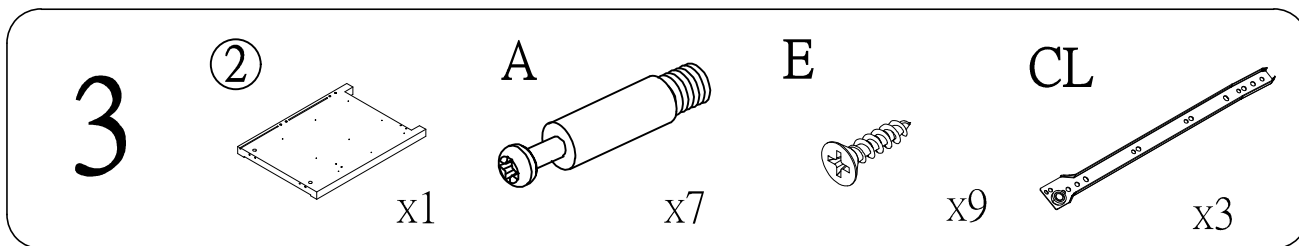

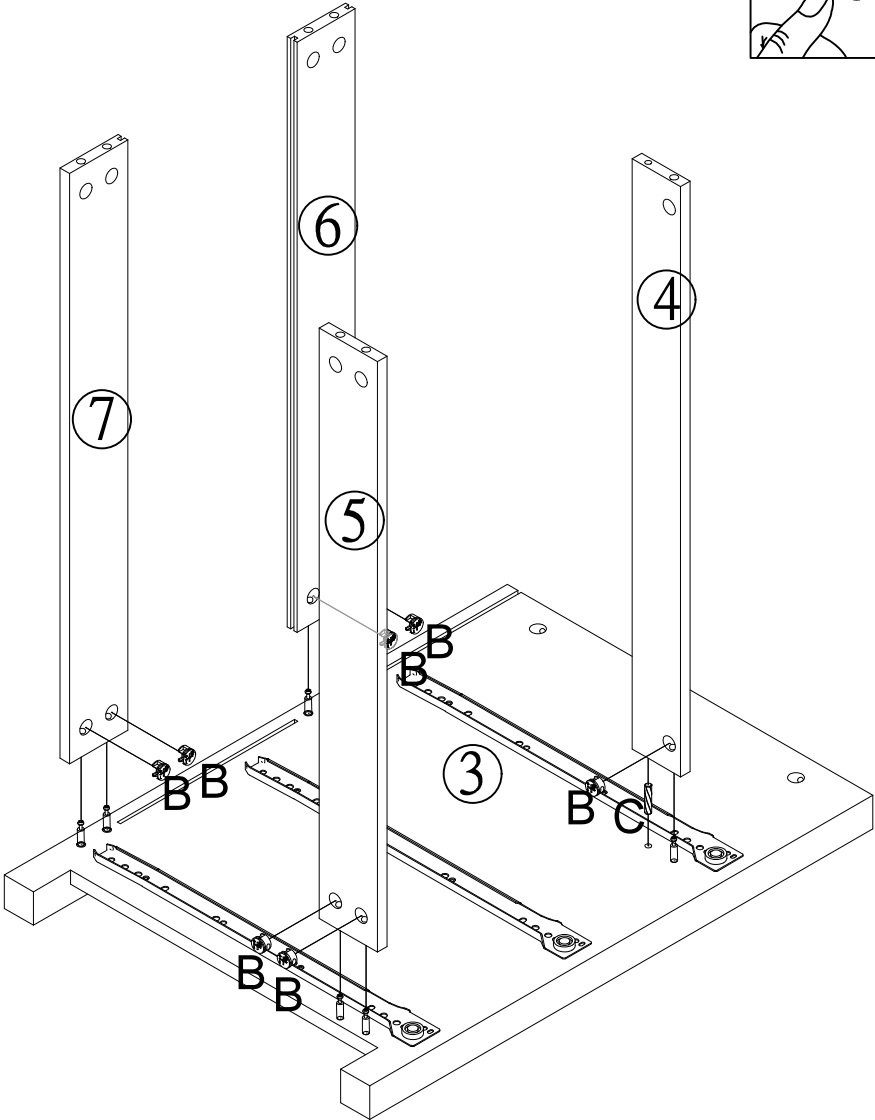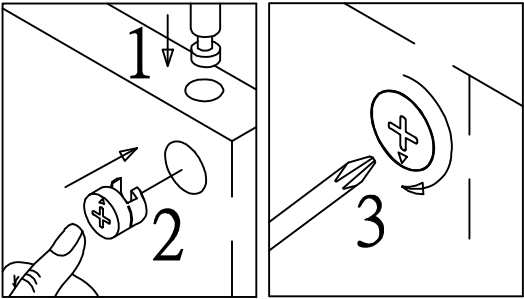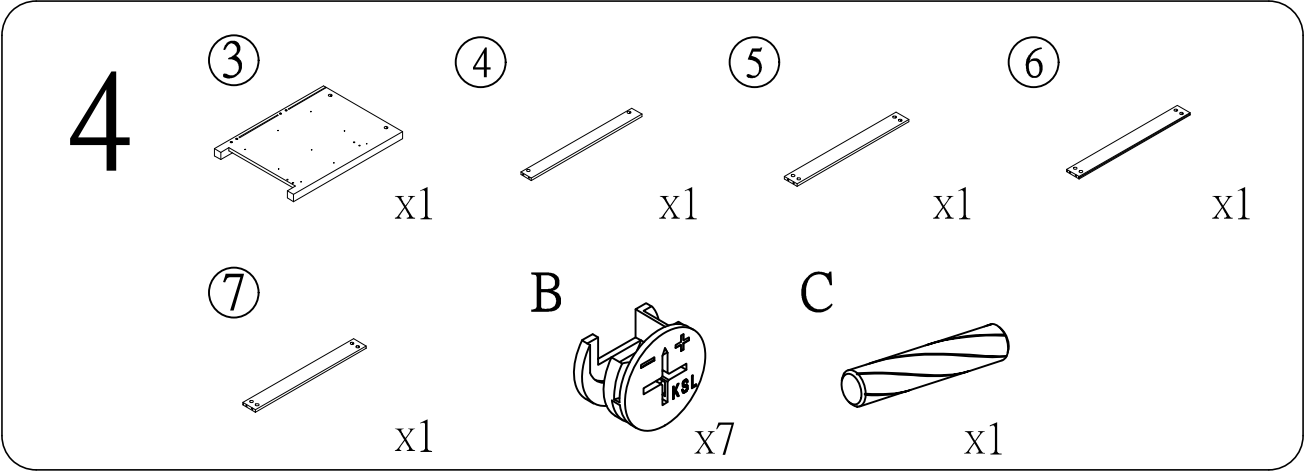


5 ⑧
x1

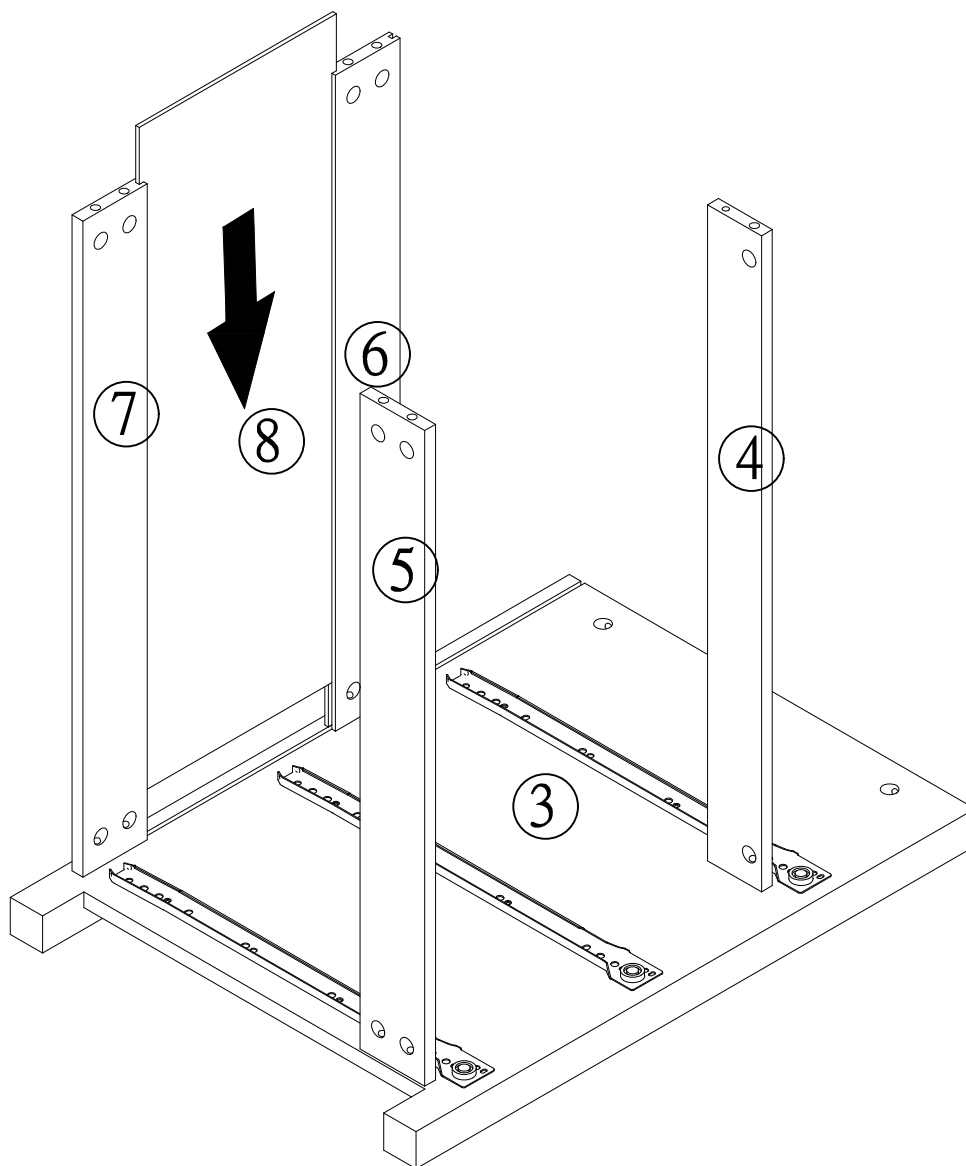


6

②

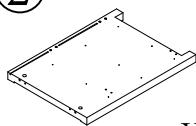

x1

B



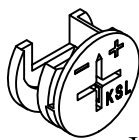


x7


C



x1

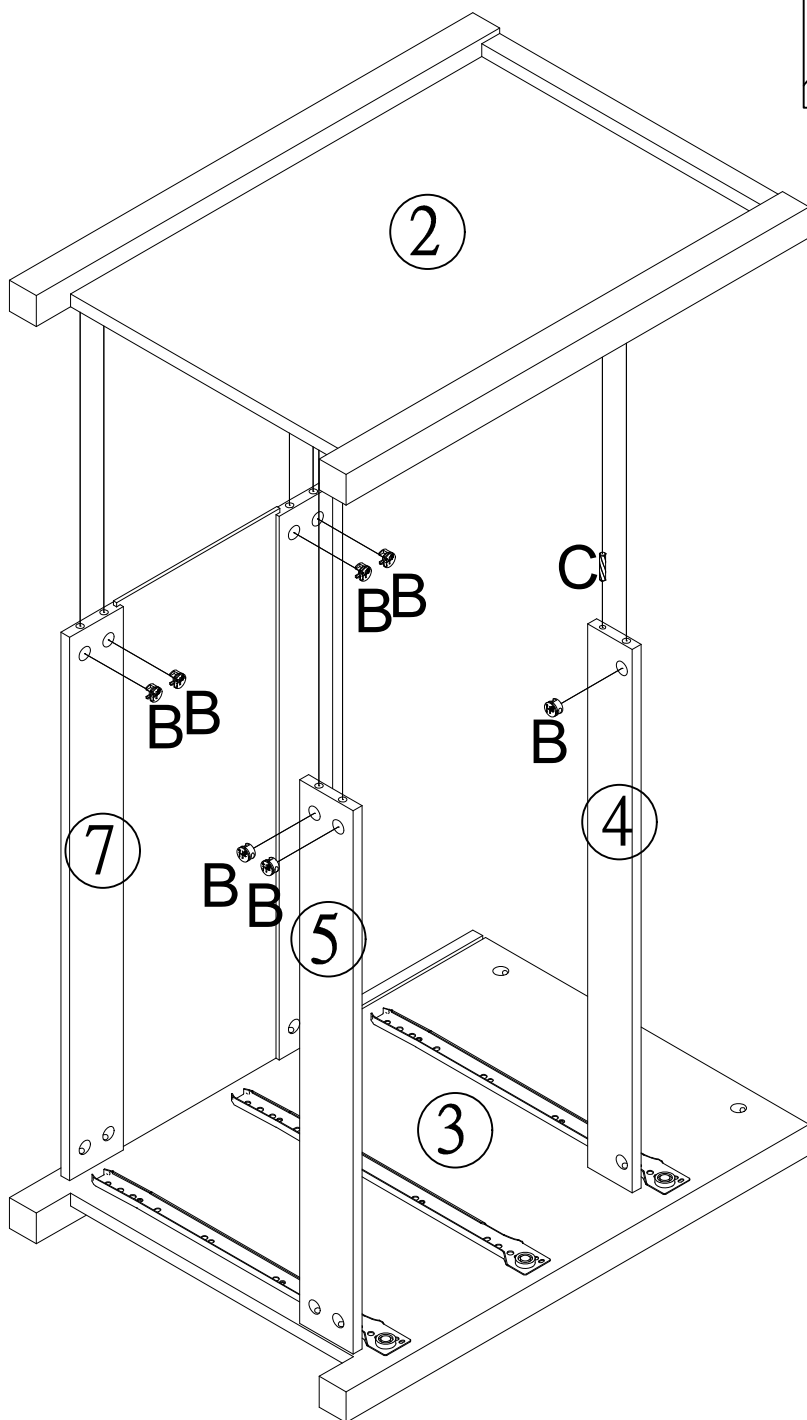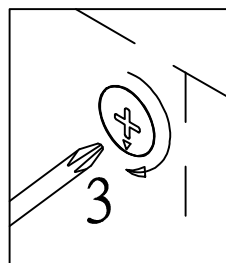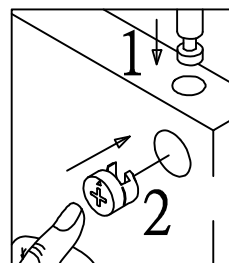


7 ⑧
x1

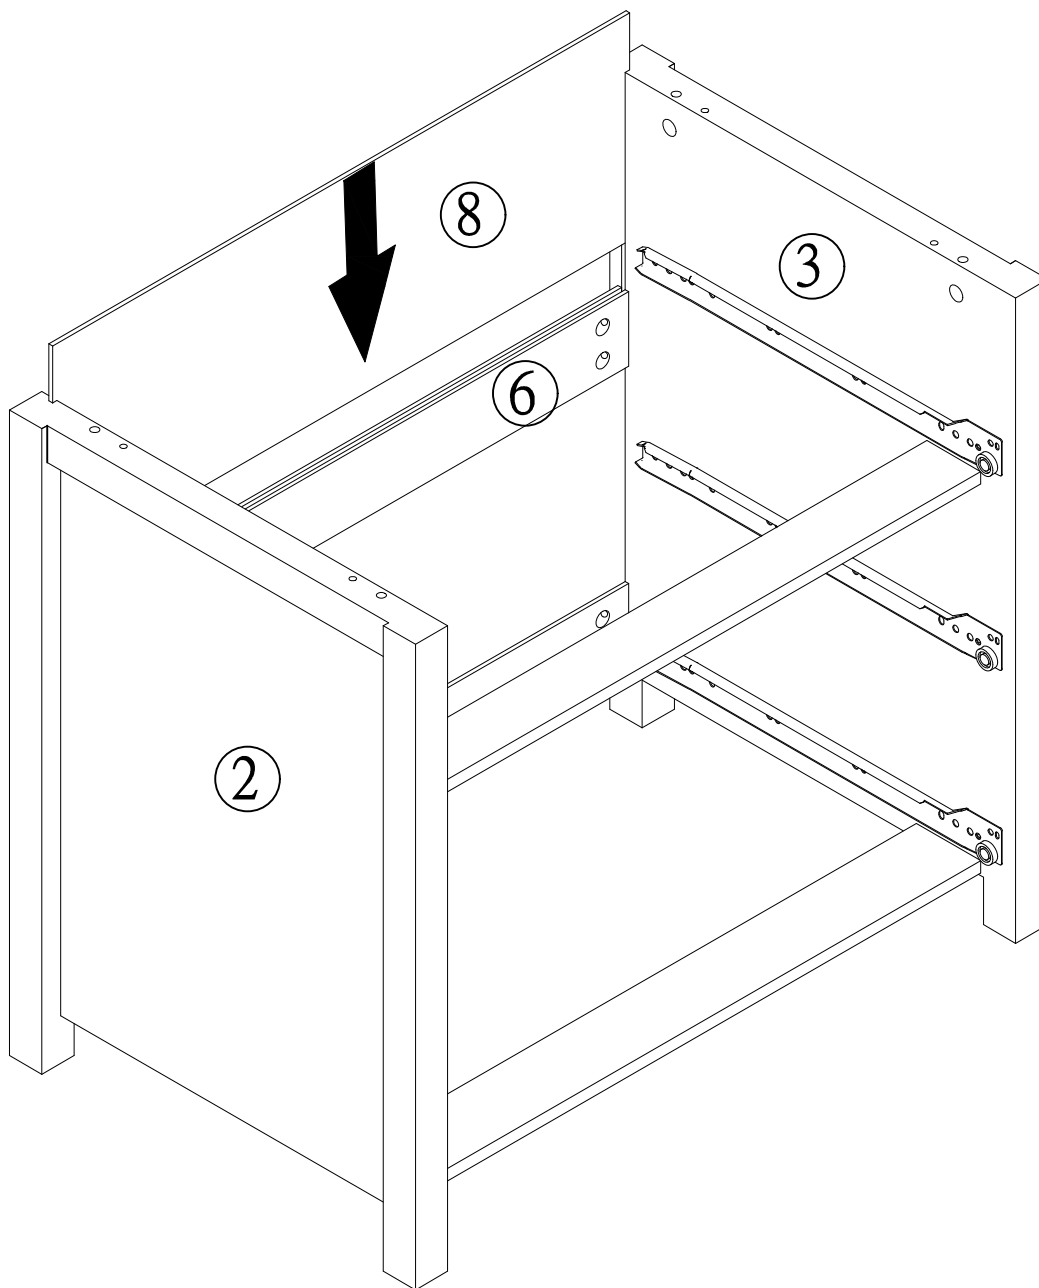


8

1

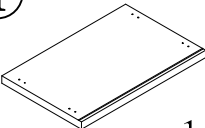

x1

B


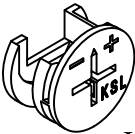


x4

C



x4

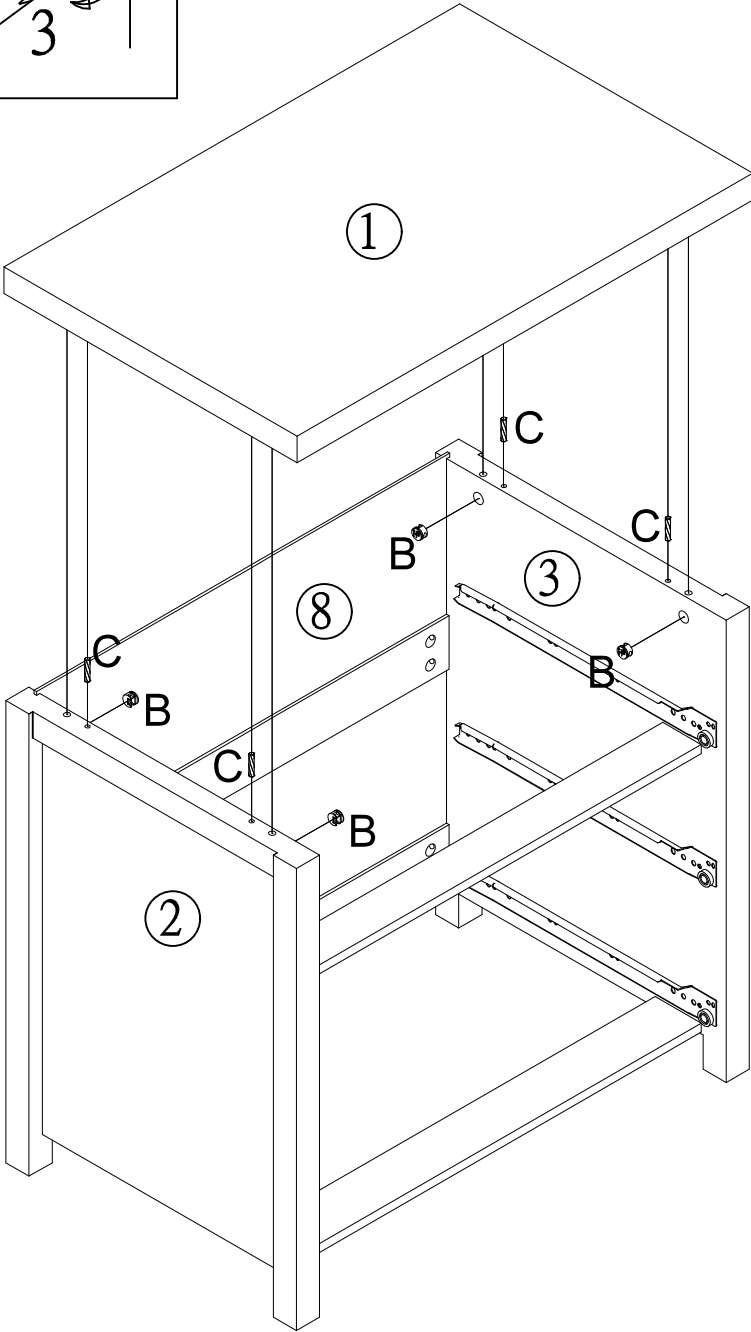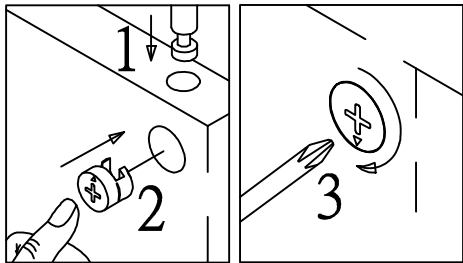

9

⑨




x3

⑪




x3

⑫




x3

⑬




x3

⑳



x3

A



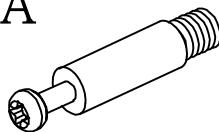


x15

D




x15

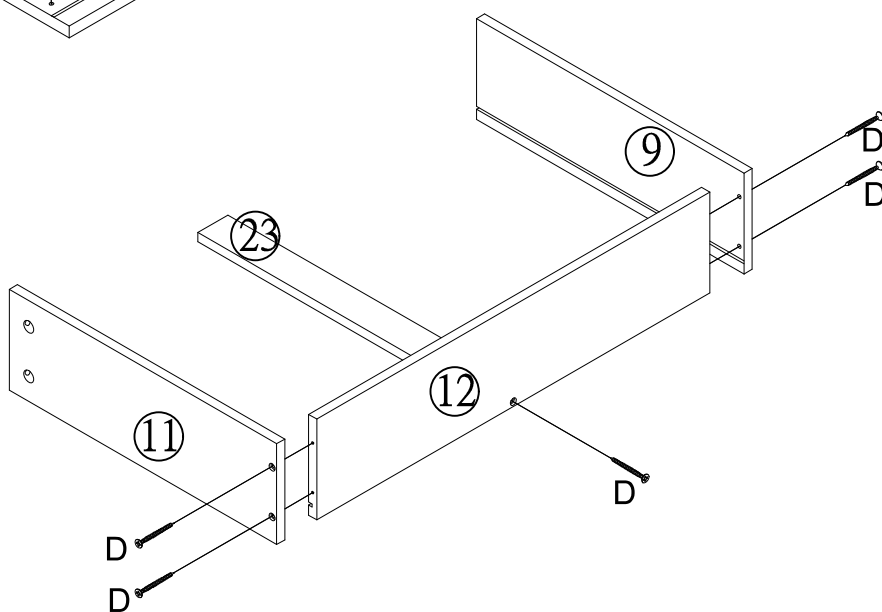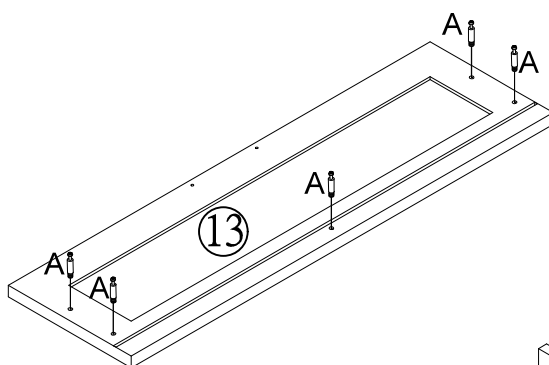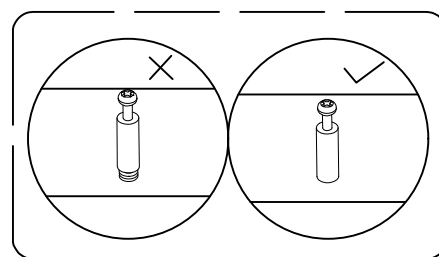

x 3


10

⑩




x3

⑬







x3

B

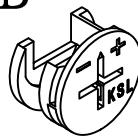

x15

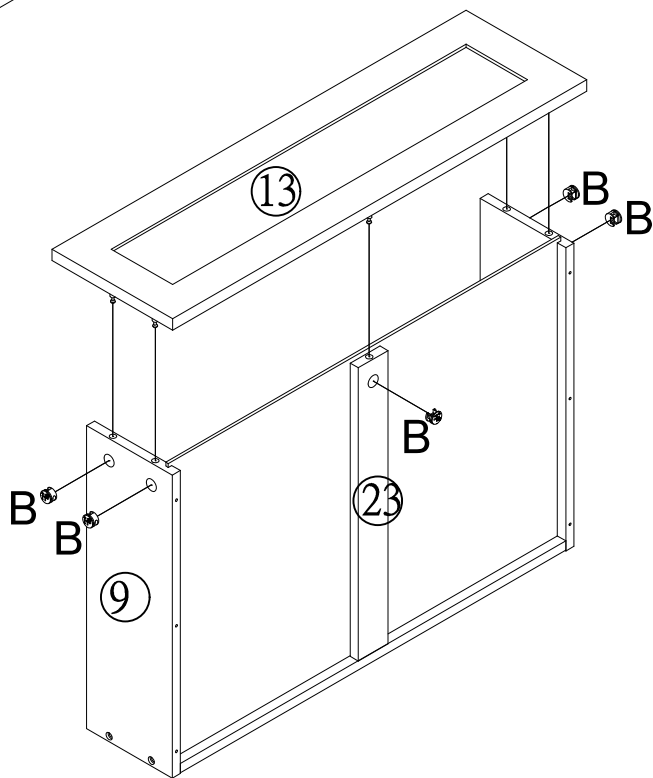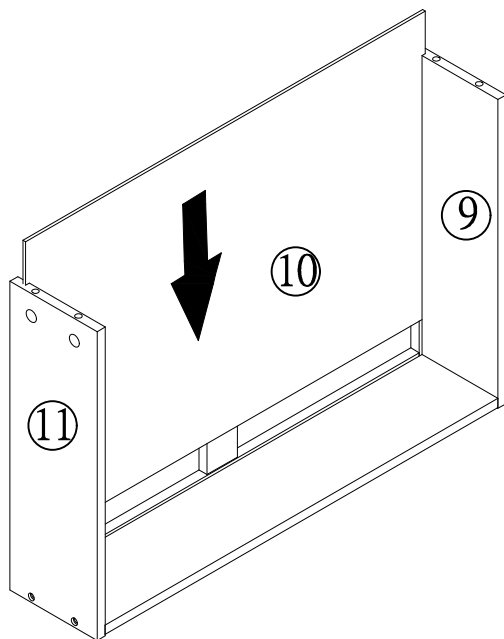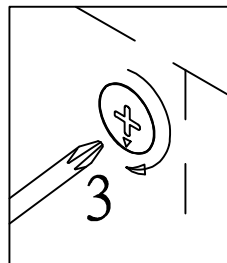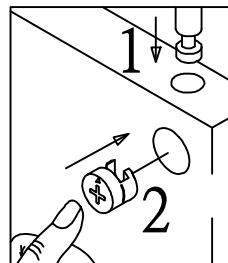

x 3

11

E




x24

F




x3

DL



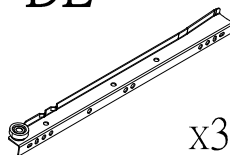


x3

DR

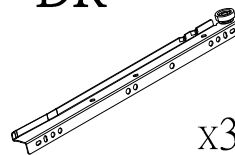


x3

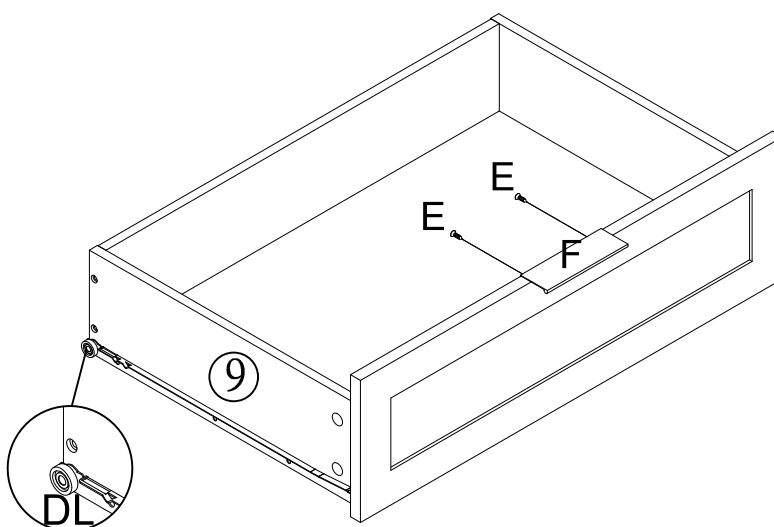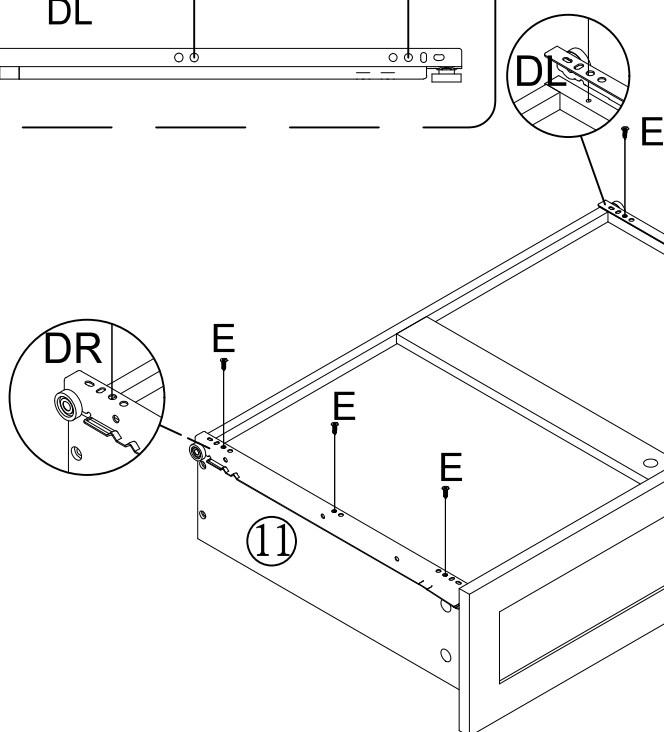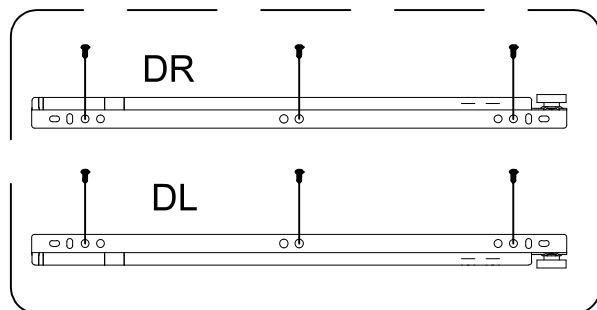

x 3

12^J ○
x33

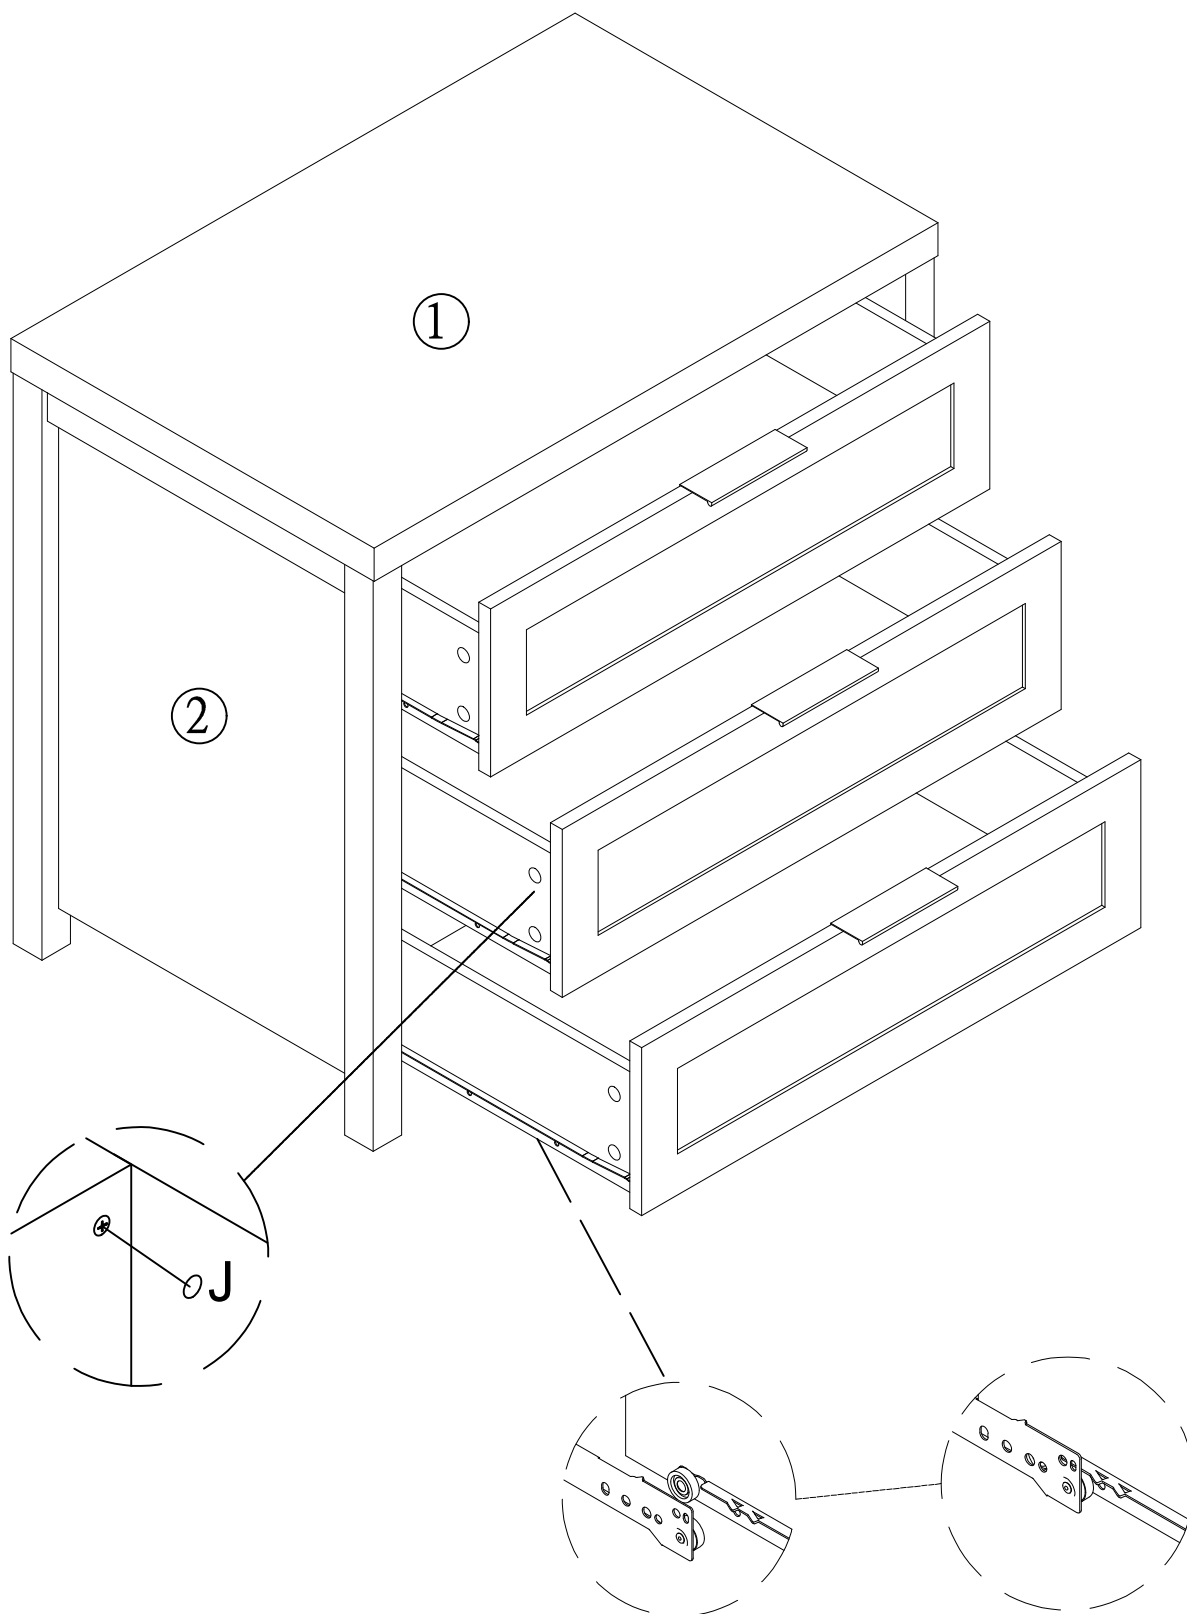

13

G



x12

H




x2



I




x12

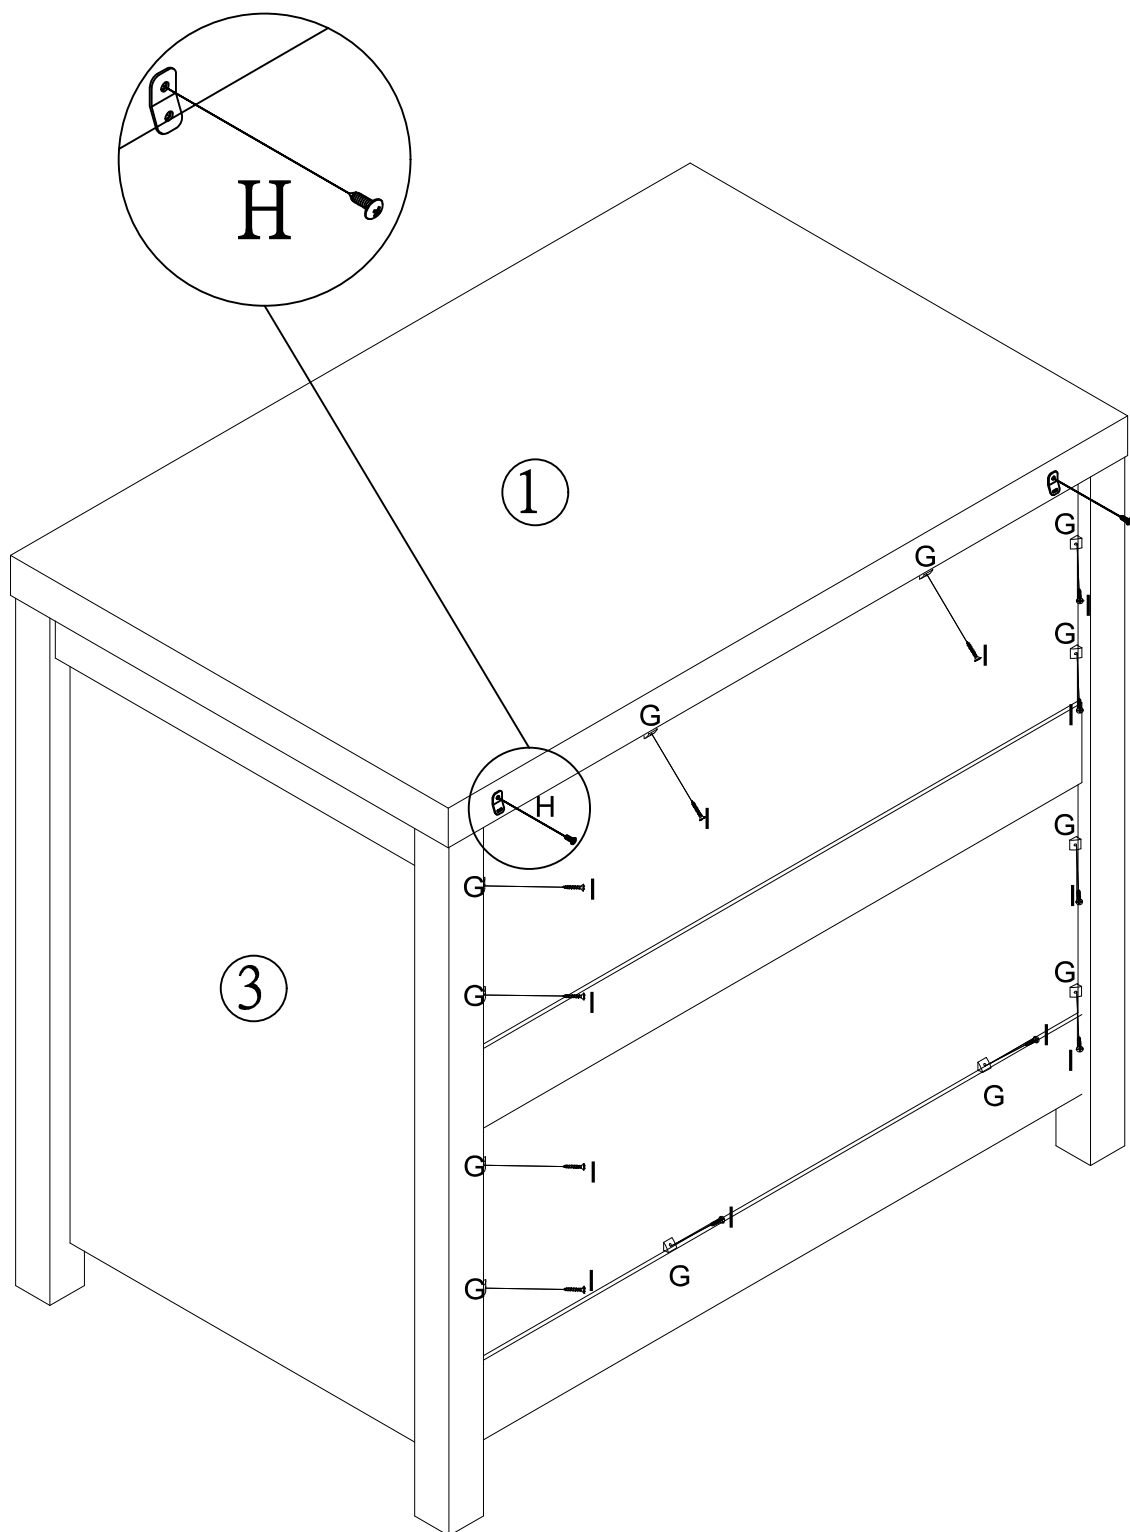

14

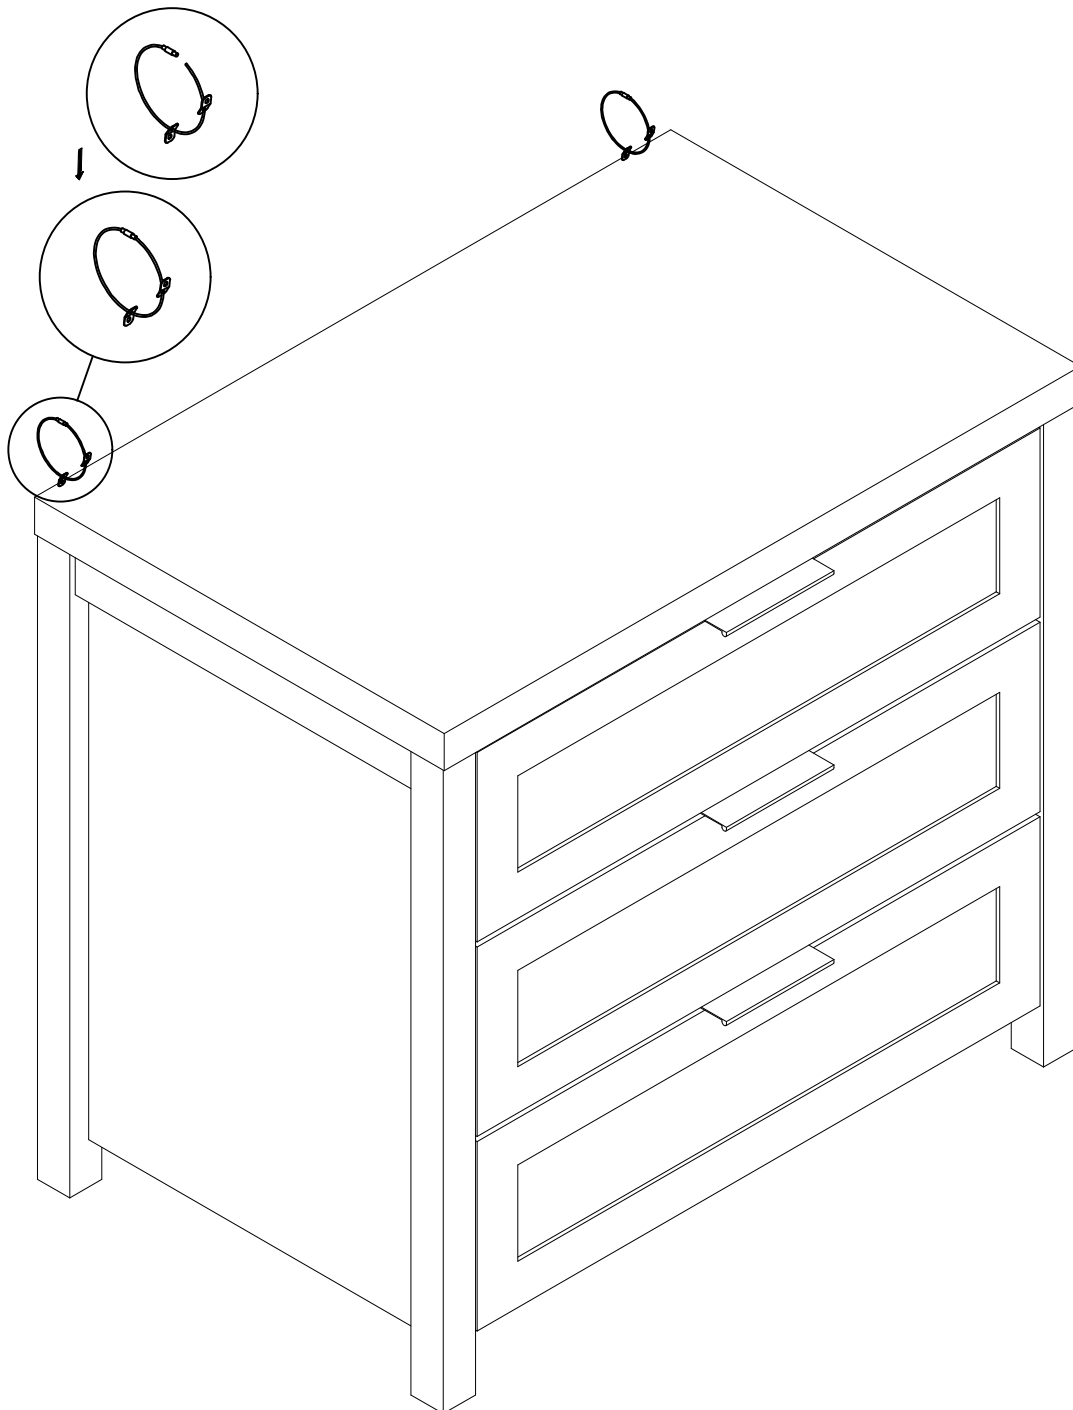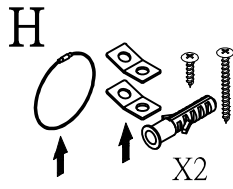

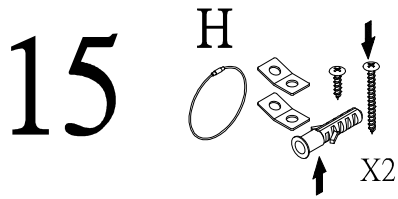**WARNING**

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

Installation Instructions:

1. Position the furniture and mark the approximate locations of the bracket screw holes on the wall.
2. Drill a 3/8-inch hole into the wall.
3. Press the plastic wall anchor into the hole and tap it gently until its flange sits flush against the wall surface. Secure the bracket to the wall with long screws.
4. Uncoil the steel cable when placing the furniture, thread it through the cabinet and wall, then tighten to lock firmly.

