


ASSEMBLY INSTRUCTIONS

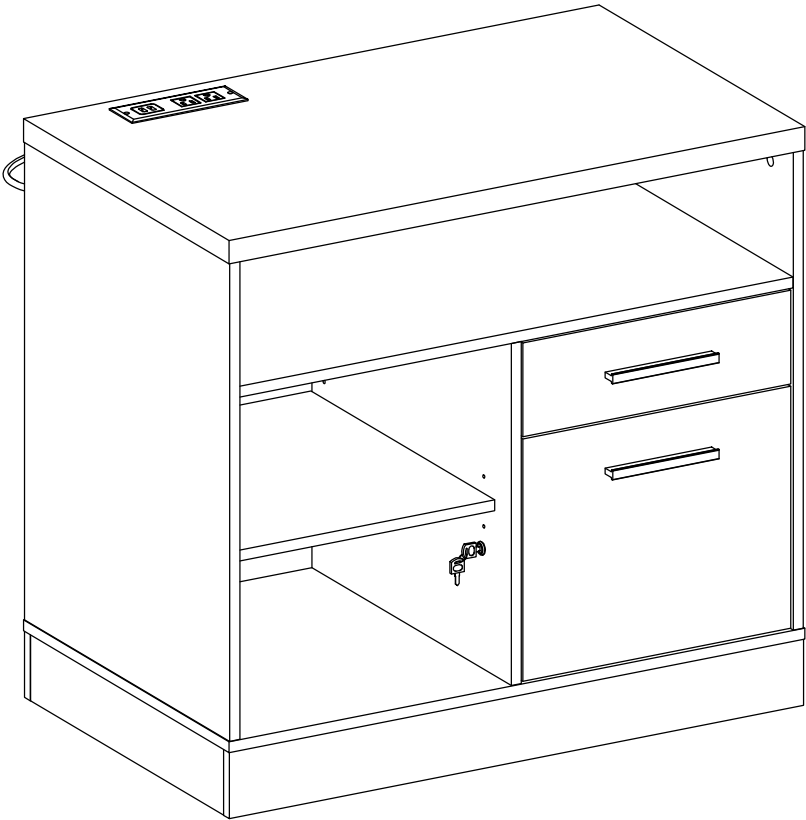

Installation Video



ModernMate





1

x1

2

x1

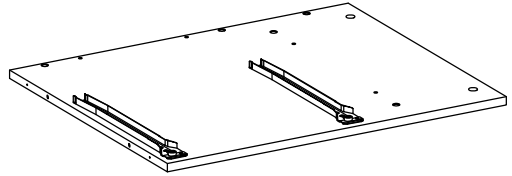
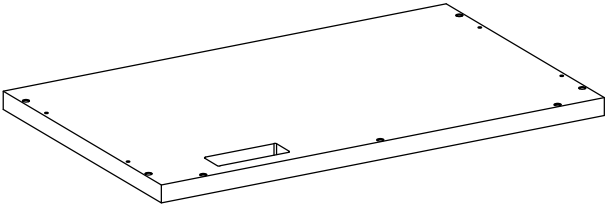


3

x1

4

x1

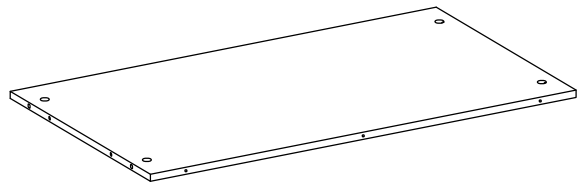
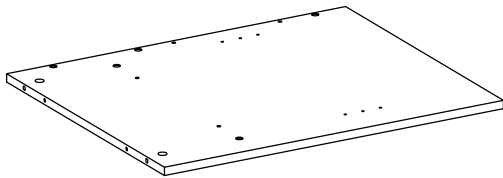


5

x1

6

x1

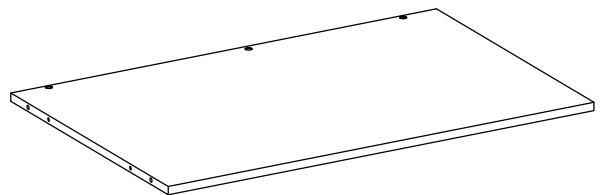
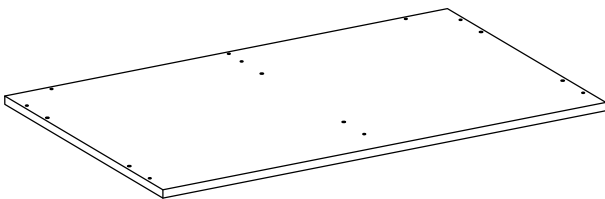


7

x1

8


x1

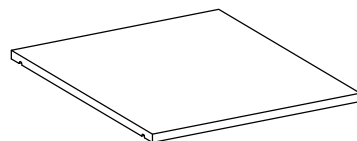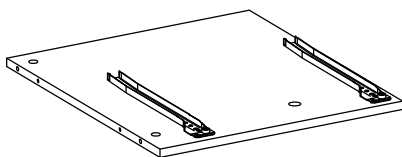




9

x1

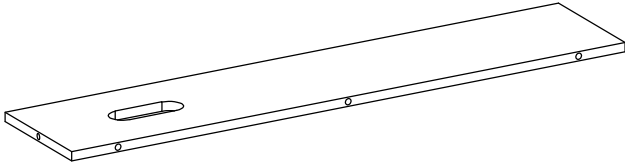


10

x2

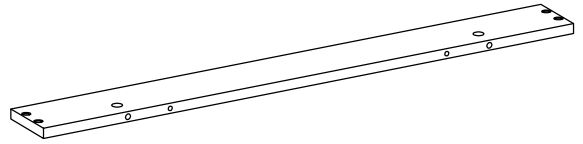


11

x2

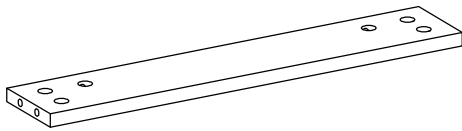


12

x1

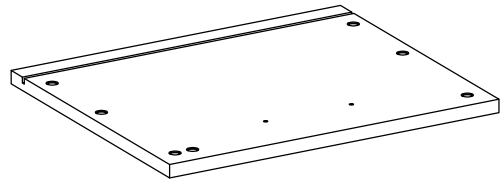


13

x1

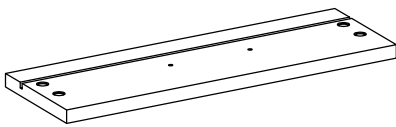


14

x1

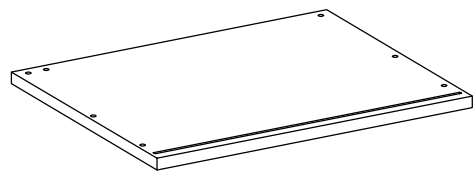


15

x1

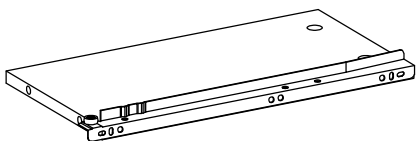

16


x1

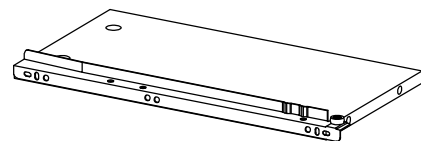




17

x1




18

x1




19

x1

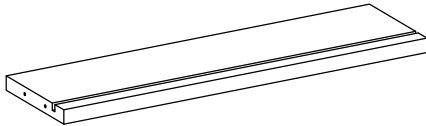


20

x2

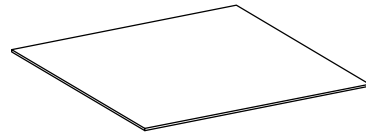


21

x2

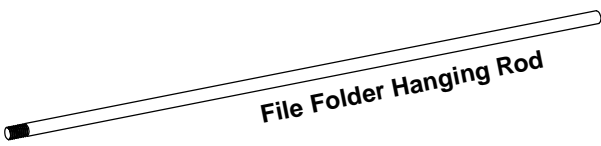


File Folder Hanging Rod


A x46+2

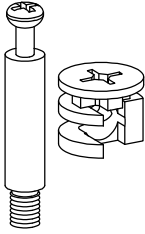

B x26+1




C x17+1



M5x46

D x4




M4x18

E x4




F x4




G x2




H x4

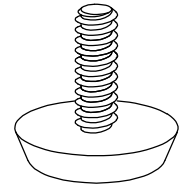


I x1




J x1

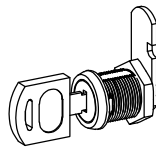


K x1




L x1




Z1 x1

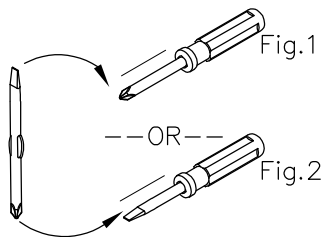


Z2 x1

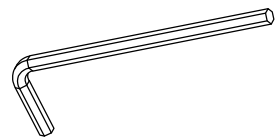

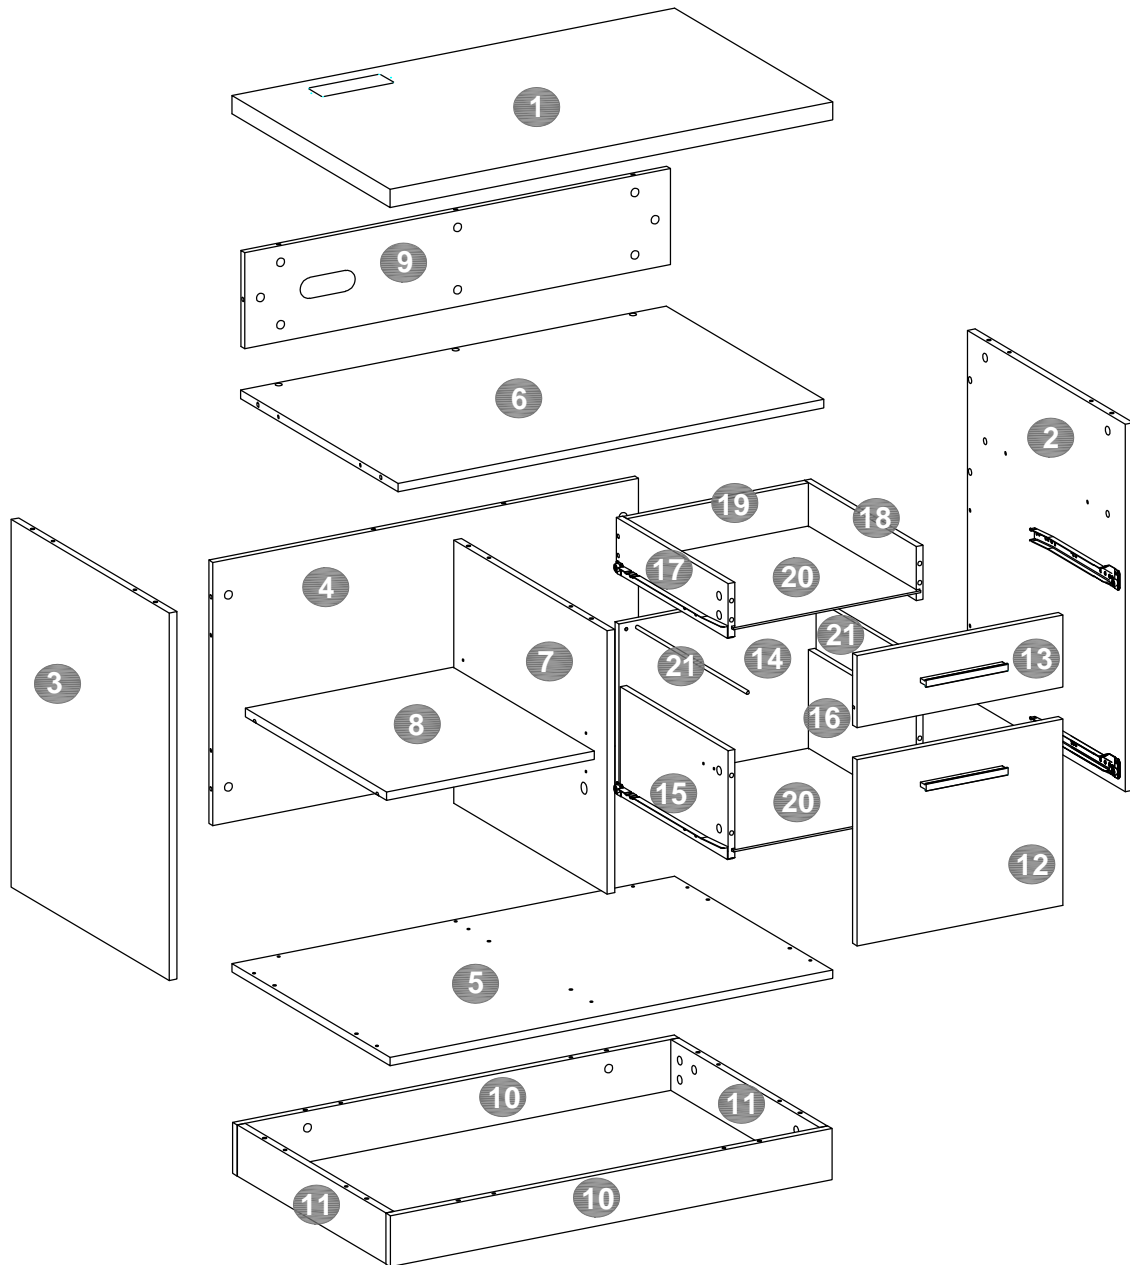




1

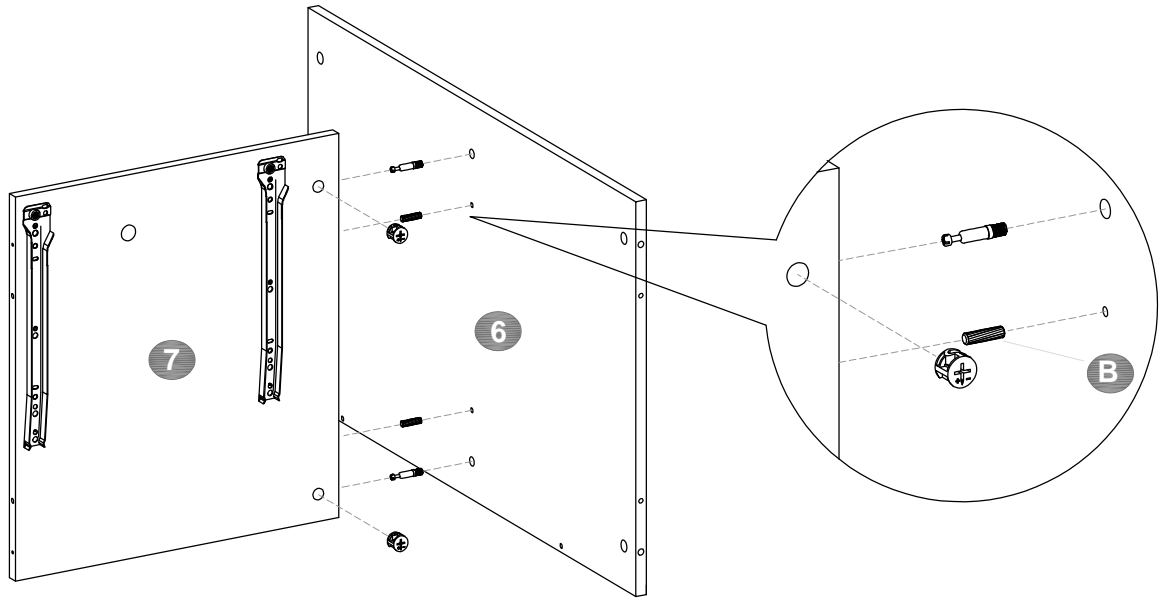


- | | | |
|---|--|-----|
| A | | × 2 |
| B | | × 2 |

2

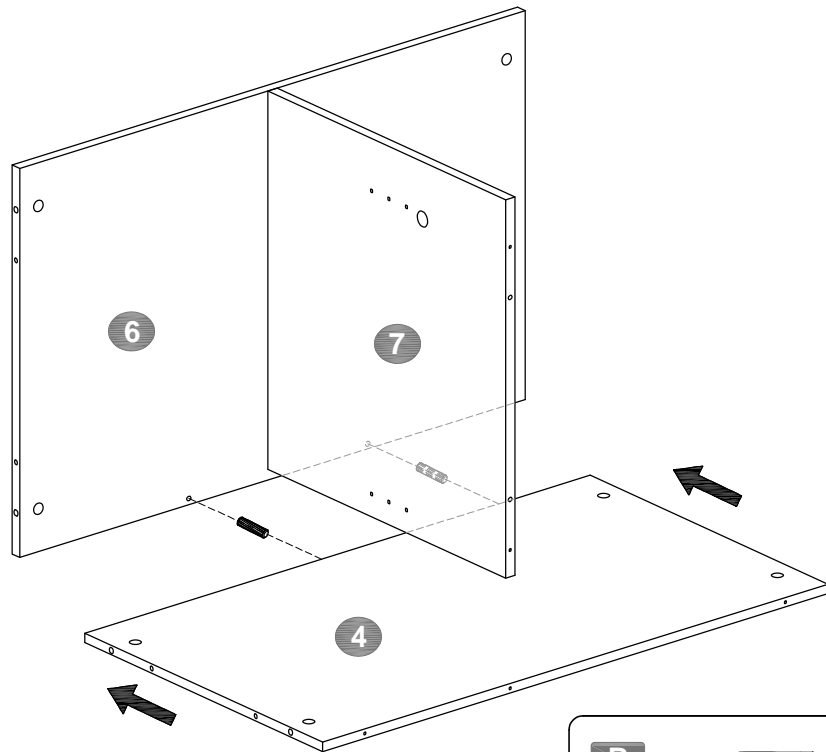


- | | | |
|---|--|-----|
| B | | × 2 |
|---|--|-----|

3

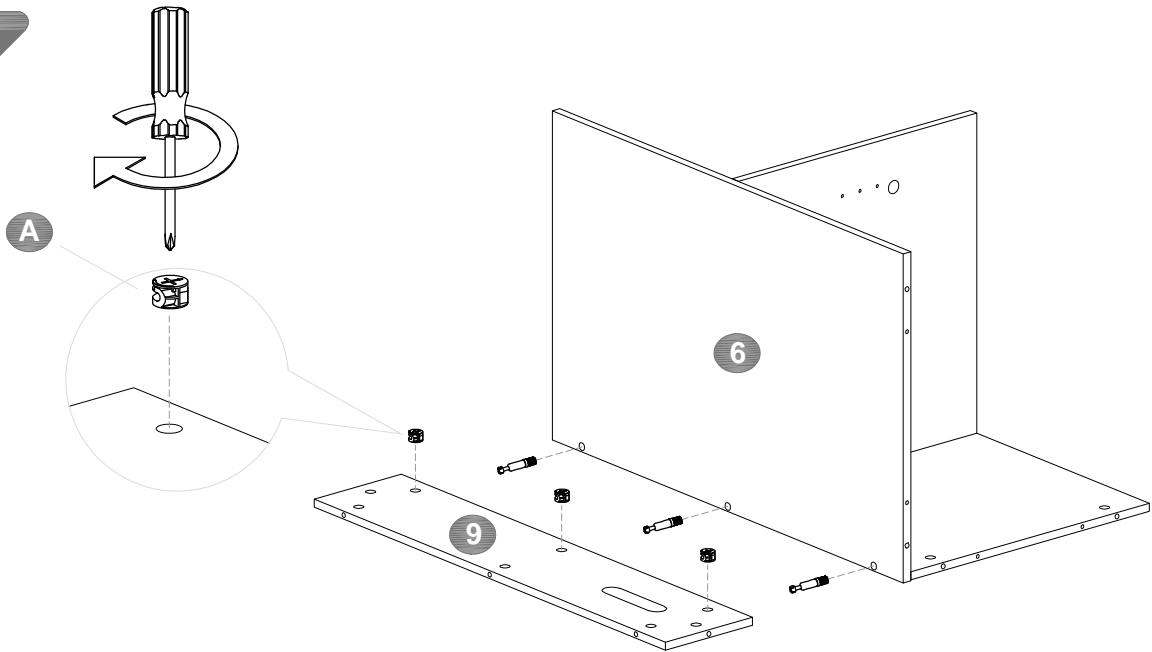



A			× 3
---	--	--	-----



4

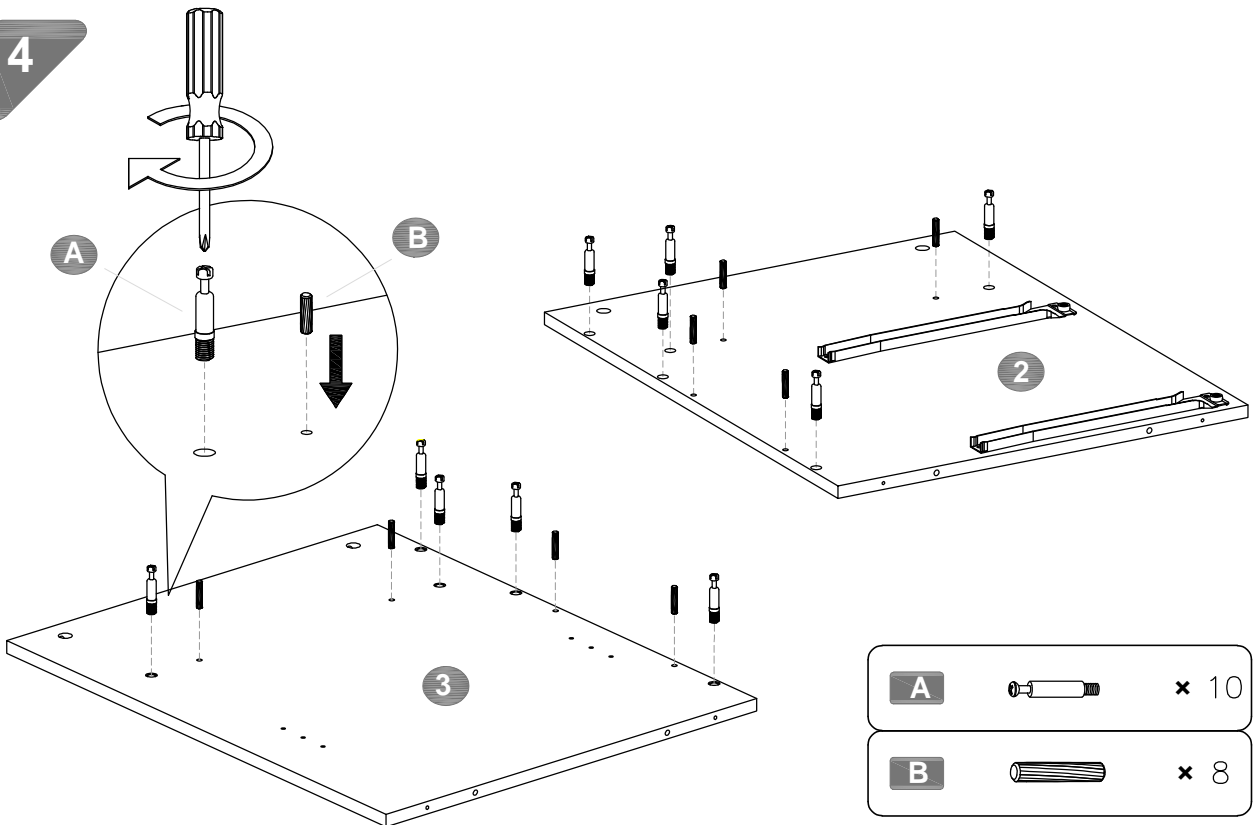


A		× 10
---	--	------


B		× 8
---	--	-----

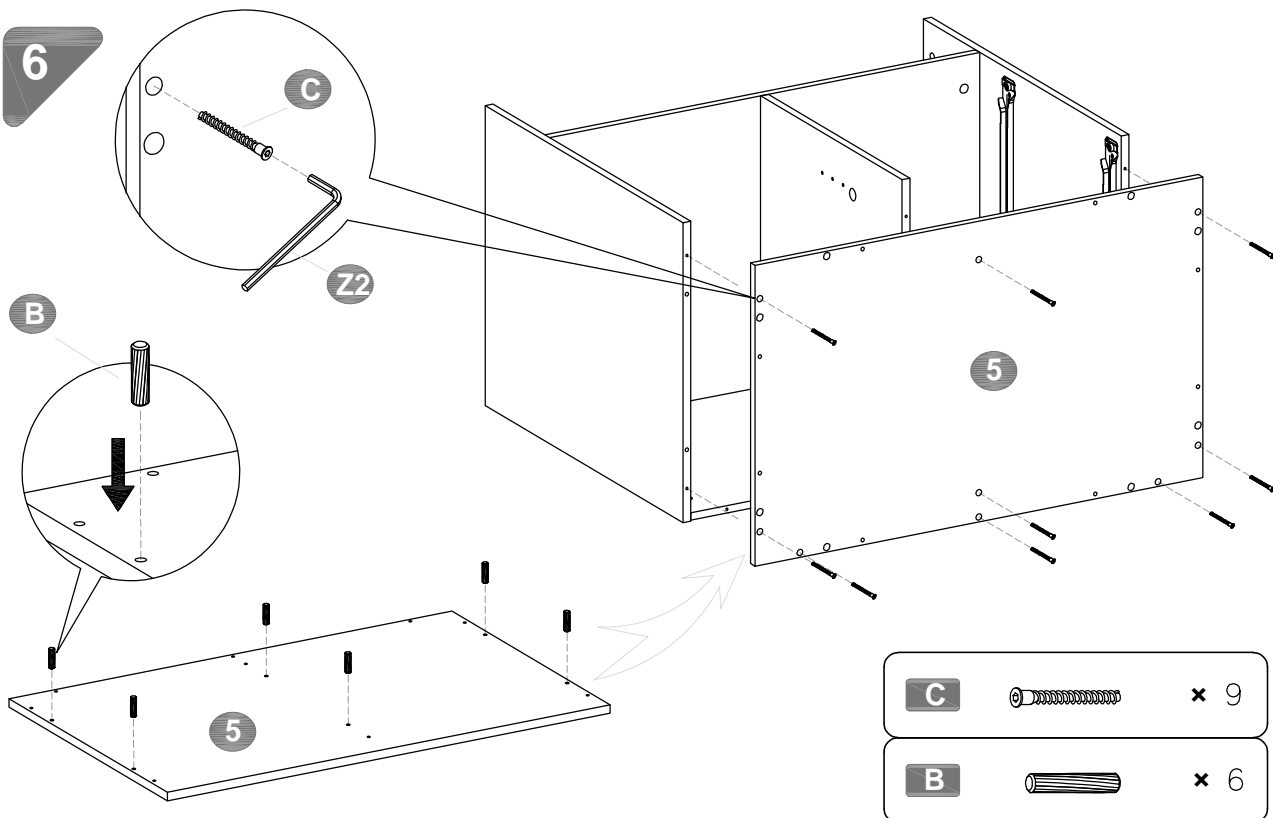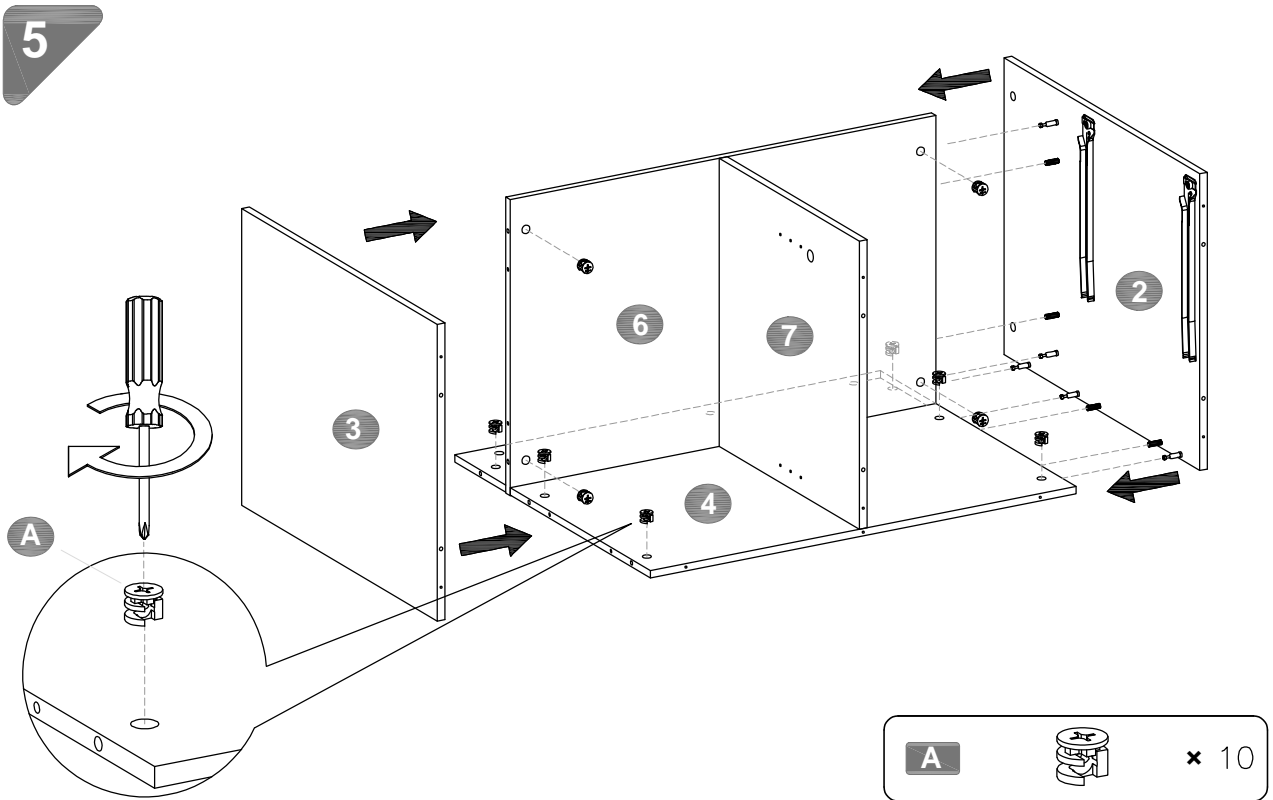

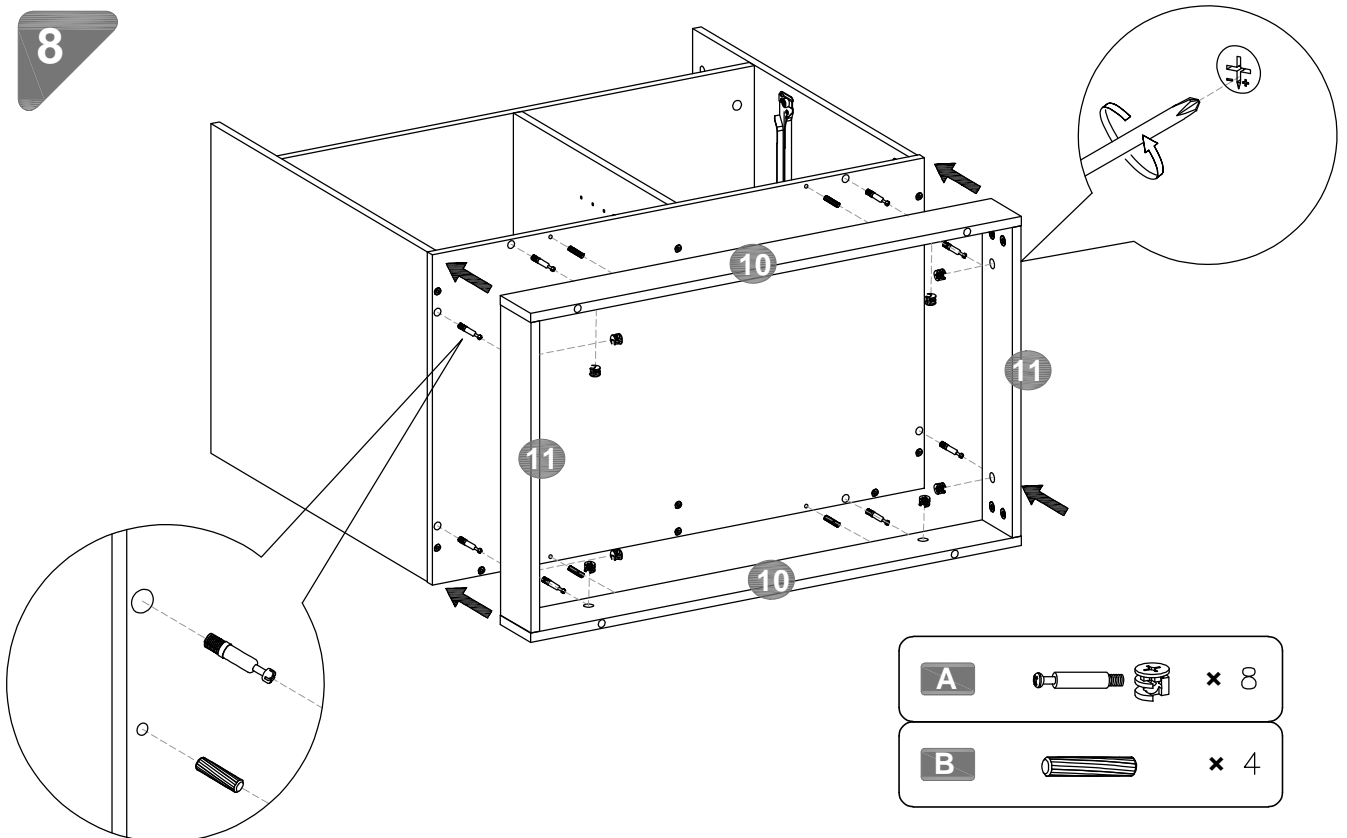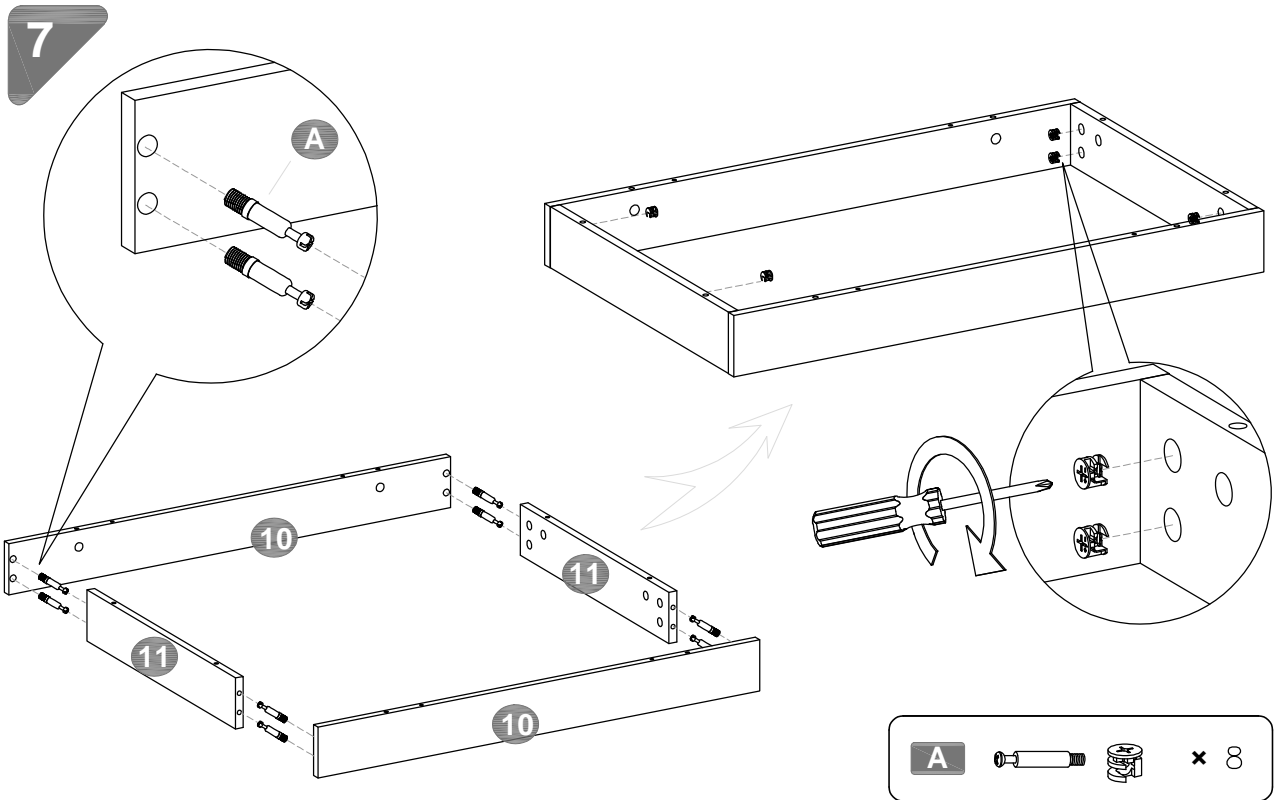



9

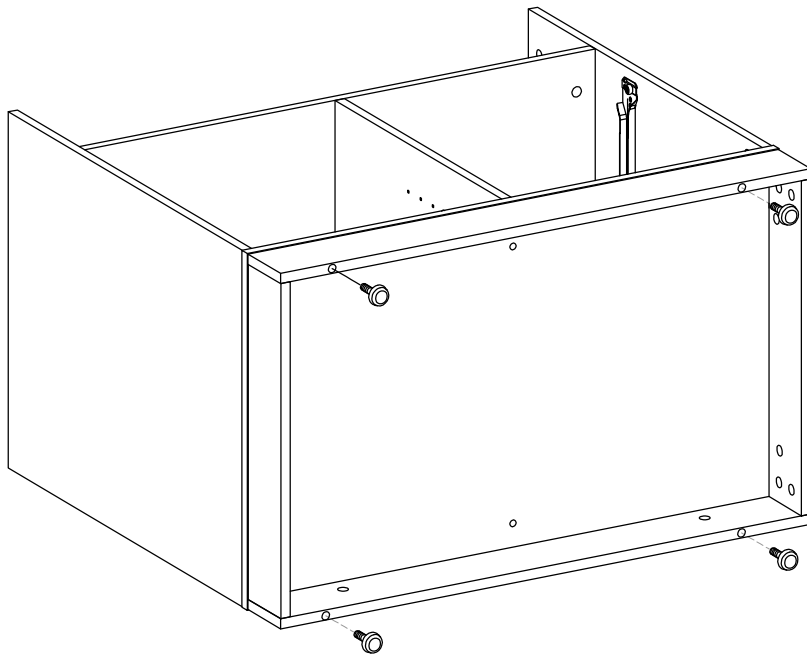


H		× 4
----------	---	-----



10

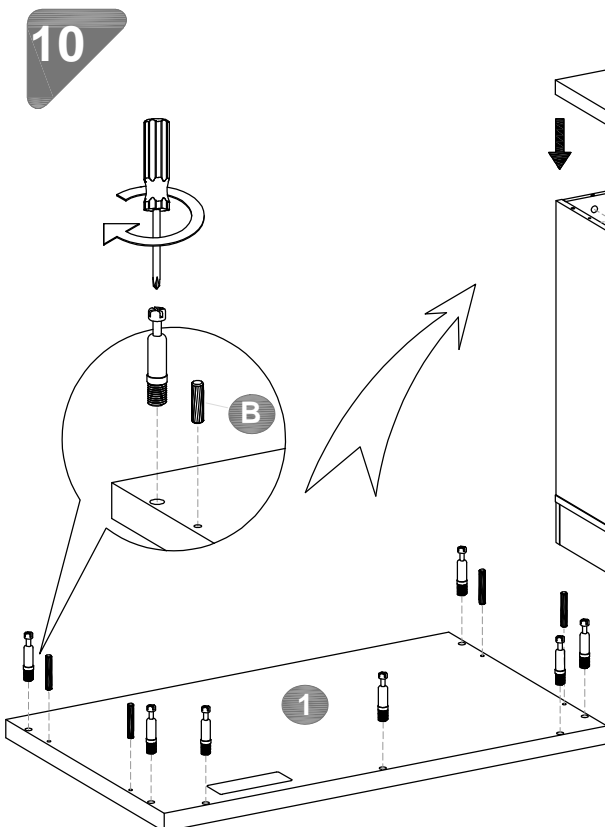


A		× 7
----------	---	-----

B		× 4
----------	---	-----





11

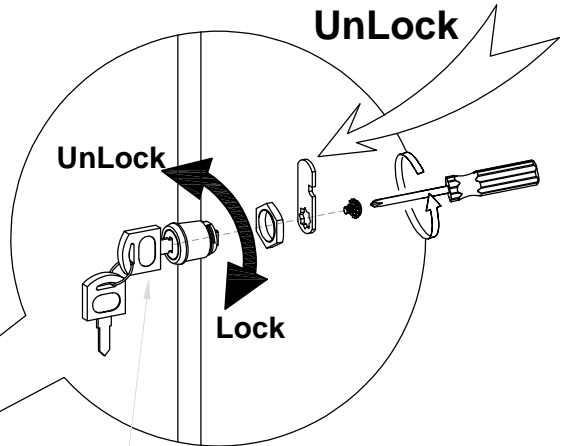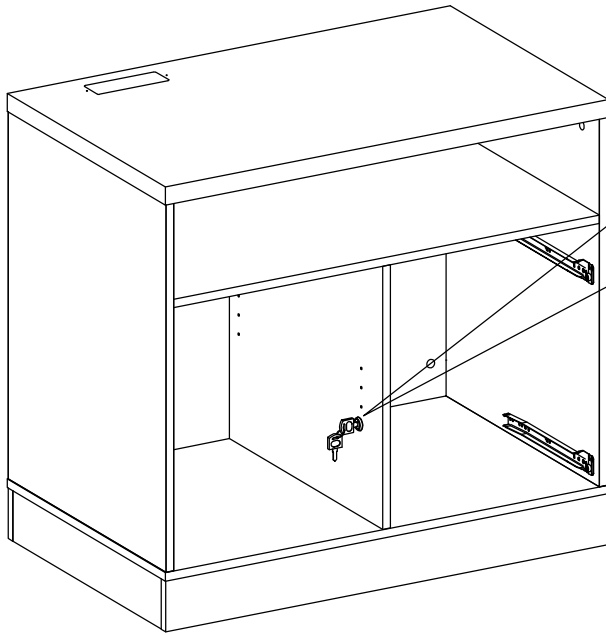


Turn right
(clockwise) 90°
to Lock




12

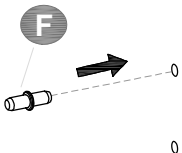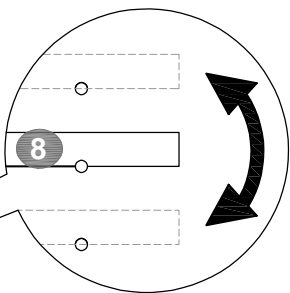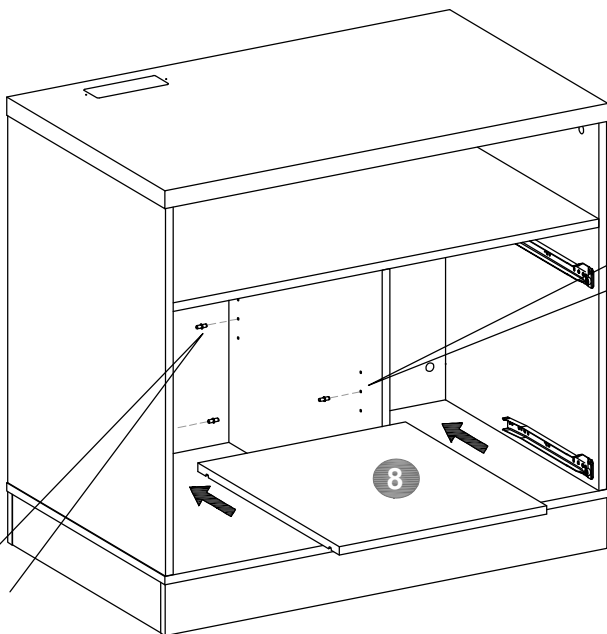


13

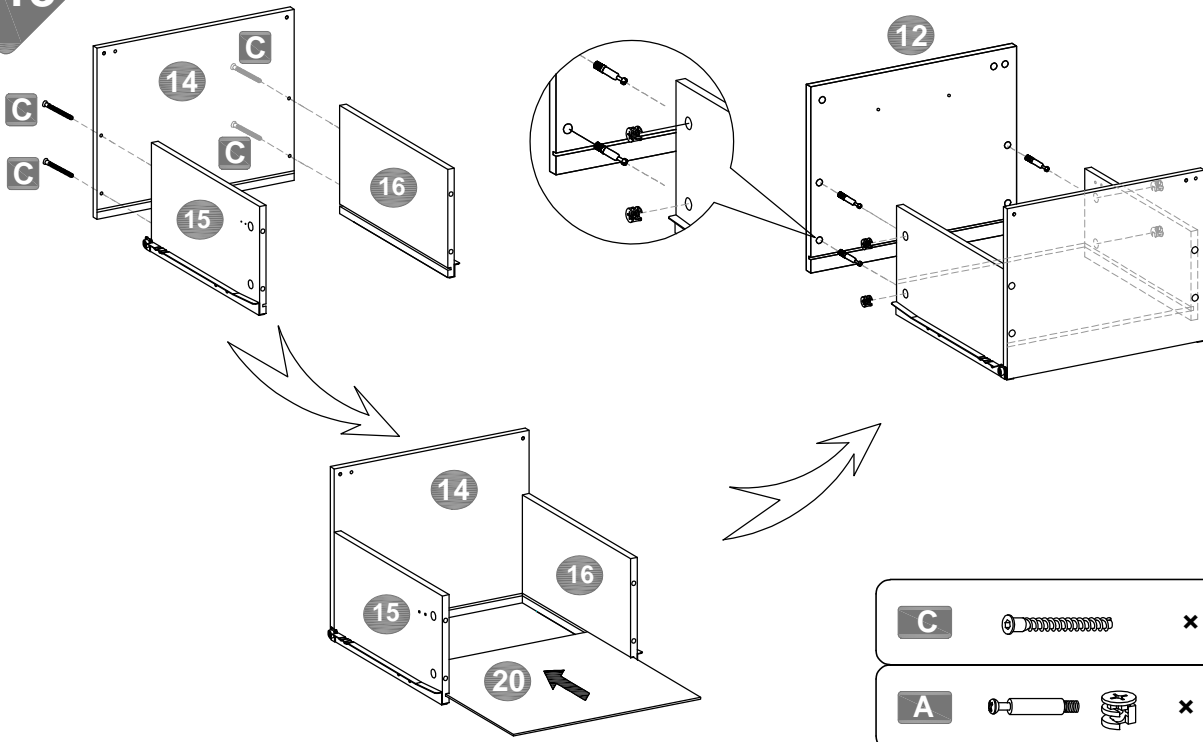


14

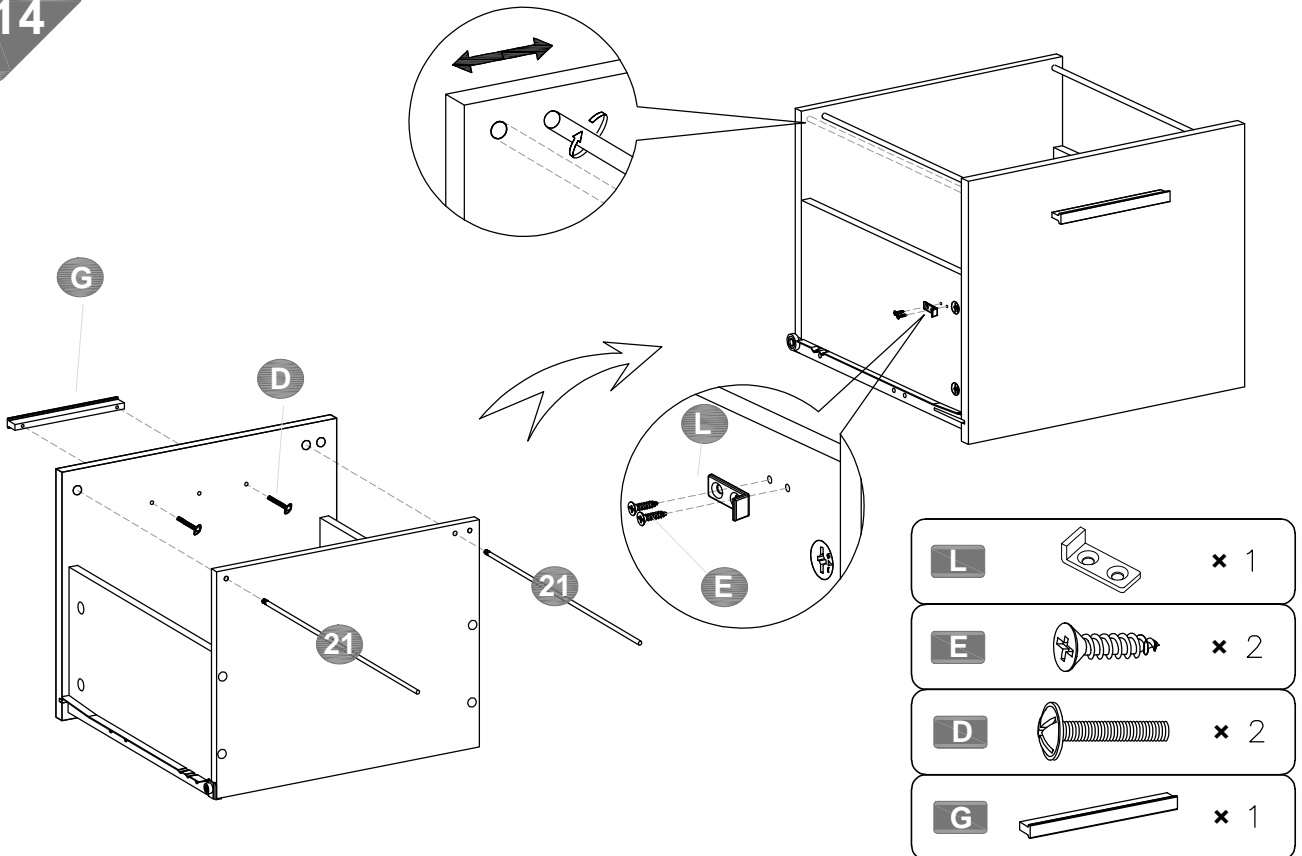

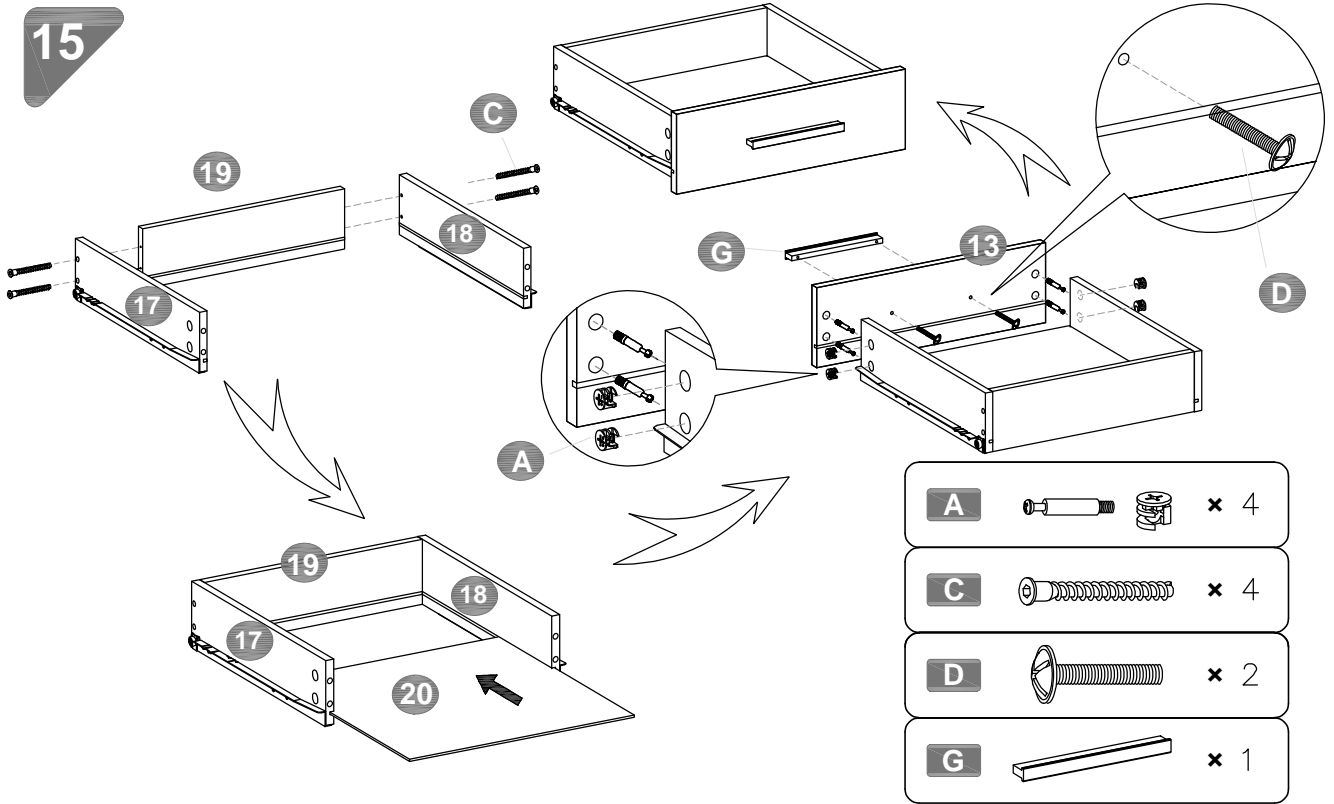

16

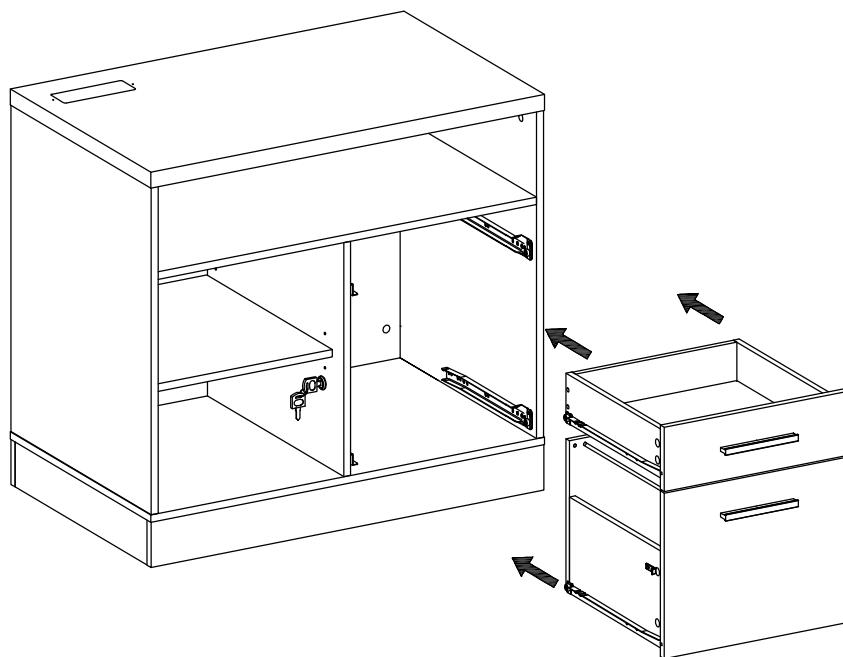



17

