
SUMERAIN®

Model: S1414S-XX

Version: 1.1

INSTALLATION GUIDE




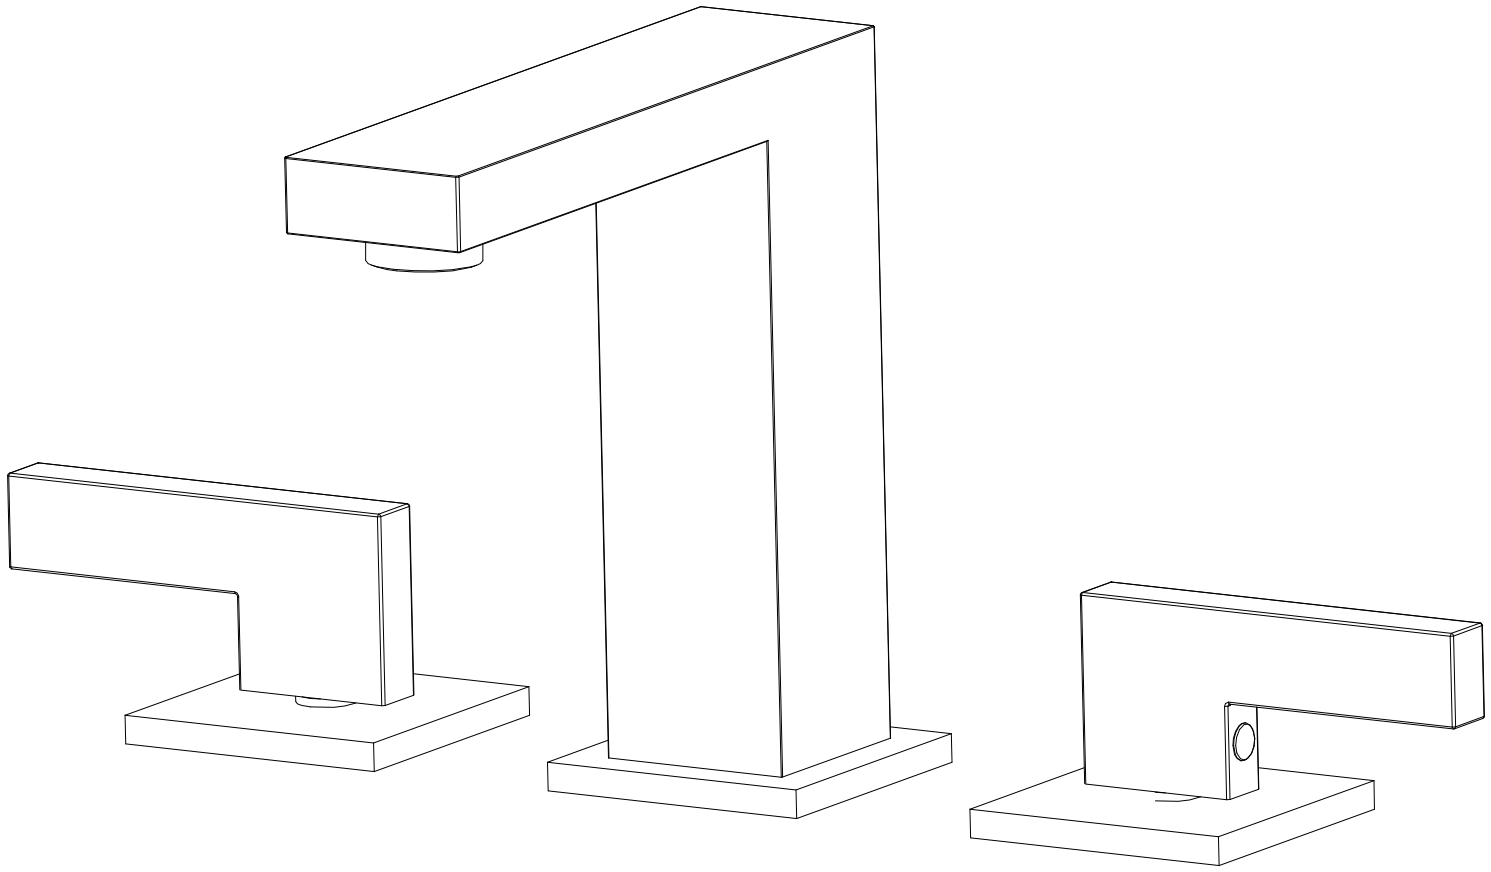


WIDESPREAD BATHROOM SINK FAUCET

CUSTOMER CARE LINE: +1-866-203-0866


TOOLS RECOMMENDED

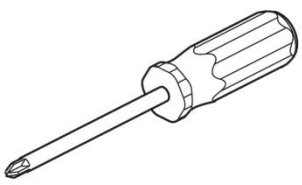

Philips Screwdriver

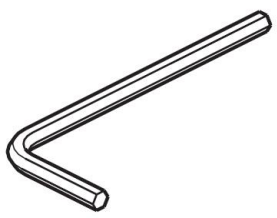


Allen Wrench

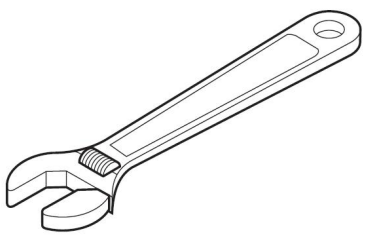

Adjustable Wrench



Channel Locks

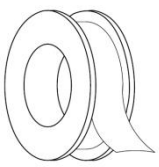

Teflon Tape

1. BEFORE PROCEEDING

WARNING: Before beginning any installation or operation, read all instructions carefully. This product must be installed in compliance with all applicable local and state plumbing and building codes. If you are unsure about installing this product, consulting a licensed professional is strongly recommended.

2. SHUT OFF WATER SUPPLY

Locate the water supply inlets and shut off the corresponding water supply valves, typically found near the water meter. If replacing an existing unit, remove the old unit and thoroughly clean the mounting surface.


3. CHECKING THE CONTENTS OF THE BOX

Upon opening the box, check to ensure that all the following items are included.
If any of these items are missing, please contact SUMERAIN consumer service via email at: support@sumerain.com

4. INSTALLATION HOLES INSPECTION


Verify that the hole sizes and positions on the mounting surface are correct. The recommended diameter of the mounting hol e is “C”, and the maximum thickness of the deck should be “D”.

Code	Dimensions - Inch	Dimensions - mm
A	4″	102
B	Min :Ø1-1/8″ Max :Ø1-1/4″	Min :Ø28 Max :Ø32
C	Min :Ø1/1/4″ Max :Ø1-3/8″	Min :Ø32 Max :Ø35
D	Max 1-3/8″	Max 35

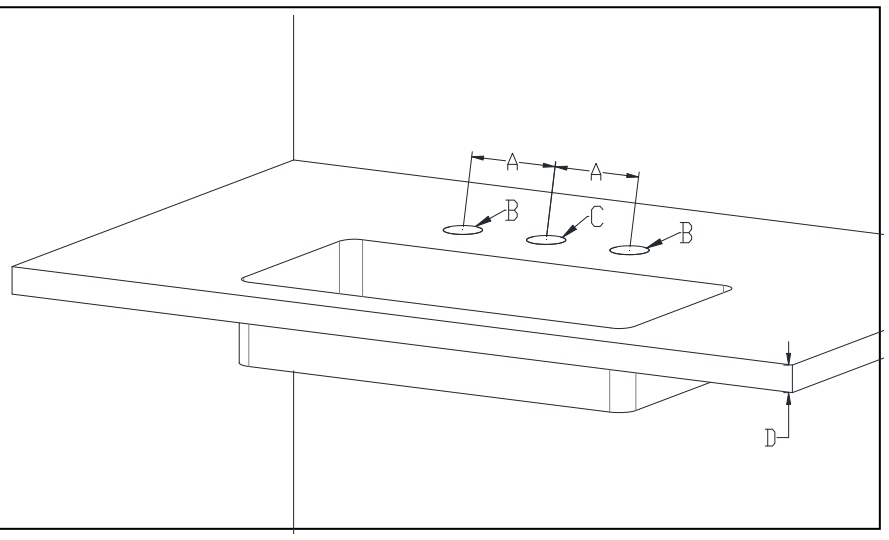


5. INSTALLATION


5.1 Turn on the shut-off valves to flush the hot and cold water supply lines before connecting the faucet. Allow water to run for 3-5 minutes to remove dirt and debris. Turn off the water supply after flushing is complete.

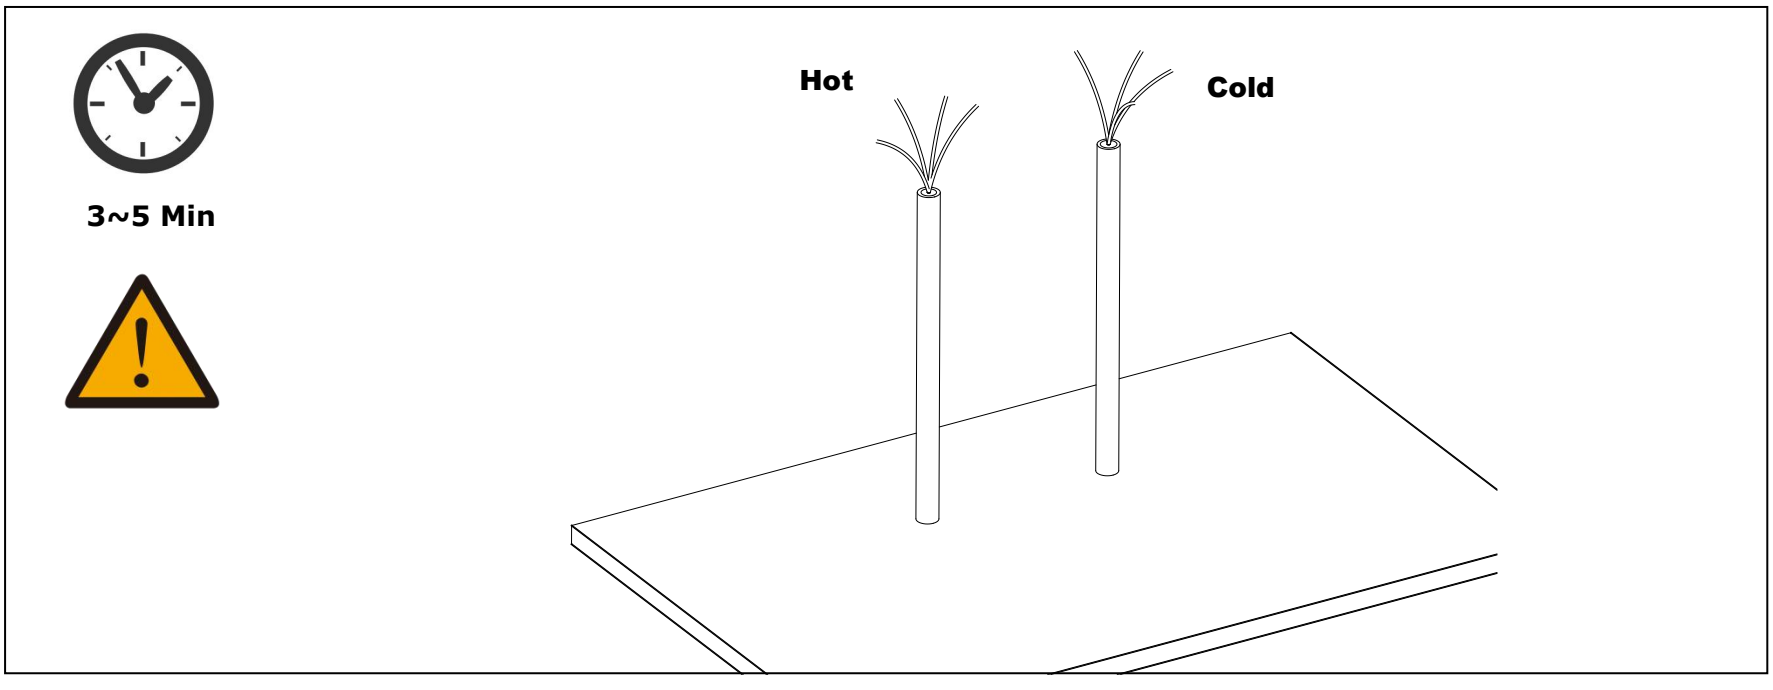


5.2 Unscrew and remove the mounting nut and washers from the spout assembly to prepare for installation.

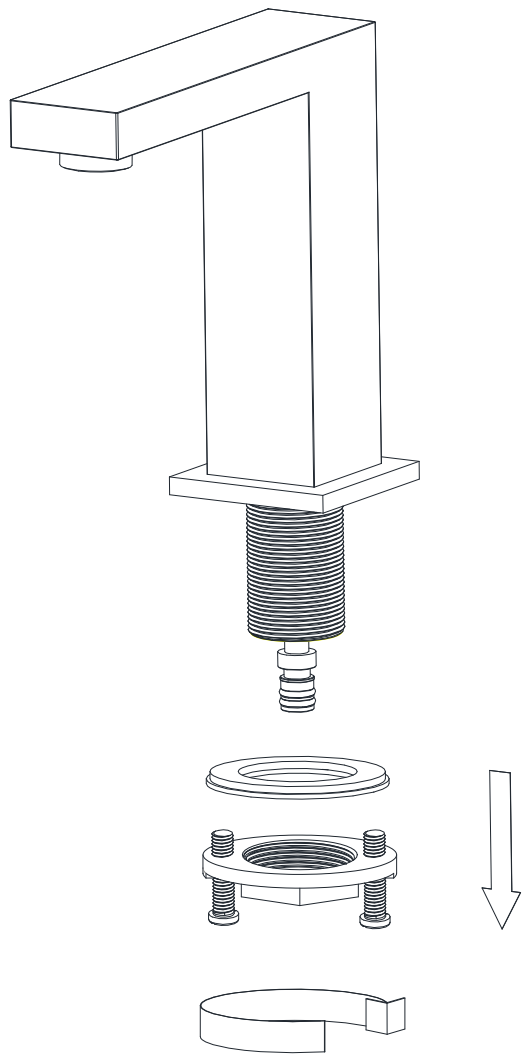


5.3 Insert the faucet spout into the faucet hole, then slide the rubber washer, metal washer, and lock nut onto the threaded shank from underneath the sink.

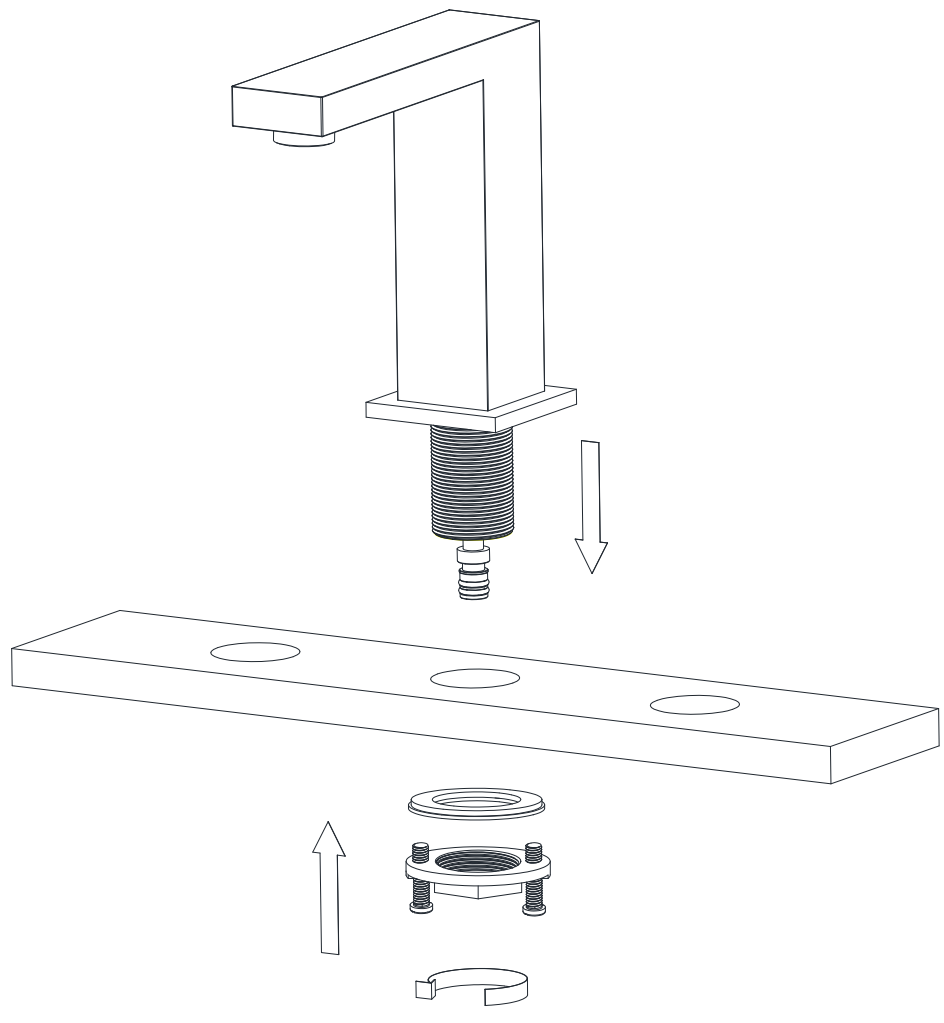


5.4 Fasten the rough-in valve to the mounting board using screws and a Phillips screwdriver.

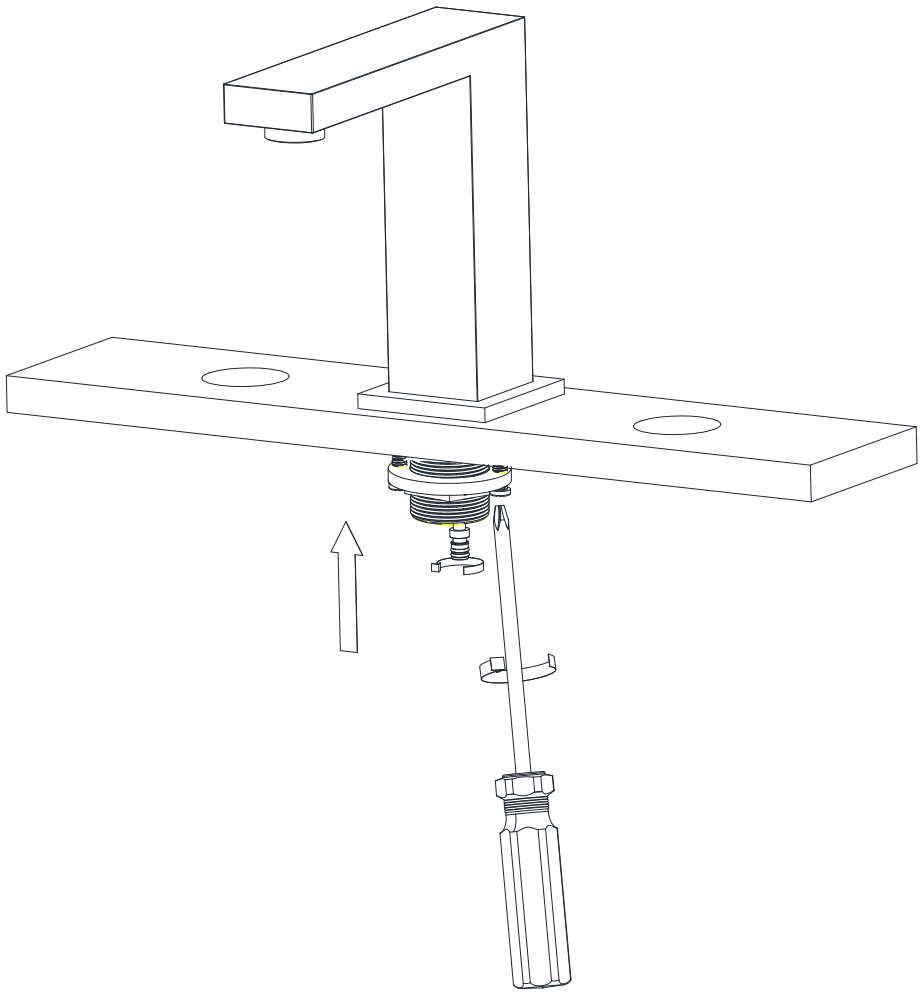


5.5 Disassemble knob assembly to prepare for next step’s installation.

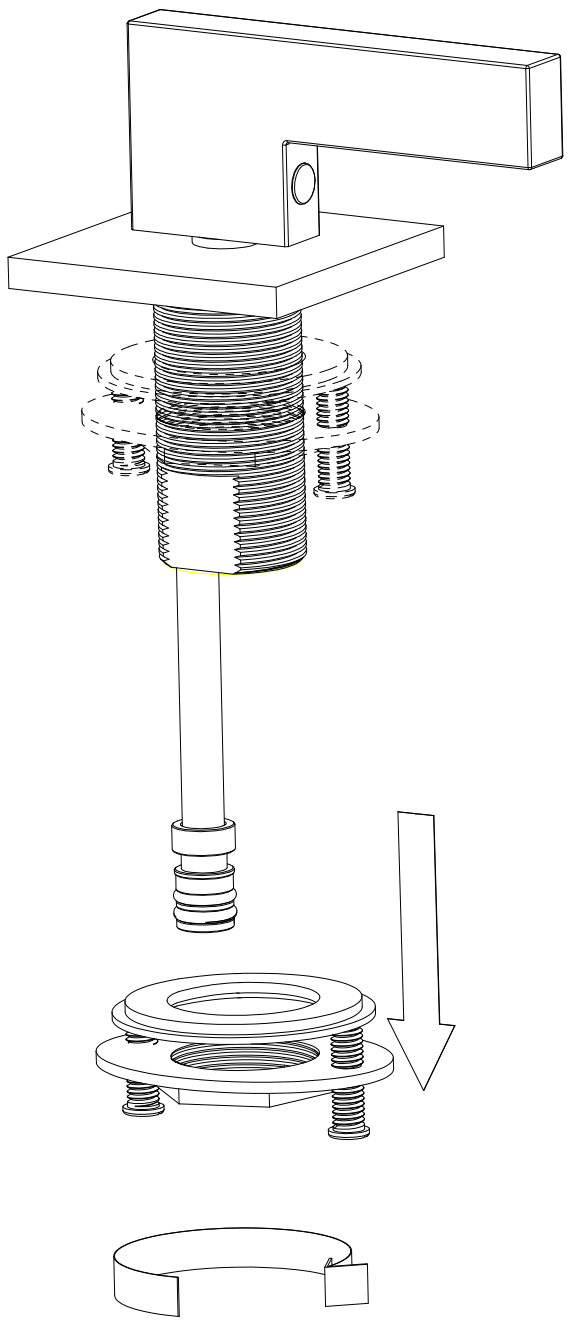

5.6 Place the hot water control valve body on the mounting surface, attach the rubber washers and lock nuts from underneath the mounting surface. Use a Phillips screwdriver to fasten the pre-installed valve onto the mounting plate with screws. Repeat the same procedure for the cold water valve assembly on the right.

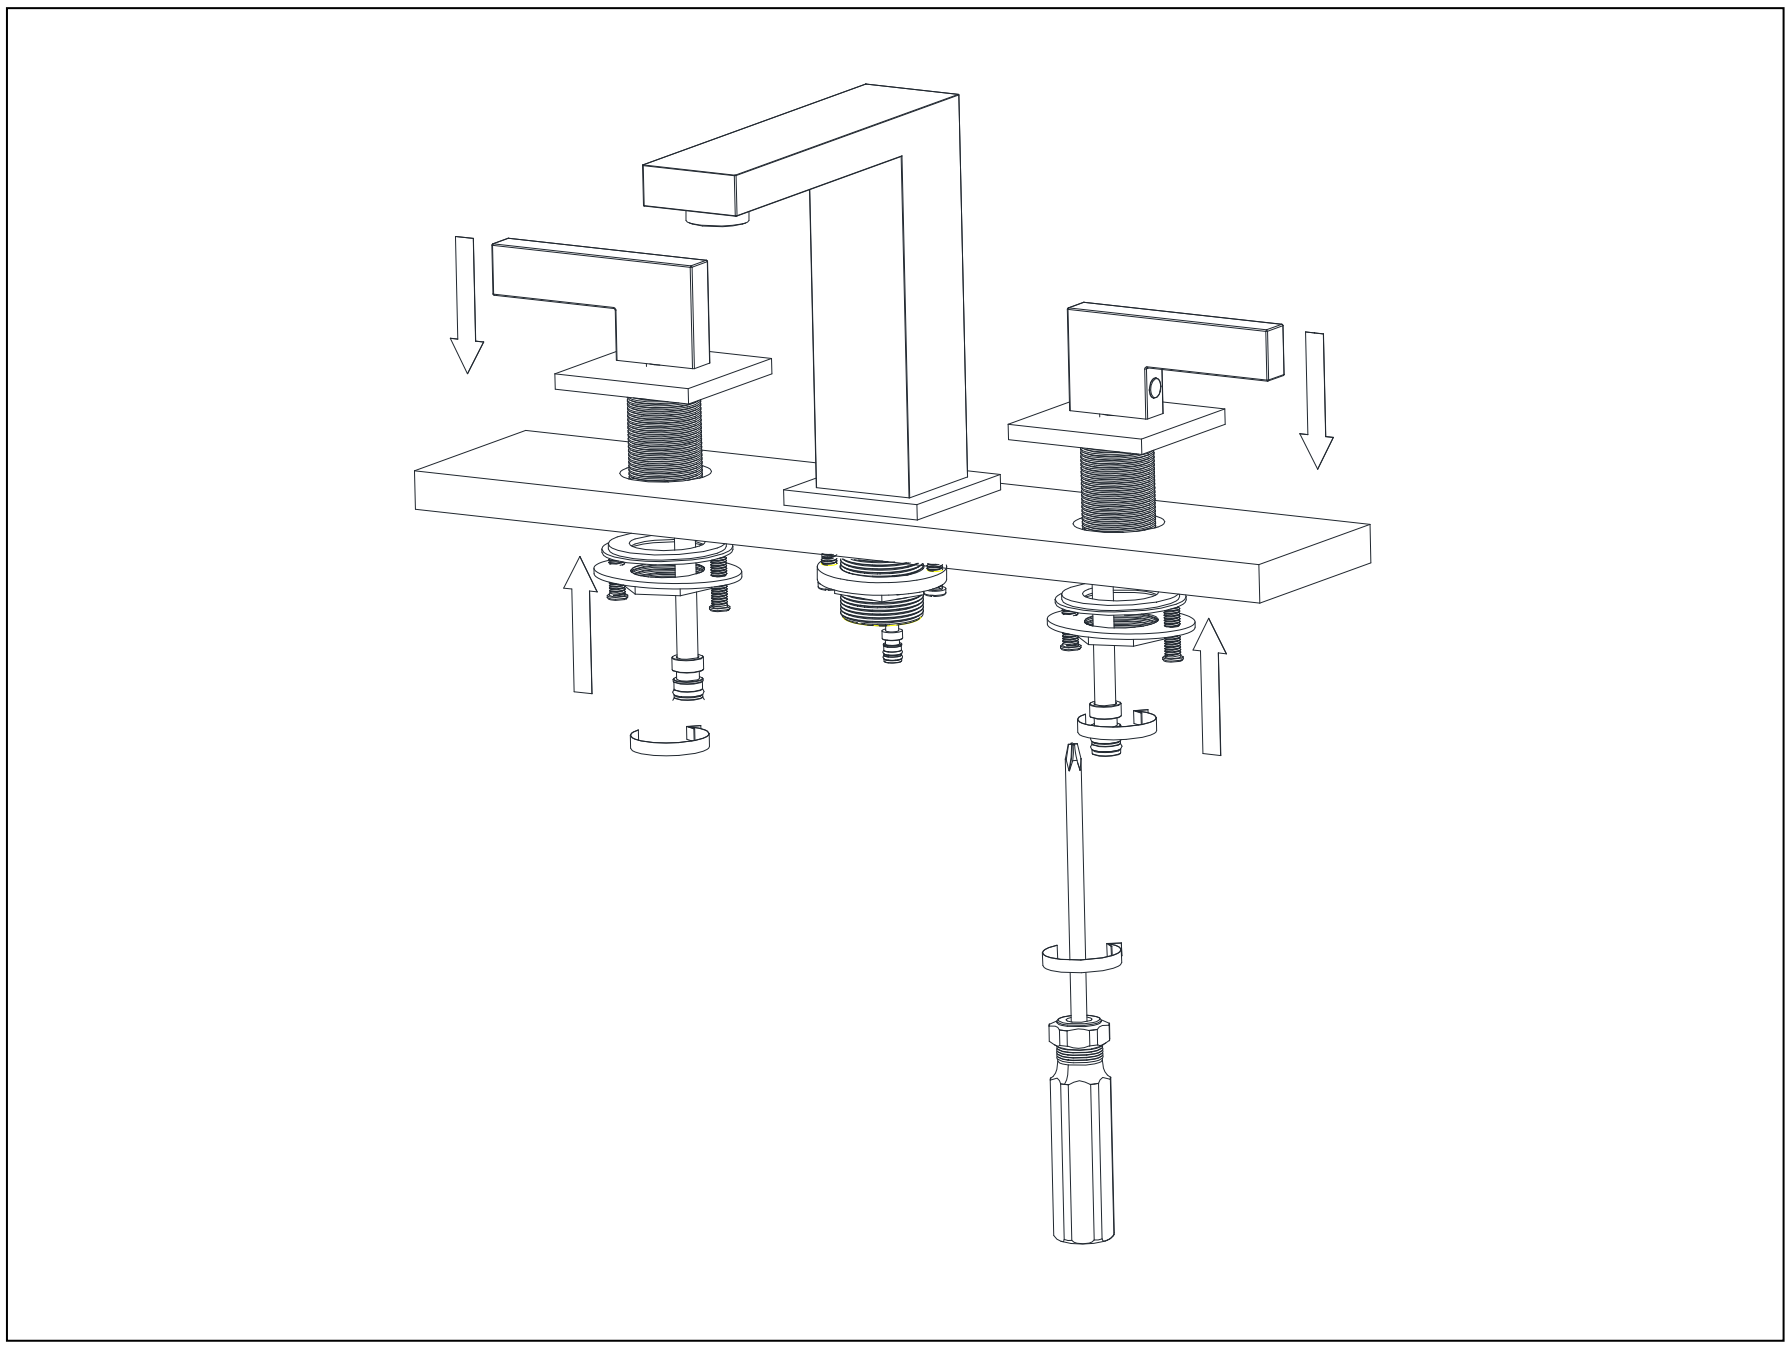


5.7 Connect the three hoses to the hot and cold valve bodies and the spout, ensuring all connections are secure and properly aligned.

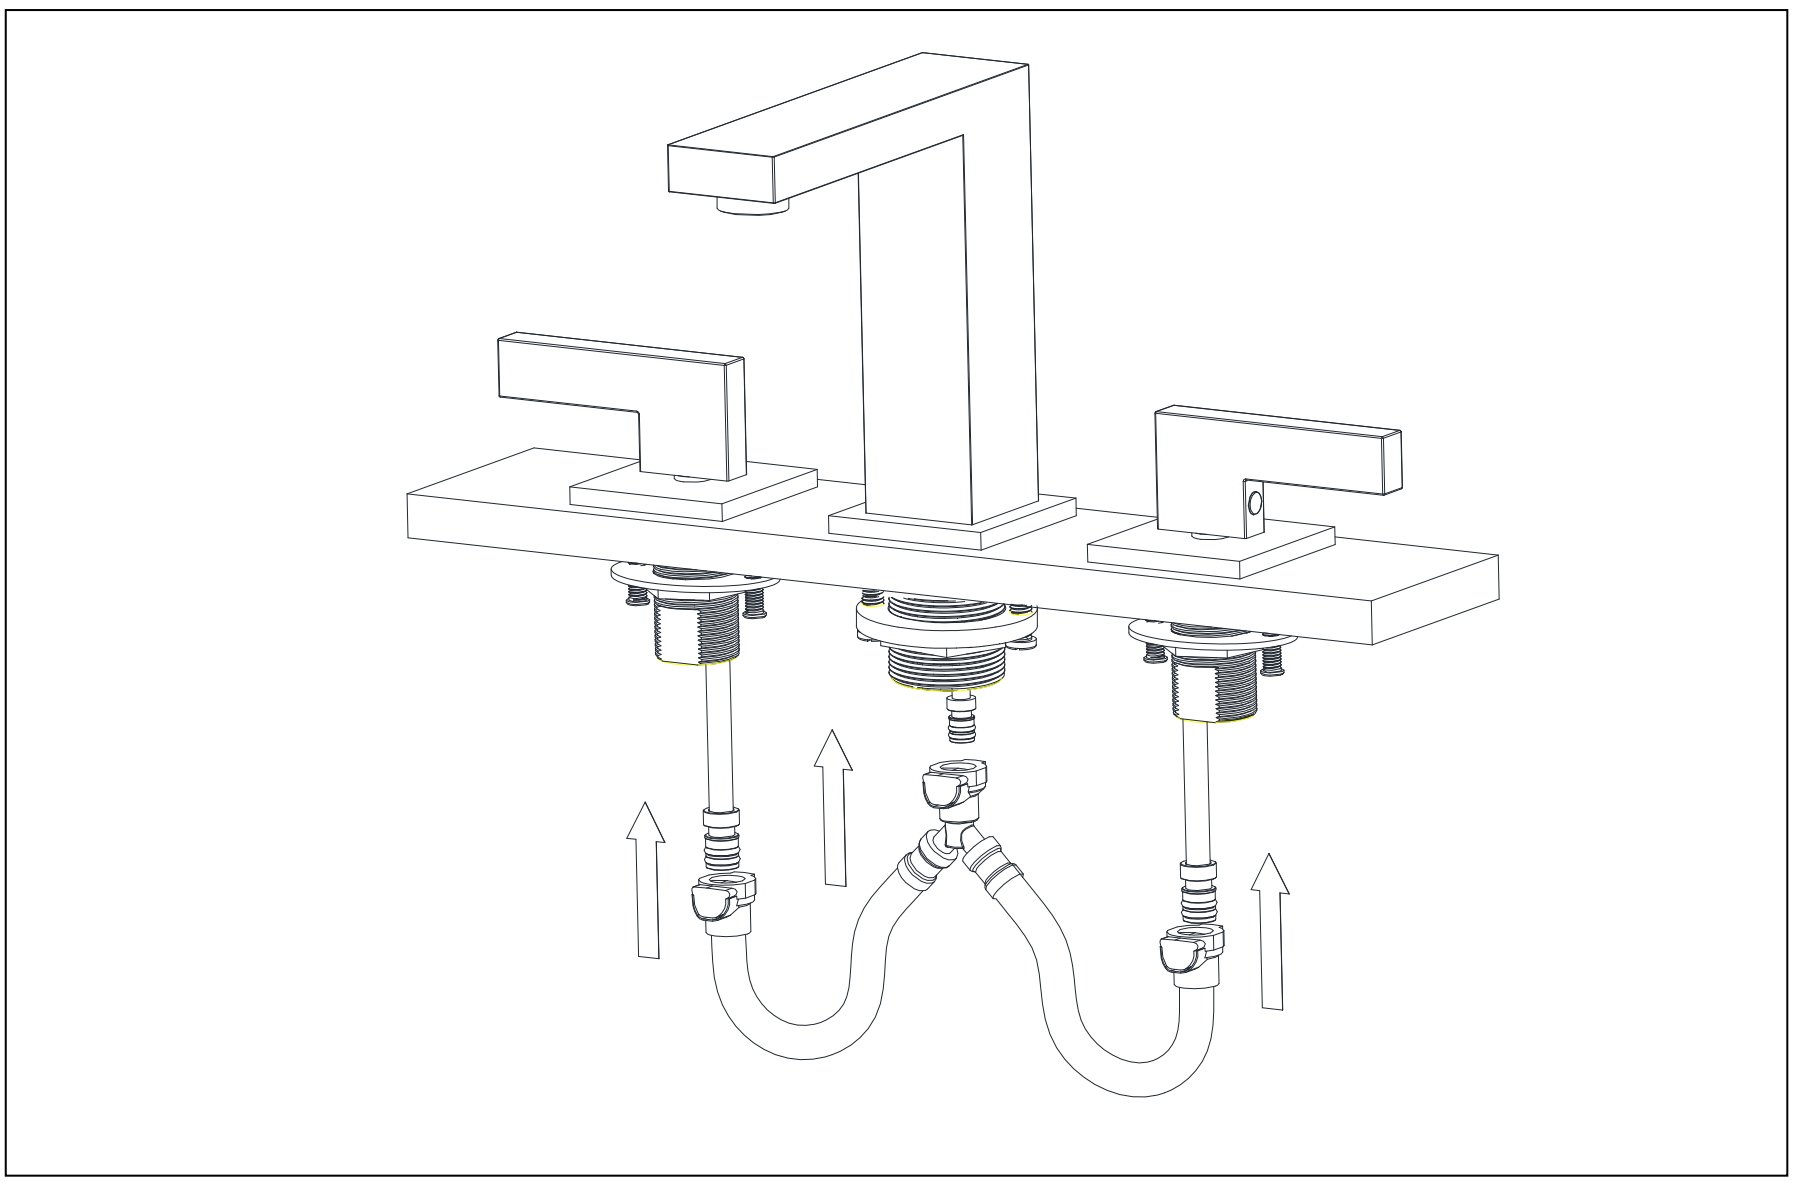

5.8 Connect the inlet connectors of the hot and cold valve bodies to the stop valves separately using supply hoses. Thread Specifications: Compatible with U.S. and Canada standards, 3/8" compression fitting.

Region	Code	Specifications
US	X	3/8″Compression
Europe	X	G3/8″
UK &Other	X	G1/2″

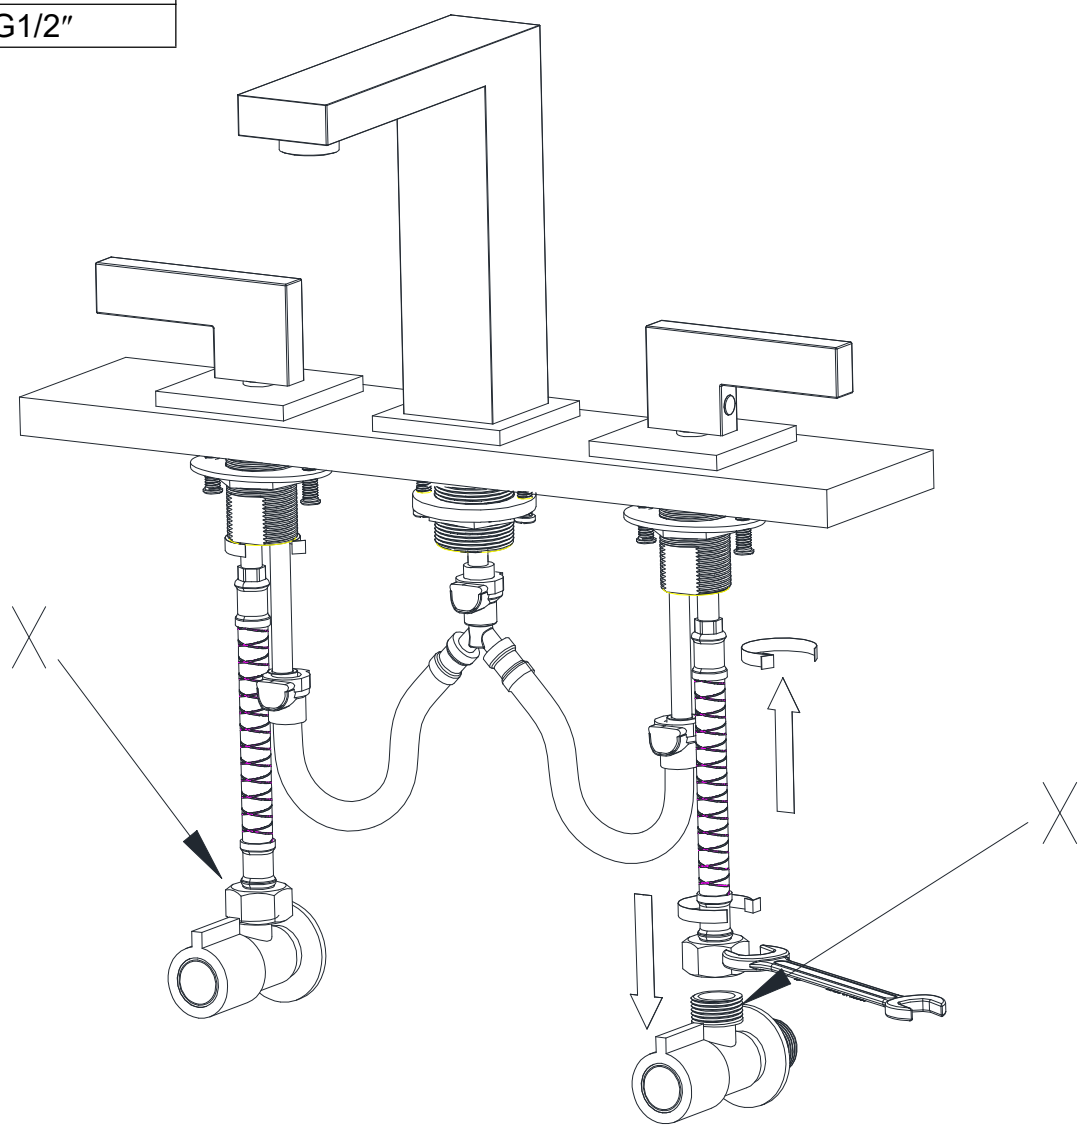

6. INSPECTION

6.1 Turn on the hot and cold water supplies and check all connections to ensure there are no leaks.

INSTALLATION COMPLETE

SUMERAIN®

North America	Asia	Europe
SUMERAIN INTERNATIONAL GROUP INC.	HONGKONG SUMERAIN SANITARY INDUSTRY CO., LIMITED	SUMERAIN EUROPE SUPPORT TEAM
Add: 1400 Summit Ave, Suite A, Plano, TX 75074, USA	Add: ROOM 14 2/F WELLBORNE COMMERCIAL CENTRE NO.8 JAVA ROAD NORTH POINT HK	Add: Flottwellstr.15 10785 Berlin, Deutschland
Tel: +1-866-203-0866	Tel: +86-750-2731579	Tel: +49 (0)30/23975898
E-mail: support@sumerain.com	E-mail: support@sumerain.com	E-mail: support@sumerain.com