









# Assembly Instructions

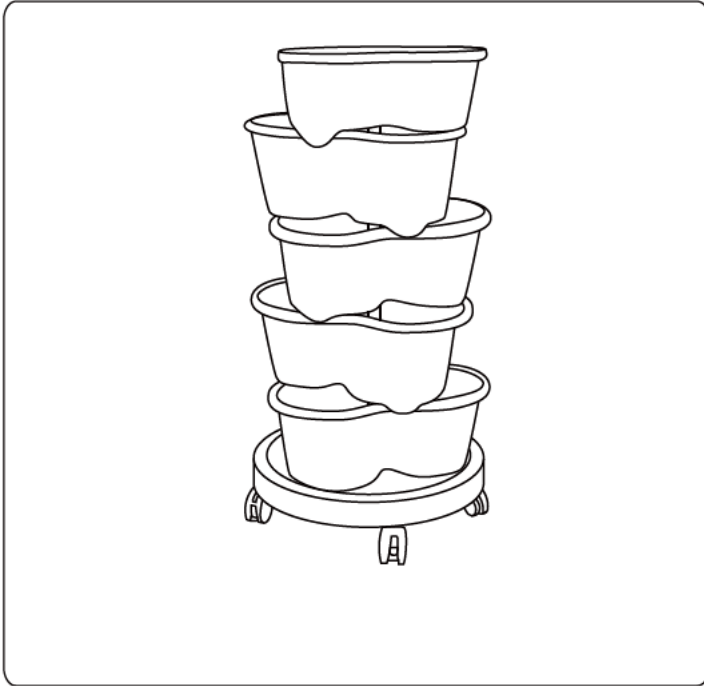

|   |   |   |
|---|---|---|
| A | <br>PVC PIPE          | 2 |
| B | <br>LINK BUCKLE      | 1 |
| C | <br>FIXED IRON SHEET | 1 |
| D |                      | 1 |
| E | <br>FLOWERPOT        | 5 |
| F | <br>TRAY            | 1 |
| G |                    | 4 |



Place the flower pot on the tray.




Insert the pvc pipe into the middle hole of the flower pot.



If the flower pot has more than 3 layers, use an interface to connect the upper and lower 2 pvc pipes.



Place the hanging chain into the pvc pipe and slide it to the bottom of the tray.

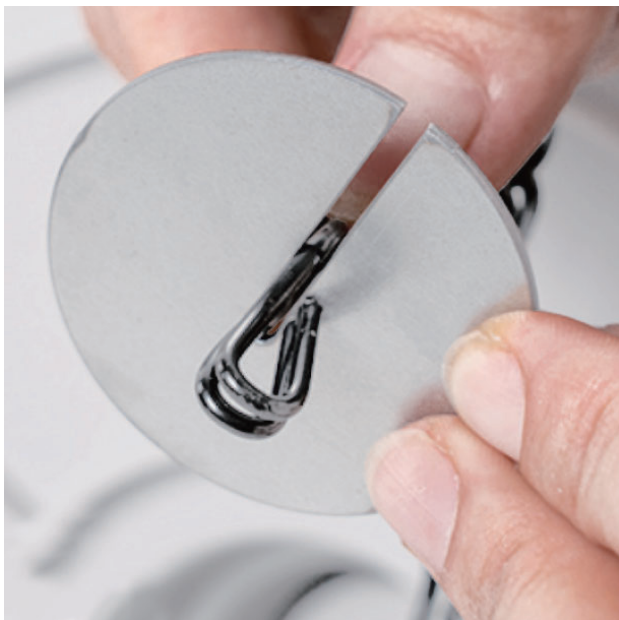

Clip the hanging chain into the opening of the iron sheet.



Place the iron sheet in the middle hole at the bottom of the tray.