













INSTALLATION INSTRUCTION

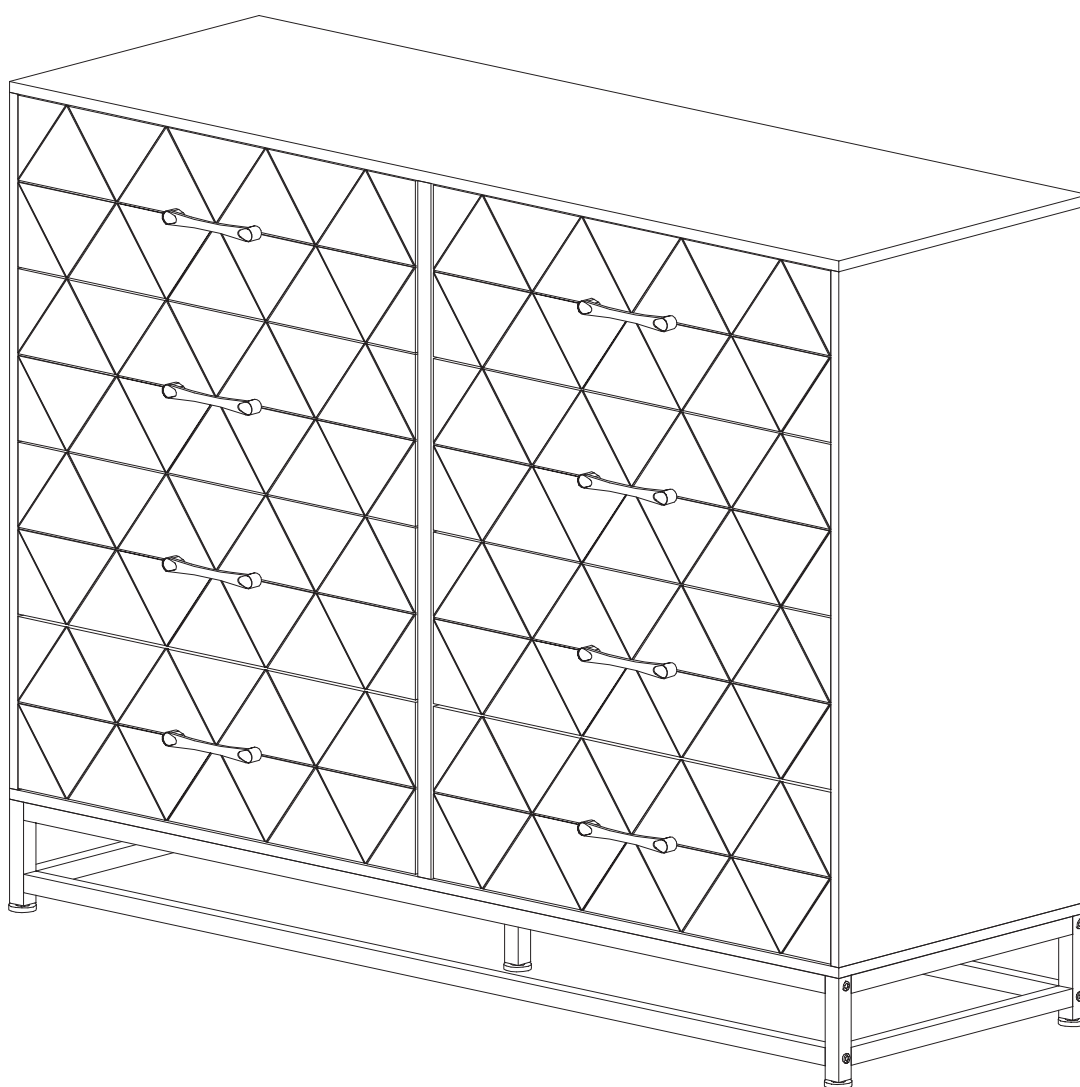

BOARD IDENTIFICATION

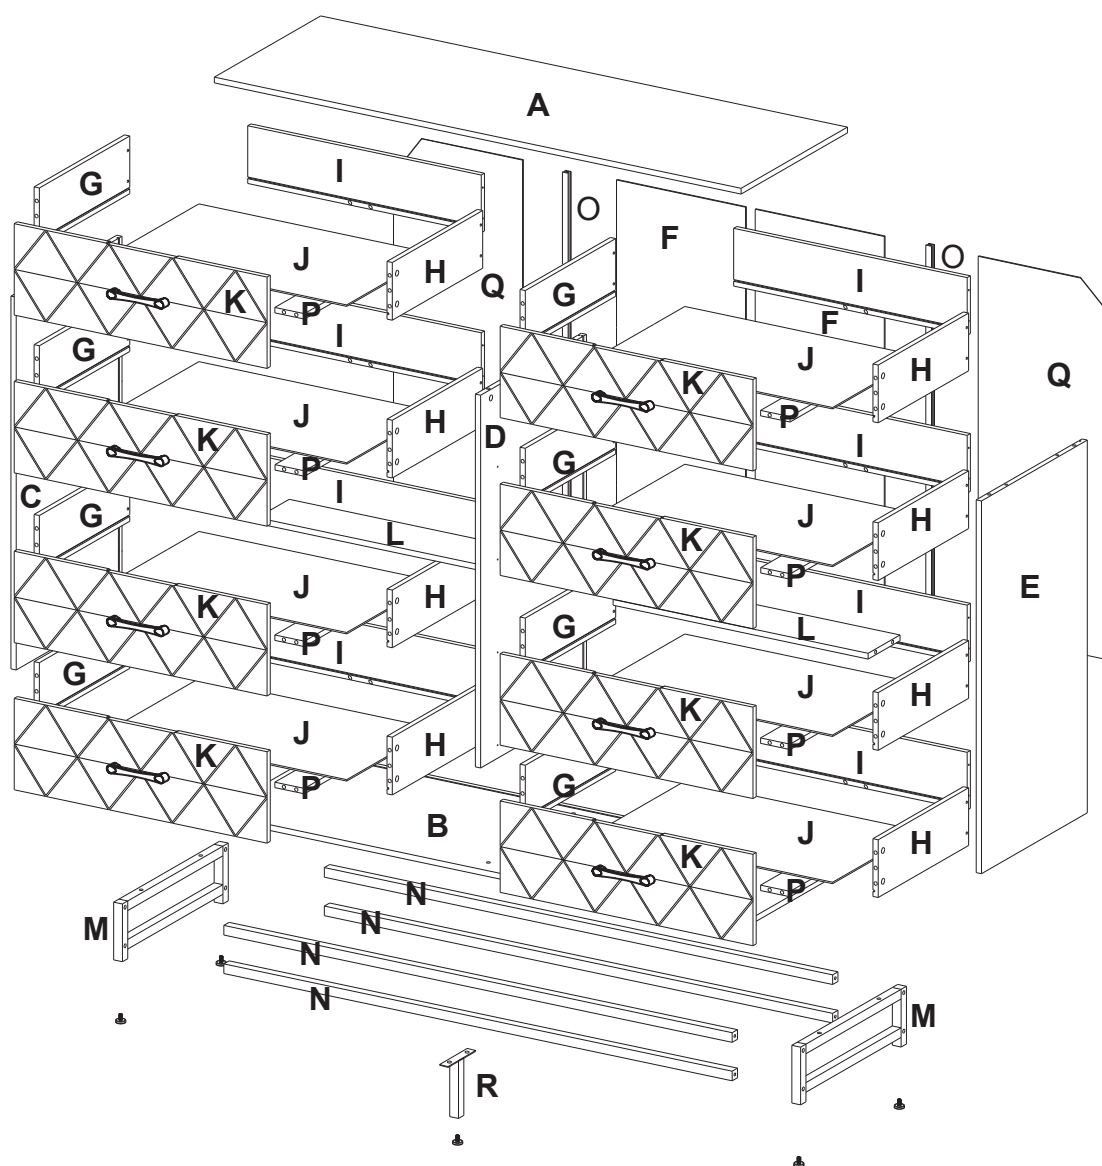


BOARD IDENTIFICATION

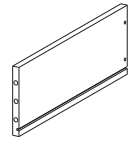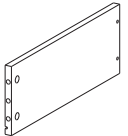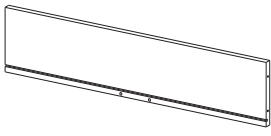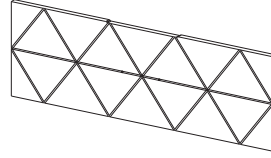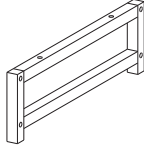				
Ax1	Bx1	Cx1	Dx1	Ex1
				
Fx2	Gx8	Hx8	Ix8	Jx8
				
Kx8	Lx2	Mx2	Nx4	Ox2
				
Px8	Qx2	Rx1		

BOARD IDENTIFICATION


Installation of Eccentric Wheel Nut Set

1

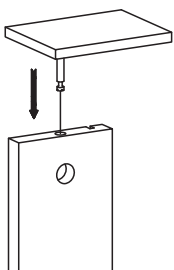


Screw the end of cambolt on the board, find the corresponding board and insert the other end.

2

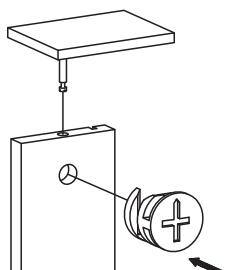


Stuff the camlock into the round hole. The arrow points to the cambolt.


3

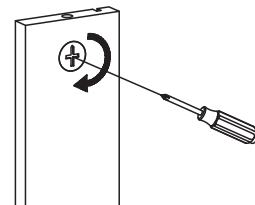


Turn clockwise about 180° to lock the plate.

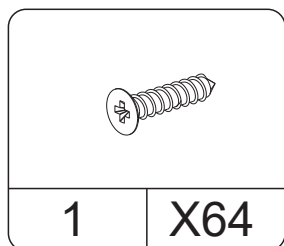


Screws
M4X10

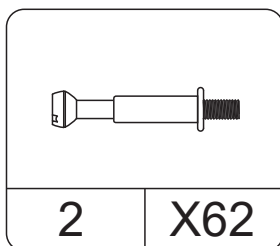


Cam bolt
Ø6X18

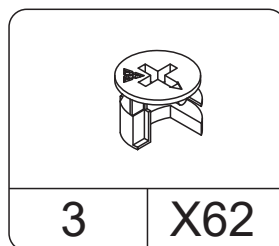


Cam lock
Ø12X10

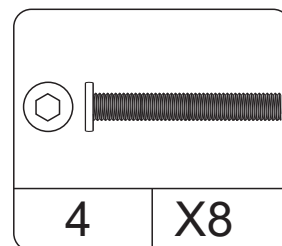


Screws
M6x35

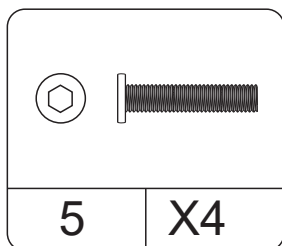


Screws
M6x28

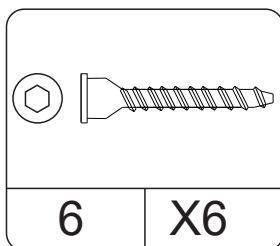


Screws
M6.3x40

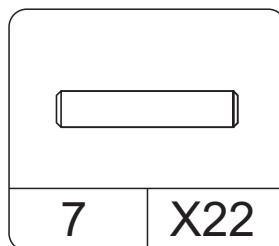


Wood dowel
Ø6X30

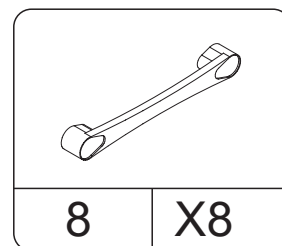


8 X8

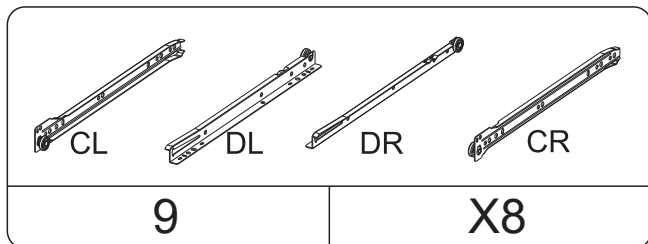


9 X8

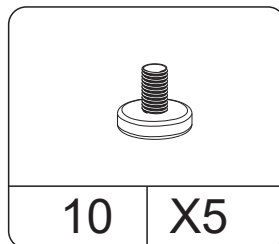


10 X5

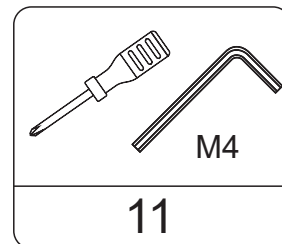


11

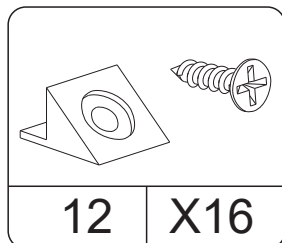


12 X16

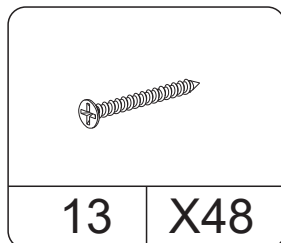


Screws
M4x30

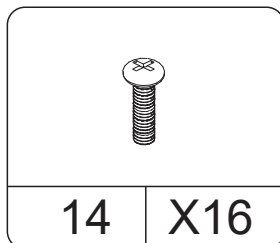

Screws
M4x15

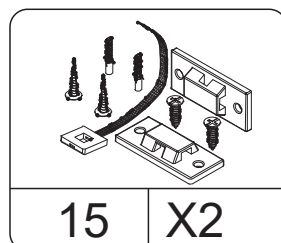



Anti-inverted parts

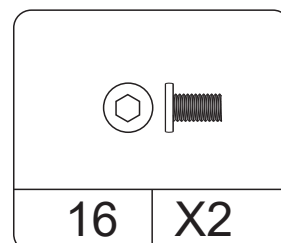



Screws
M6x10

INSTALLATION STEPS

STEP1:

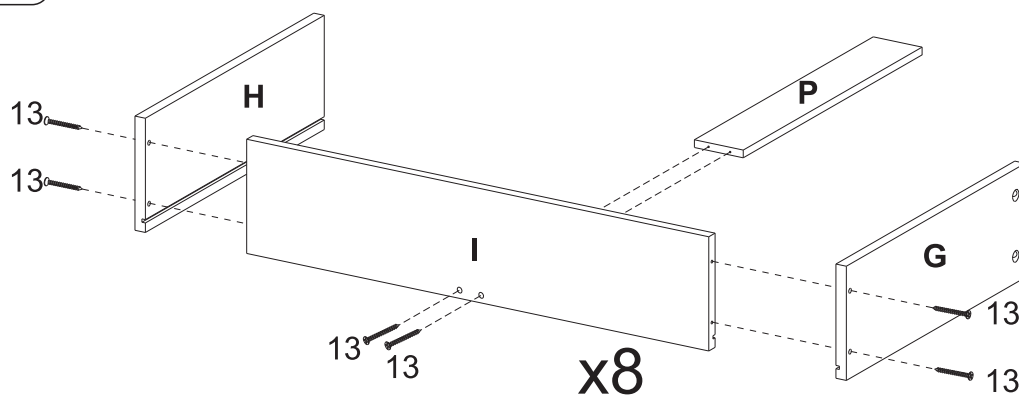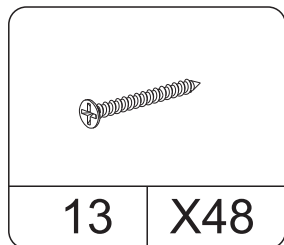



STEP2:

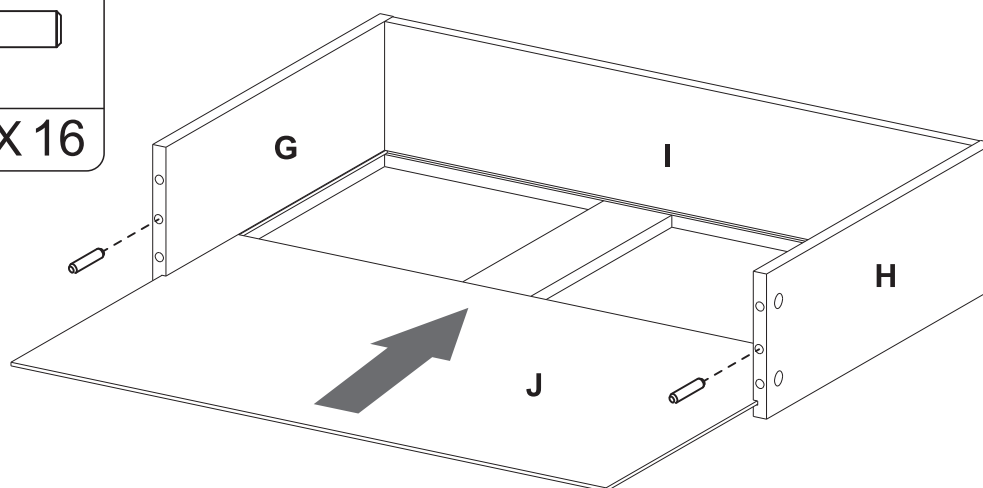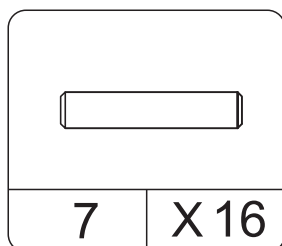

x8



INSTALLATION STEPS

STEP3:

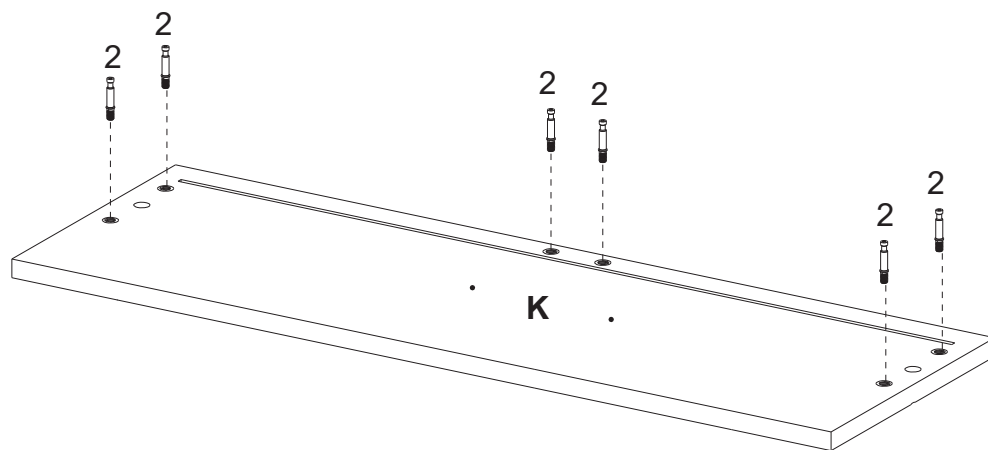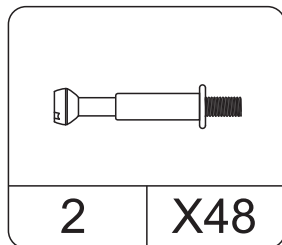

x8





STEP4:

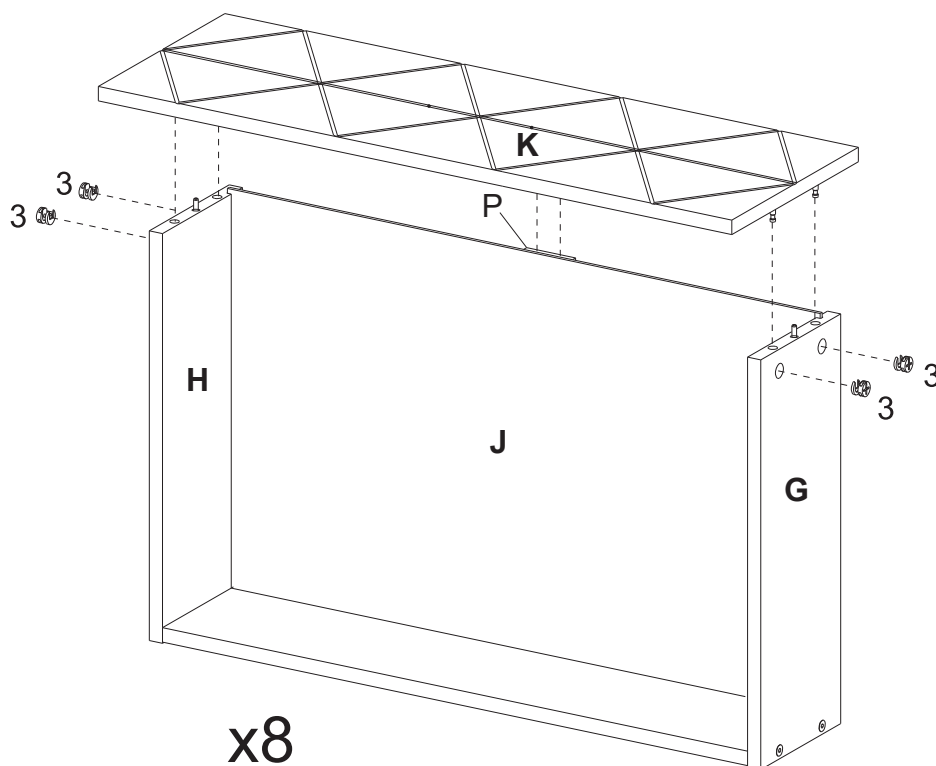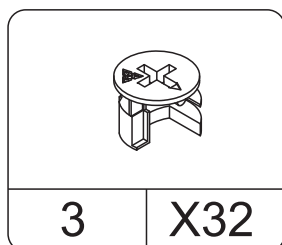




x8

INSTALLATION STEPS

STEP5:

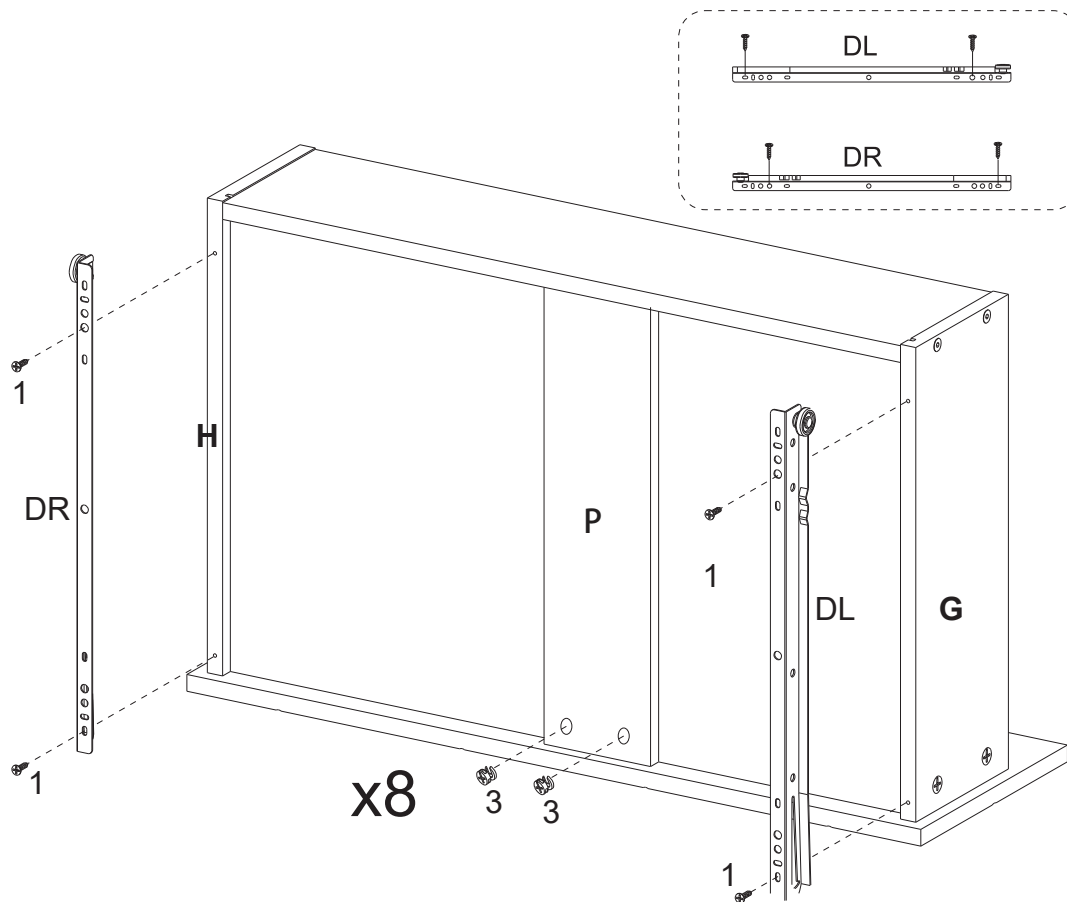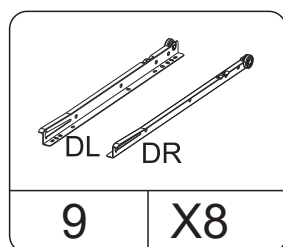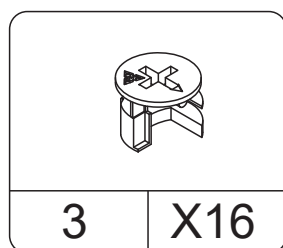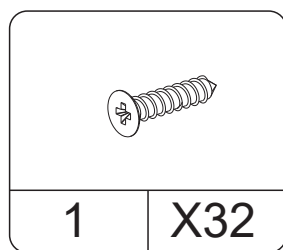





STEP6:

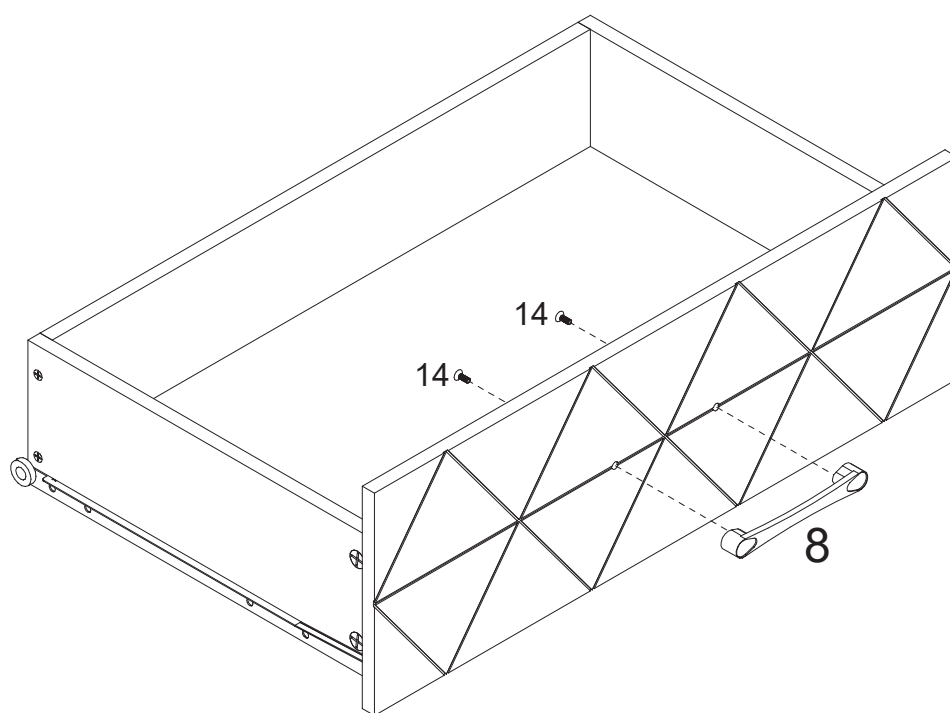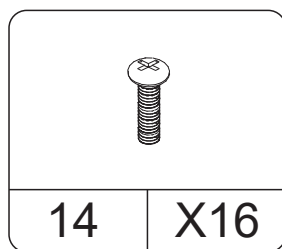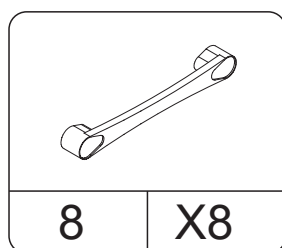





x8

INSTALLATION STEPS

STEP7:

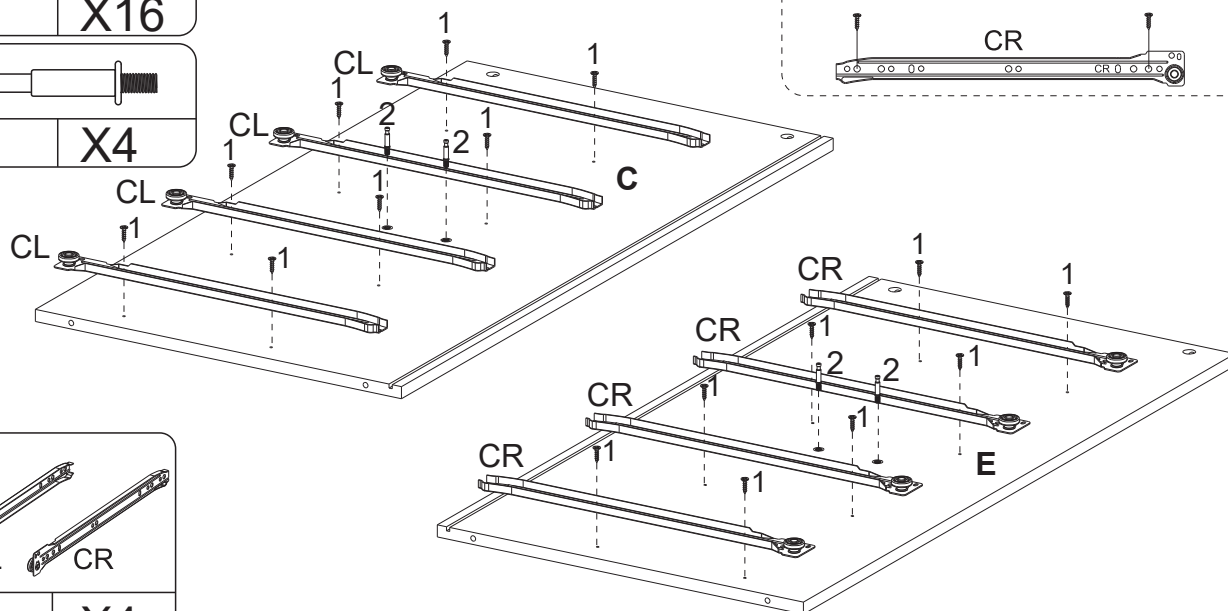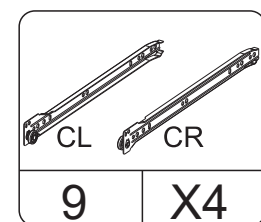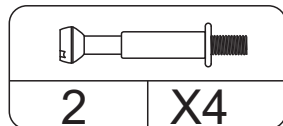
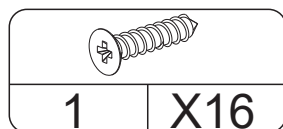


STEP8:

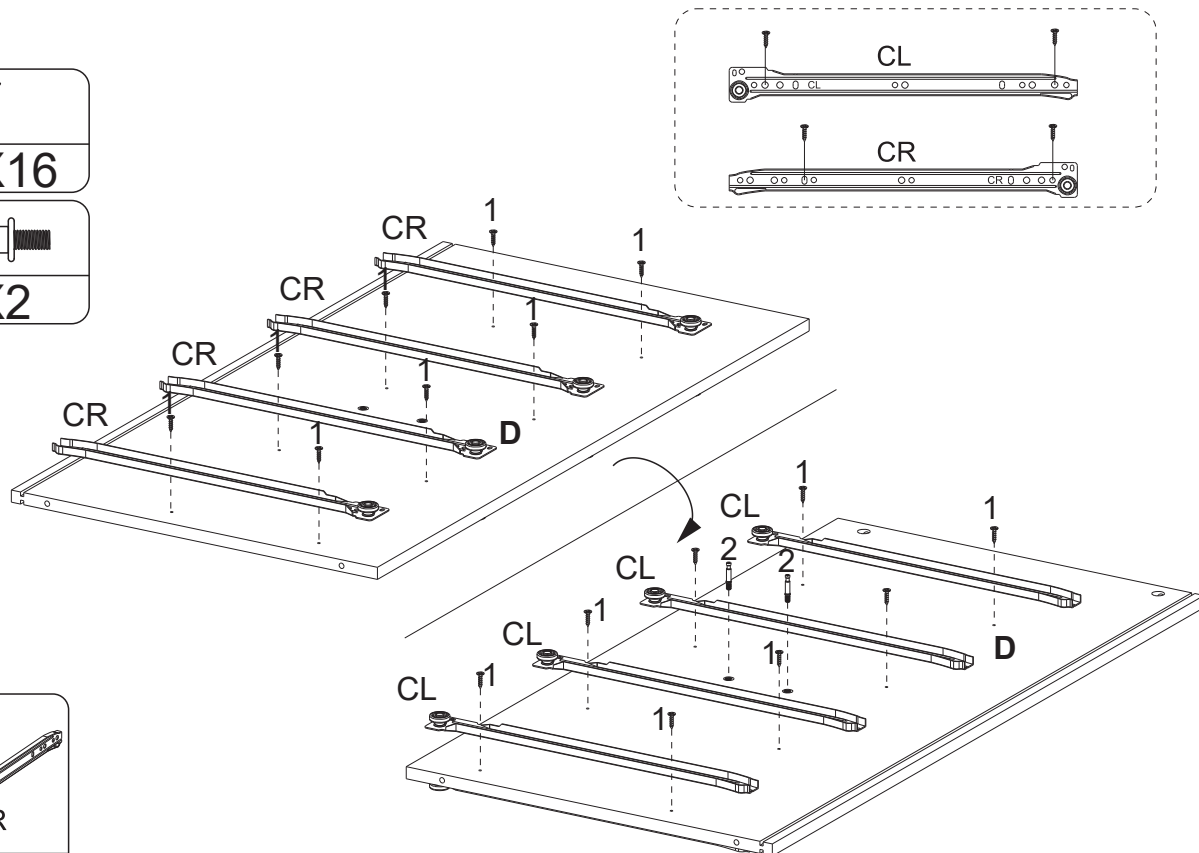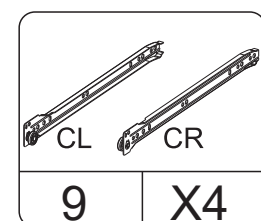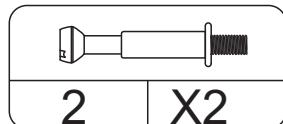
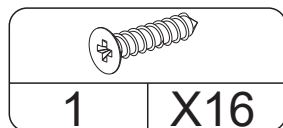


INSTALLATION STEPS

STEP9:

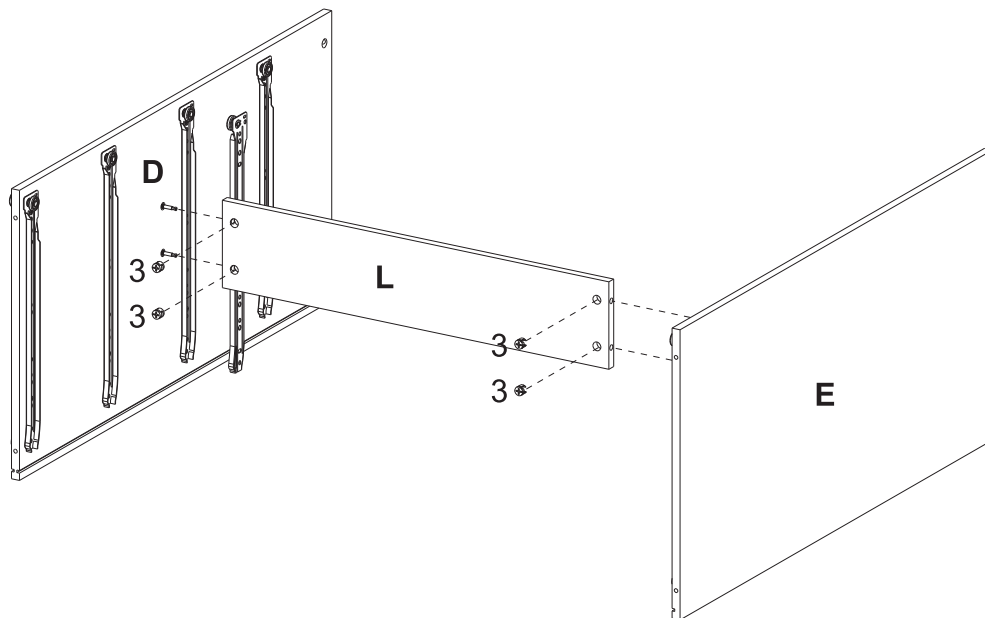
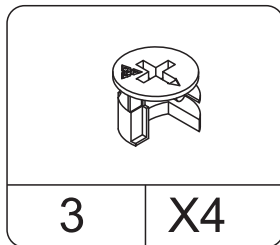


STEP10:



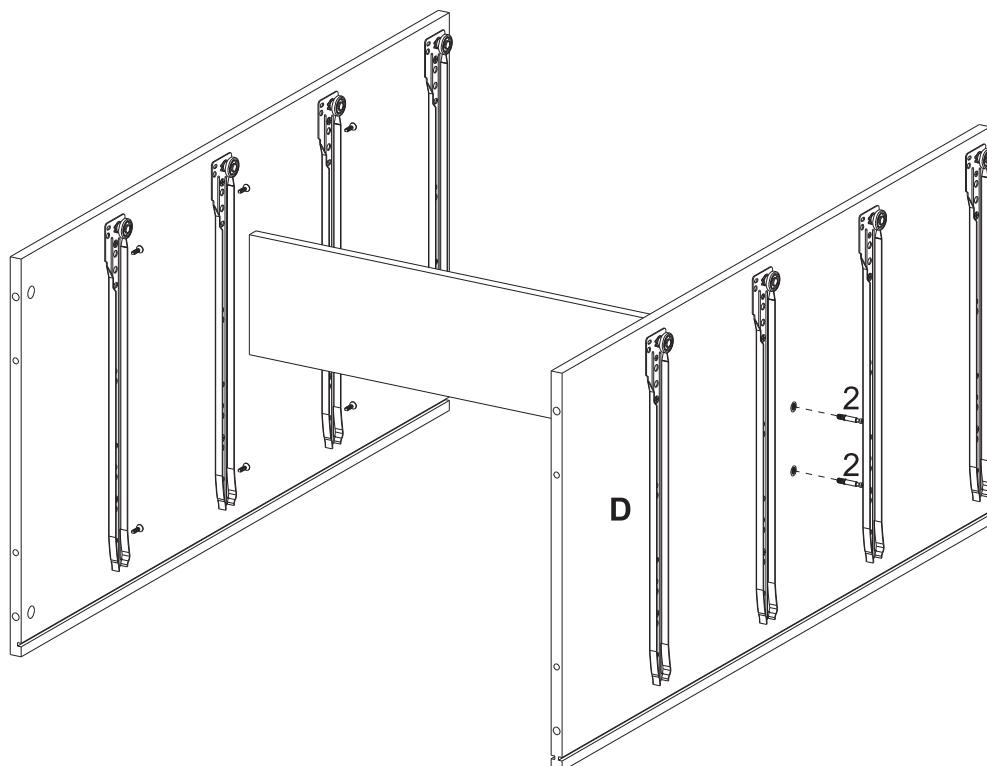
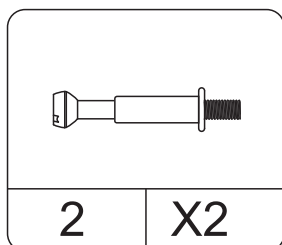


INSTALLATION STEPS

STEP11:

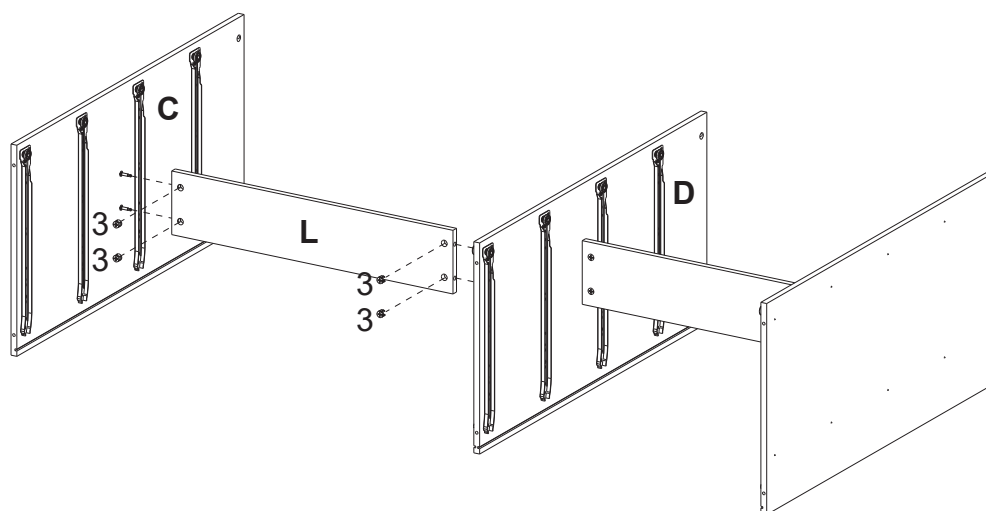
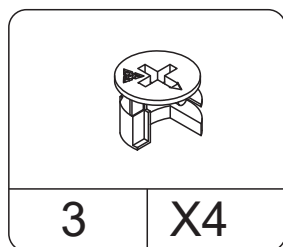


STEP12:

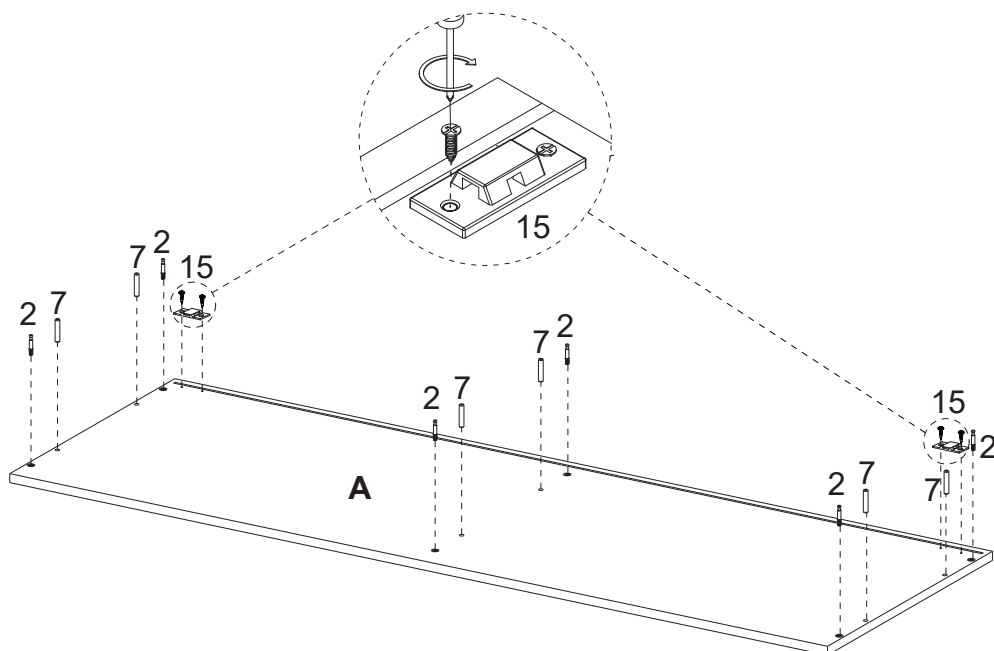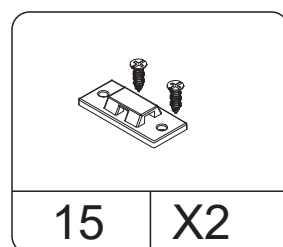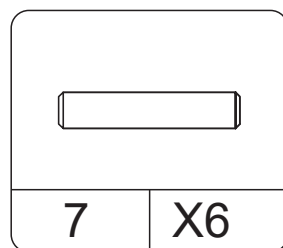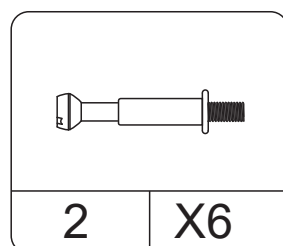


INSTALLATION STEPS


STEP13:

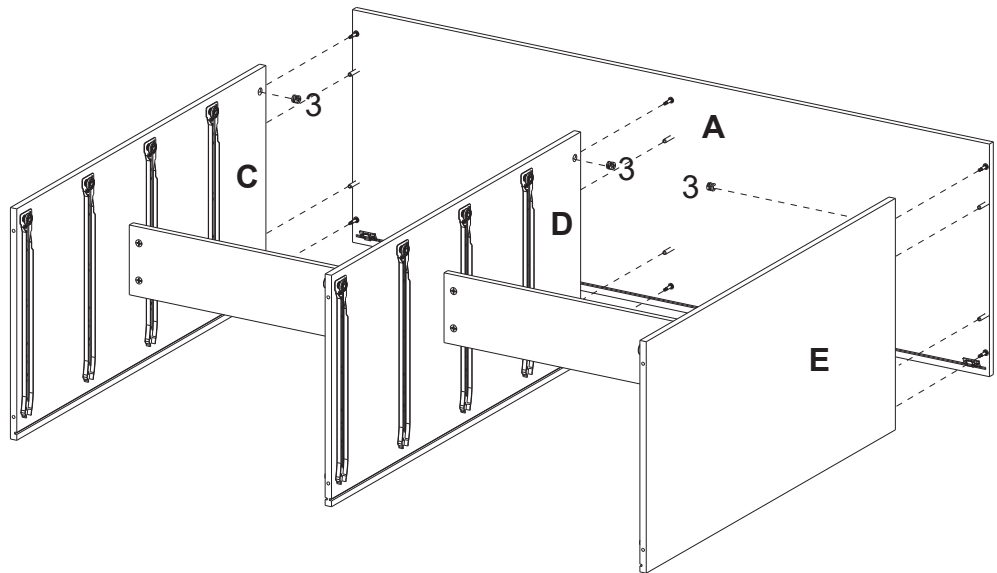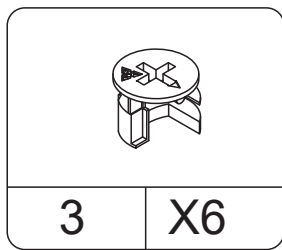

STEP14:


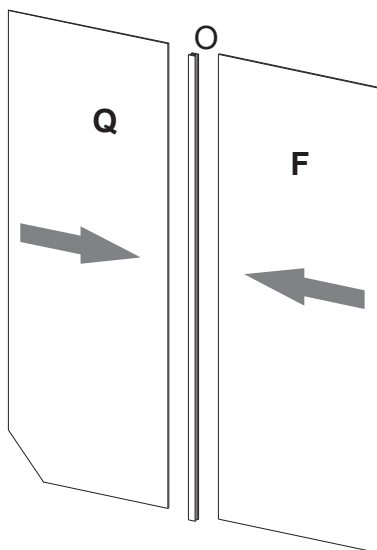


x2


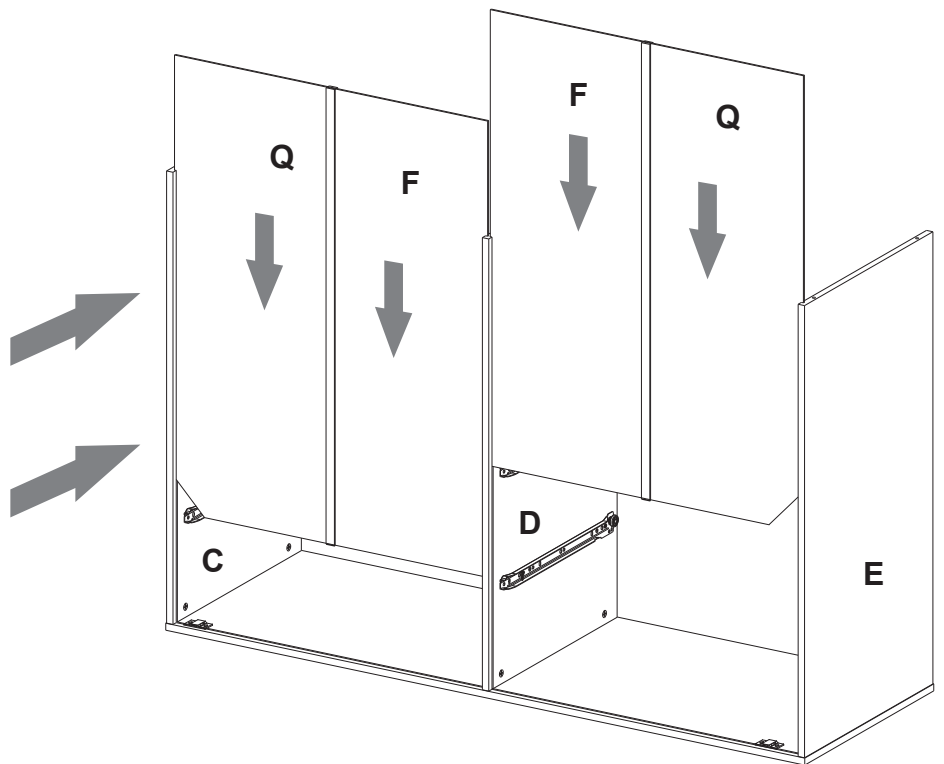


INSTALLATION STEPS

STEP15:

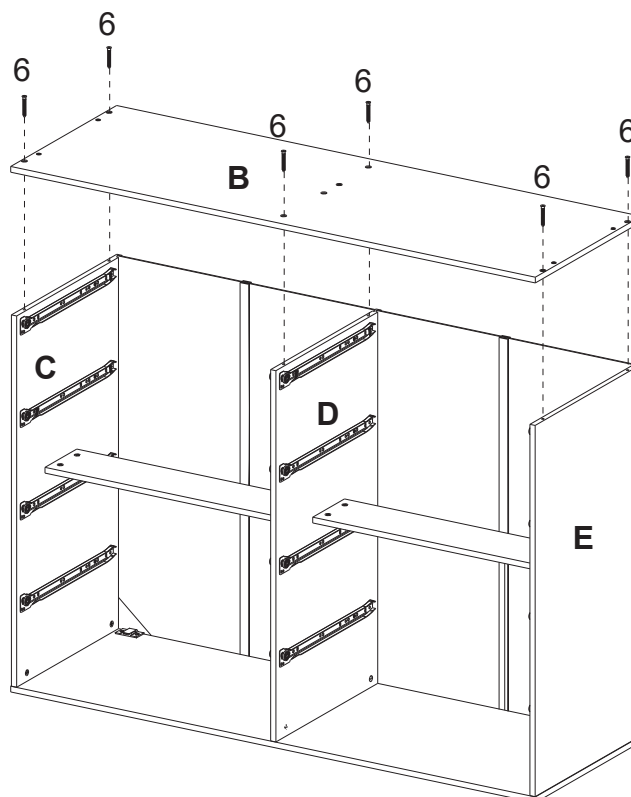
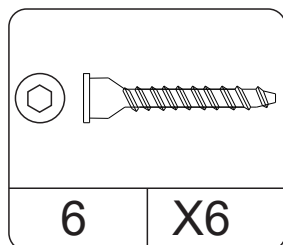


STEP16:


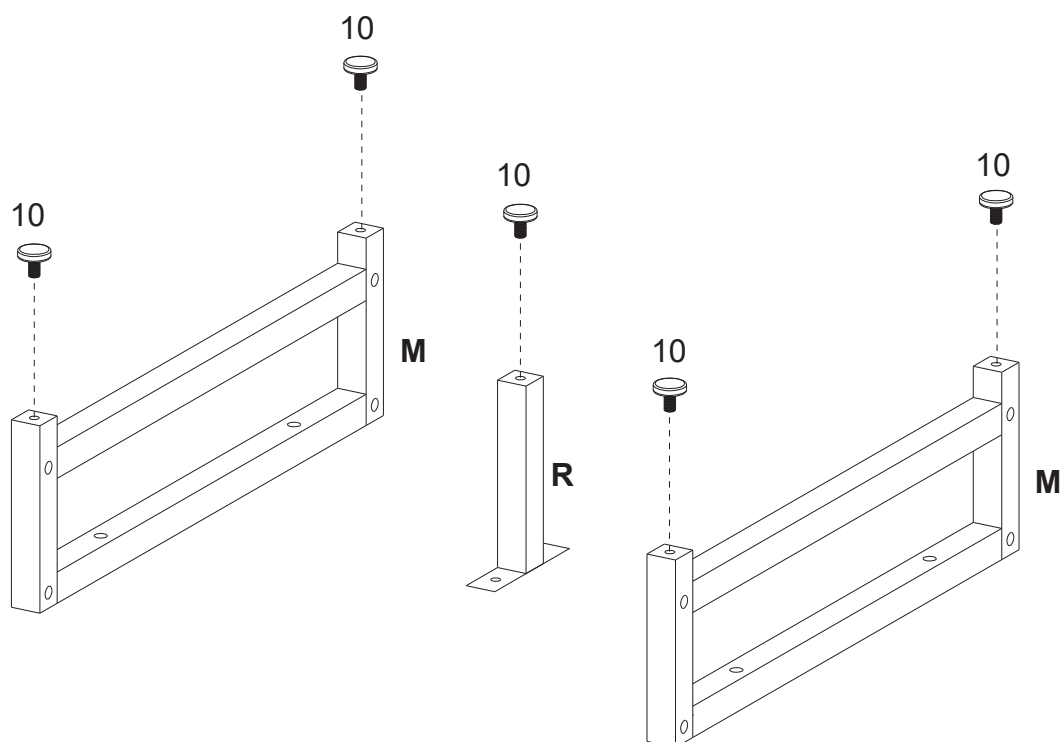
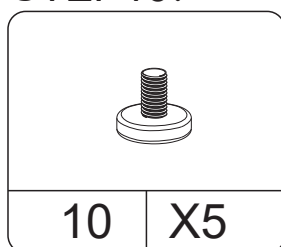


INSTALLATION STEPS

STEP17:

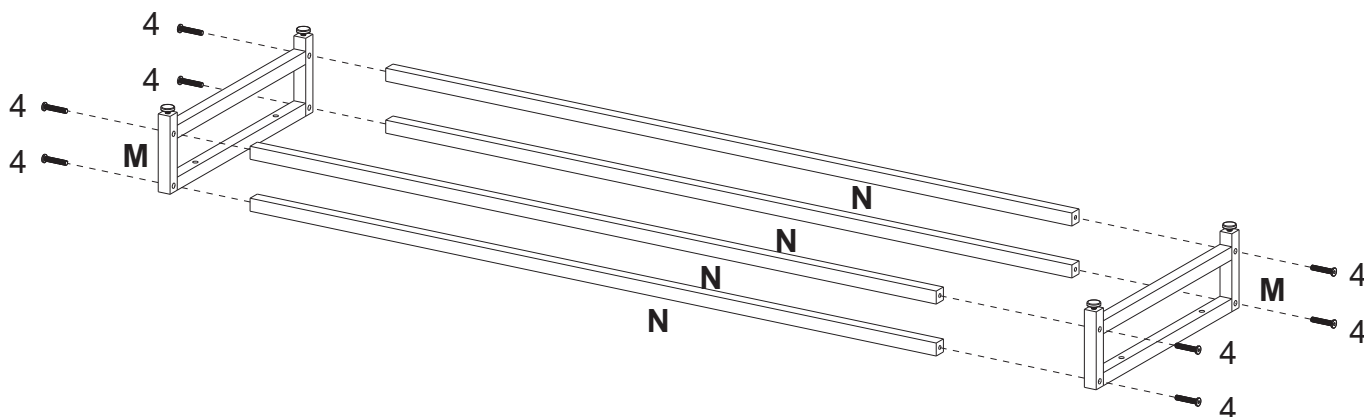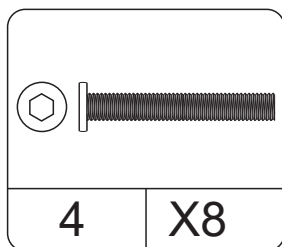


STEP18

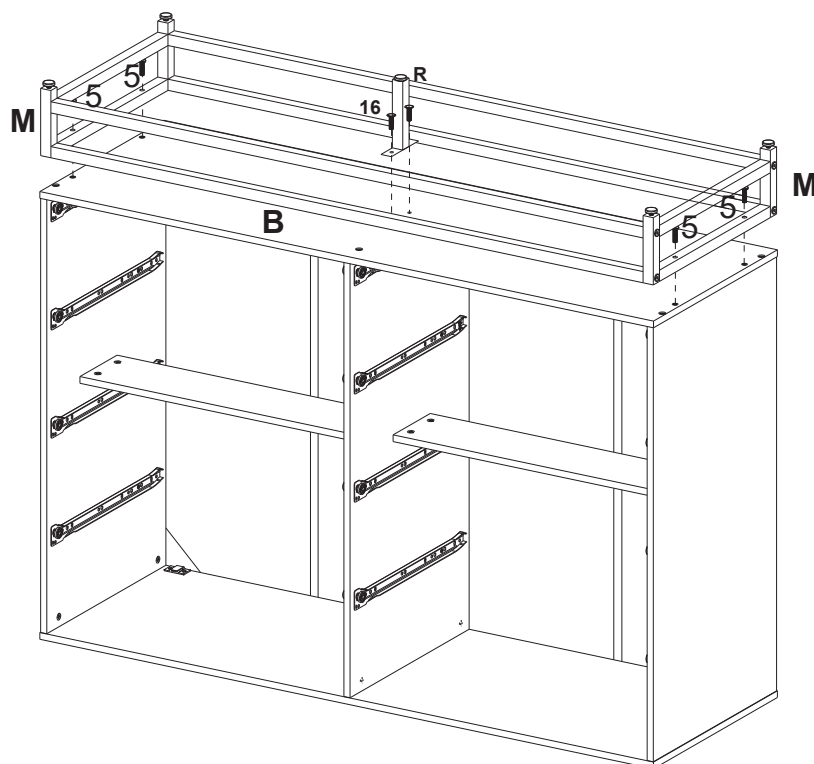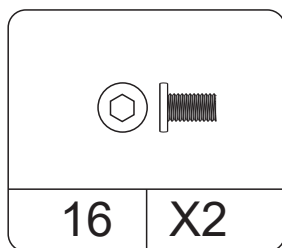
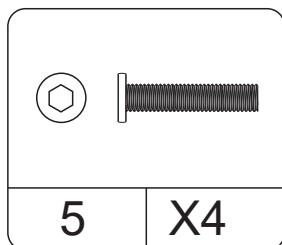


INSTALLATION STEPS

STEP19:


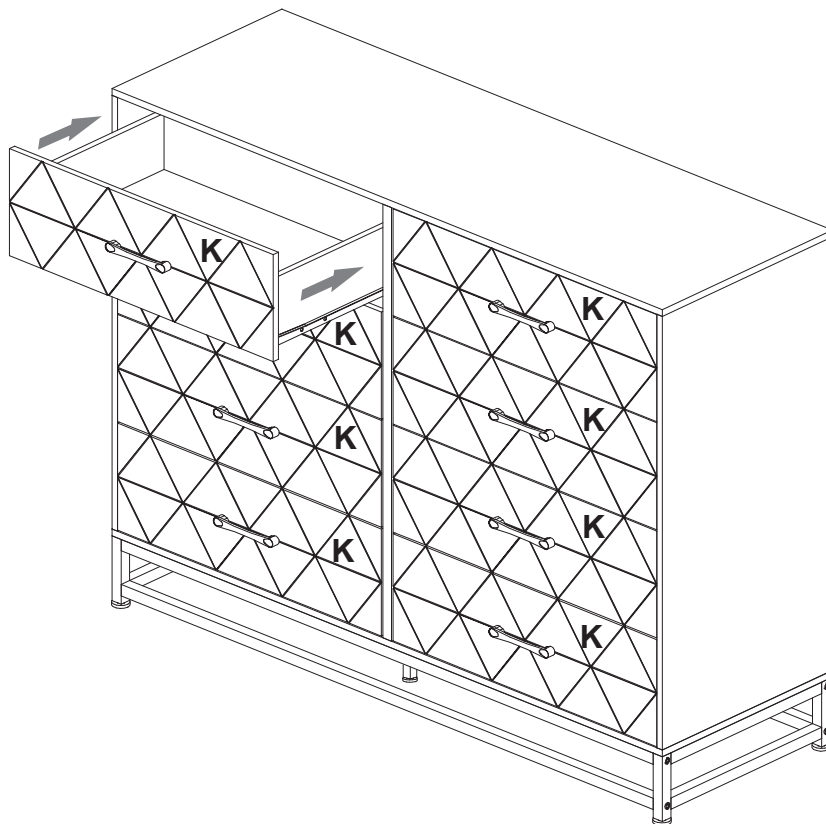


STEP20:

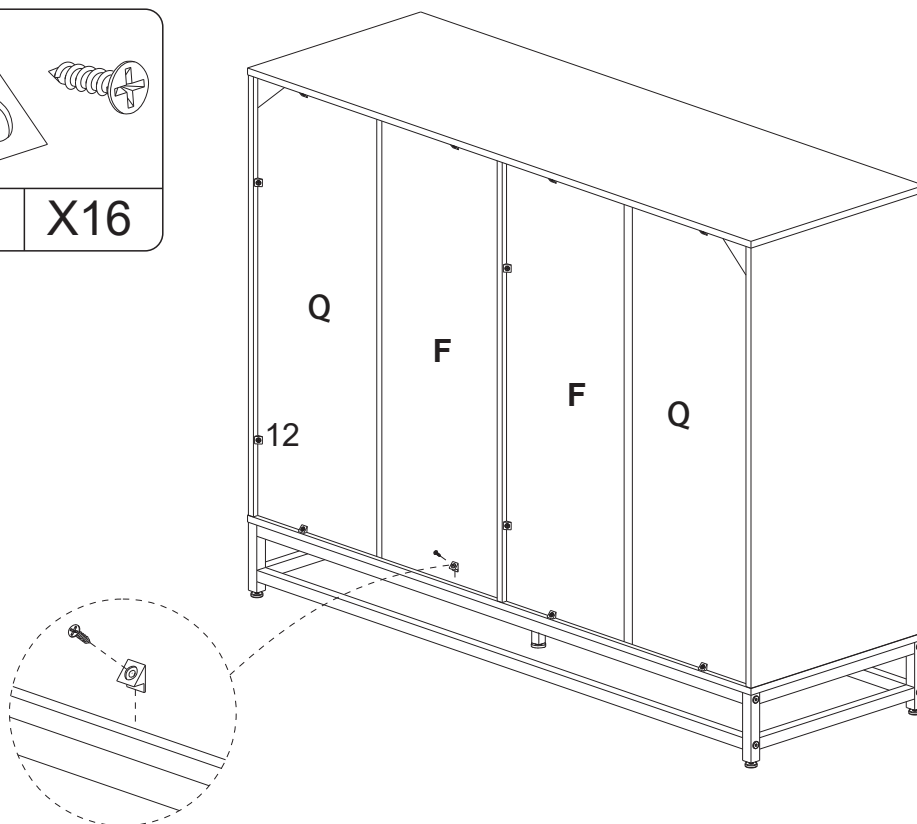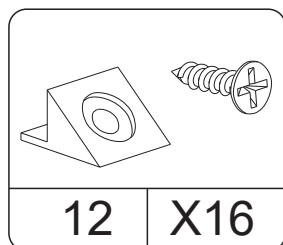

INSTALLATION STEPS

STEP21:

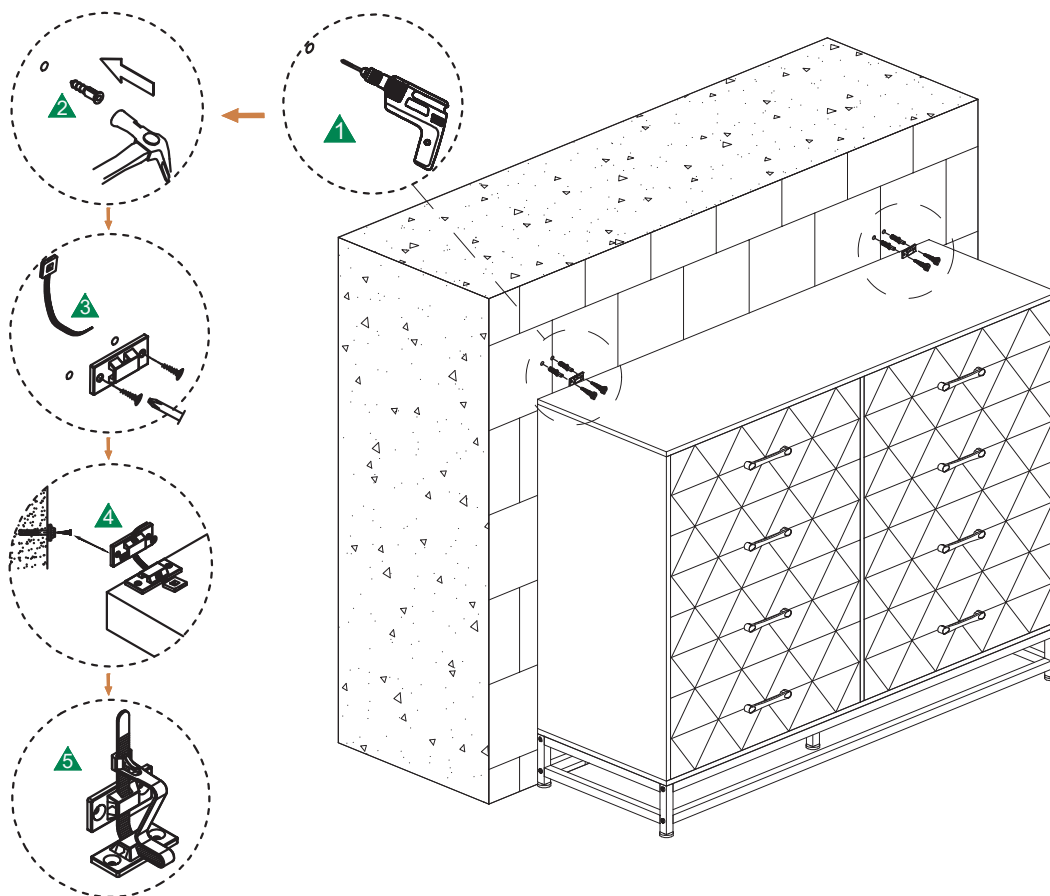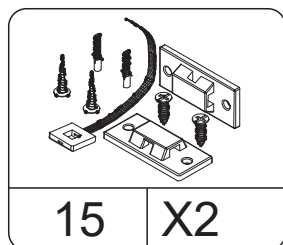

STEP22:

