


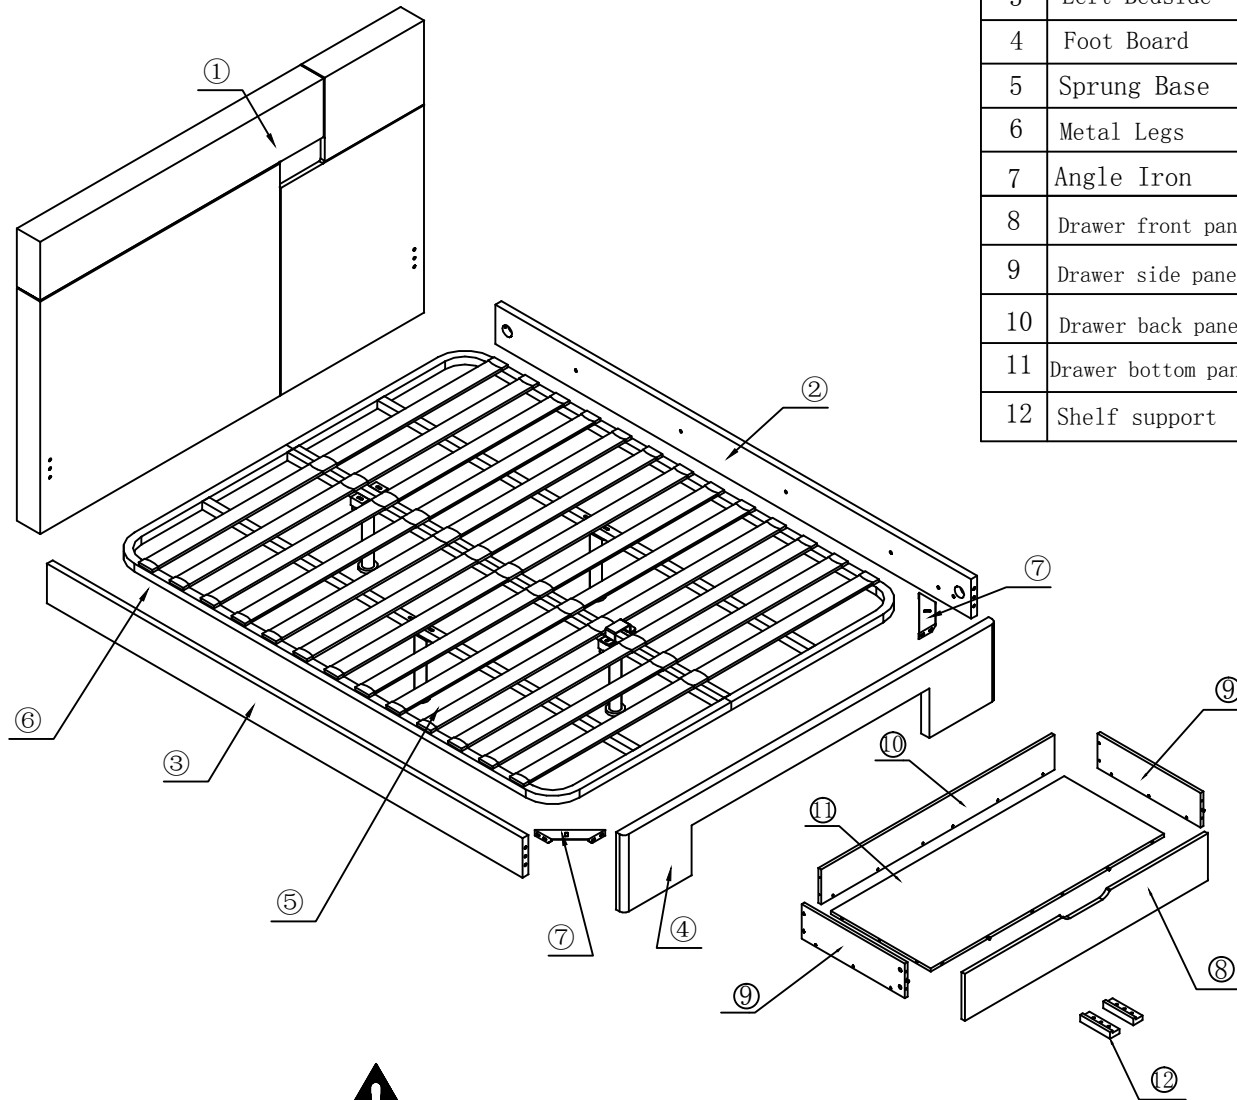


No	Part	Qty
1	Headboard	1
2	Right Bedside	1
3	Left Bedside	1
4	Foot Board	1
5	Sprung Base	1
6	Metal Legs	4
7	Angle Iron	2
8	Drawer front panel	1
9	Drawer side panel	2
10	Drawer back panel	1
11	Drawer bottom panel	1
12	Shelf support	2


HARDWARE FOR BED			
No	Part		Qty
A		Threaded Bolt M8x70	2
B		Spanner (5mm)	1
C		Threaded Bolt M8x65	2
D		Spanner M8/13mm	1
E		Nut M8	4
F		Maxiluna Washer Ø40x15	4
G		Cover Cap Ø40	4
H		Screw M6x45	8
I		Gasket M8	2
J		Gasket M6	8
K		M6x18	8
N		Quickfit (Ø5X33)	8
M		Cam Ø15X12	8
O		Screw Ø4x35	16
P		Foot wheel	4
Q		Screw Ø4x12	8
R		Screw M6x30	2
S		Steel connectors	1
T		Wooden tenon Ø8X30	4

HARDWARE FOR BEDFRAME			
No	Part		Qty
E		Nut M8	11
I		Gasket M8	22
L		Screw M8x45	8
M		Screw M8x70	3

- Please check contents and read instructions before commencing assembly.
- Please use a soft mat to avoid damaging during assembly
- Assemble this article following the enclosed instructions carefully.

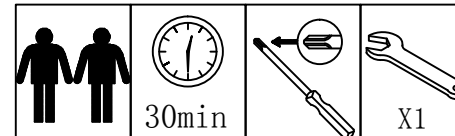


STEP 1

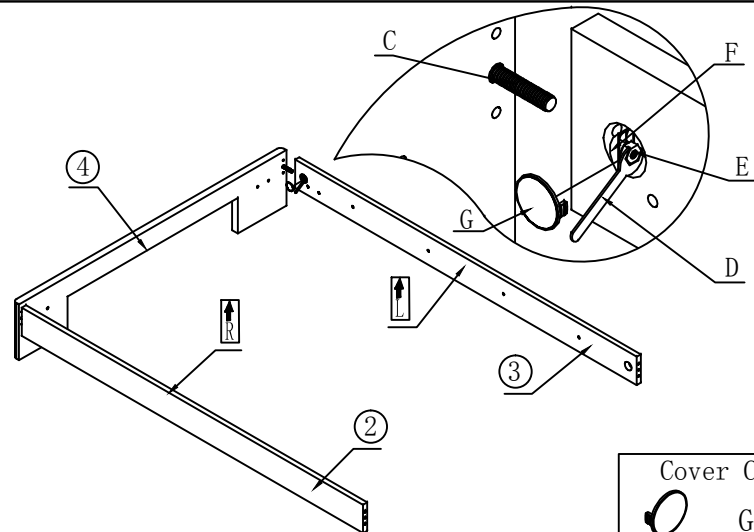


Cover Cap $\phi 40$	
	Gx2
	$\phi 40 \times 15$
Fx2	Ex2
	M8x65
Cx2	M8 / 13mm
	Nut M8
	Dx1

STEP 2

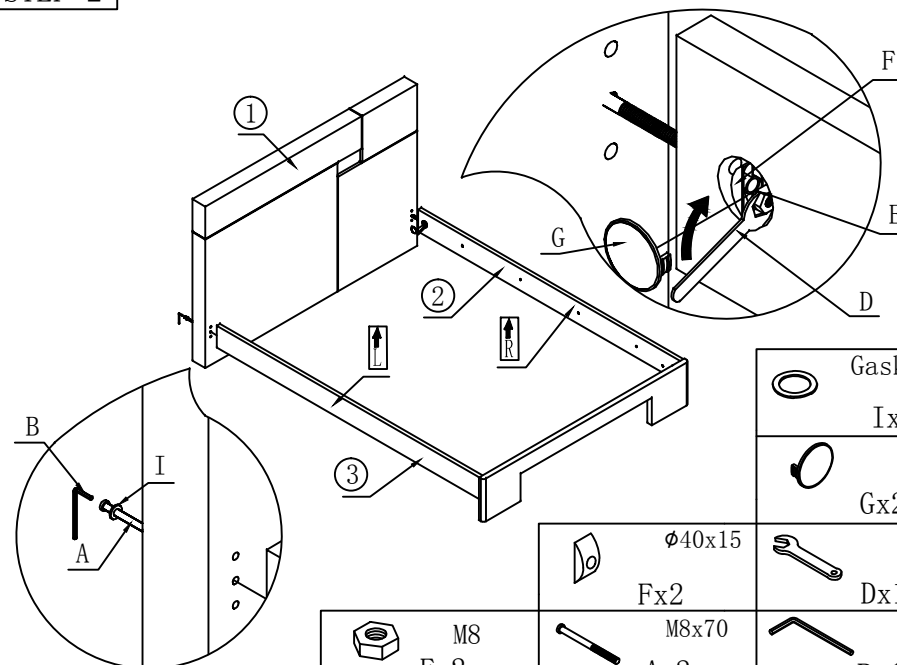


Gasket M8	
	Ix2
$\phi 40$	
	Gx2
	$\phi 40 \times 15$
Fx2	Dx1
	M8x70
Ax2	Bx1
	M8
Ex2	

STEP 3

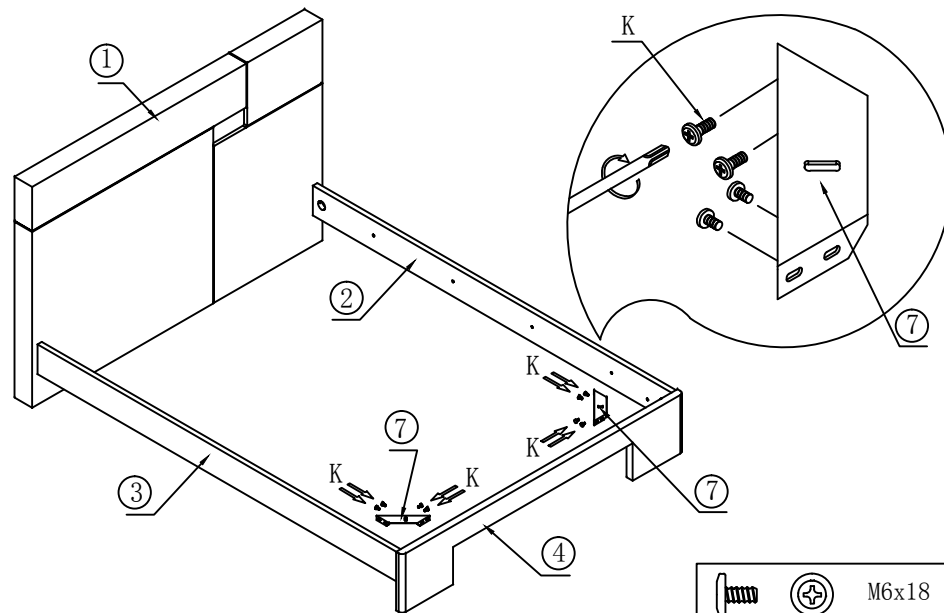


	M6x18
	Kx8

STEP 4

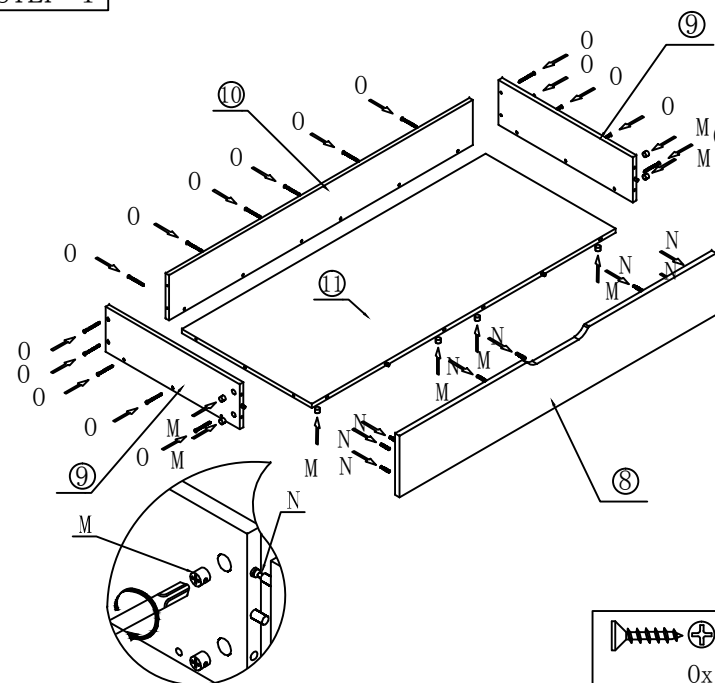


$\phi 5 \times 33$	
Nx8	
	$\phi 4 \times 35$
0x16	$\phi 15 \times 12$
	Mx8


STEP 5

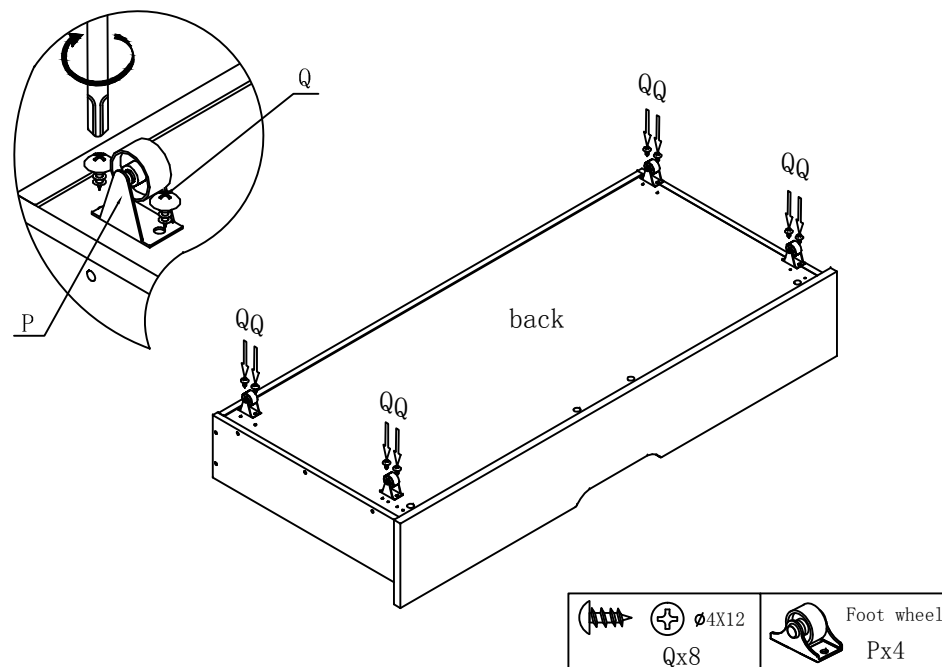


STEP 6

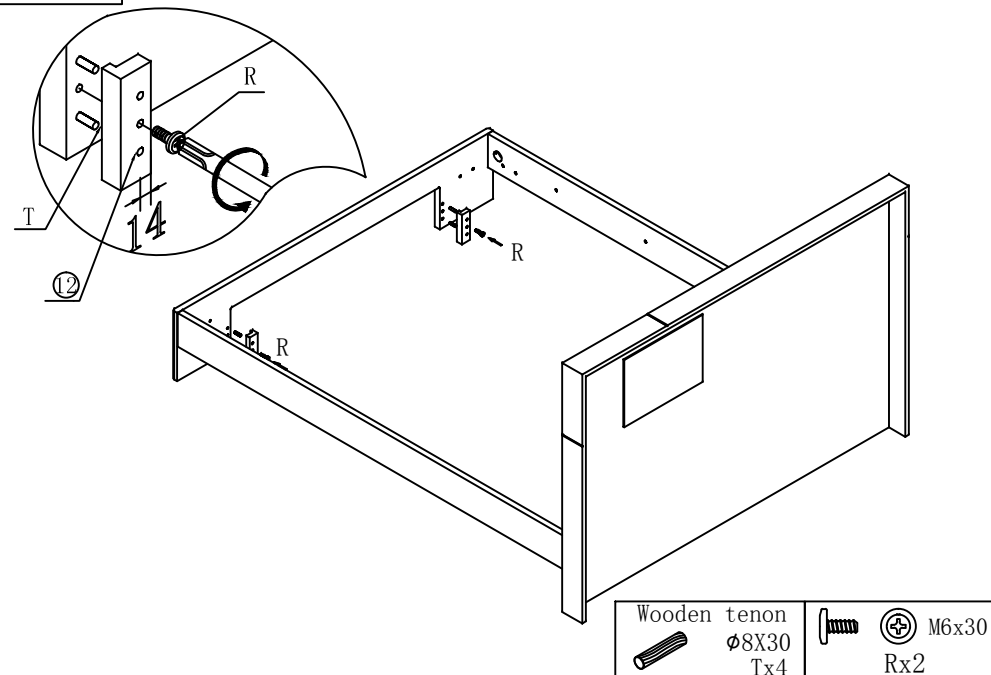

STEP 7

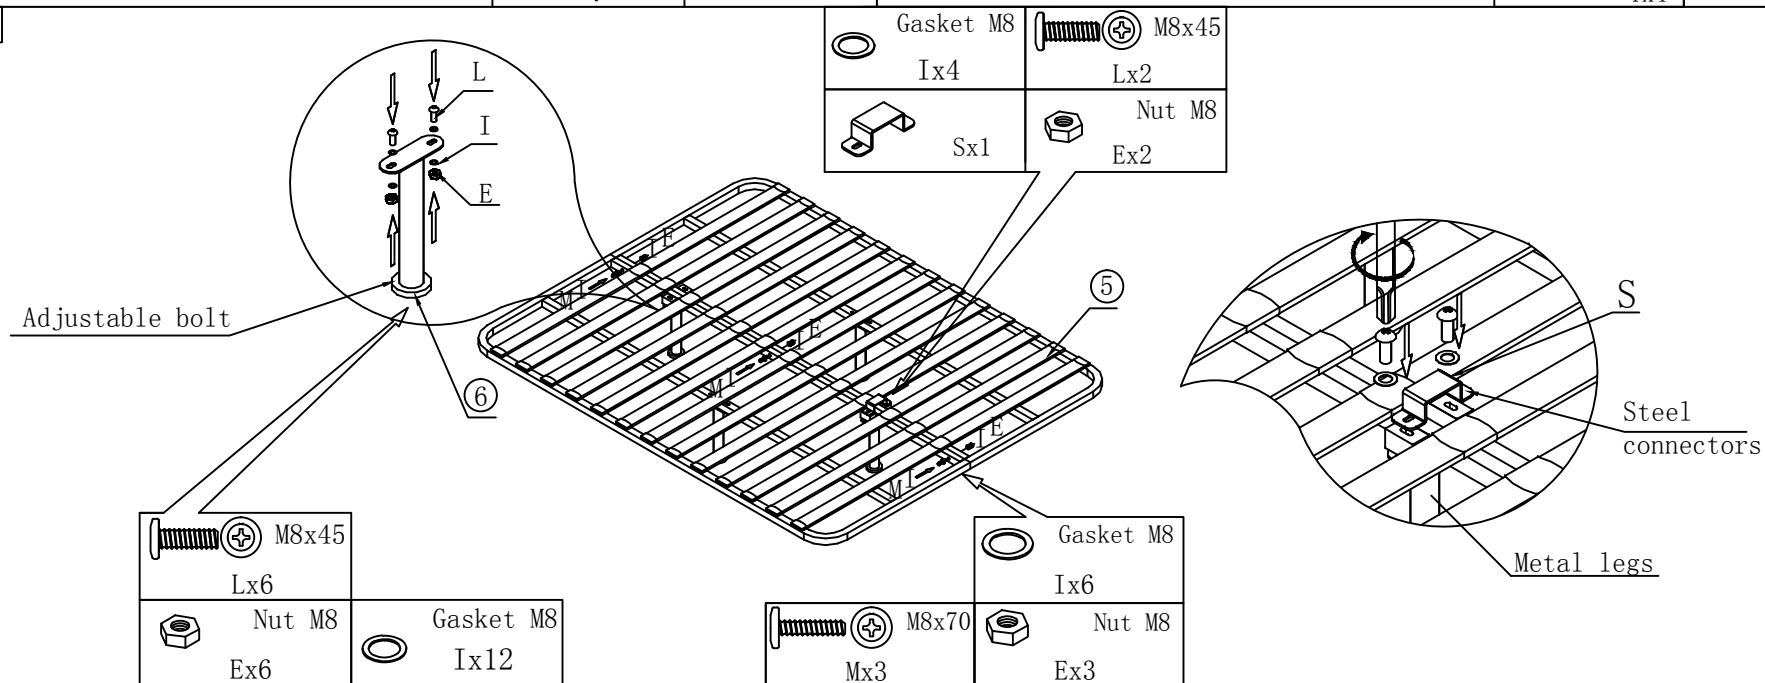

STEP 8

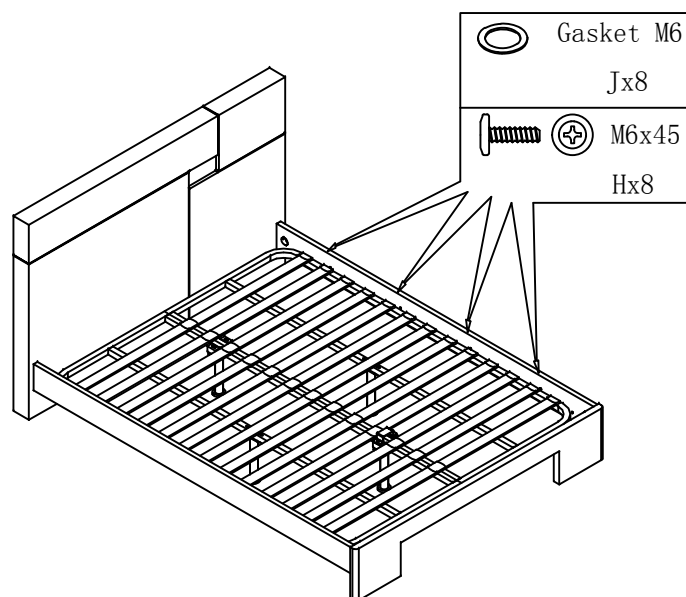

STEP 9

