






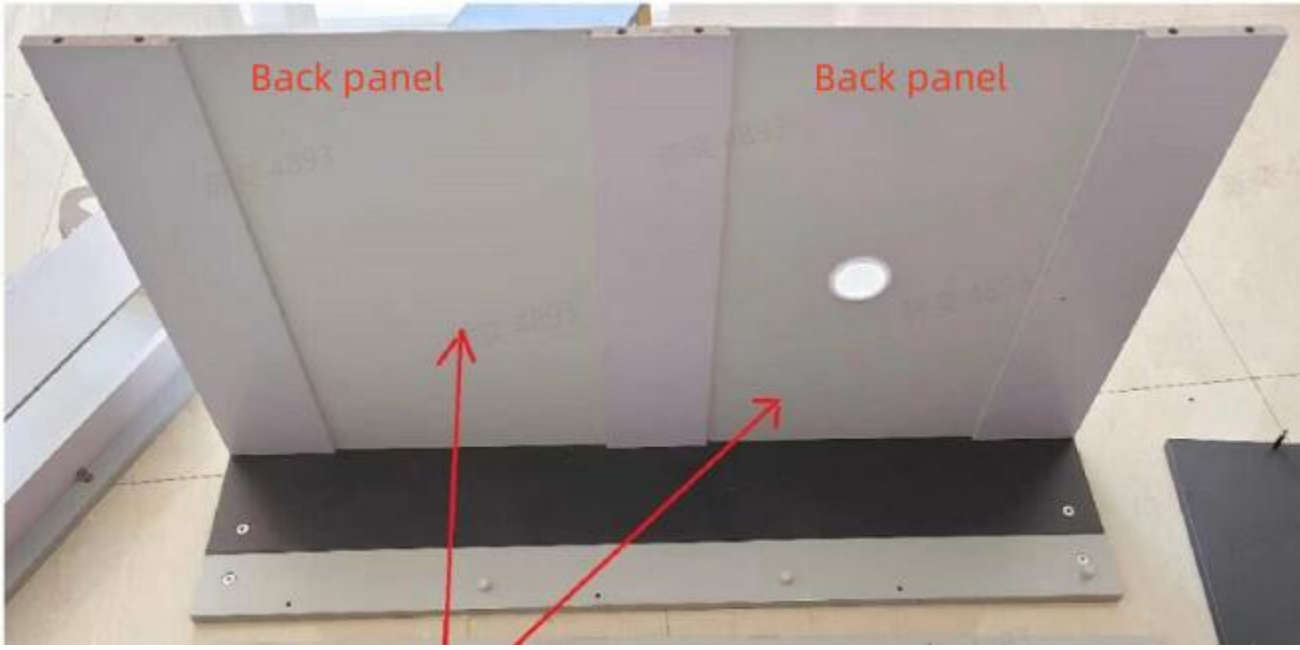
Step 1:

First nail the door stop fittings  inside the slightly larger holes in the side panels, then connect  the

front and back side panels together with pins and screw the black 3-in-1 screws  into all the white pre-drilled

holes . Look at the picture to insert the slotted backing strip (The center is double-sided with slots, the two sides are single-sided, and there are expansion screw holes. Please do not install it incorrectly.). The nut hole faces backwards.

Note that the upper part is the closest the door stopper is to. 



Step 2:



Install the thin back panel, the breathable hole accessory, and break it off to install it on the back panel.




Step 3:

Insert the installed door panel into the small door spindle hole on the side panel.



The door panel needs to be installed in advance by referring to the video.

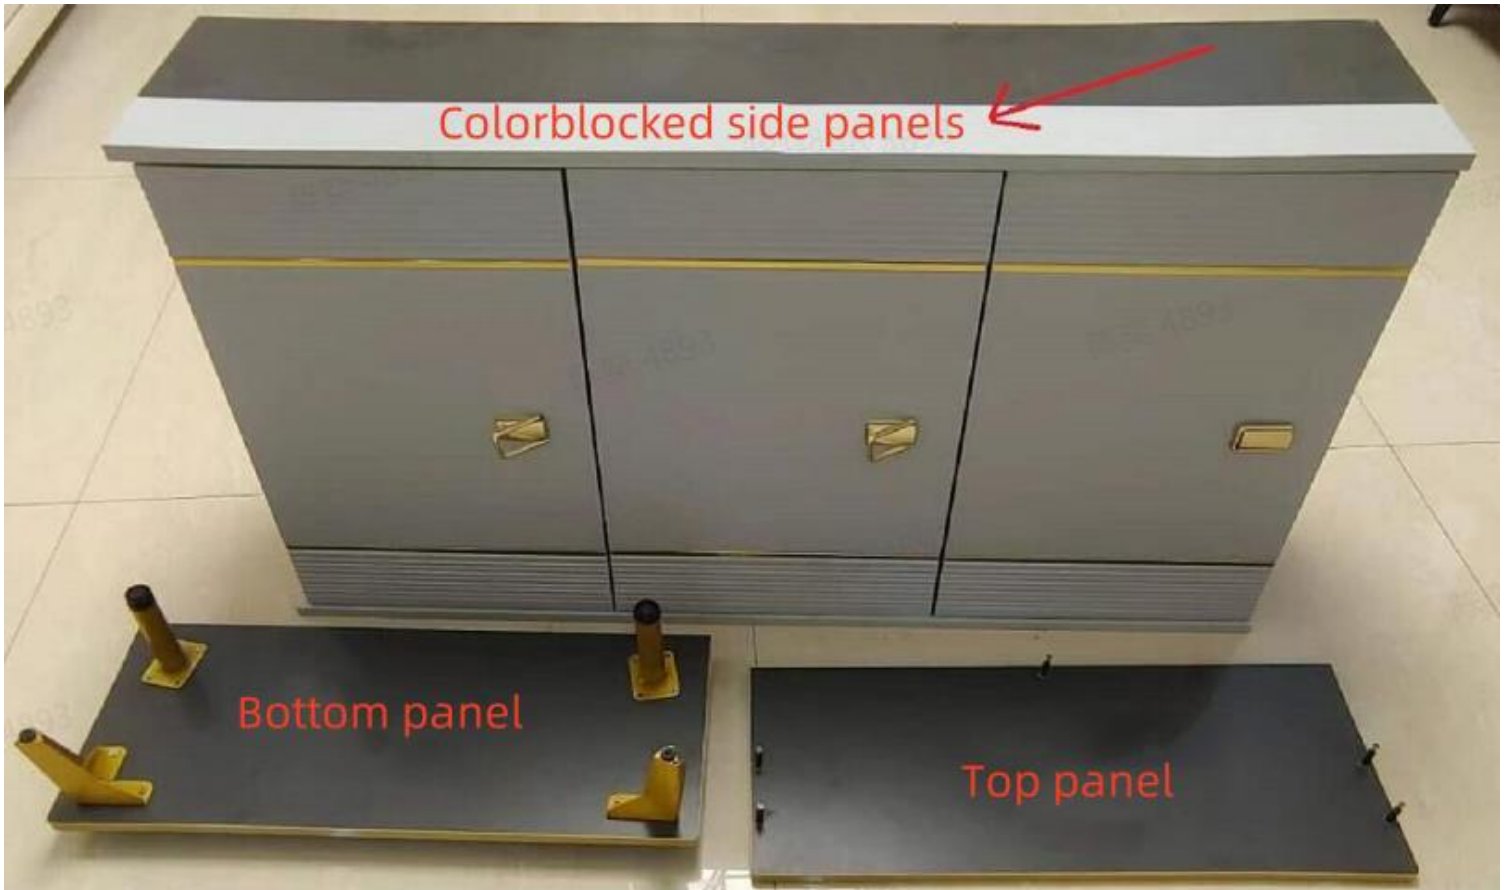

Step 4:

Attach the other side panel (with the holes aligned). Locate the bottom panel with the locating holes on the reverse side and secure the top leg with a 1.5 long screw, noting that the front needs a square leg and the back needs a round leg.




Step 5:

Install the top panel and lock it in place with a cross nut, don't miss it.



Step 6:

Install the bottom panel, lock the nuts and check that all the nuts are secured tightly and don't leave them untightened.

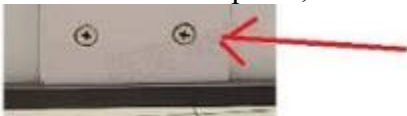

Important Tips:

After installation, please have two people lift it together and do not tilt legs, otherwise it is easy to damage legs and bottom plate.