


LV C2440

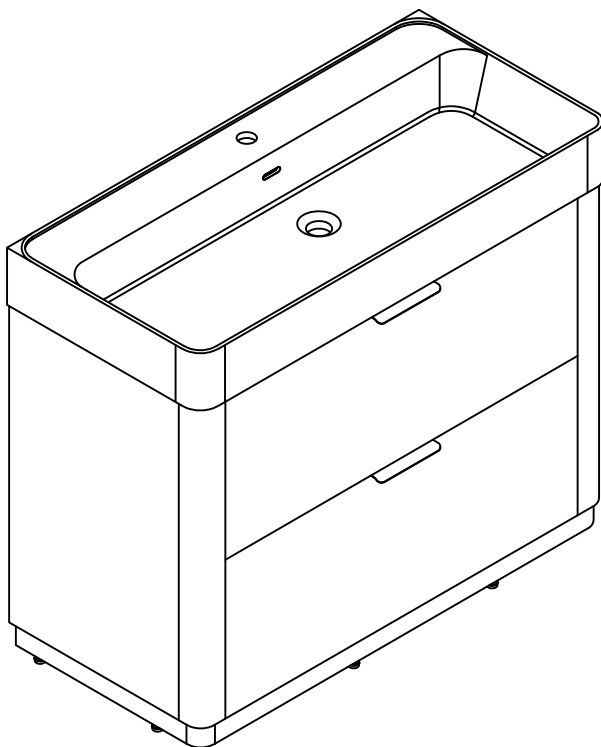

Thank you for shopping with us!

We encourage you to take a few minutes to go through this booklet. It contains important information on installation and care tips to keep your furniture looking as good as new.

Before Installation


Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


Cam Lock Assembly Instructions

Diagram A

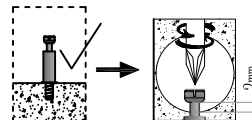


Insert Cam Bolt into hole as shown in diagram A.


Diagram B

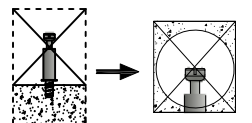


Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure B, as this will cause the Cam Lock to be too loose, and not interlock properly.

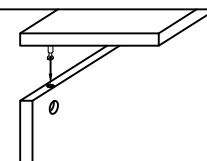

Connect the panels together.

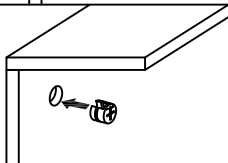


Attention: Cam lock arrow point to the steel rod.

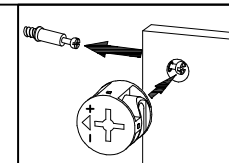


first step

second step

third step




To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. Do not use an automatic screwdriver as it may bend or break if too much power is imposed.



Installation of wooden tenons as shown in the diagram.

Dimensions

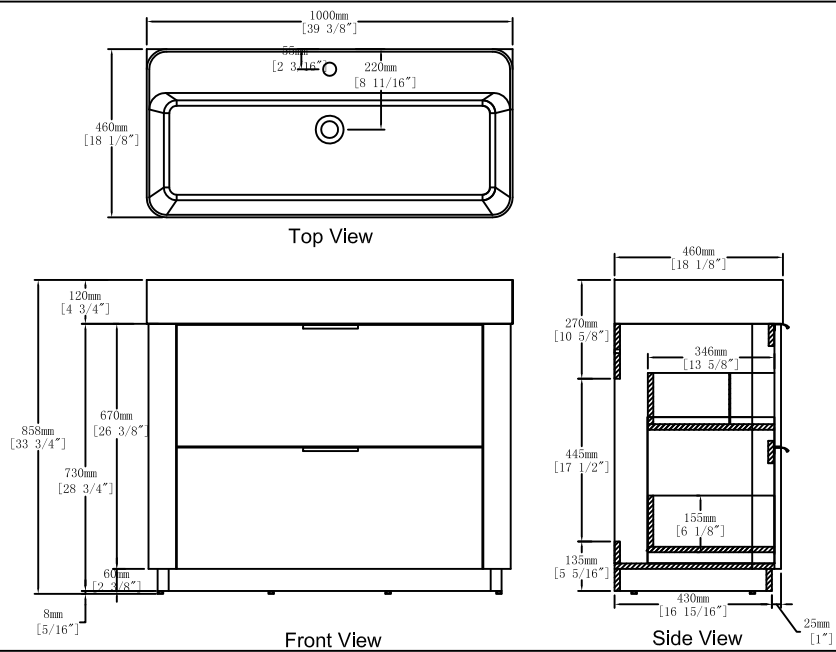


Hardware


NO.	Draw	QTY
A	Screws Ø4x14mm	73
B	Two-in-one connector	46
C	Two-in-one connector	46
D	Wood plug	8
E	Plastic anchor (Ø10mm)	2
F	Screws for fix on the wall	2
G	Bracket (53x70x44mm)	2
H	Bracket (19x19x35mm)	2
I	Screws Ø4x25mm	10
J	Screws M3x12mm	8

NO.	Draw	QTY
K	K-R K-L Track	2
L	L-L L-R Plastic side panel	2
M	Handle (Screws Ø4x14mm)	2
N	U-Shaped plastic (ZW-793)	1
O	Screws Ø4x20mm	16
P	Adjustable feet	6
Q	Anti-collision gasket	8
R	Screwdriver	1


Components

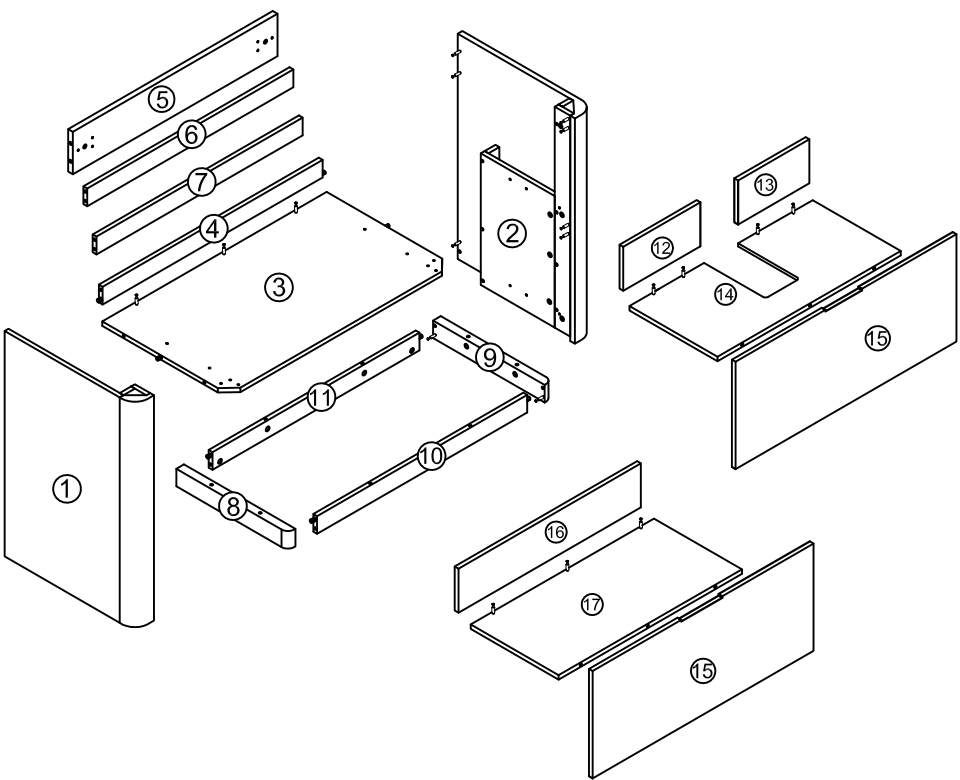

Recommended tools You Will Need-Outils Require

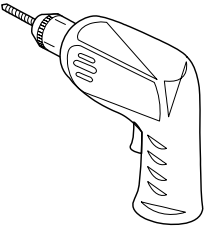


Power drill

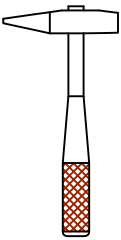

Hammer



Silicone




Pencil




Screwdriver

Step 1

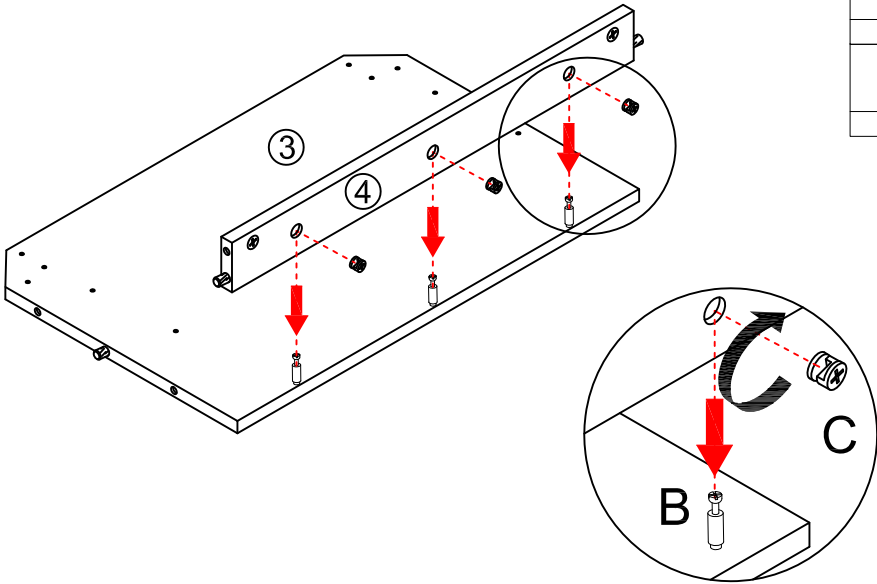


	x3
B	
	x3
C	
	
R	

Step 3

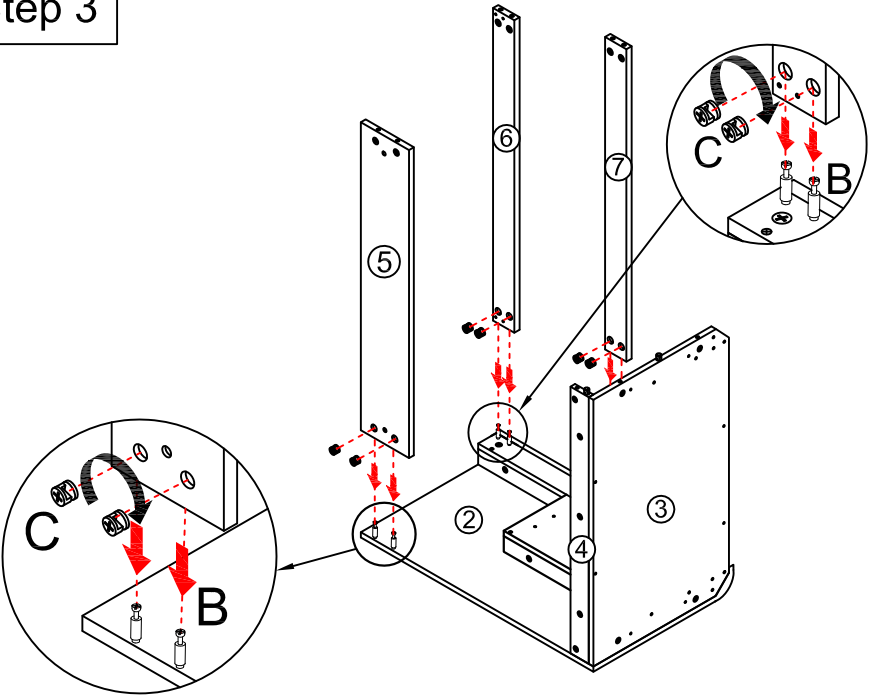


	x6
B	
	x6
C	
	
R	

Step 2

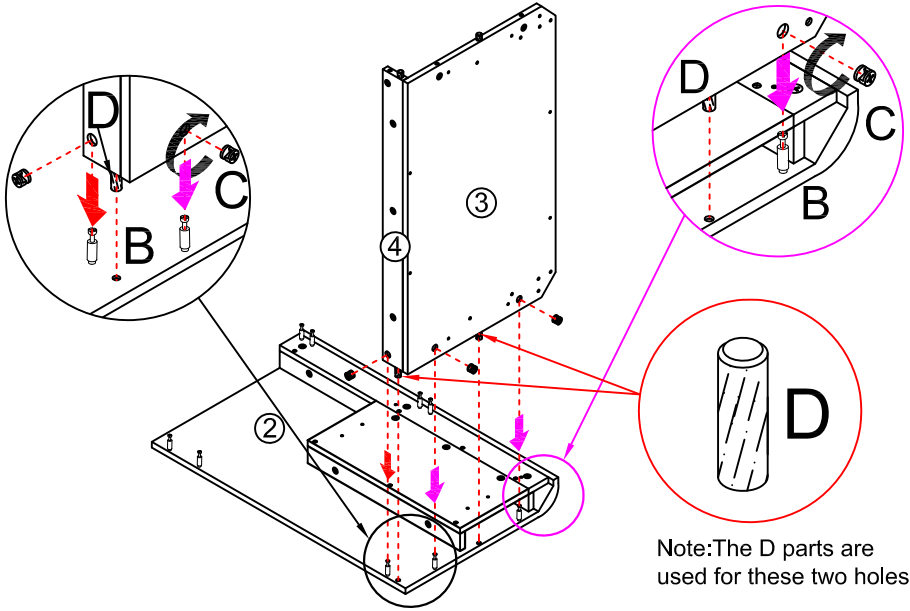

	x3
B	
	x3
C	
	x2
D	
	
R	

Step 4

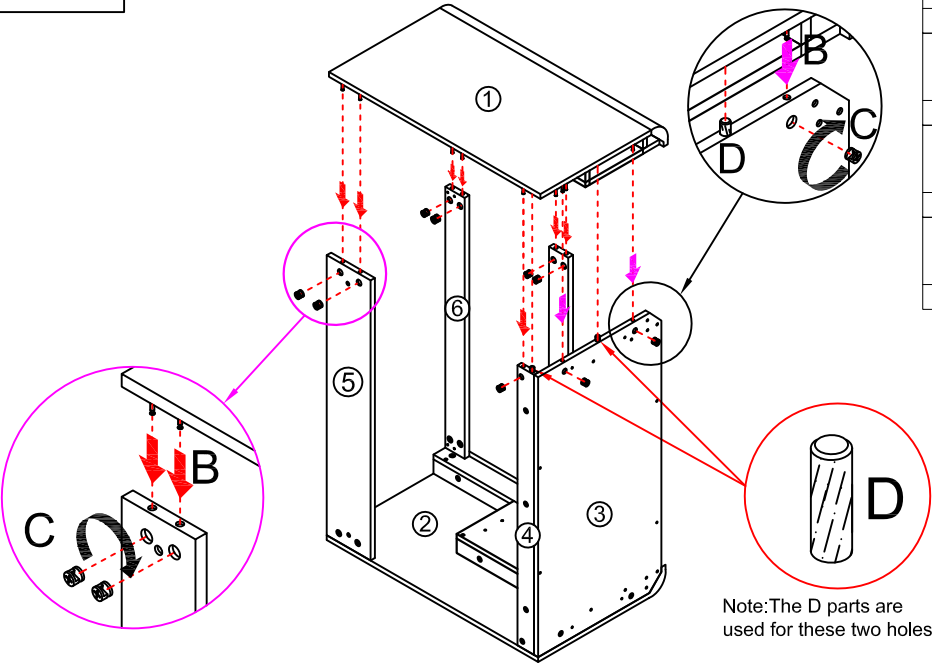


	x9
B	
	x9
C	
	x2
D	
	
R	


Note:The D parts are used for these two holes

Note:The D parts are used for these two holes


Step 5

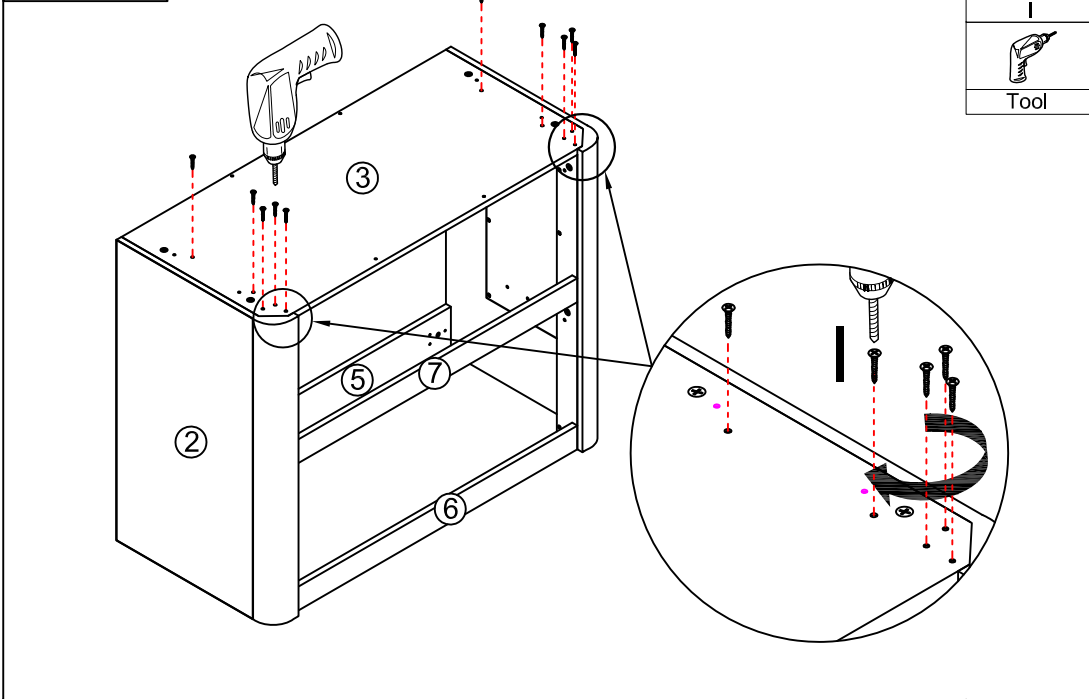


Step 7

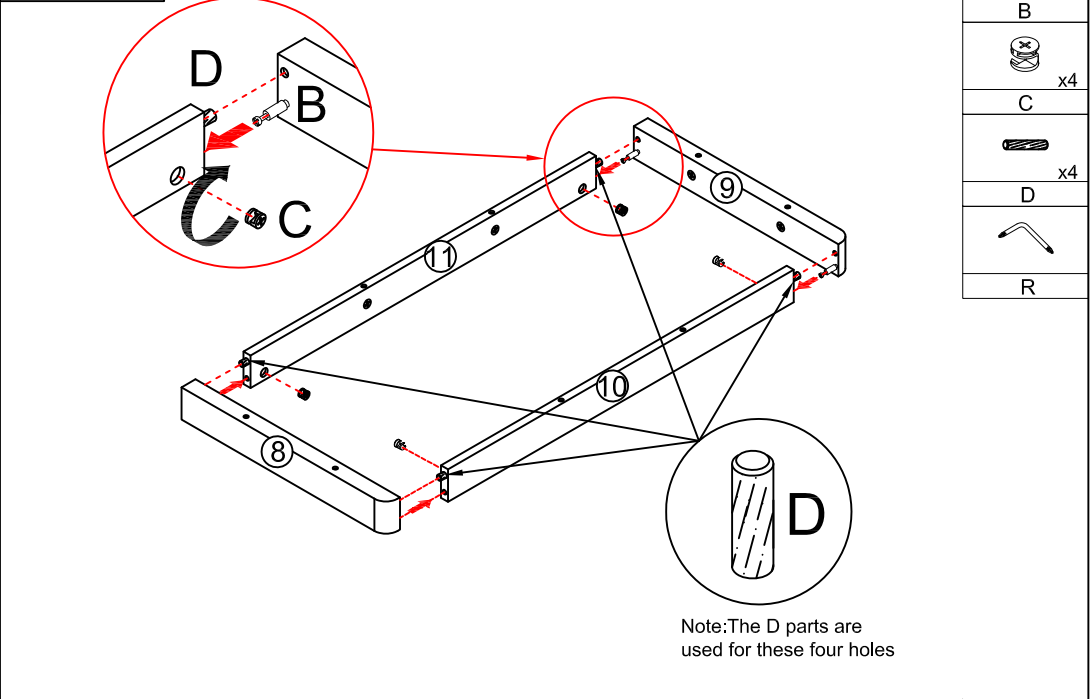


Step 6

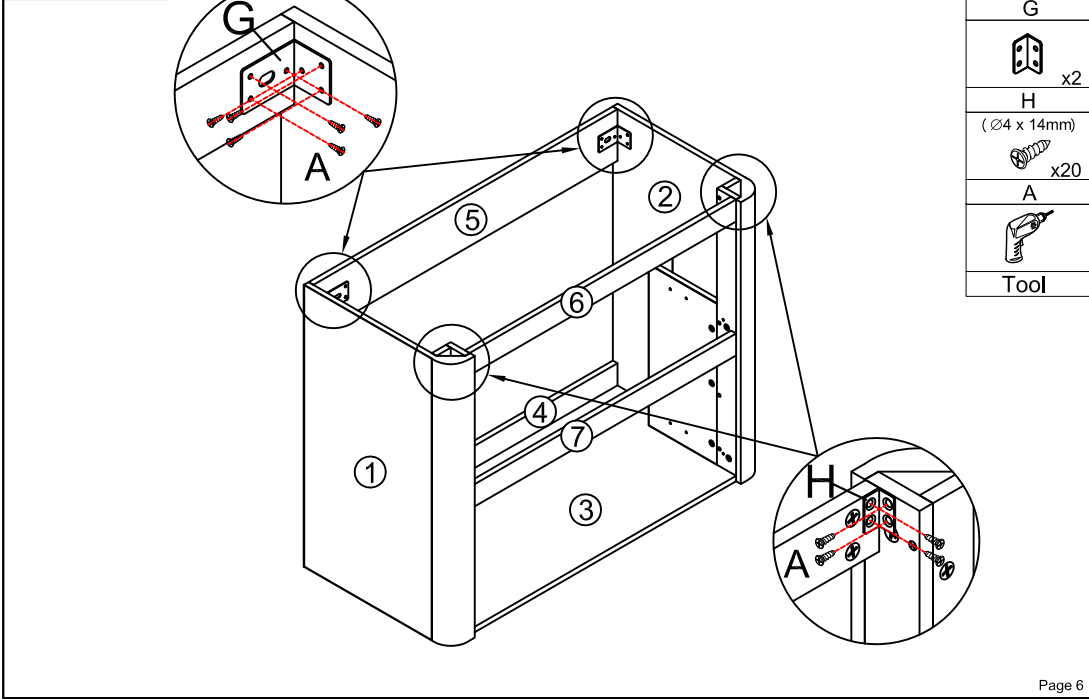

Step 8

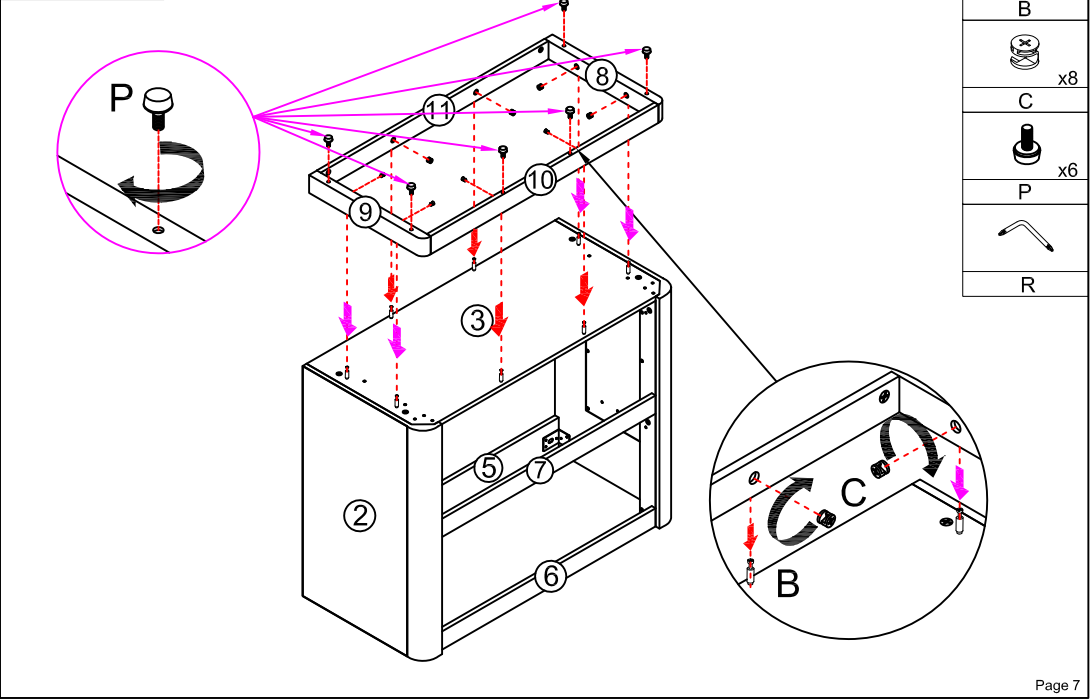


Step 9

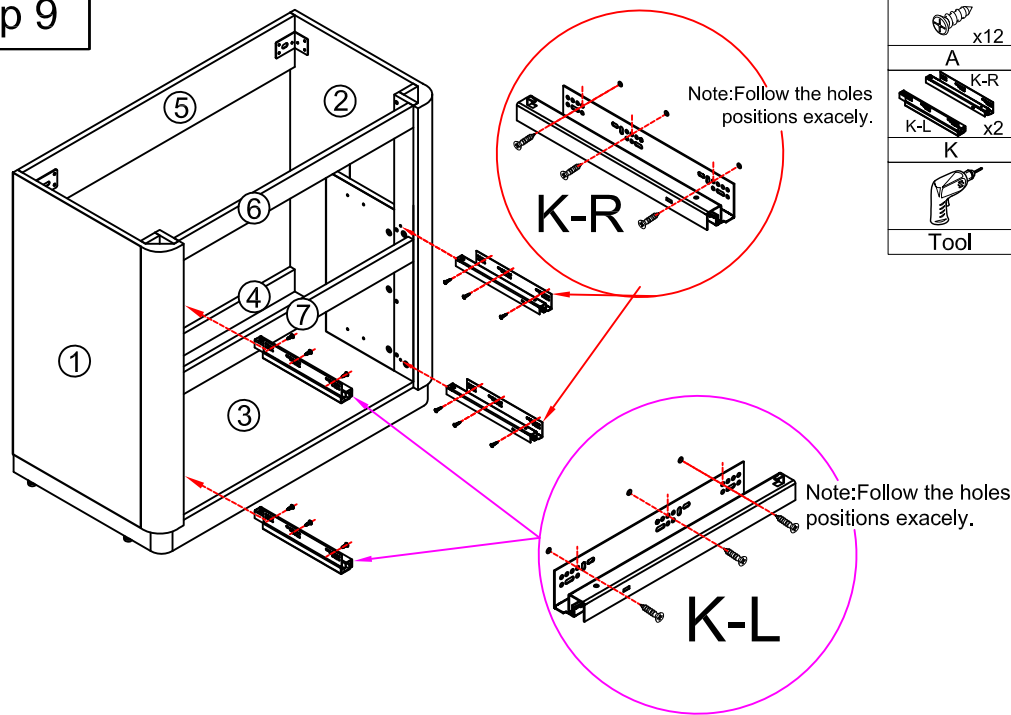


($\varnothing 4 \times 14\text{mm}$)
A x12
A
K-R
K-L x2
K
Tool

Step 11

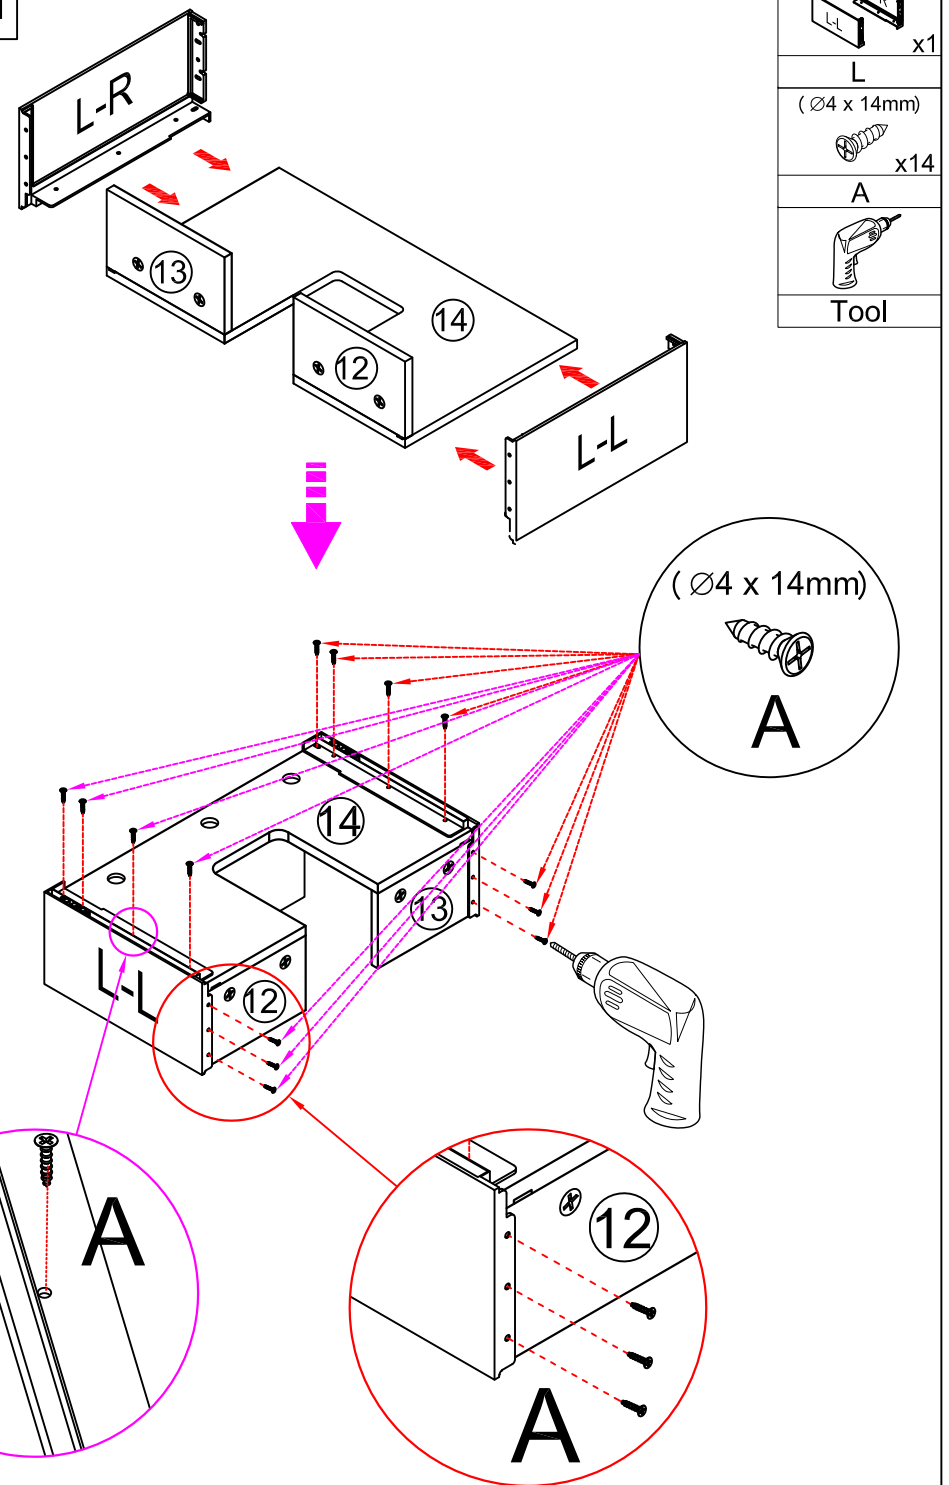


L-L
L x1
($\varnothing 4 \times 14\text{mm}$)
A x14
A
Tool

Step 10

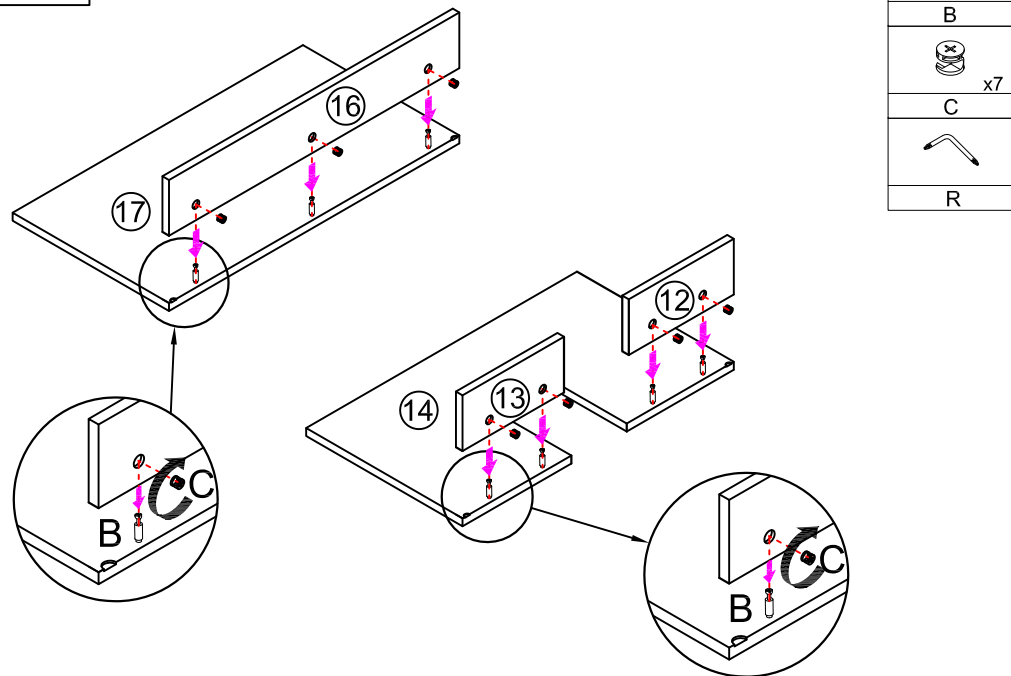


B x7
B
C x7
C
R

Step 12

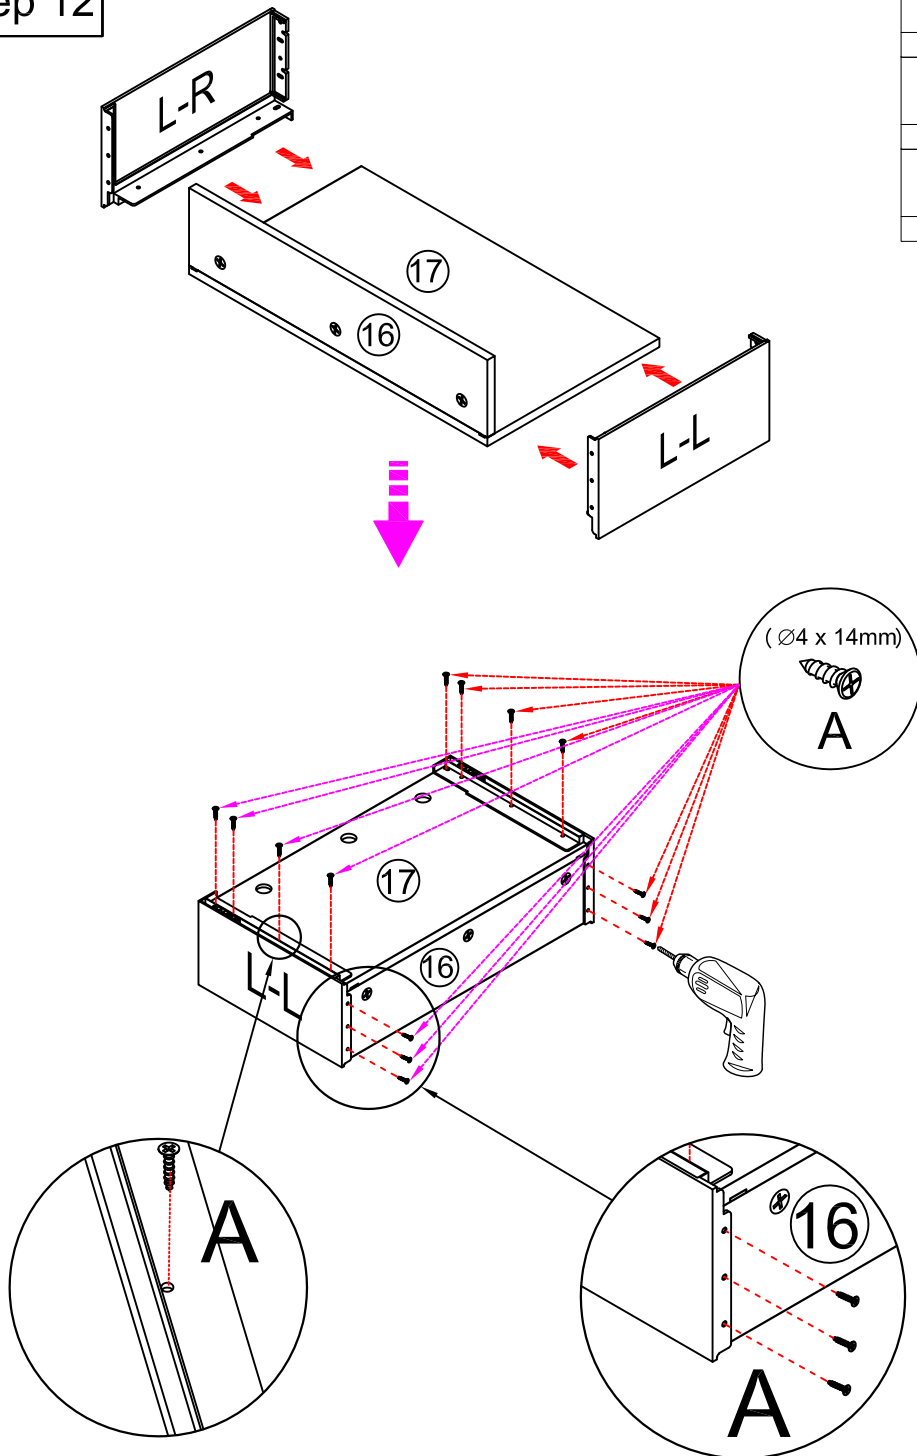


L	x1
(Ø4 x 14mm)	
A	x14
Tool	

Step 13

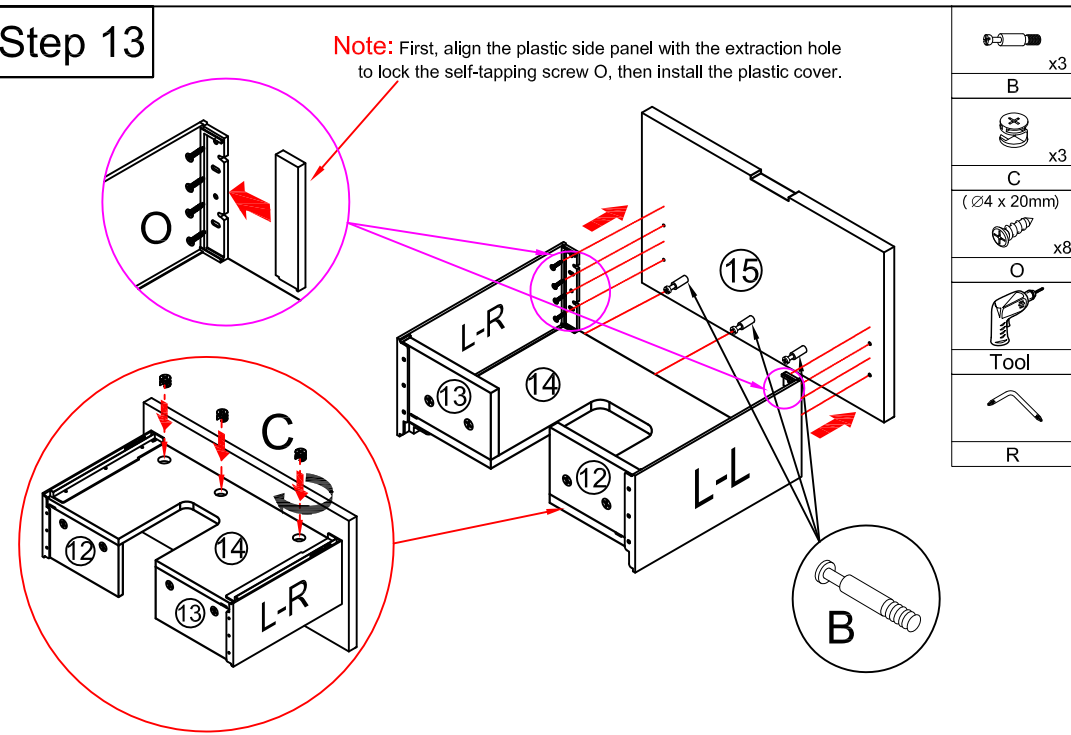


B	x3
C	x3
(Ø4 x 20mm)	
O	x8
Tool	
R	

Step 14

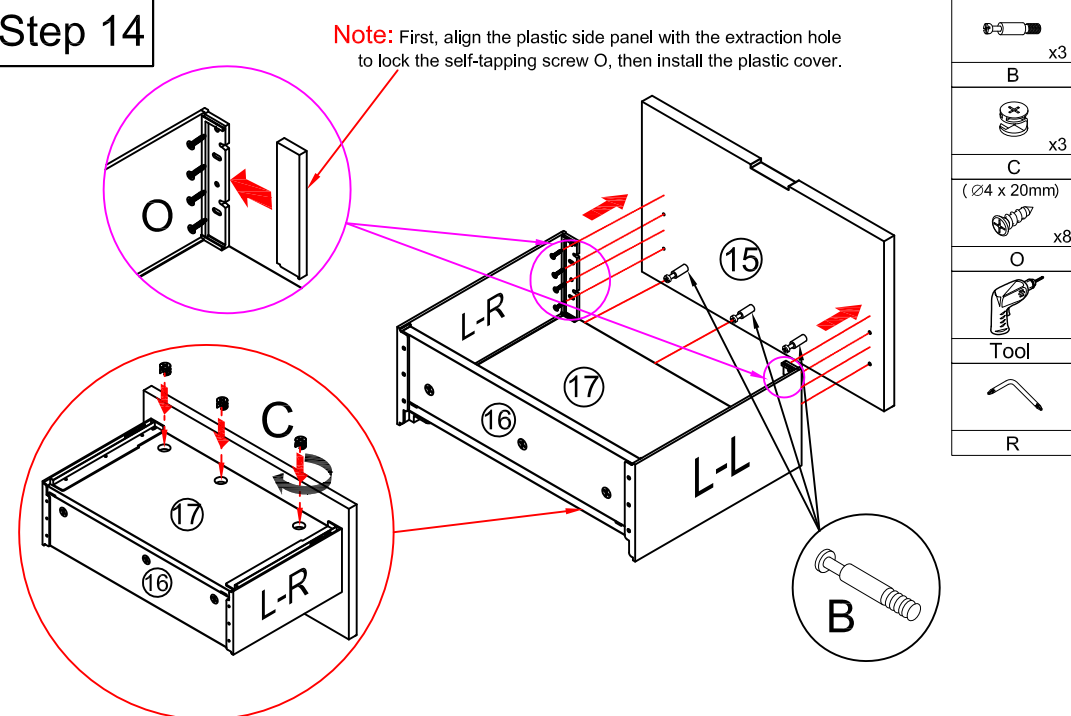


B	x3
C	x3
(Ø4 x 20mm)	
O	x8
Tool	
R	

Step 15

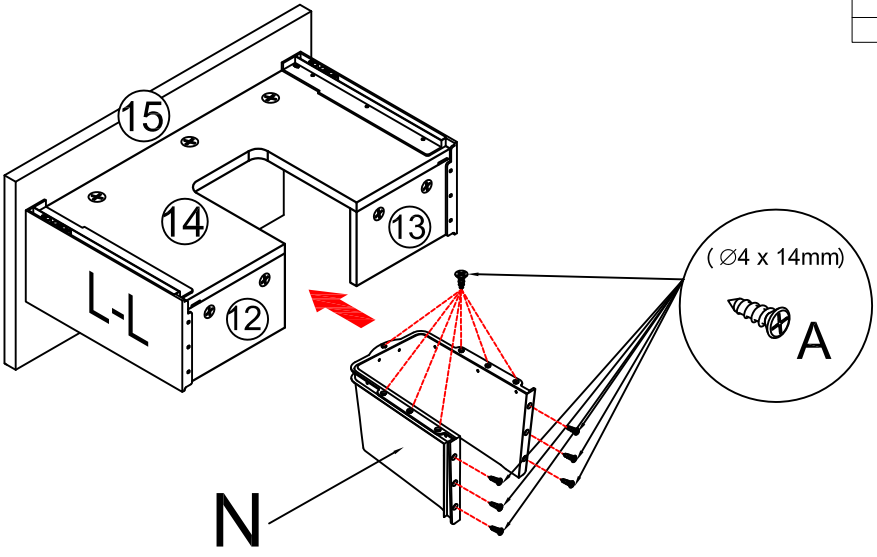


- (Ø4 x 14mm)
A x13
- A
- N x1

Step 17

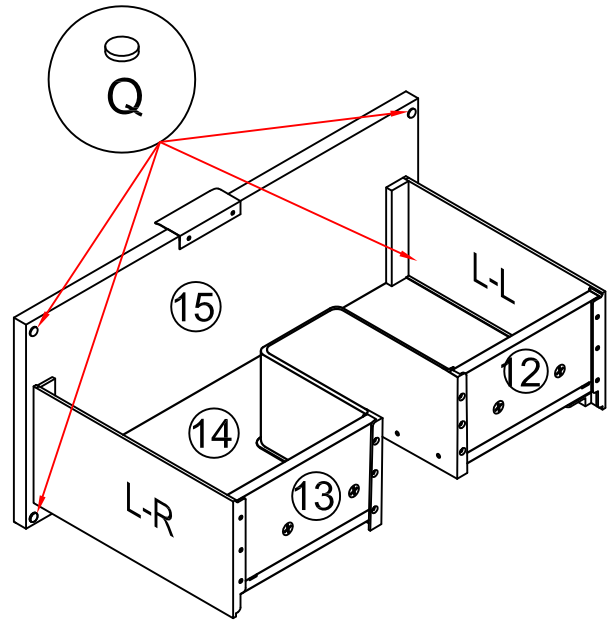


- Q x4

Step 16

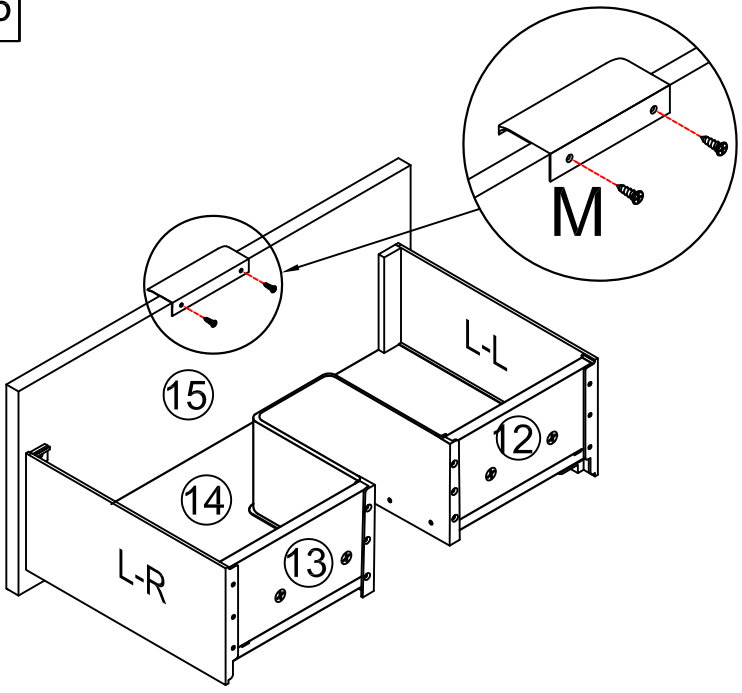



- M x1
- Tool

Step 18


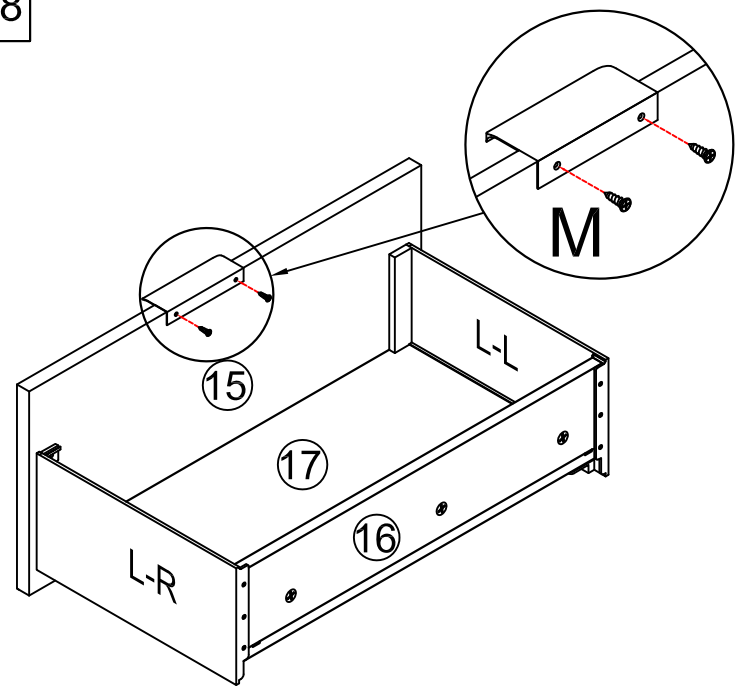


- M x1
- Tool



Step 19

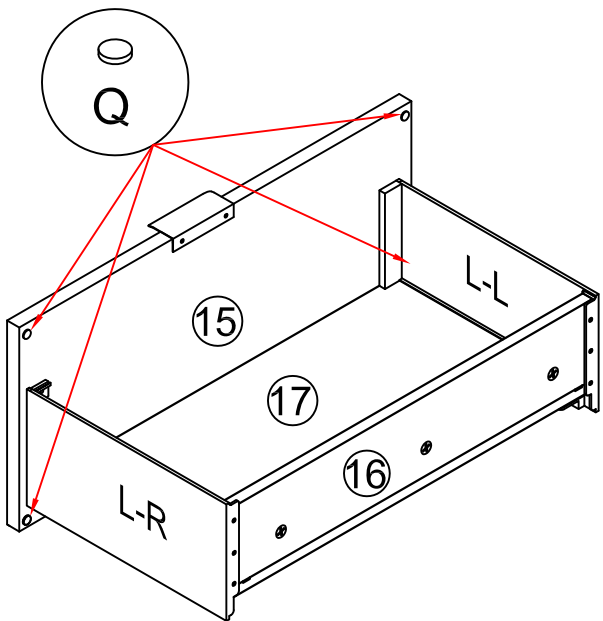



Step 22

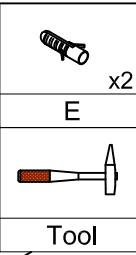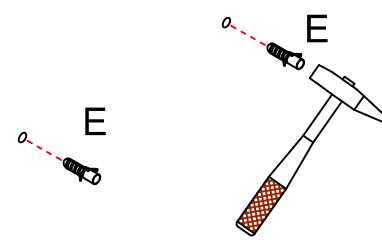



Step 20

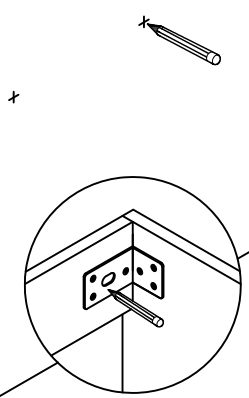



Step 21

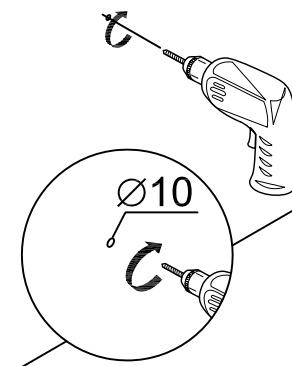

Step 23

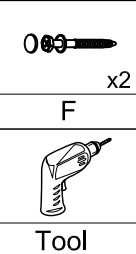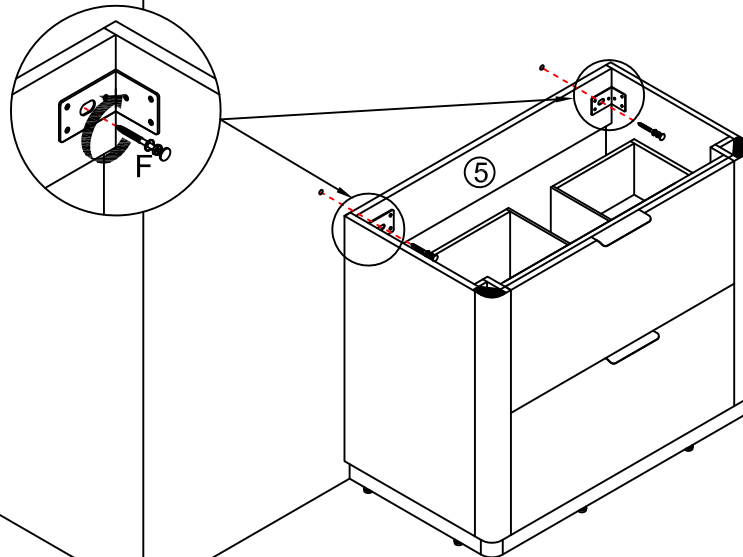


Step 24

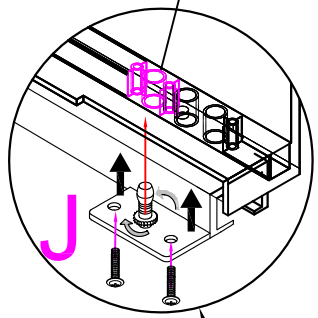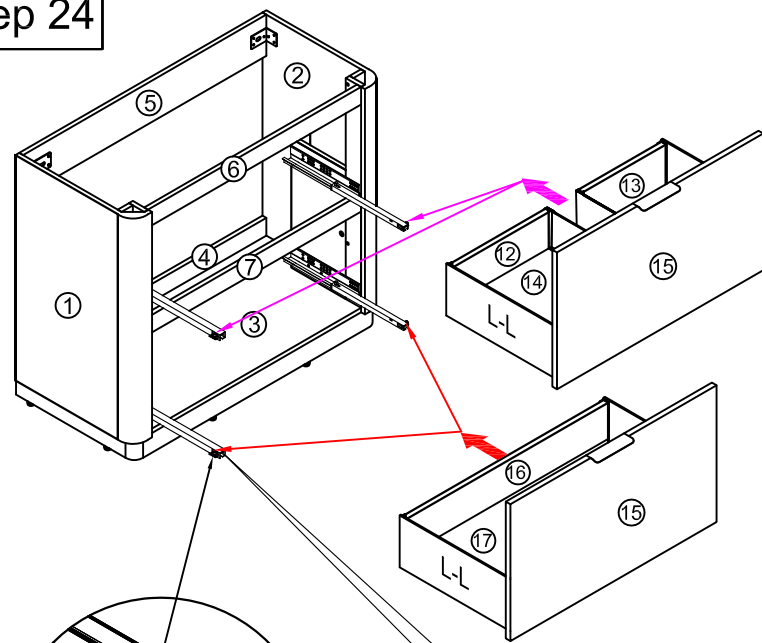


Third step: The bottom of the rail is fixed with screw J. The rails adjust their height 3mm.

Note: The bottom hole under the rail is stuck on this hole in the plastic side plate and locks the screw at the bottom.



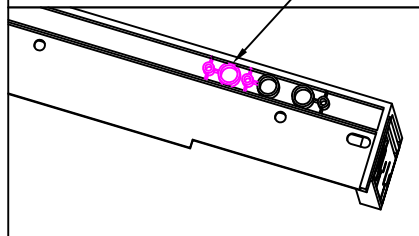


(M3 x 12mm)
J x8
Tool

Step 25

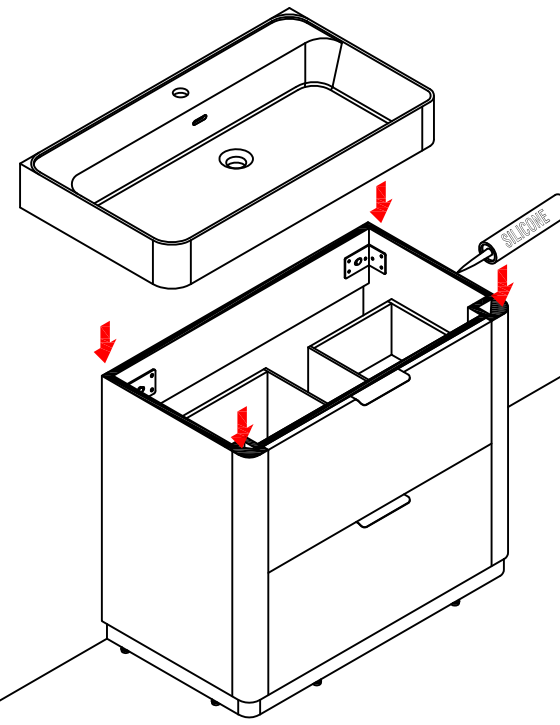


First

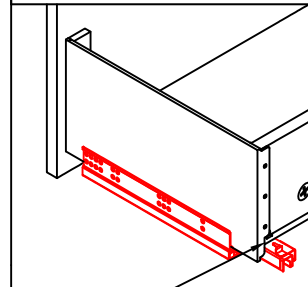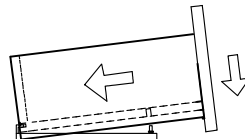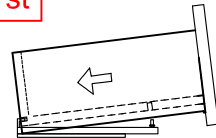


Scond step: Tuck the rear holes.

Finished

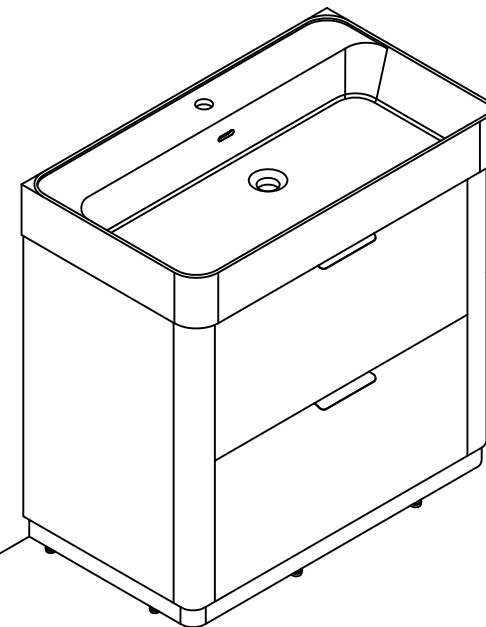


HINGE ADJUSTMENTS

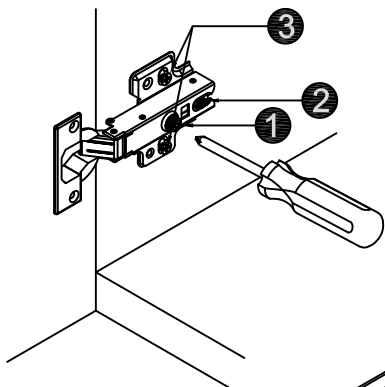


① Coverage Distance

Rotate screw to the right: Coverage distance decrease (-)
Rotate screw to the left: Coverage distance increase (+)

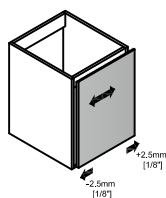


② Depth Distance

Rotate screw to the right: Coverage distance decrease (-)
Rotate screw to the left: Coverage distance increase (+)

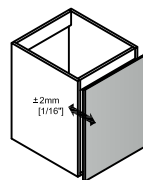

③ Height Distance

Release the base screw, adjust the height of the door, and then tighten the screw.

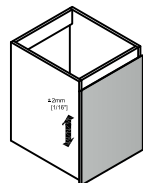

CARE CLEANING AND MAINTENANCE

1. Dust regularly with a soft , dry cloth.
2. Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.
3. Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture .
4. The sink is fragile, please pay attention to maintaining its appearance.
5. Do not place hot appliances, such as curling irons and hot hair dryers directly on the countertop. Wipe spills immediately.

THANKS FOR WATCHING

Your feedback is invaluable to us and we would love to hear about your experience. Please take the time to leave us a review.