


ASSEMBLY INSTRUCTIONS

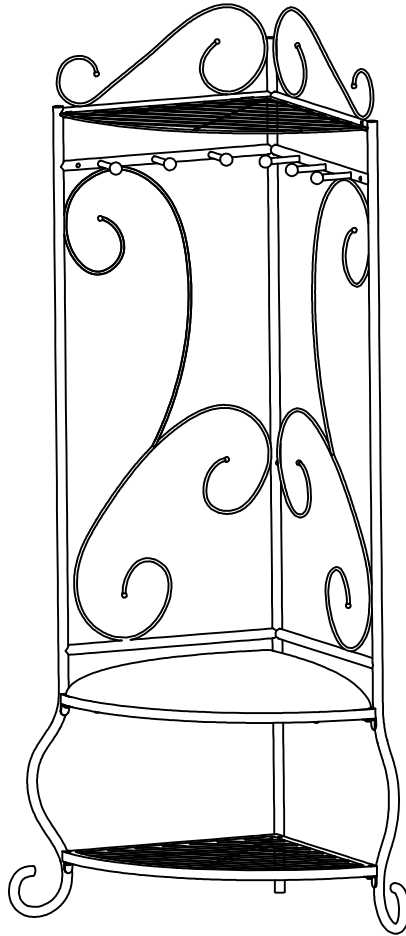




Style # M09 Corner Hallway Bench






NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

Part List

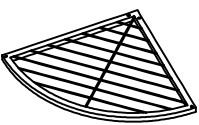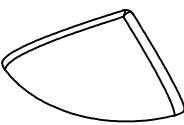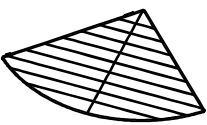
<p>A1</p>  <p>Left Frame 1pc</p>	<p>A2</p>  <p>Right Frame 1pc</p>	<p>A3</p>  <p>Bottom Shelf 1pc</p>
<p>A4</p>  <p>Seat Panel 1pc</p>	<p>A5</p>  <p>Top Shelf 1pc</p>	

Hardware List
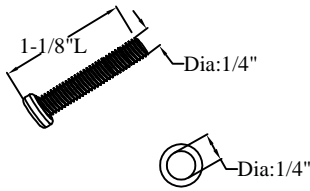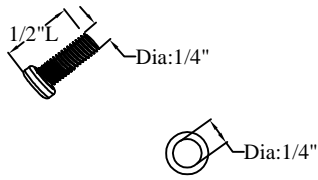
<p>B1</p> <p>Quantity of 3</p>  <p>Bolt with Washer</p>	<p>B2</p> <p>Quantity of 8</p>  <p>Bolt with Washer</p>	<p>B3</p> <p>Quantity of 1</p> 
--	--	--

STEP 1

B1  3SETS

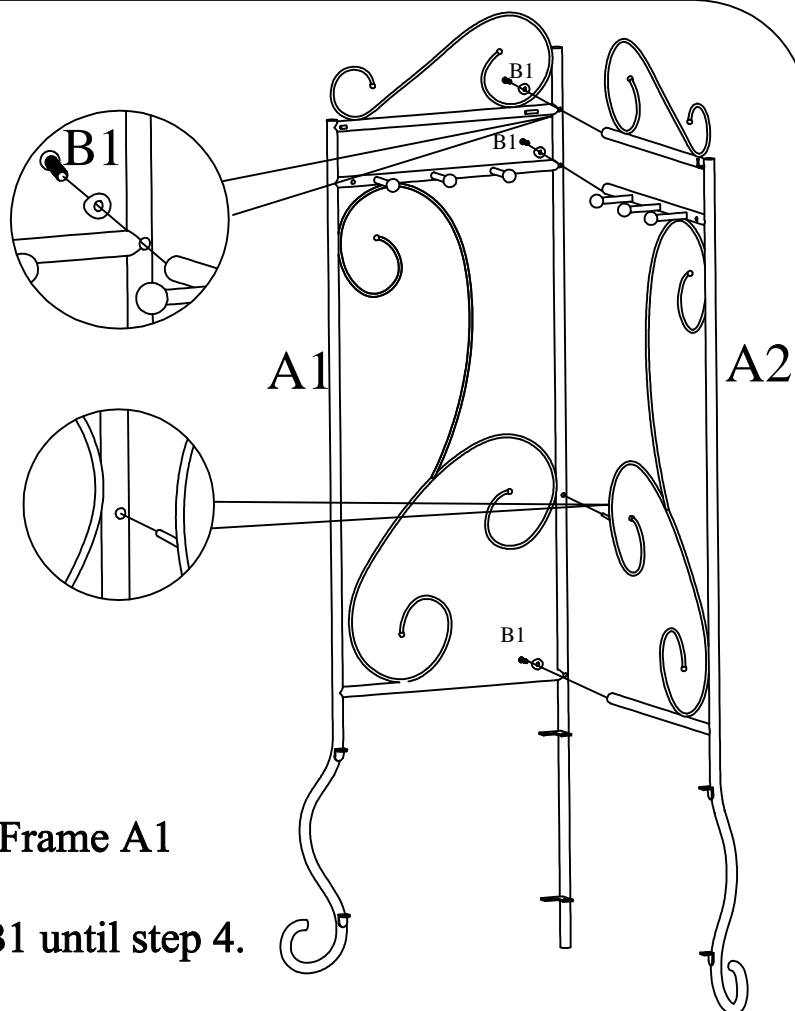


Assemble Right Frame A2 to Left Frame A1
using Bolts with washers B1.

Note: Please do not tighten Bolts B1 until step 4.

STEP 2

B2  4SETS

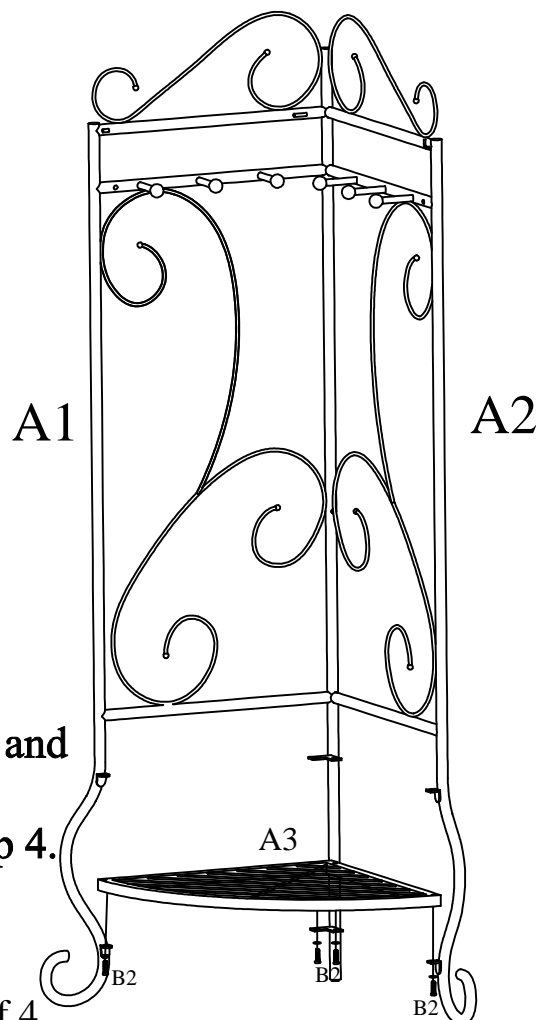

Assemble Bottom Shelf A3 to Left Frame A1 and
Right Frame A2 using Bolts and Washers B2.

Note: Please do not tighten Bolts B2 until Step 4.


STEP 3

B2




4SETS

Assemble Seat Panel A4 to Left Frame A1 and Right Frame A2 using Bolts with Washers B2.
Note: Please do not tighten Bolts B2 until Step 4.

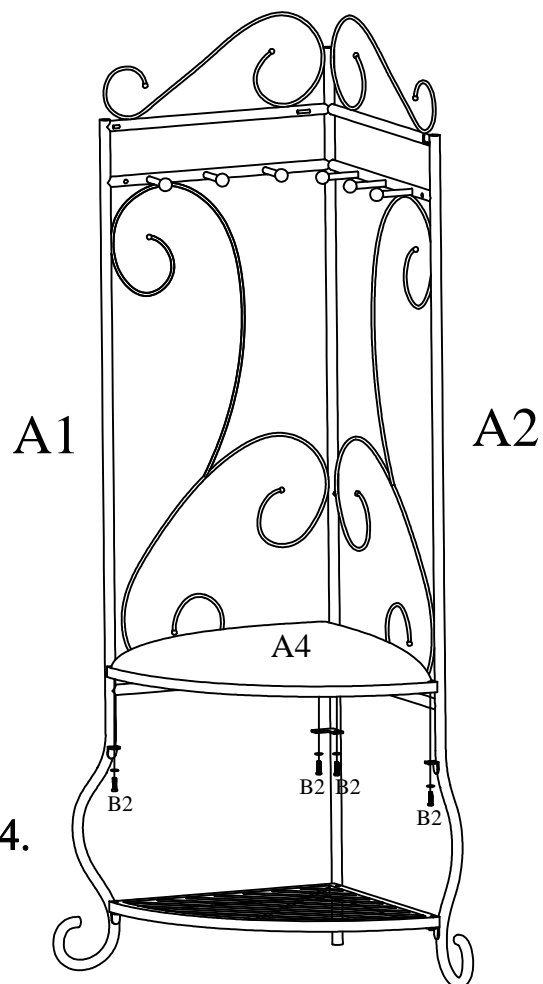

STEP 4

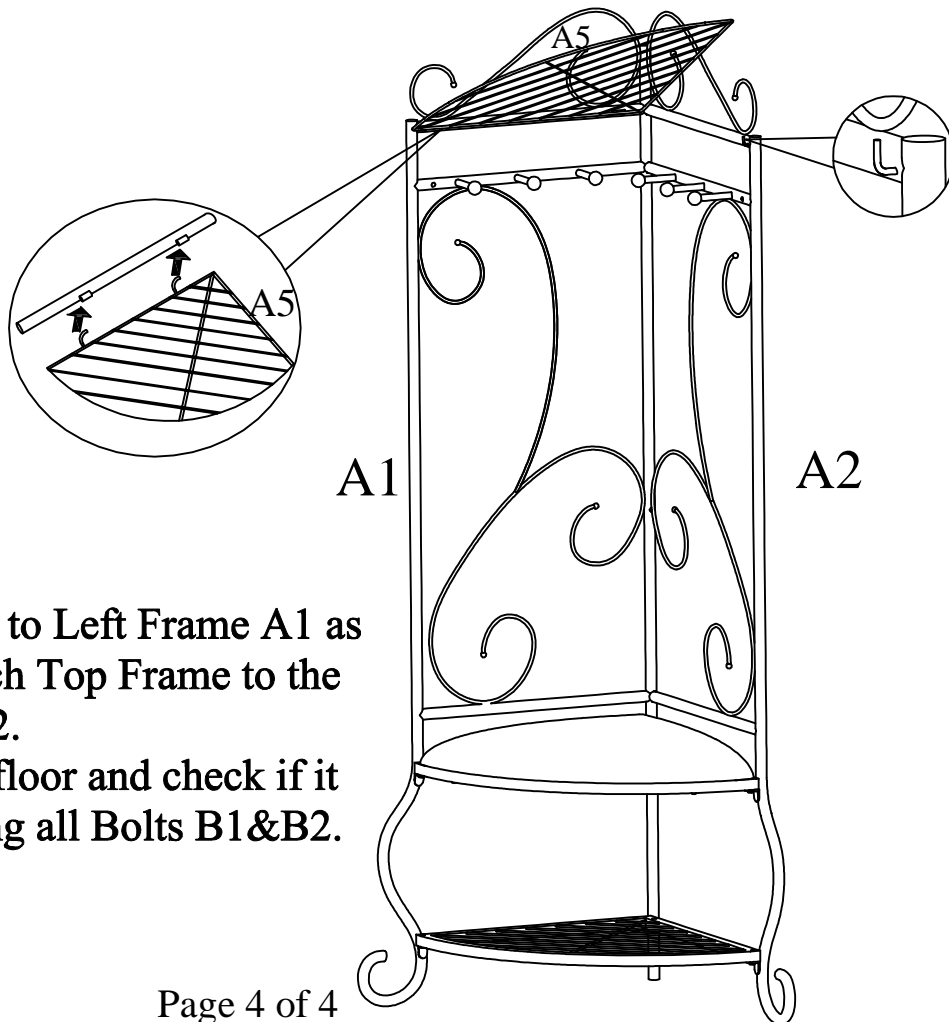

1. Attach Top Frame A5 to Left Frame A1 as shown above, then Attach Top Frame to the hook on Right Frame A2.
2. Place the rack on the floor and check if it is stable before tightening all Bolts B1&B2.