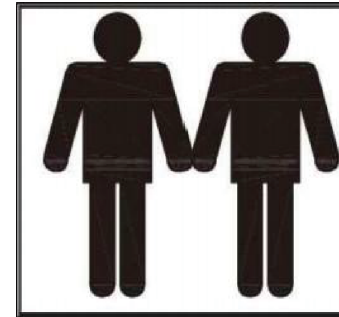
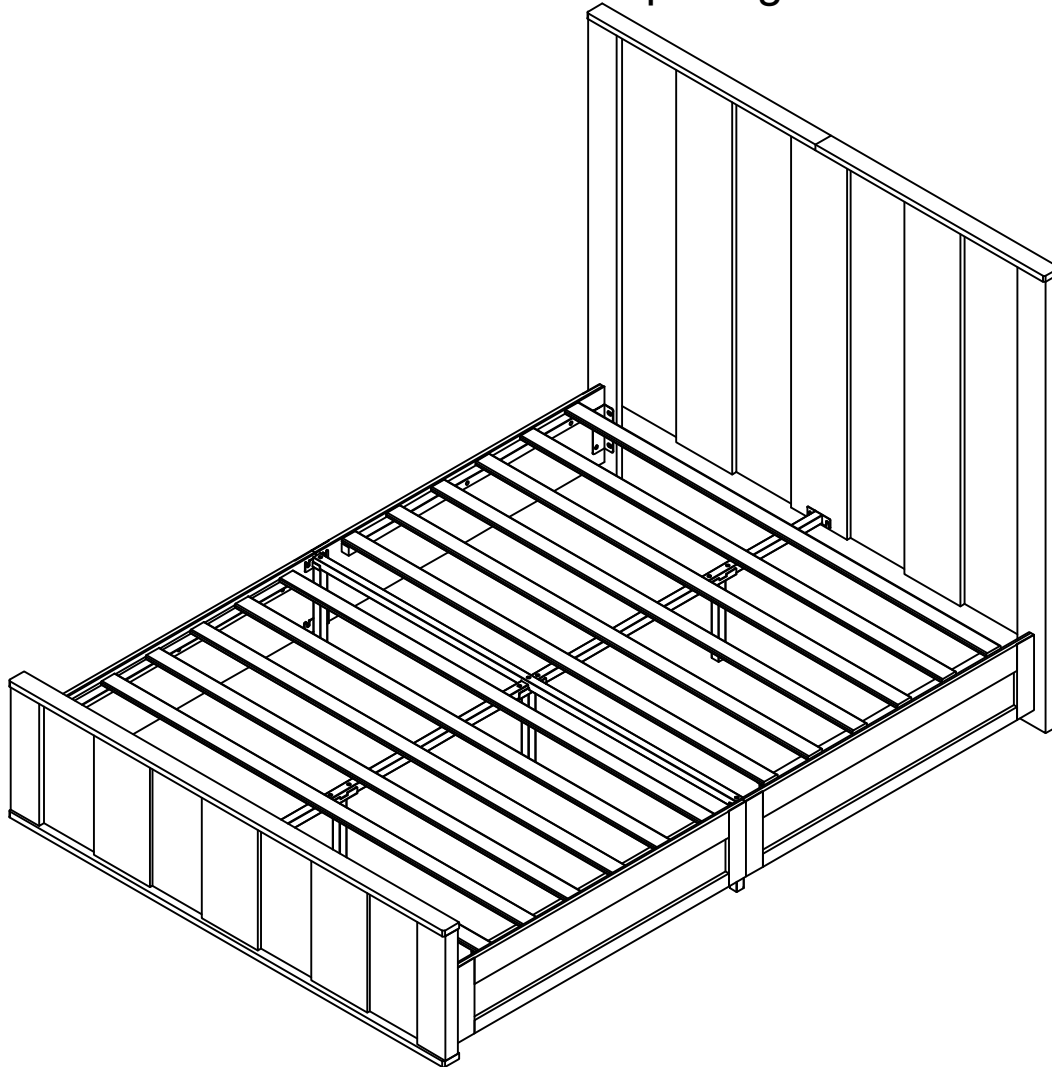


Assembly Instruction

Note:

1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

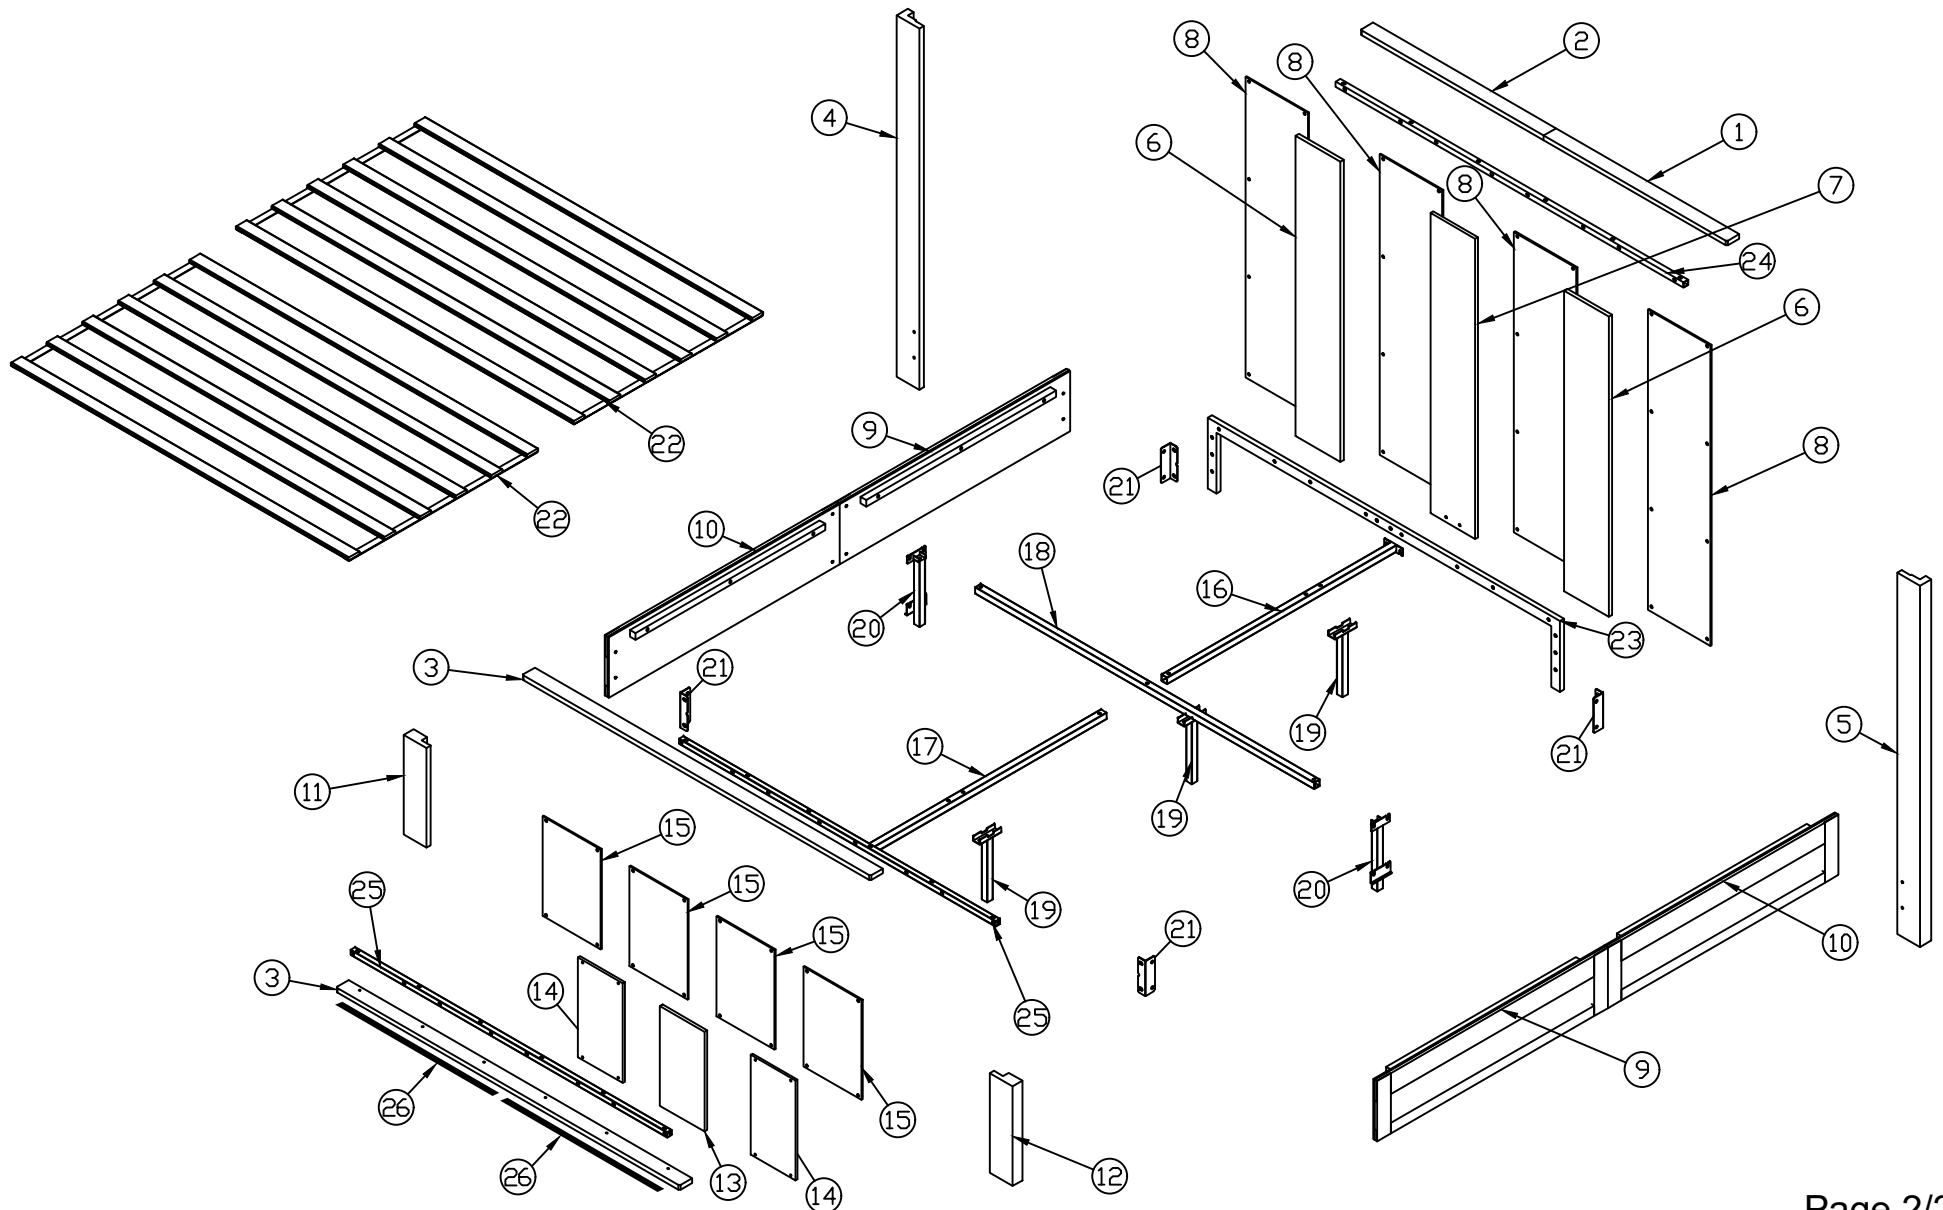


It needs at least two people to install.




Before starting the assembly, you must read the whole manual and follow the instructions.

Assembly Instruction























Assembly Instruction

Hardware Parts

(A)  M6x15 16pcs	(B)  M6x32 50pcs	(C)  M8x12 26pcs	(D)  M8x35 14pcs	(E)  M8x50 1pc	(F)  4 # 1pc	(G)  M8x30 2pcs
---	---	---	---	---	---	--

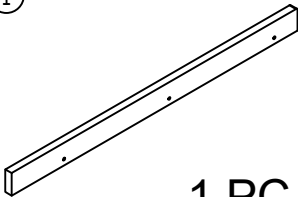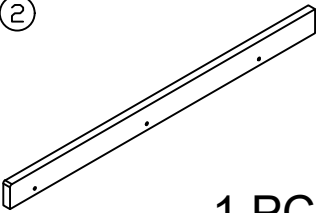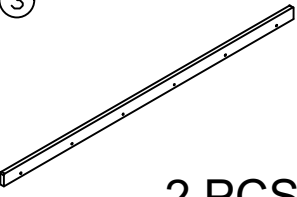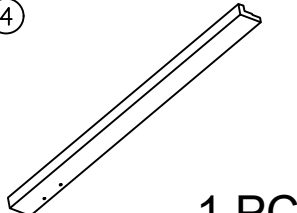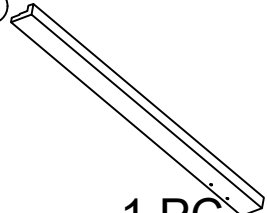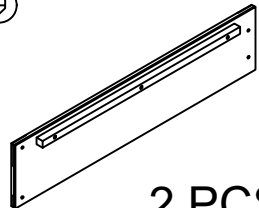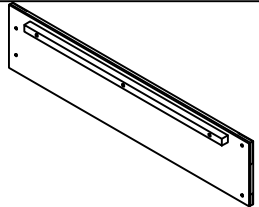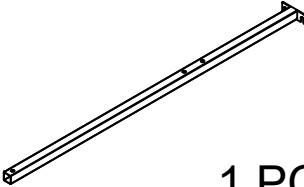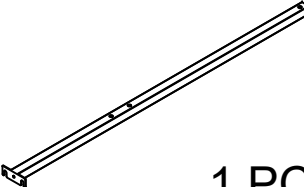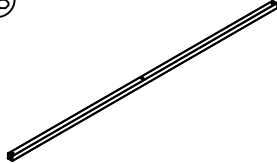
Part list

(1)  1 PC	(2)  1 PC	(3)  2 PCS	(4)  1 PC	(5)  1 PC	(6)  2 PCS
(7)  1 PC	(8)  4 PCS	(9)  2 PCS	(10)  2 PCS	(11)  1 PC	(12)  1 PC
(13)  1 PC	(14)  2 PCS	(15)  4 PCS	(16)  1 PC	(17)  1 PC	(18)  1 PC

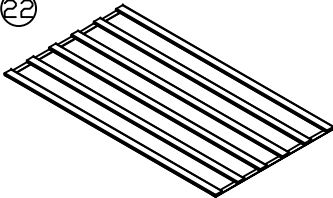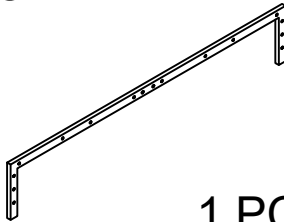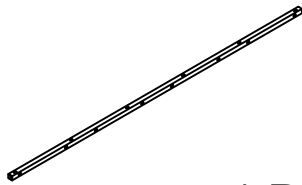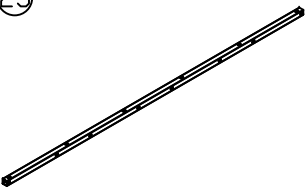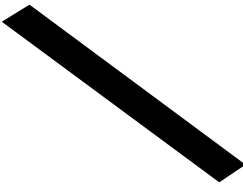19  3 PCS	20  2 PCS	21  4 PCS	22  2 PCS	23  1 PC	24  1 PC
25  2 PCS	26  2 PCS				

Assembly Instruction

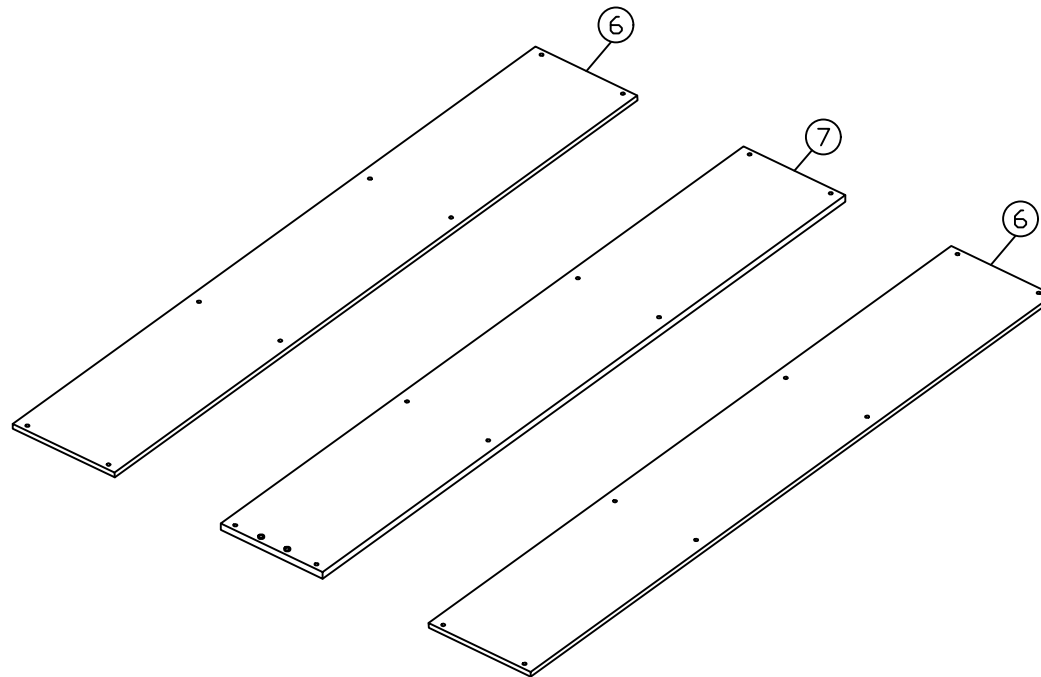Note: Place the three boards as shown in the picture, leaving a small gap between each board.



Assembly Instruction

A



M6x15

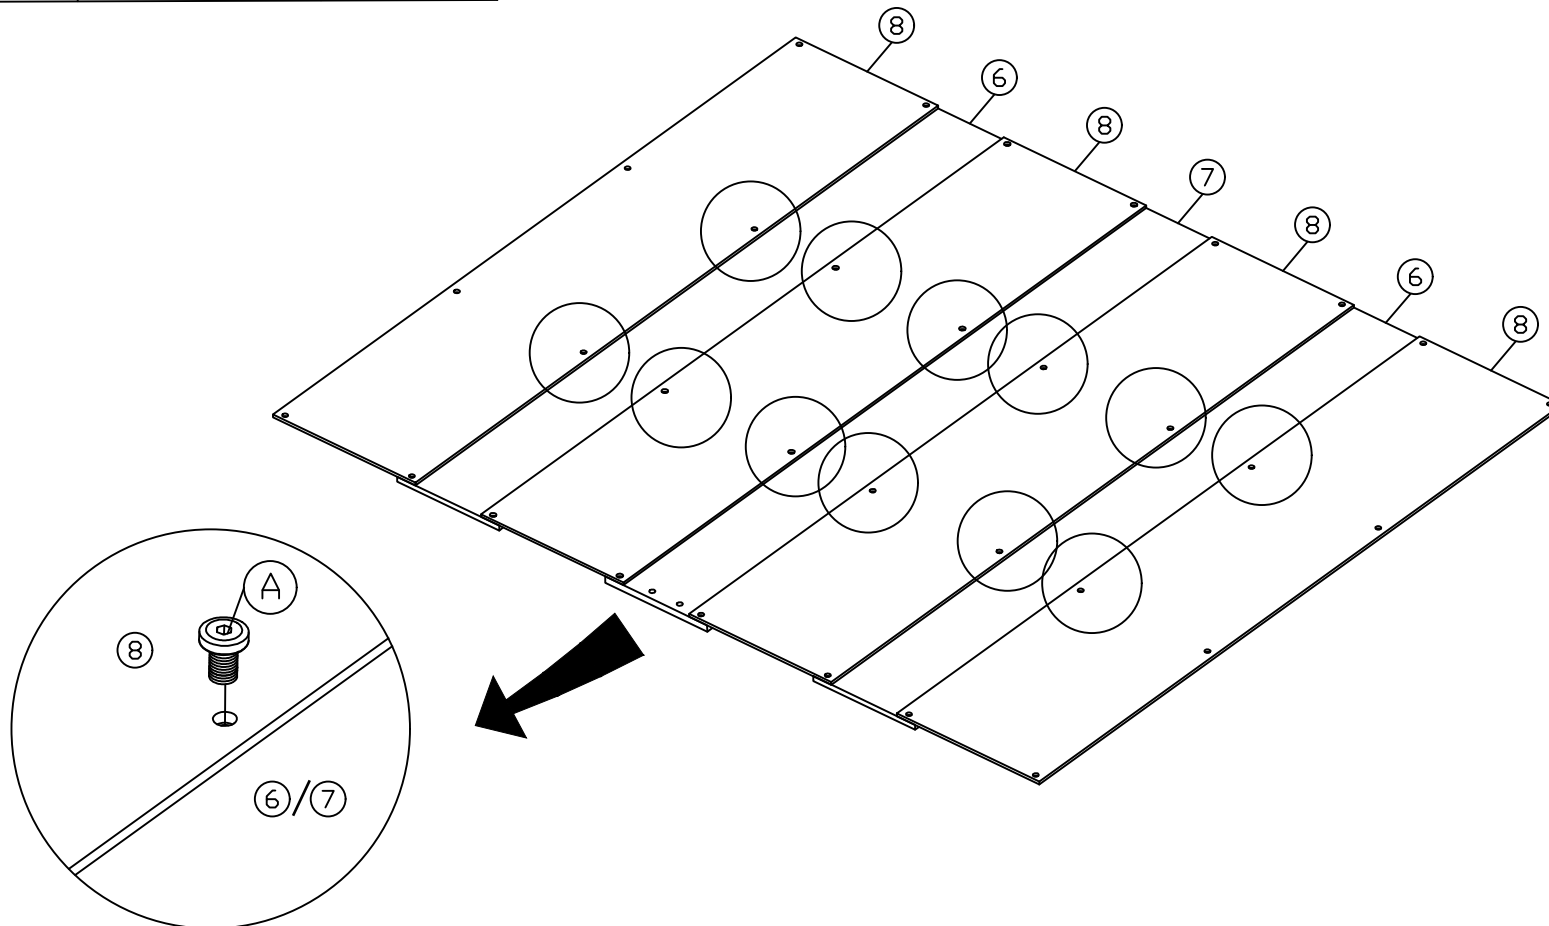
12 pcs

F



1 pc

Note: Next, place these 4 boards as shown in the diagram, aligning their holes with the three previously installed boards. Then start locking screws to secure the three boards underneath.



Assembly Instruction

B



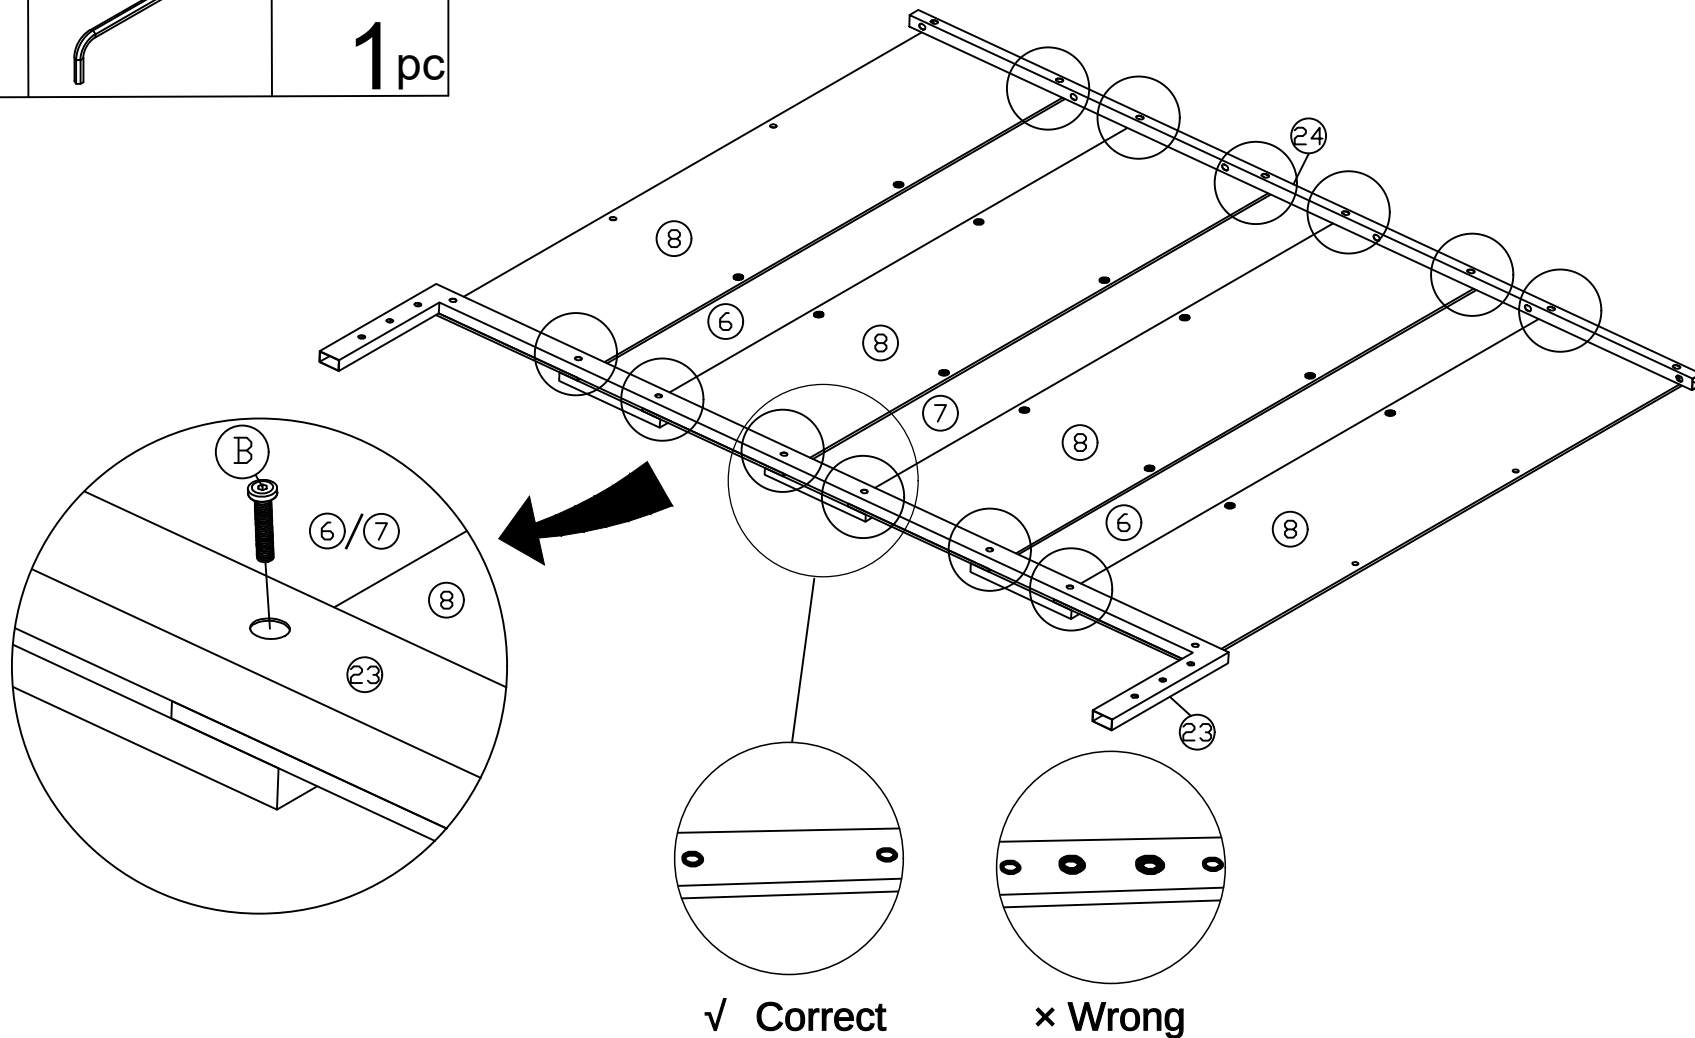
M6x32

12 pcs

F




1 pc






✓ Correct

× Wrong

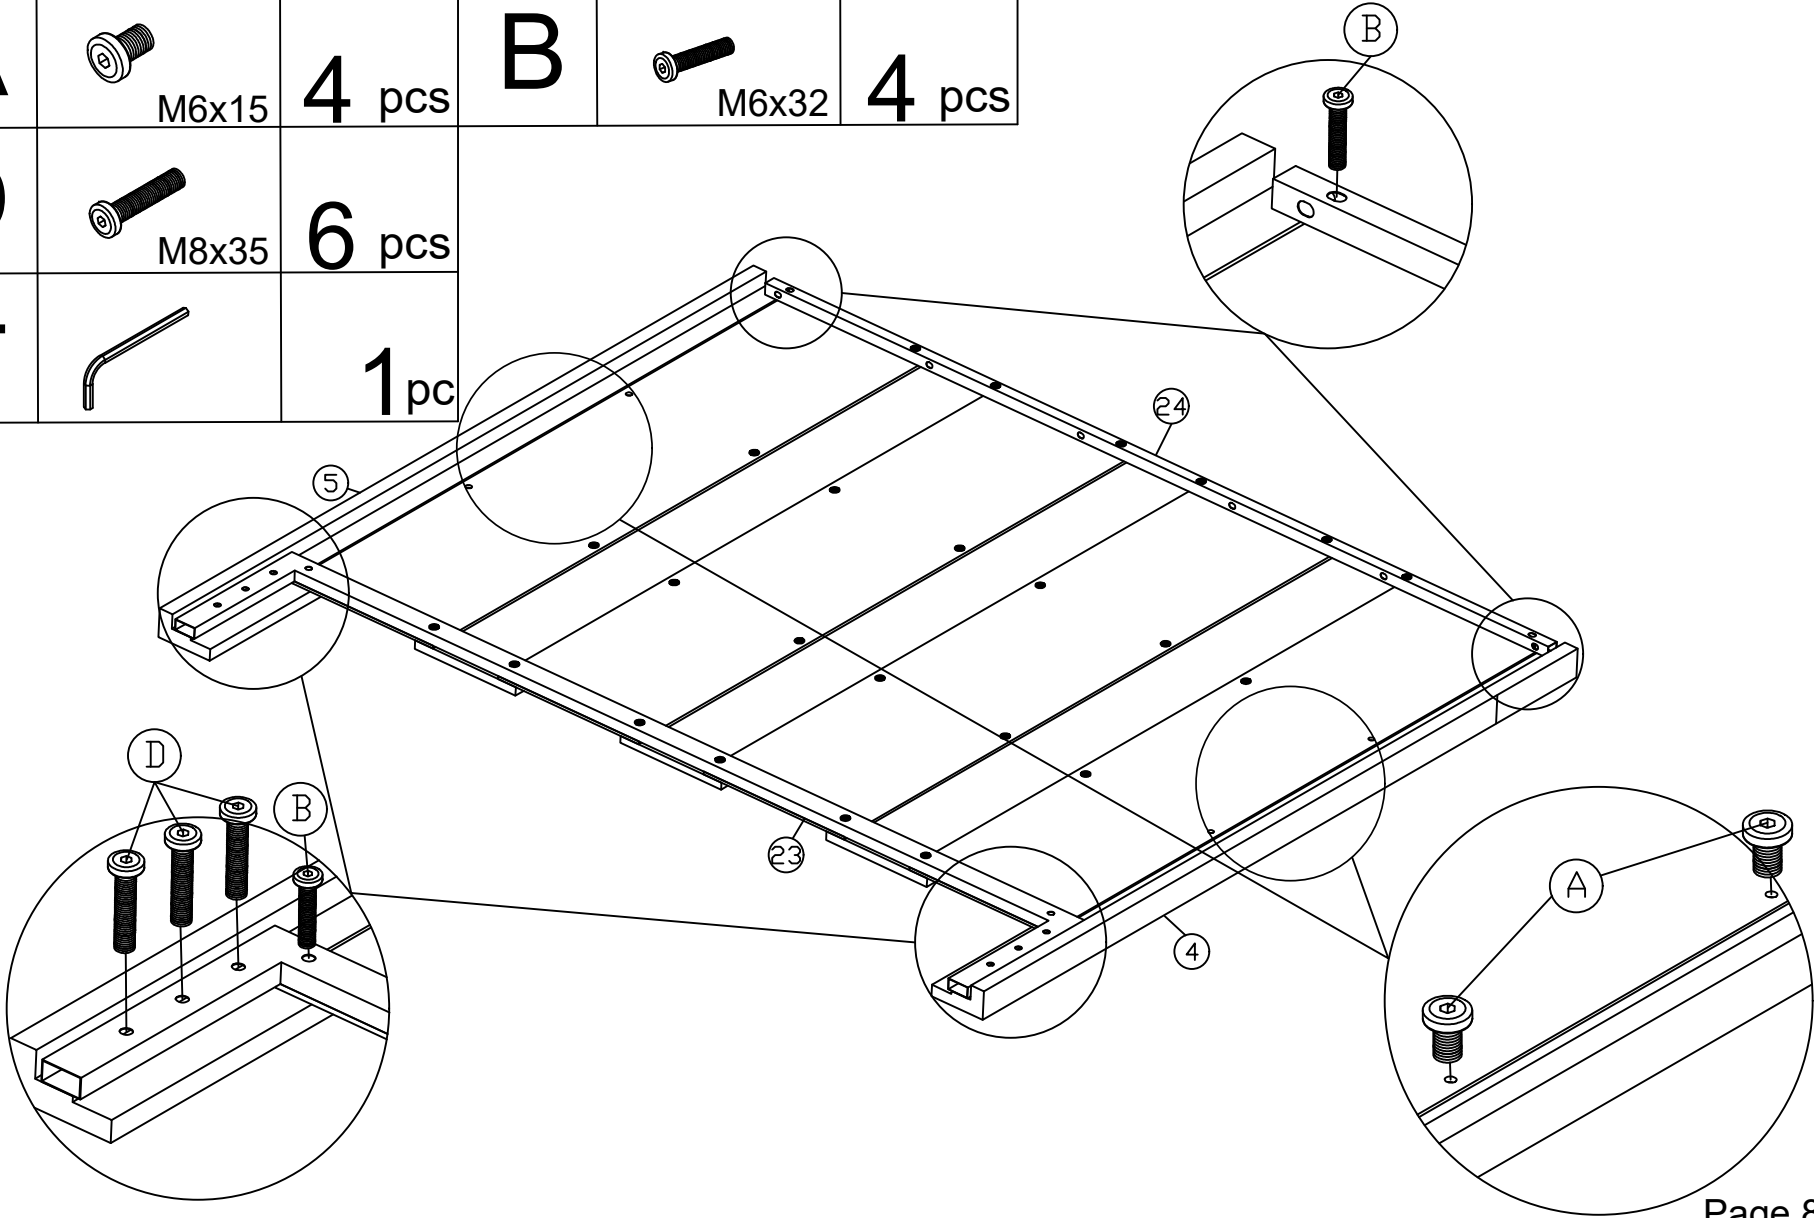Assembly Instruction


A	 M6x15	4 pcs	B	 M6x32	4 pcs
D	 M8x35	6 pcs			
F		1 pc			

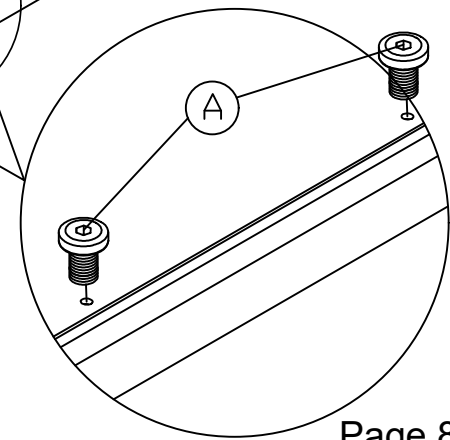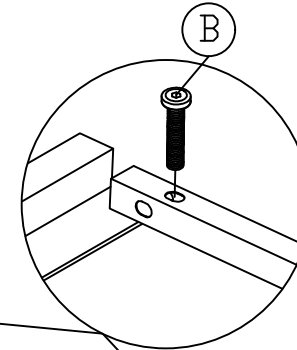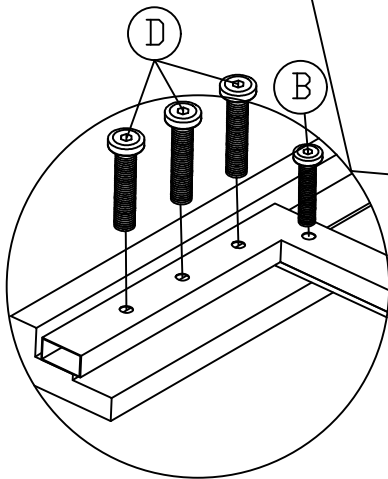

Assembly Instruction

B

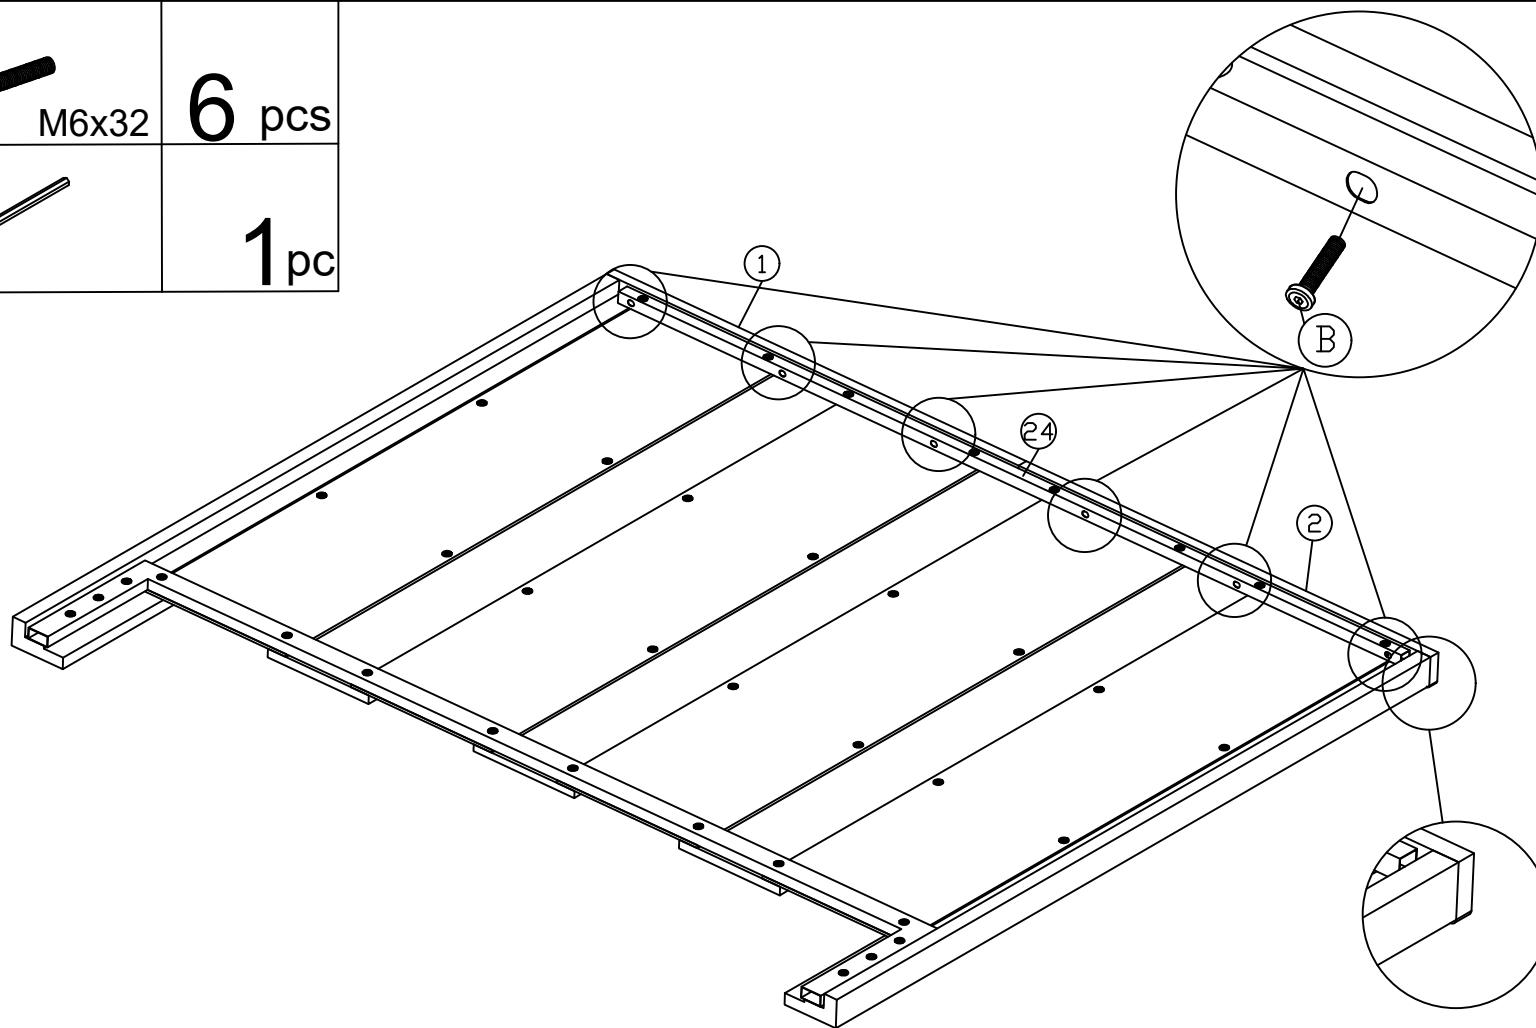
M6x32

6 pcs**F****1** pc

Note: When installing the headboard top cover, make sure the side with the rounded feet faces outward.

Assembly Instruction

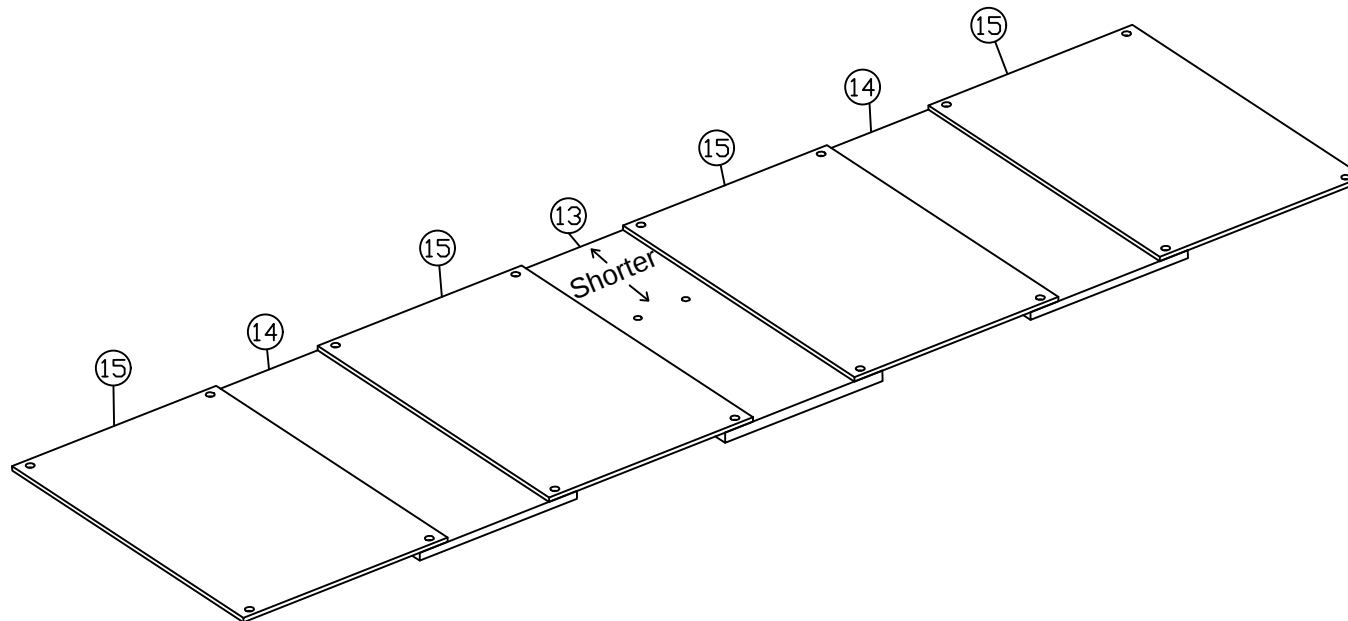Note: Align the wooden boards exactly as shown in the diagram.




Assembly Instruction

B

M6x32

16 pcs**F****1** pc

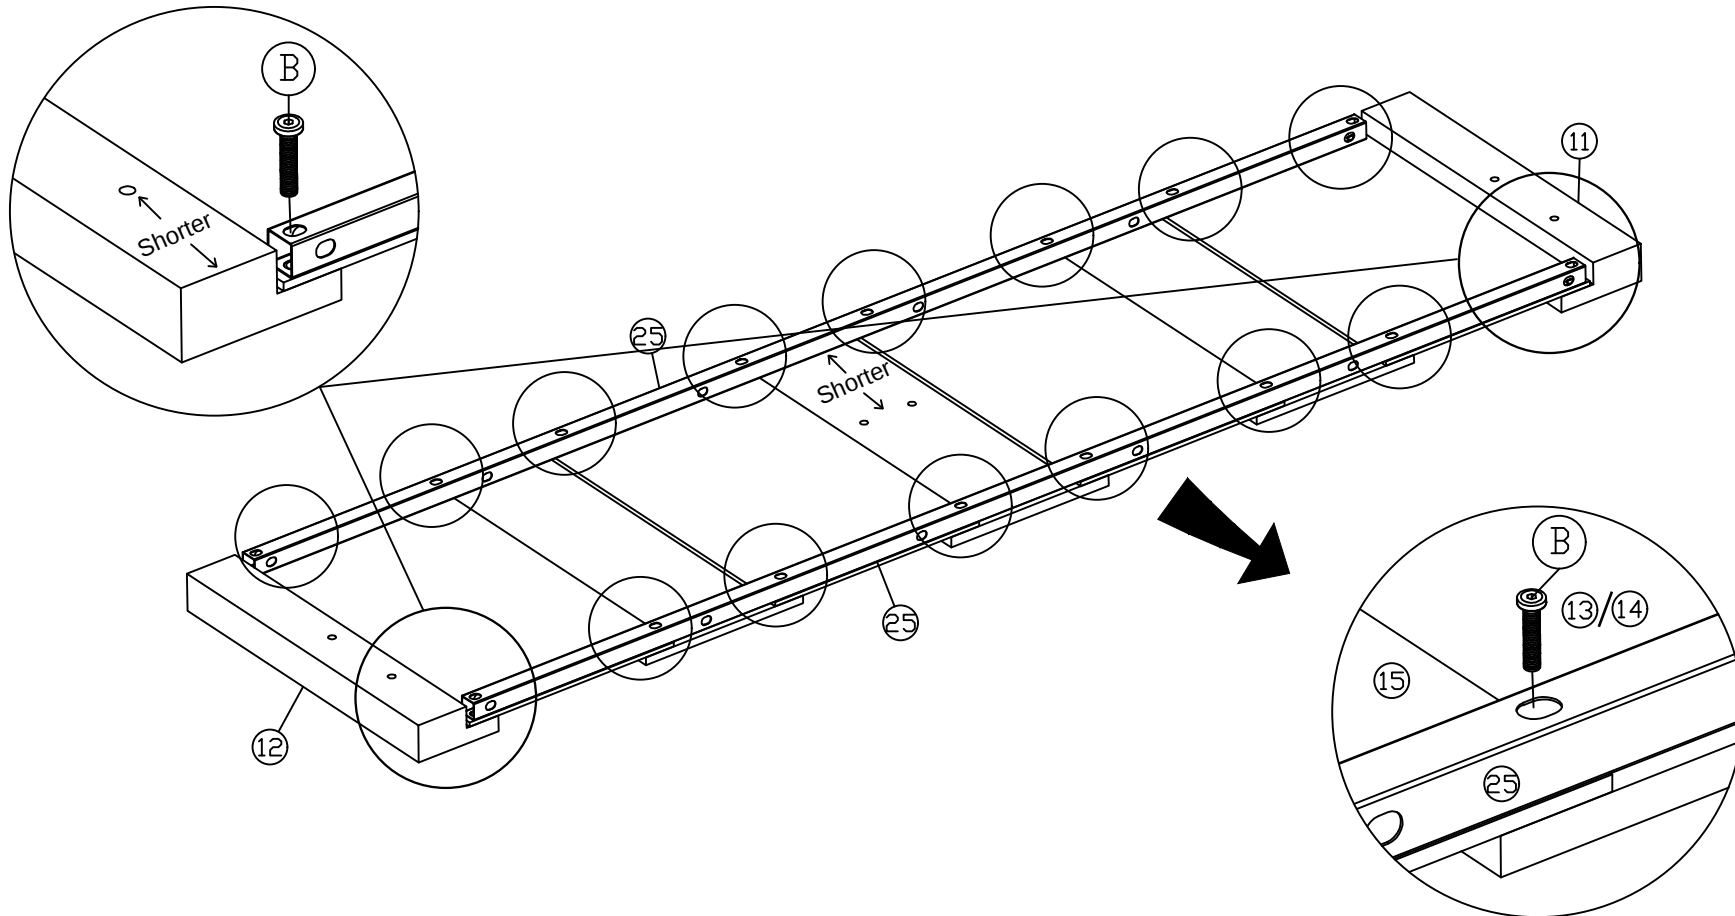Finally, position the left and right footboard legs and the two footboard tubes as shown in the diagram, align their holes, then start installing and tightening the screws.



Assembly Instruction

B



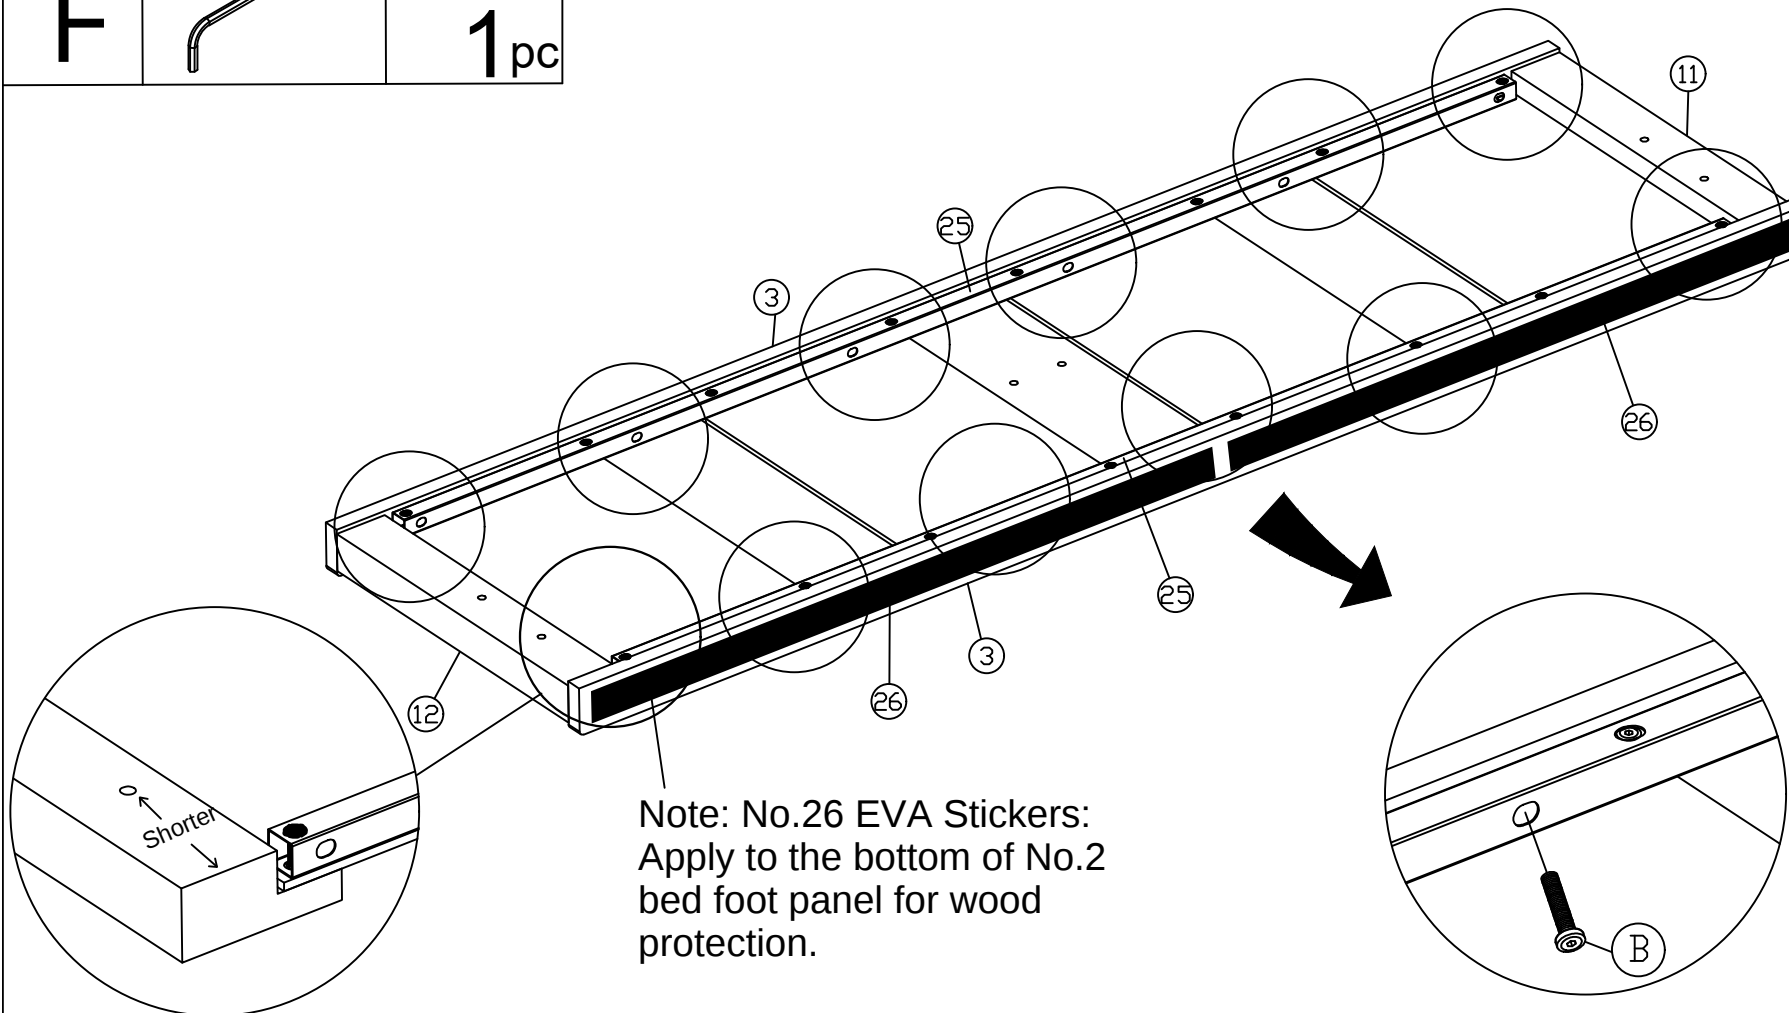
M6x32

12 pcs

F



1 pc



Assembly Instruction

C



M8x12

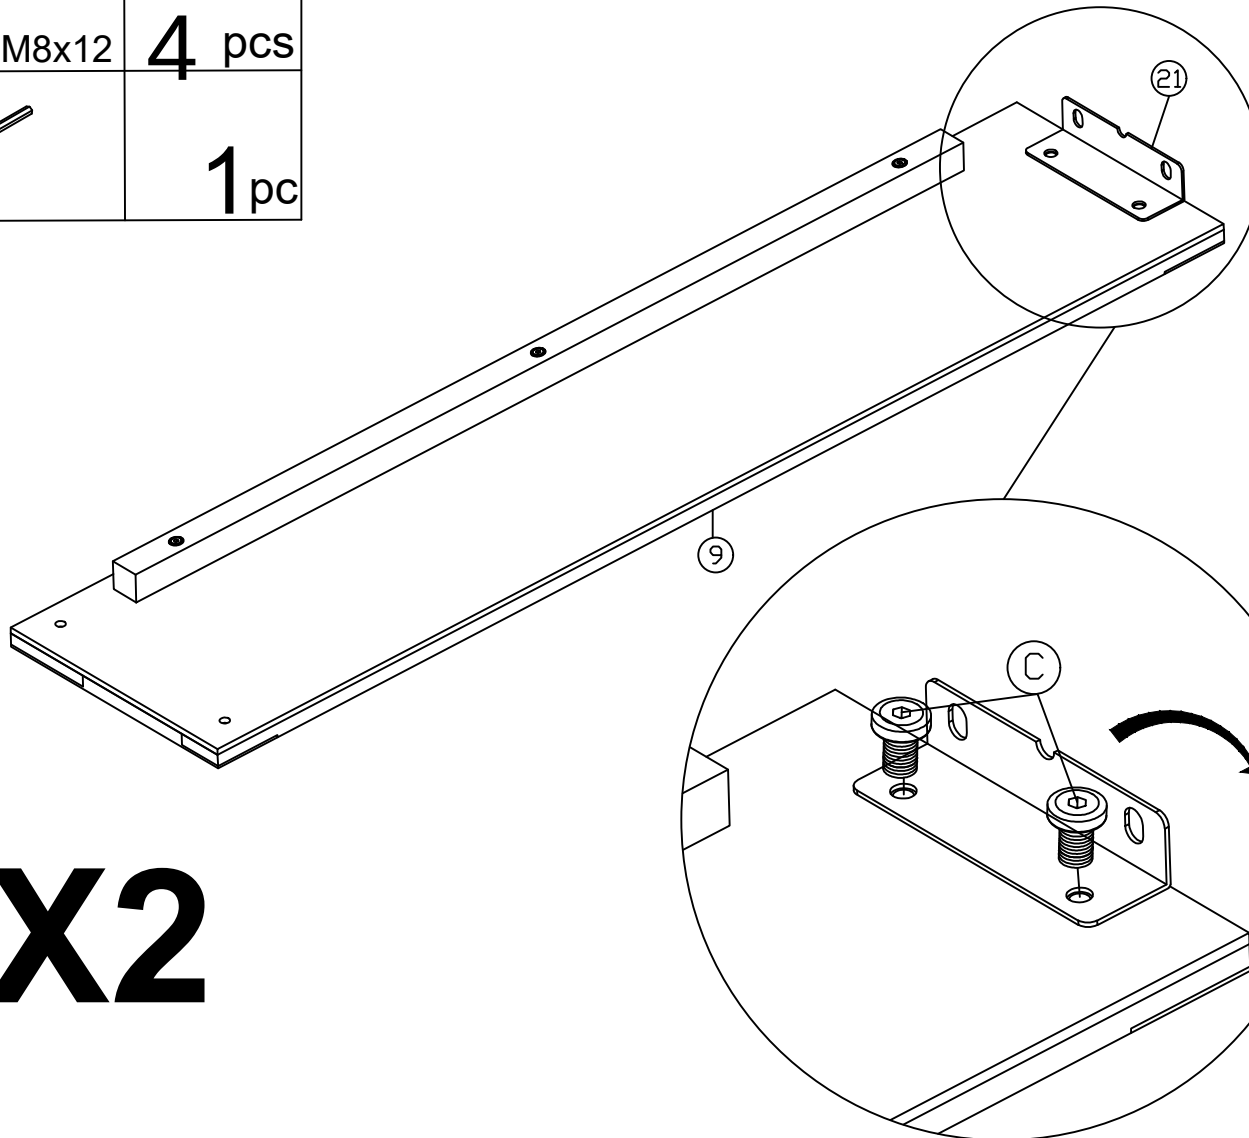
4 pcs

F



1 pc

X2



Note:When installing,
keep this notch facing
upwards.

Assembly Instruction

C



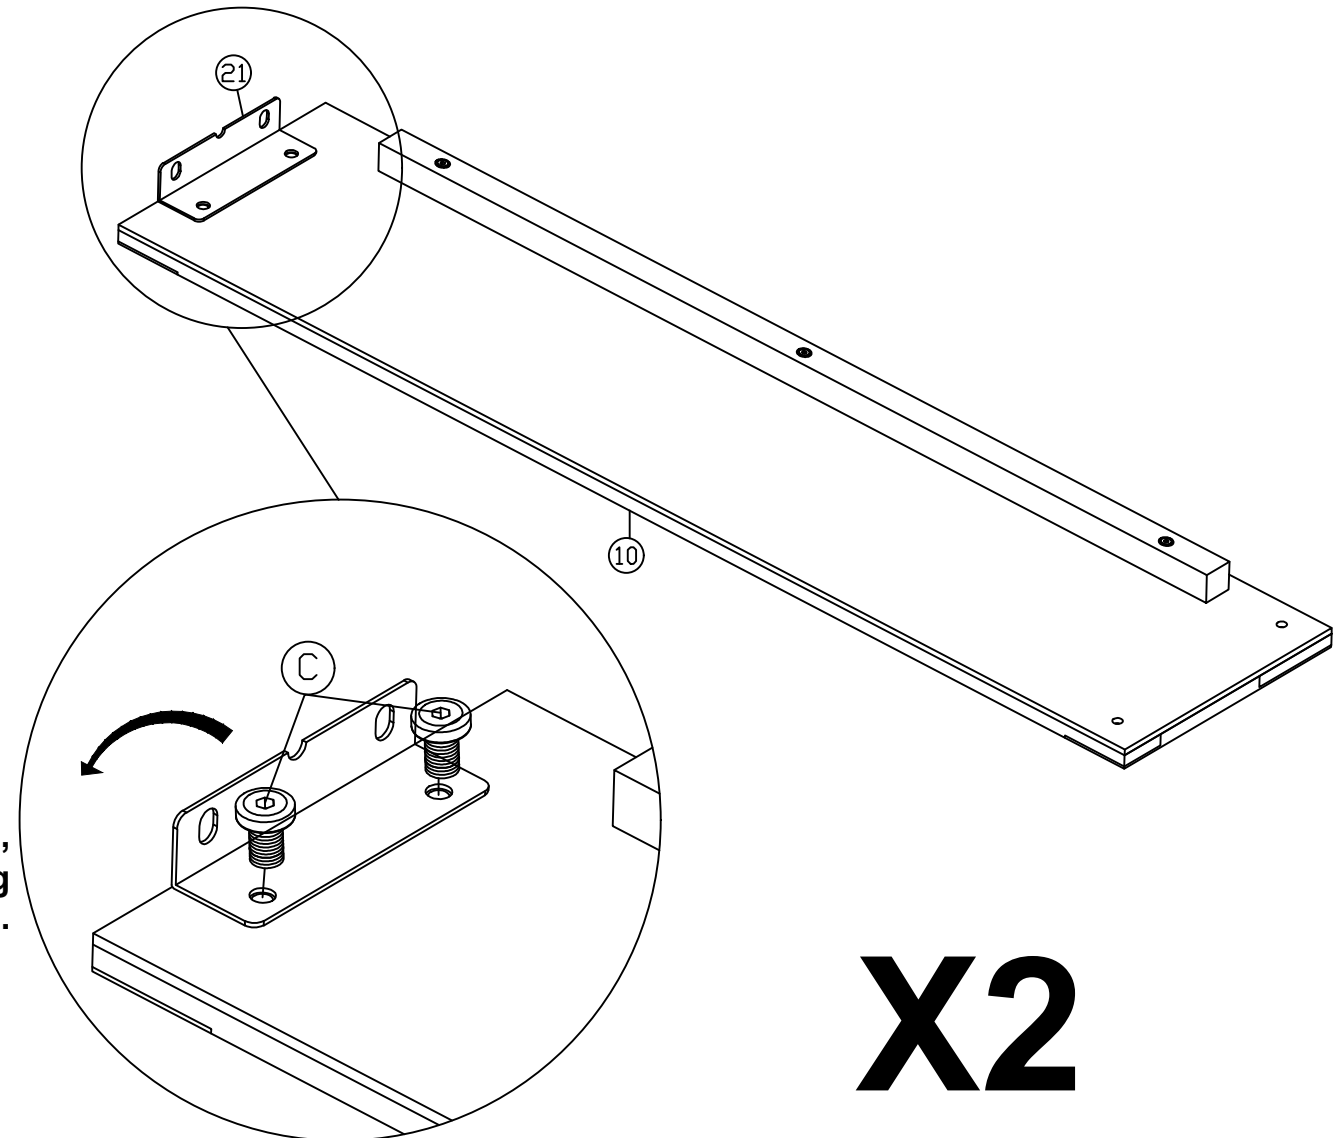
M8x12

4 pcs

F



1 pc



Note:When installing,
keep this notch facing
upwards.

X2

Assembly Instruction

C



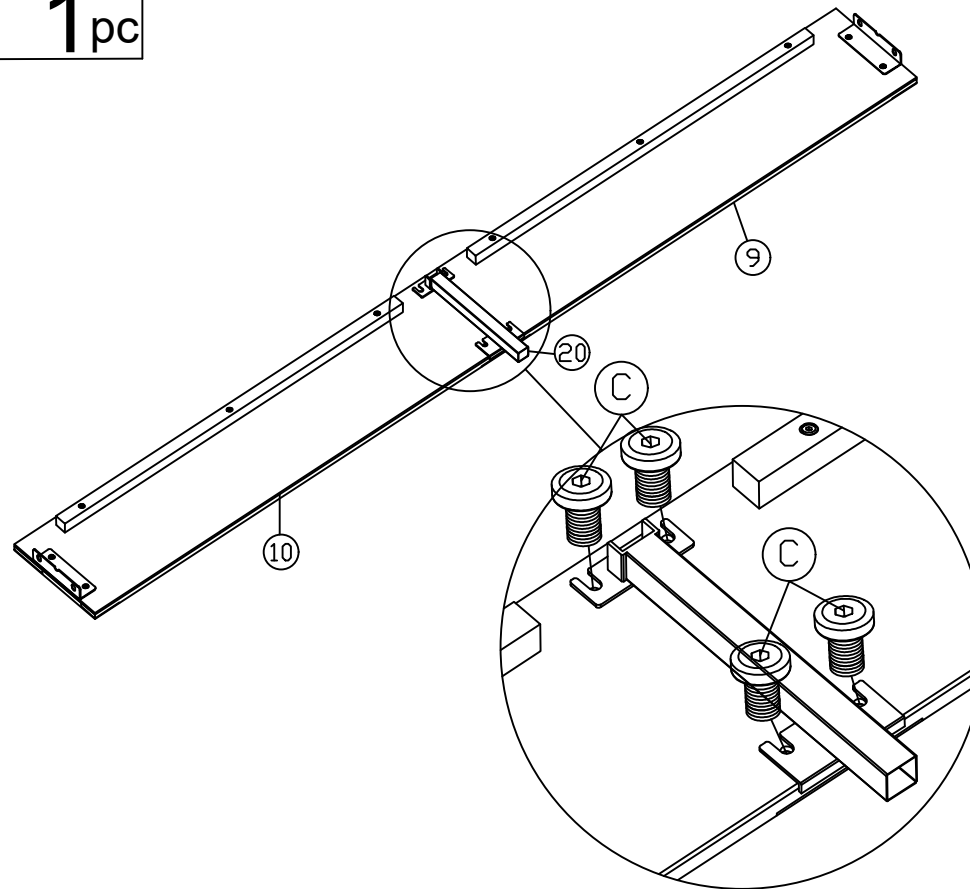
M8x12

8 pcs

F



1 pc



X2

Assembly Instruction

C



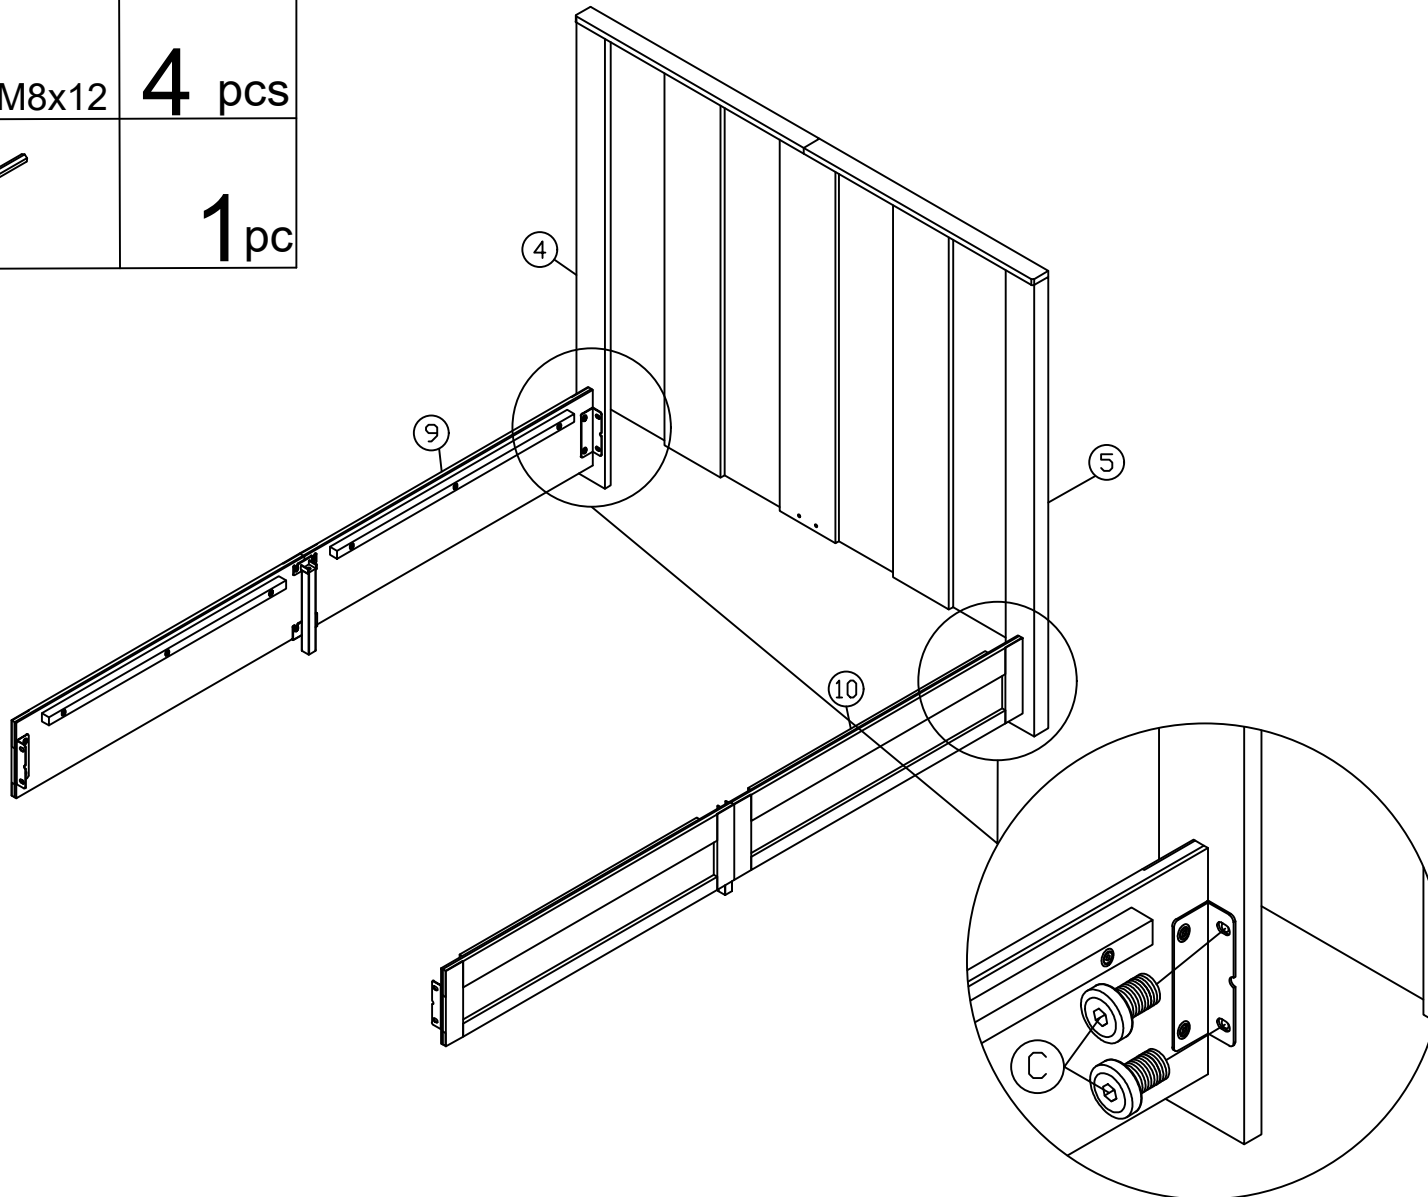
M8x12

4 pcs

F




1 pc




Assembly Instruction

C	 M8x12	4 pcs
F		1 pc

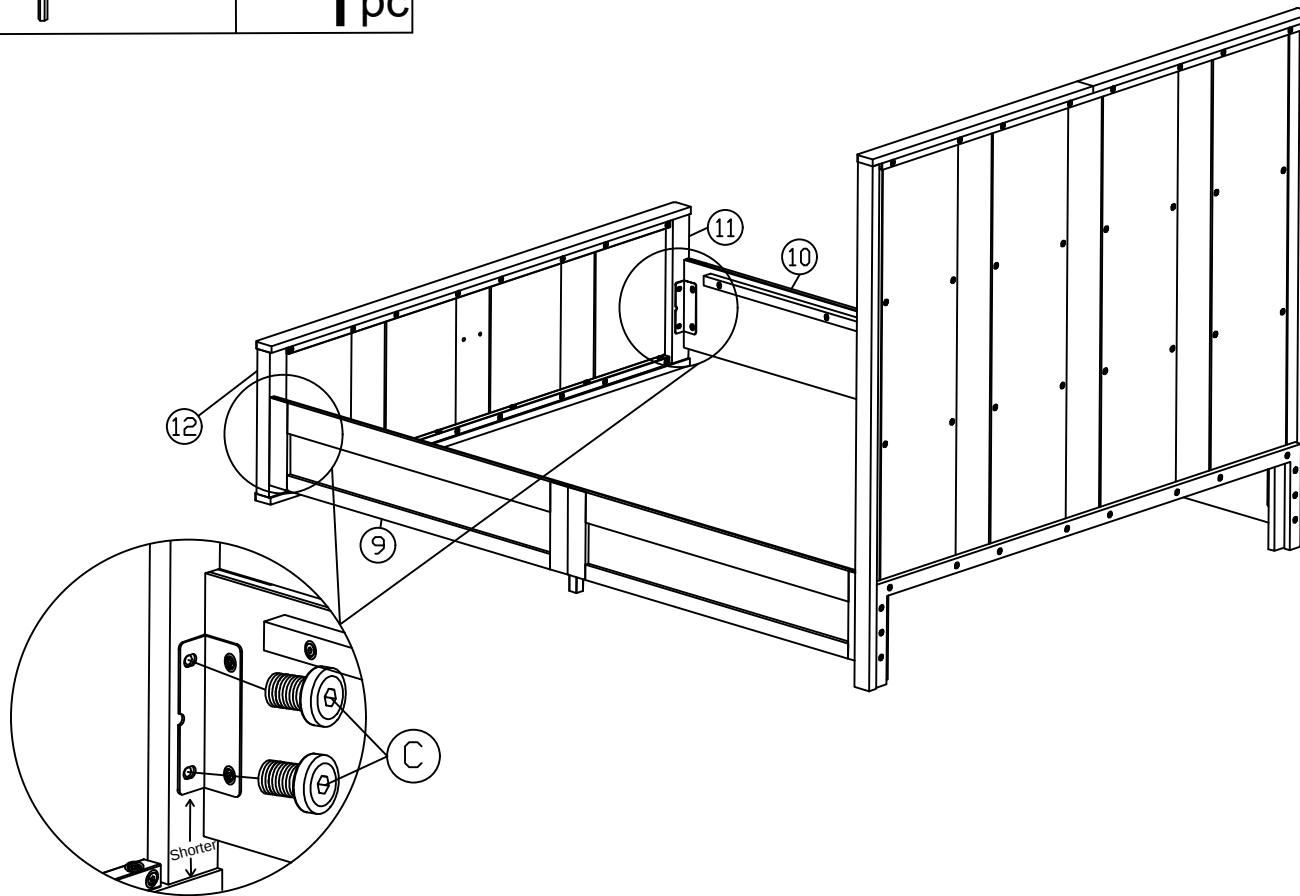

Assembly Instruction

D	 M8x35	2 pcs
E	 M8x50	1 pc
F		1 pc

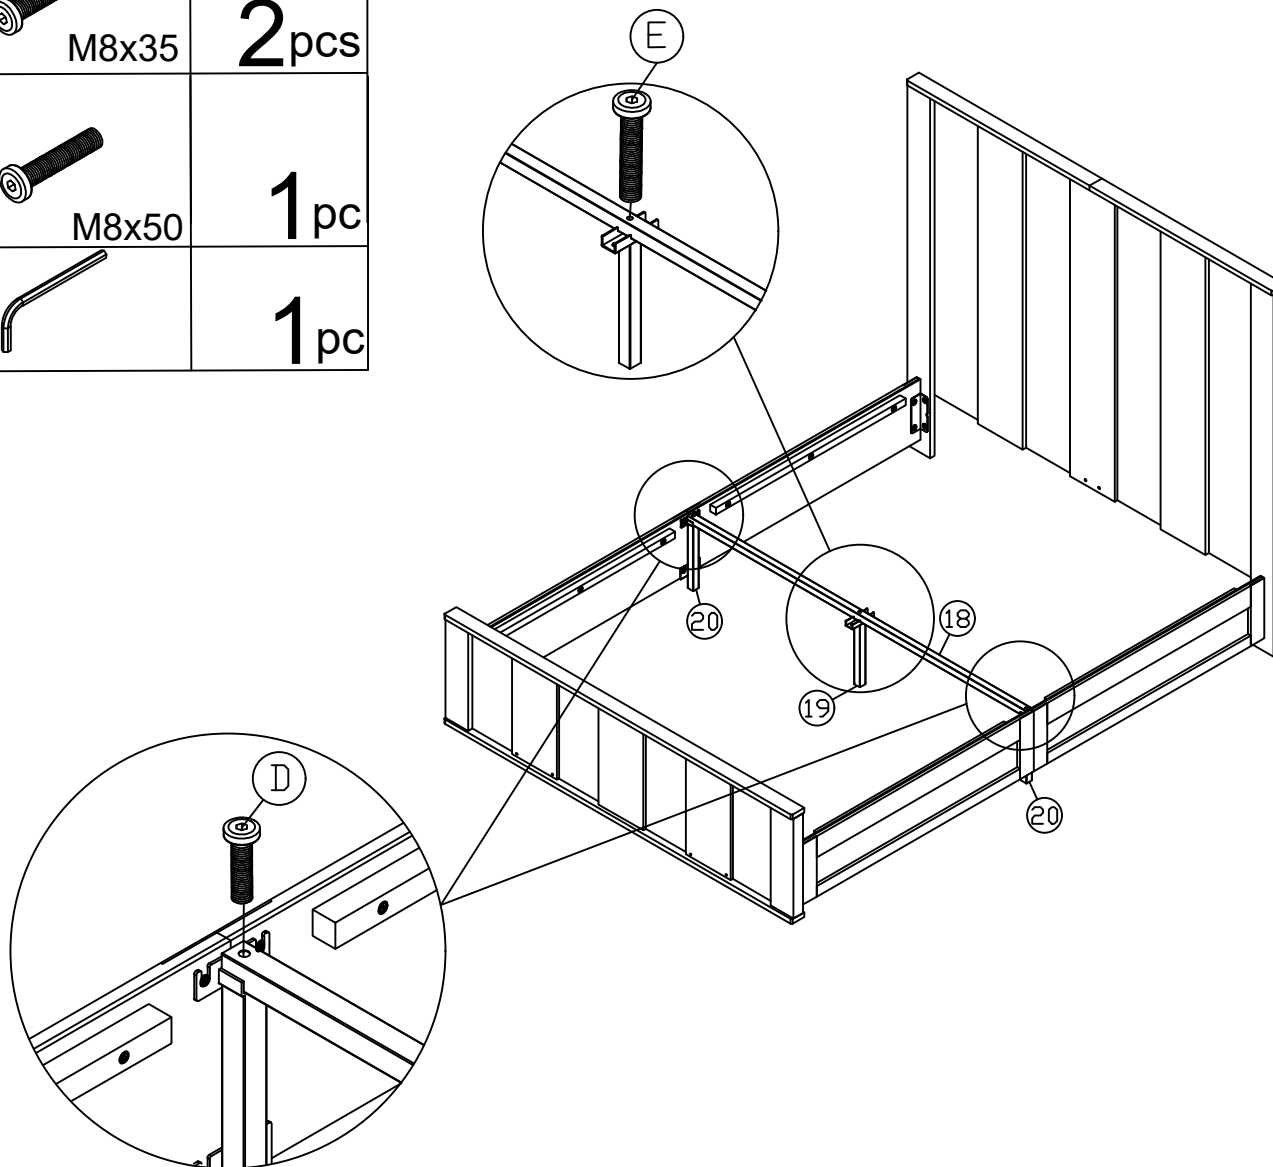

Assembly Instruction

D



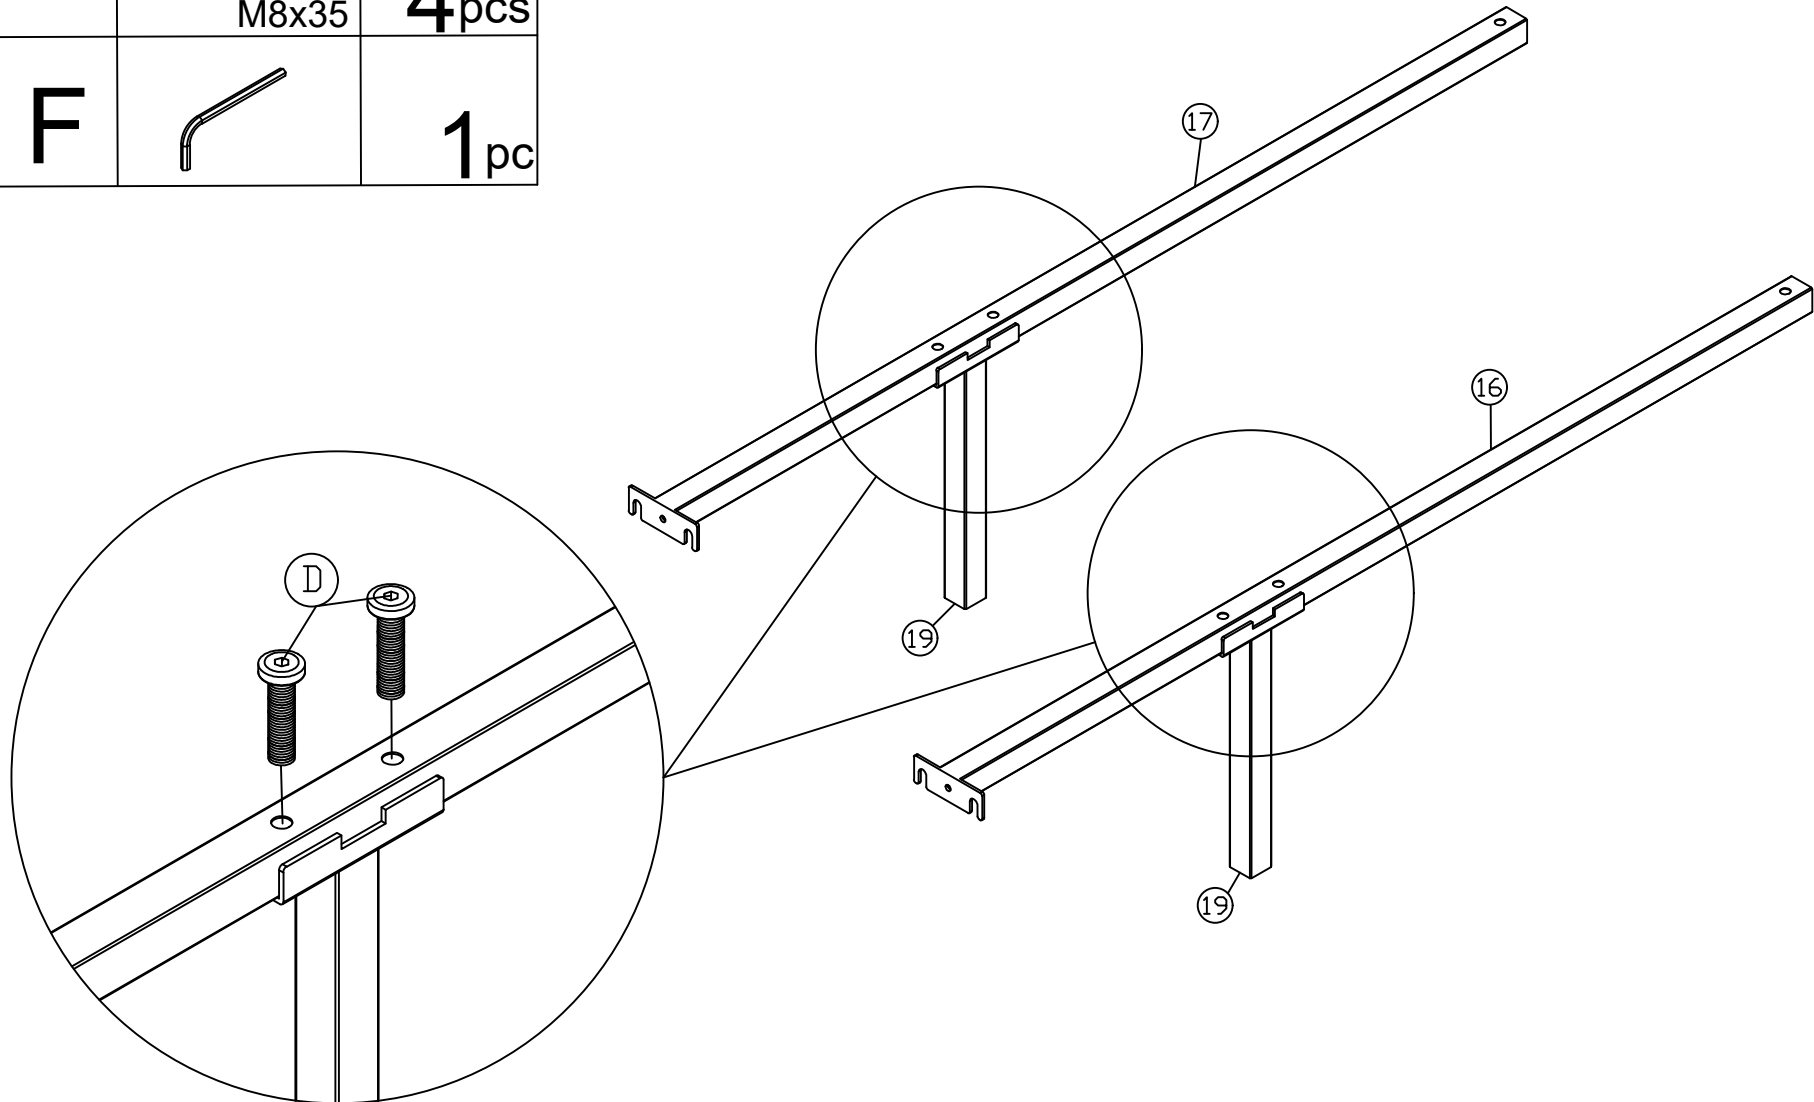
M8x35

4 pcs

F




1 pc



Assembly Instruction

C	 M8x12	2 pcs
D	 M8x35	2 pcs
F		1 pc
G	 M8x30	2 pcs

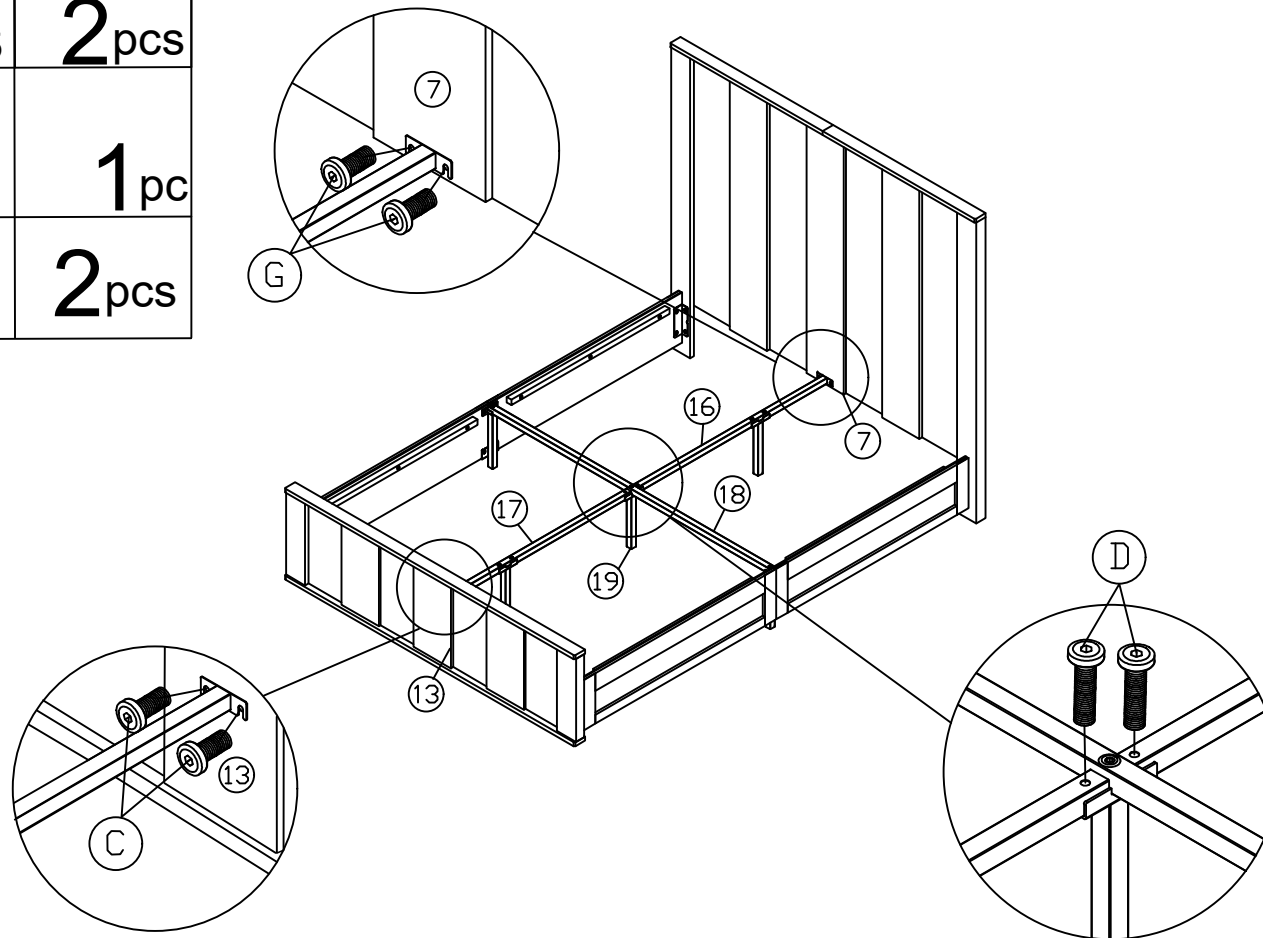

Assembly Instruction

