

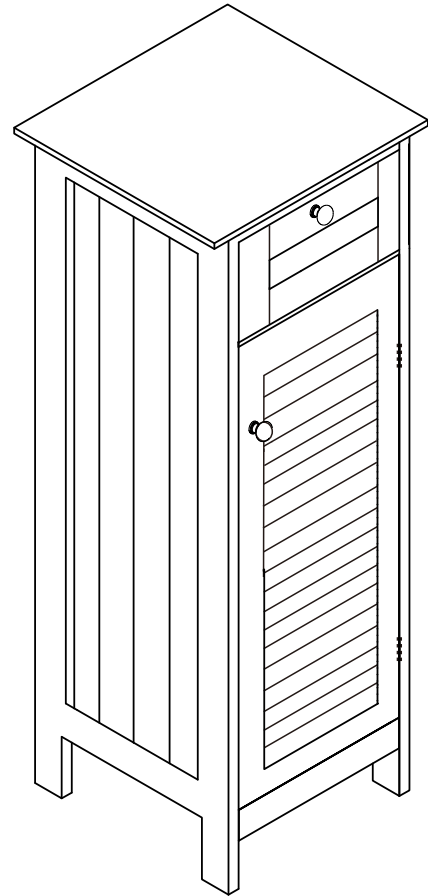



# Installation instructions

Furniture 5680 Bathroom cabinet small Rosario White   Furniture 5685 small bathroom cabinet Riad White

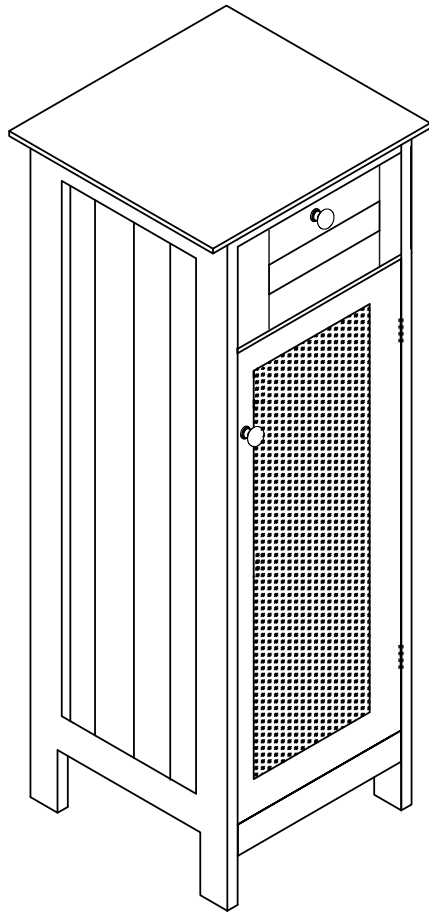

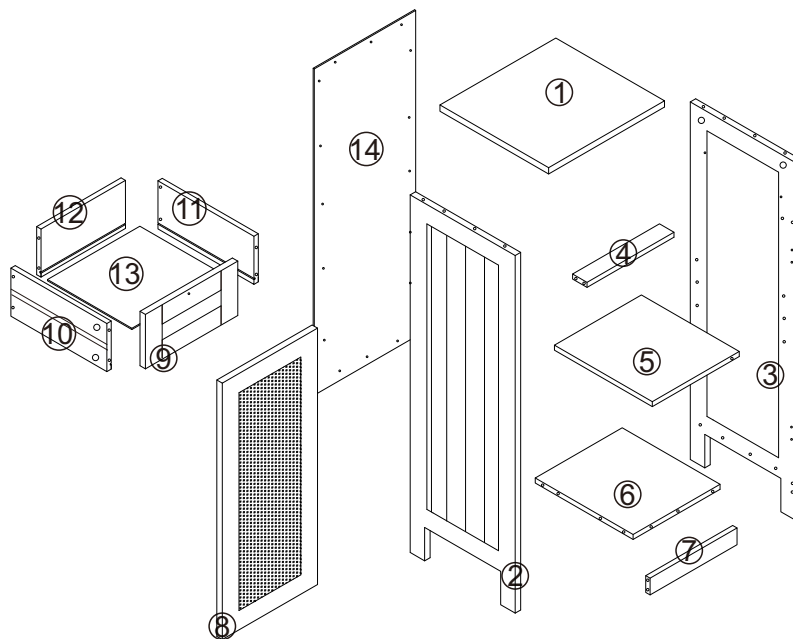

Ax15




Bx1



Cx2



Dx15



Ex16



Fx4



Gx16




Hx14



Ix4



Jx1



Kx4




Lx2



Mx2



Nx2




Ox2




Px15


1.

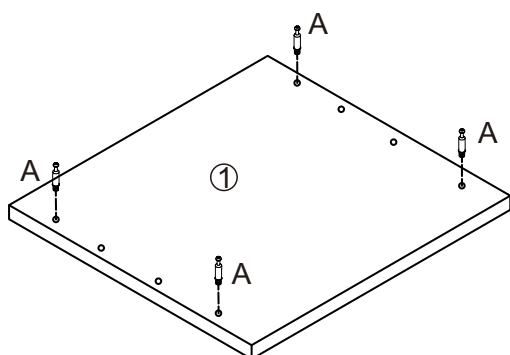


2.

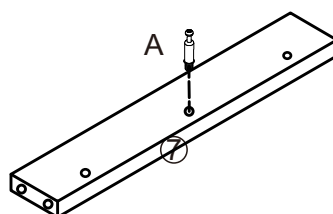


3.

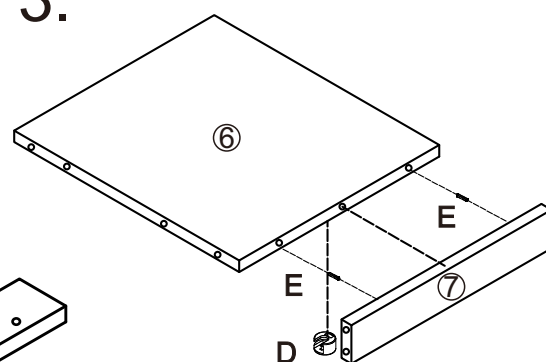


4.

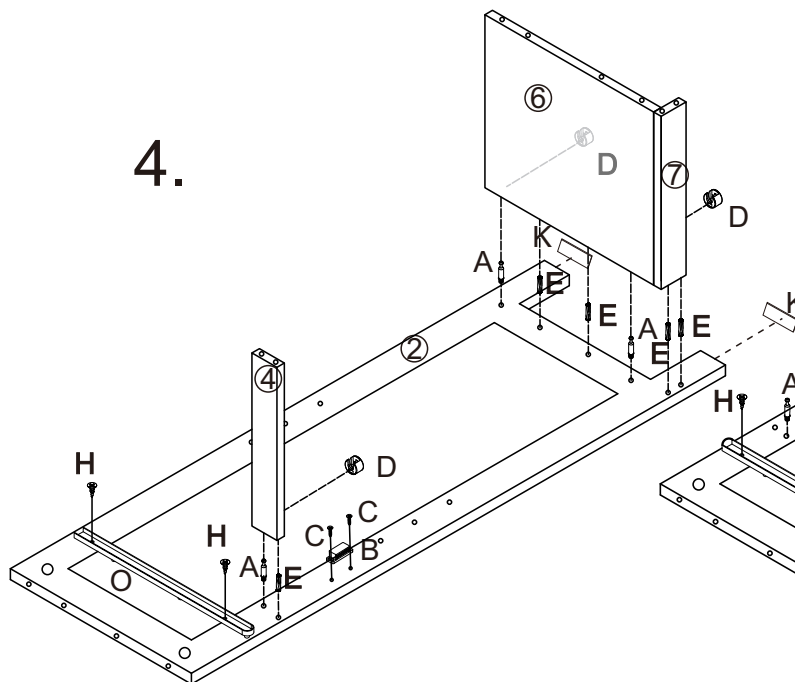


5.

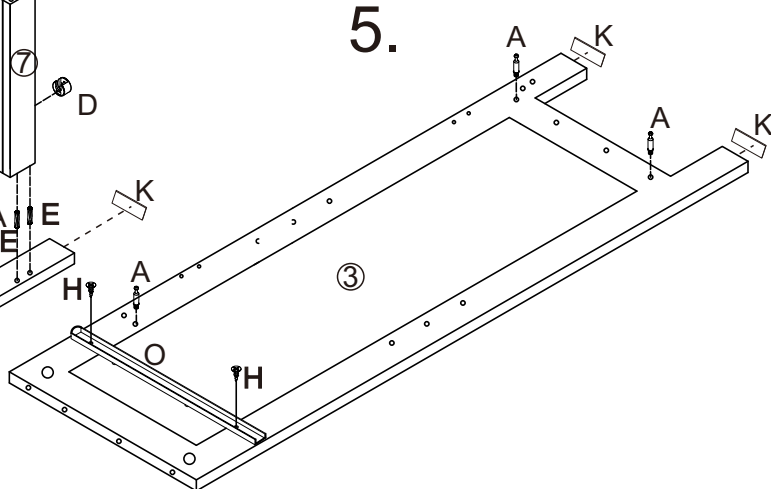

6.

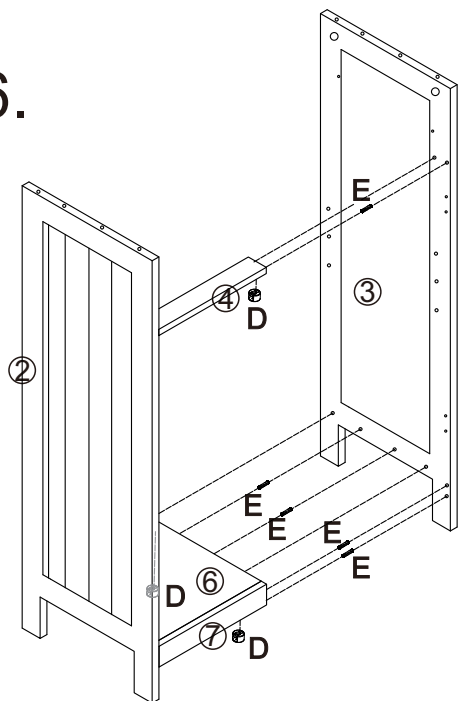

7.

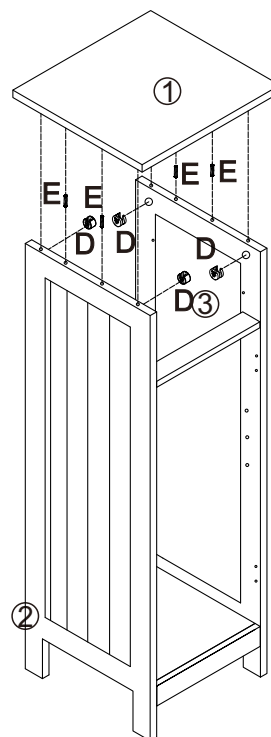

8.

