




VERTICAL FILE CABINET ASSEMBLY INSTRUCTIONS

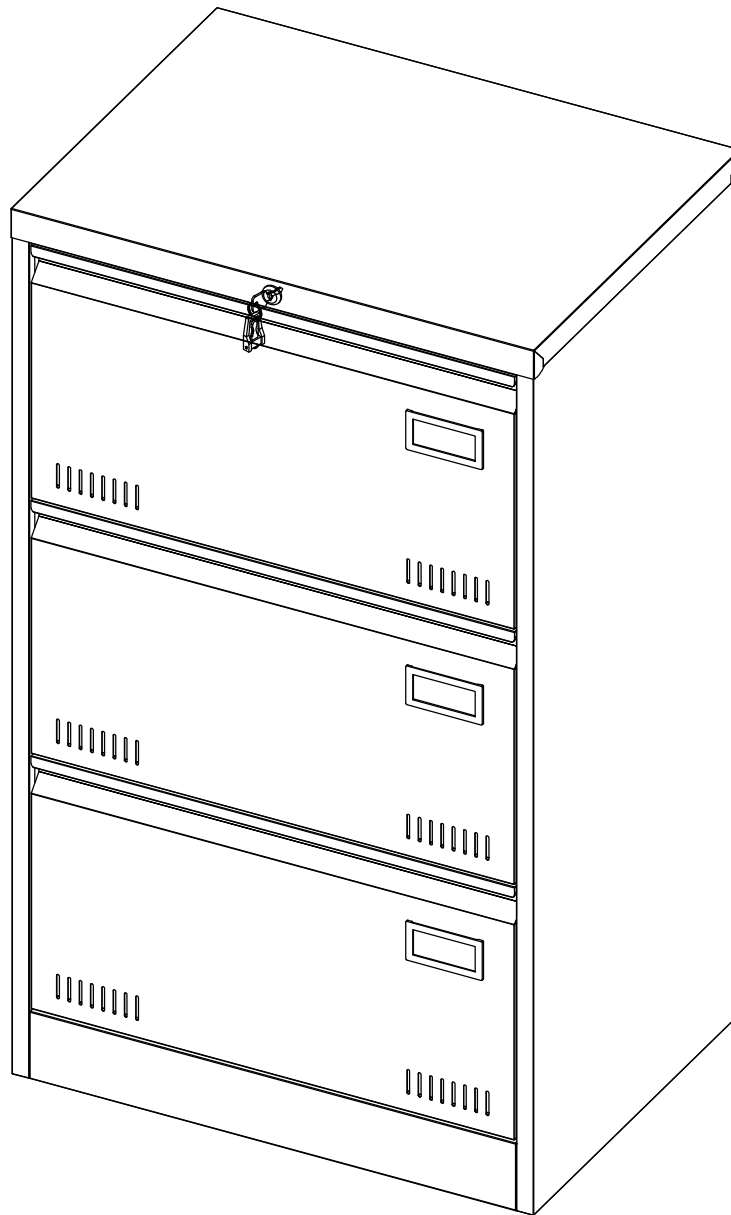


NOTE: PLEASE AN ASSISTANT IS REQUIRED ES
NECESARIO UN AYUDANTE UN ASSISTANT
ESTNECESSAIRE.

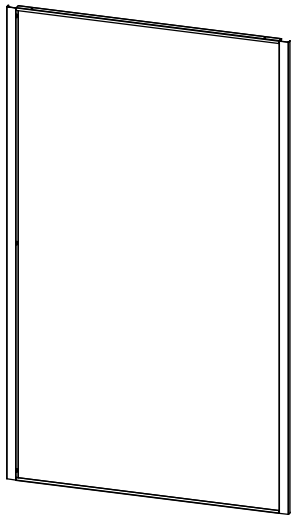

A:Backboard

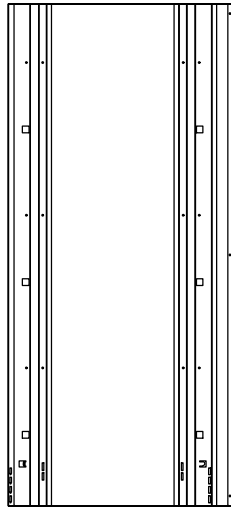


B:Left side

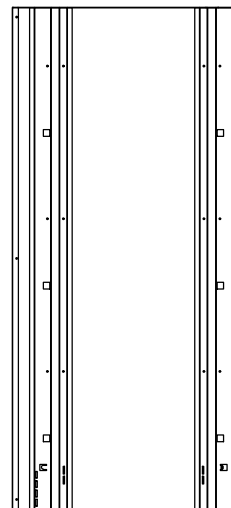


C:Right side




I:lock rod *2

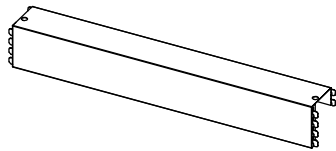


D:Bottom rail

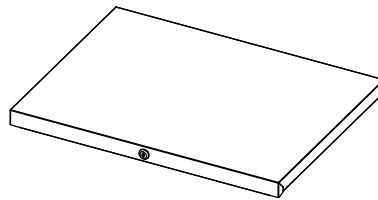


E:Top plate

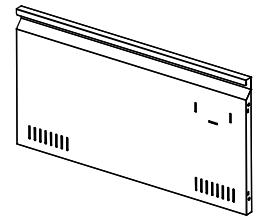


F:Drawer panel *3

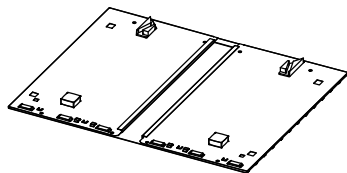


G:Drawer body *3

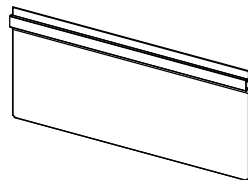


H:Drawer damper *3

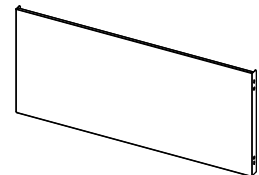

J:Drawer Inside panel *3





P:Key



K:pull rod *2


M:Left side rail *3

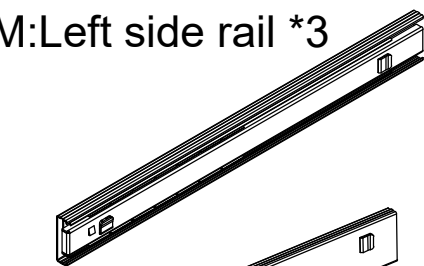


L:Folder adjusting lever *3



N:Right side rail *3

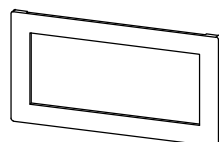


X:Label frame *3

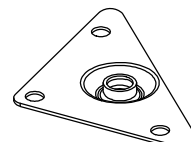


Y:Triangular fixing board *4




Z:Self-tapping yarn *22

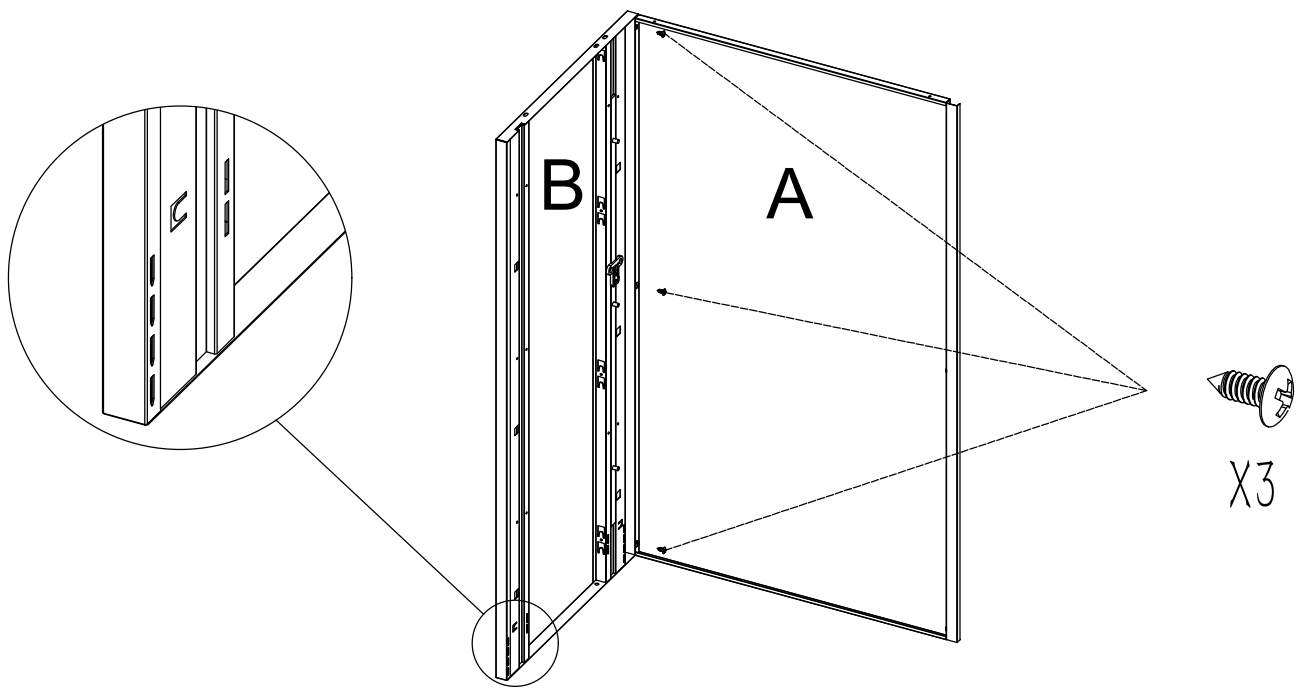


1.Install A and B

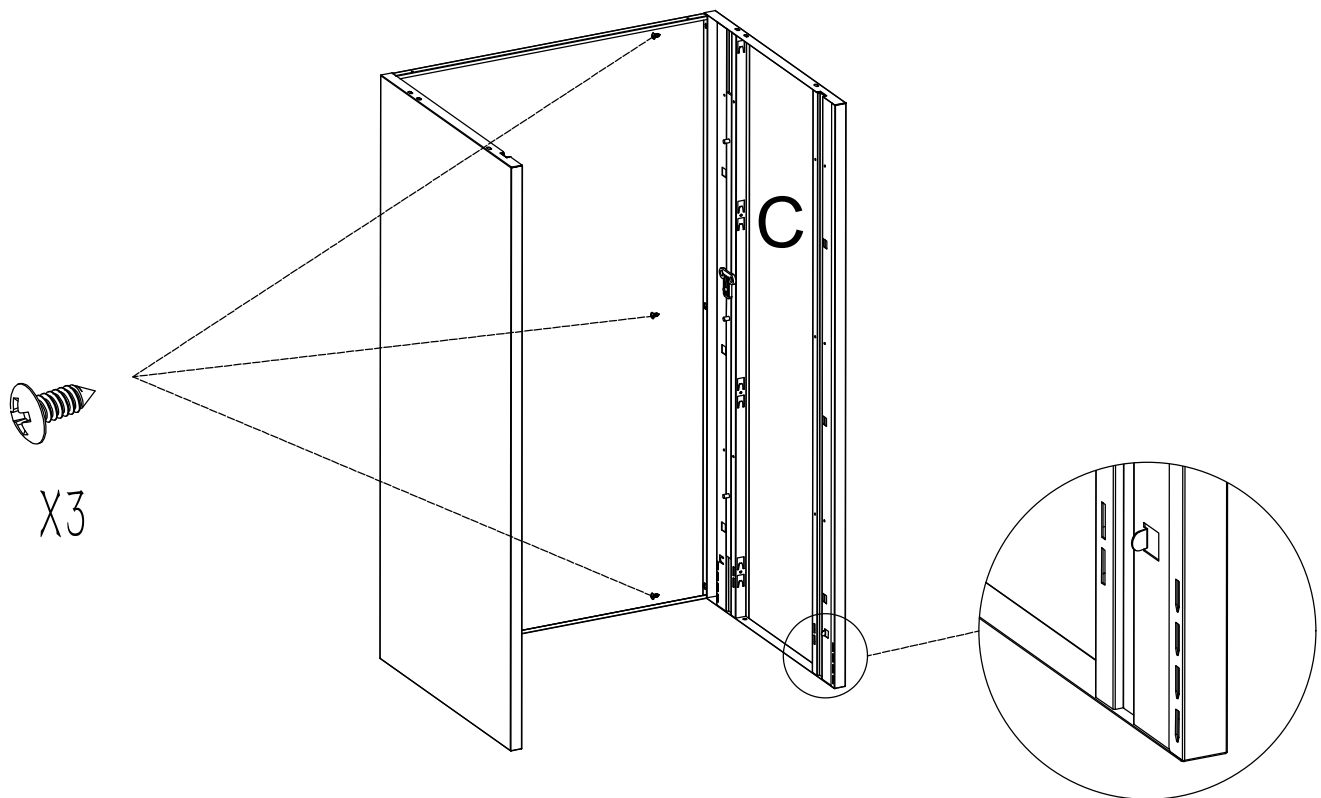


2.Install A and C

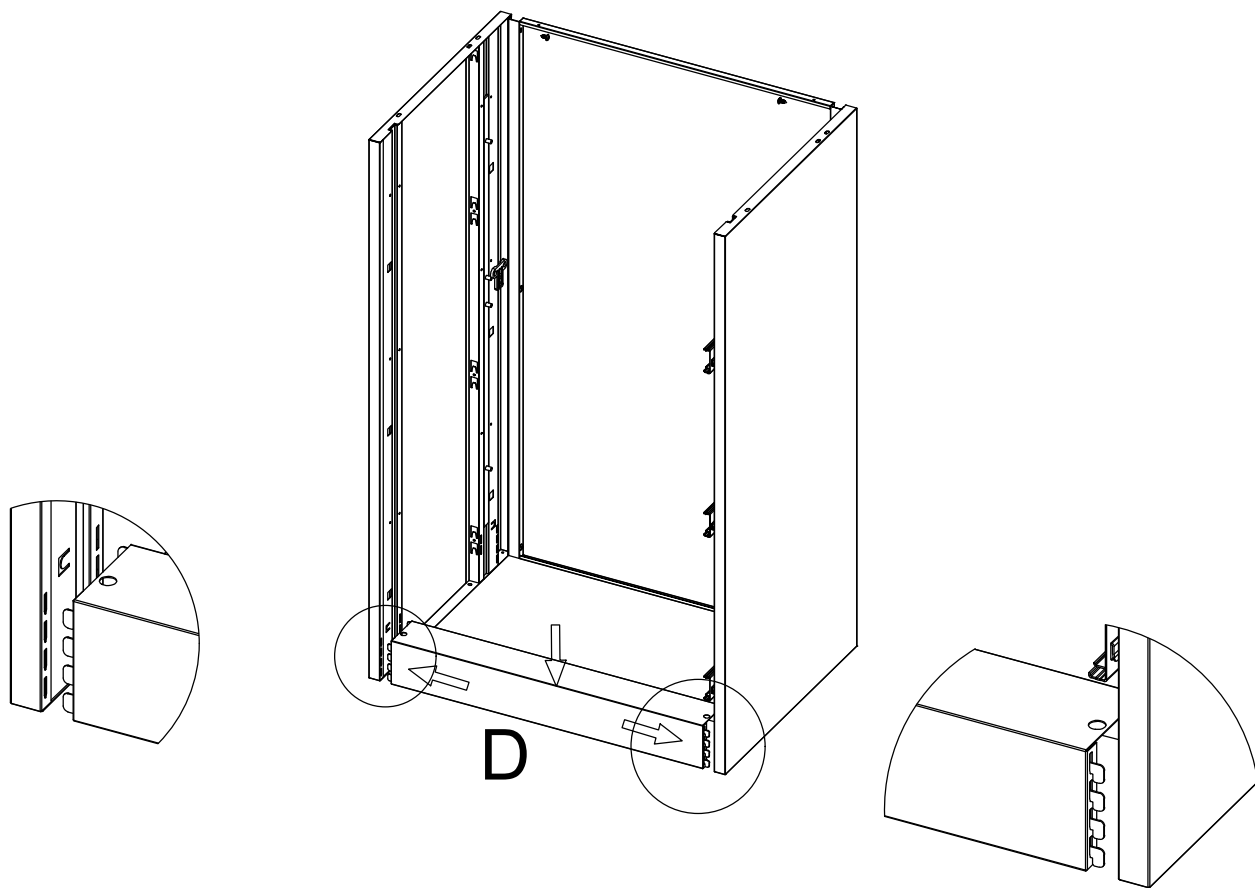




3.Install D

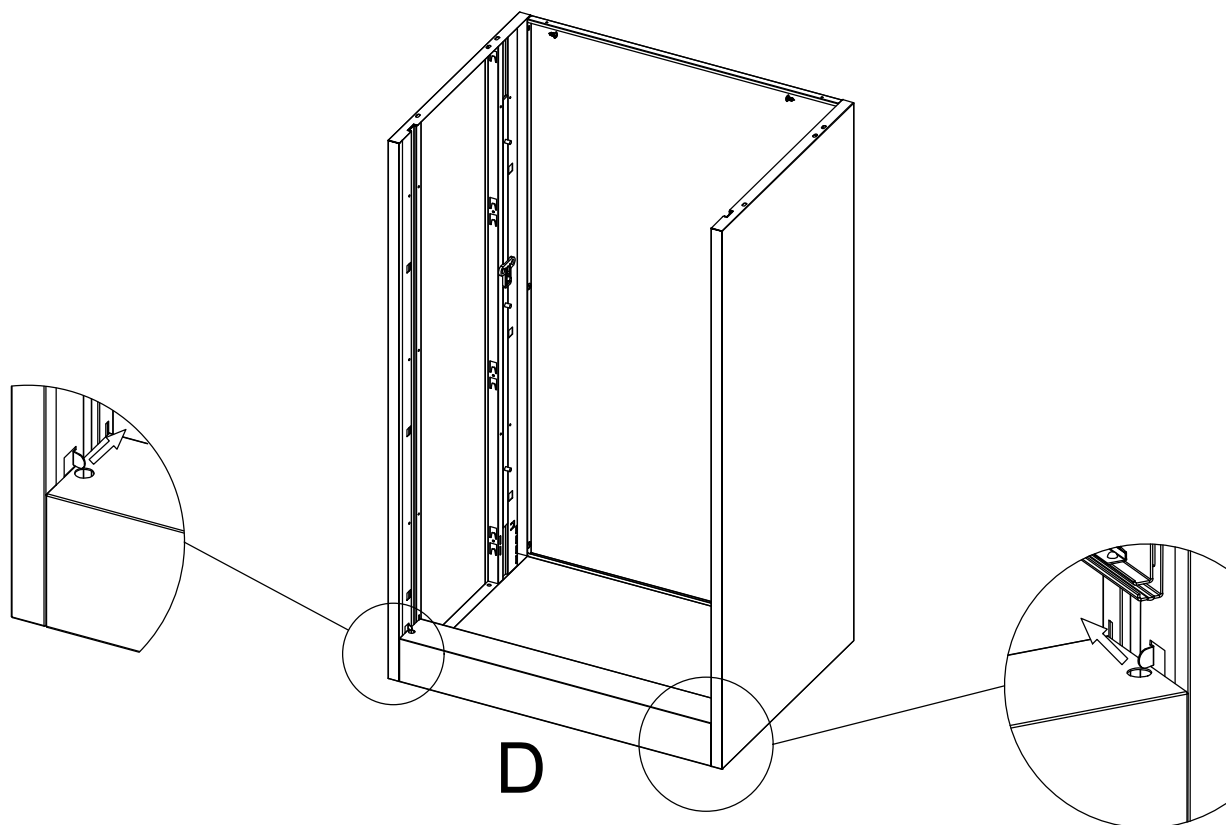


4.Open baffle

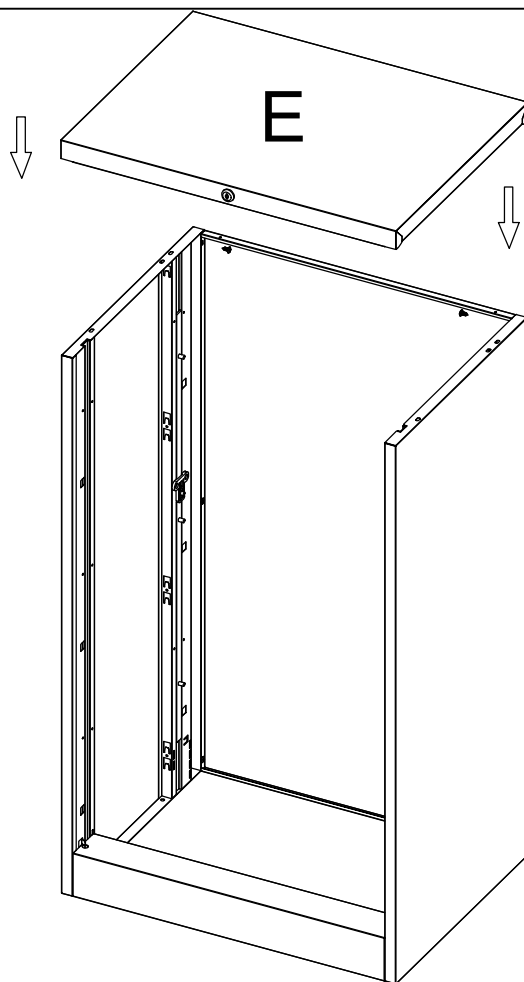


5.Install E

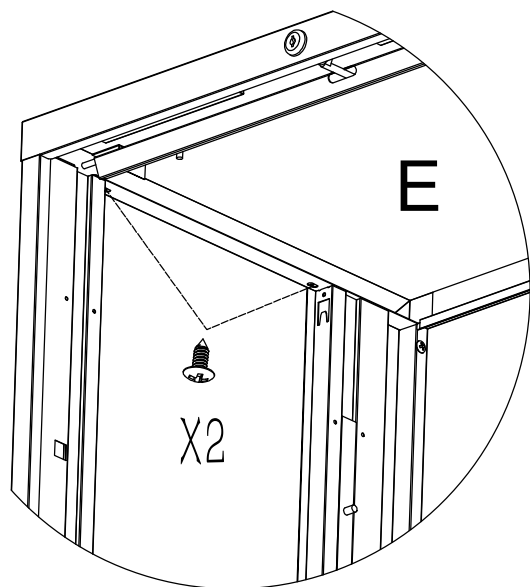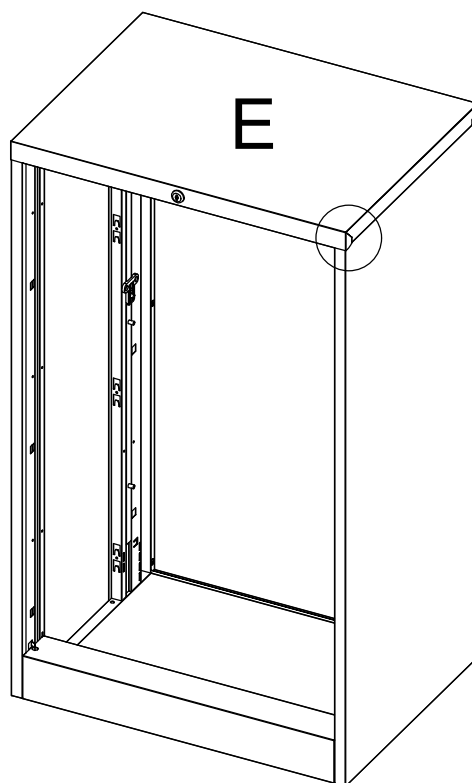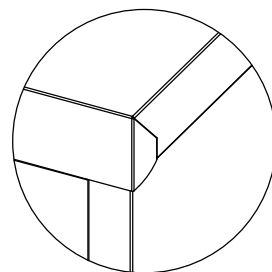


6.Fix with screw

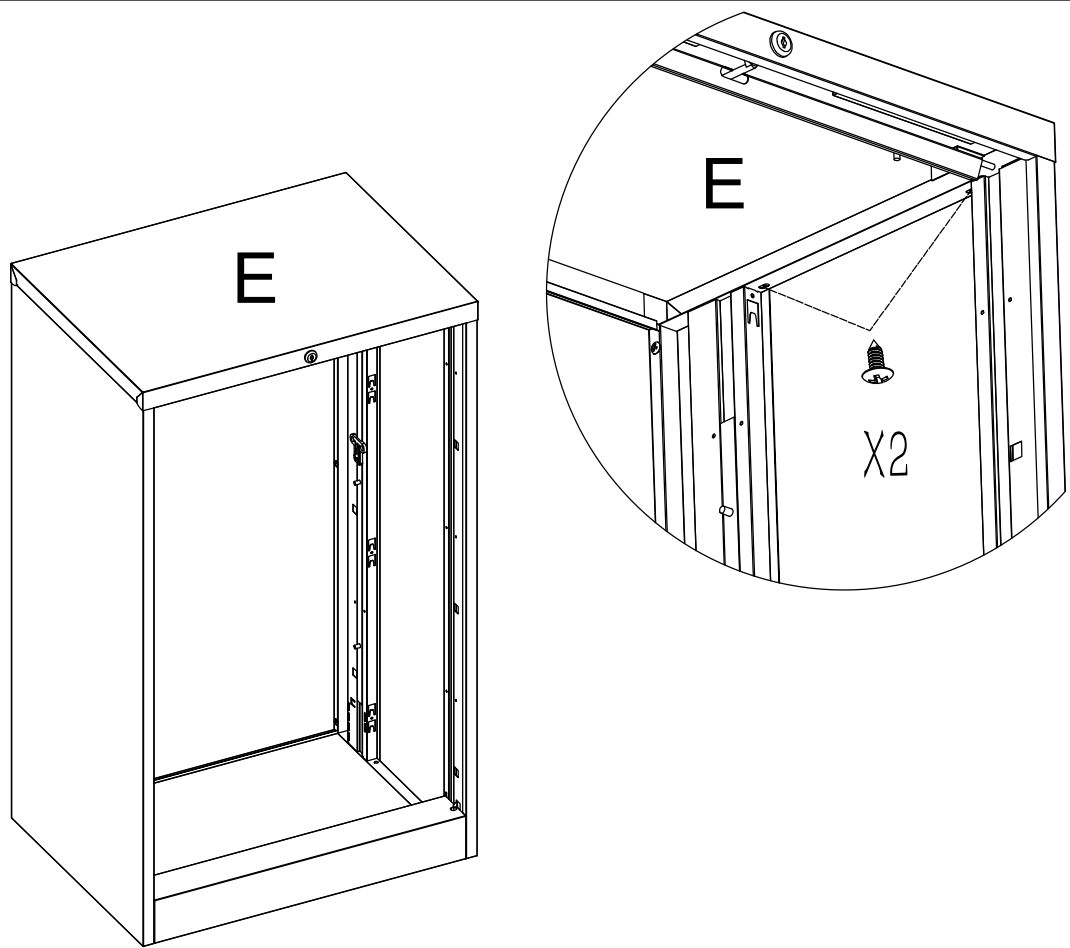


7. Fix with screw

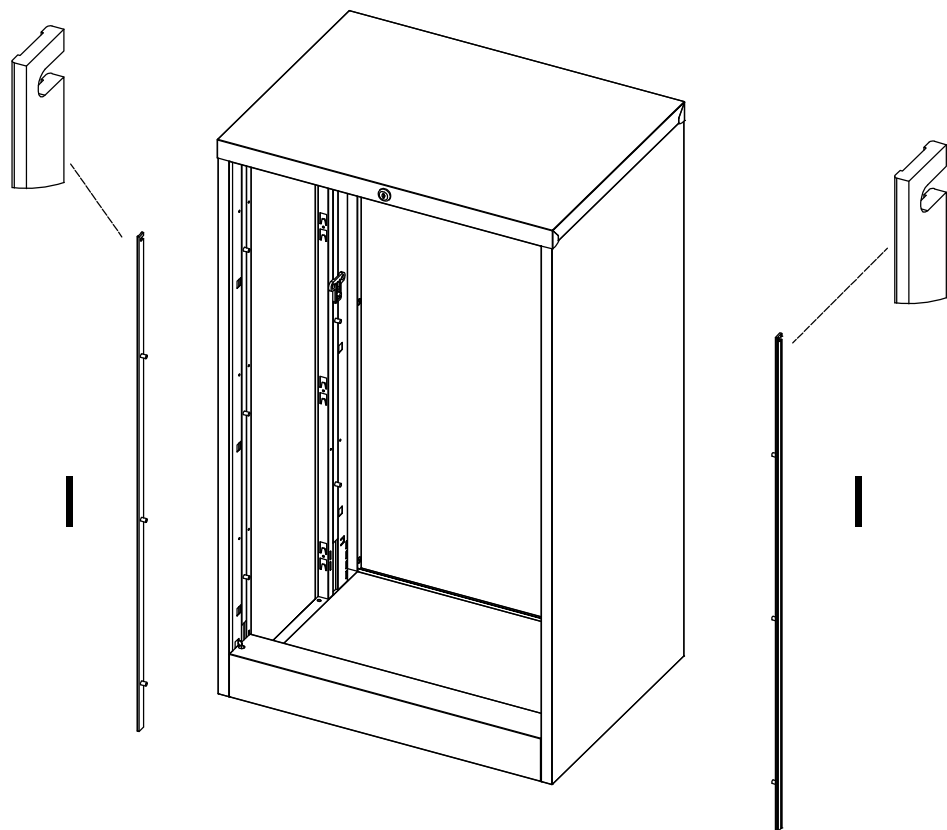


8. Install I

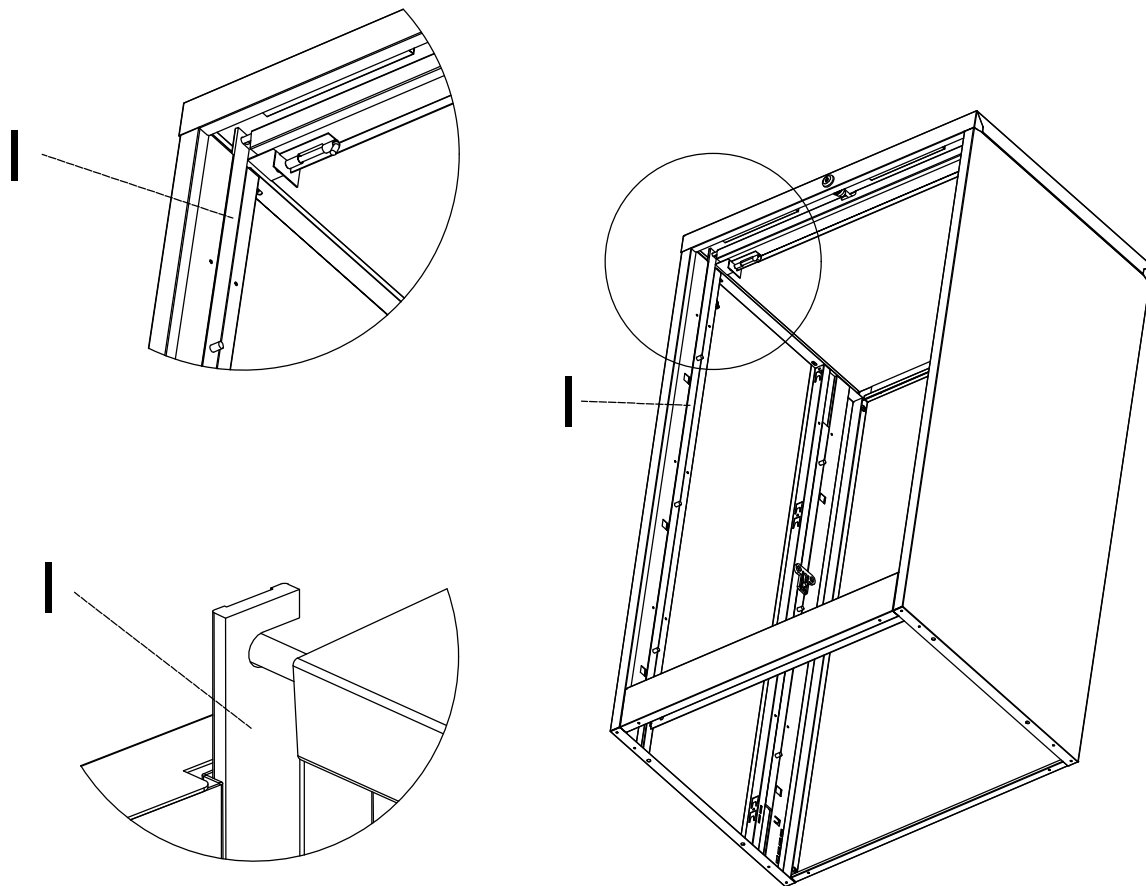


9.Install I

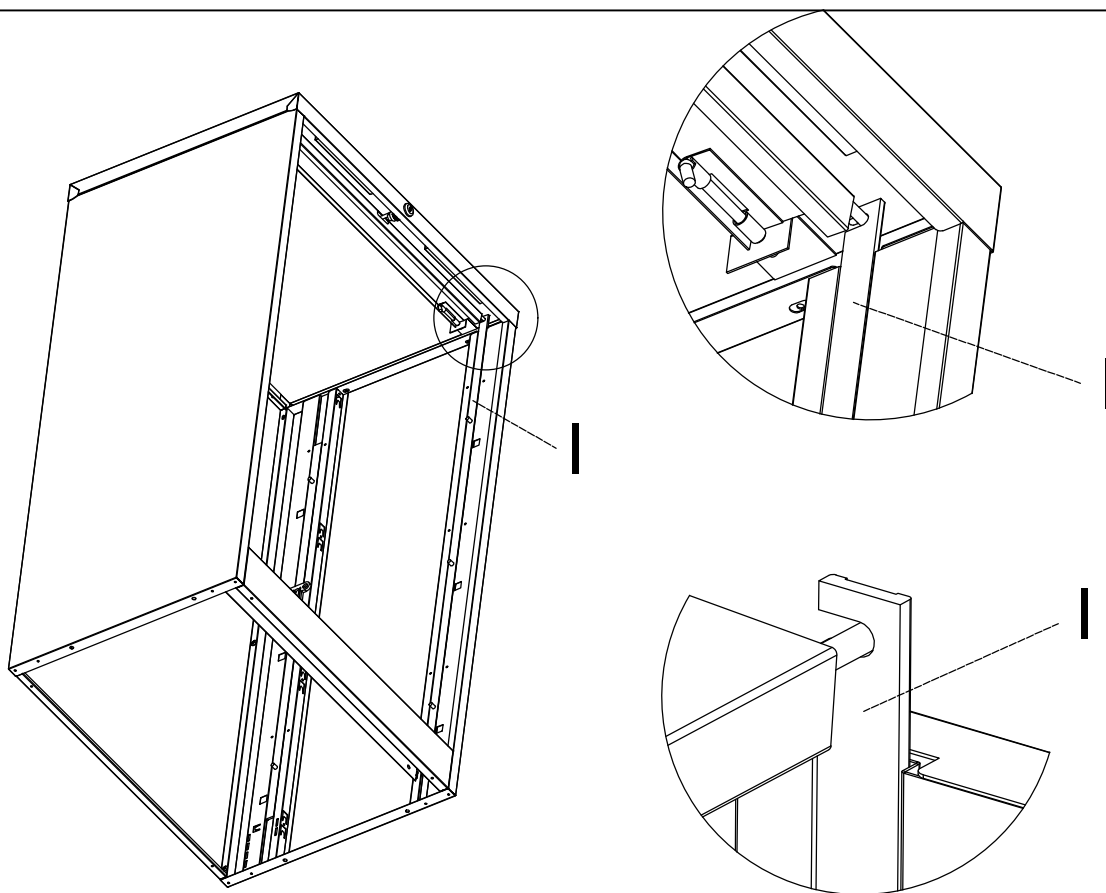


10.Install I

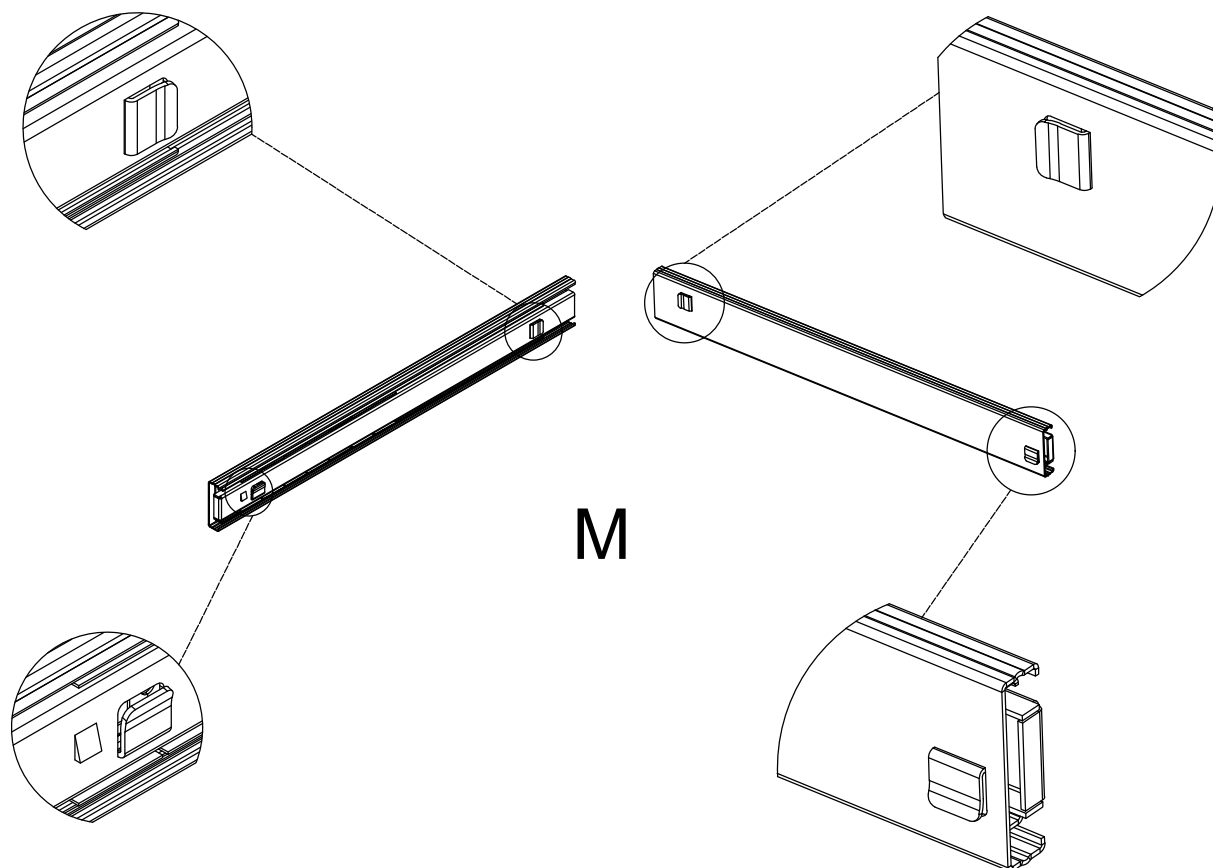


11.Left side rail M

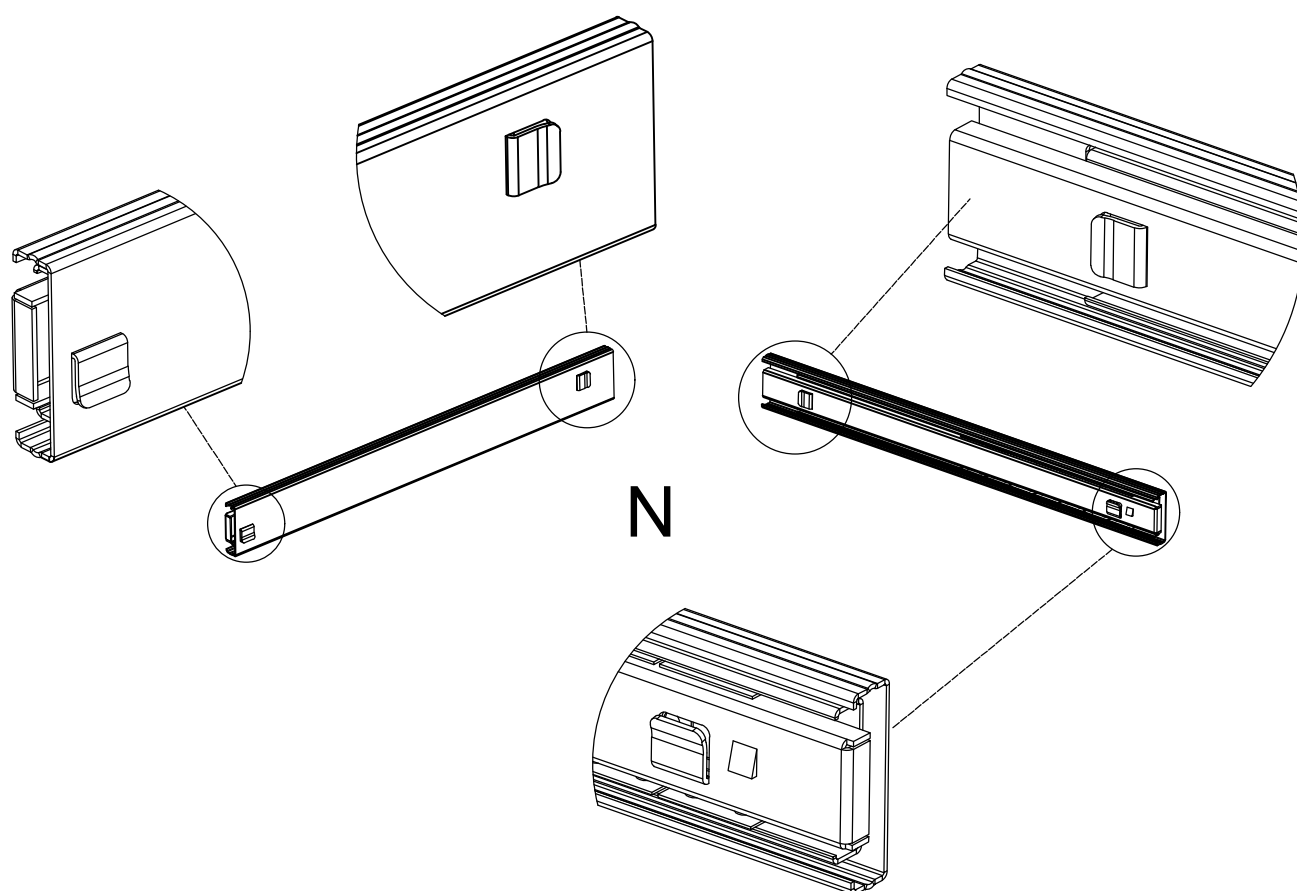


12.Right side rail N

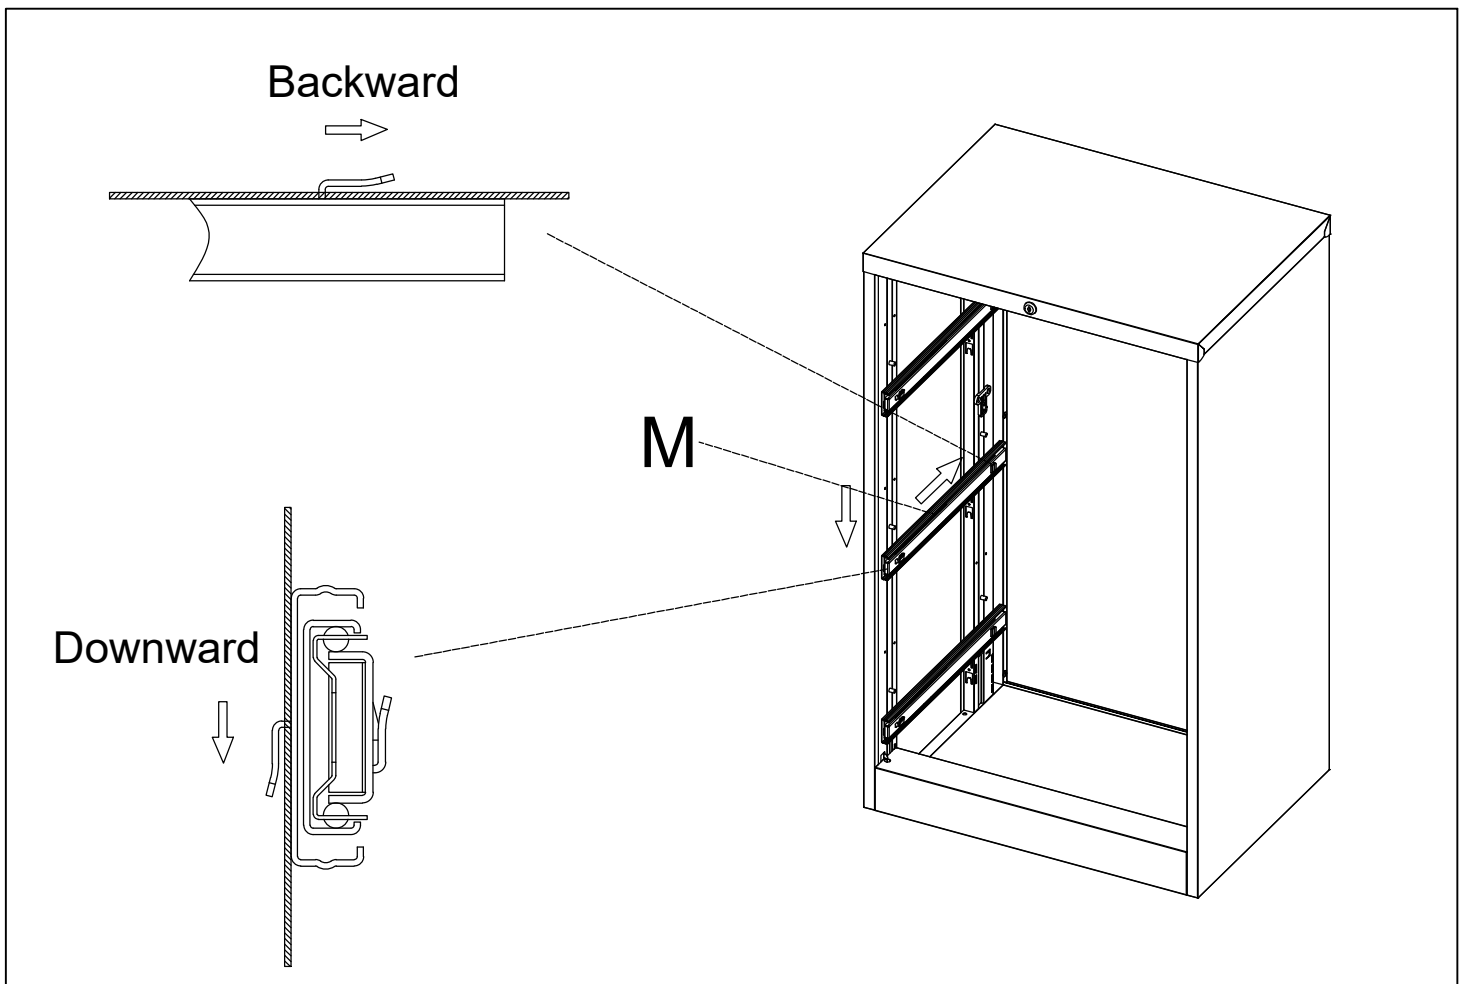


13.Left side rail M

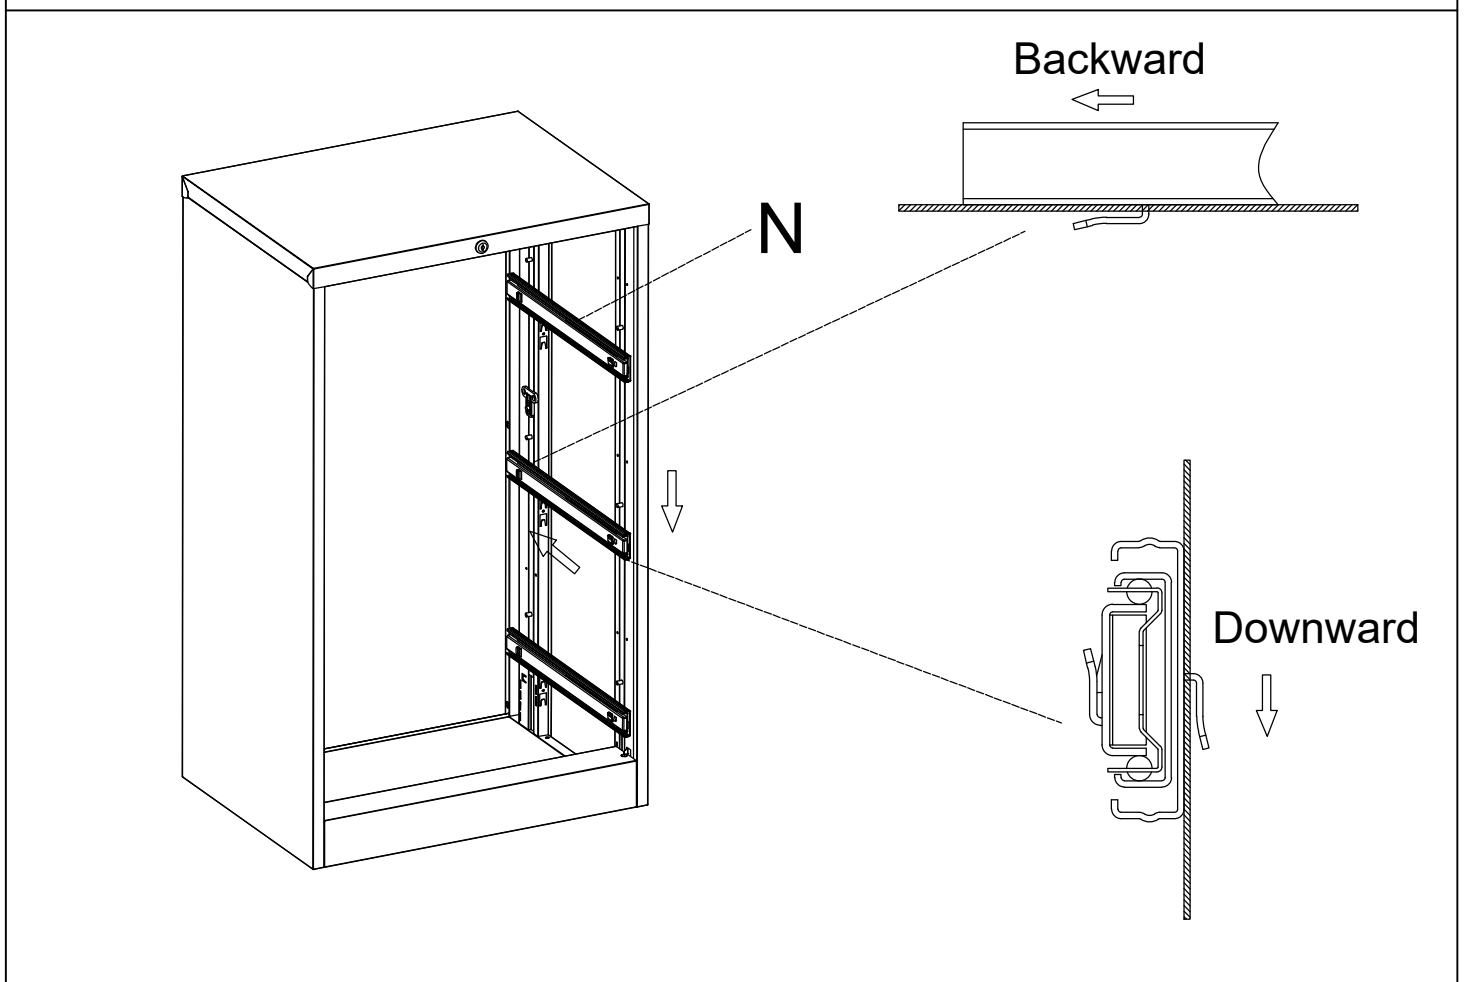


14.Right side rail N

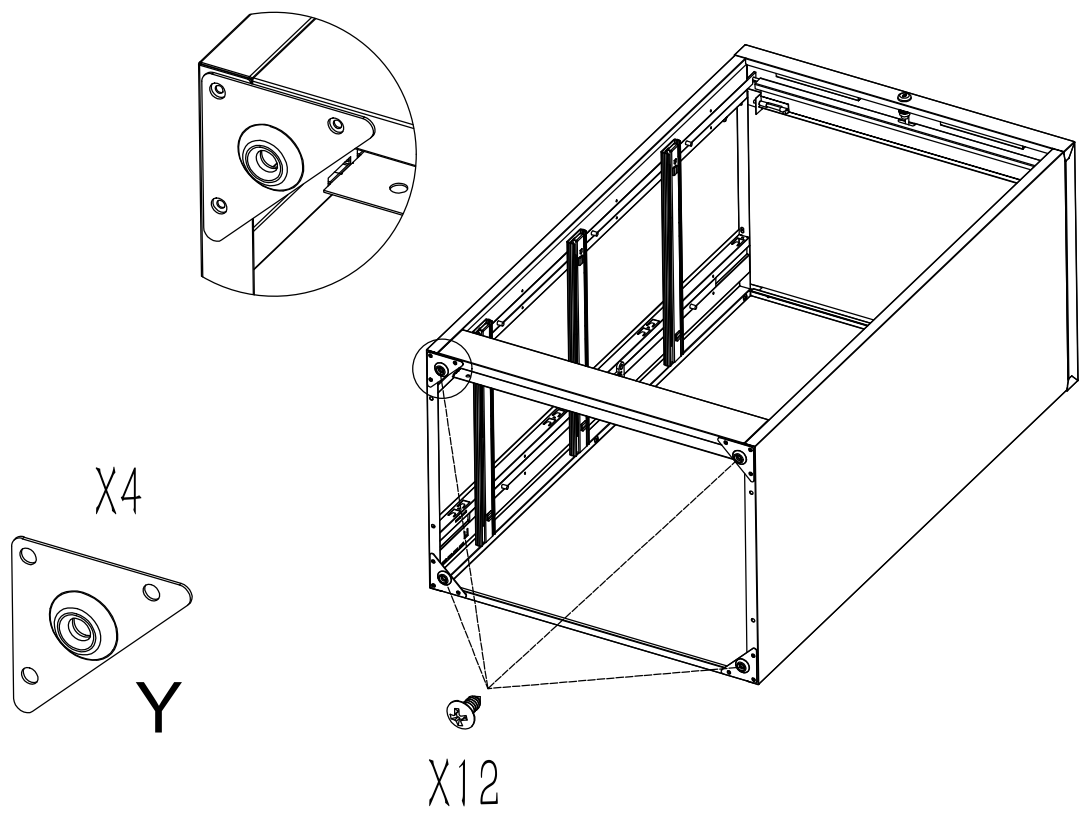


15.Install Y

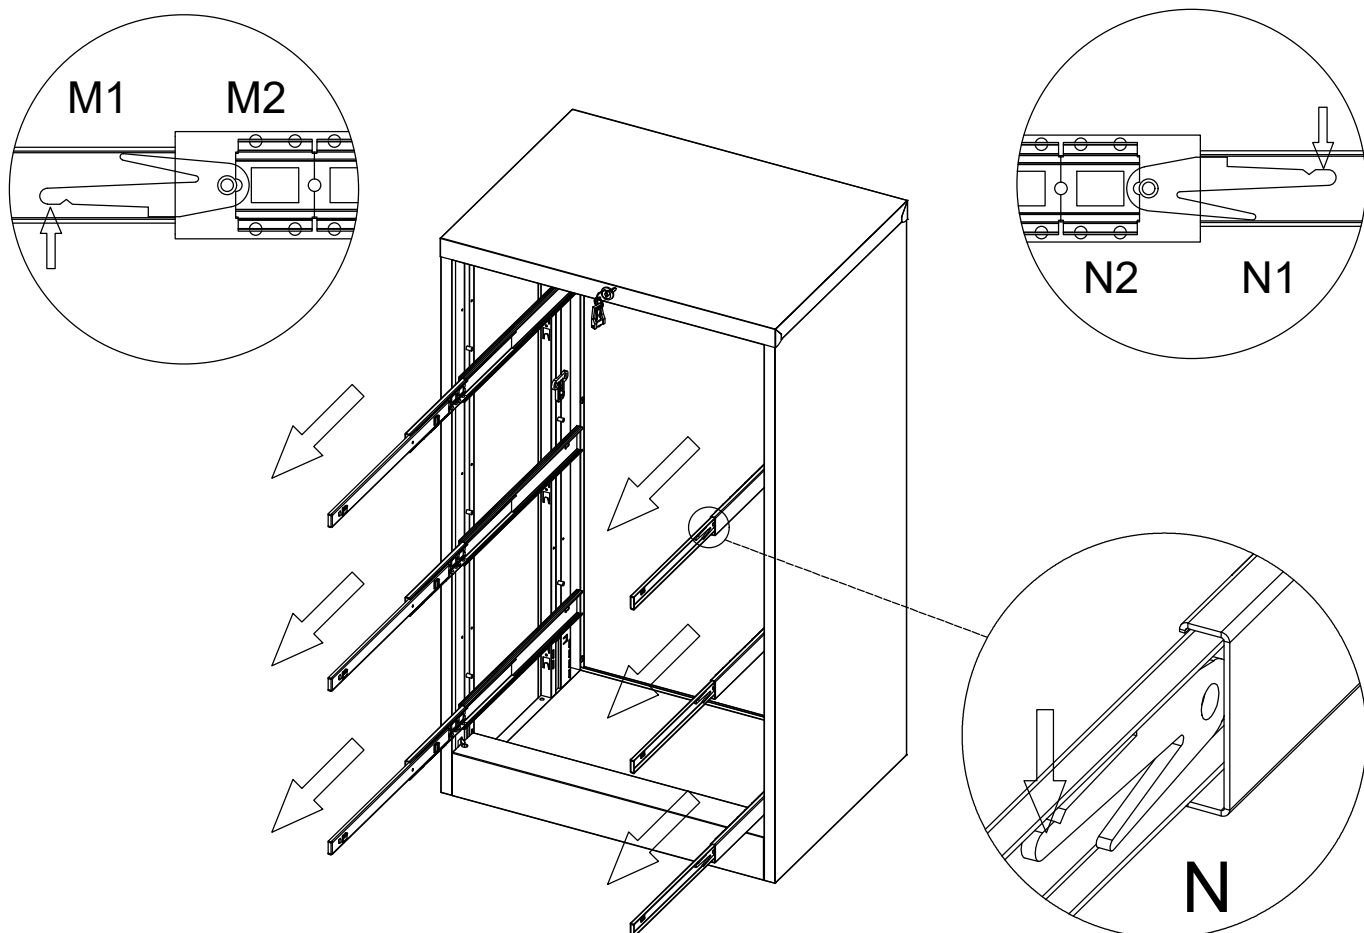


16.Divide the slide rail into M1(N1) and M2(N2)

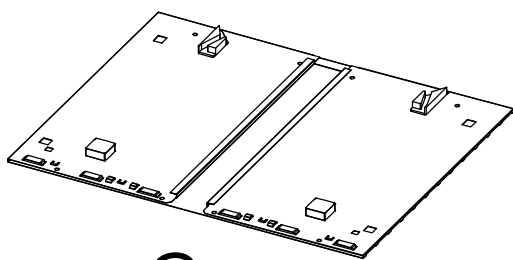


G

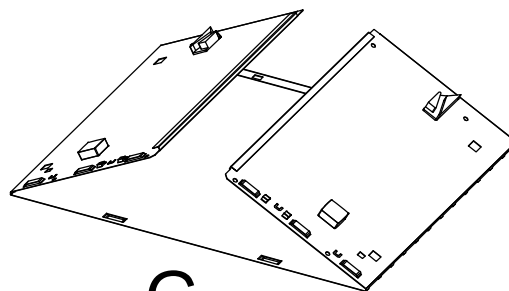

G

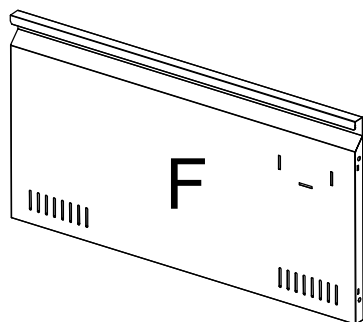


F

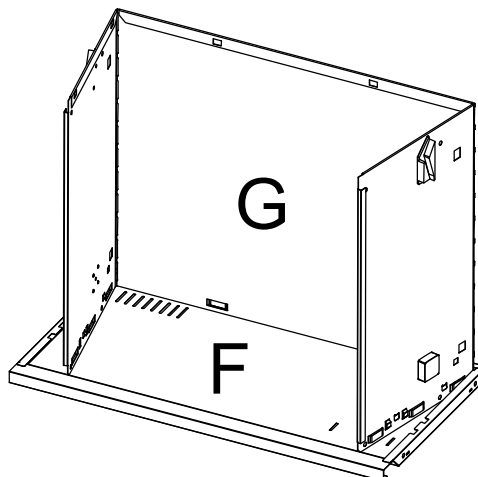


G

F

17.Combine F and G.

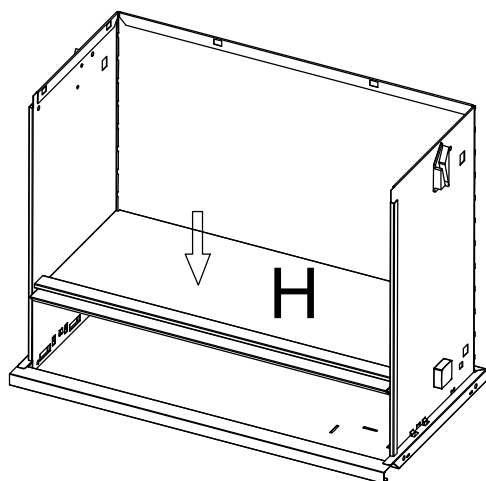


H

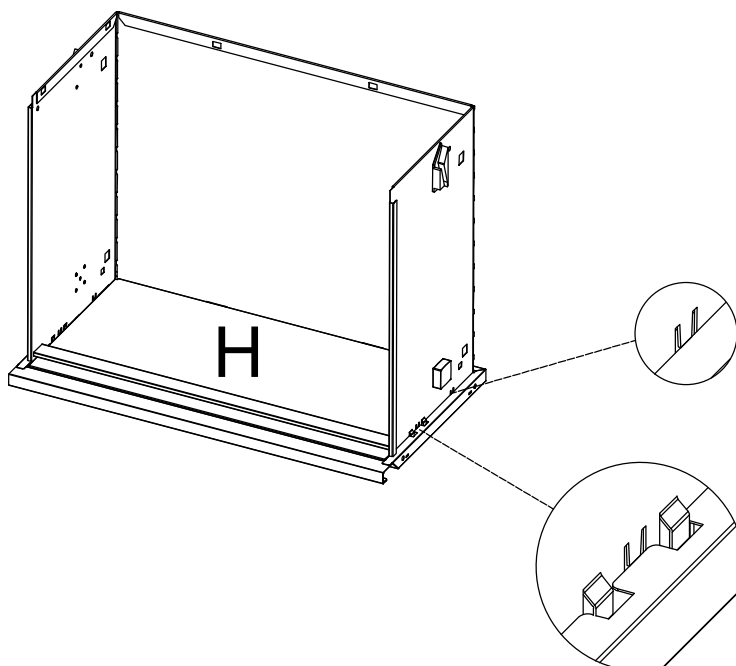


H


18.Combine F, G, and H.

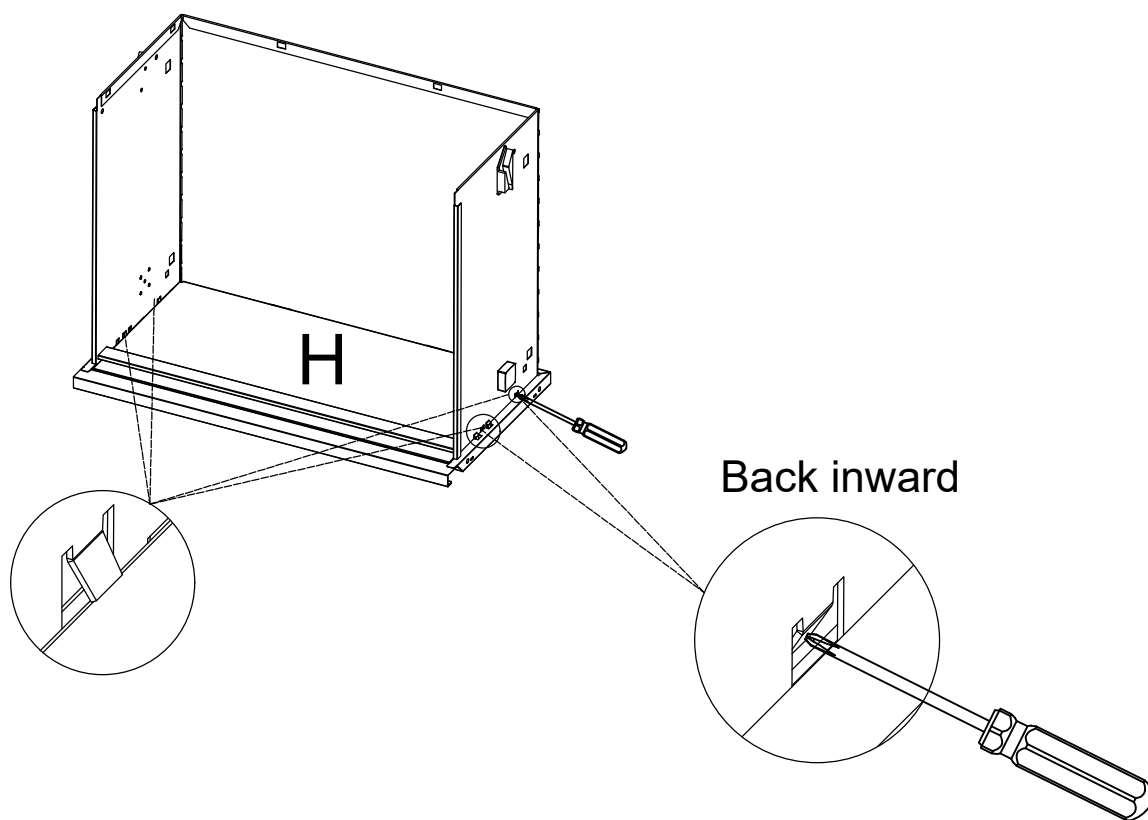


19. Open baffle

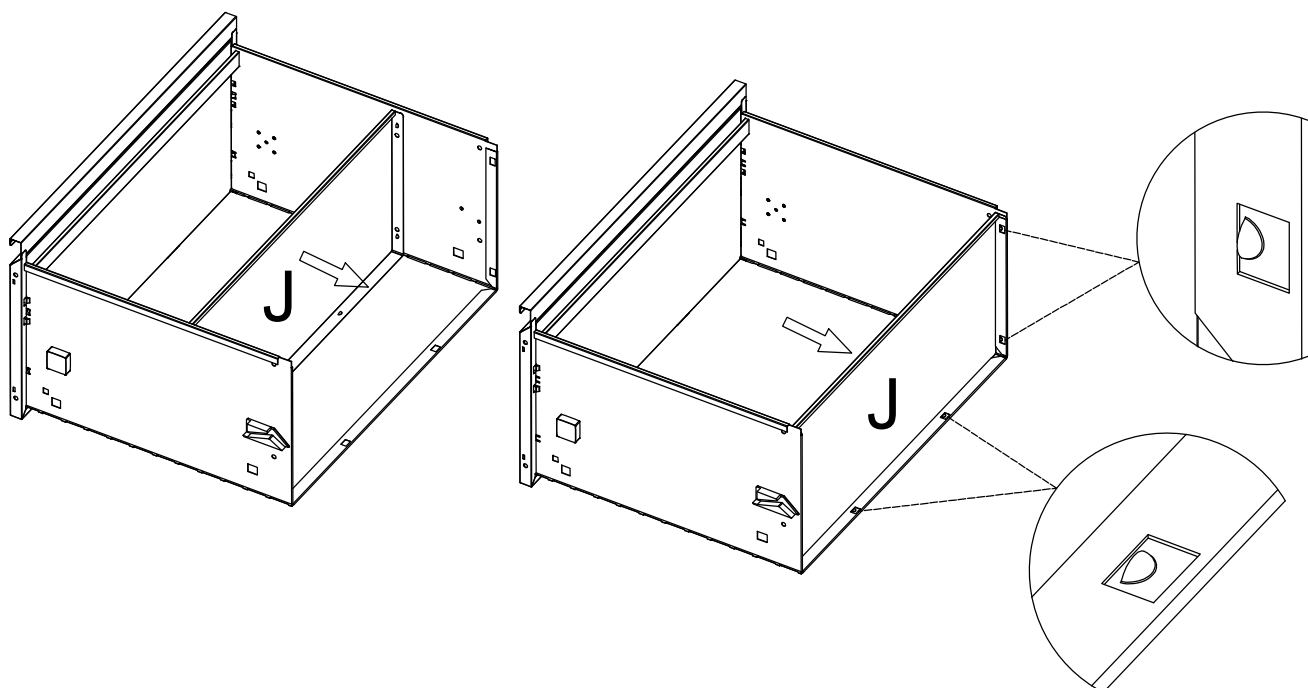


20. Combine F, G, H, and J.

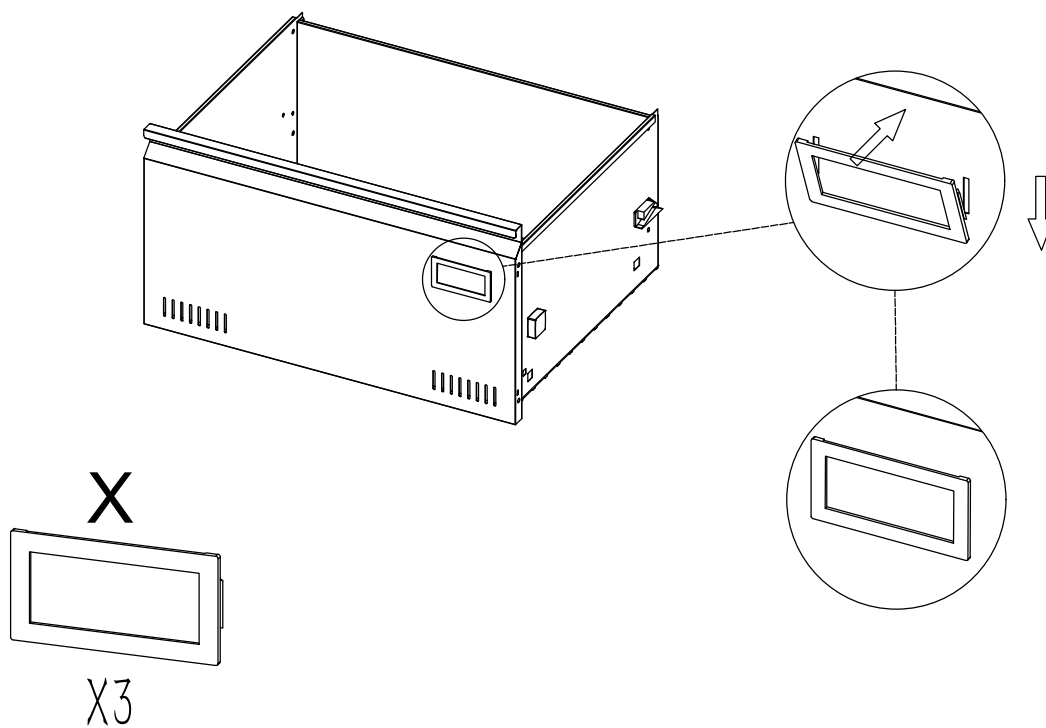


21.Install X

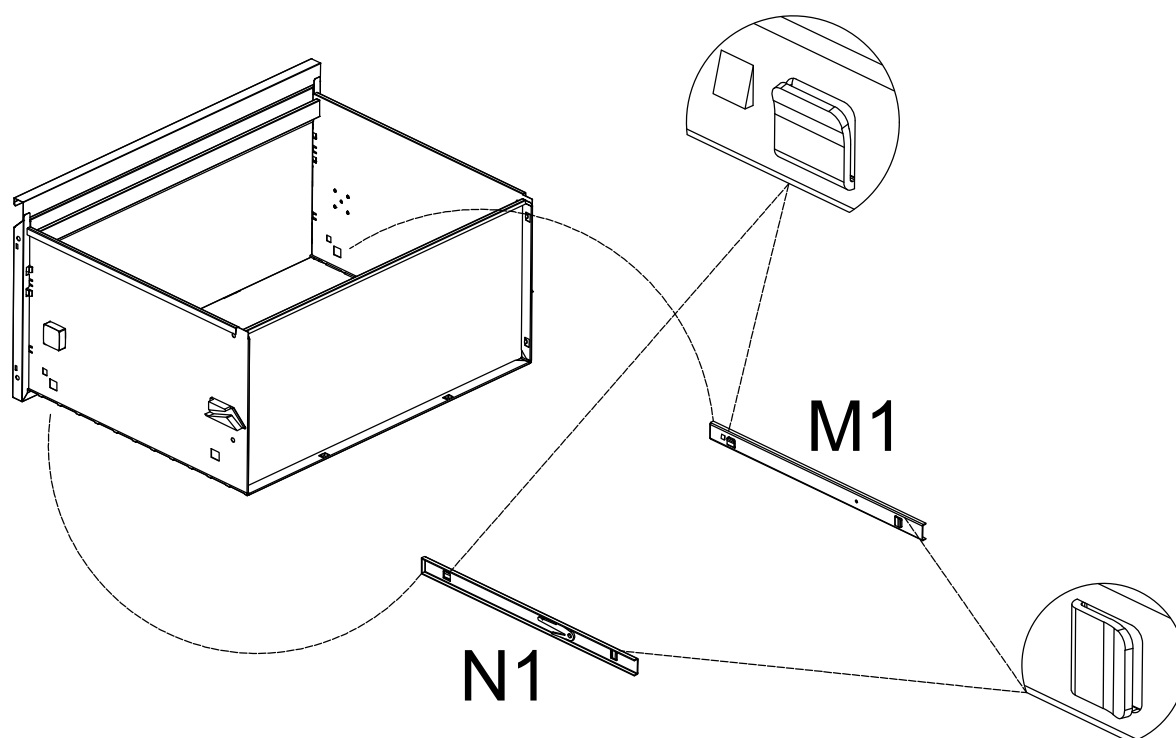

22.Install M1 and N1

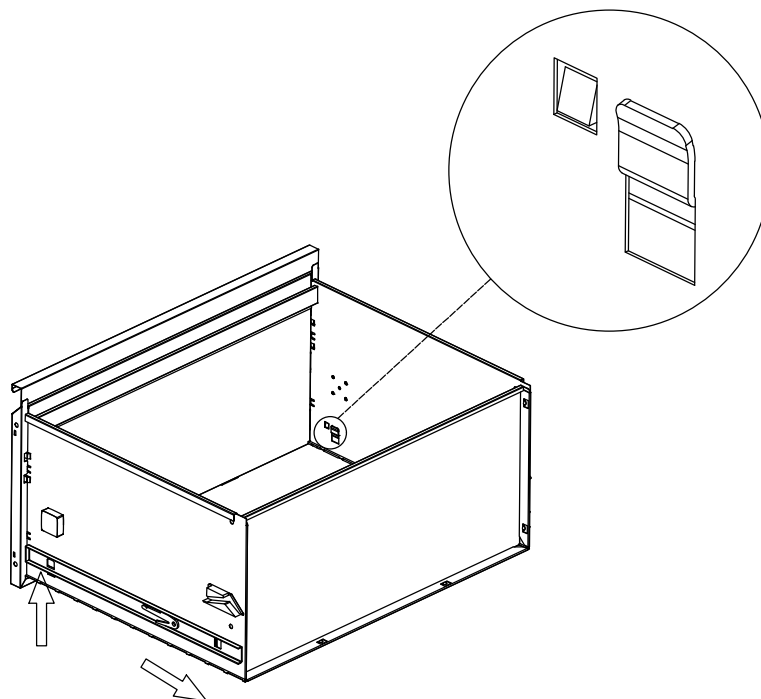


23.Install M1 and N1

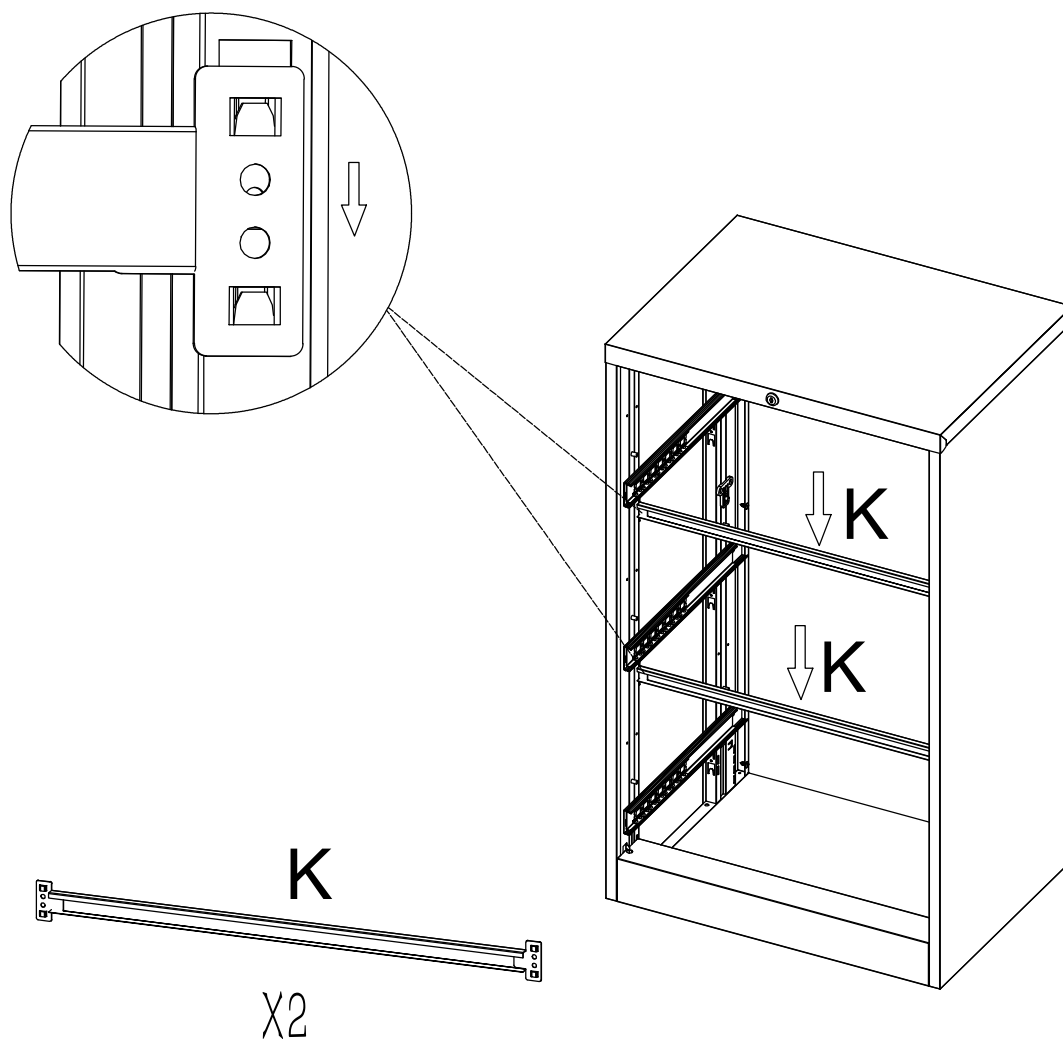


24.Install K

Insert the P and turn it
clockwise 180 degrees

Pull out M2(N2)

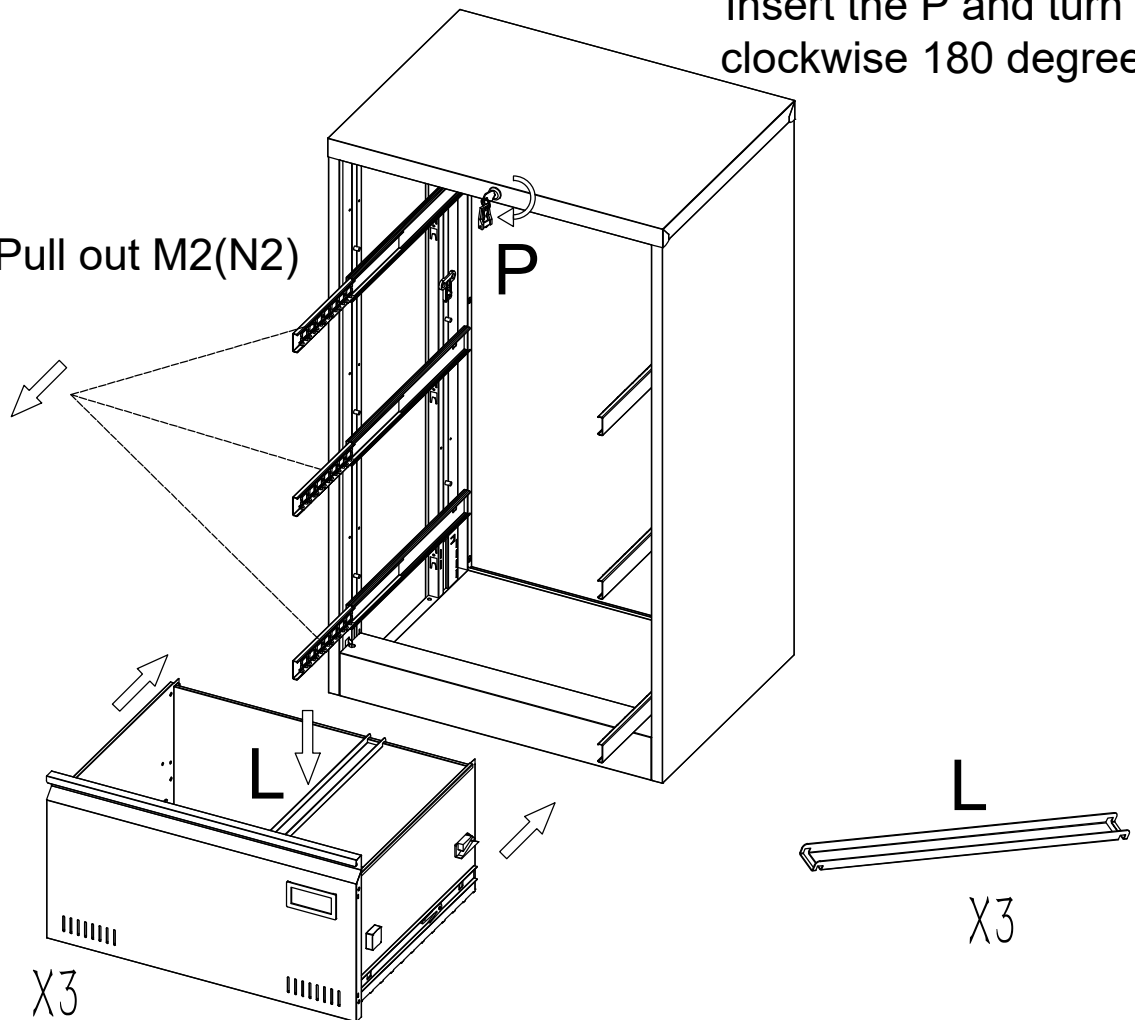

25.Install drawer and L

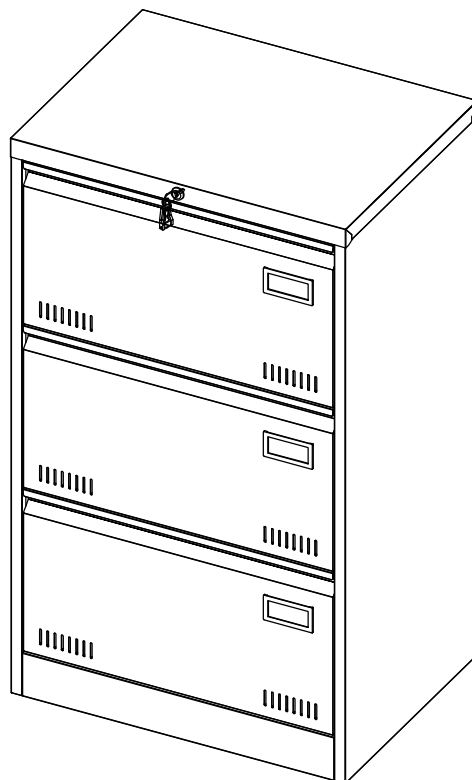

26.Assembly completed