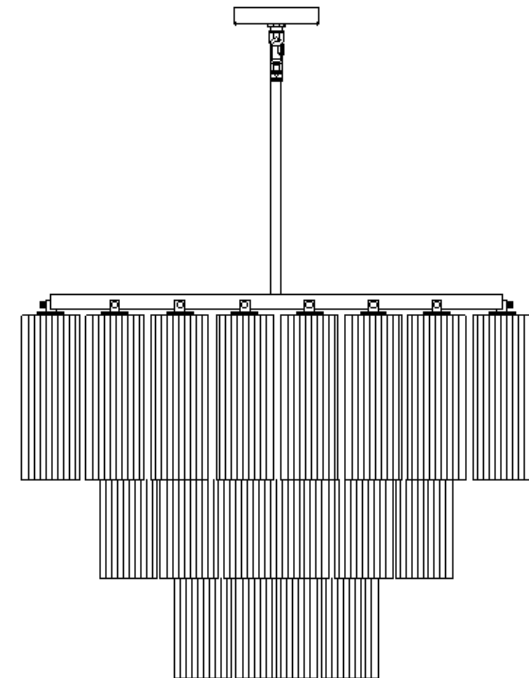


KELCIE TIERED GLASS CHANDELIER

DESIGN # CTL1121A

Assembly Instructions



Need help?

Feel free to contact us via email or call
if you have any specific questions!

contact us:

cs@safavieh.com







866-422-9070

SAFAVIEH
C O U T U R E

Thanks for bringing
Safavieh Couture into
your home


Every thing we make is incredibly
simple to set up, including your new
chandelier. Tools Required for Assembly (not
included): Screwdriver, Junction box

Parts List

Ax3 Hex nut		Kx1 Lock link	
Bx1 Metal washer		Lx1 Loop	
Cx1 Threaded rod		Mx2 6"rod	
Dx1 Teeth washer		Nx2 12"rod	
Ex1 Cluster		Qx1 Fixture body	
Fx1 Mounting bracket		Px2 Outlet box screw	
Gx1 Steel cable buckle		Qx48 Glass shade	
Hx1 Canopy		Rx13 Bulb	
Ix1 Collar loop		Sx48 Cylinder screw	
Jx1 Loop Ring		Tx1 Steel cable buckle	
		Ux3 Wire Nut	


1

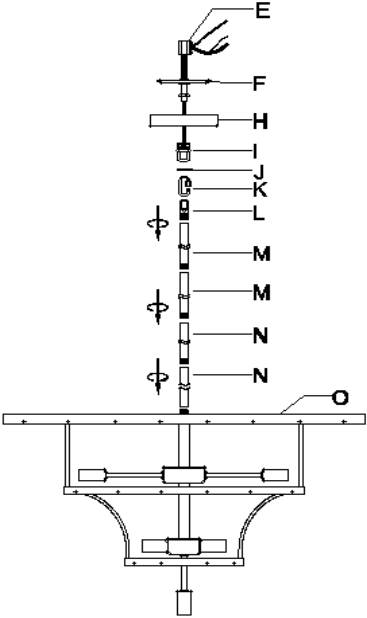Pass wire and cable through 6"rod (M),12"rod (N),Loop(L) ,Lock link(K) ,Loop Ring(J),Collar loop(I),
Canopy(H),Mounting bracket(F) and out from side hole of Cluster (E). Then fasten 6"rod (M),12"rod (N),Loop(L).



2

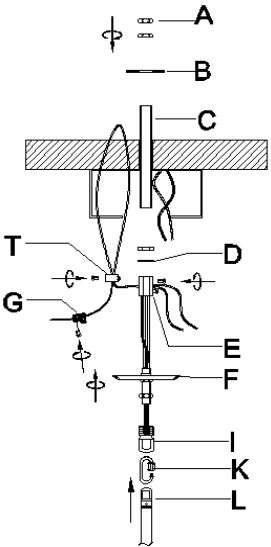Raise the threaded rod (C) thread to the cluster (E), then attach to the ceiling, secure with metal washer (B) and hex nut (A). Wrap the steel wire rope around the beam and lock it with the steel cable buckle(T) and (G).Tighten Mounting bracket(F) to Cluster (E),then fix Collar loop(I) to Mounting bracket(F), Attach the Loop(L) to the Collar loop(I) with the lock link(K).



**Thanks for bringing
Safavieh Couture into
your home**

Every thing we make is incredibly simple to set up, including your new chandelier. Tools Required for Assembly (not included): Screwdriver, Junction box


3 Wire connection

Connect fixture neutral wire (ribbed) to the outlet box neutral wire (usually white) using a wire nut. Connect fixture hot wire (smooth and with markings) to the outlet box hot wire (usually black) using a wire nut.

CAUTION: Do not reverse the hot and neutral connections! Make sure they are inserted properly.


Grounding Instructions:

Wrap the ground wire from the outlet box around the green ground screw on the mounting bracket no less than 2" from the end of the wire. Tighten the ground screw. If the fixture is supplied with a ground wire, connect it to the outlet ground wire with a wire nut.



4

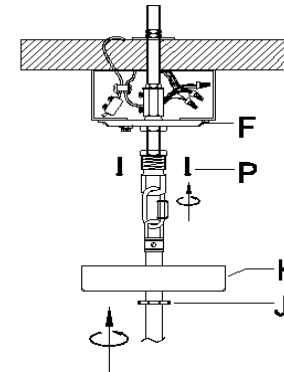Install the mounting bracket (F) to the junction box with outlet box screw (P). Connect ground wire with a wire nut. Attach the canopy (H) to the ceiling with Loop ring (J).



5

Install the bulb(R) to each socket and then tighten the glass(Q) to the fixture body(O) with cylinder screw(S).

