


Mounting Instructions



STEP 1

Confirm the installation location and mark the wall with a pencil.

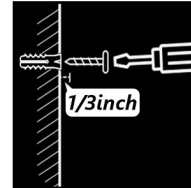

STEP 4

Insert the screw into the expansion screw and make sure there is 1/3 of an inch between a screw and the wall.




STEP 2

Point on the wall with a power drill, and drill a pilot hole for the anchor.



STEP 5

Attach the mirror to the wall with the screw. Make sure the mirror is securely mounted.

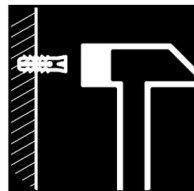

STEP 3

Insert the expansion screws into the holes until they are all flush with the wall.



STEP 6

Please wipe clean with a soft cloth. Note: Do not use harsh or abrasive cleaners or scouring pads.