# BED ASSEMBLY INSTRUCTIONS

## PARTS INCLUDED

**A**



**HEADBOARD (1) PC**

**B**

**FOOTBOARD (1) PC**

**C**

**SIDE RAILS (2) PC**

**D**

**SLATS (3) PC**

**E**



**WINGS (2) PC**

### HARDWARE KIT

**ALLEN KEY**
**(1) PC**

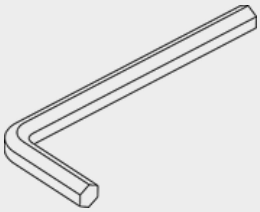

**SCREWS**
**(17) PC**

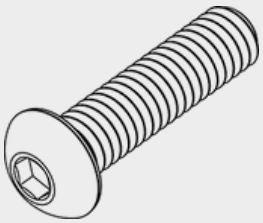

**FLAT WASHER**
**(17) PC**

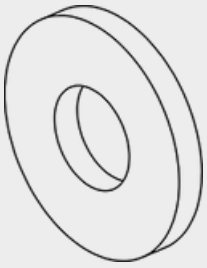

**L BRACKETS**
**(4) PC**



**WING BRACKETS**
**(4) PC**

⚠️ **Note:**
1 screw and 1 flat washer are included as spare. Only 16 are required for assembly.

# ASSEMBLY INSTRUCTIONS

## MAY REQUIRE OF 2 ADULTS

**IDENTIFY ALL THE PARTS INCLUDED LISTED AT THE BEGINNING OF THIS DOCUMENT ACCORDING TO THE MODEL OF YOUR BED.**

### STEP 1 – ATTACH BRACKETS TO FOOTBOARD

- Place the **L brackets** on the inside face of the **footboard (B)** as shown.
- Place a **flat washer** between the **screw** and the **L bracket**, then tighten using the **Allen key**.

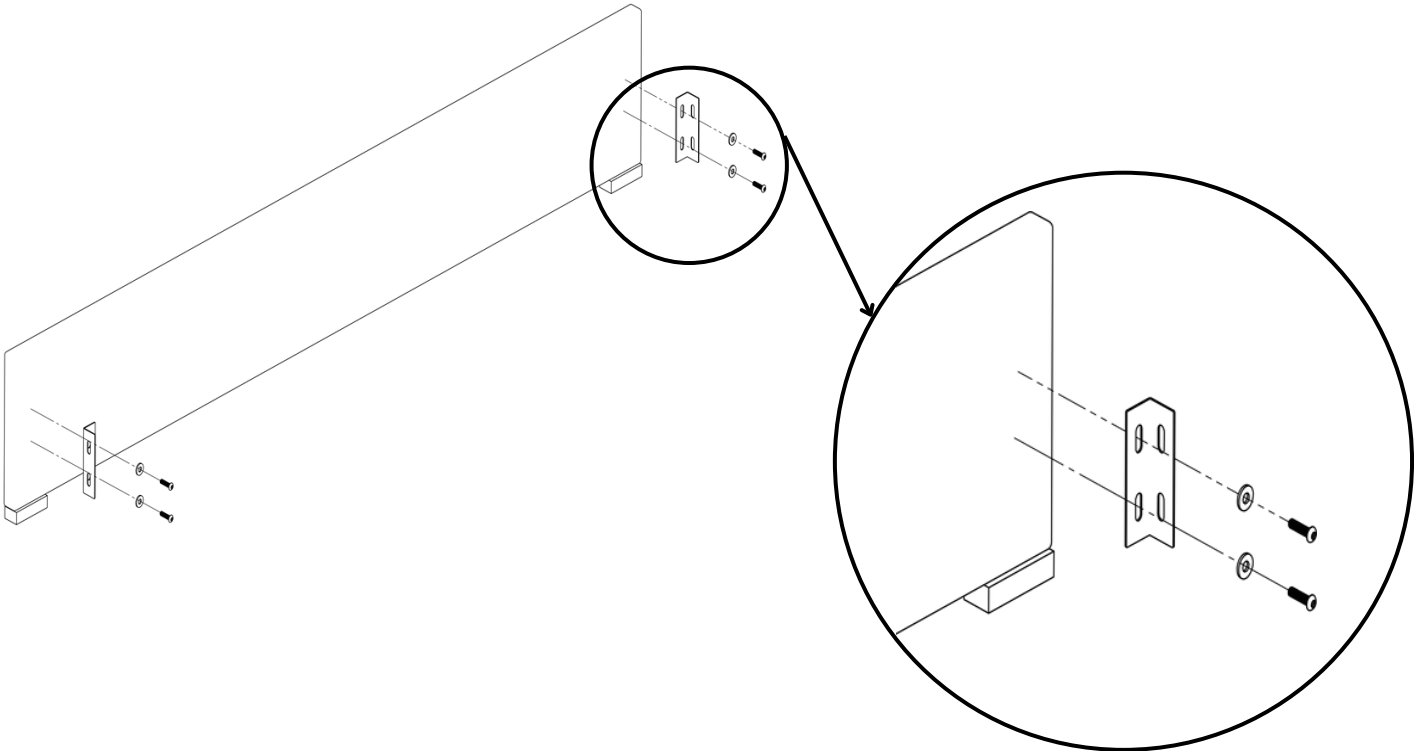

### STEP 2 – CONNECT FOOTBOARD AND SIDE RAILS

- Align the **L brackets** on the **footboard (B)** with the ends of the **side rails (C)**.
- Insert a **flat washer** and Allen **screw** into each hole, and tighten securely using the **Allen key**.

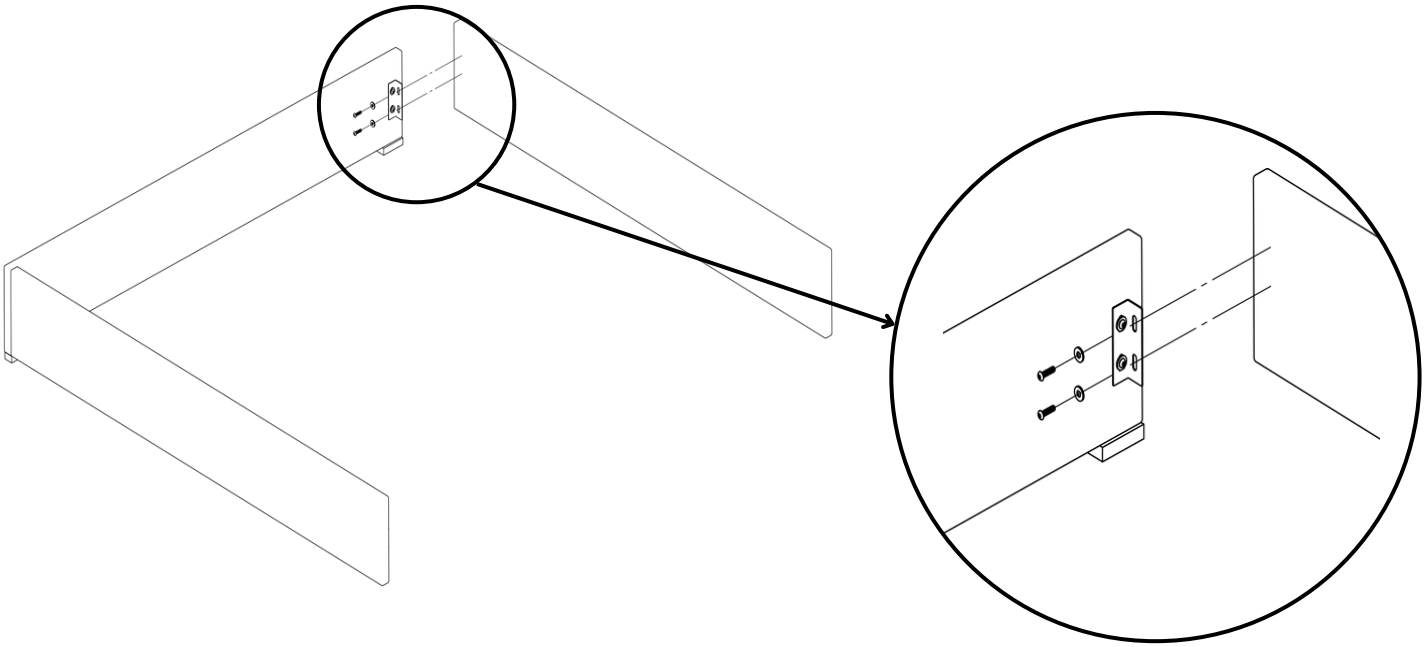

**STEP 3 – ATTACH BRACKETS TO SIDE RAILS**

- Place the **L brackets** on the inner ends of each **side rail (C)**.
- Secure each **L bracket** with a **flat washer** and Allen **screw** using the **Allen key**.

**Do not attach to the headboard yet — it must be assembled first.**

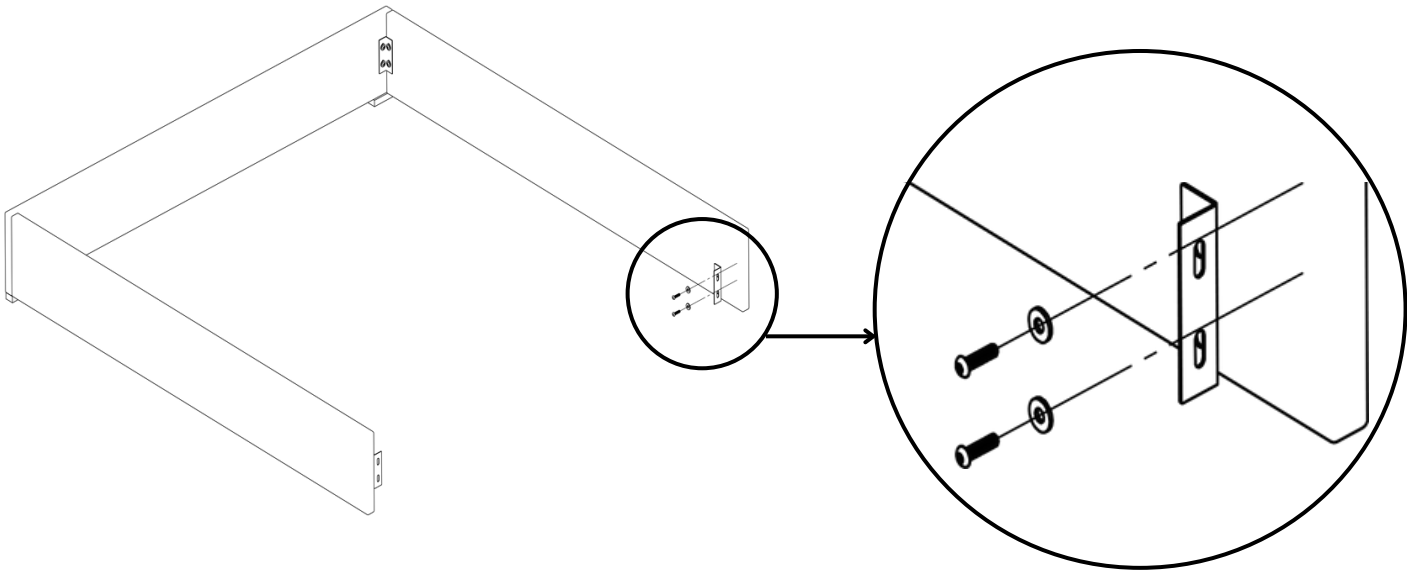

**STEP 4 – ASSEMBLE HEADBOARD AND WINGS**

**For 47" & 67" height:**

- Attach the **wings (E)** directly to the **headboard (A)** using **wing brackets**, **flat washers**, and **Allen screws**.

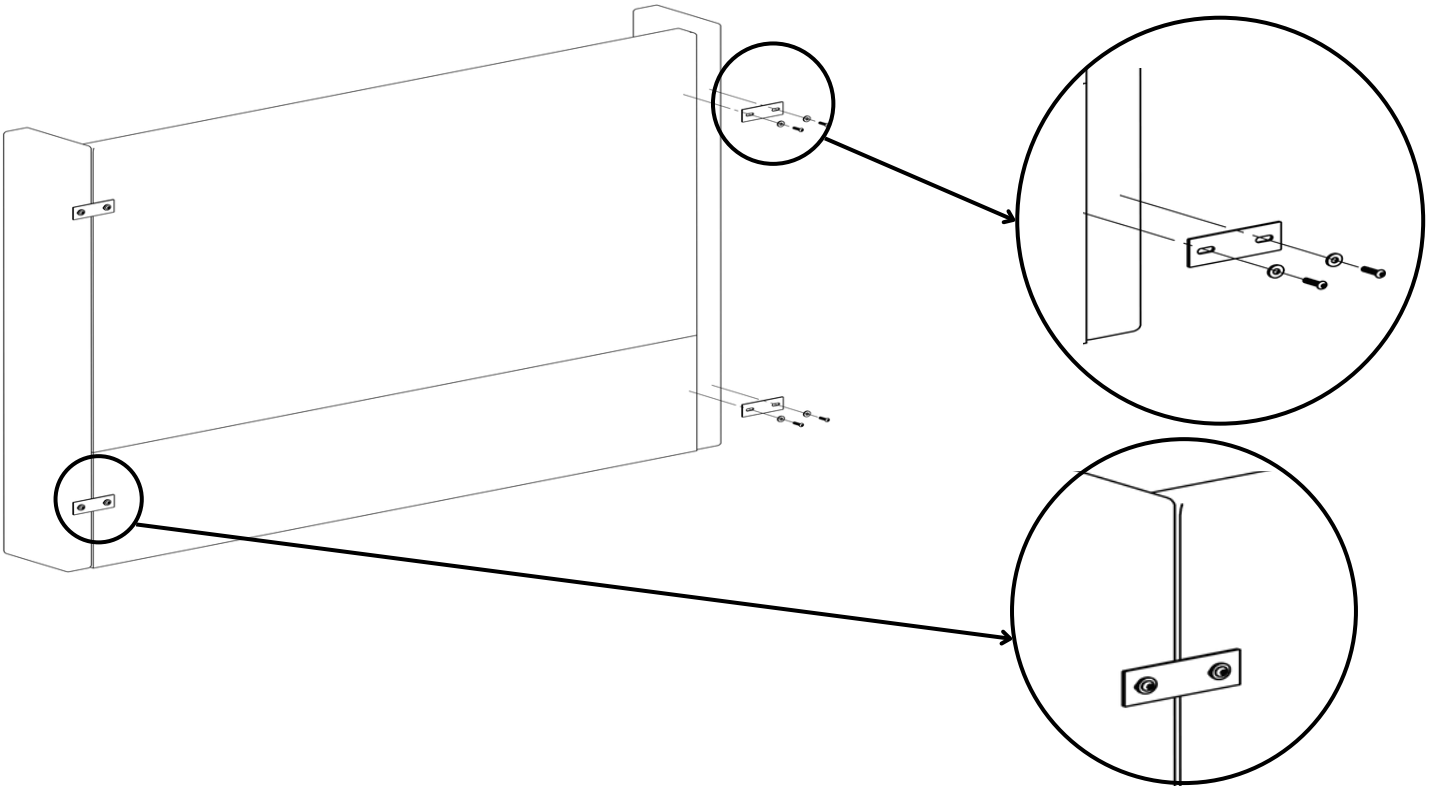

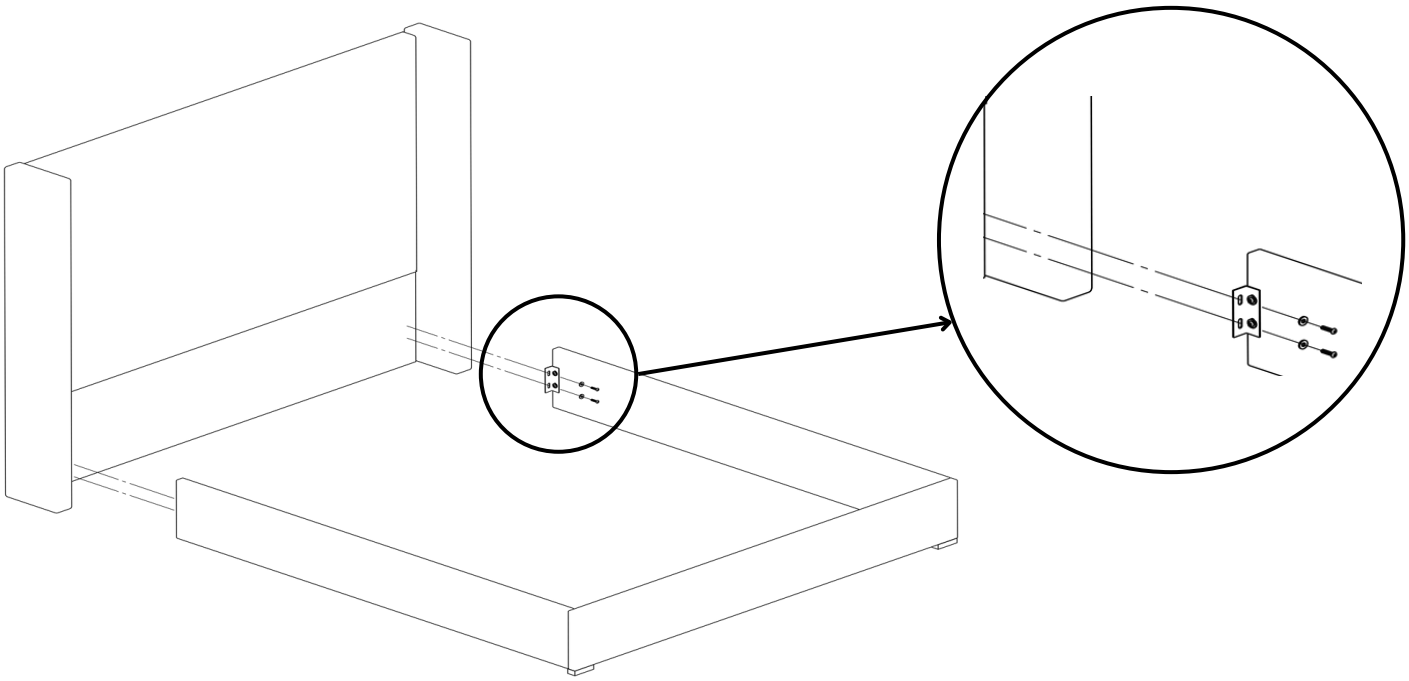

**STEP 5 – CONNECT HEADBOARD TO MAIN STRUCTURE**

- Align the ends of the **side rails (C)** with the assembled **headboard (A)**.
- Insert the Allen **screws** with **flat washers** into the **L brackets** and tighten with the **Allen key**. Ensure all joints are flush and secure.

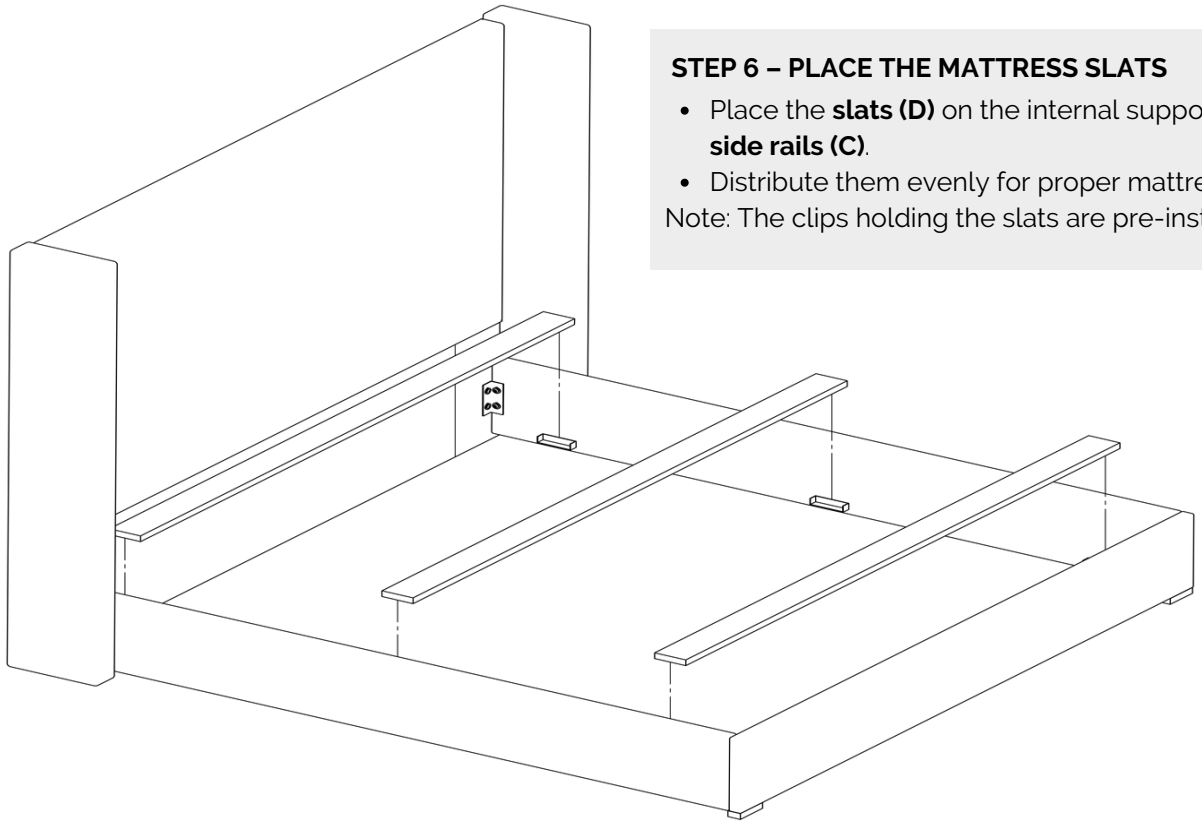

**STEP 6 – PLACE THE MATTRESS SLATS**

- Place the **slats (D)** on the internal supports of the **side rails (C)**.
- Distribute them evenly for proper mattress support.

Note: The clips holding the slats are pre-installed.

**FOR ADJUSTABLE BEDS**

If using an adjustable base:

Remove the 6 brackets holding the slats using a screwdriver.

Do not use the **slats (D)**.