
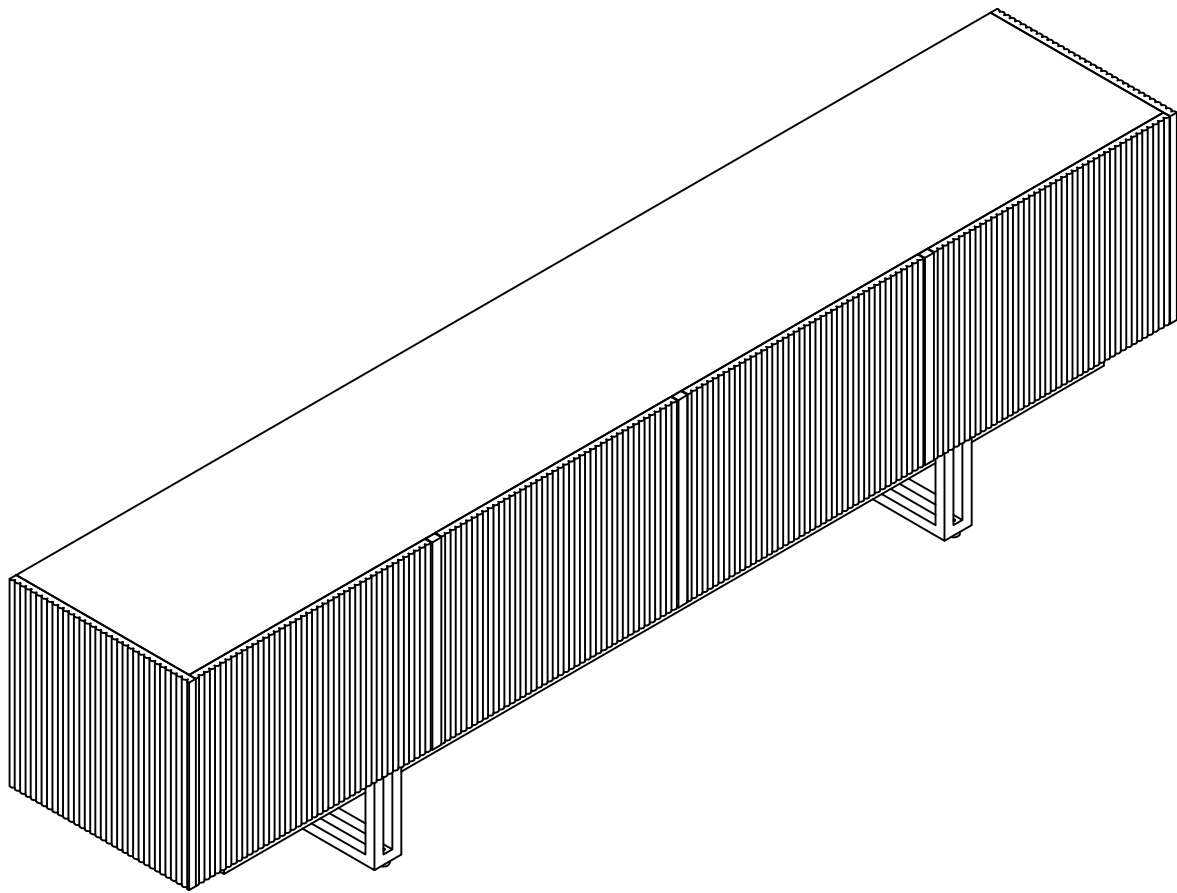
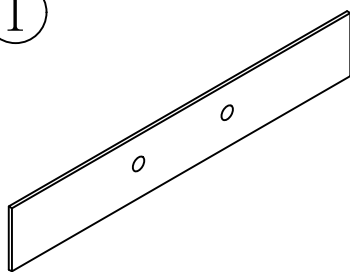
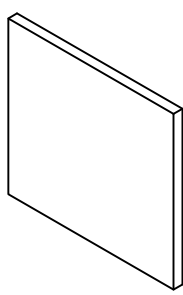
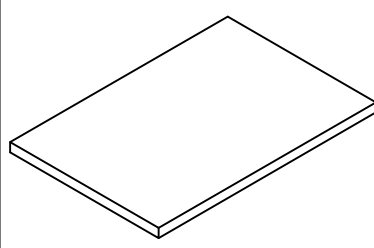
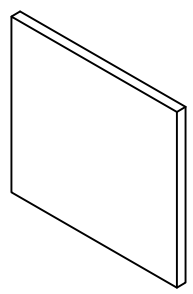
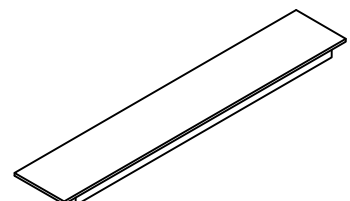
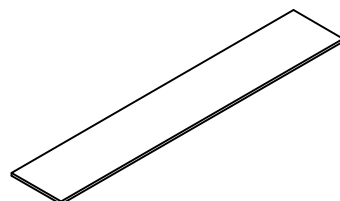
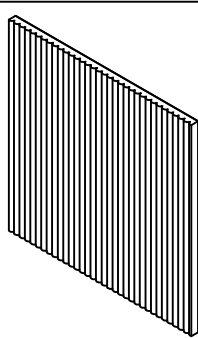
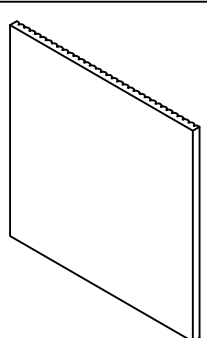
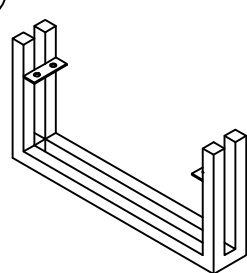

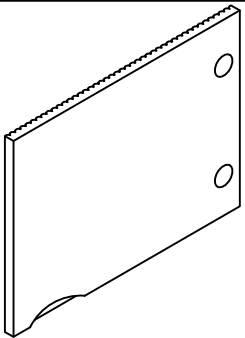


Assembly Guide

TV stand







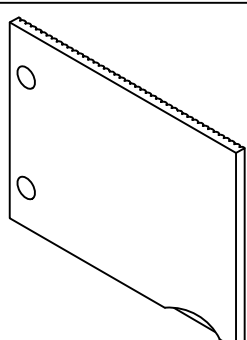


PARTS LIST

①		②		③		④	
back panel=1		left right inside side panel=2		laminate=2		middle side panel=1	
⑤		⑥		⑦		⑧	
bottom panel=1		top panel=1		left panel=1		right panel=1	
⑨		⑩		⑪		⑫	
foot rack=2		left right inside strip=2		middle strip=1		left door=2	
⑬							
right door=2							


Tips: Do not throw away packing materials until assembly is complete for small parts may come loose inside the carton during shipment. If parts are missing, please contact us. Assemble this item on a soft surface, such as carpet to protect the finish.

HARDWARE LIST

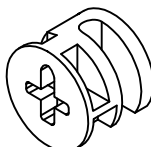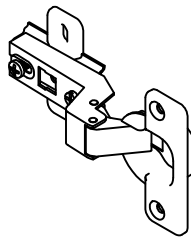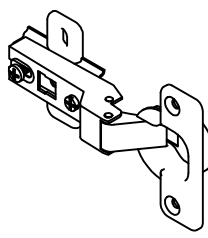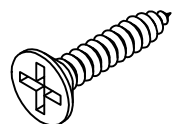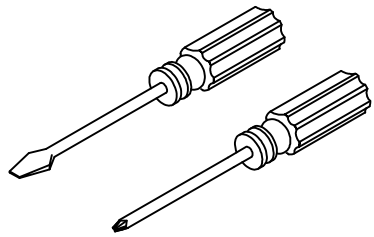(A) 	(B) 	(C) 	(D) 	(G) 
M6*40 3 in 1 rods=58	Ø15*12 3 in 1 camlocks=58	Large curved door hinge=4	Middle bend door hinge=4	3.5*14 self-tapping screws=32
(F) 	 phillips head screw driver required for assemble---not include			
M6*10 rods=8				

Step 1


Noted:The size of panel ② and ④ here is 2.17 inches.

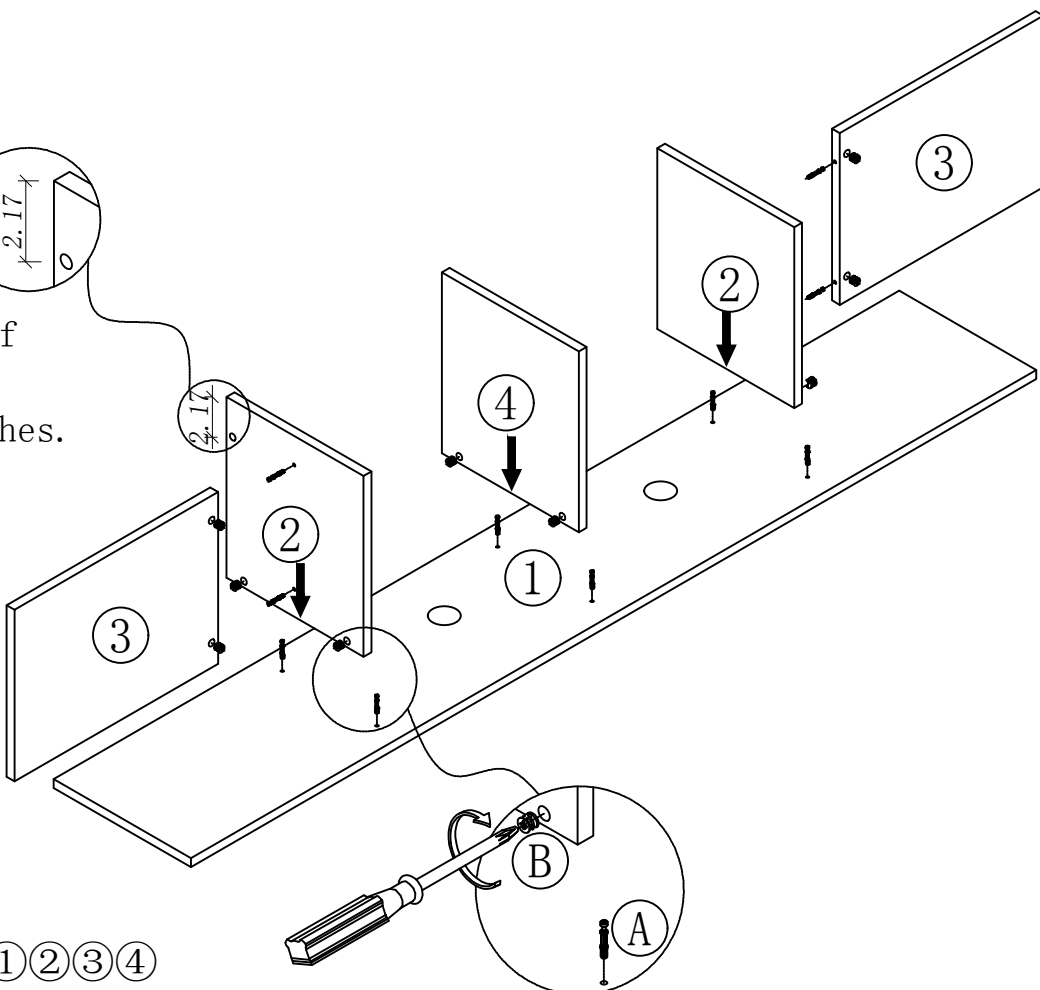

Connect panel ①②③④ with 10 pcs(A) and 10 pcs(B).


Step 2

Connect panel ①②③④⑤⑥⑦⑧⑩⑪ with 48 pcs(A) and 48 pcs(B).

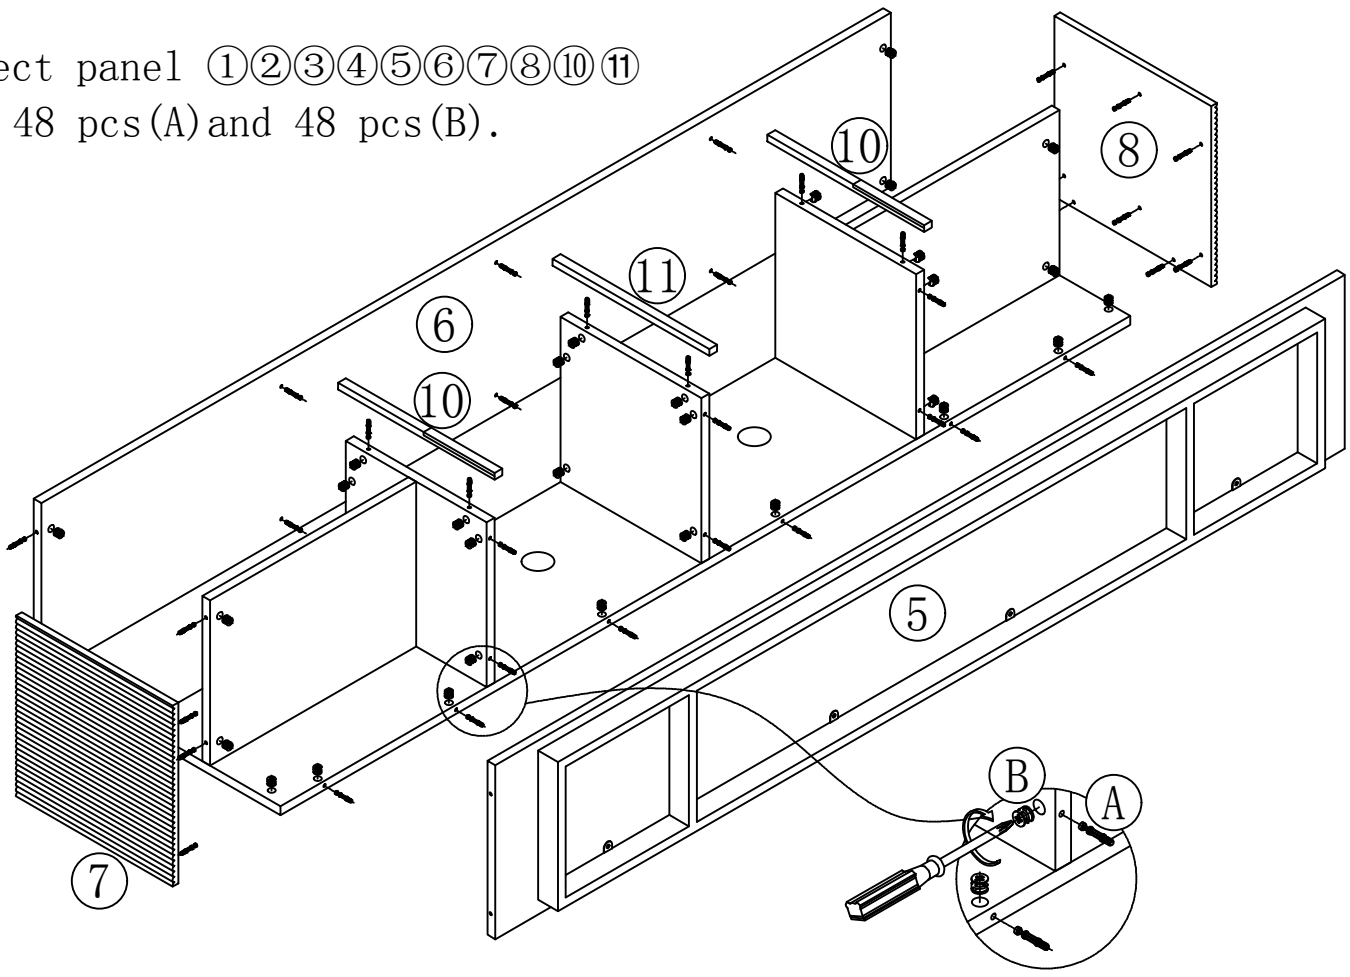


Step 3


Install ⑫⑬ on the cabinet with 4 pcs(C), 4 pcs(D) and 32 pcs(G).

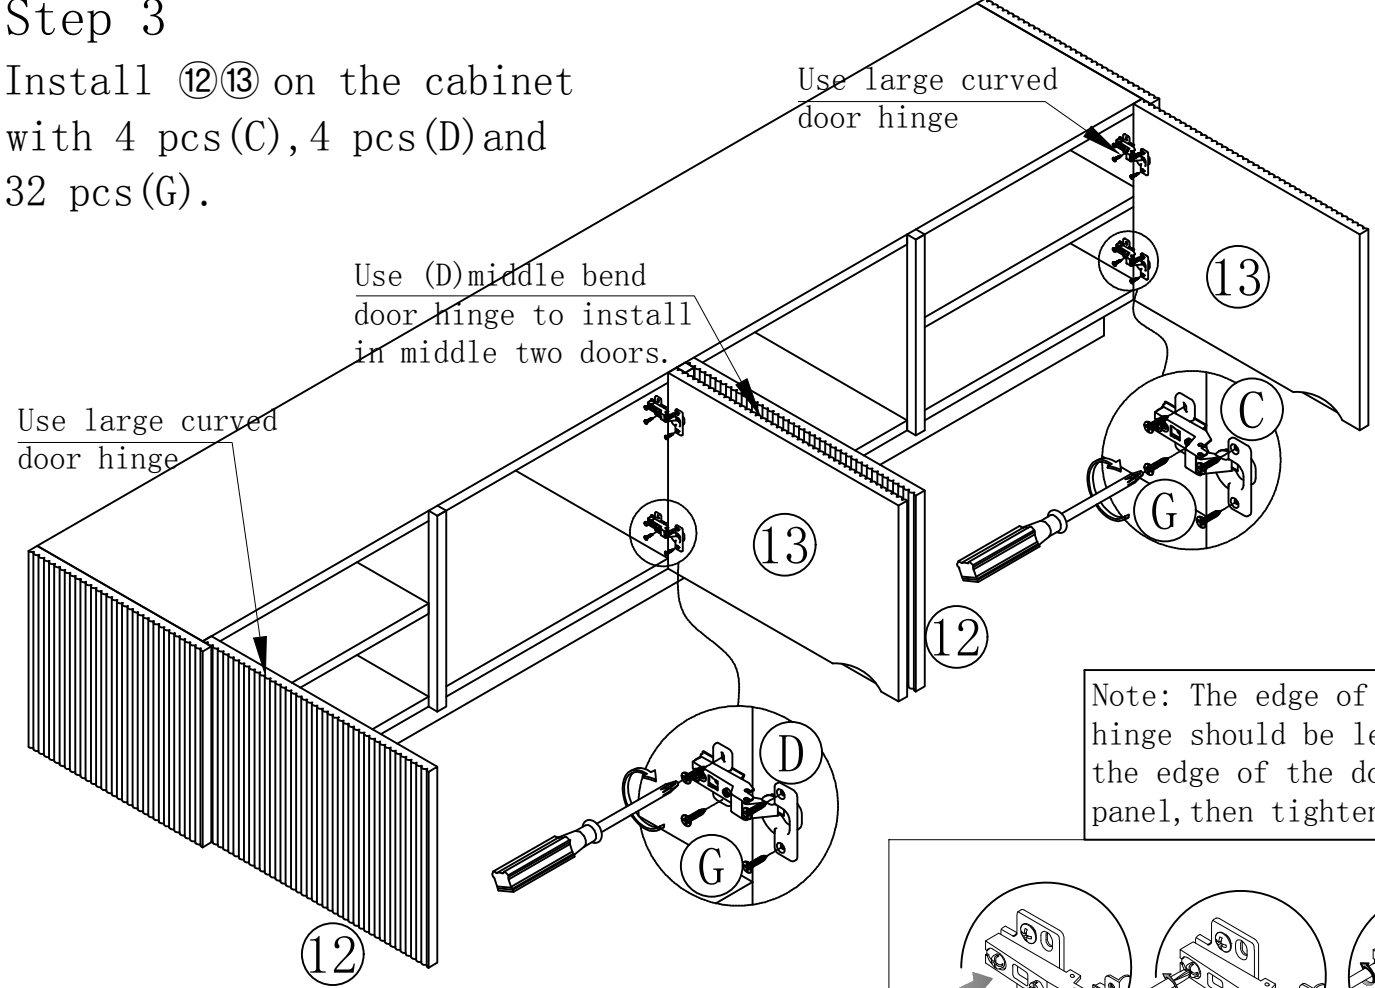

Note: The edge of the door hinge should be level with the edge of the door panel, then tighten up.

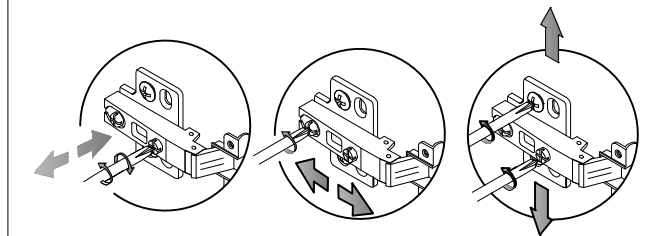

Step 4

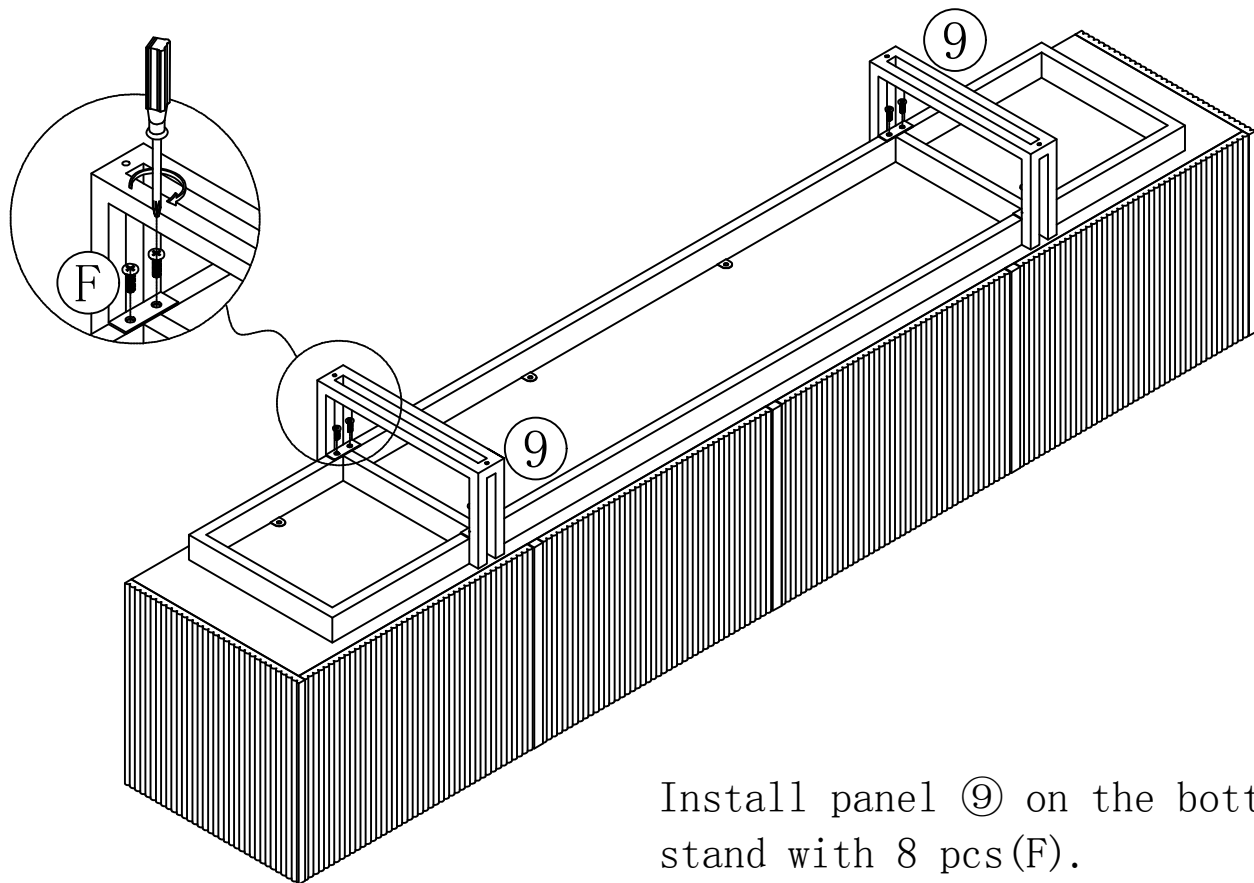

Install panel ⑨ on the bottom of tv stand with 8 pcs (F).

Finished

