
Loft Bed

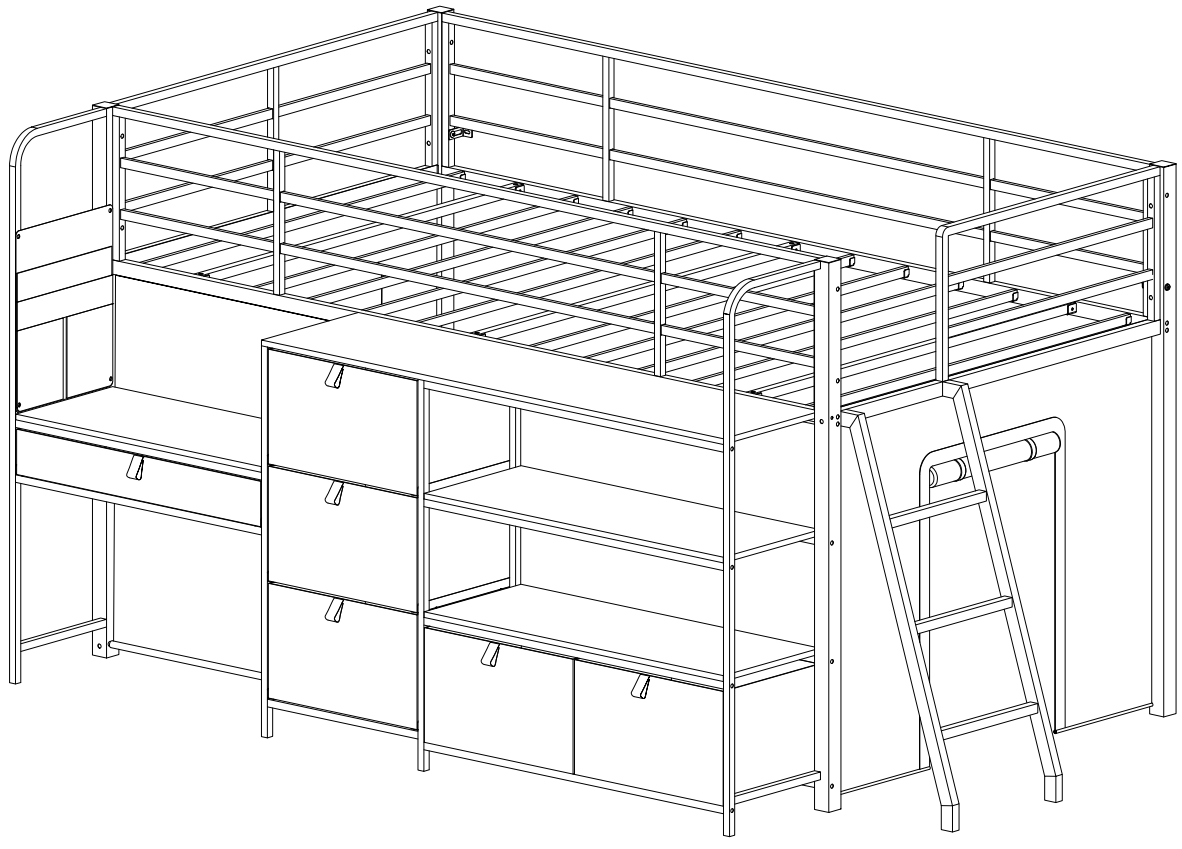


DJ505019-1
DJ505019-2
DJ505019-3

Version: 3.0


Package Contents

Plates and iron components	Assembly tool kit	Instruction manual


Precautions ⚠

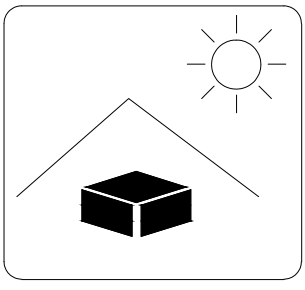


1.Avoid long-term direct sunlight exposure

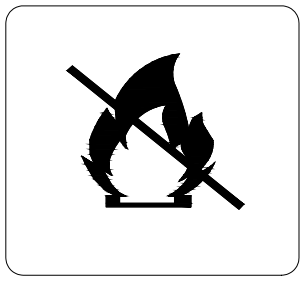


2.Stay away from fire

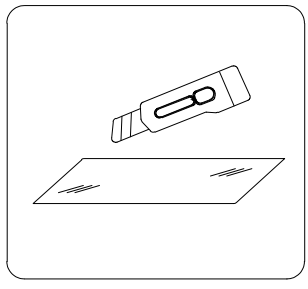


3.Keep away from sharp objects

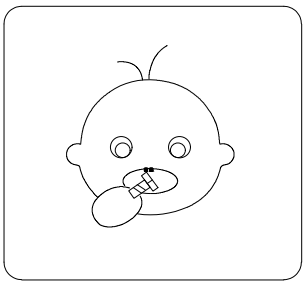


4.Keep infants/children away from assembly parts to avoid choking and suffocation.

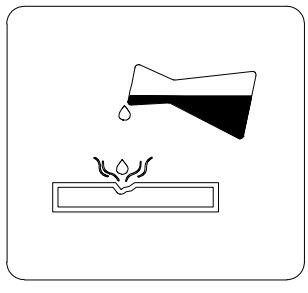


5.Keep away from corrosive substances

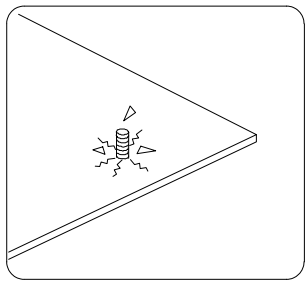


6.Please use the correct screws, otherwise the plate will be damaged.

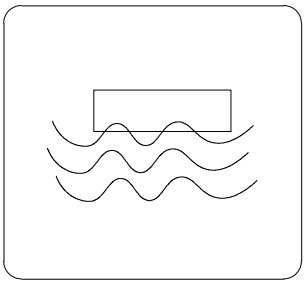

7.Prevent objects from being damaged by immersion in water

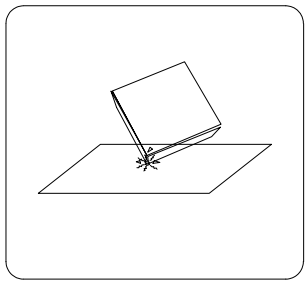

8.Prevent object collision and damage

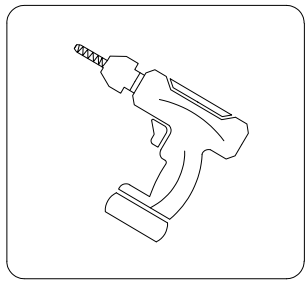


9.An electric drill is recommended for installation


Problems You May Encounter

PART	PROBLEM	SOLUTION
whole Product	Parts are missing, defective or having wrong parts in package.	You can contact us and we will get back to you within 24 hours
	Having issue(s) while reading the instruction or completing the assembly.	Feel free to contact us and we will get back to you within 24 hours.
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it.We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.
Product Surface	Board Surface is broken, scratched or lack of some screw holes.	Feel free to contact us and we will get back to you within 24 hours.
	The screw holes on the wooden board and other wooden boards are not aligned.	1.Please tighten the screws on the board by 70% , do not tighten completely. 2. Adjust the wooden board and board.Until the holes are arranged neatly, then tighten all screws
	Desktop misalignment and unevenness	1.Please tighten the screws connecting the table board to the elevator by 70%, do not tighten them completely. 2.Adjust to a flat and aligned desktop, then tighten the screws. 3.If your problem still can't be solved, please feel free to contact us.
Metal acce-- ssories	Metal accessories are damaged, rusted, bent, and broken.	Feel free to contact us and we will get back to you within 24 hours.
	The table is unstable after being assembled.	1.Check if the screws are tightened. 2.Read throughout the manual, check if there are any parts installed incorrectly or some parts are missed to be installed. 3.If the problem still can't be solved, please feel free to contact us.
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it.We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.


PARTS LIST

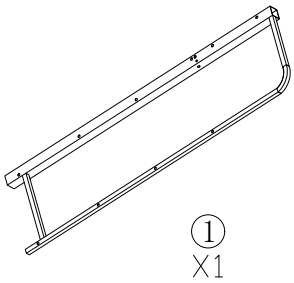


① X1

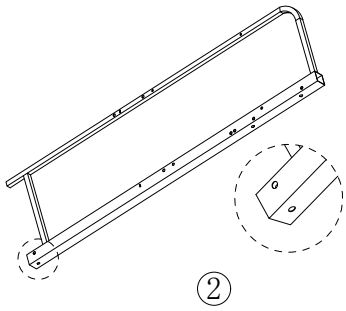


② X1

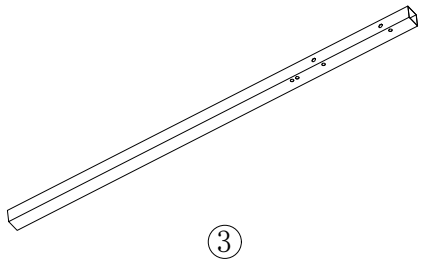


③ X1

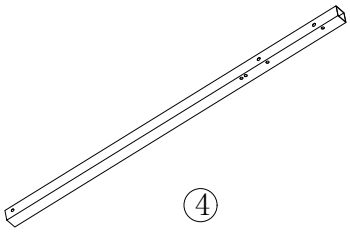


④ X1

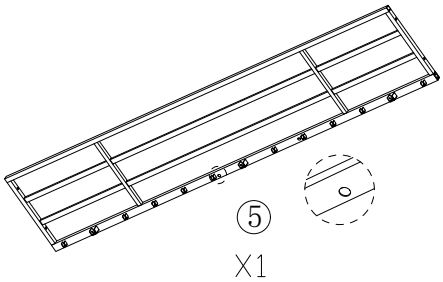


⑤ X1

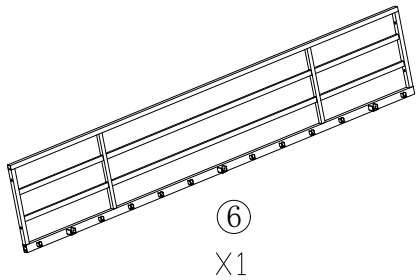


⑥ X1

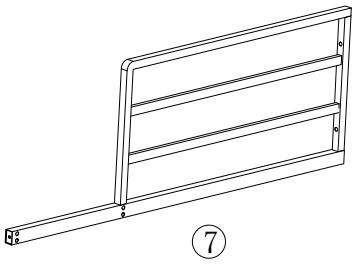


⑦ X1

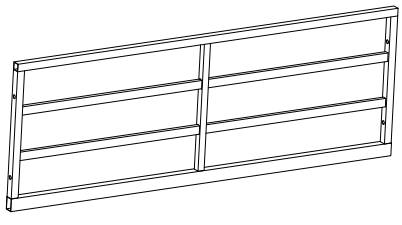


⑧ X1

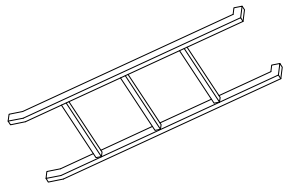


⑨ X1

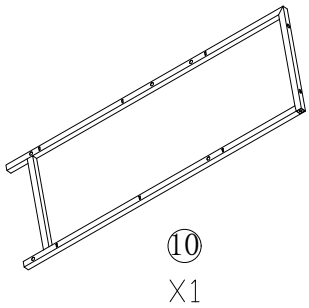


⑩ X1

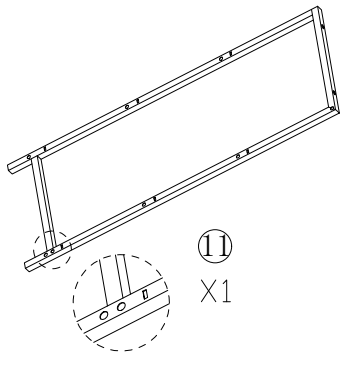


⑪ X1

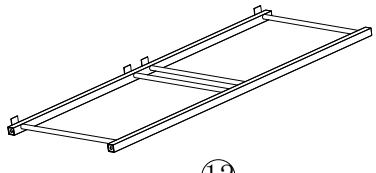


⑫ X1

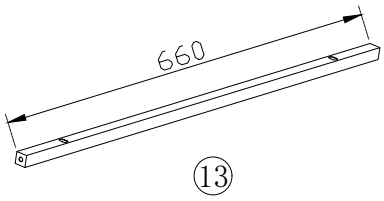


⑬ X2

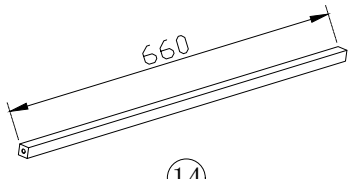


⑭ X1

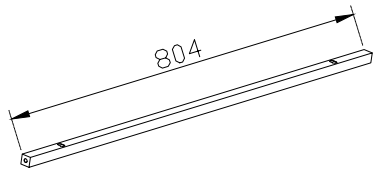


⑮ X5

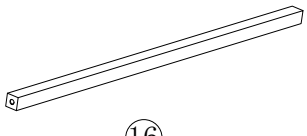

⑯ X1

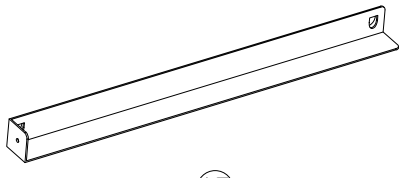


⑰ X4

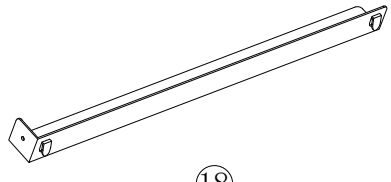


⑱ X4


PARTS LIST

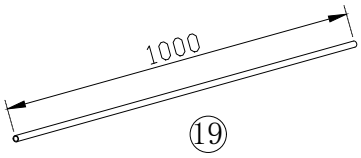


⑲
X1




⑳
X1

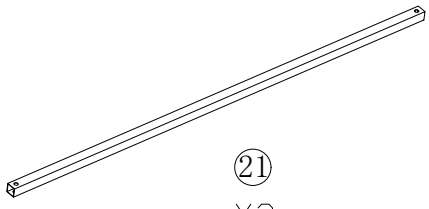


㉑
X3

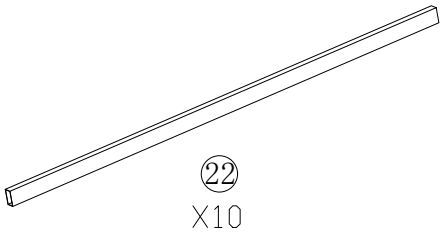


㉒
X10

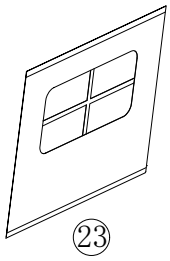


㉓
X1




㉔
X1

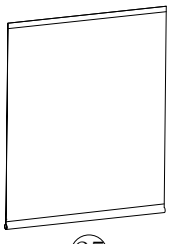


㉕
X1

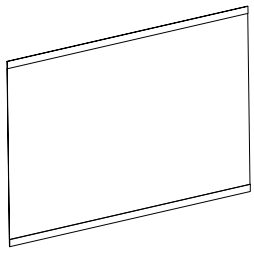


㉖
X1

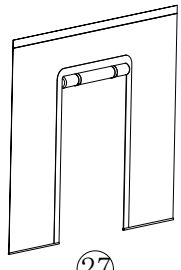


㉗
X1

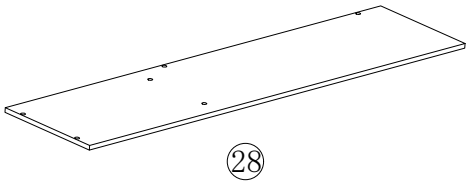


㉘
X1

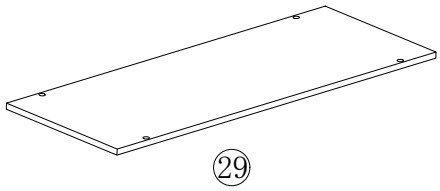


㉙
X1

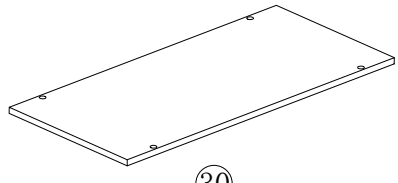


㉚
X2

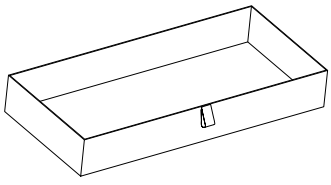


㉛
X1

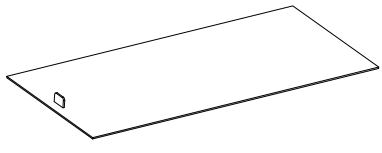

㉜
X1

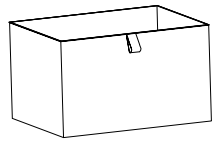


㉝
X5

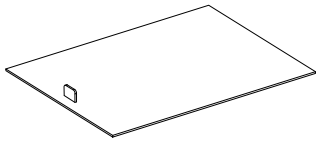


㉞
X5


HARDWARE LIST




A
M6x60mm
x16+1 pcs




B
M6x50mm
x8+1 pcs




C
M6x40mm
x31+2 pcs




D
M5x58mm
x1 pc




E
M6x25mm
x24+2pcs




F
M6x12mm
x4+1pcs




G
M6x17mm
x8+1 pcs




H
Ø13mm
x16+2 pcs

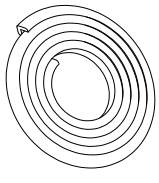


I 1M
x1 pc




J
x2 pcs

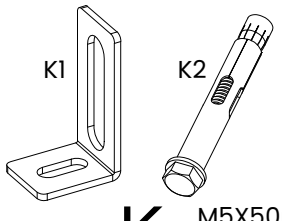


K
M5X50mm
x2 pcs

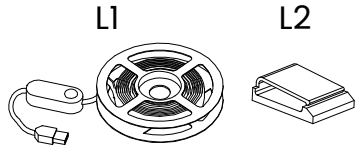

L
1.9M
X4
x1

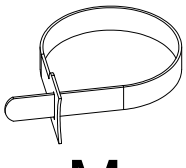

M
x3

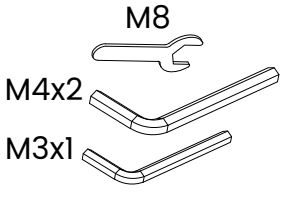


N
x1

Note:

1.Should be assembled on flat ground to keep balance.


2. Before completing the installation, do not tighten the screws.

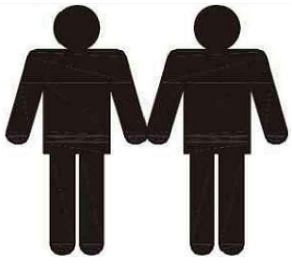

It needs at least
two people to install.




Before starting the assembly,
you must read the whole manual
and follow the instructions.

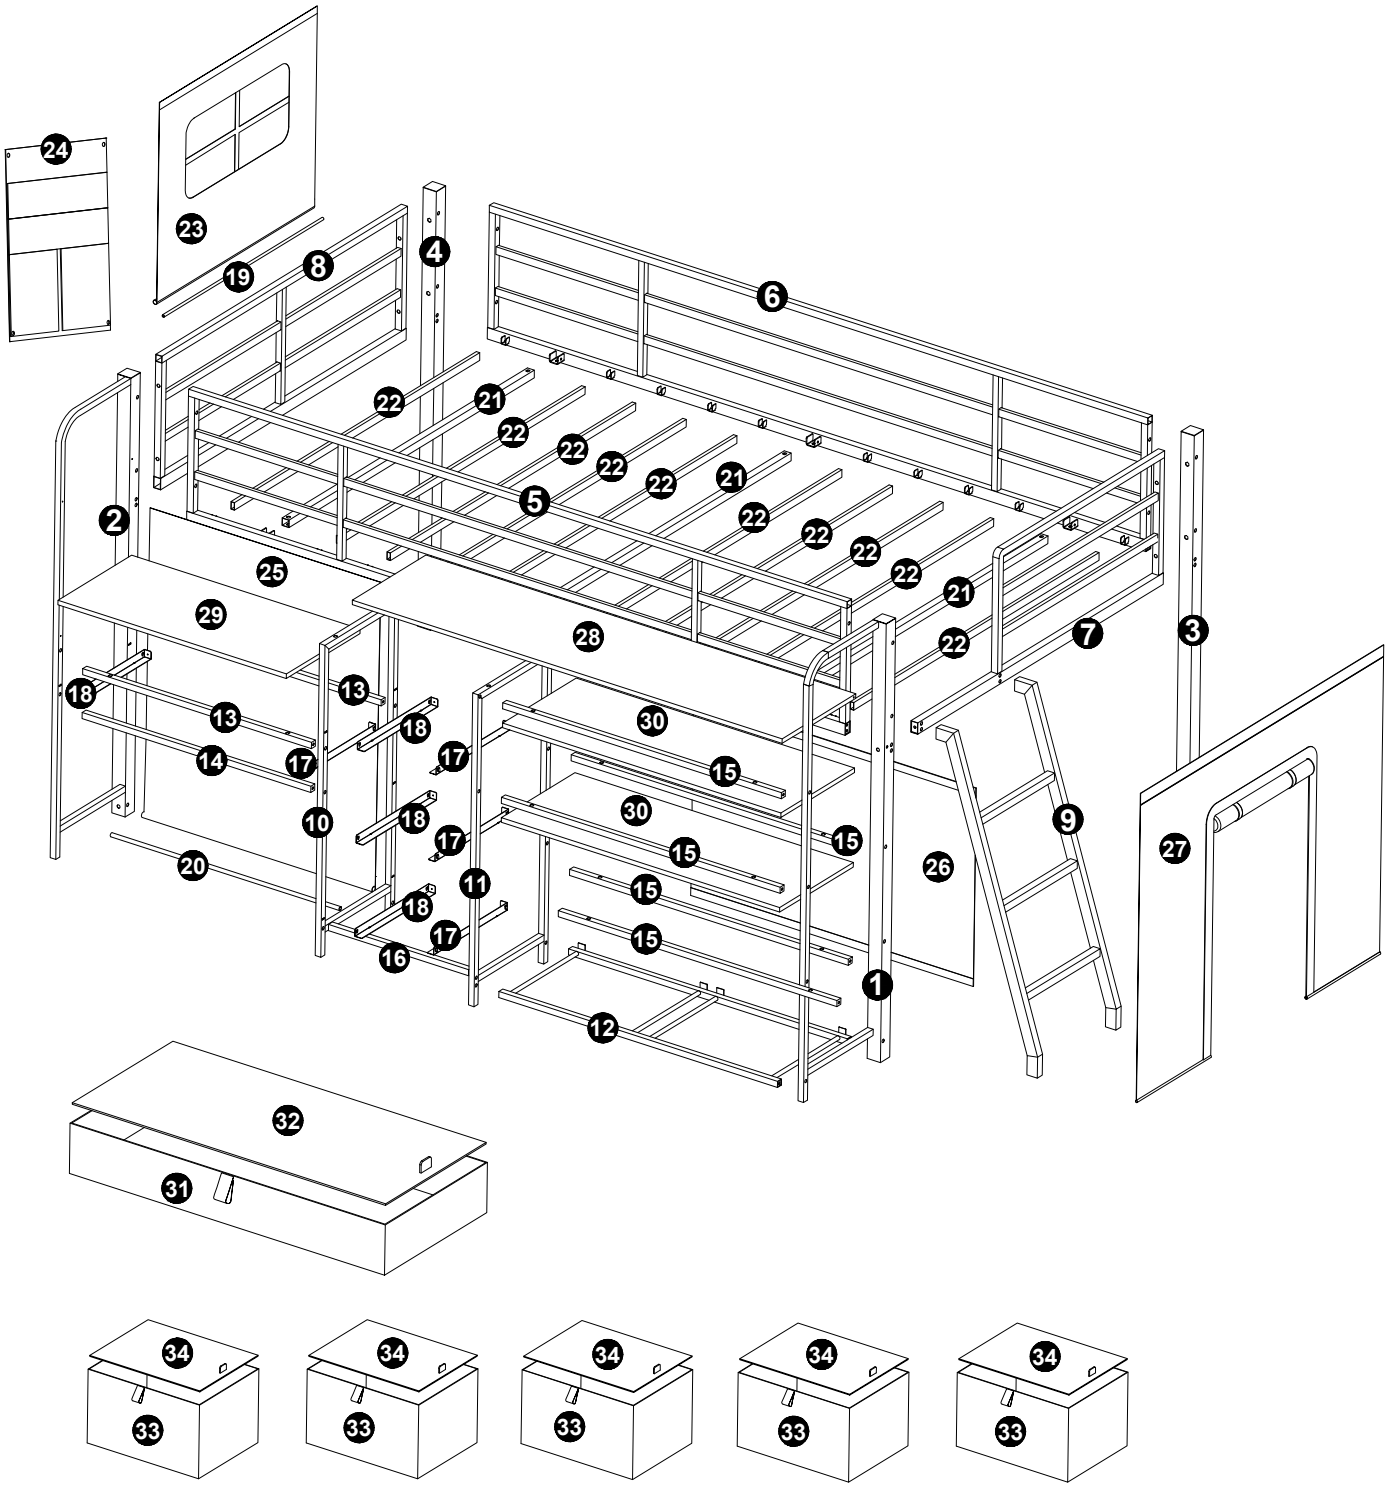

1

Be careful not to overtighten the screws.

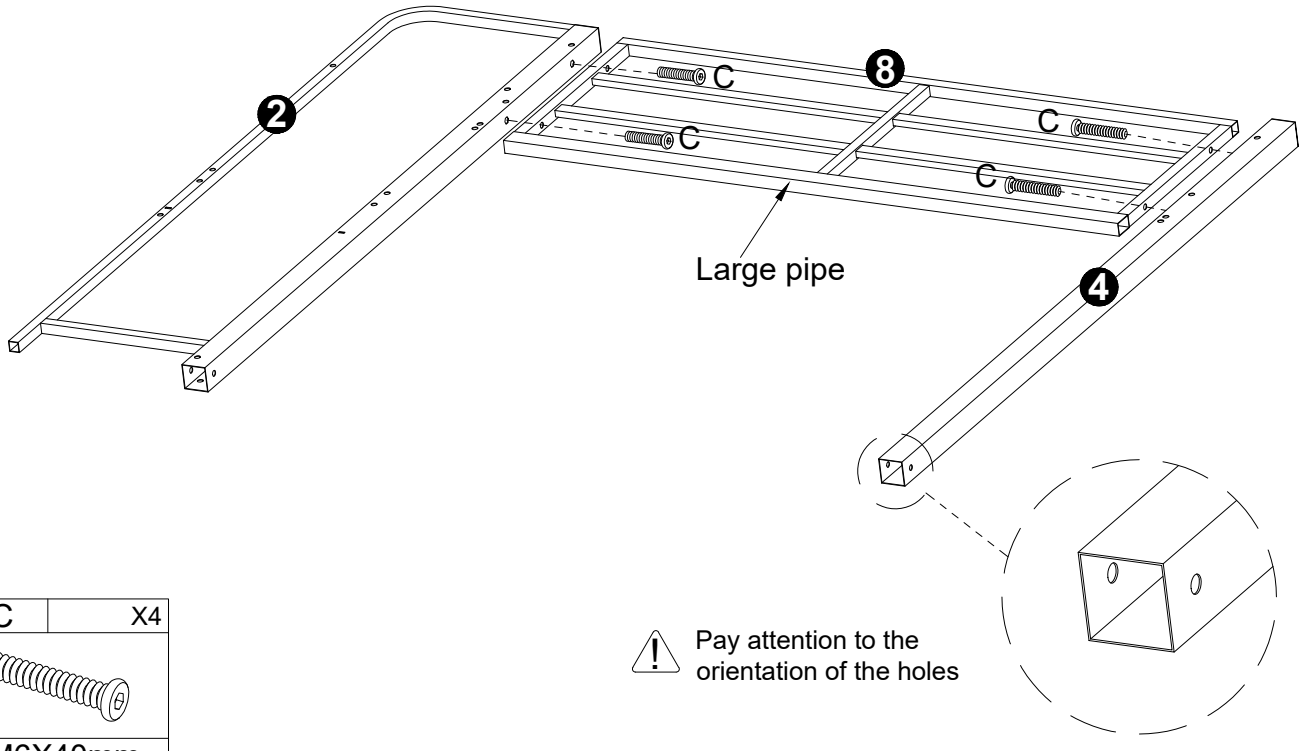



C	X4
M6X40mm	

Pay attention to the orientation of the holes

2


Be careful not to overtighten the screws.

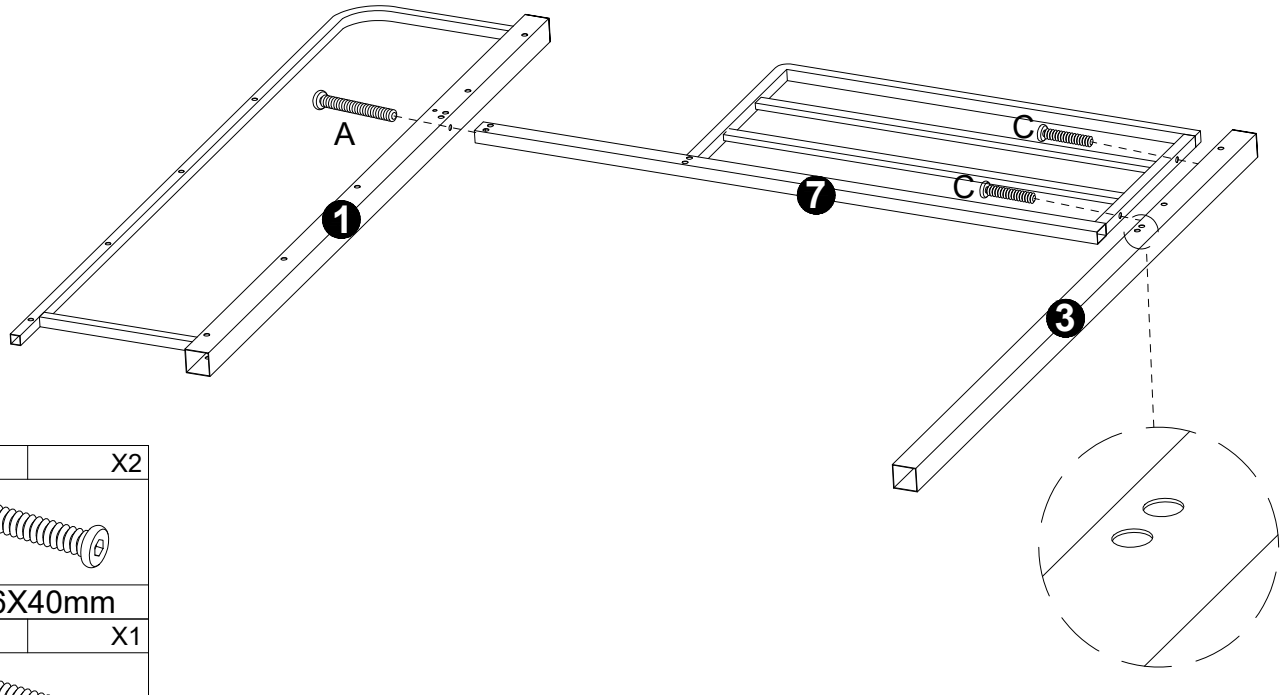

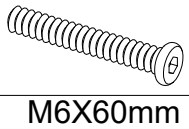
C	X2
M6X40mm	
A	X1
	
M6X60mm	


Pay attention to the orientation of the holes


3

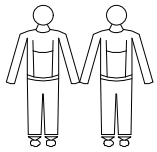

⚠ Be careful not to overtighten the screws.

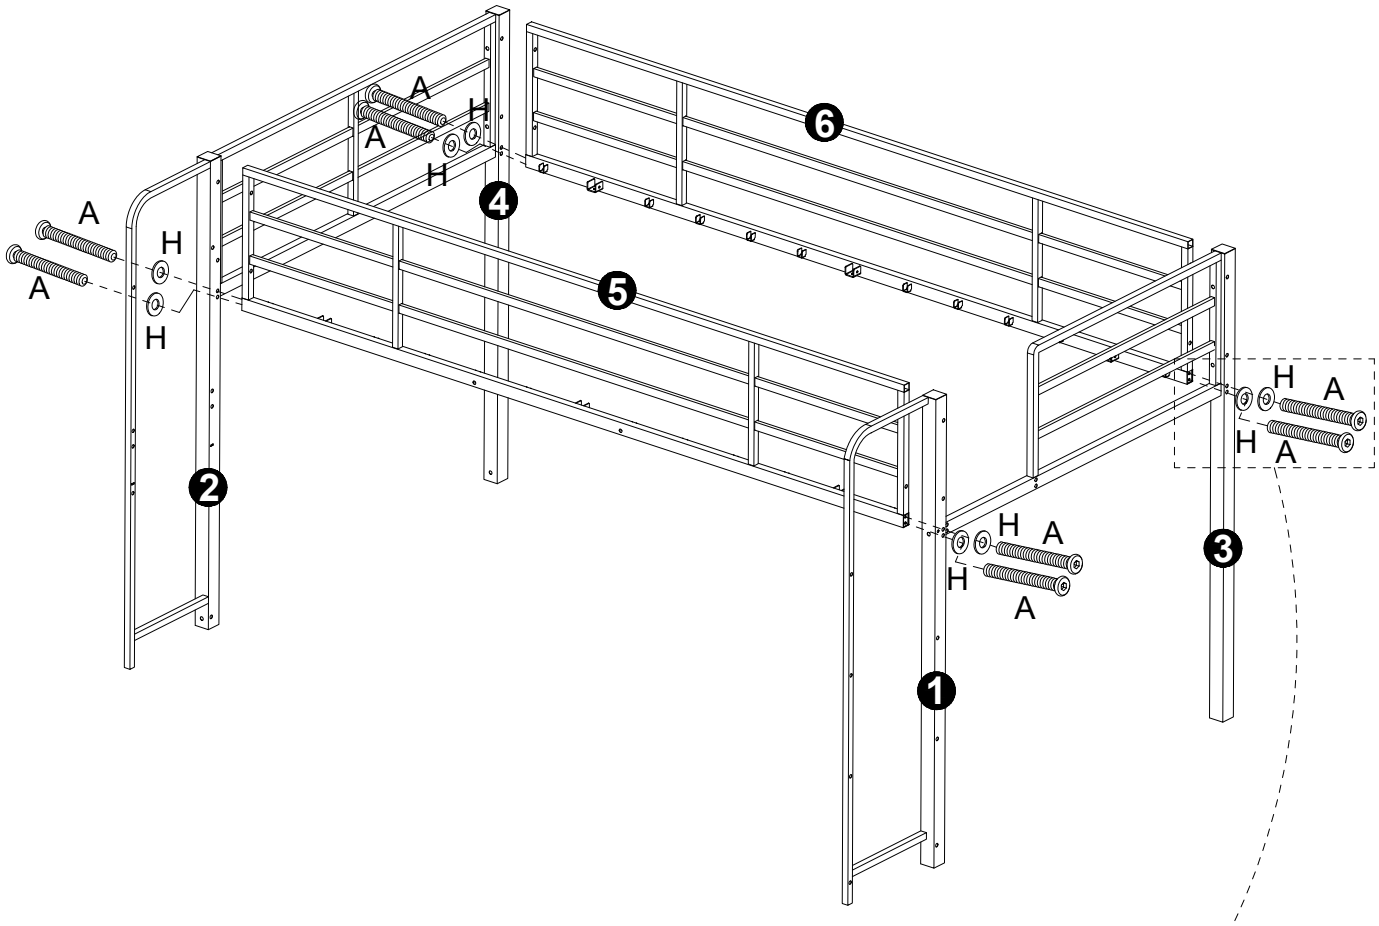


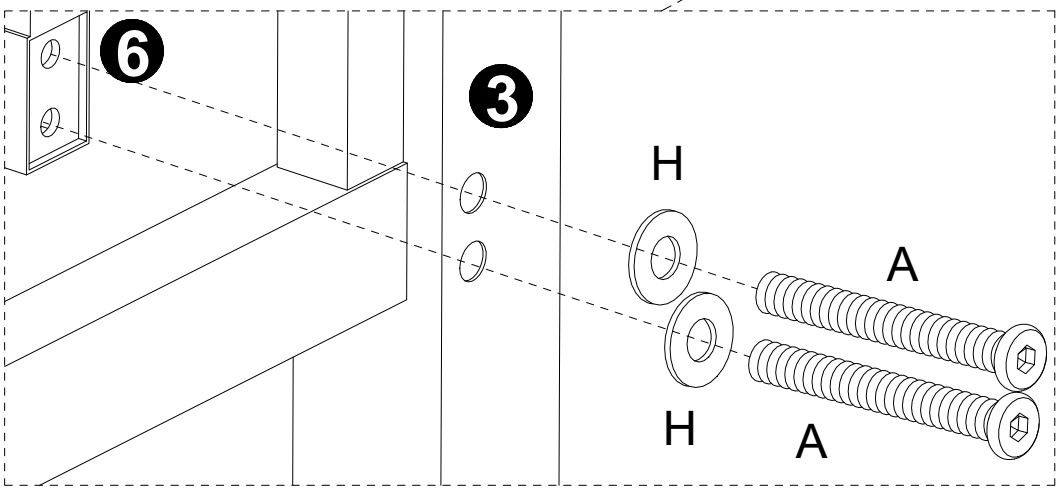





H	X8
	
A	X8
	
M6X60mm	

4


Be careful not to overtighten the screws.

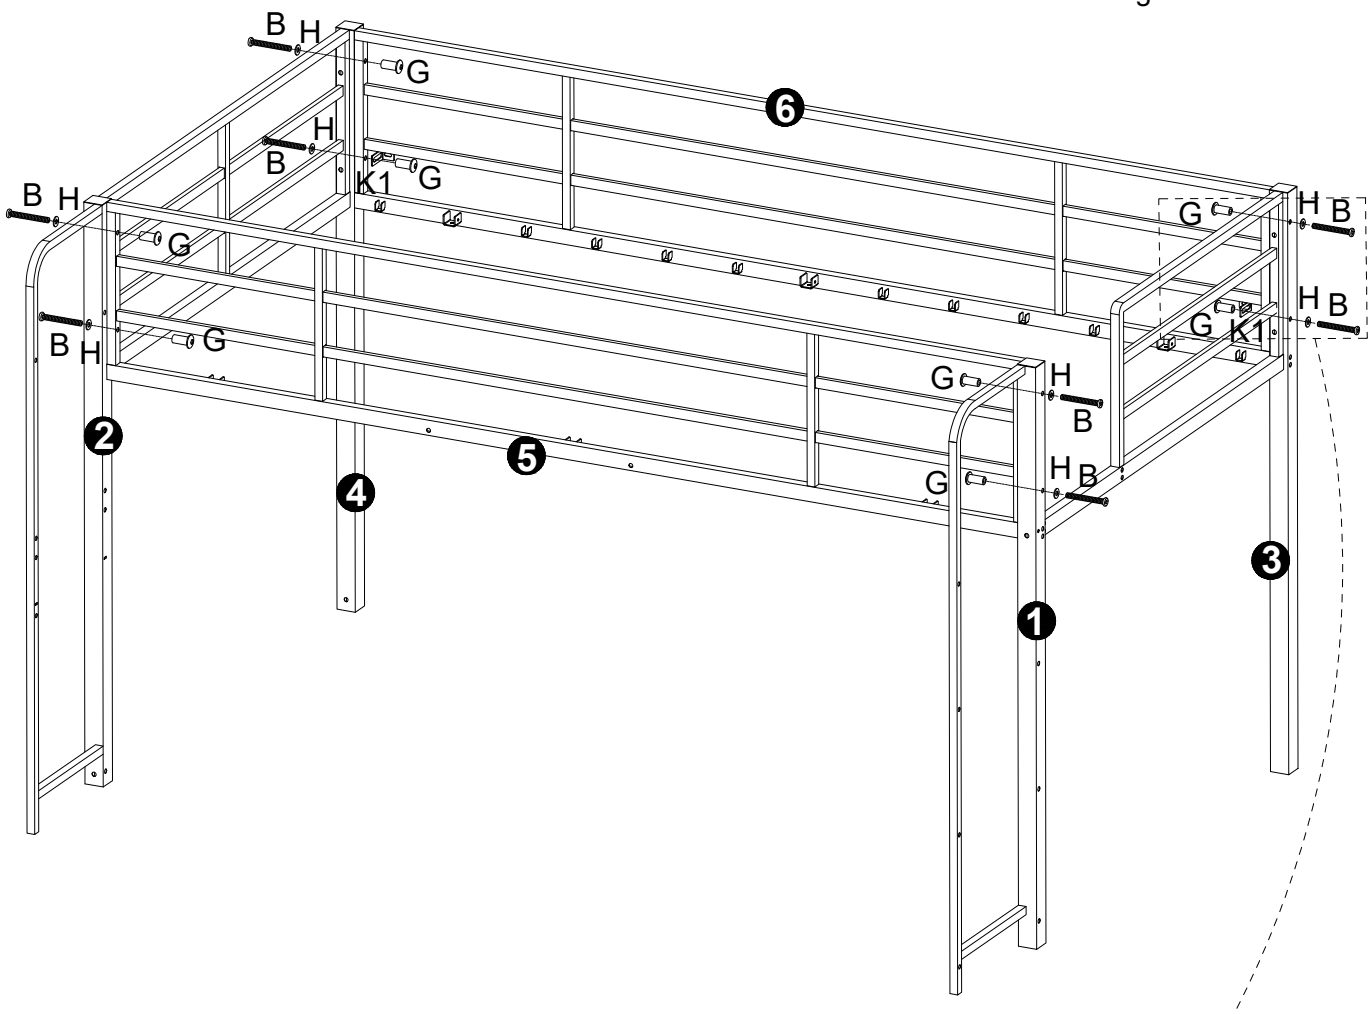


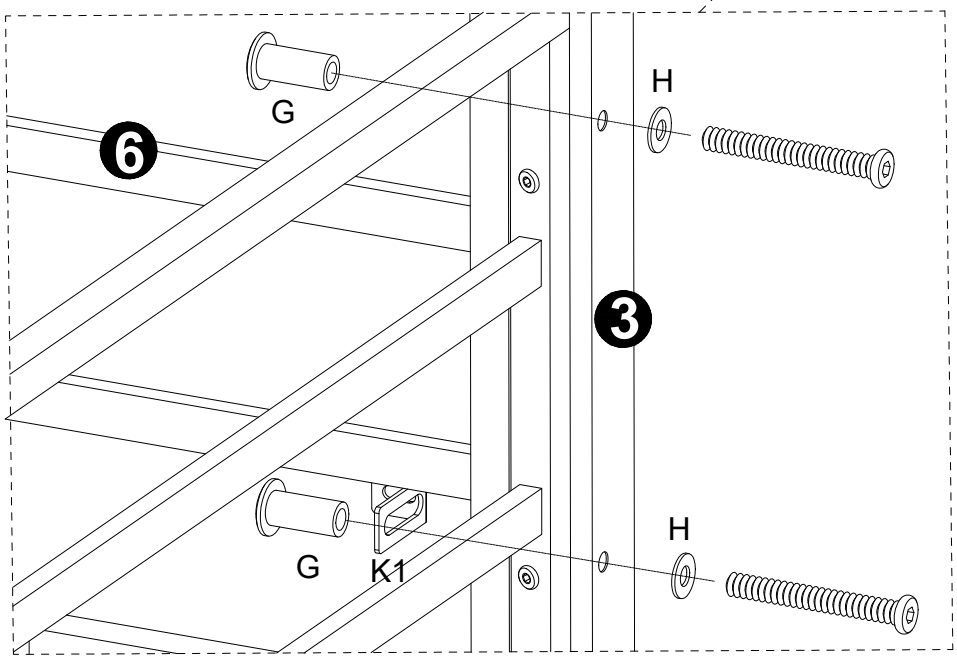


K1	X2
	
H	X8
	
G	X8
	
M6X17mm	
B	X8
	
M6X50mm	

5

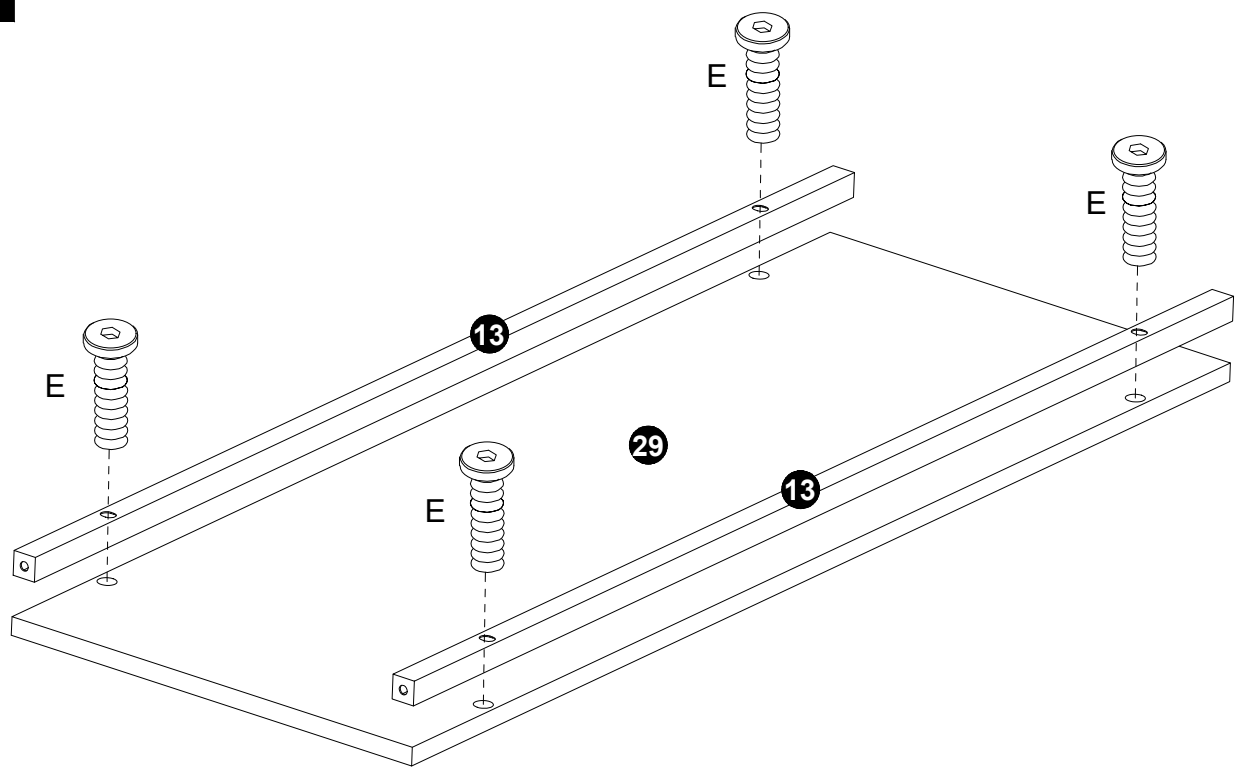


E	X4
	
M6X25mm	


6

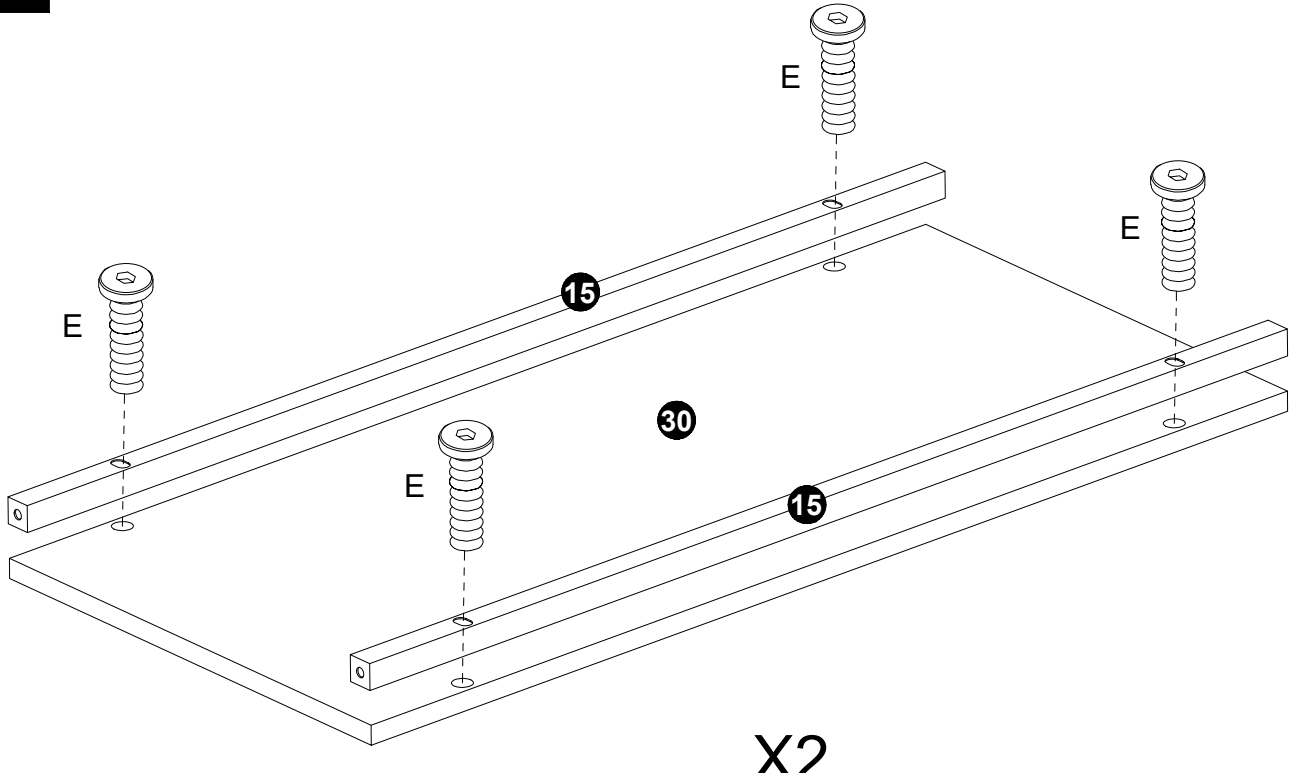

X2

E	X8
	
M6X25mm	


7

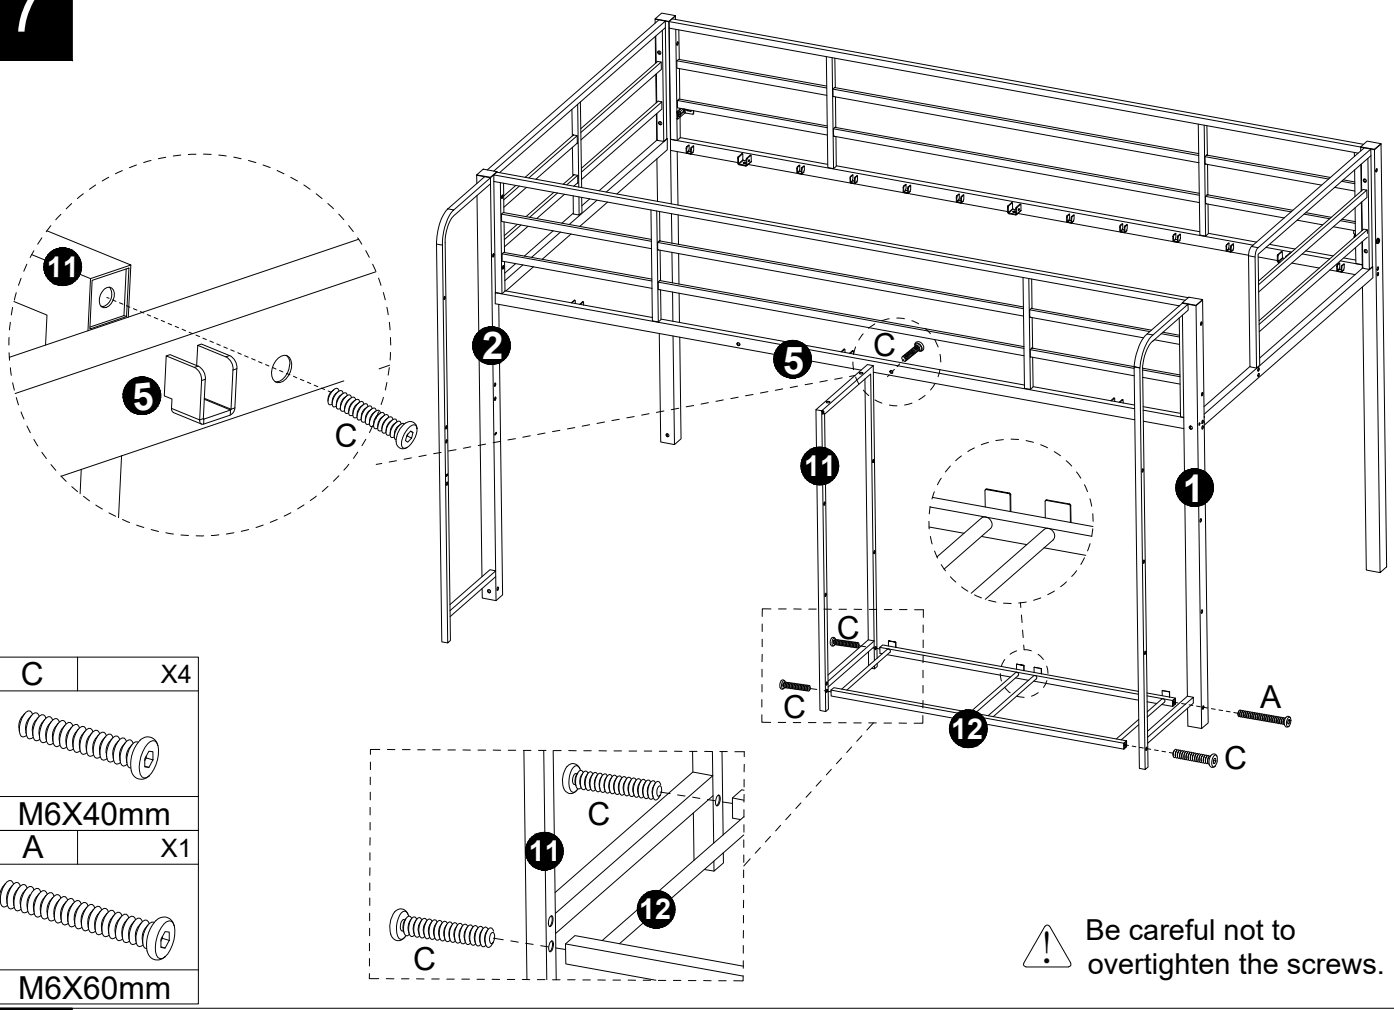

C	X4
M6X40mm	
A	X1
M6X60mm	

⚠ Be careful not to overtighten the screws.

8

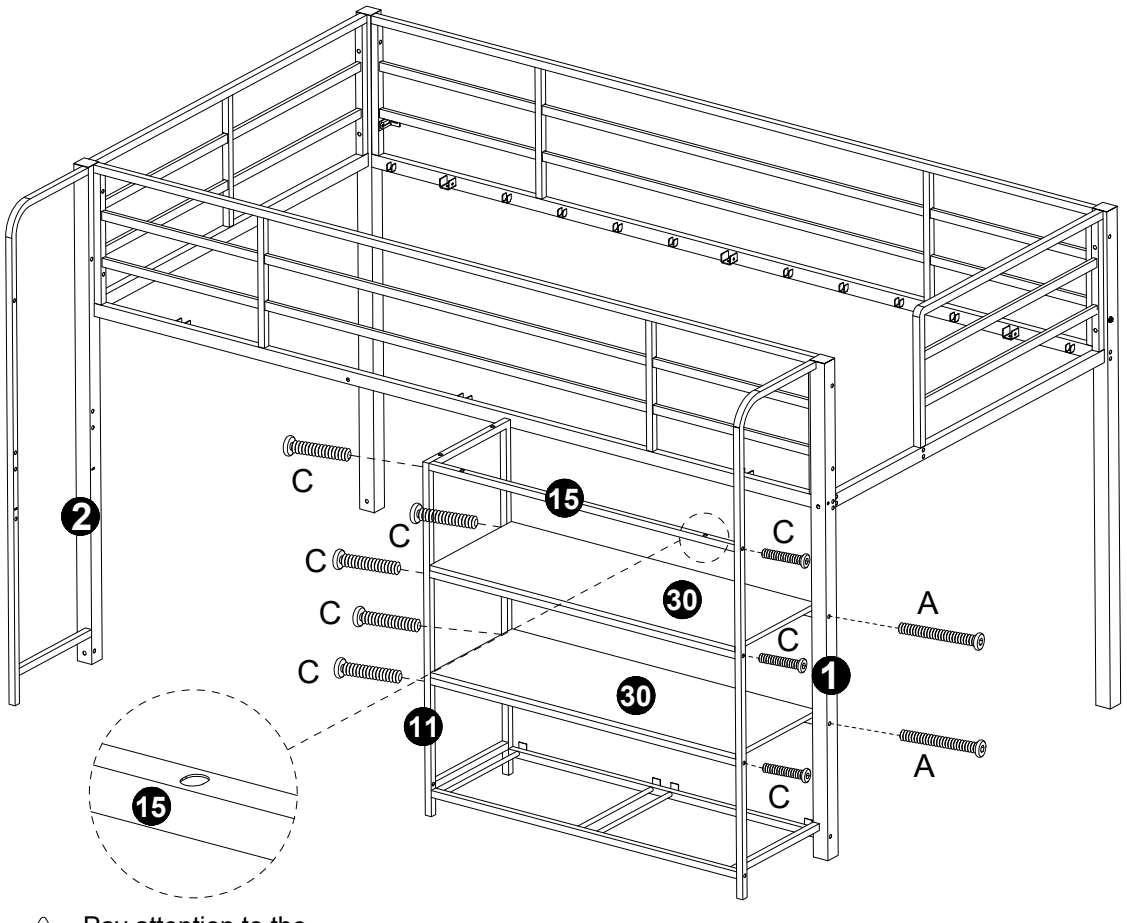


C	X8
M6X40mm	
A	X2
M6X60mm	


⚠ Pay attention to the orientation of the holes

⚠ Be careful not to overtighten the screws.

9


⚠ Be careful not to overtighten the screws.

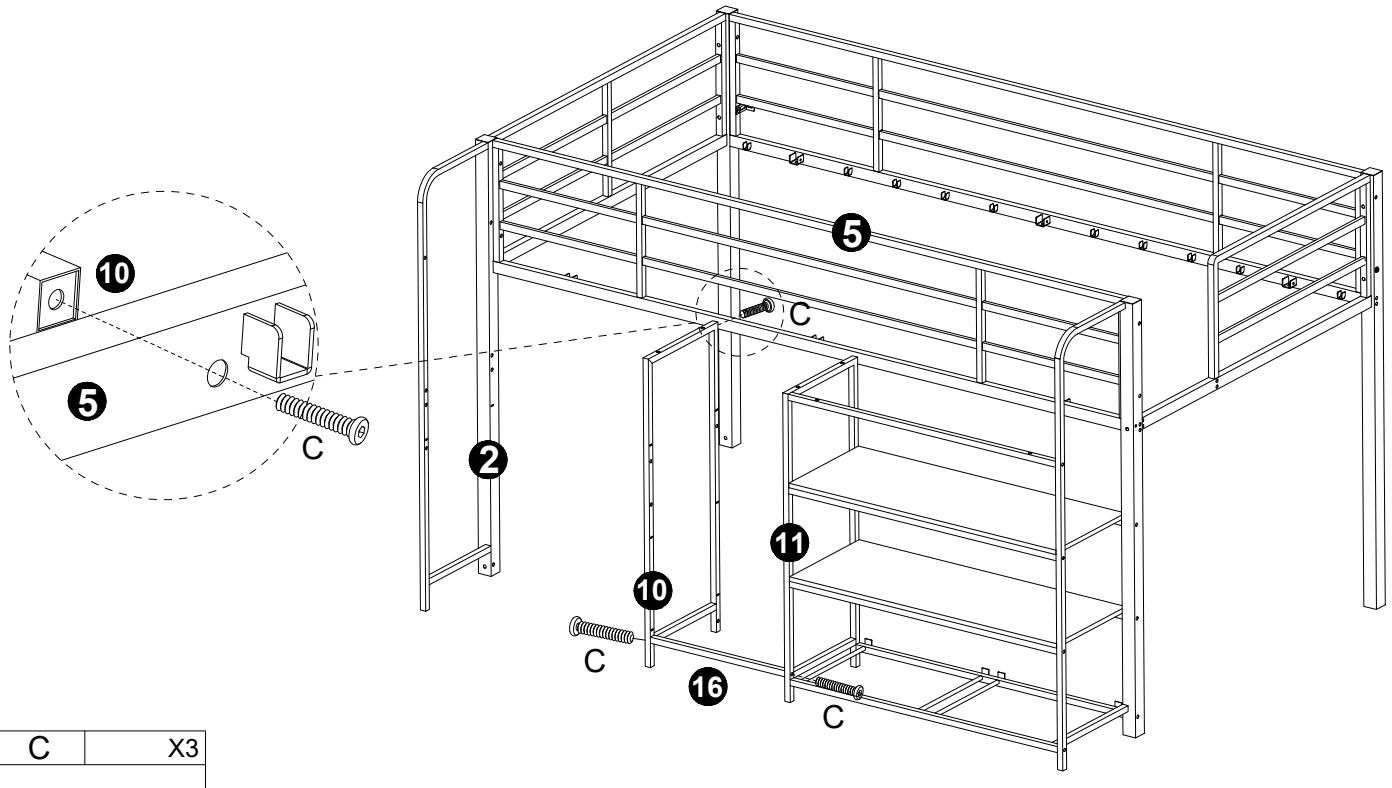

C	X3
	
M6X40mm	


10

⚠ Be careful not to overtighten the screws.

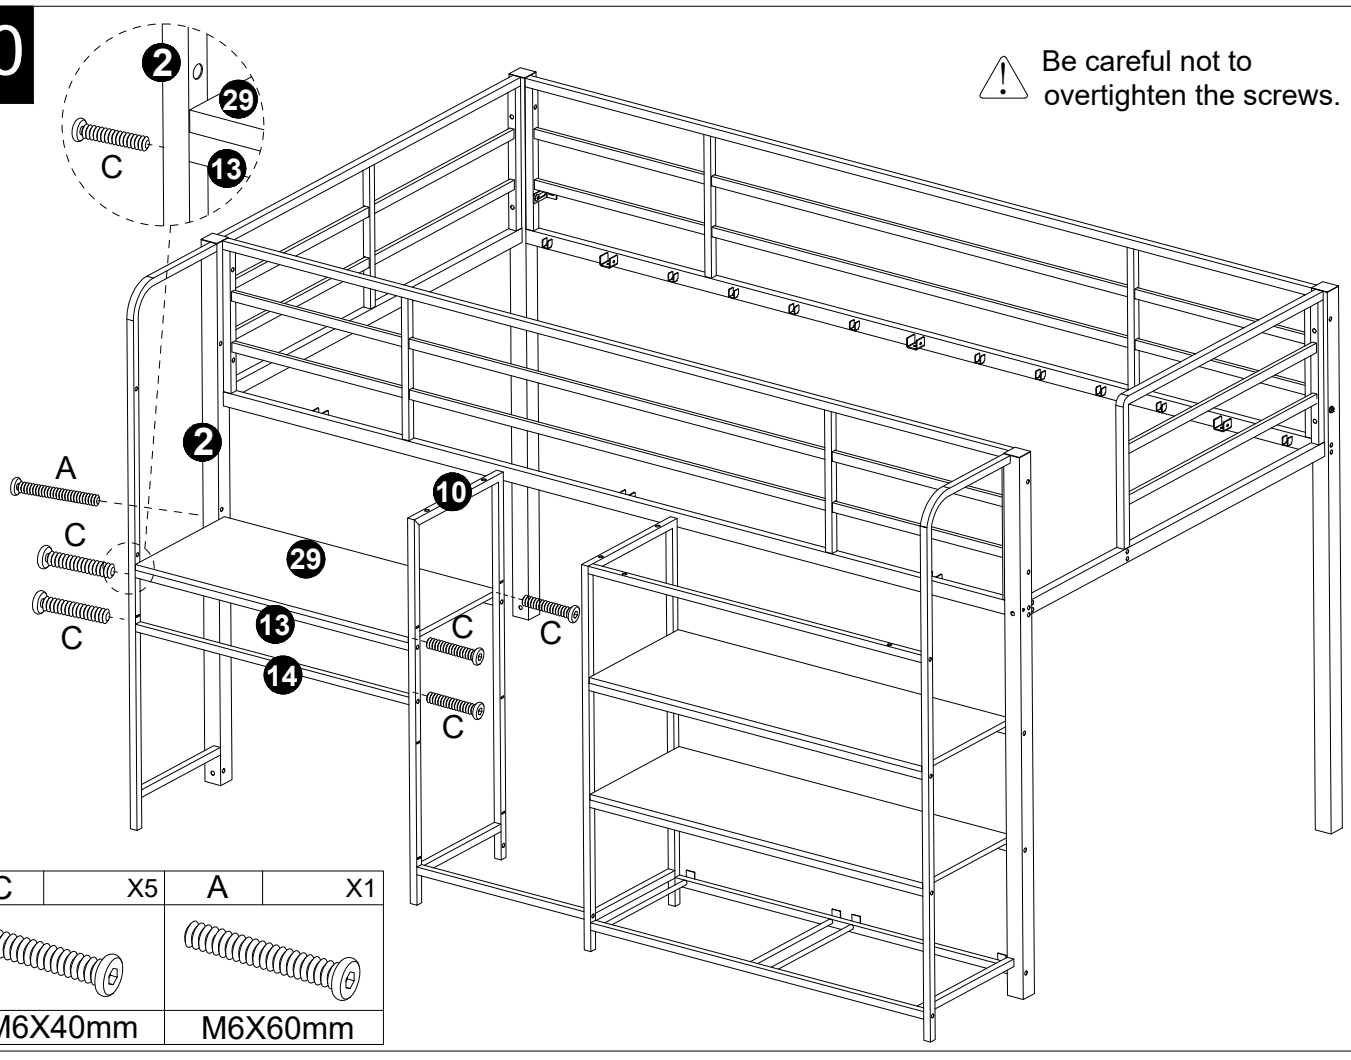


C	X5	A	X1
M6X40mm		M6X60mm	

11

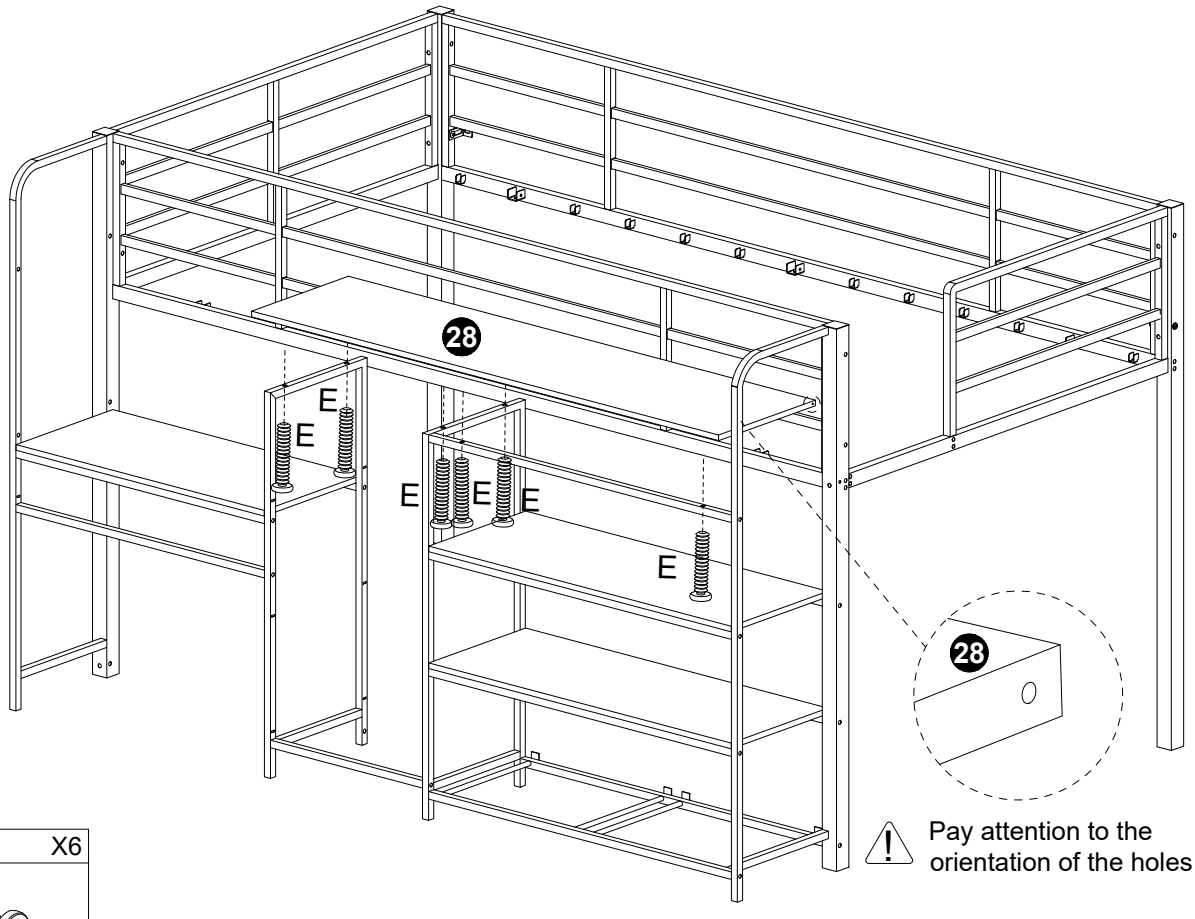



Pay attention to the orientation of the holes



E	X6
	
M6X25mm	

12


Be careful not to overtighten the screws.

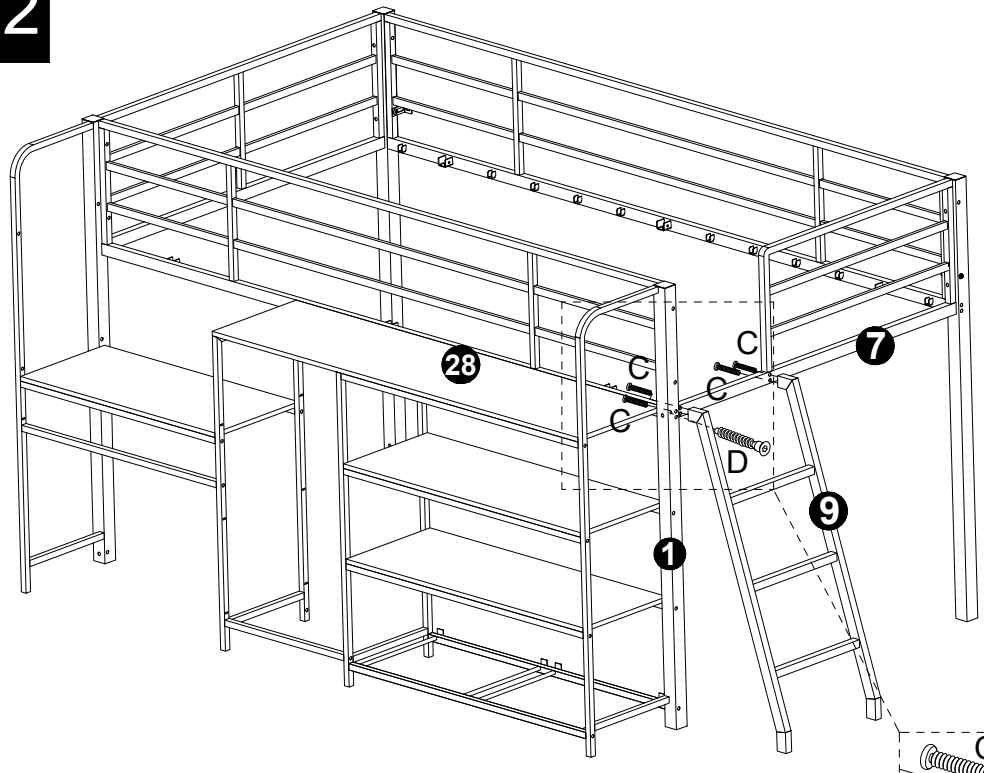

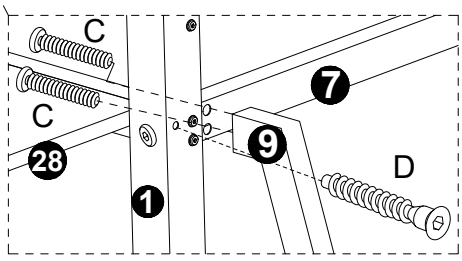

C	X4	D	X1
			
M6X40mm		M5X58mm	


13

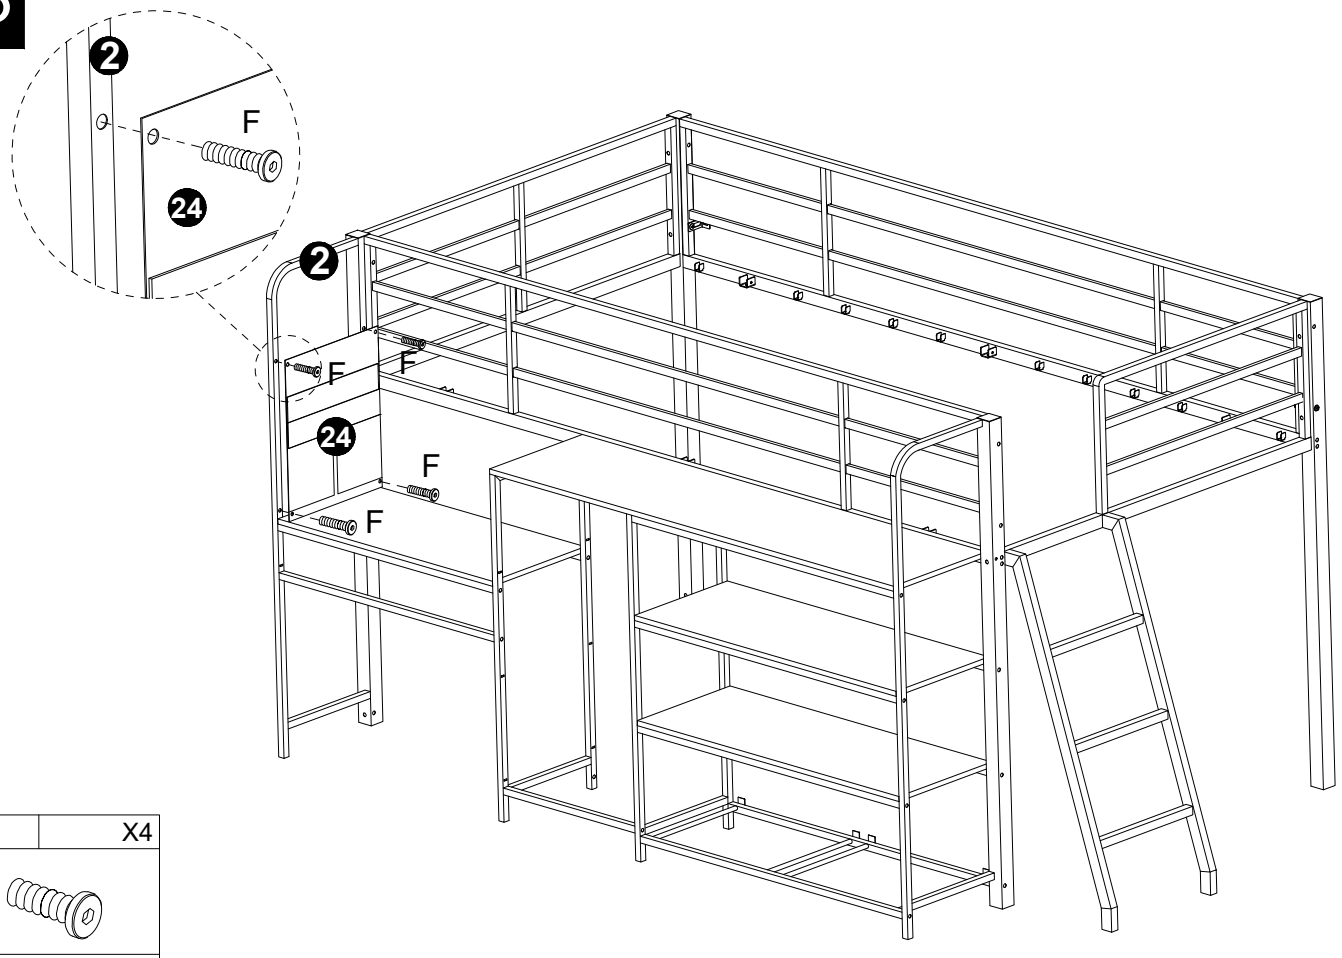


F	X4
M6X12mm	

14


Stick it after stretching

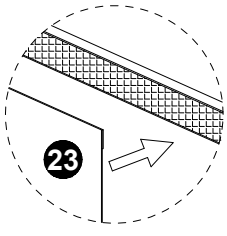



Magical stickers face inward

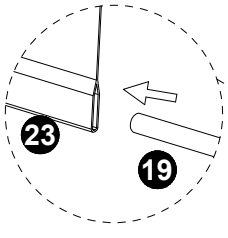

Insert Tube No.19 into the hole at the bottom of the curtain

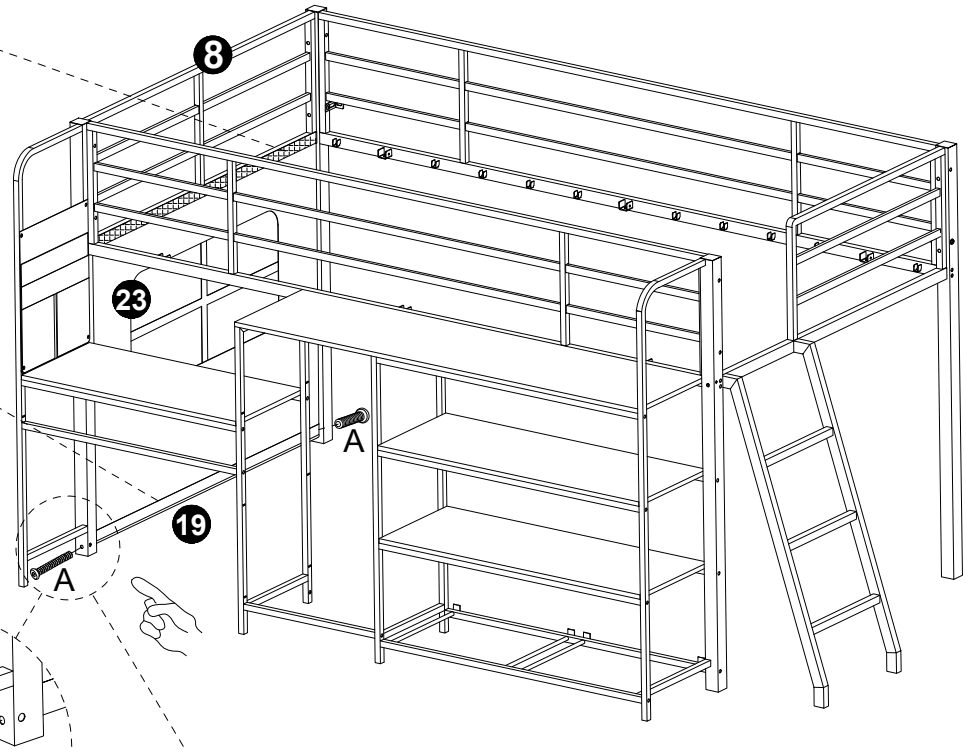

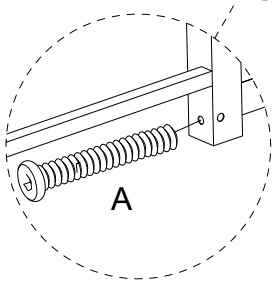


A	X2
	
M6X60mm	


⚠ Remove the magic sticker after installing Pipe No.19

15


Stick it after stretching

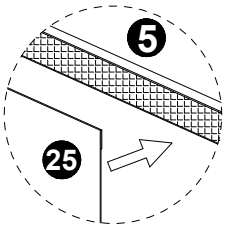


Magical stickers face outside

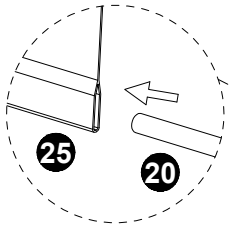


Insert Tube No.20 into the hole at the bottom of the curtain

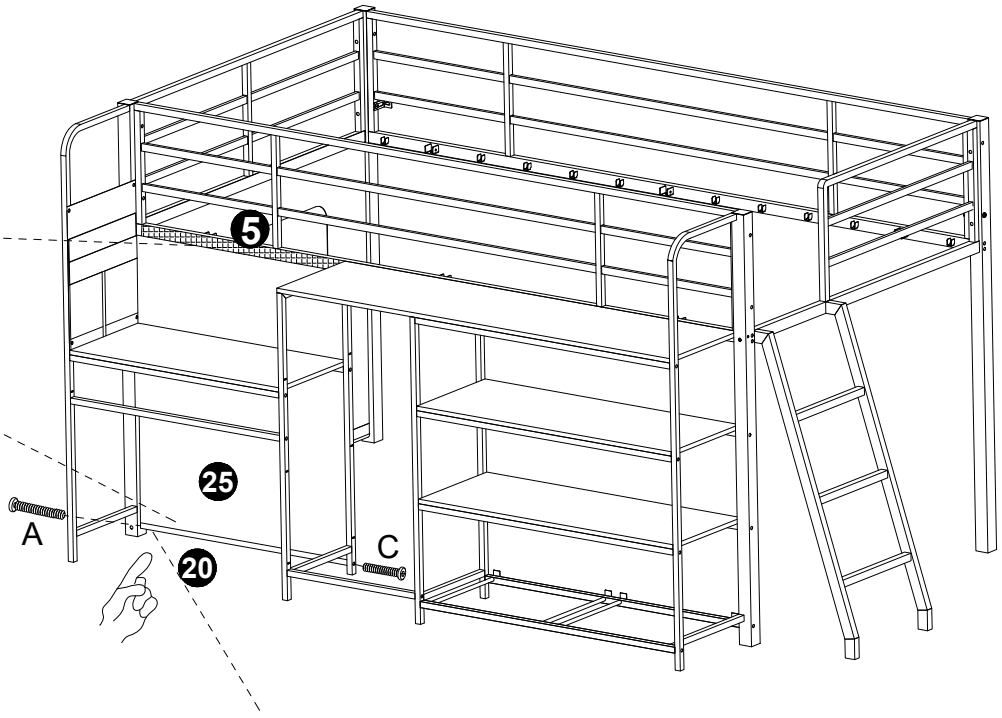

A	X1	C	X1
			
M6X60mm		M6X40mm	


⚠ Remove the magic sticker after installing Pipe No.20

16

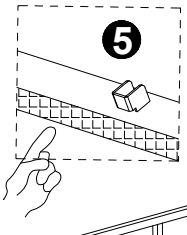


Magical stickers below the NO.5 tube


Stick it after stretching

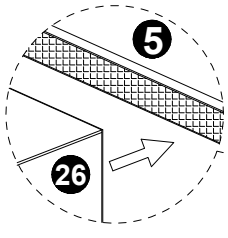


Magical stickers below the tube

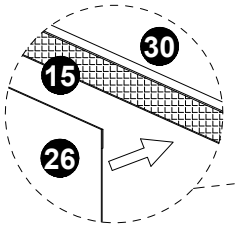


⚠ Magical stickers face the back of NO.15

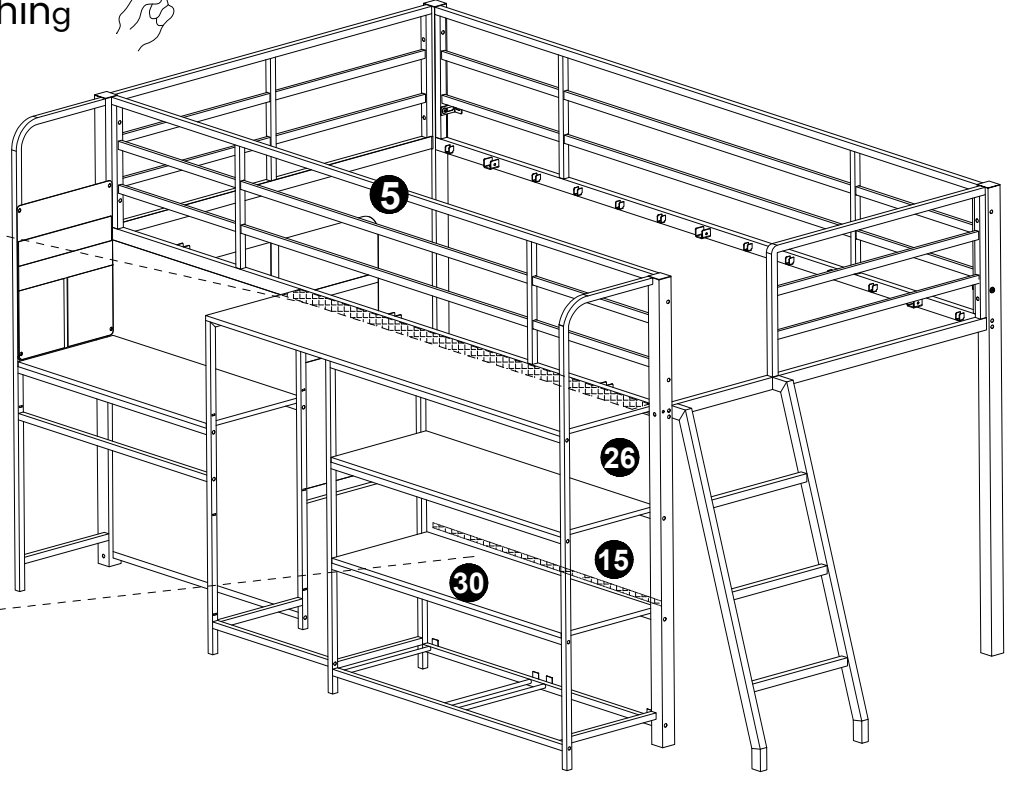

17

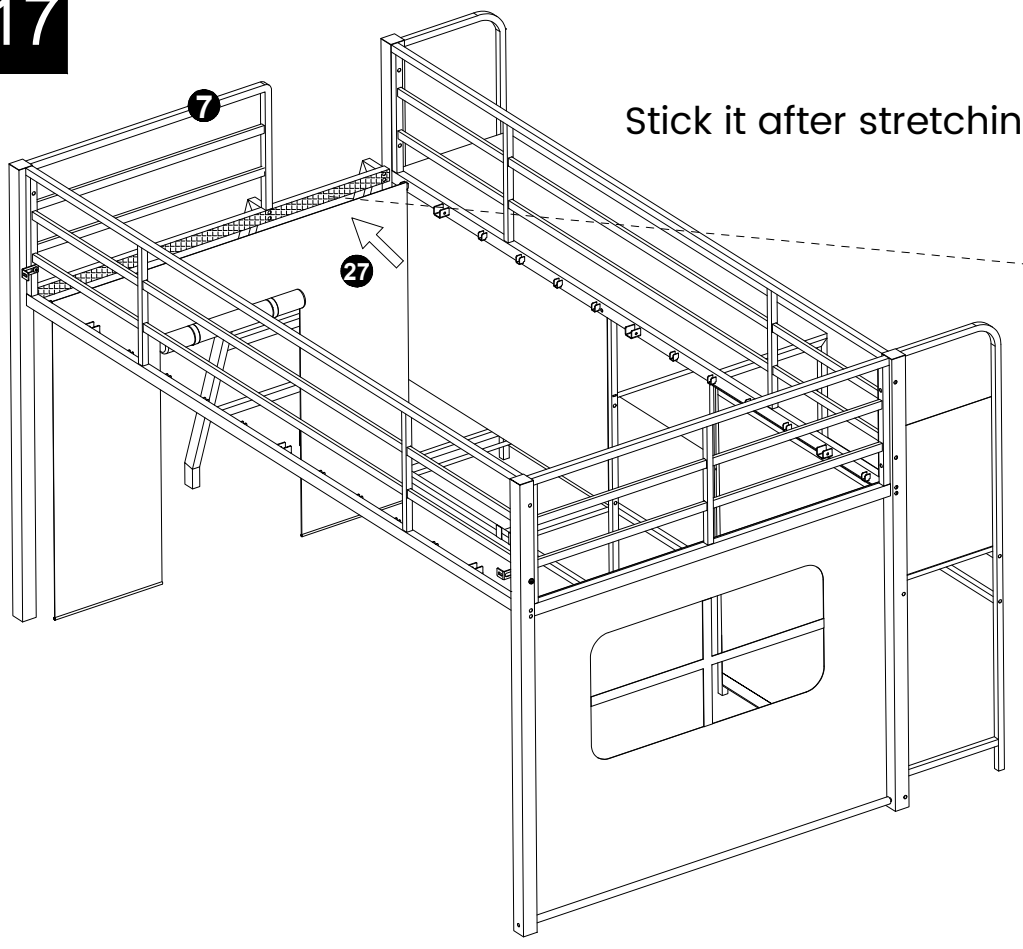


Stick it after stretching

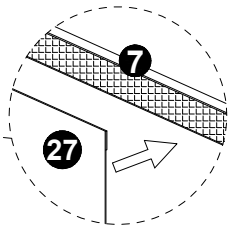



Magical stickers face the back of NO.7

18

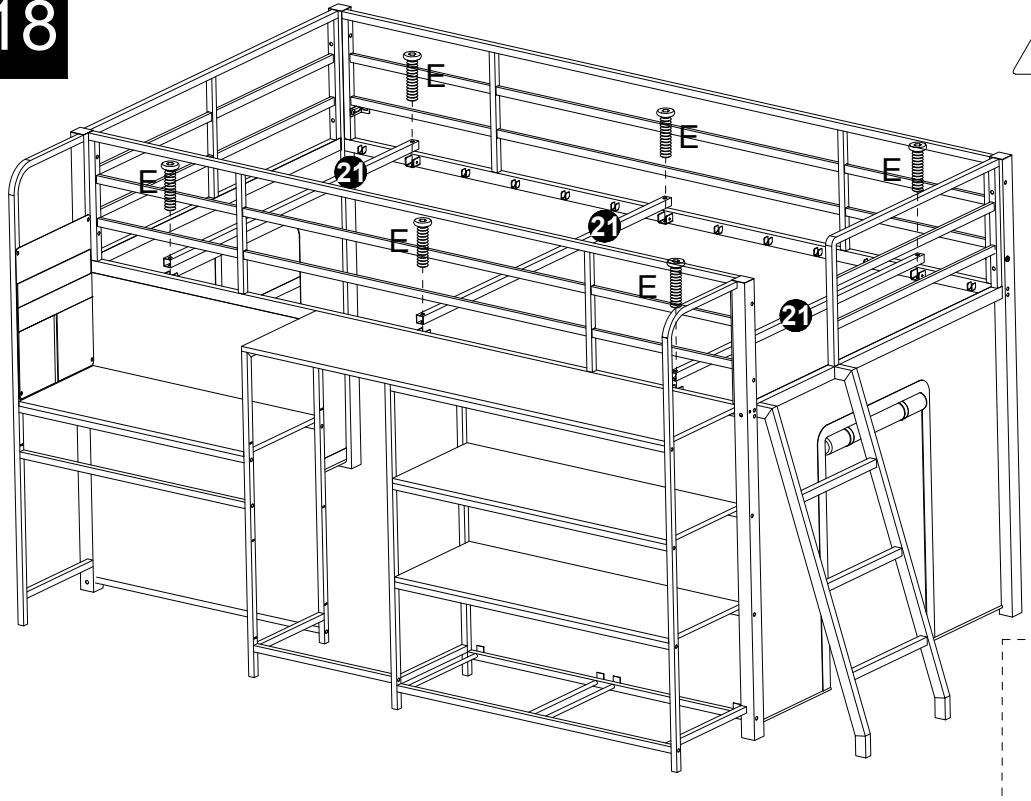



⚠ Be careful not to overtighten the screws.

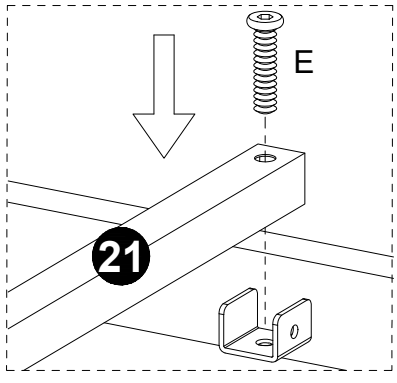


E	X6
	
M6X25mm	

19

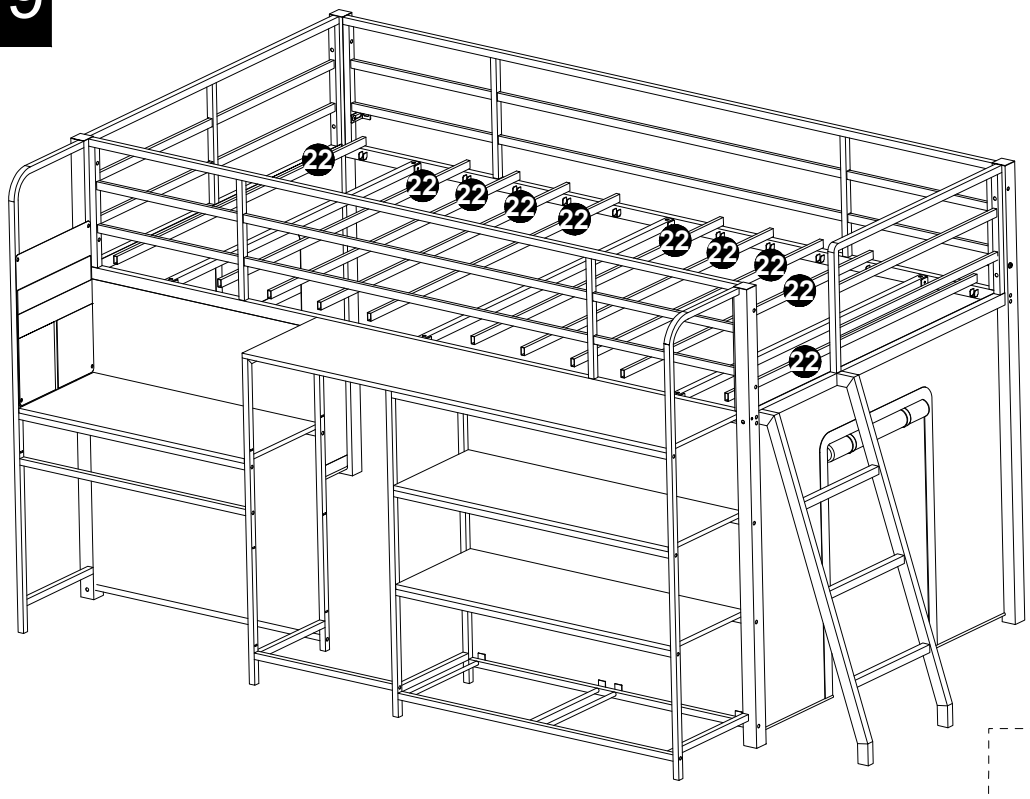


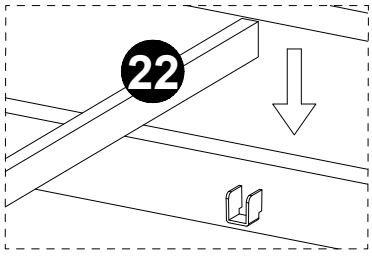


20

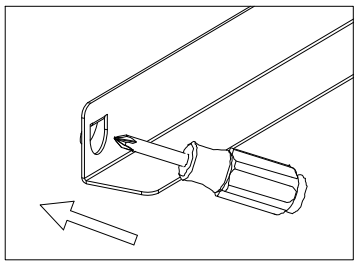


Accessory 17 and accessory 18 must be supported with a tool before installation.

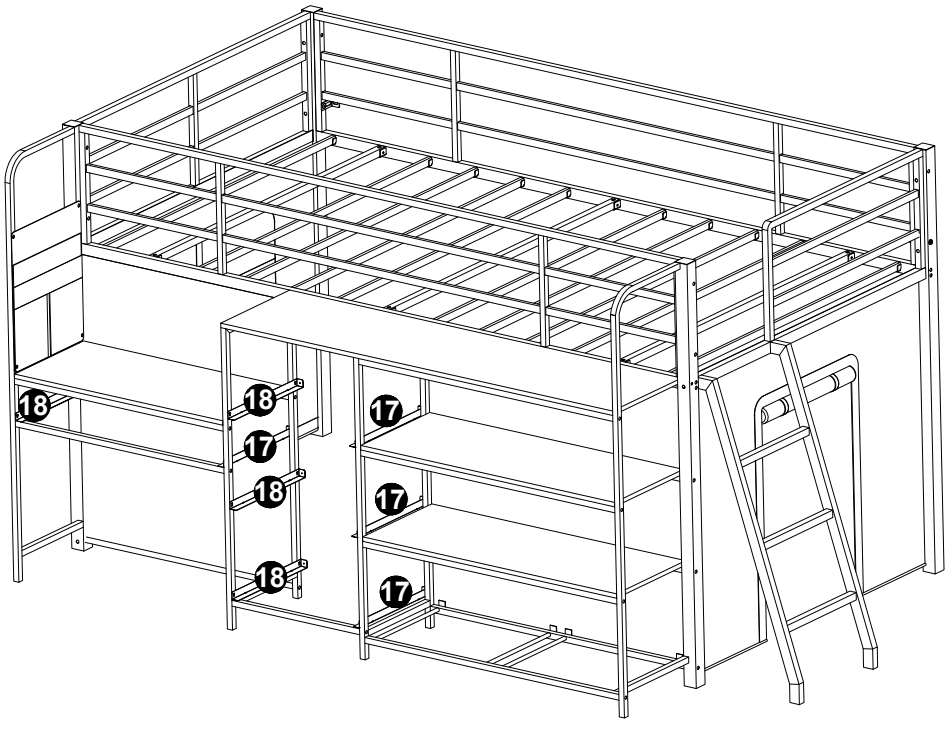

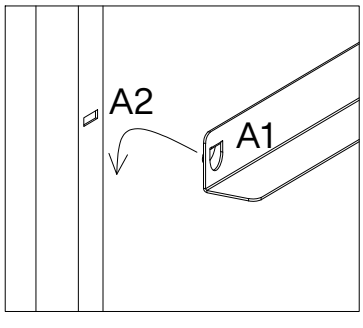


Note that the protruding part of A-1 aligns with the square hole of A-2 and then press inward and downward.


21

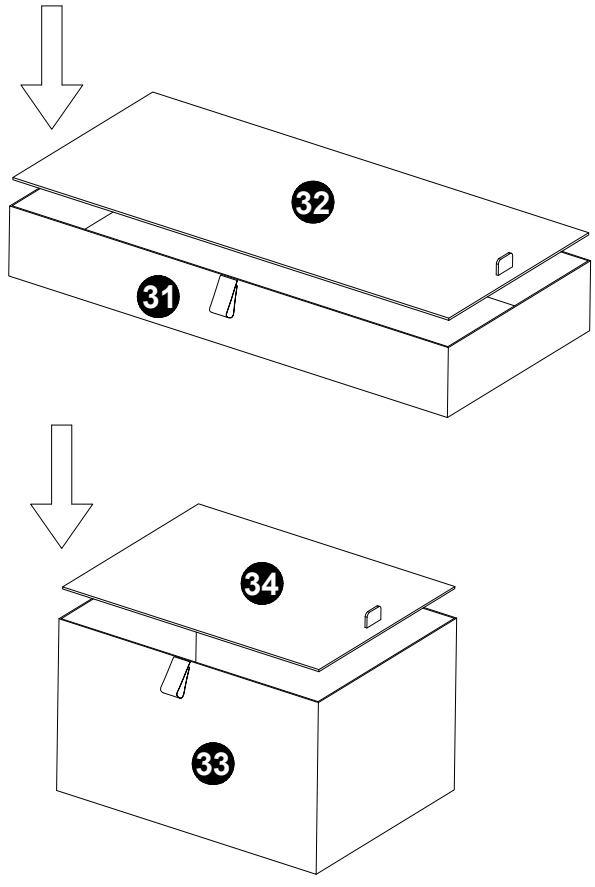


22

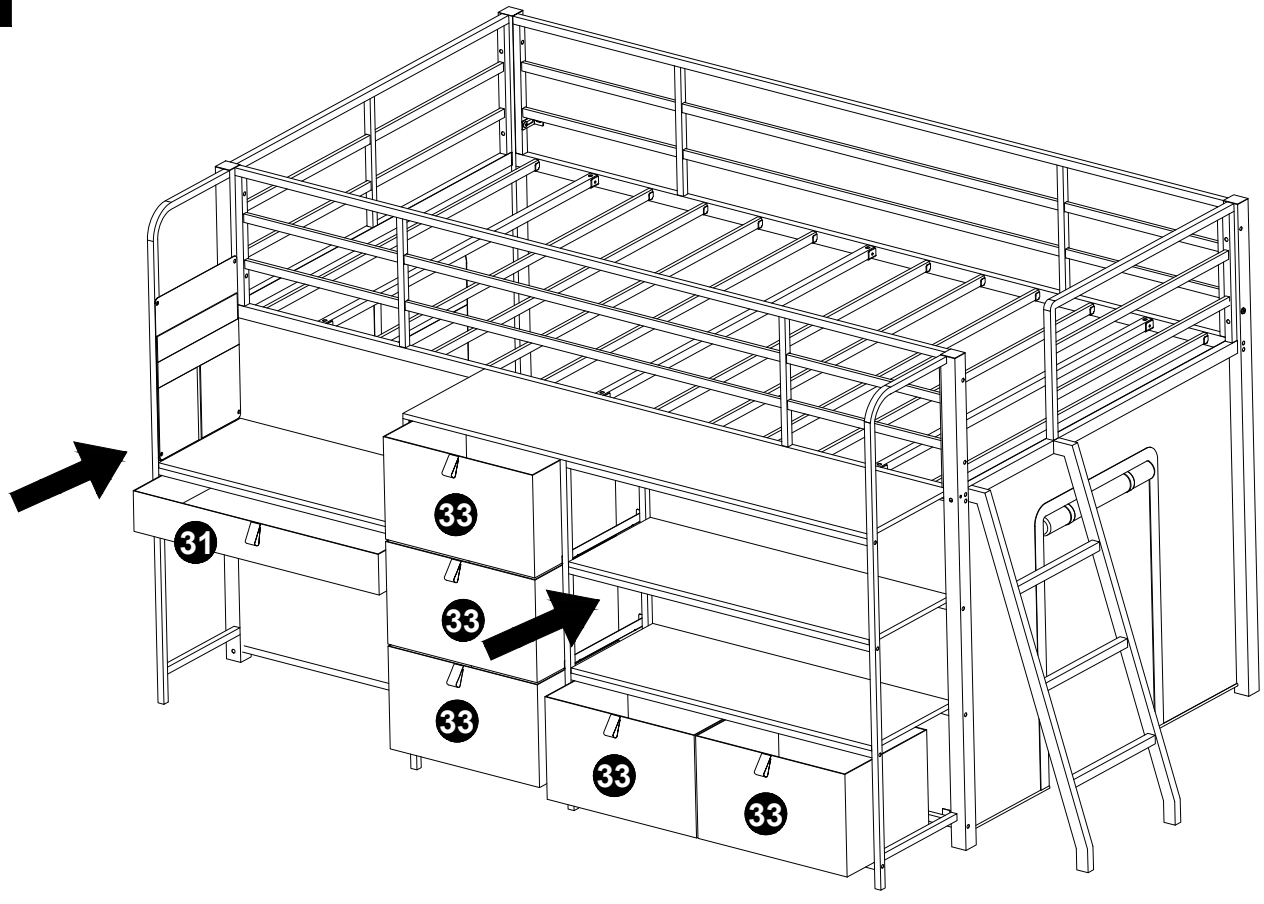

23

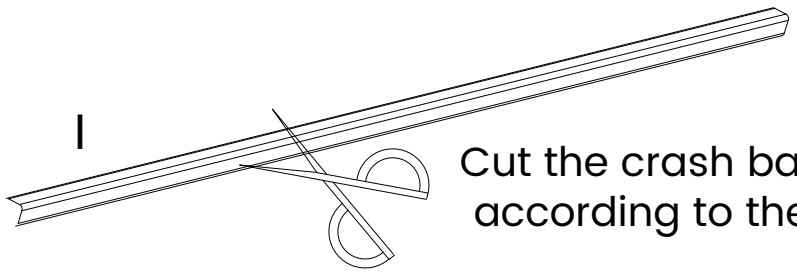

Cut the crash bar
according to the requirement

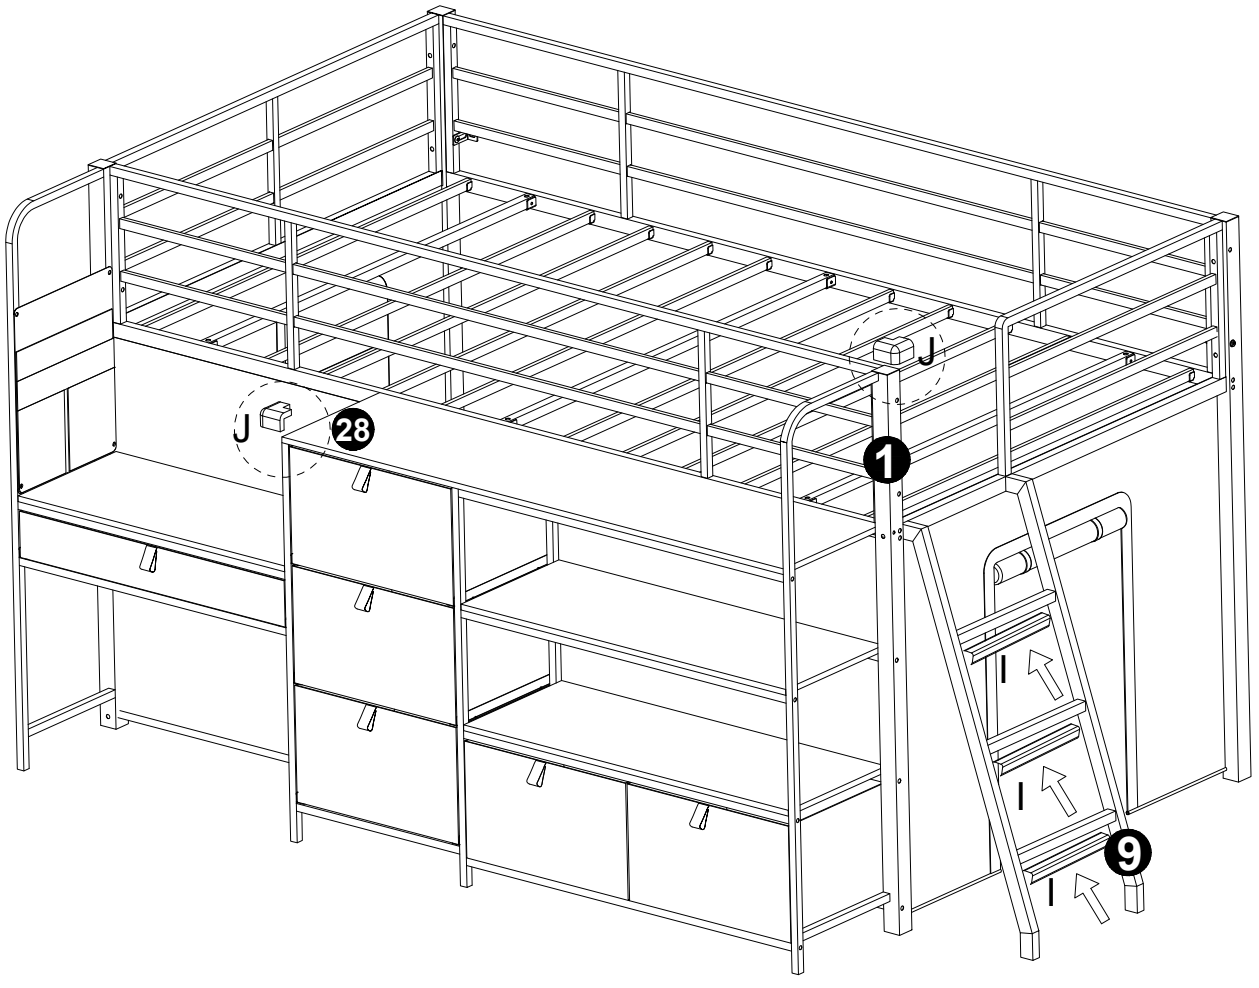


The installation location of the J can be adjusted according to your needs


J	2	I	1
			
			1M


24

Be careful to tear off the paper on the back of the light strip, Then press it firmly with your hand

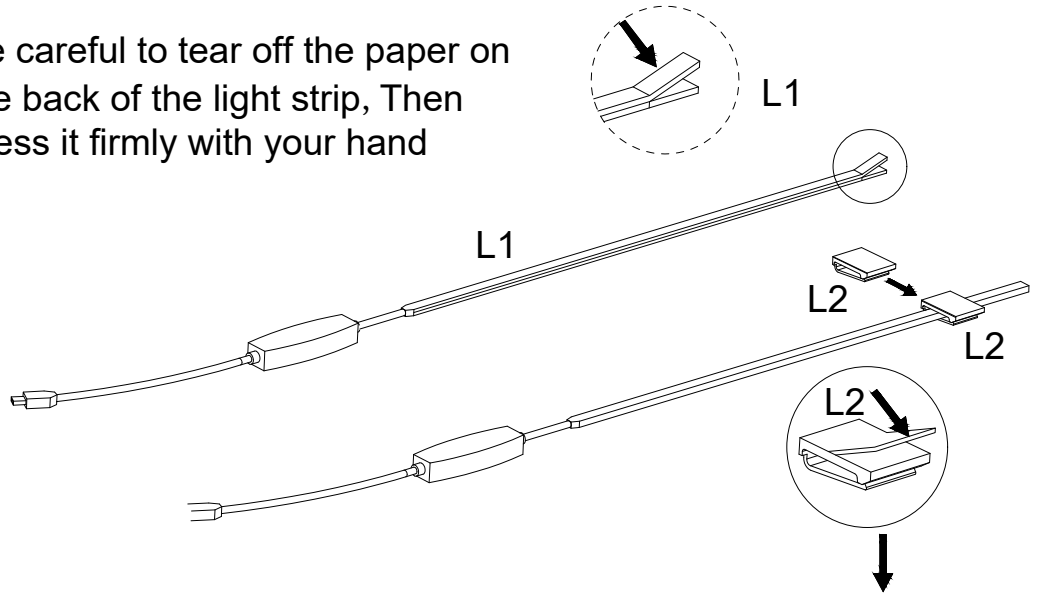


The slight strip can be pasted to the desired position according to your own needs

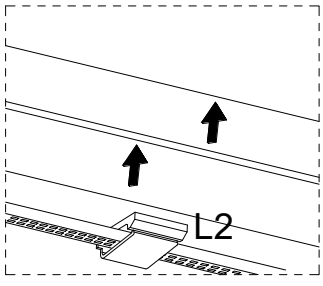


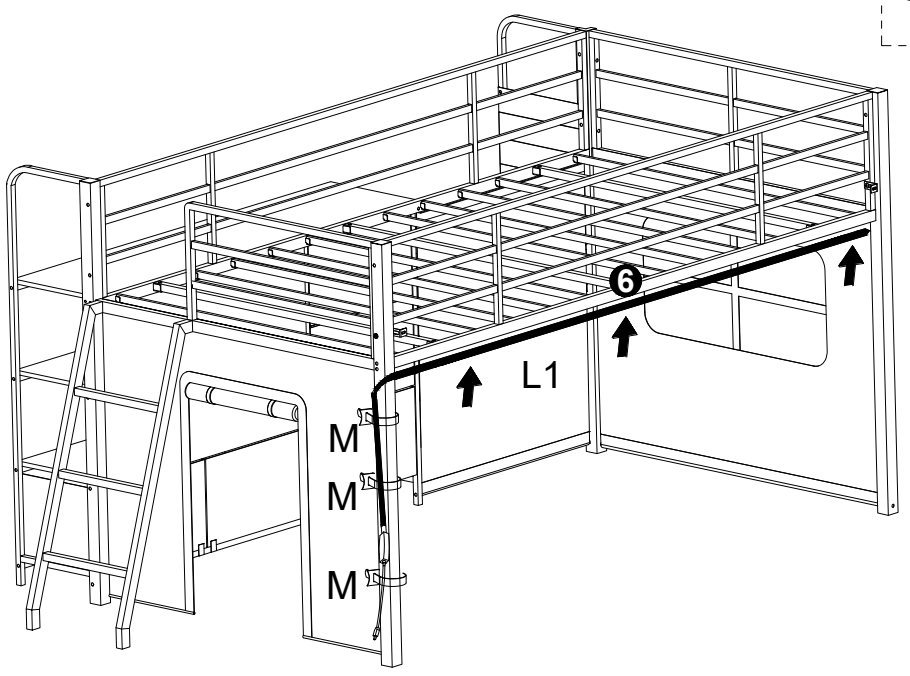

The length of the lamp can be cut according to your own requirements

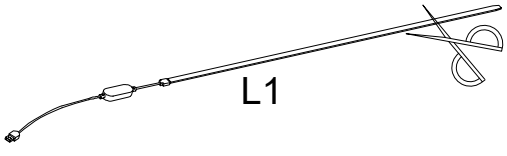


L	1	M	3
L1	L2x4		
1.9M			

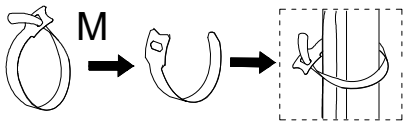

The slight strip can be **placed unde the back** beam according to your own needs


25

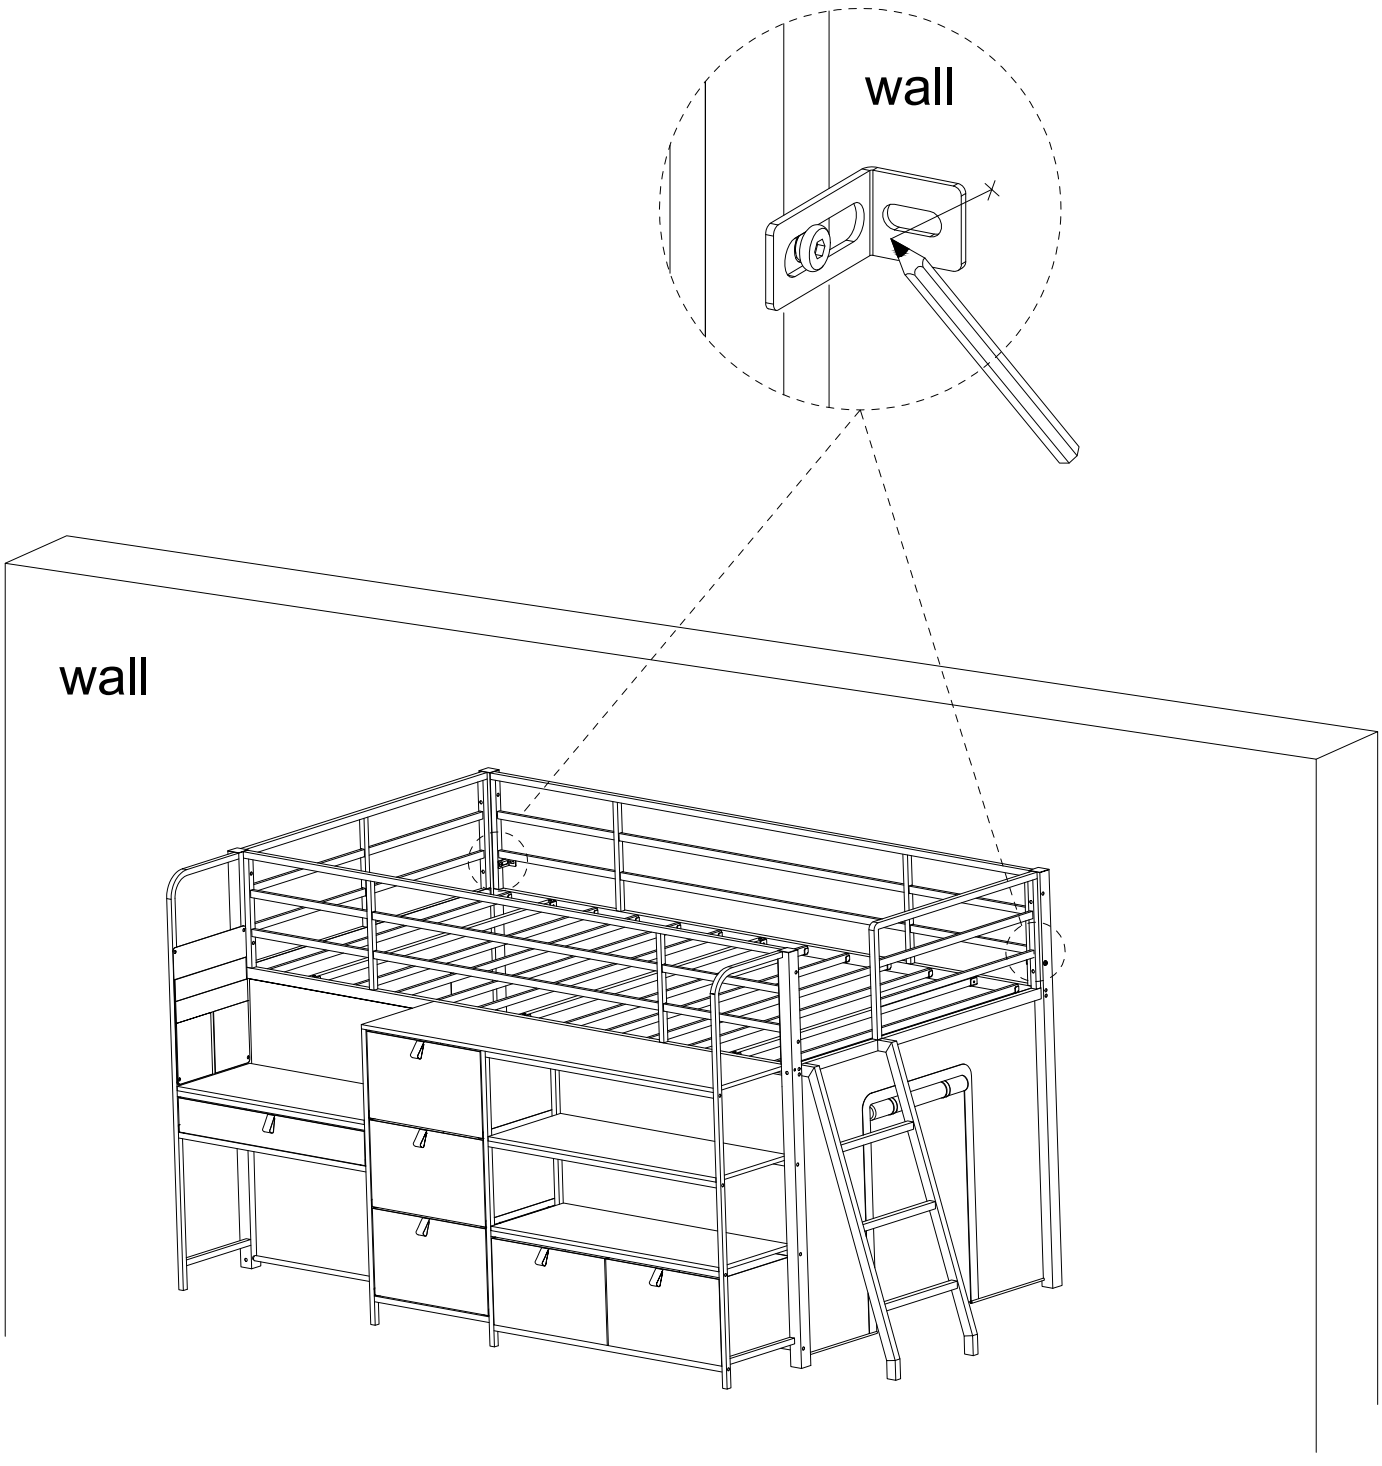

26

wall

Drilling

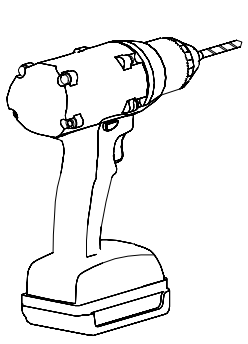



6.5mm


6.5mm

wall

27

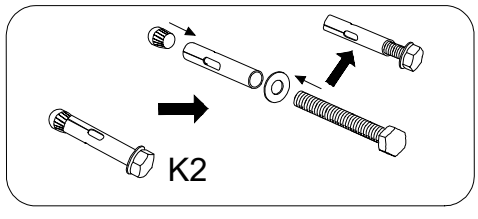

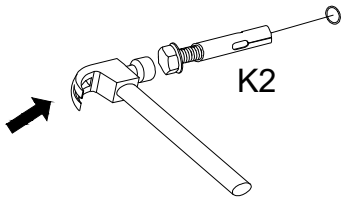

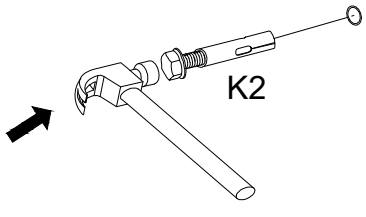



wall


Please lock the expansinon screw onto the wall

28

Remove the screws and gaskets first

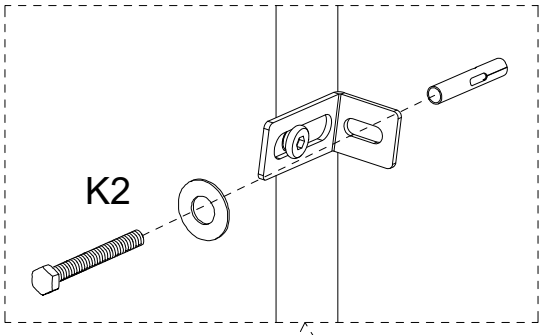

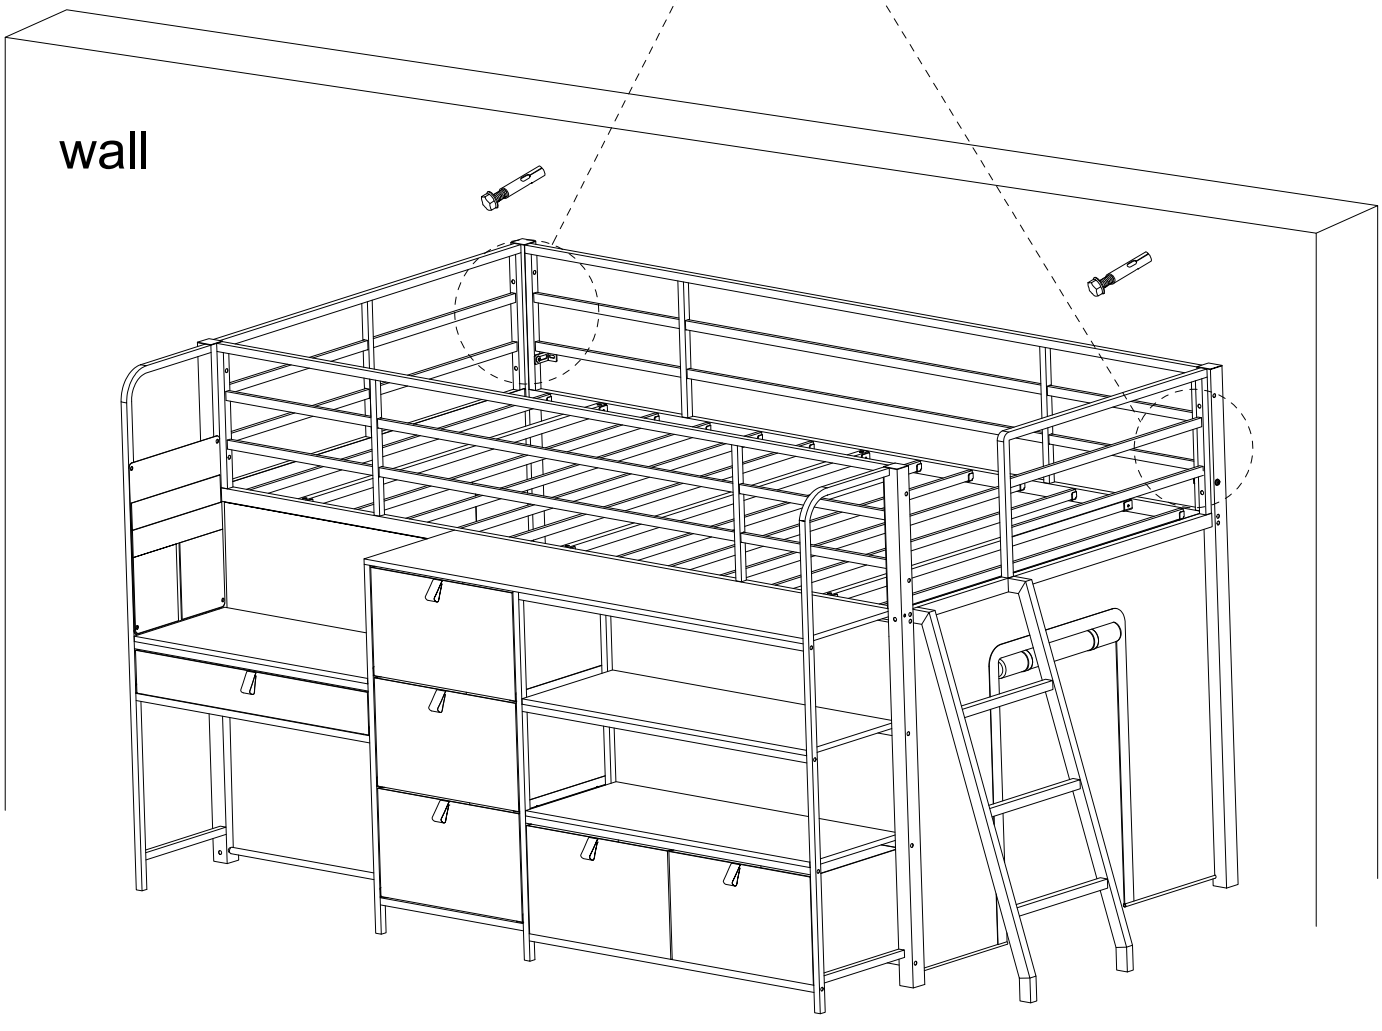

K2	2
	
M5X50mm	