


# WINDOW CURTAIN MEASURING GUIDE

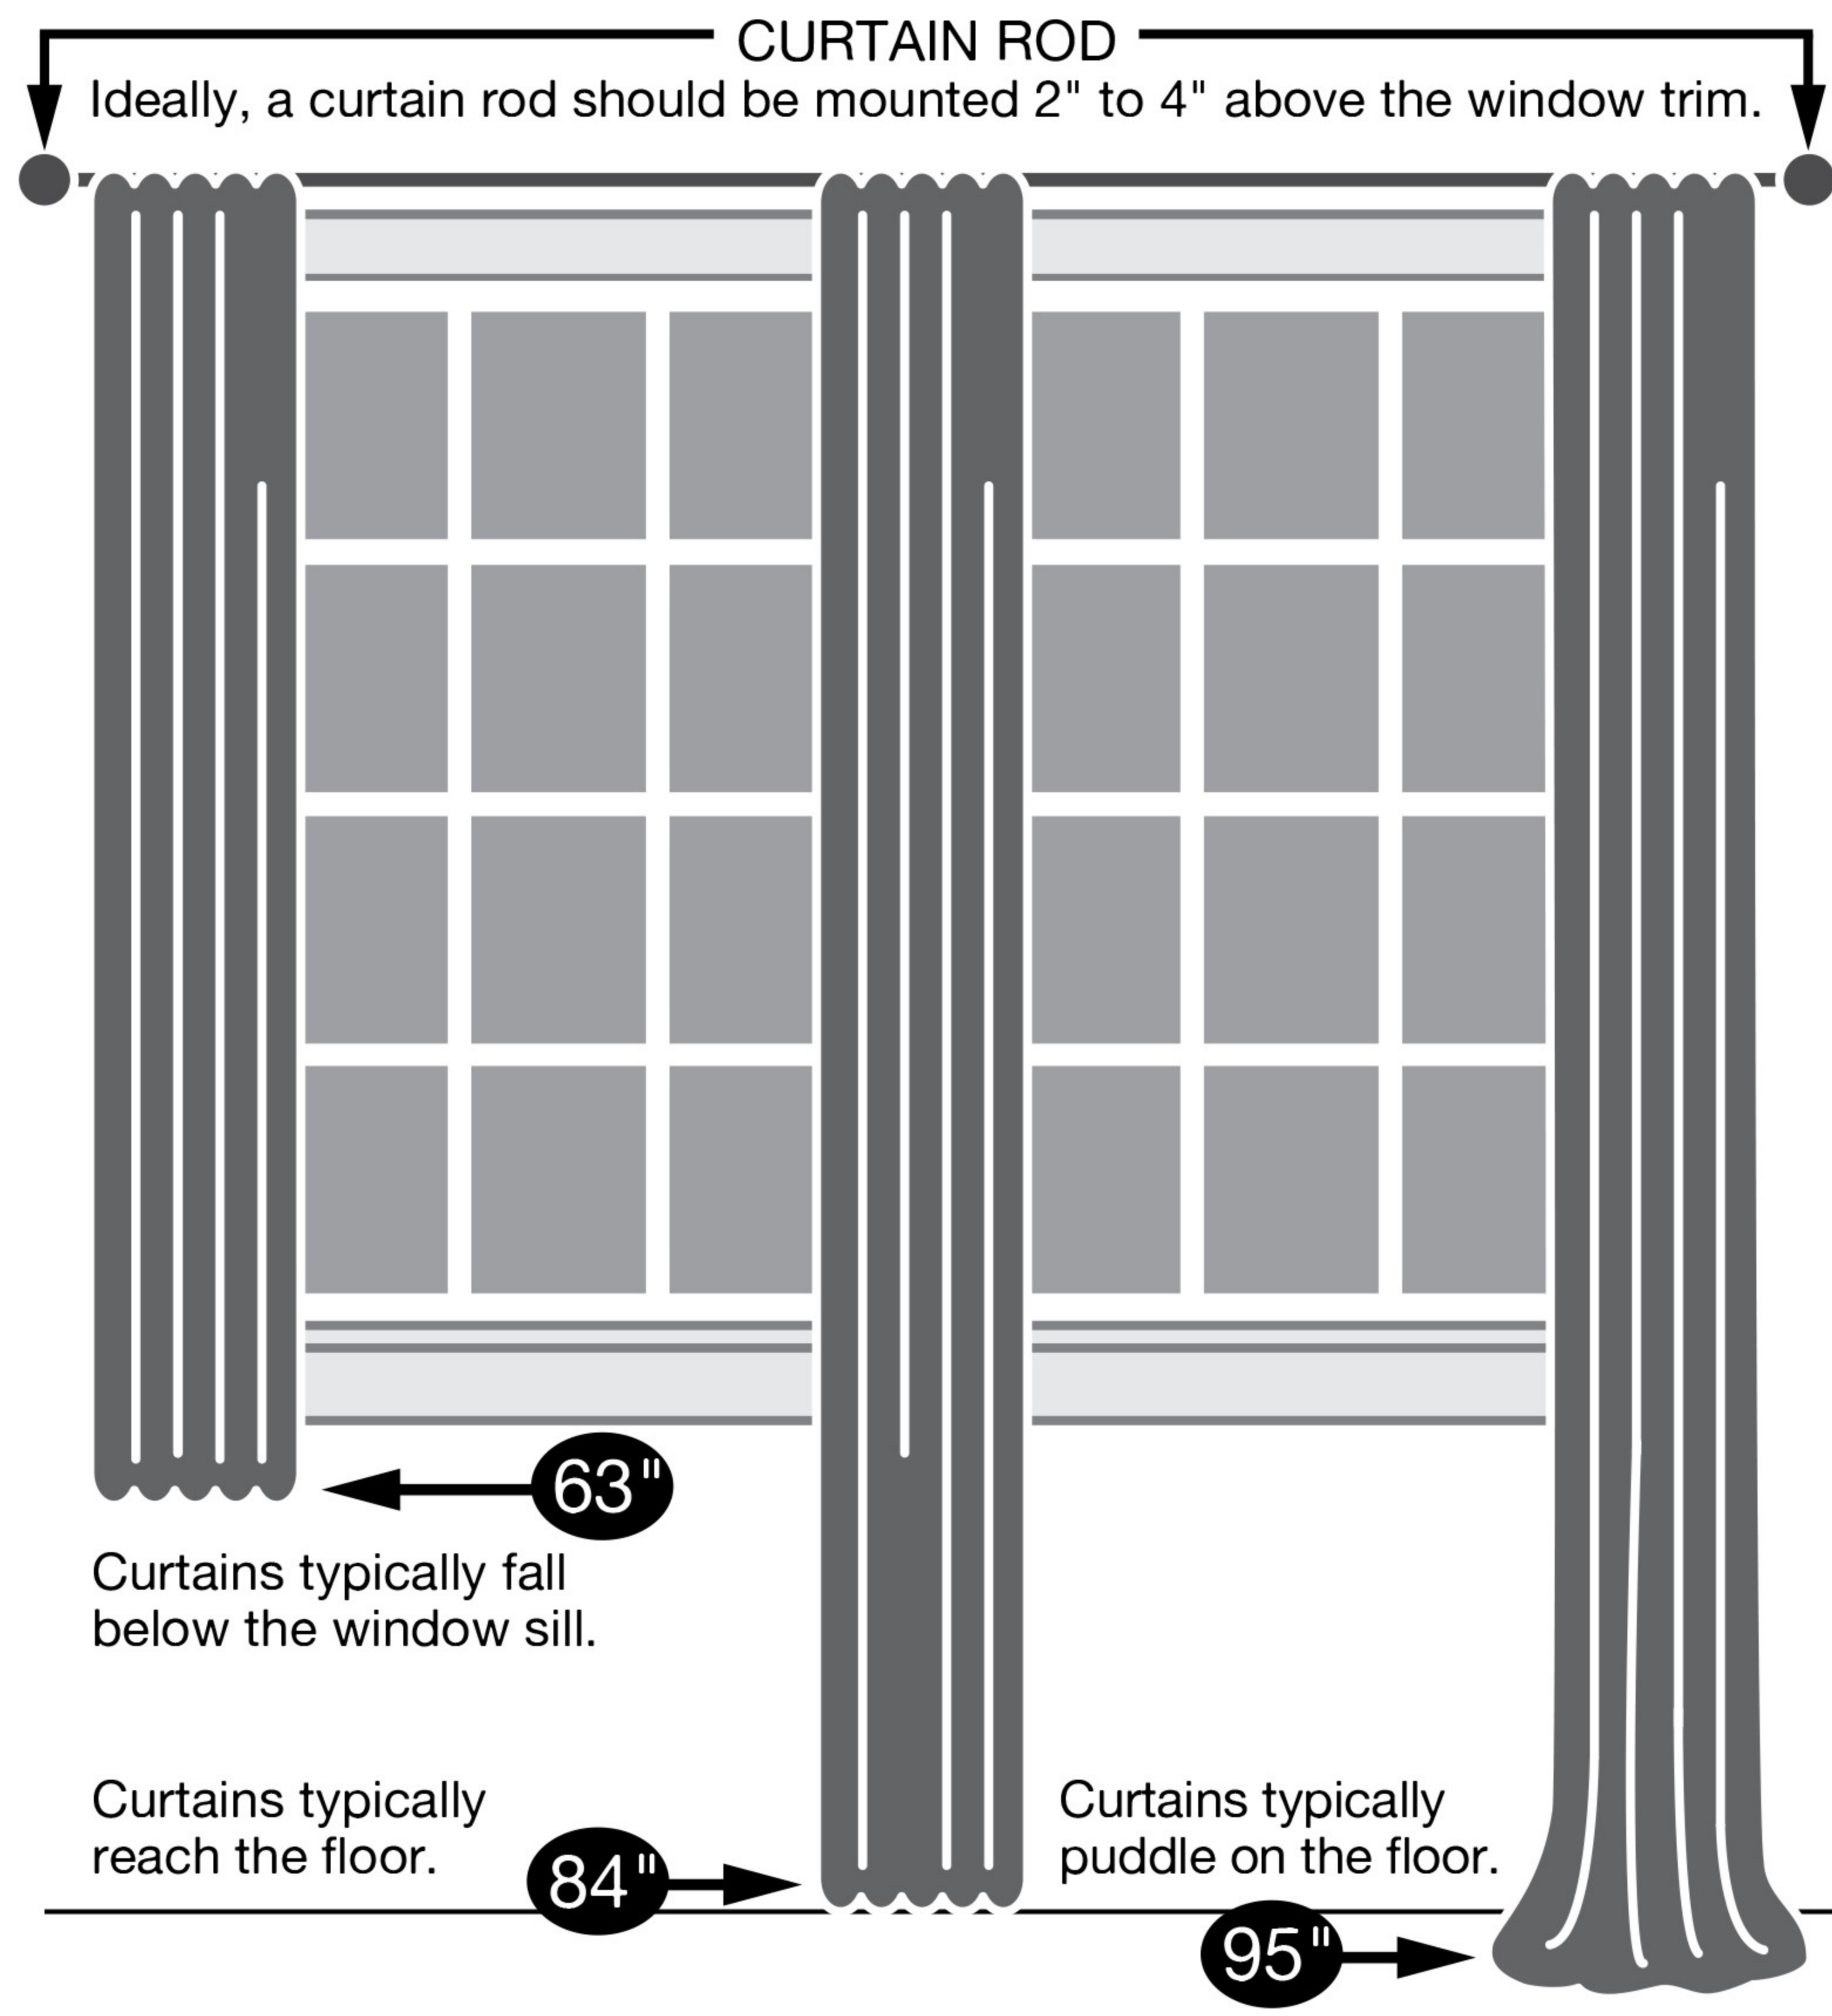

For proper fullness, fabric should measure approximately 2 to 3 times the width of your window.