



DRESSING TABLE

Version: 1.0

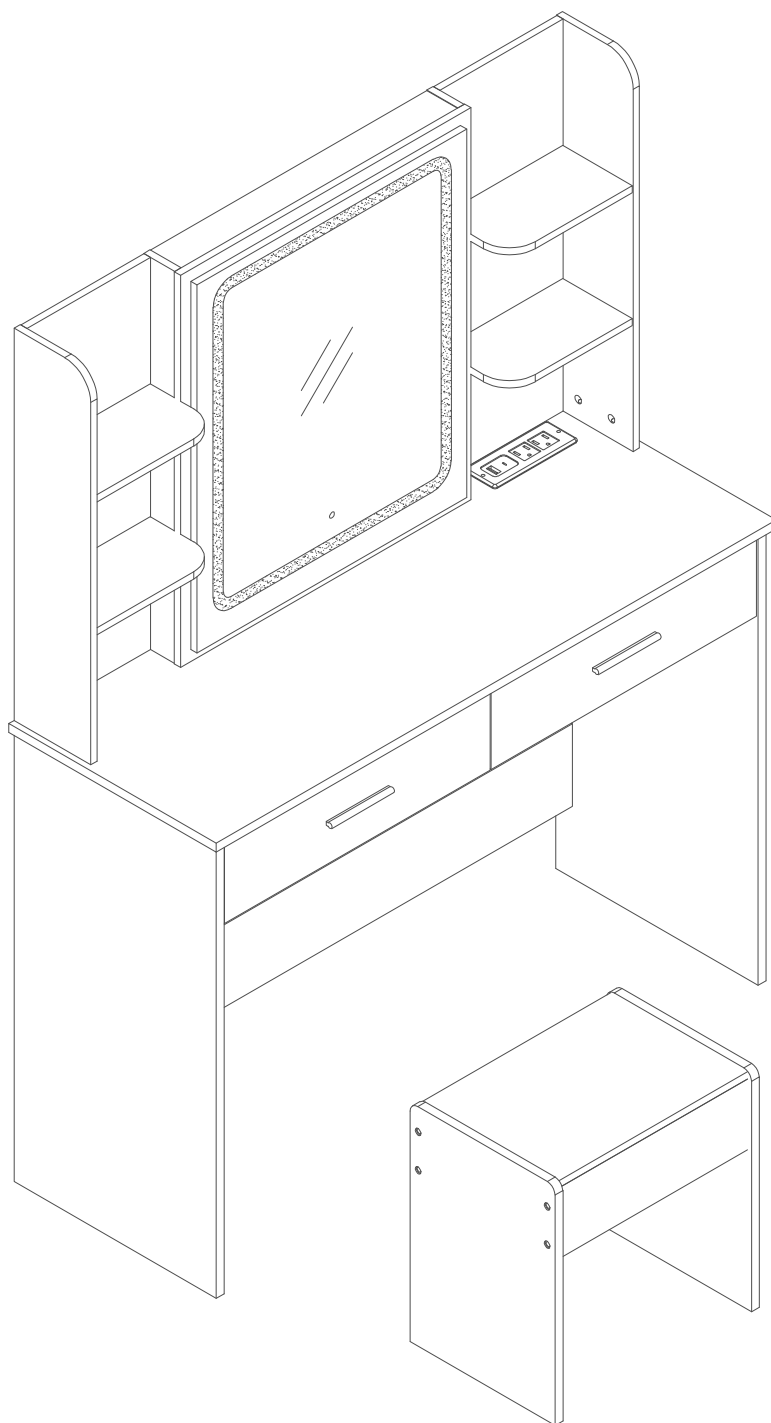

Kind reminder: After receiving the product, please check the quantity of all accessories and install the table according to the number on each accessory package.

KIND REMINDER

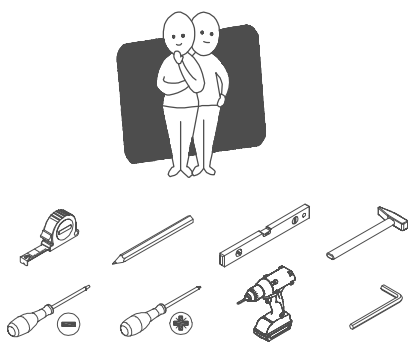


Two persons and
tools required for
assembly




Wipe with dry cloths


HARDWARE

A	x74	B	x74	C	x8
 M6*35mm		 Ø12*10mm		 Ø3.5*30mm	
D	x34	E	x22	F	x4
 Ø3.5*12mm		 M6*38mm		 M4*15mm	
G	x2	H	x1	I	x1
 Handle		 Socket		 Phillipscrewdriver	
J	x4	K	x4		
 Bracket					


Attention: Instructions for using hardware A and B

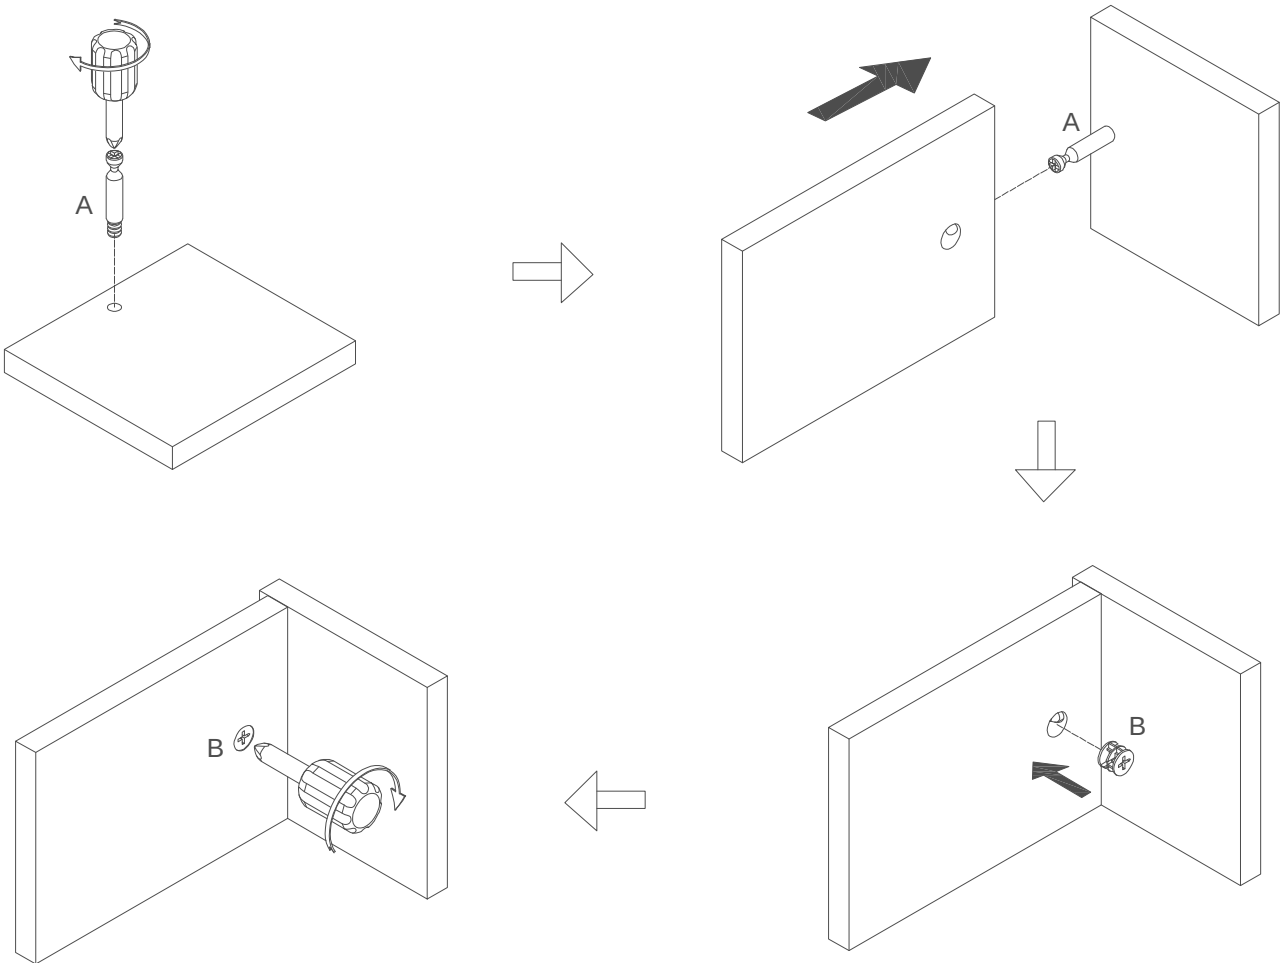


PARTS

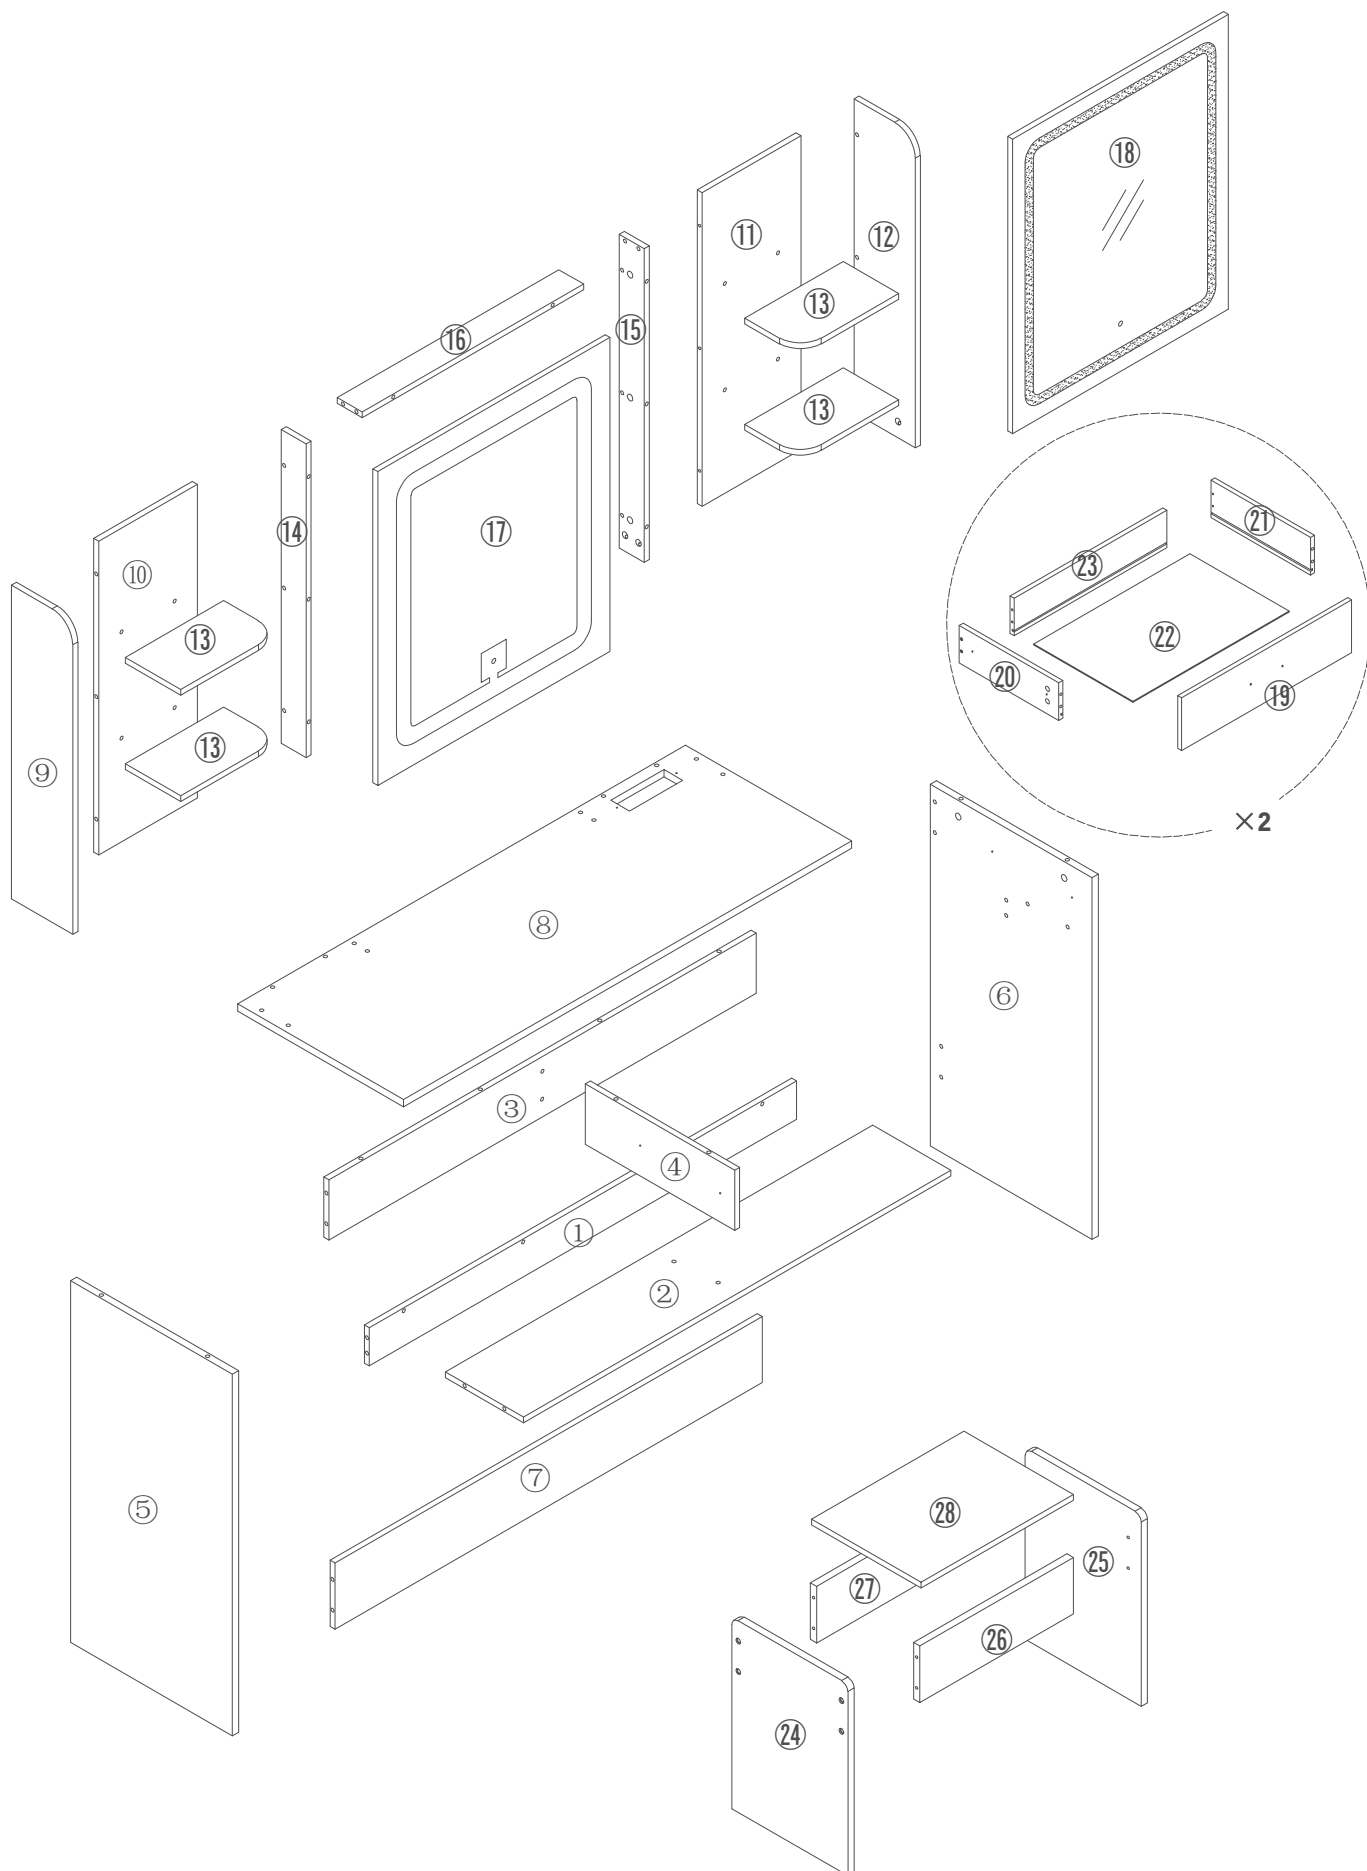

Step1

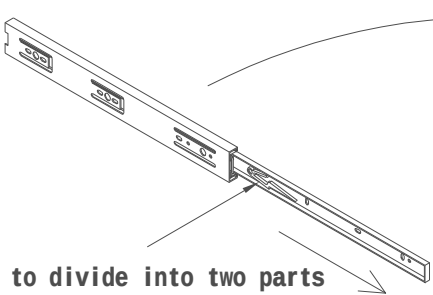


Push up here to divide into two parts



K-1
Front

This part is installed on board ④、⑤、⑥




K-2
Front


This part is installed on board ⑳、㉑

Step2

Please install the drawer in this step and check that the drawer is installed correctly before proceeding to the next step of installation.

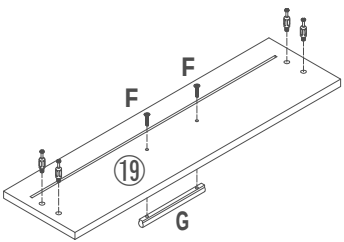


19, F, G

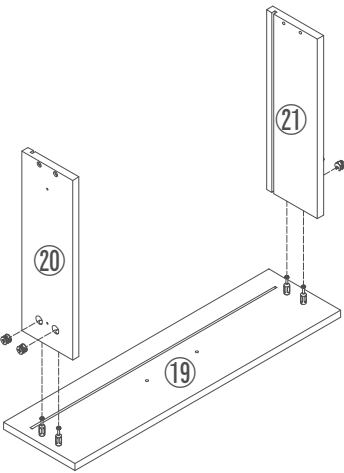


20, 19




21

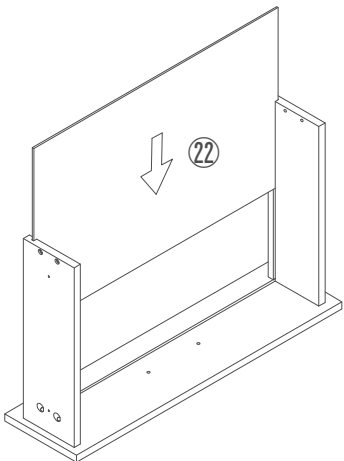

22

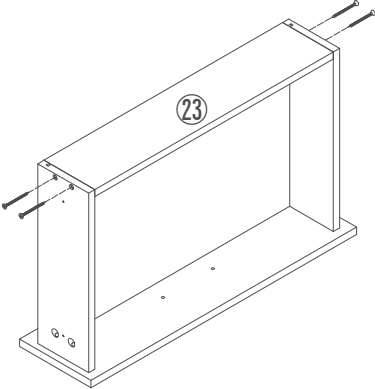

23

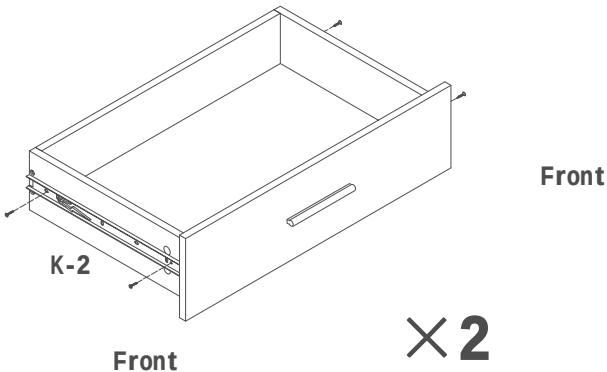


Front
K-2
Front
x2




A	x8	B	x8	C	x8		
M6*35mm		φ12*10mm		φ3.5*30mm			
D	x8	F	x4	G	x2	K-2	x2
φ3.5*12mm		M4*15mm					

Step3

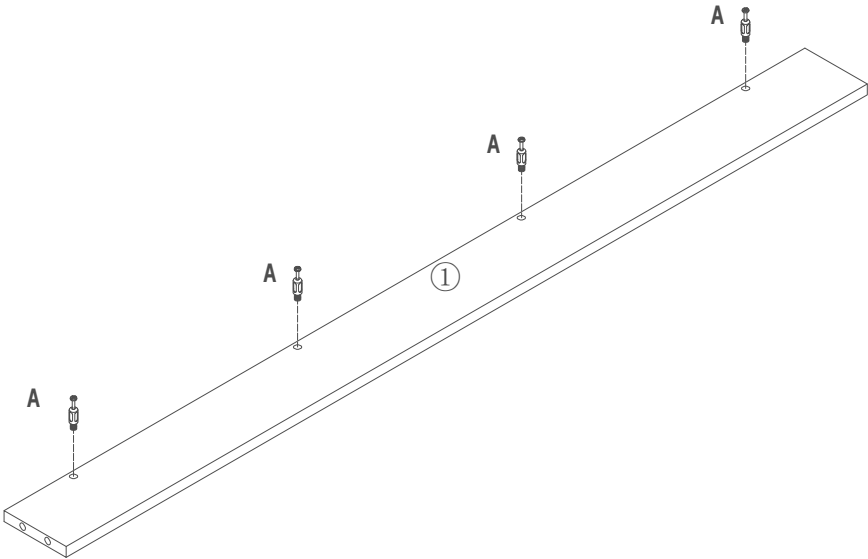


A	x4
 M6*35mm	

Step4

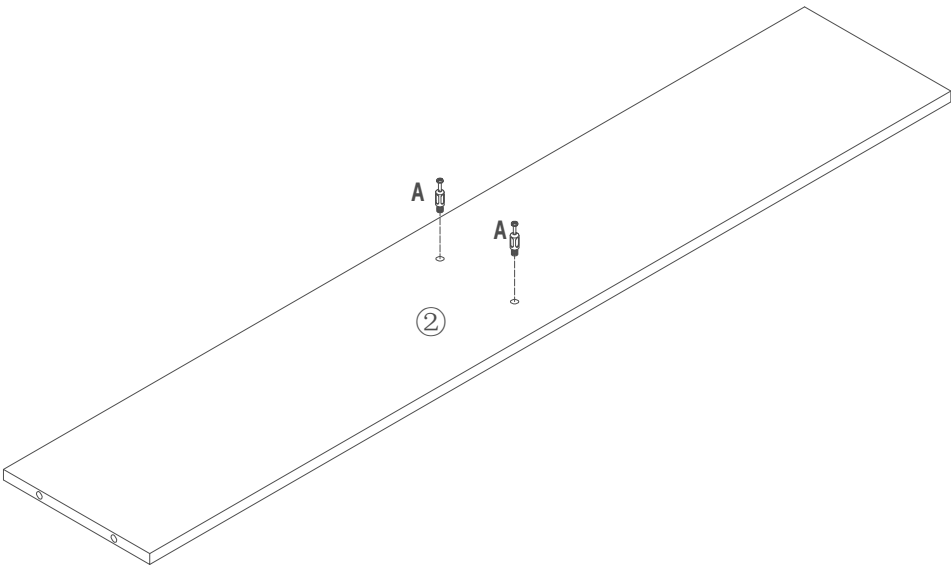


A	x2
 M6*35mm	

Step5

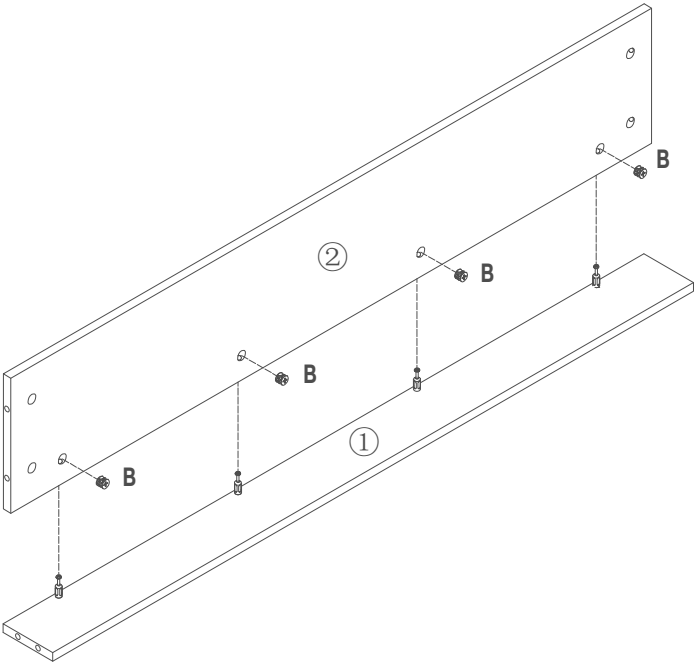


B	x4
 ø12*10mm	

Step6

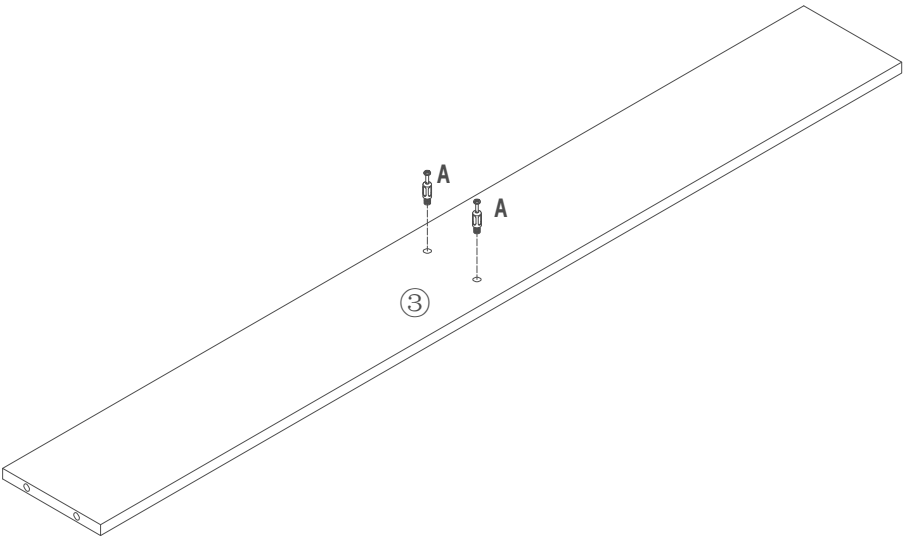


A	x2
 M6*35mm	

Step7

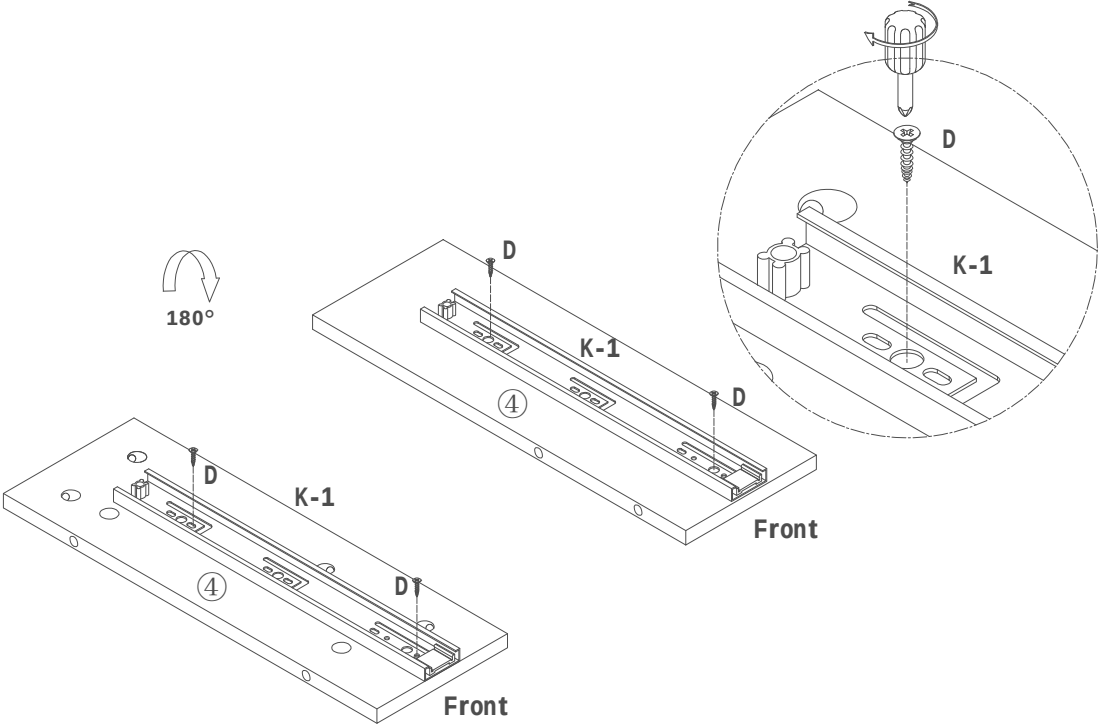


D	x4	K-1	x2
 Ø3.5*12mm			

Step8

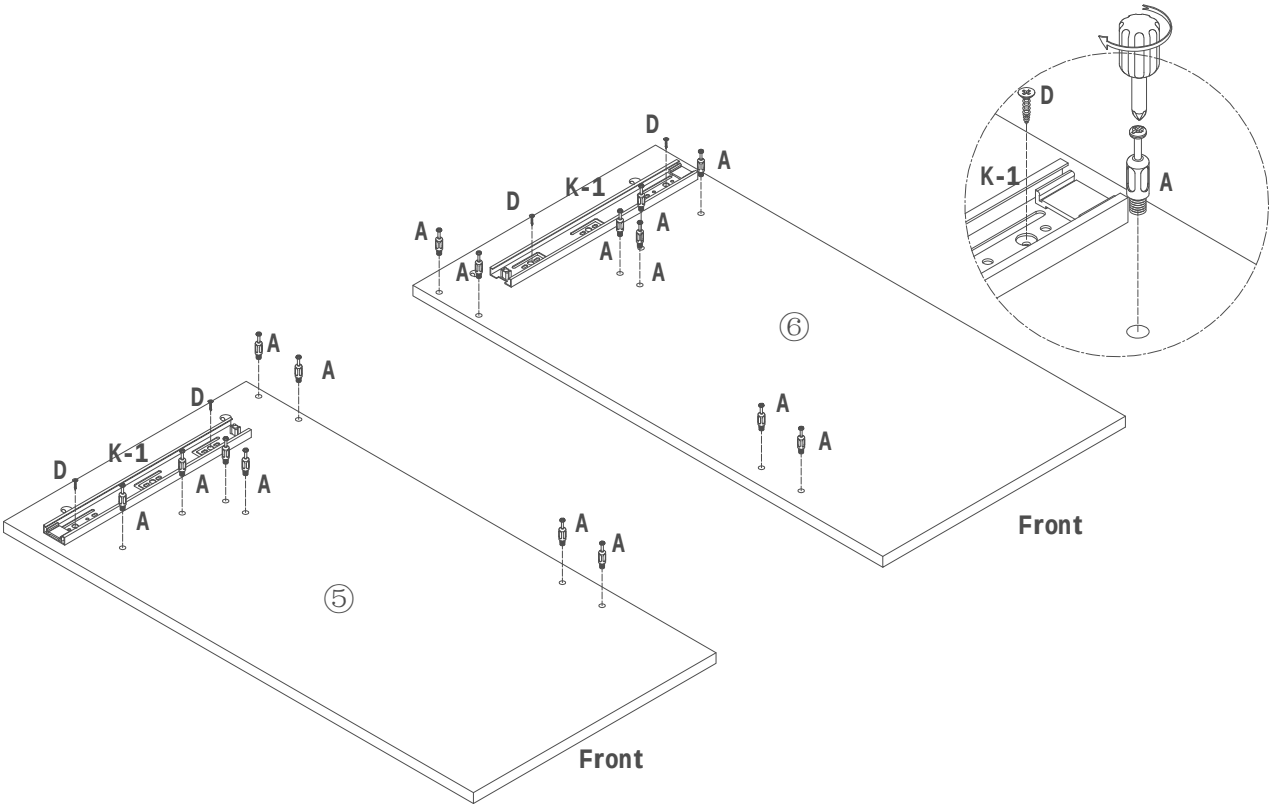


A	x16	D	x4	K-1	x2
 M6*35mm		 Ø3.5*12mm			

Step9

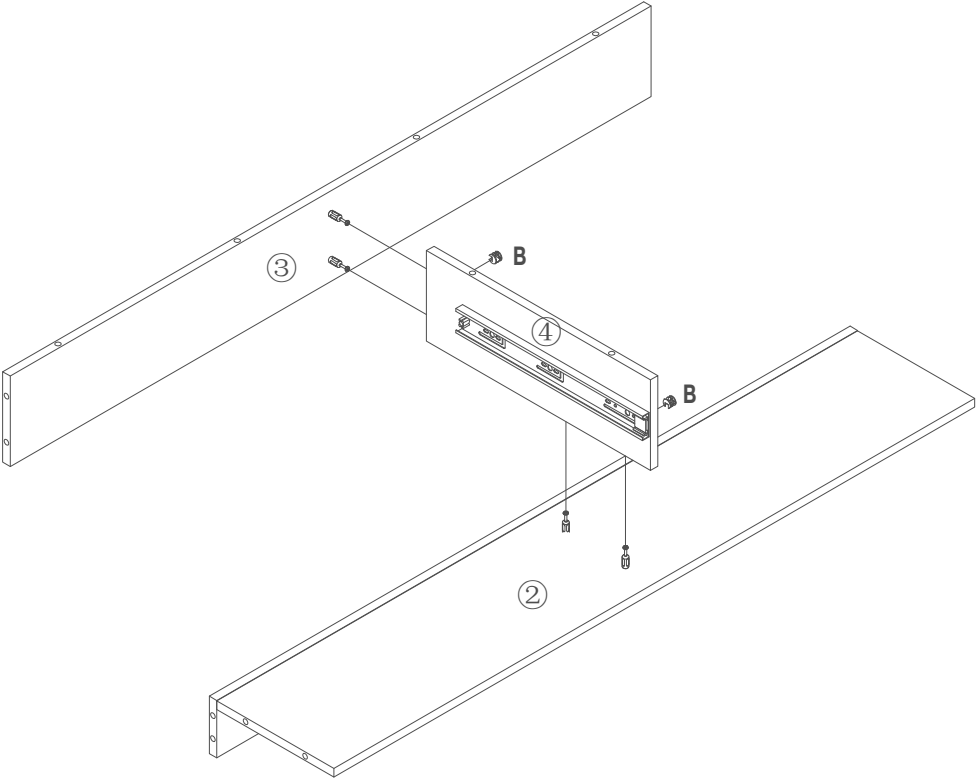


B	x4
	
ø12*10mm	

Step10

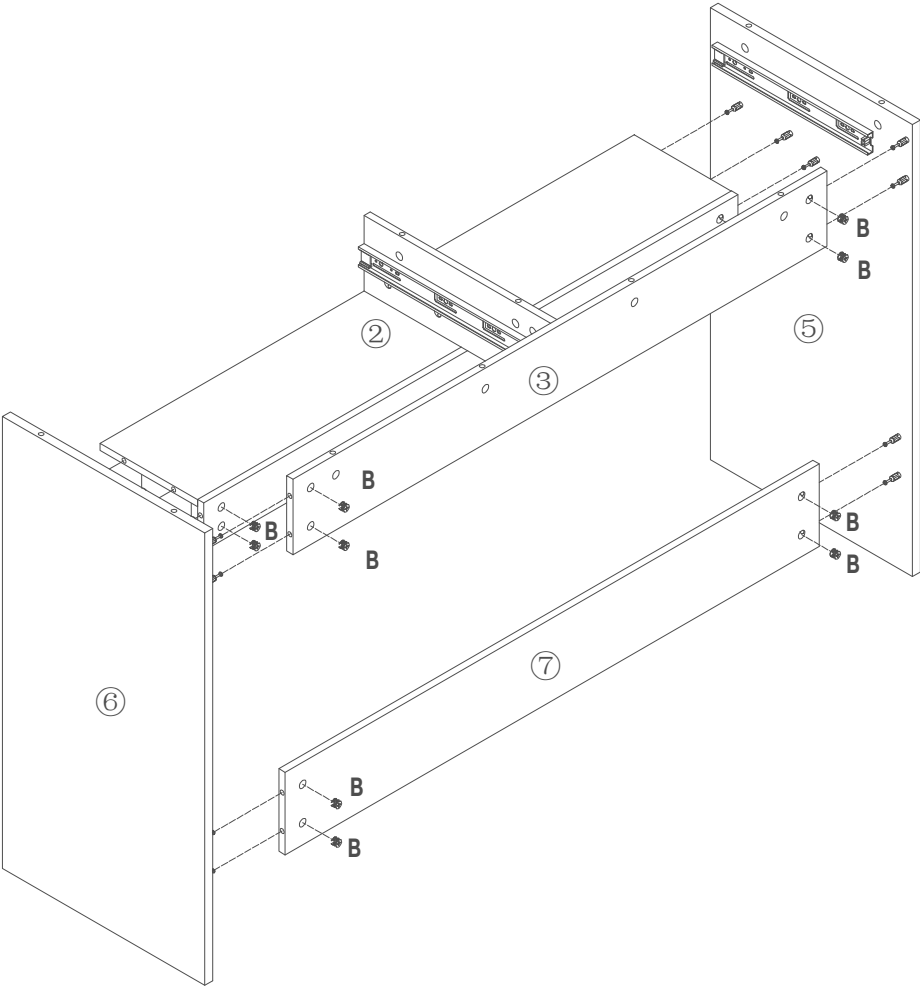


B	x16
	
ø12*10mm	

Step11

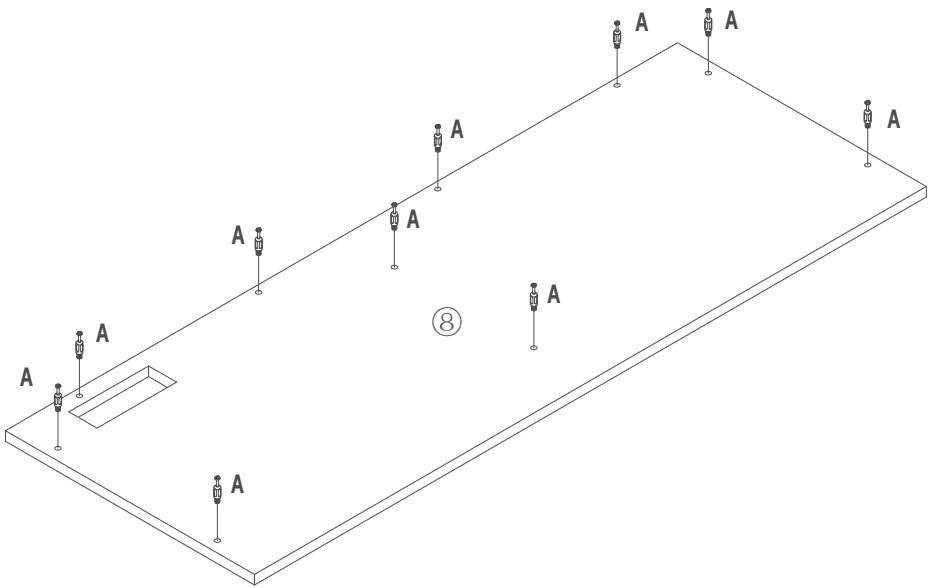

A	x7
 M6*35mm	

Step12

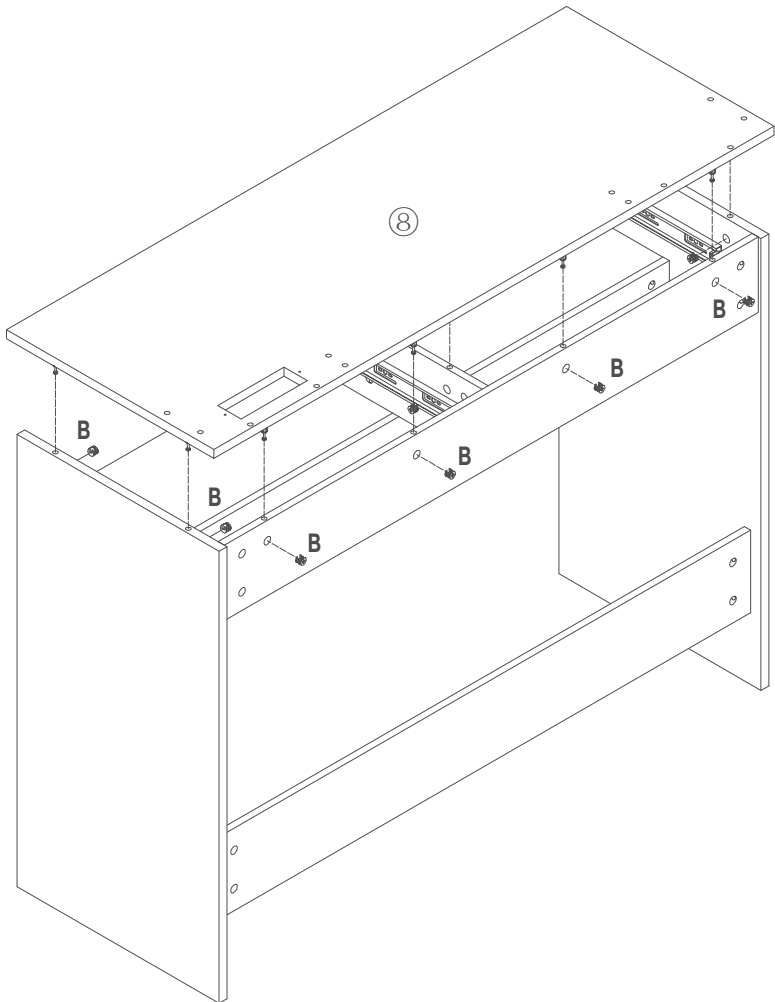

B	x10
 φ12*10mm	

Step13

Diagram illustrating the assembly of a desk component (8) using screws (D, H, Ax6).


A	x12	D	x2	H	x1
					
M6*35mm		Ø3.5*12mm			

Step14

Diagram illustrating the assembly of a component (9) using screws (A).


A	x3
	
M6*35mm	

Step15

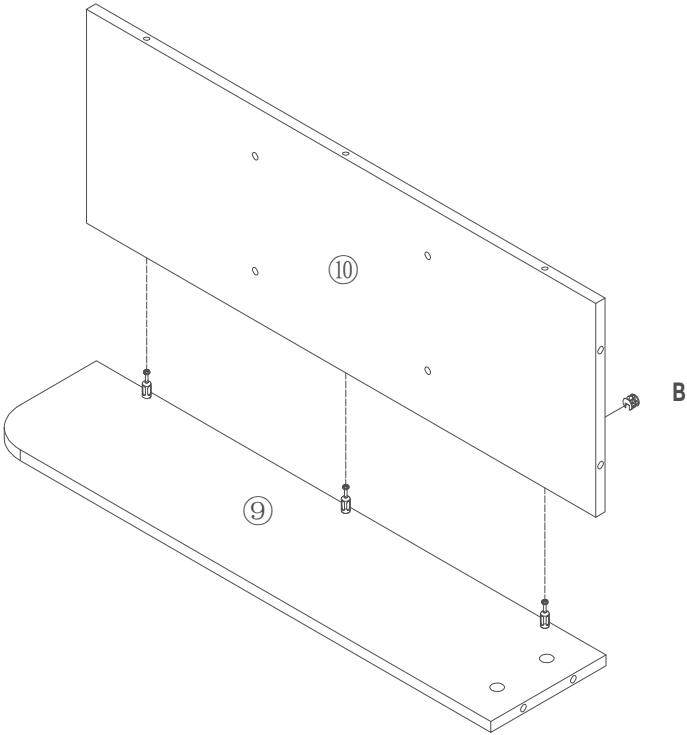


B	x3
 ø12*10mm	

Step16

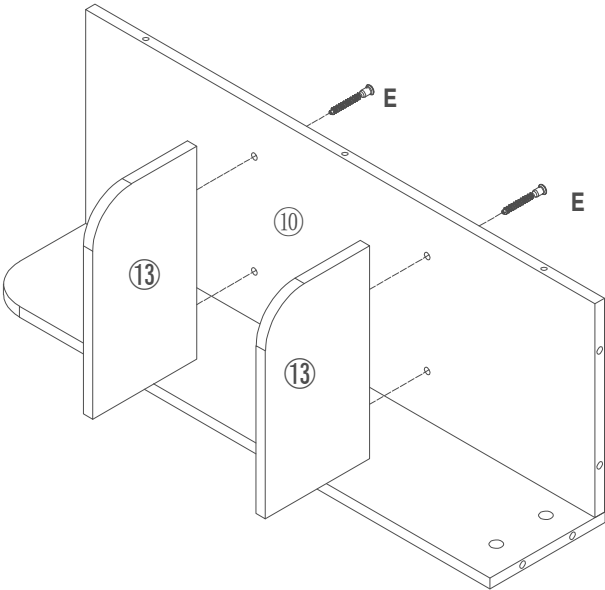


E	x4
 M7*38mm	

Step17

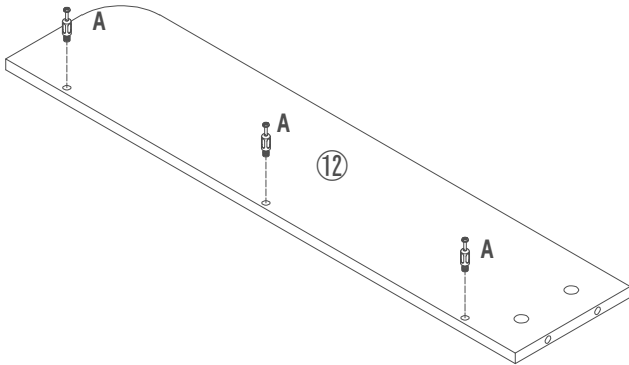


A	x3
 M6*35mm	

Step18

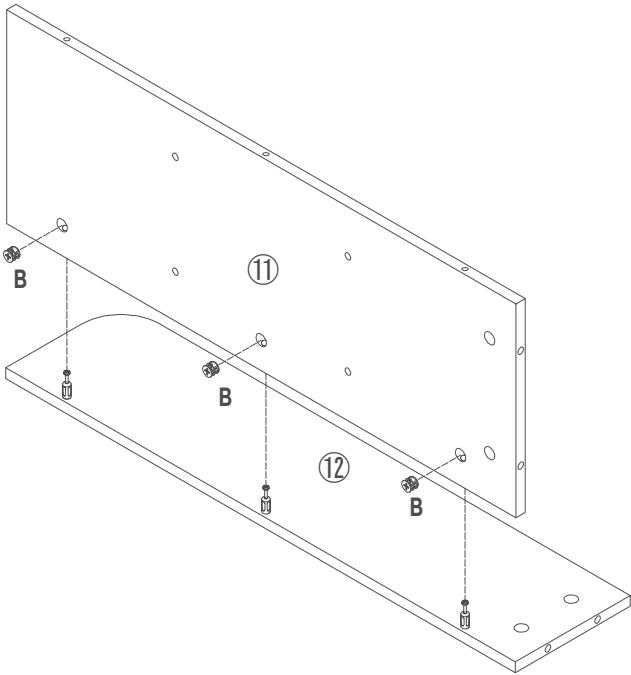


B	x3
 φ12*10mm	

Step19

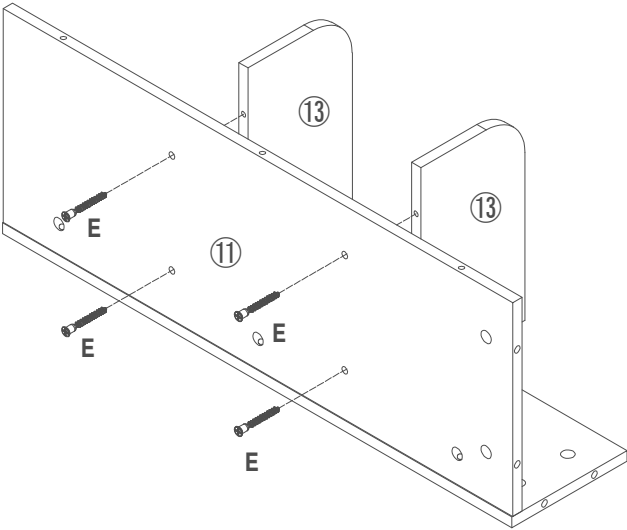


E	x4
 M7*38mm	

Step20

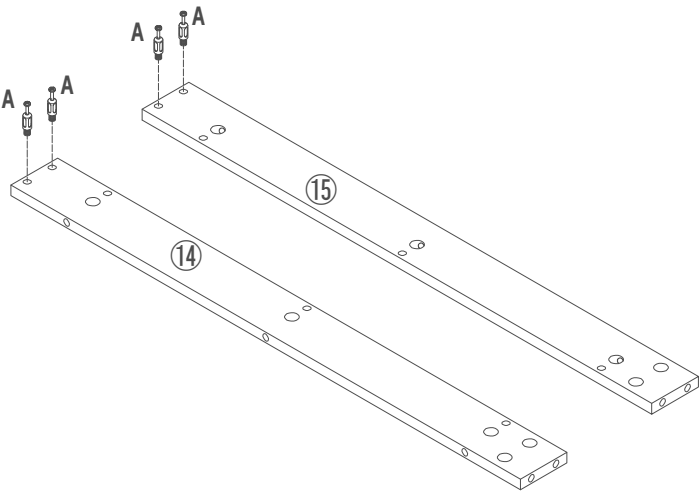


A	x4
 M6*35mm	

Step21

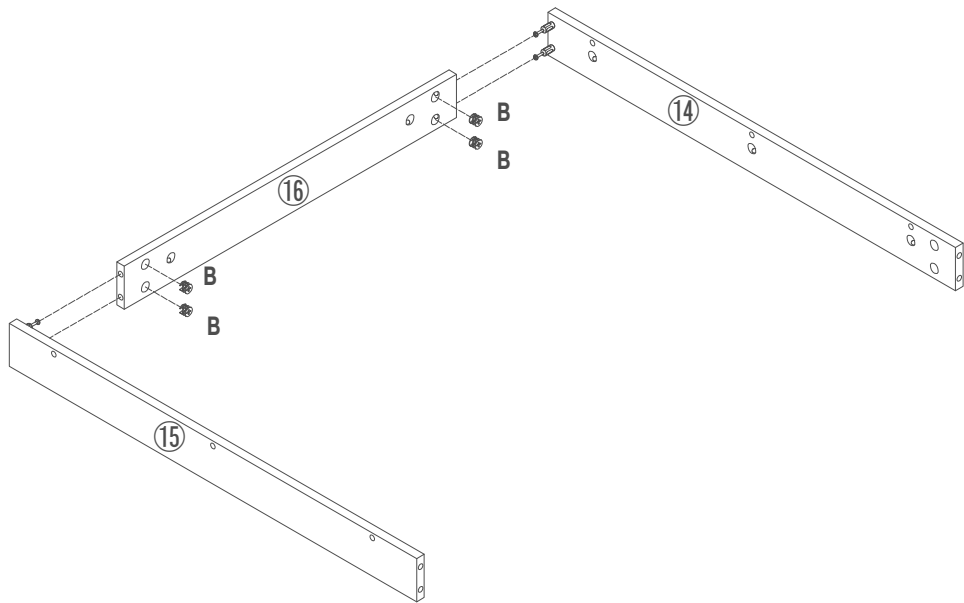


B	x4
 ø12*10mm	

Step22

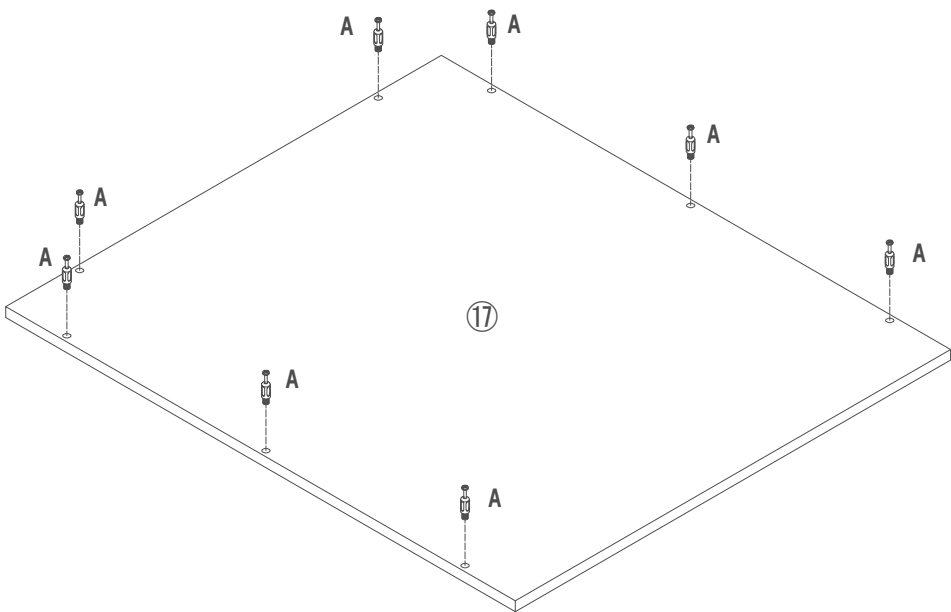


A	x8
 M6*35mm	

Step23

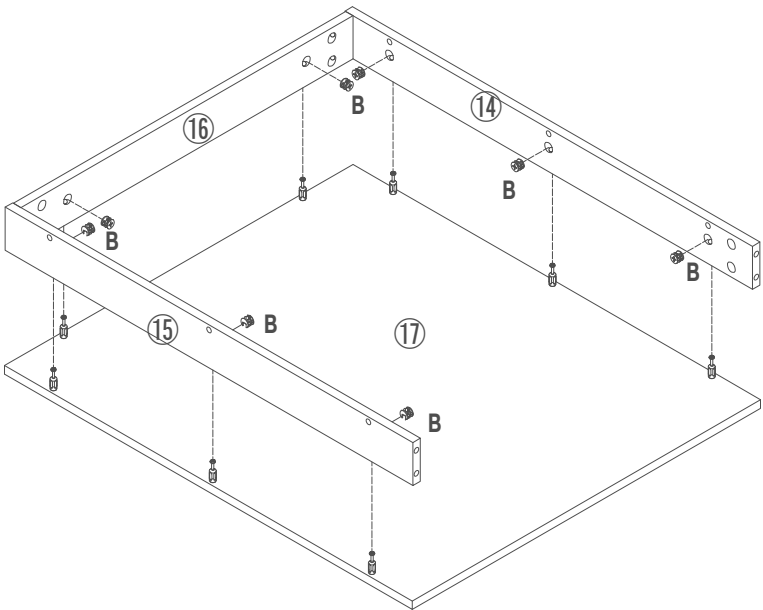


B	x8
	
ø12*10mm	

Step24

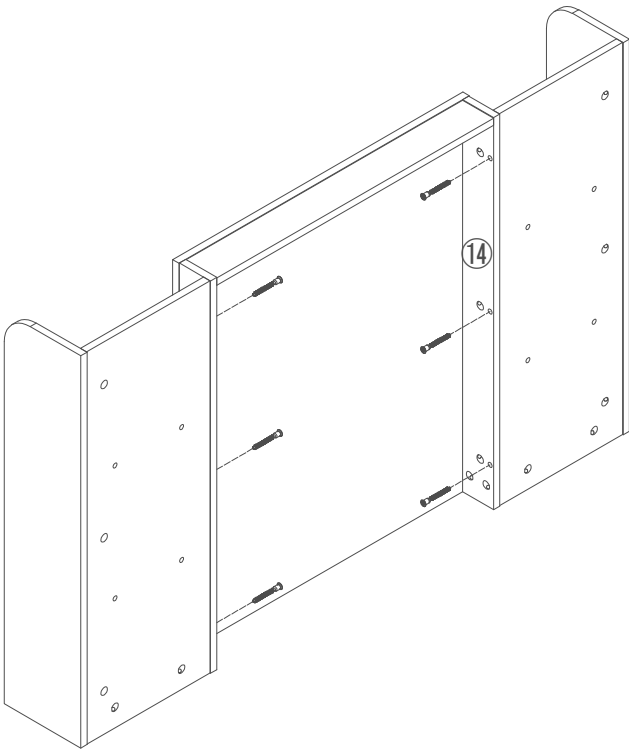


E	x6
	
M7*38mm	

Step25

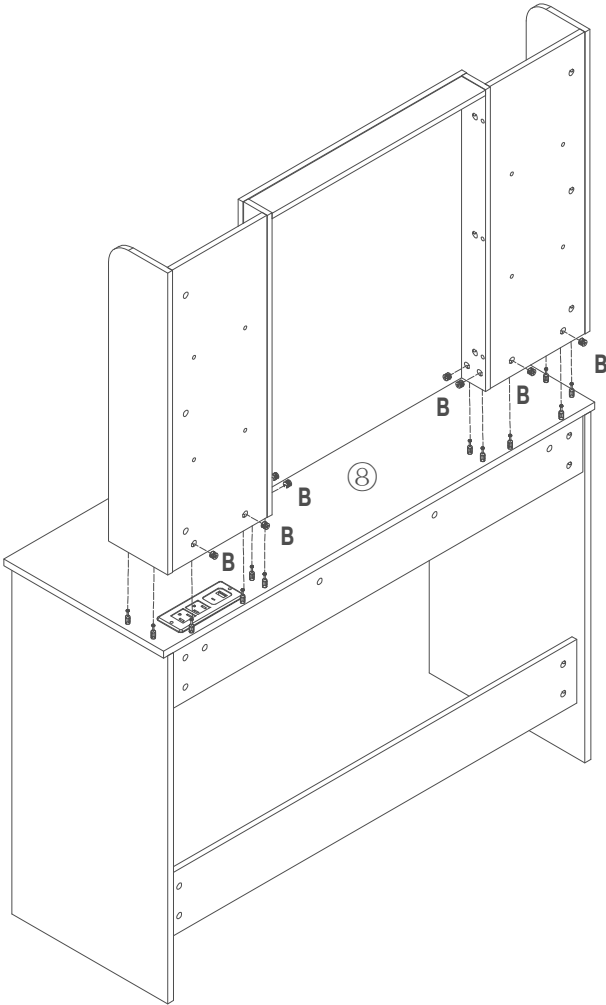


B	x12
	
ø12*10mm	

Step26

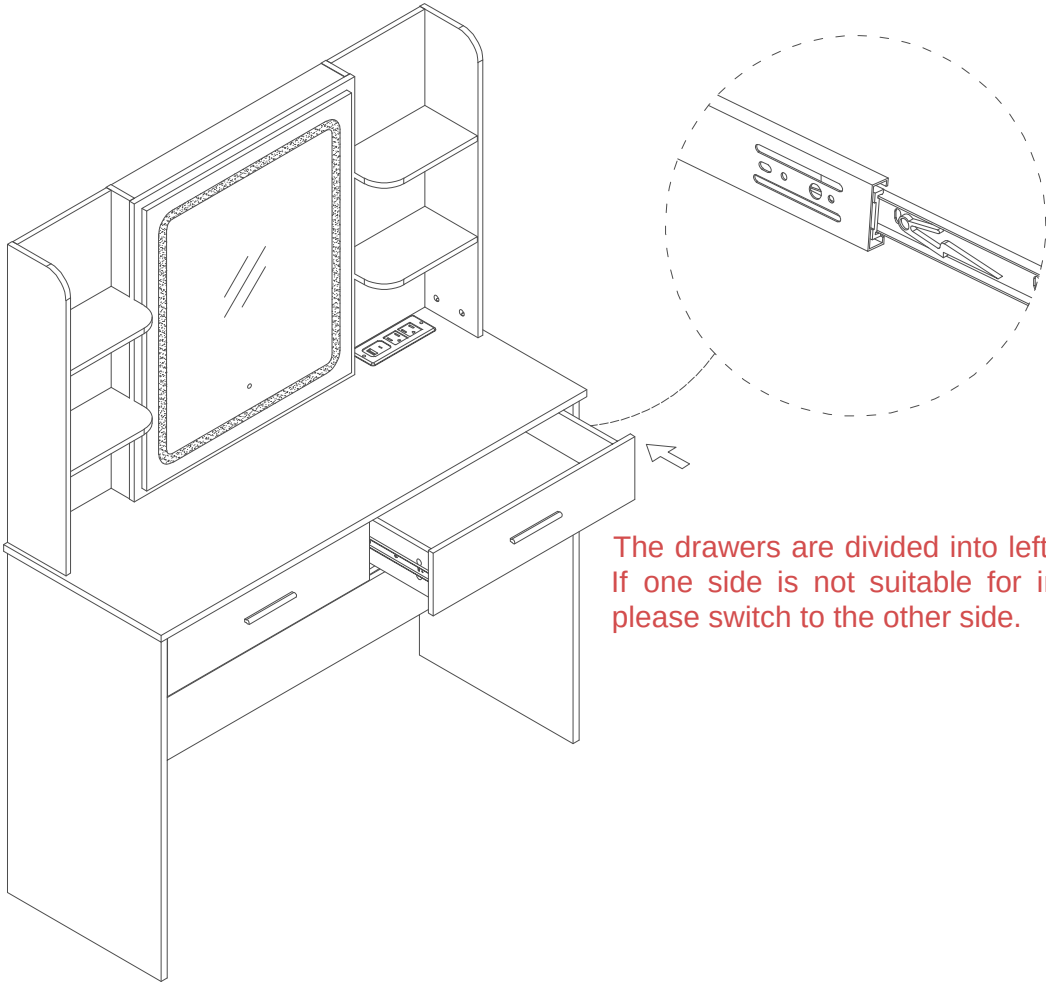


The drawers are divided into left and right.
If one side is not suitable for installation,
please switch to the other side.

Step27

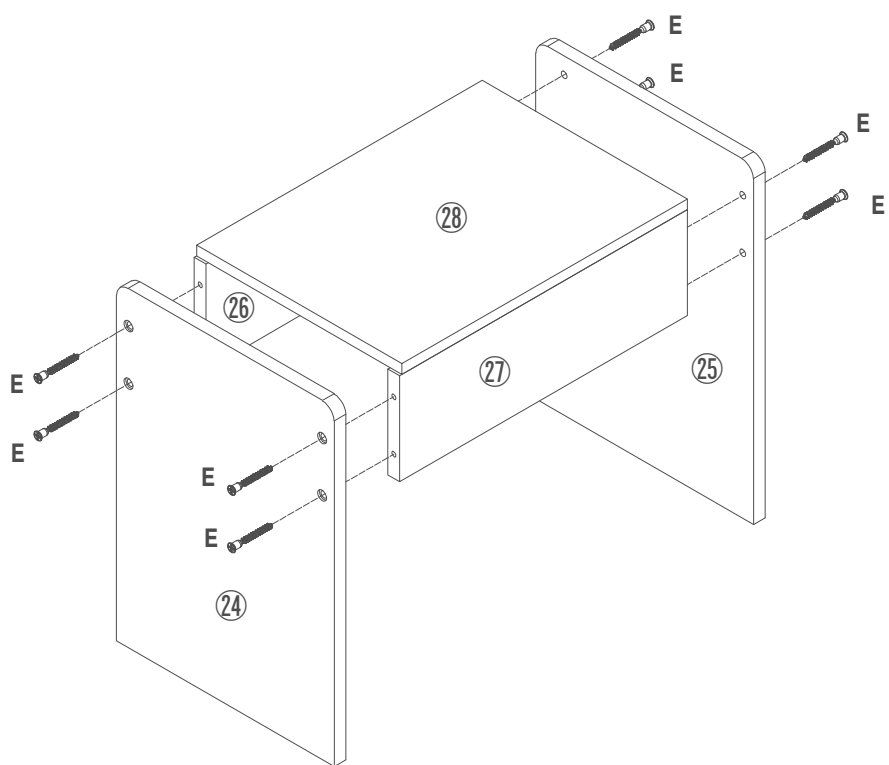

E	x8
 M7*38mm	

Step28

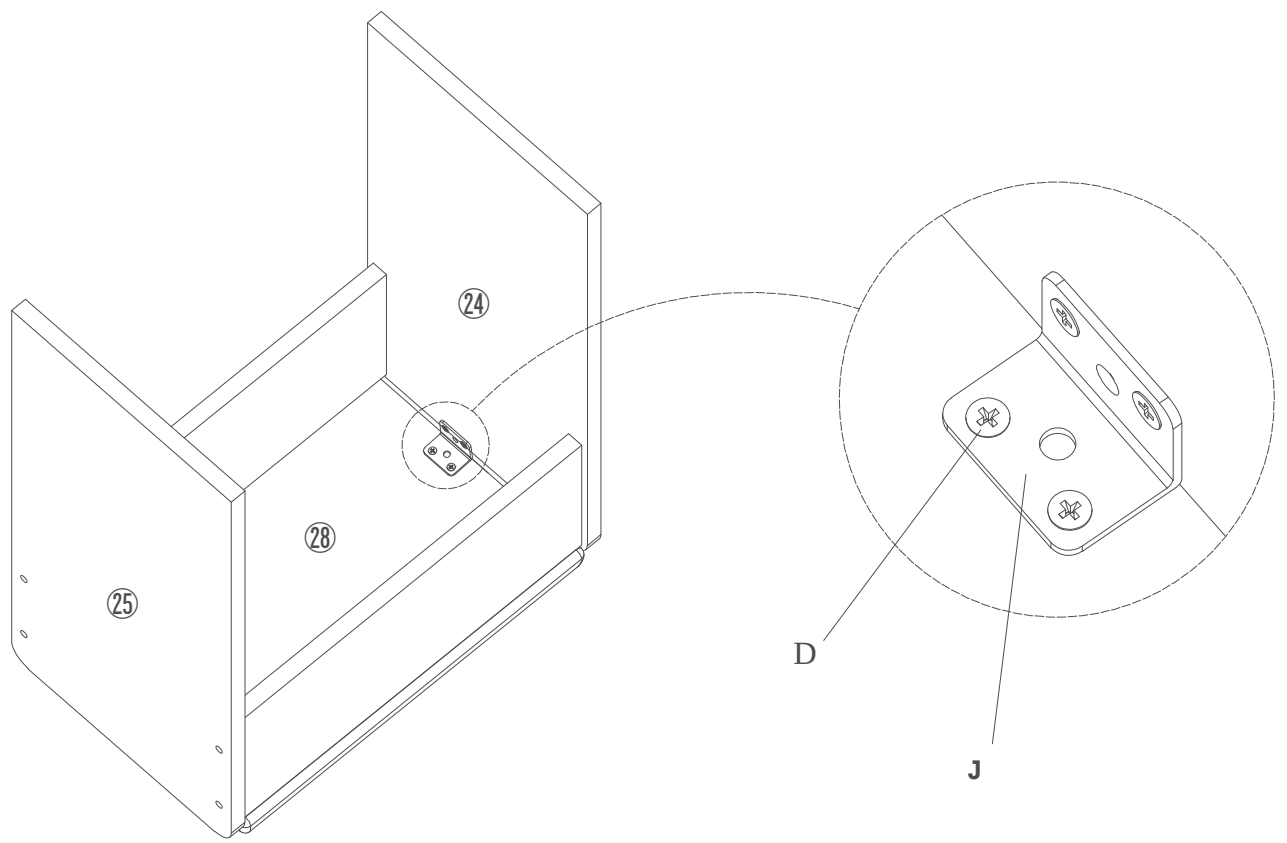

D	x8	J	x4
 Ø3.5*12			