

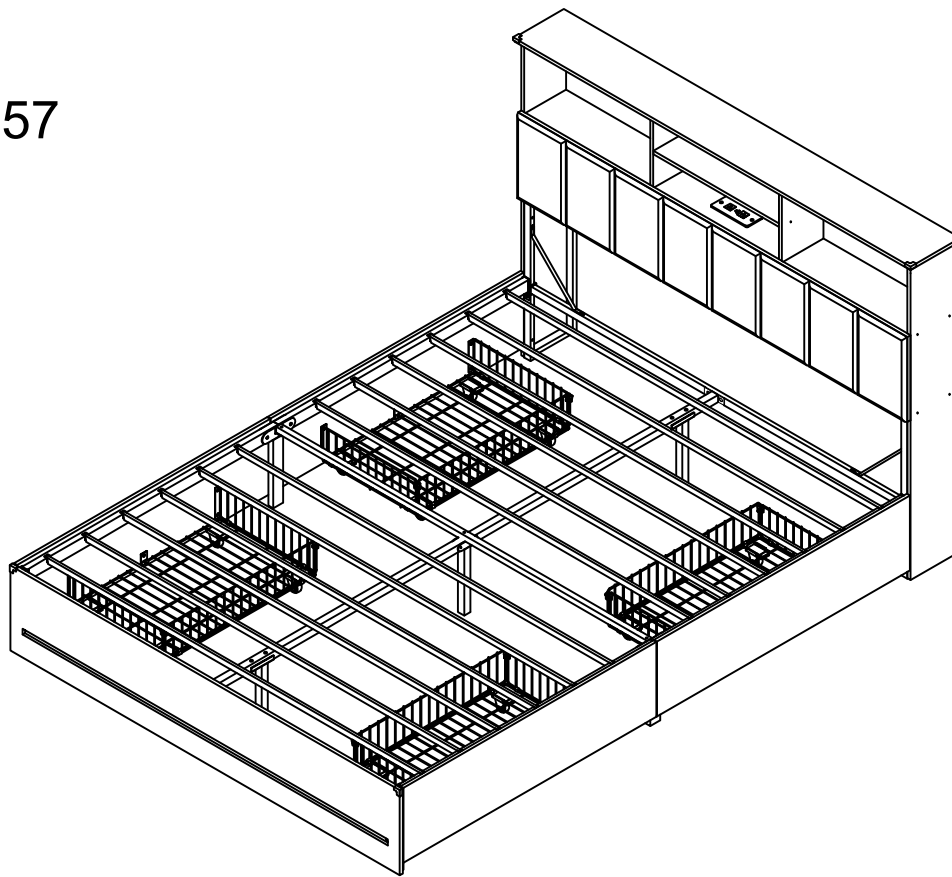
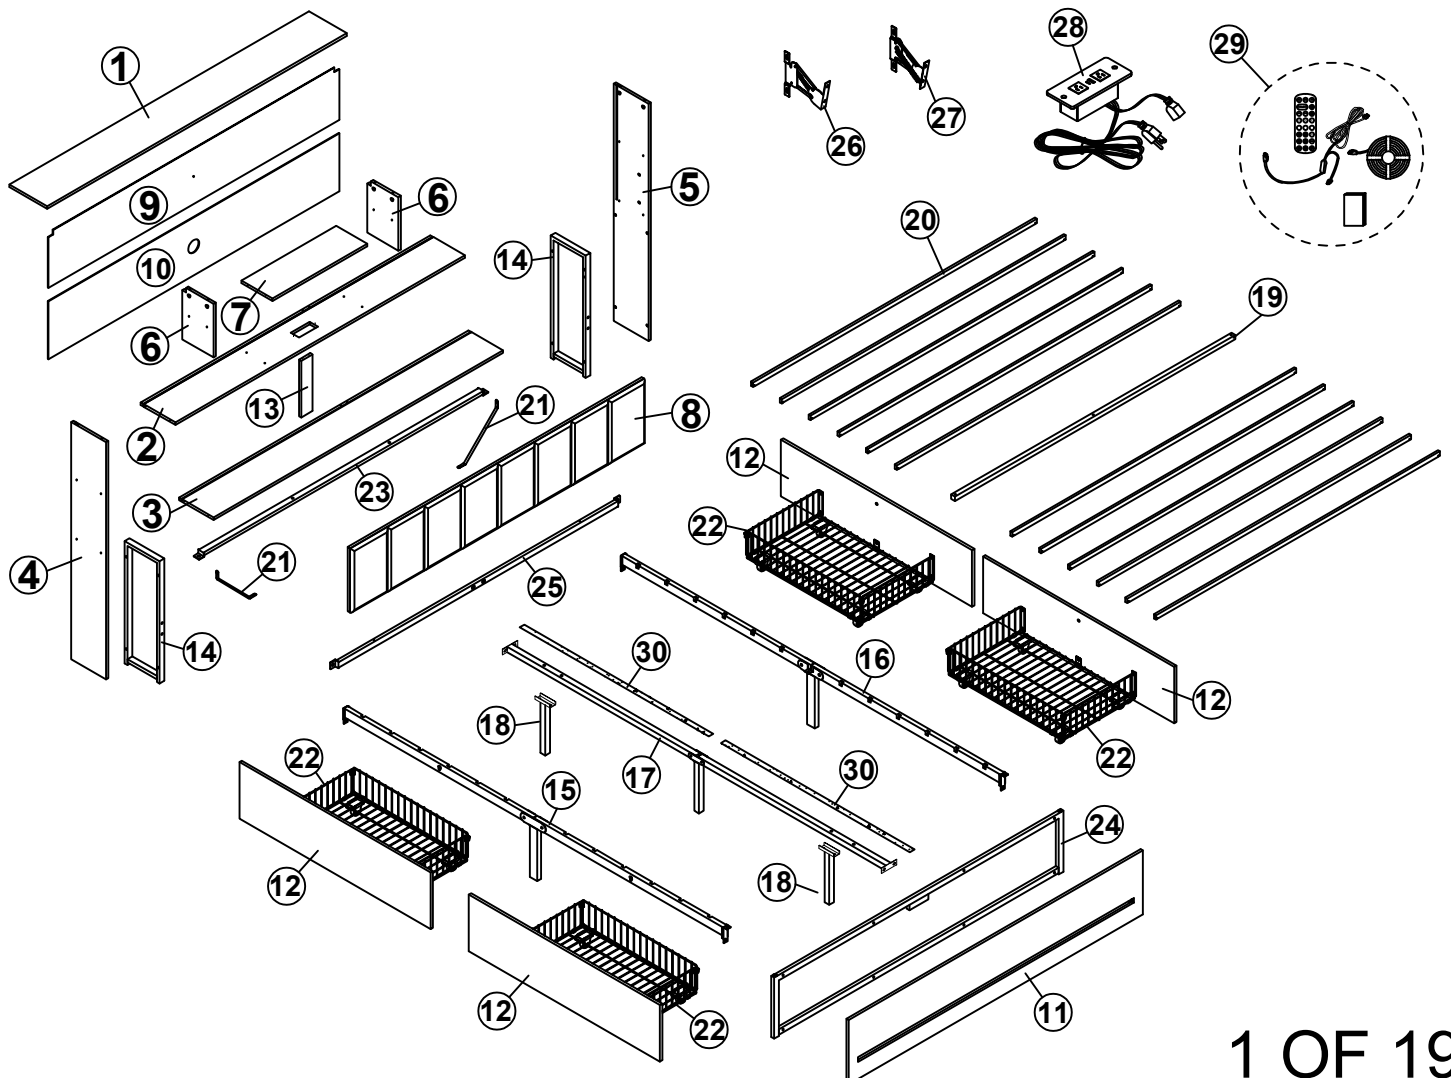
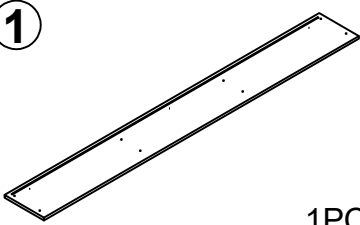
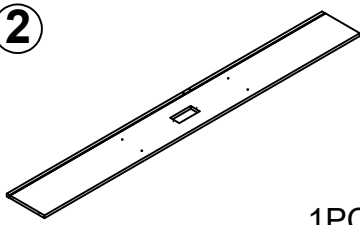
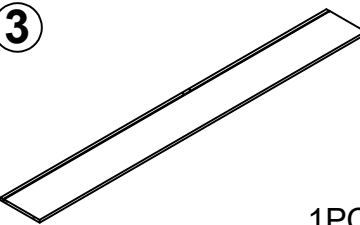
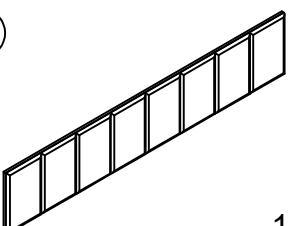
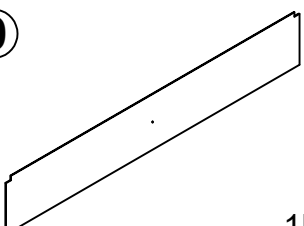
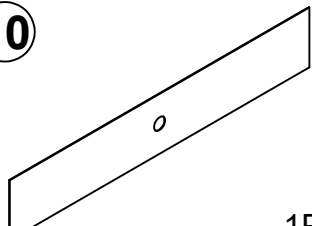
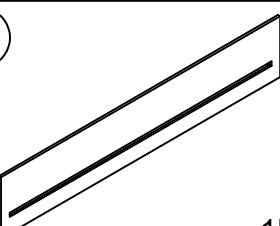


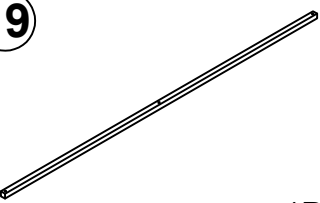
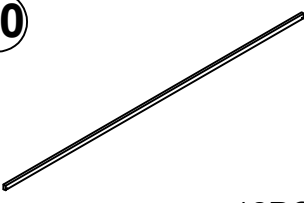
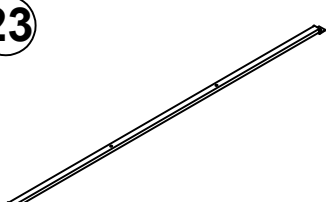


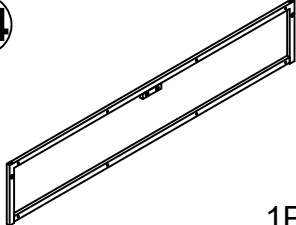









Note:
Should be assembled on flat ground to keep balance.
It needs at least two people to install.
Before starting the assembly, you must read the whole manual and follow the instructions.

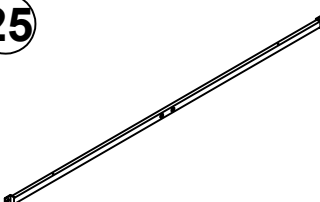








Part list for A box

①  1PC	②  1PC	③  1PC	④  1PC
⑤  1PC	⑧  1PC	⑨  1PC	⑩  1PC
⑪  1PC	⑭  2PCS	⑮  1PC	⑯  1PC
17  1PC	⑱  2PCS	⑲  1PC	20  12PCS
23  1PC	24  1PC	25  1PC	

Part list for B box

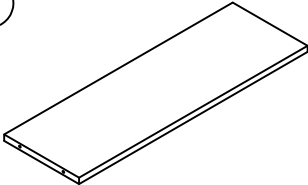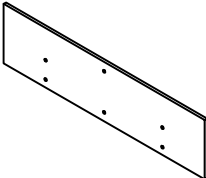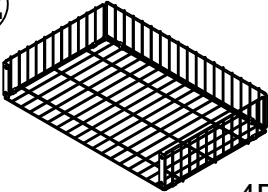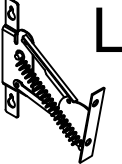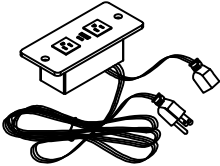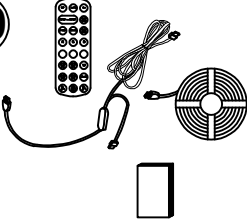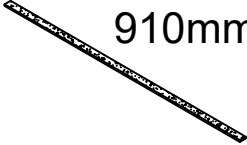
6  2PCS	7  1PC	12  4PCS	13  1PC
21  2PCS	22  4PCS	26  1PC	27  1PC
28  1PC	29  1PC	30  2PCS	

Hardware list for B box

A  8+1PCS	B  8+1PCS	C M3.5x12  13+1PCS	D  3+1PCS	E M5x40  21+2PCS
F  8+1PCS	G M8x16  12+1PCS	H M6x32  10+1PCS	I M6x22  10+1PCS	J M8x25  2+1PCS
K M6x10  30+3PCS	L M6x15  2+1PCS	M M8x35  4+1PCS	N  16PCS	O  8PCS
P  4PCS	Q M6x12  4+1PCS	R M8x55  1PC	S  24+4PCS	T  4PCS
U  4+1PCS	V  5PCS	W  8+1PCS	X M4  2PCS	Y M3  1PC
Z  1PC				


Step 3

C		M3.5X12	2PCS
Z			1PC

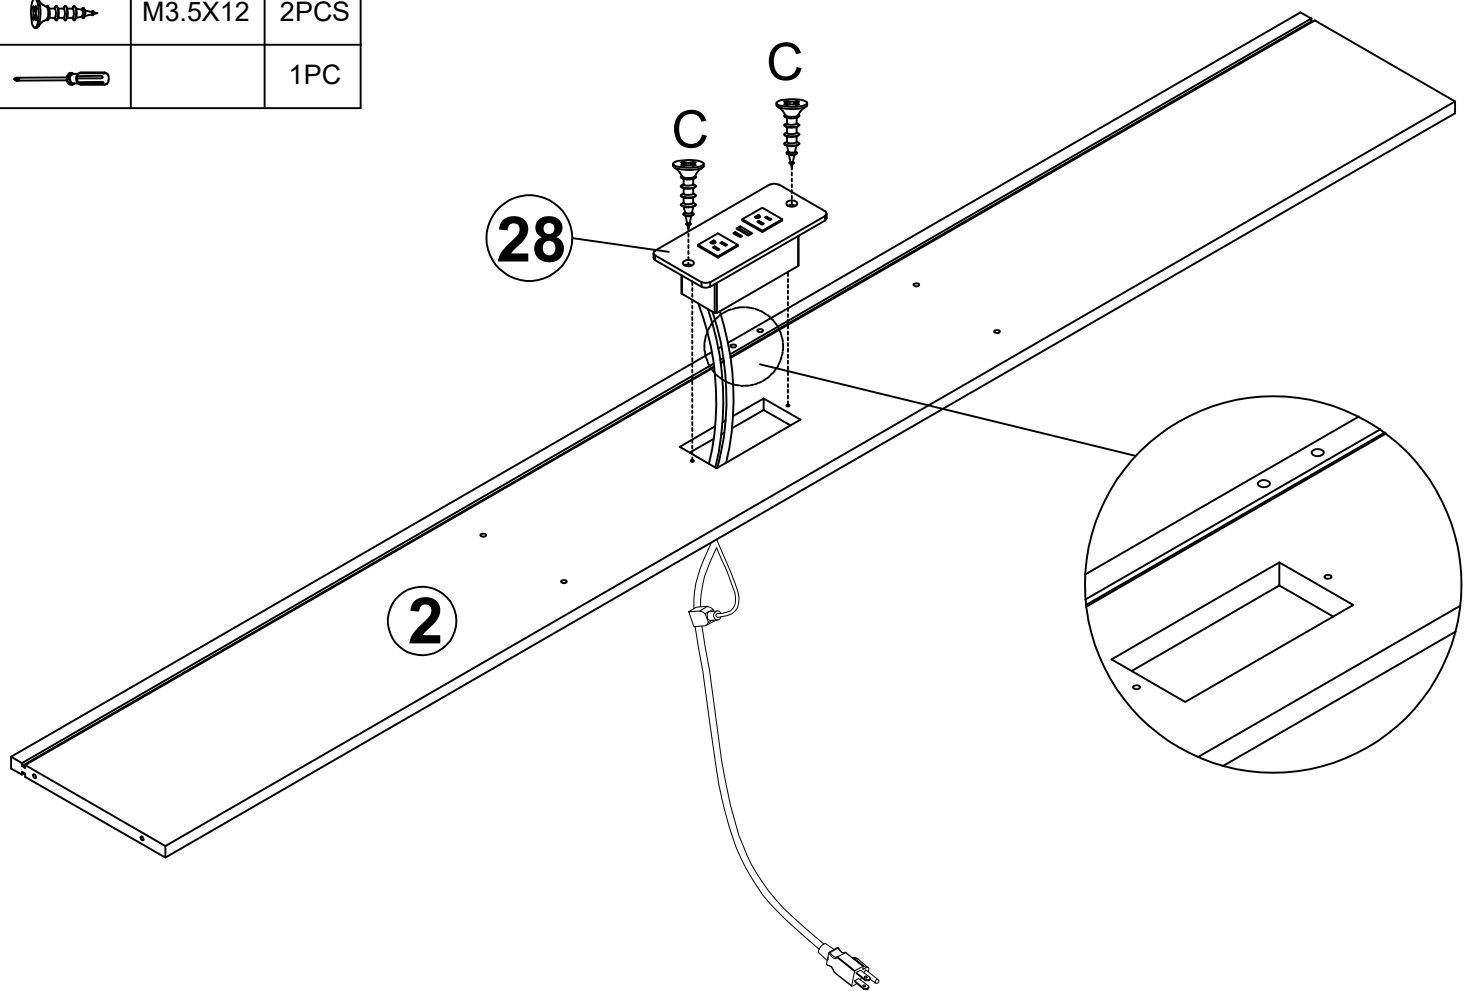

Step 4


E		M5x40	8PCS
Y		M3	1PC

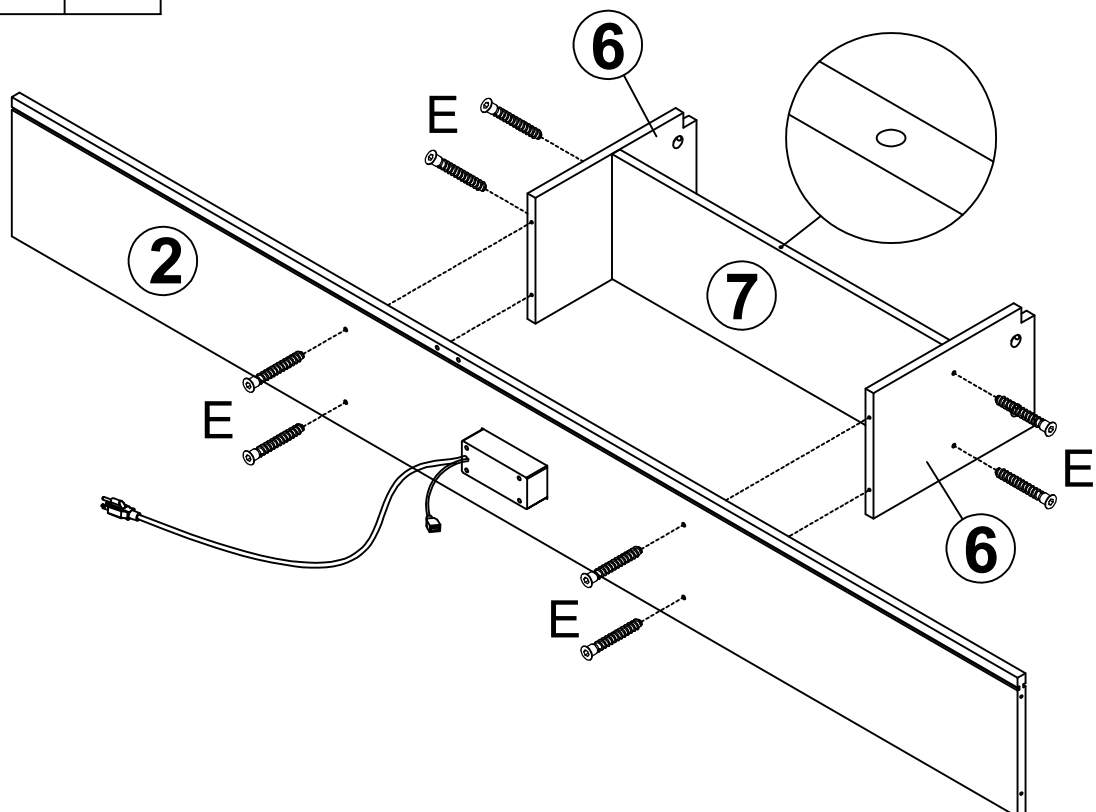


Step 5

E		M5x40	8PCS
Y		M3	1PC

The card slot is inside.

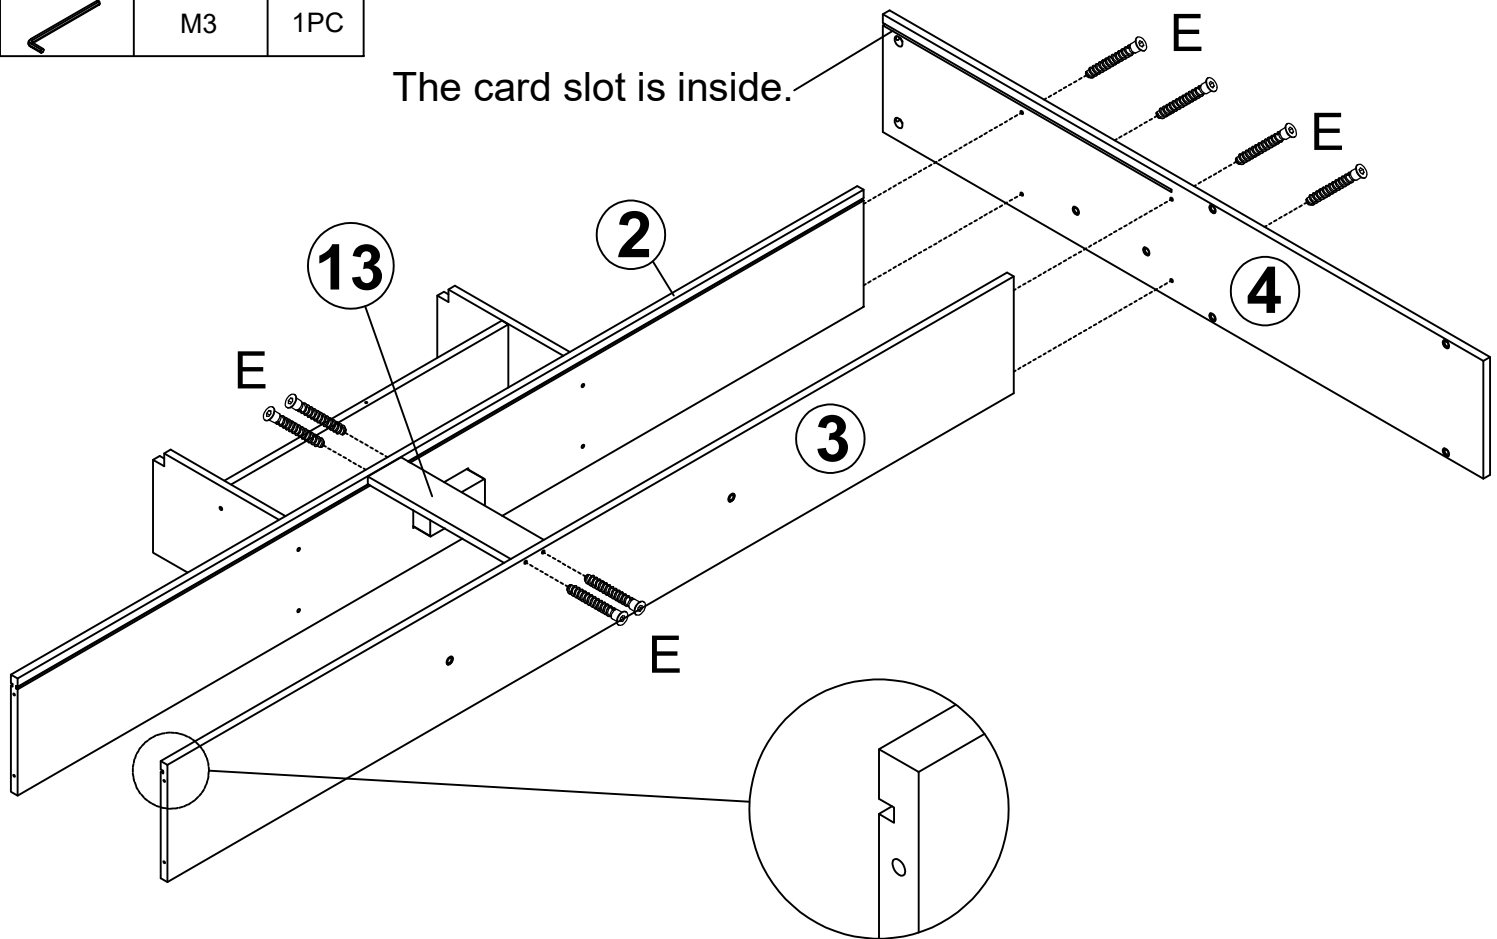


Step 6

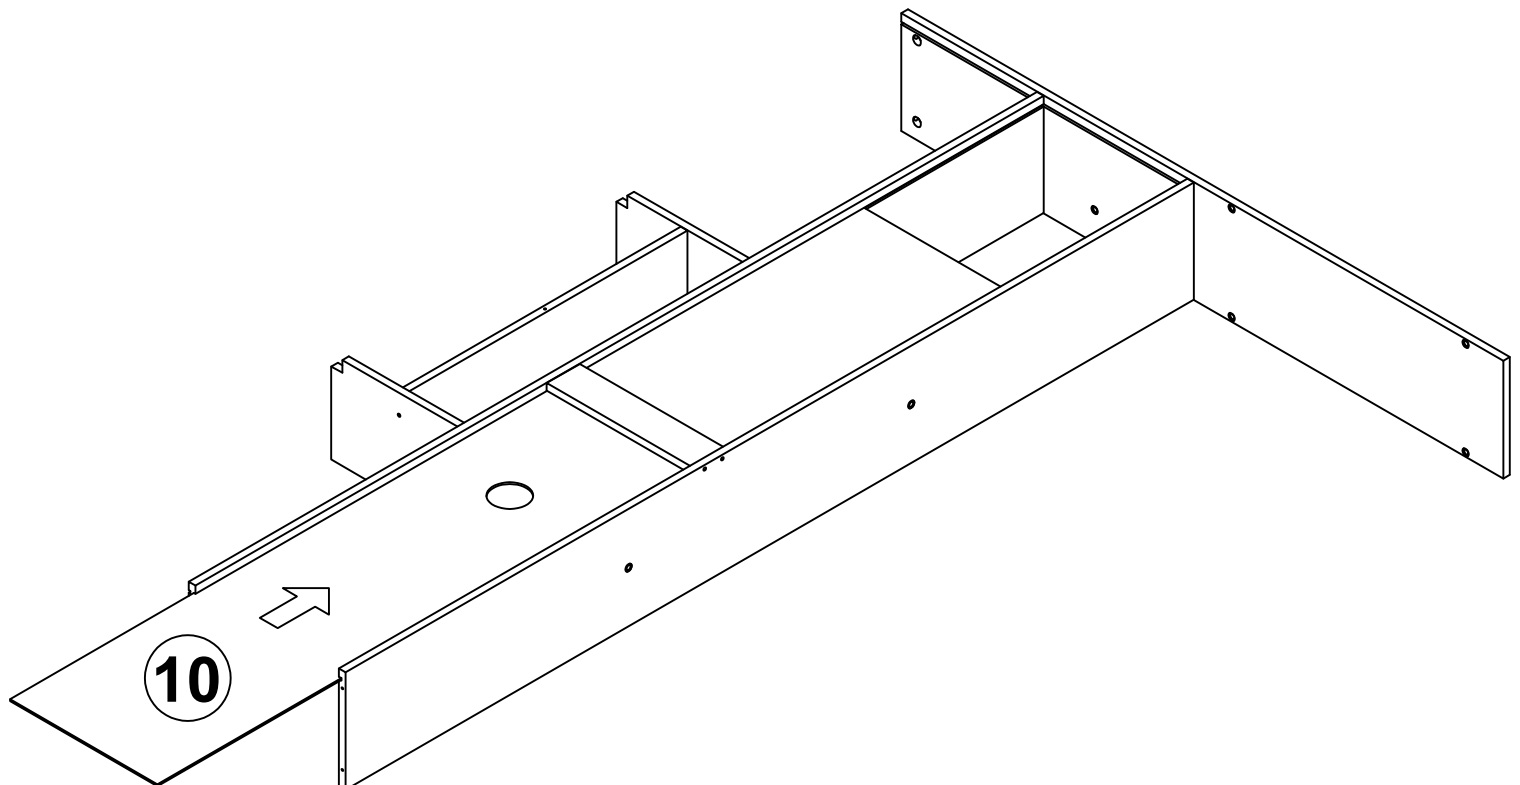


Step 7

E		M5x40	4PCS
Y		M3	1PC

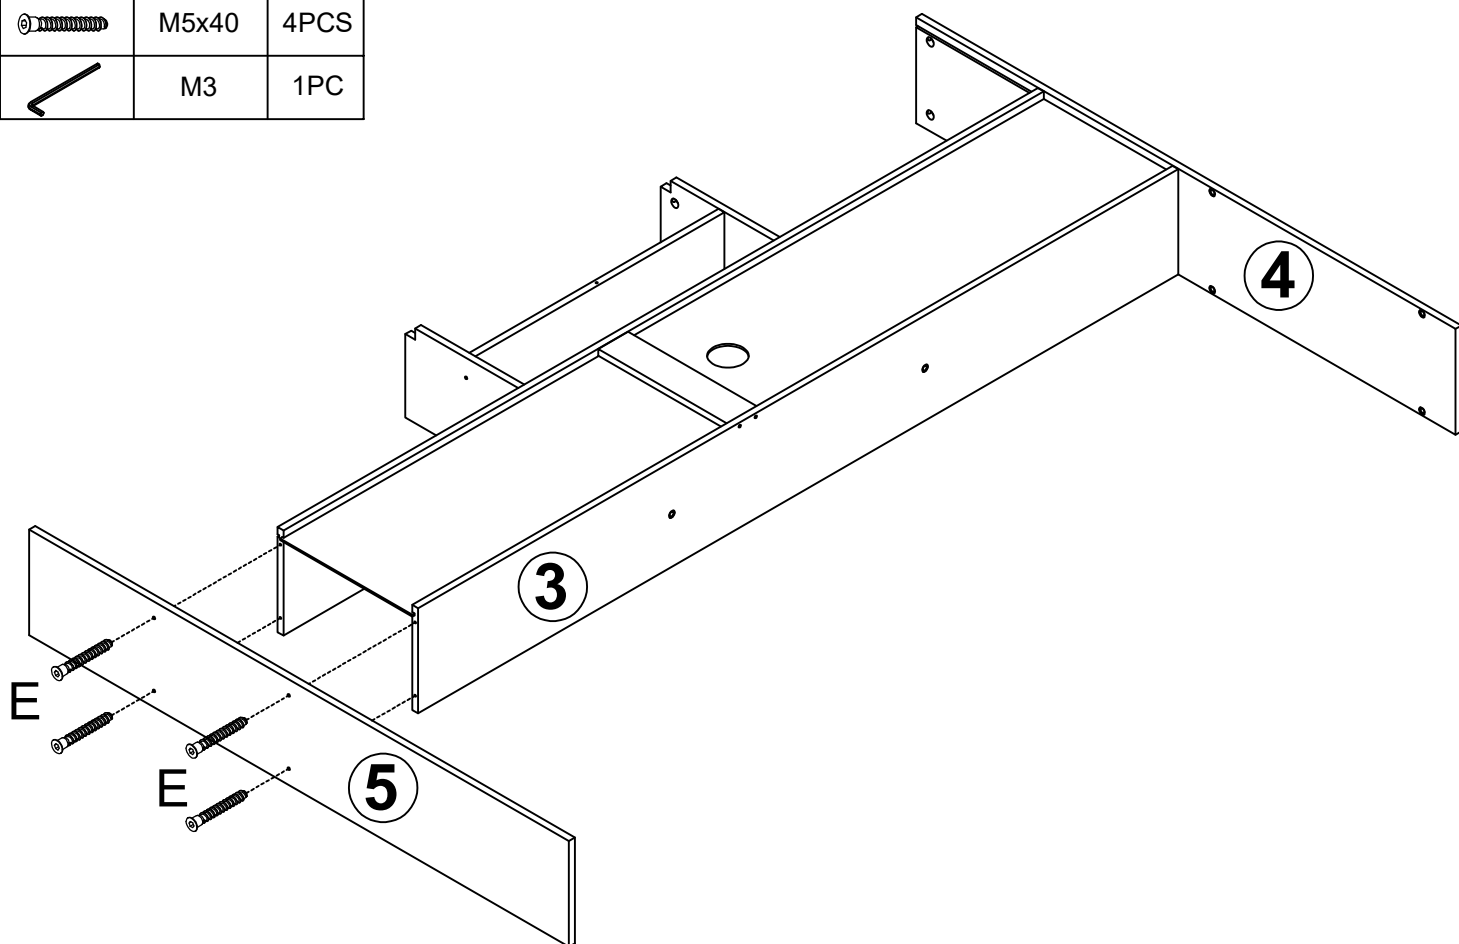

Step 8



E		M5x40	1PC
Y		M3	1PC

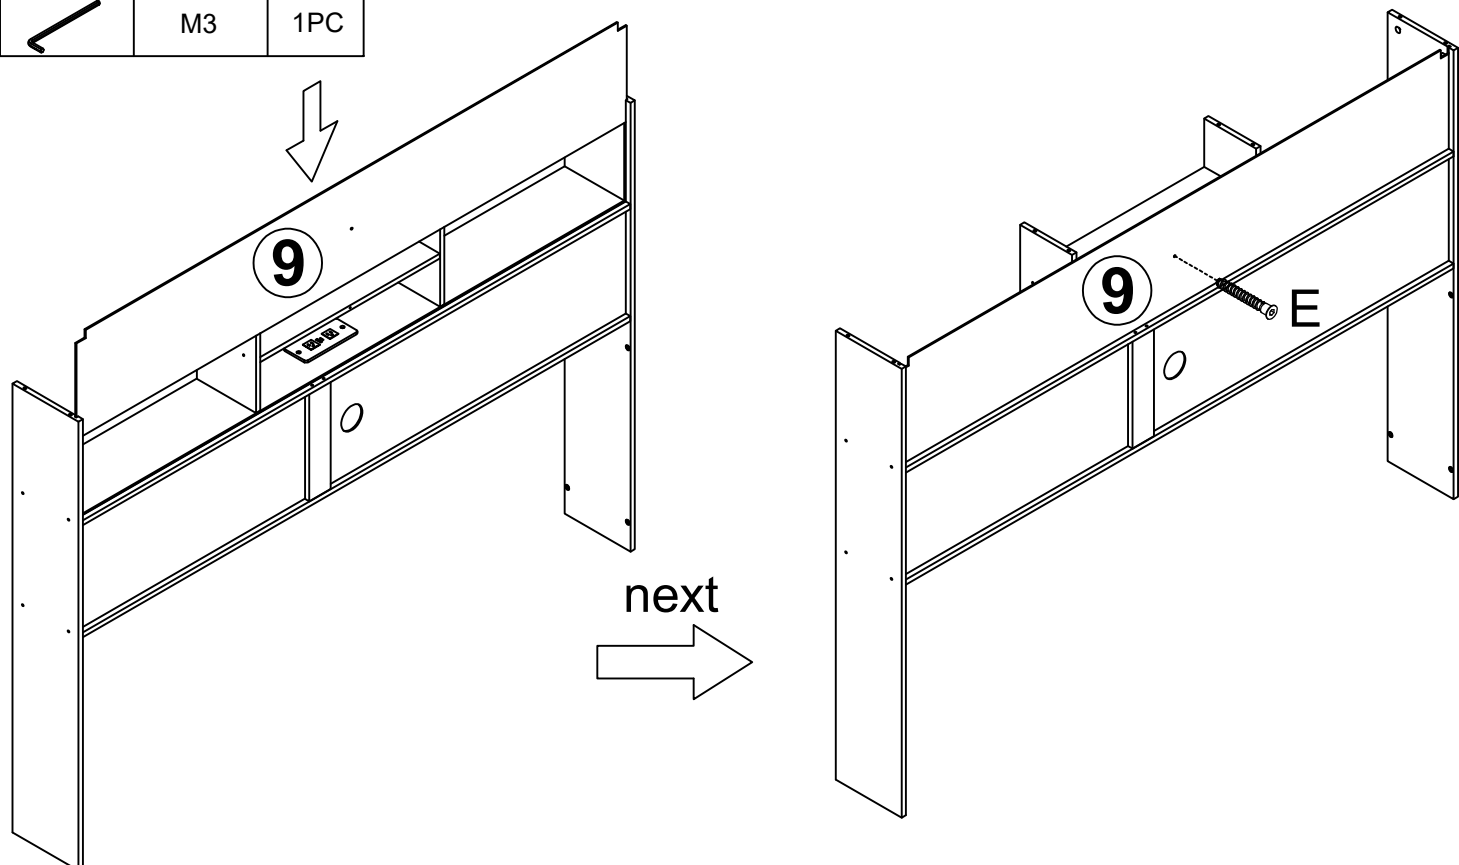

Step 9

B			8PCS
Z			1PC
F			8PCS

Note that the groove on **1** is on the back side.

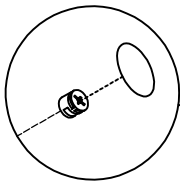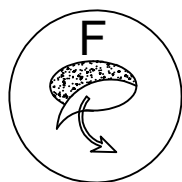

⚠ DUMP WITH CARE

⚠ RECOMMEND 2 OR MORE ADULTS FOR QUICKER ASSEMBLY

4

1

F

F

B

F



B

F

B


5

Front

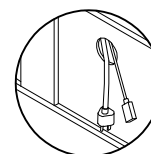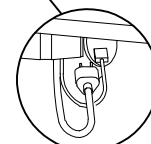

Step 10

G		M8x16	4PCS
X		M4	1PC

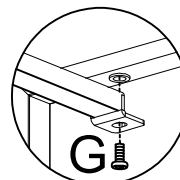

23

25

14


G

G

14


G

G

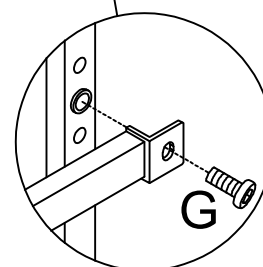


Step 11

H		M6x32	8PCS
I		M6x22	2PCS
X		M4	1PC

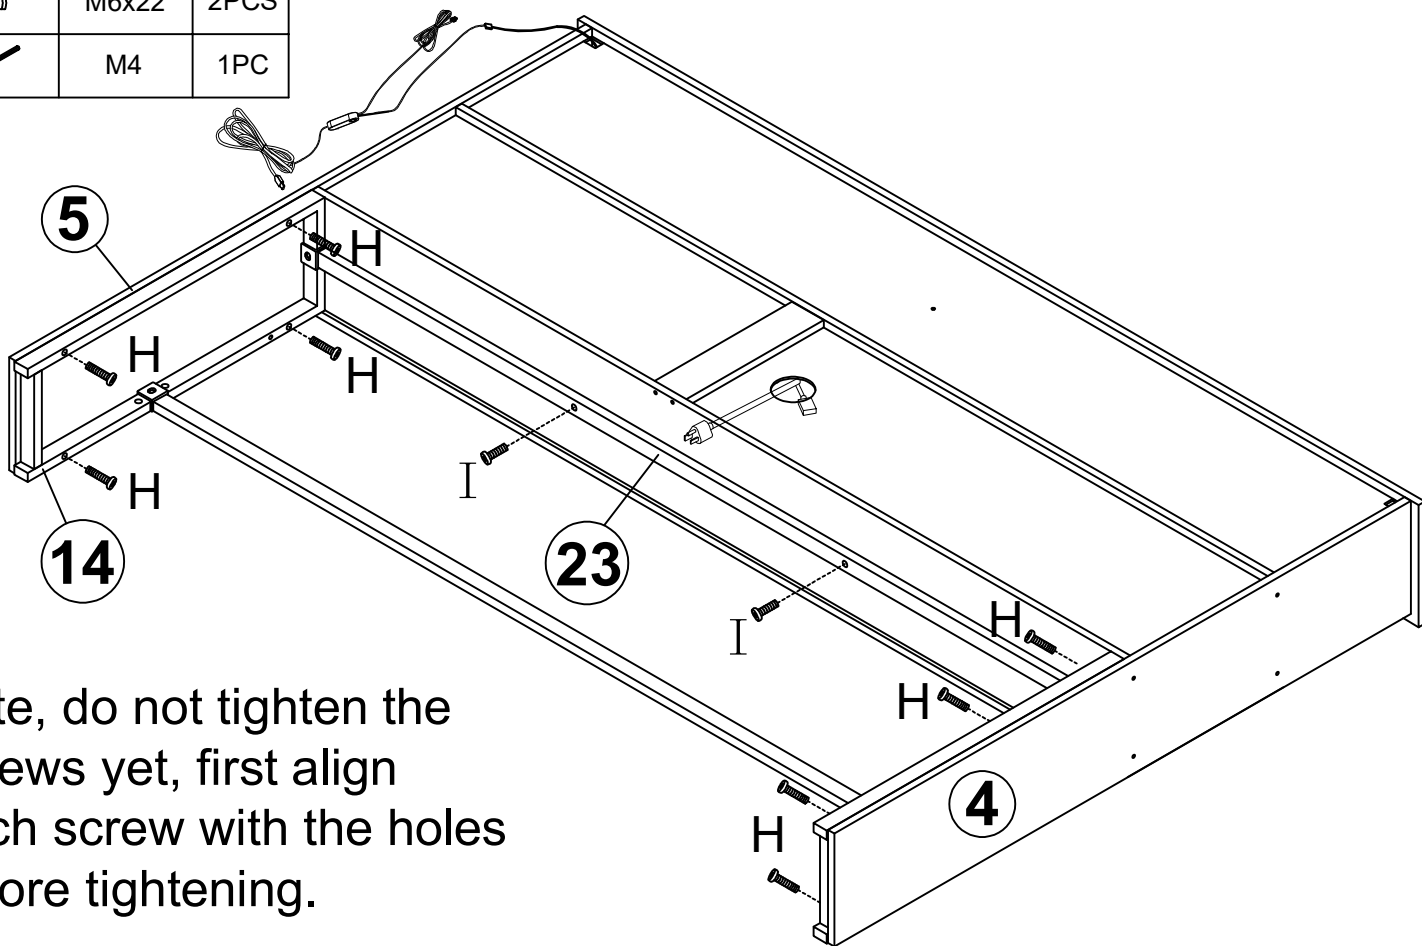



Step 12

I		M6x22	8PCS
G		M8x16	4PCS
X		M4	1PC

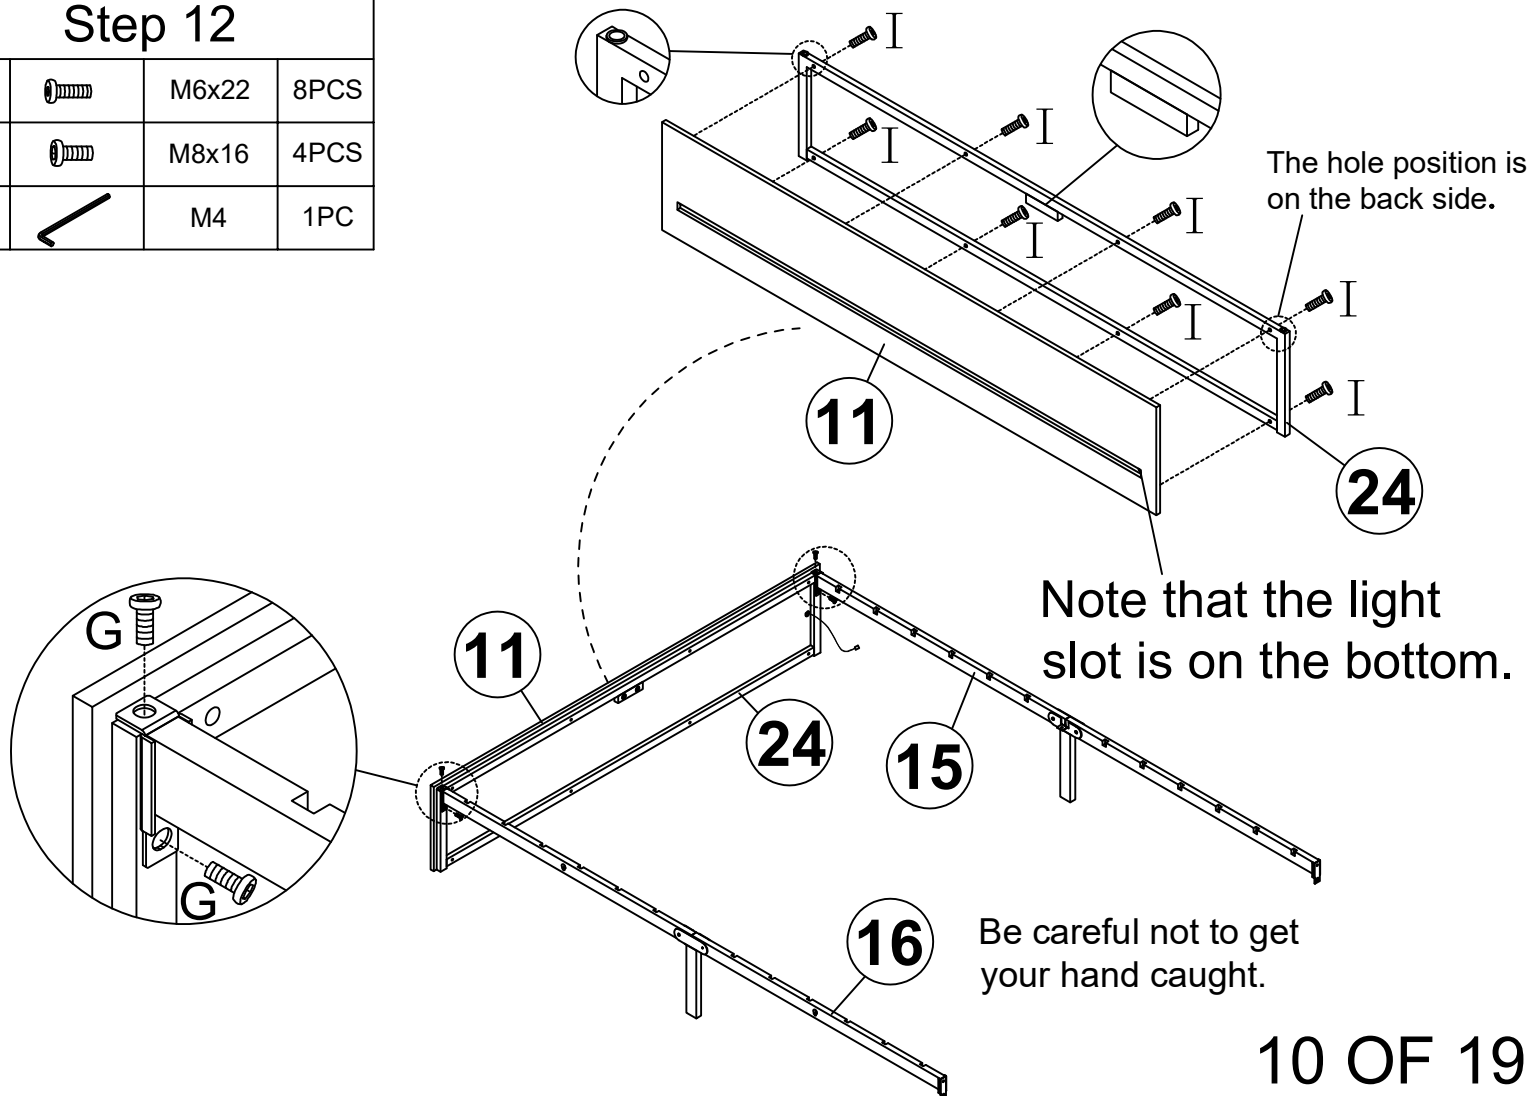


Step 13

J		M8x25	2PCS
K		M6x10	2PCS
L		M6x15	2PCS
X		M4	2PCS

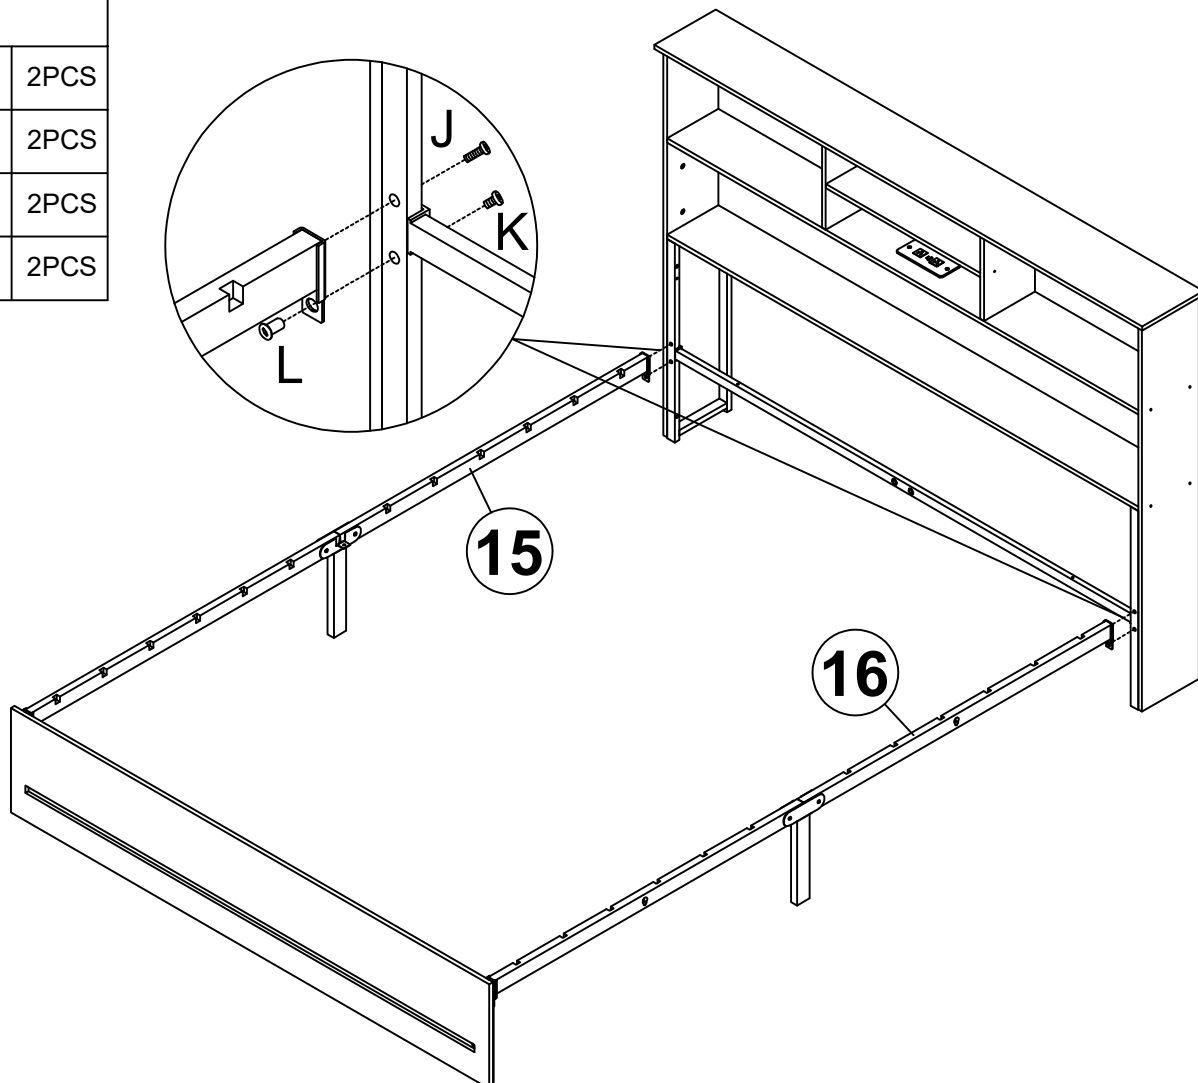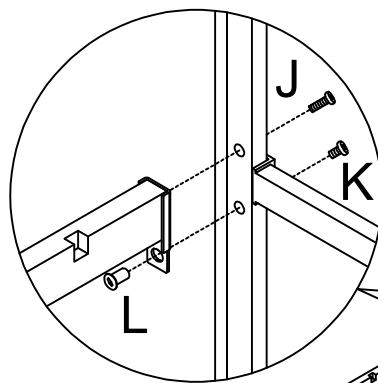


Step 14

G		M8x16	4PCS
M		M8x35	2PCS
X		M4	1PC

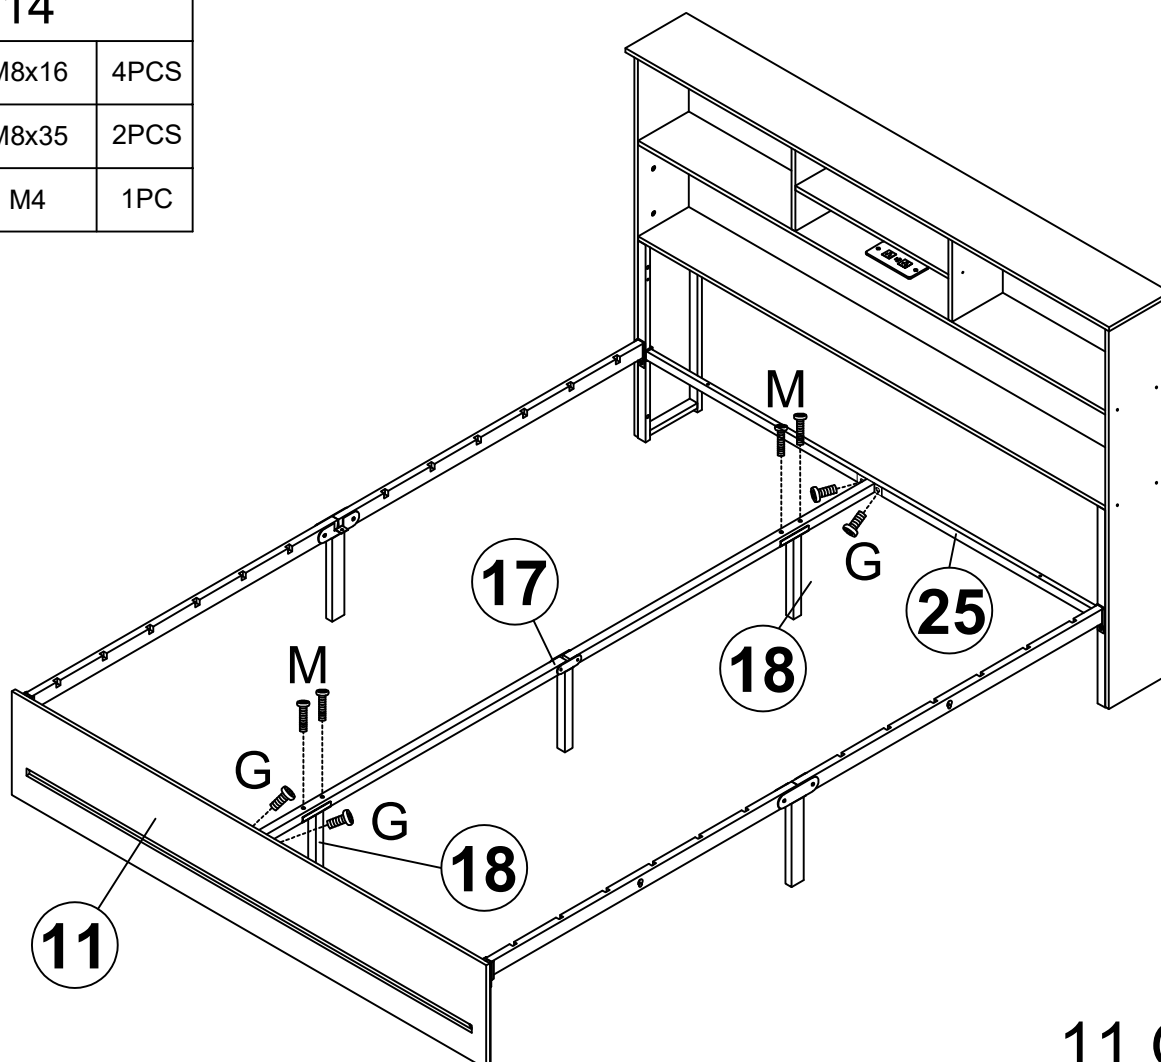


Step 15

H		M6x32	2PCS
R		M8x55	1PC
X		M4	1PC

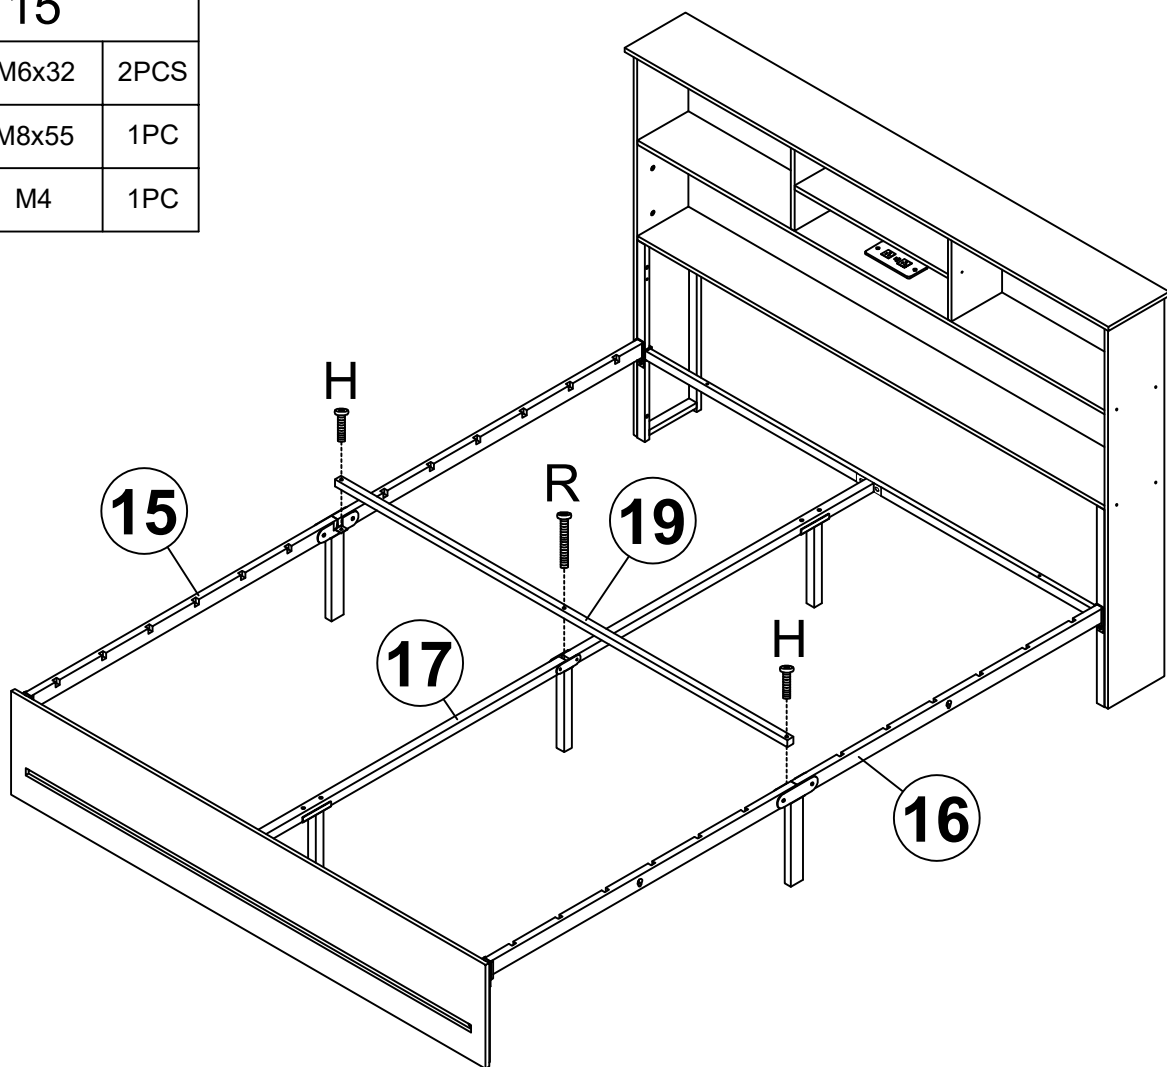


Step 16

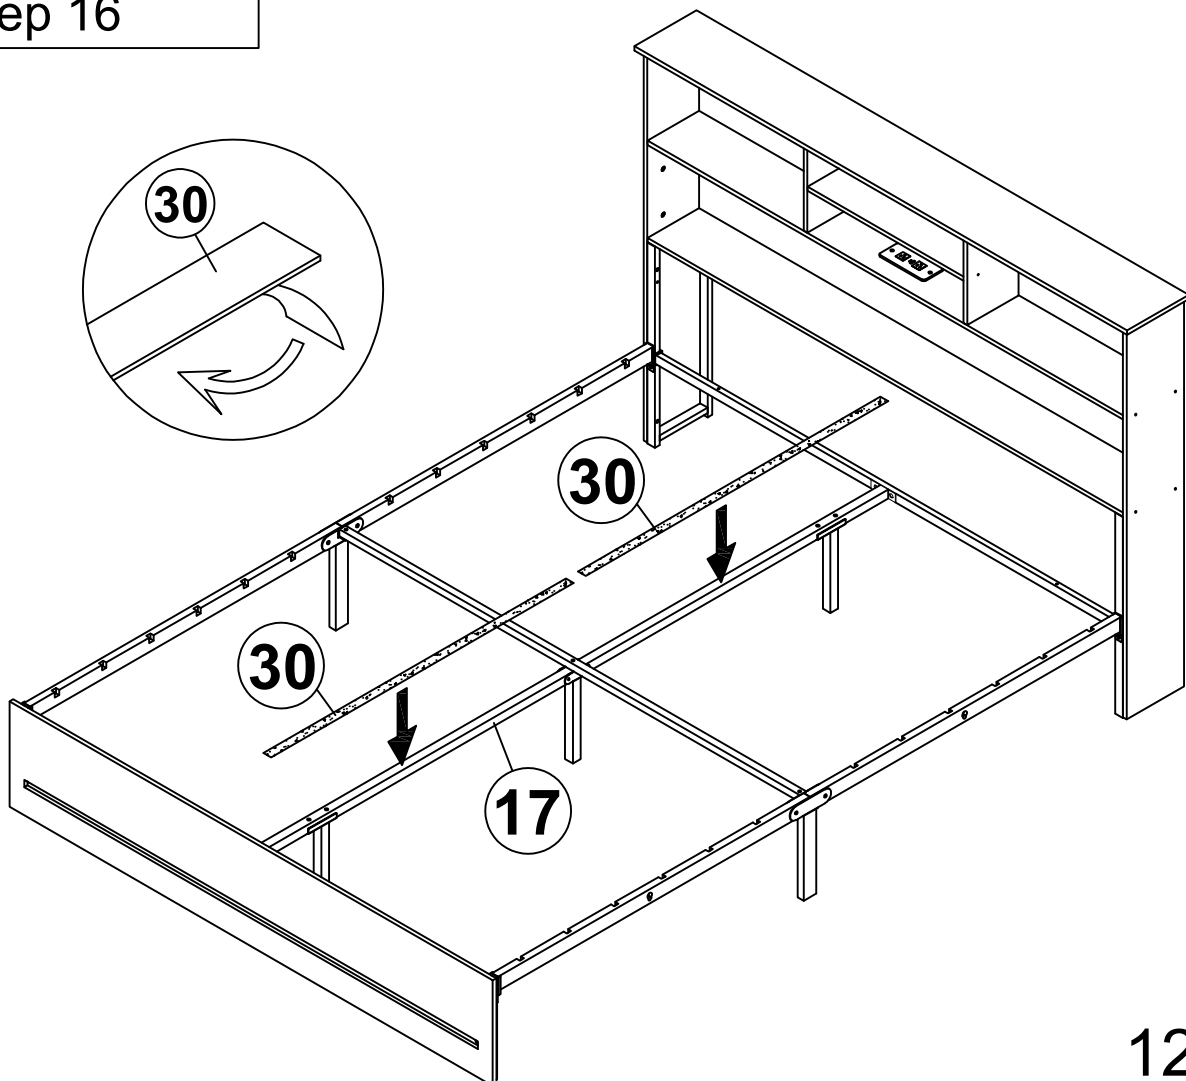


Step 17

K		M6x10	4PCS
X		M4	1PC

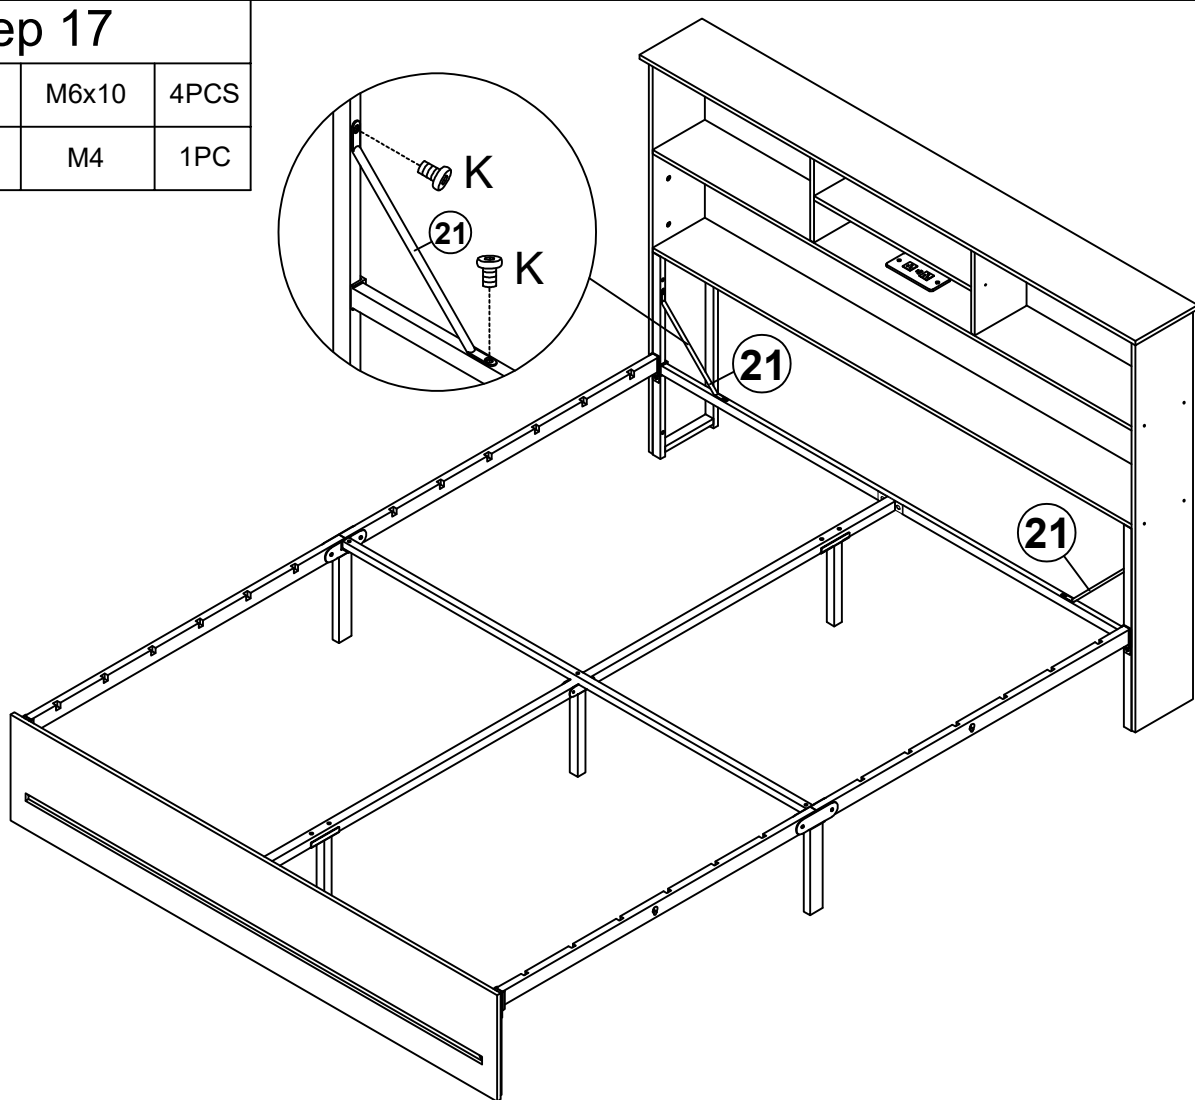

Step 18

Q		M6x12	4PCS
X		M4	1PC

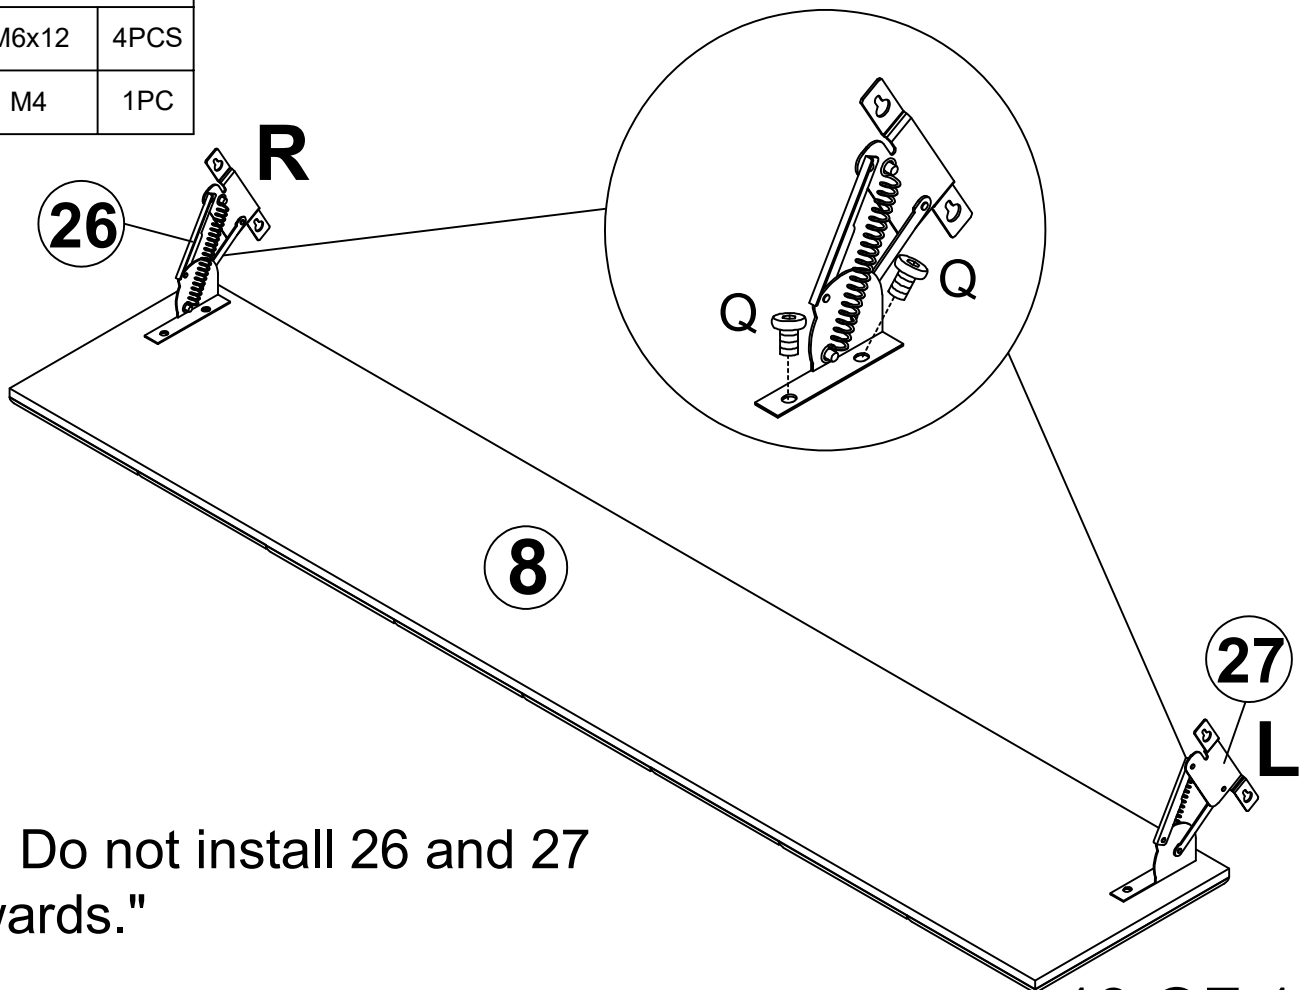


"Note: Do not install 26 and 27 backwards."


Step 19

K		M6x10	4PCS
X		M4	1PC


This step requires the screws to be tightened to only 50%.

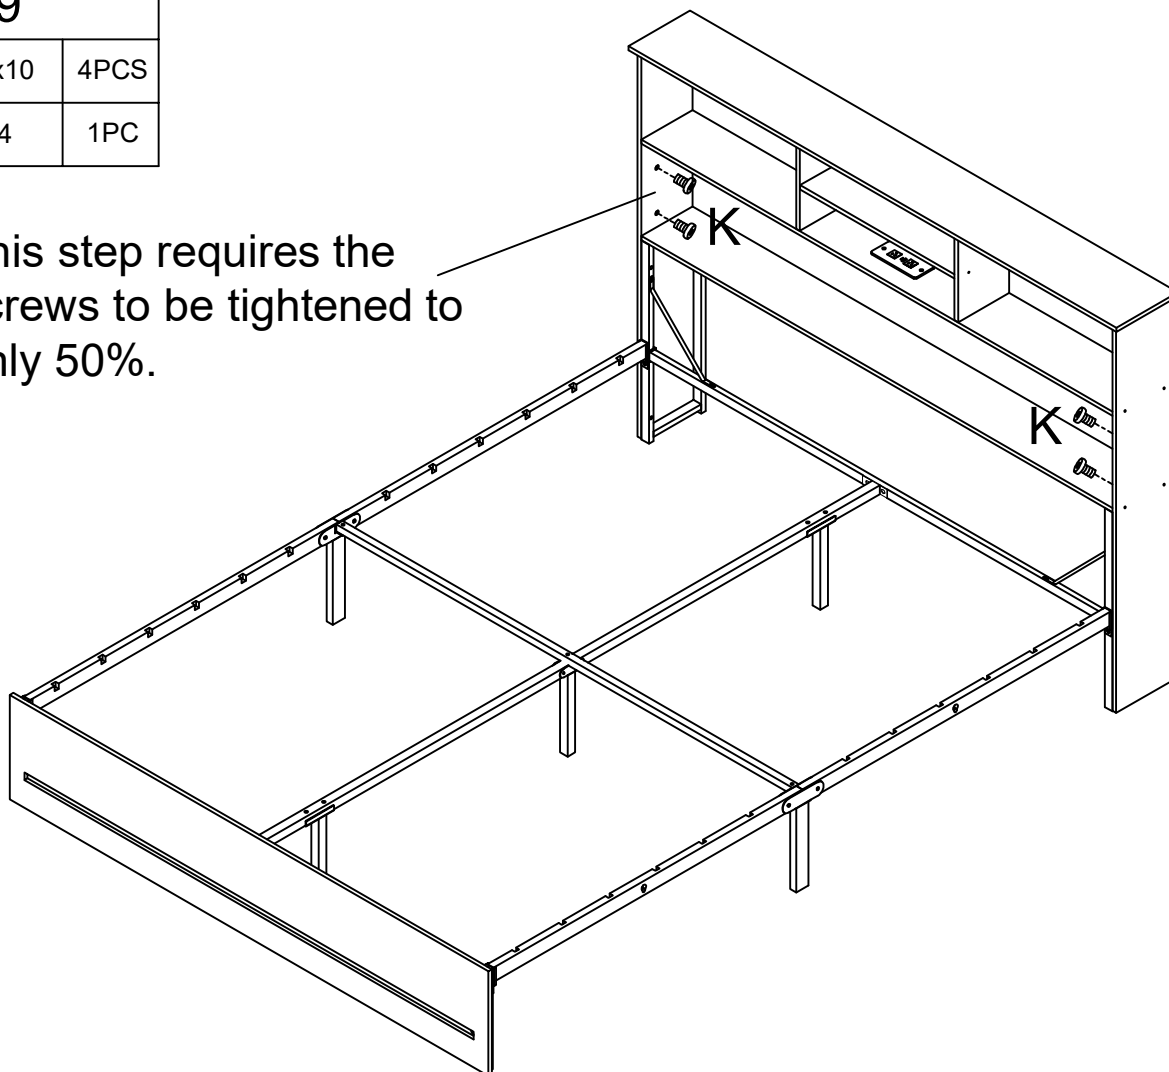

Step 20

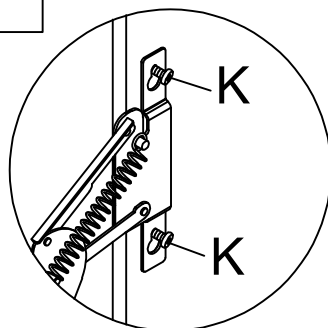

After hanging the hinge on the door panel onto screw K, tighten the screw.


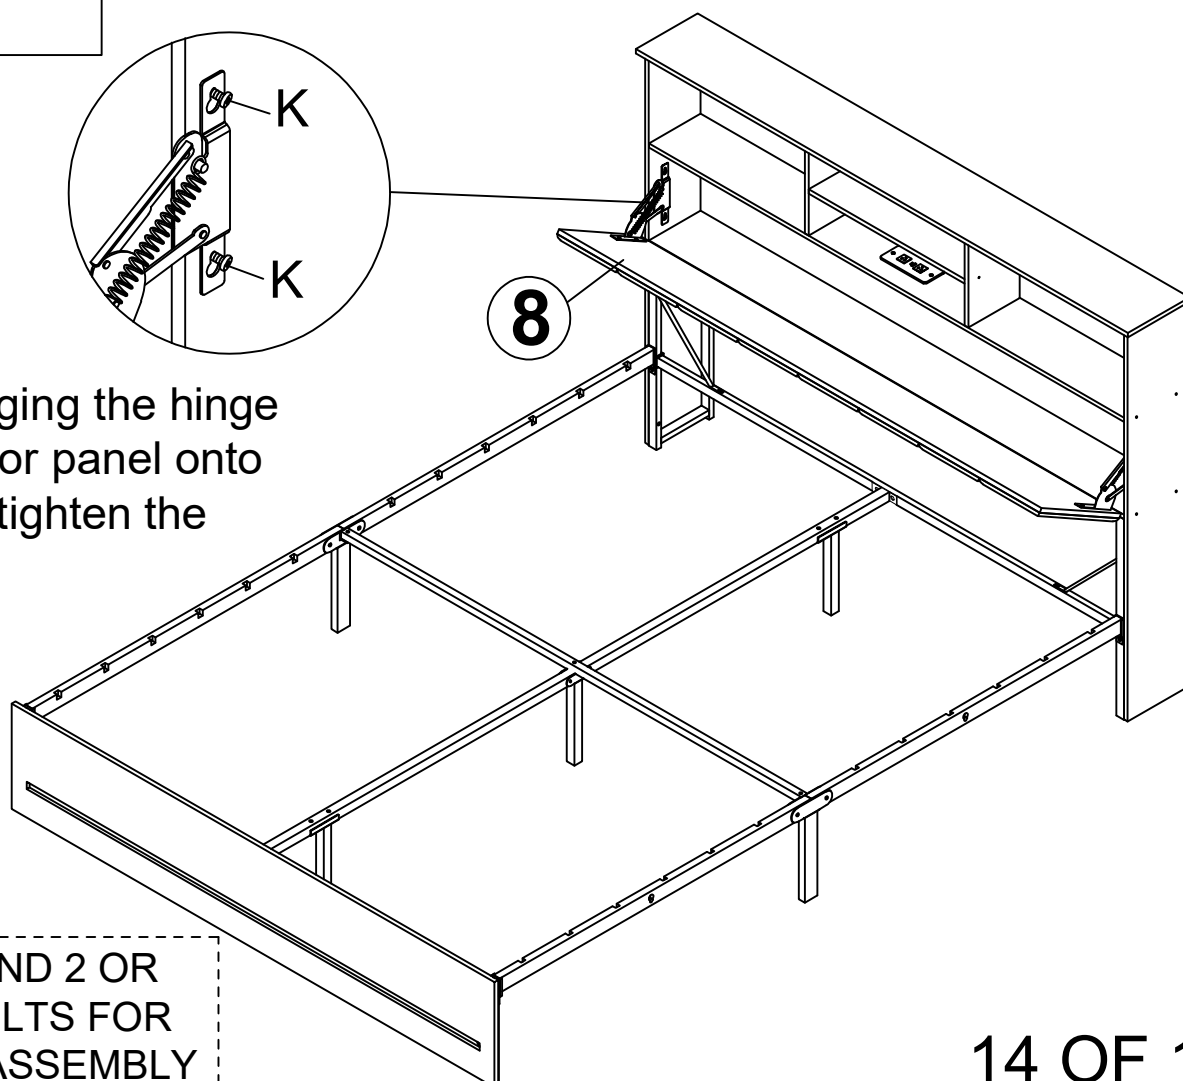


RECOMMEND 2 OR
MORE ADULTS FOR
QUICKER ASSEMBLY


Step 21

S		24PCS
---	---	-------


"Note: Please press accessory S into place along the direction of the slot."

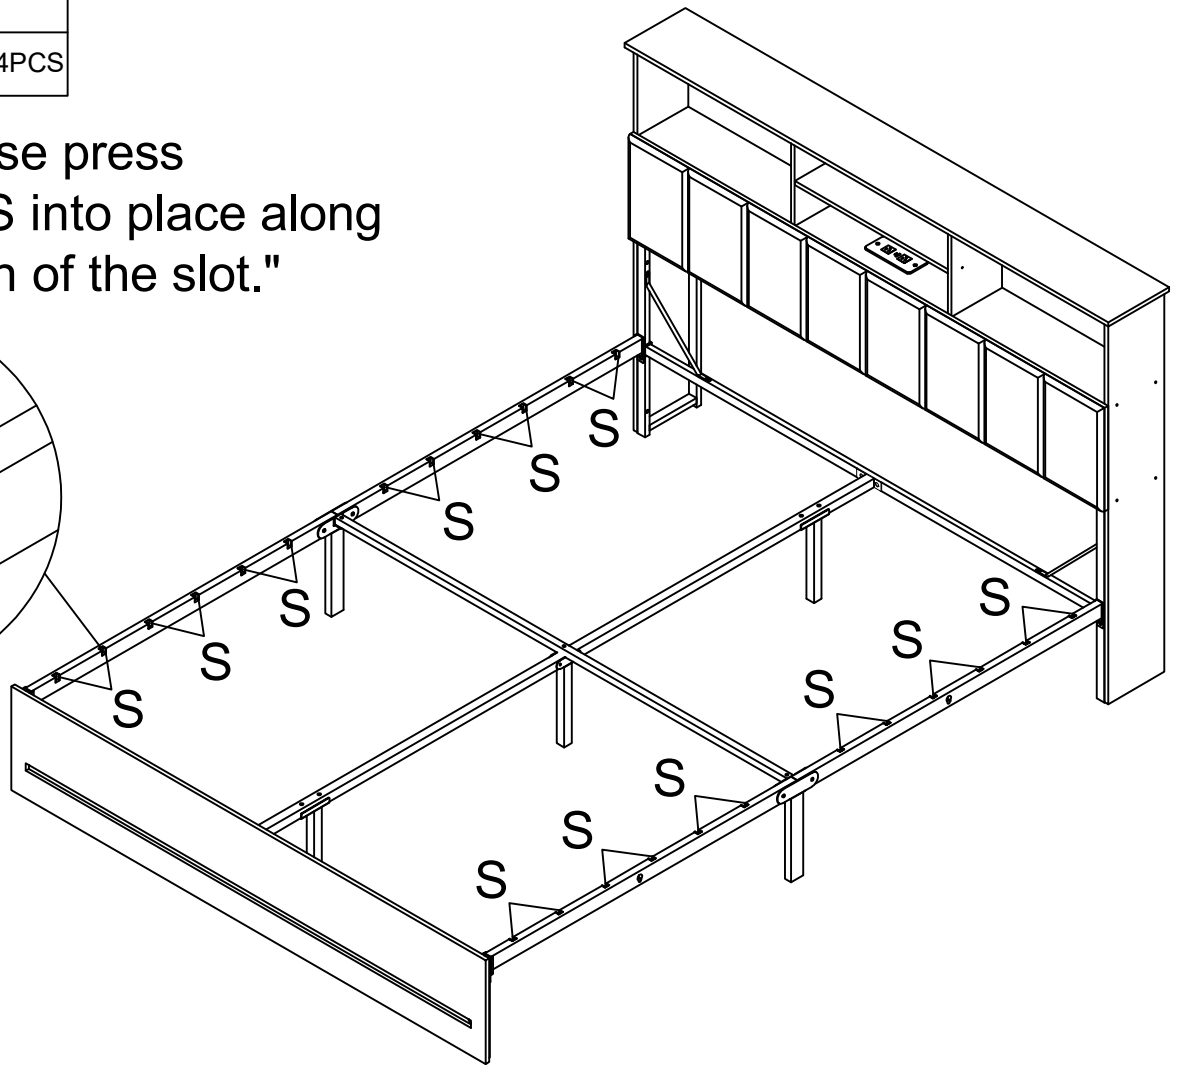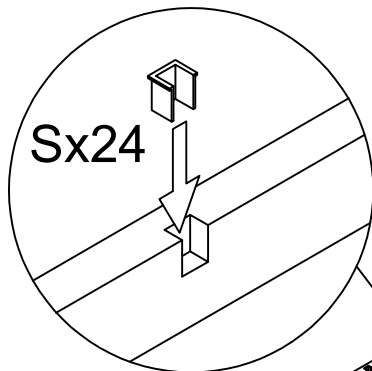

Step 22

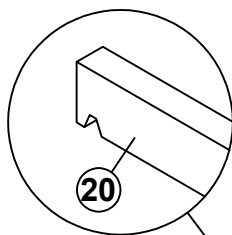


20X12



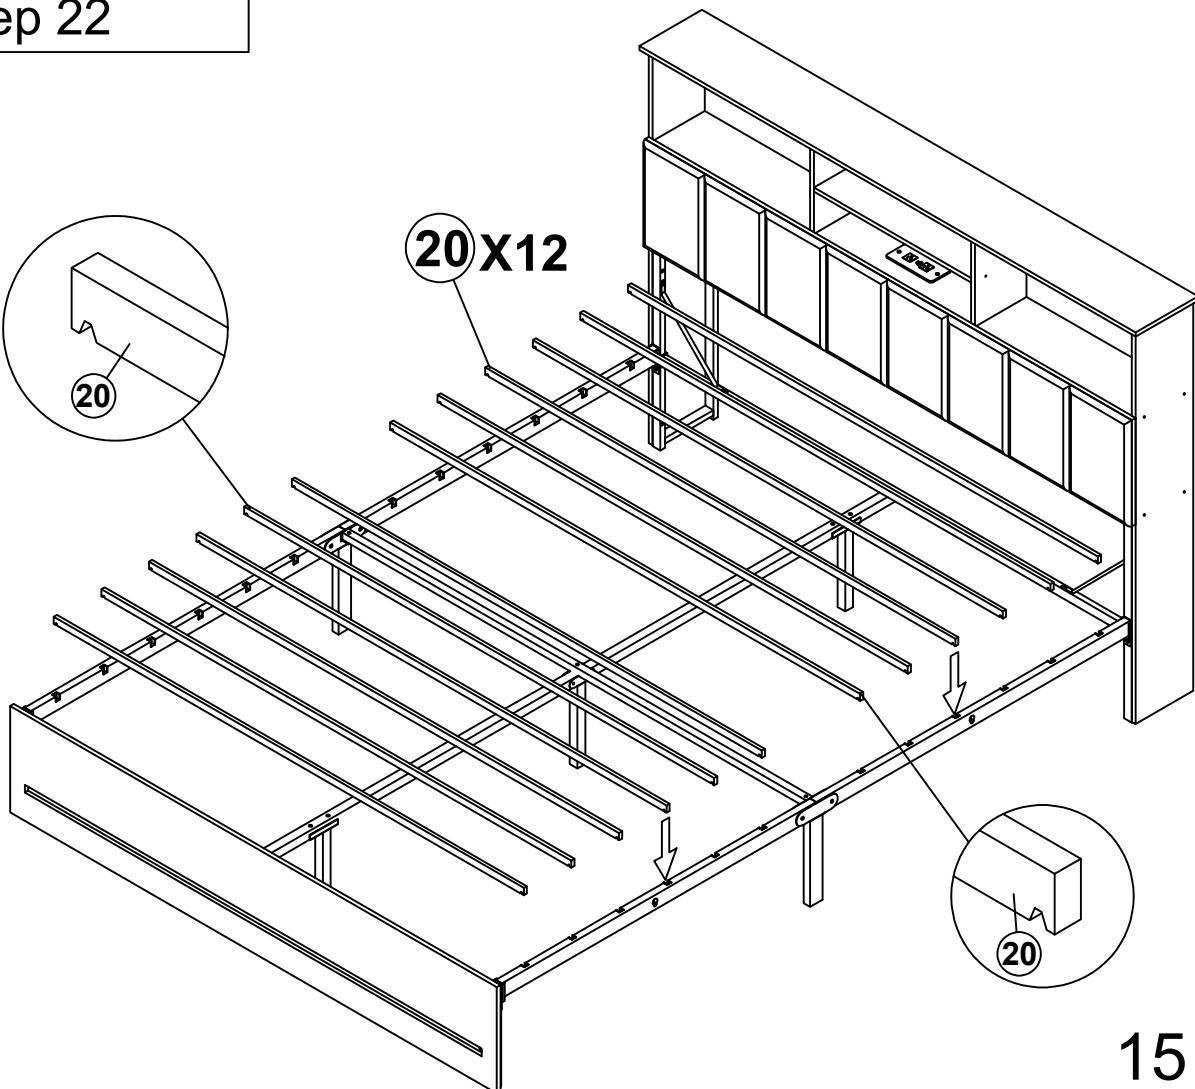


Step 23


N			16PCS
O			8PCS
P			4PCS

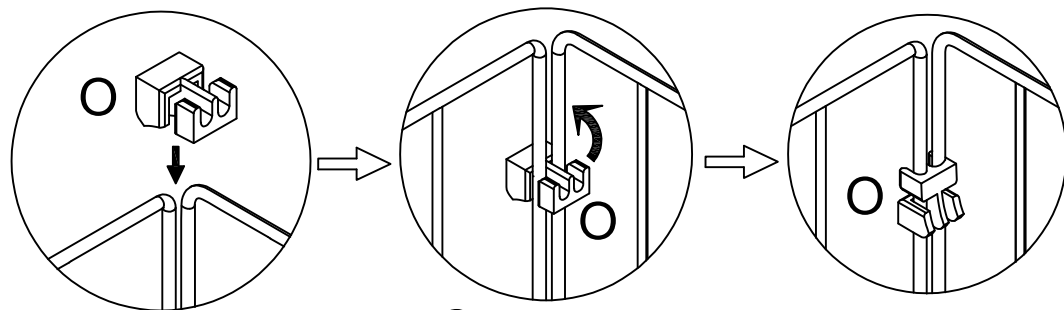

X4

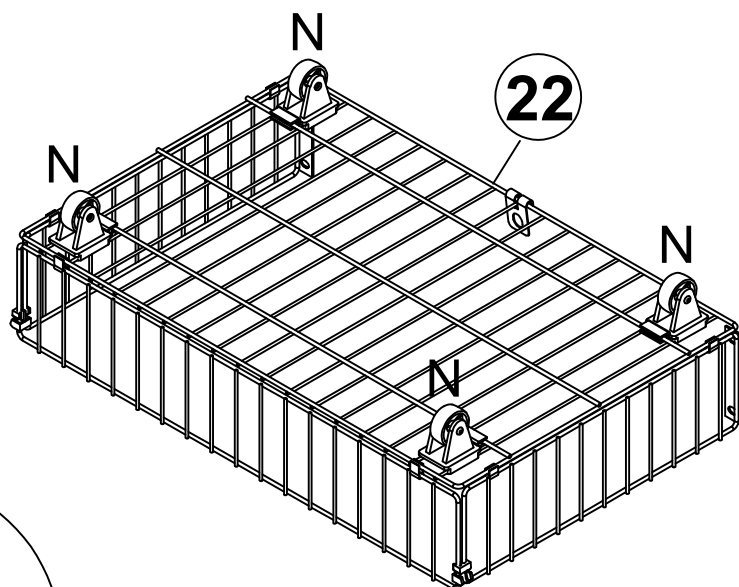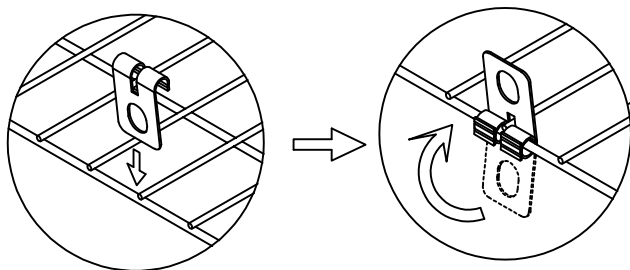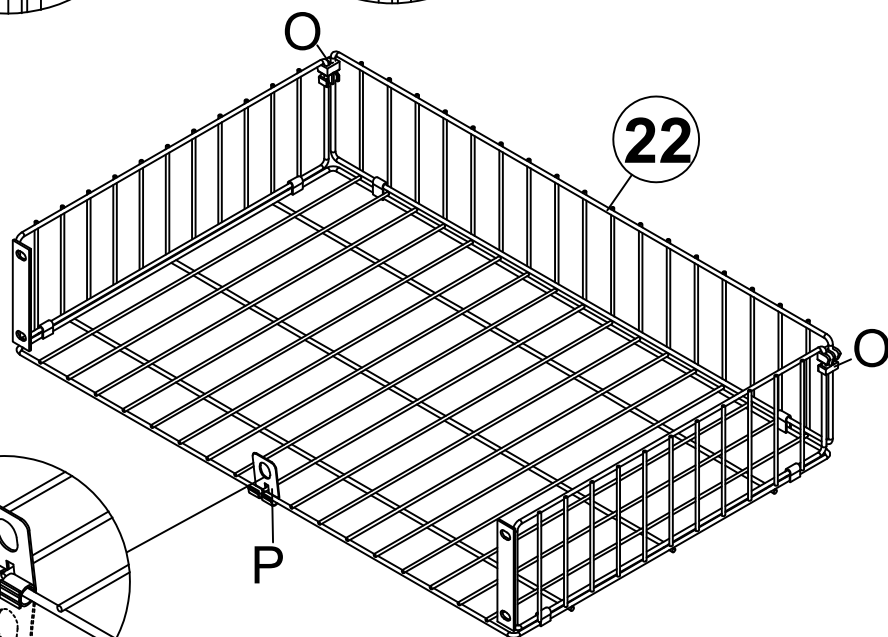



Attention: ② make sure plastic slot stuck into one side of the tube firstly, and ③ then to stuck into anther side.

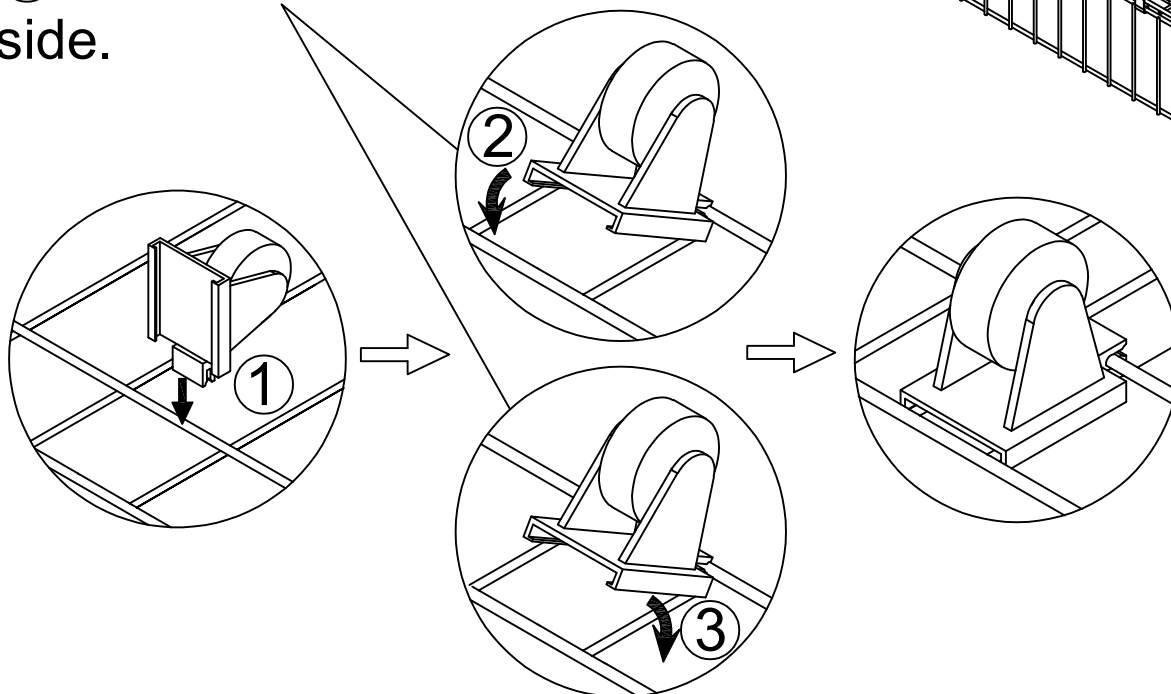


Step 24

K		M6x10	20PCS
T			4PCS
X		M4	1PC


Note: Please don't fully tighten R screws to the board.

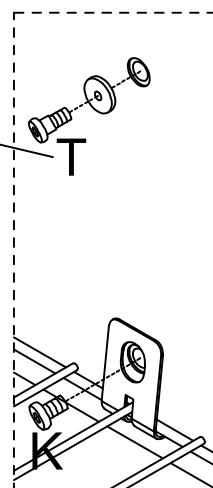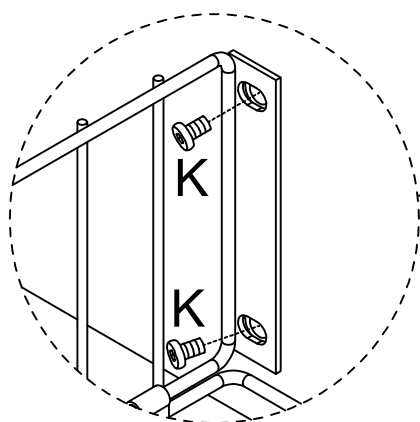

X4

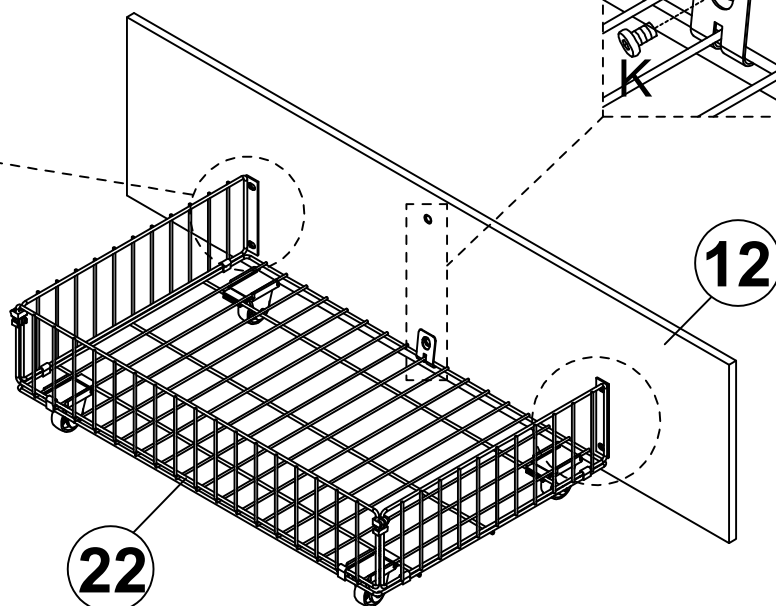


Step 25

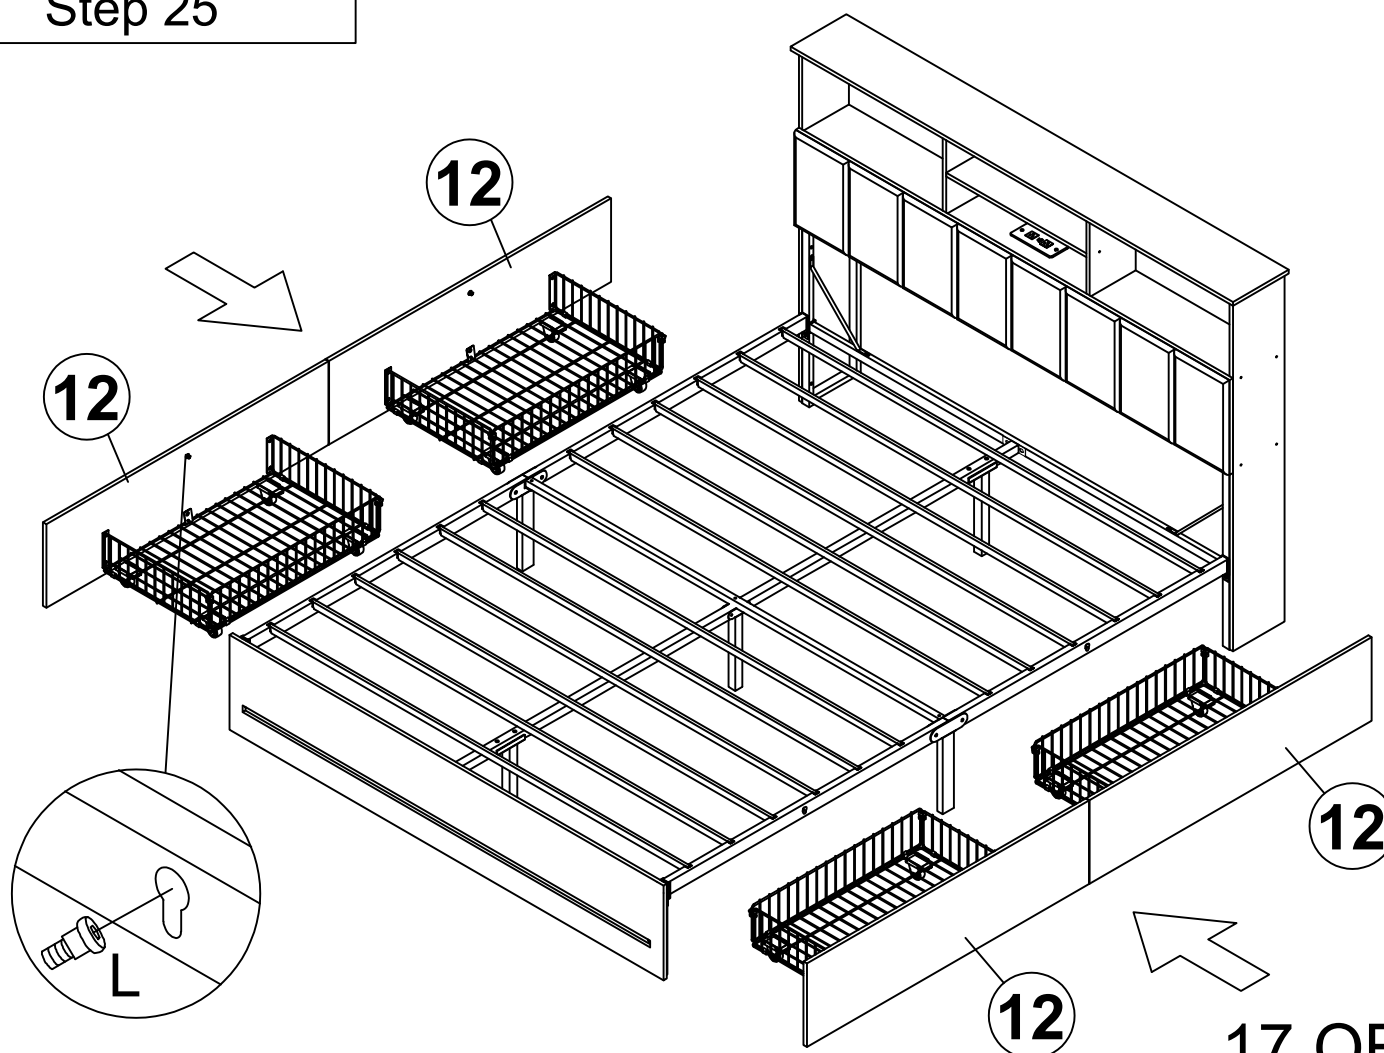


Step 26

U			4PCS
---	---	--	------

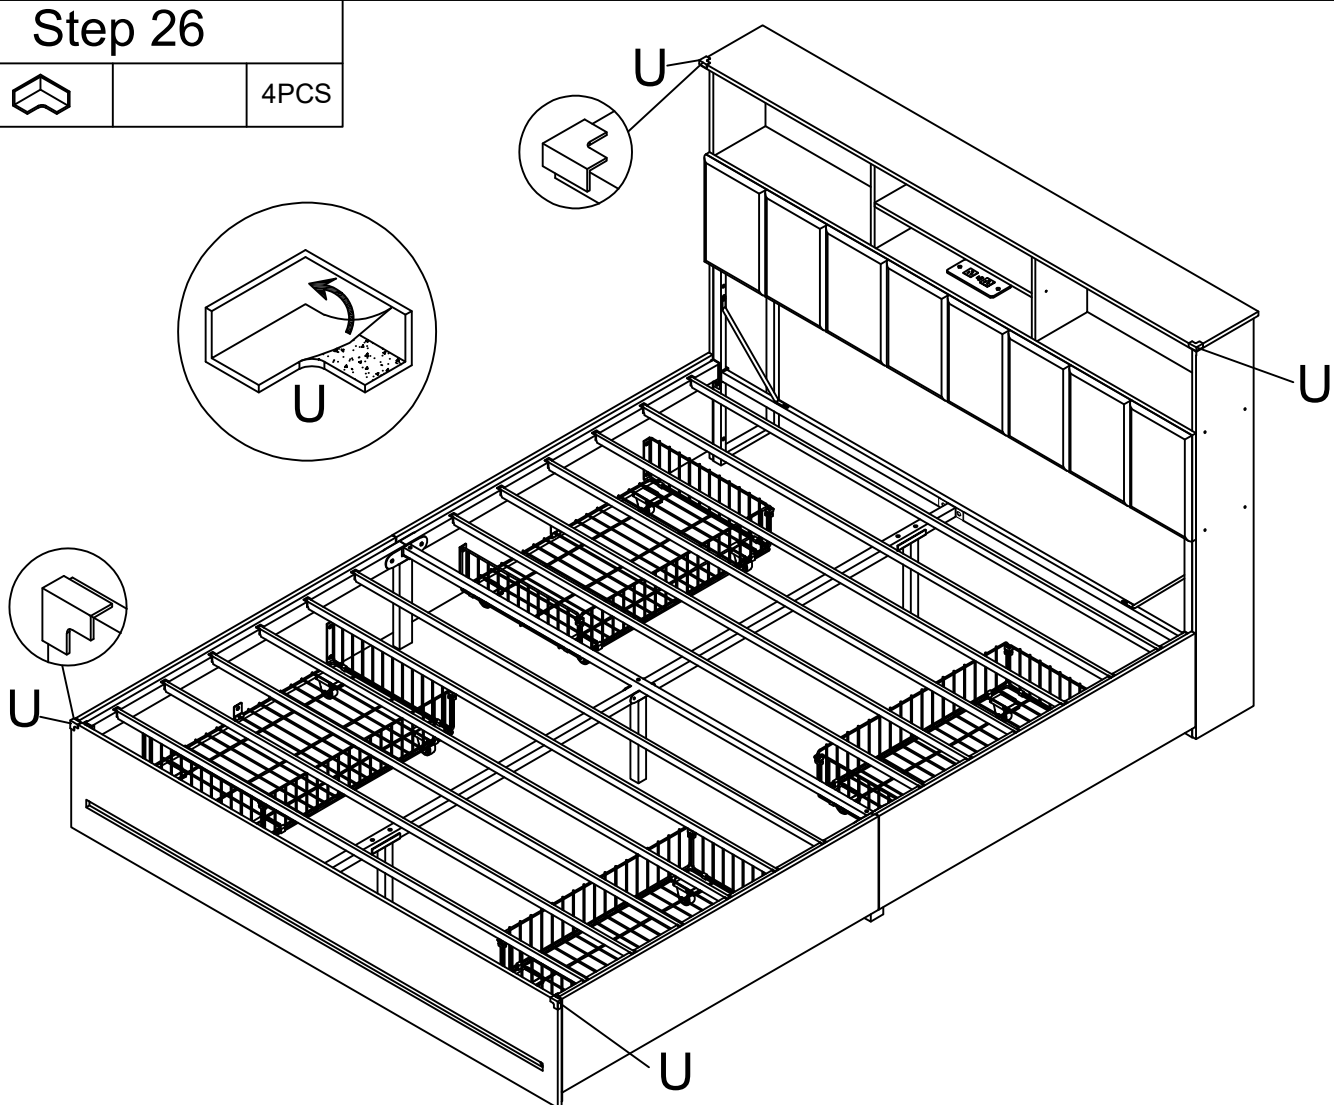

Step 27

V			5PCS
---	--	--	------

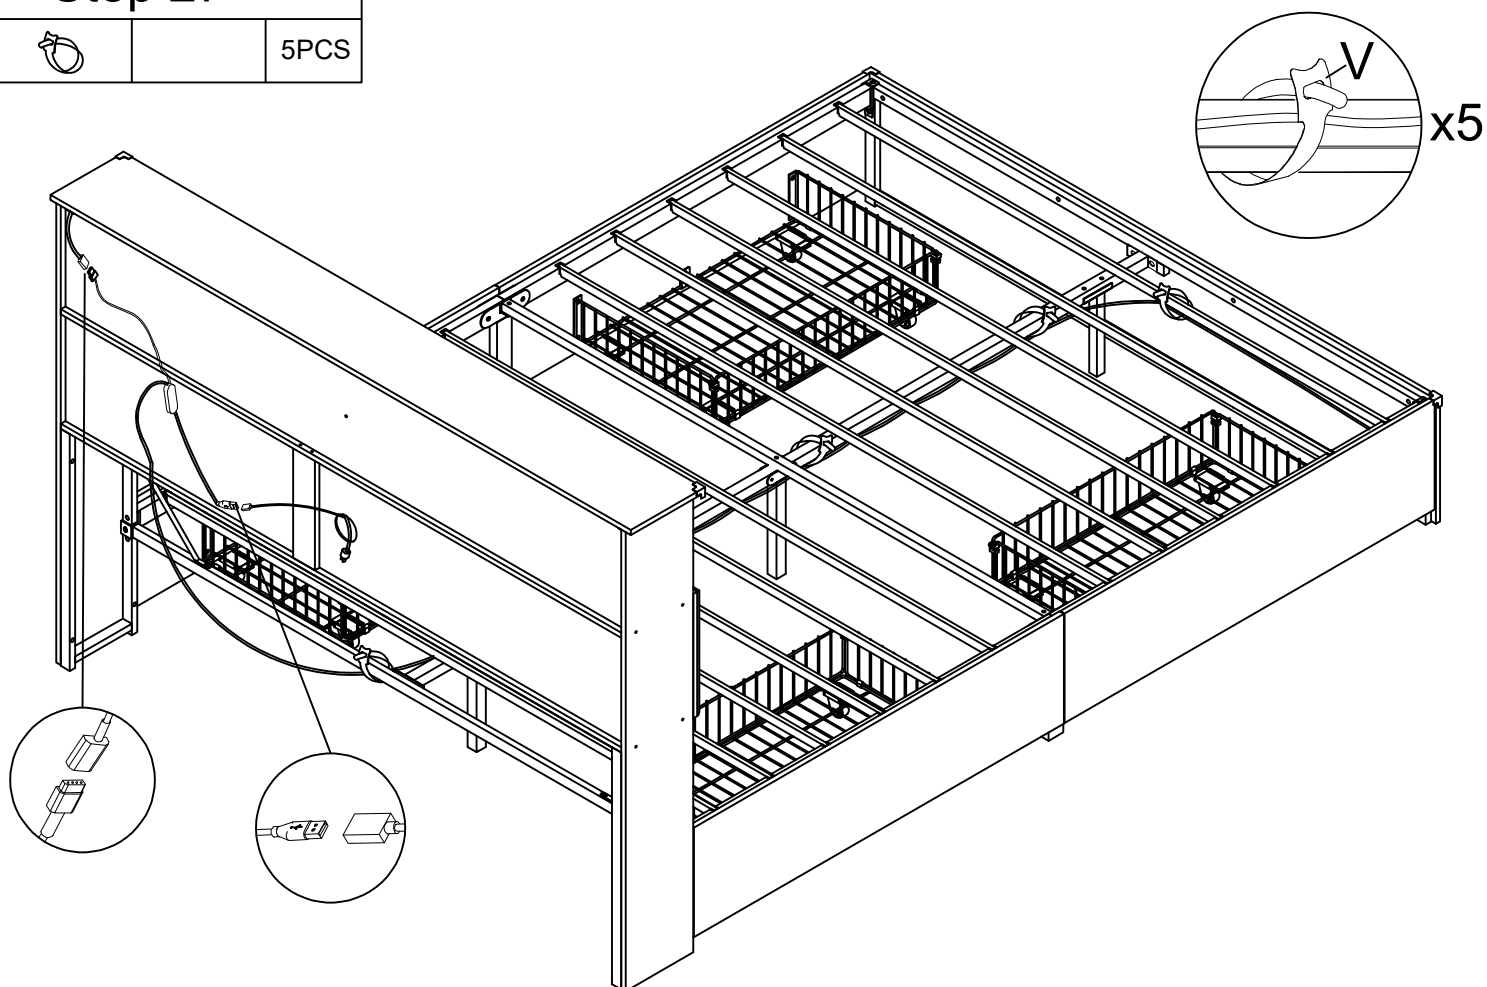

Step 28

C		M3.5X12	8PCS
W			8PCS
Z			1PC

