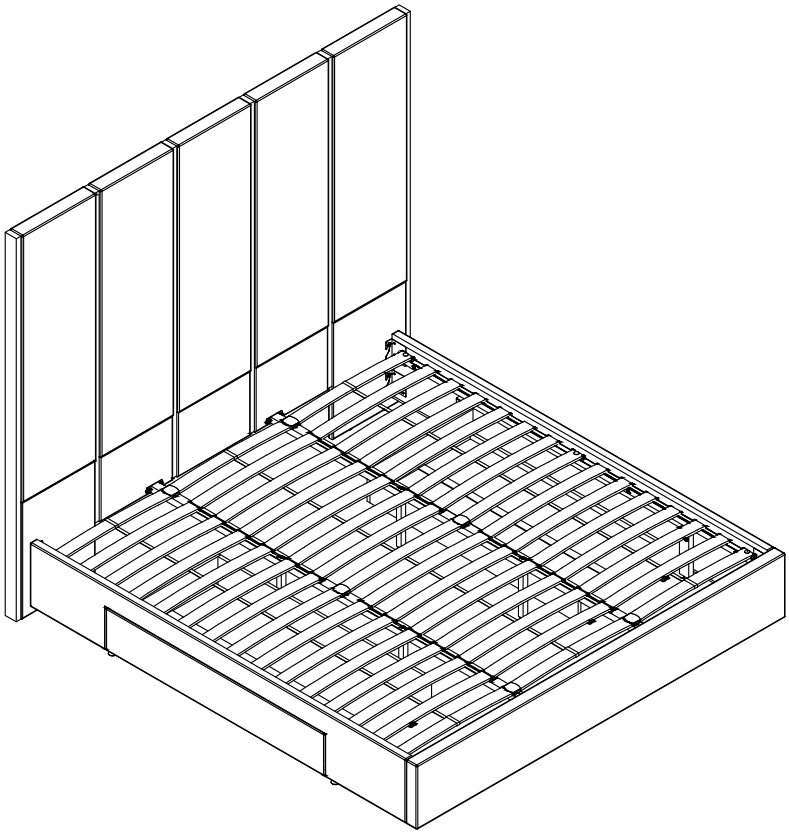
ASSEMBLY INSTRUCTION

Size:King





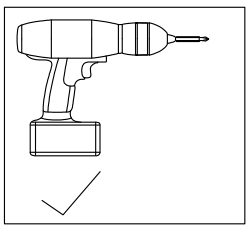
Please TEAR OFF this shrink film from side!
DO NOT USE CUTTER!

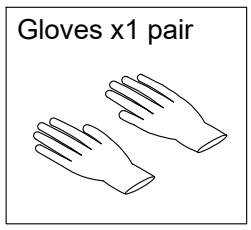
IMPORTANT NOTE

1. For the protection of your furniture, place all parts on a clean and smooth surface to prevent any damage.
2. Keep fittings out of children's reach and keep children well away from construction area.
3. When moving your assembled bed. it is best to lift the bed and never to drag it.
4. Do not use this product if parts are missing, damaged or worn.
5. This product should only be used on firm, level ground.
6. Please periodically check all fittings and re-tighten as necessary.
7. Do not use the bed unless all bolts and screws are firmly secured.
8. For further assistance, please provide a screenshot of your order and contact us via email




Minimum two person assembly






Please note gloves.
This fabric is very light colour.
So when assembling bed,
please wear them.
















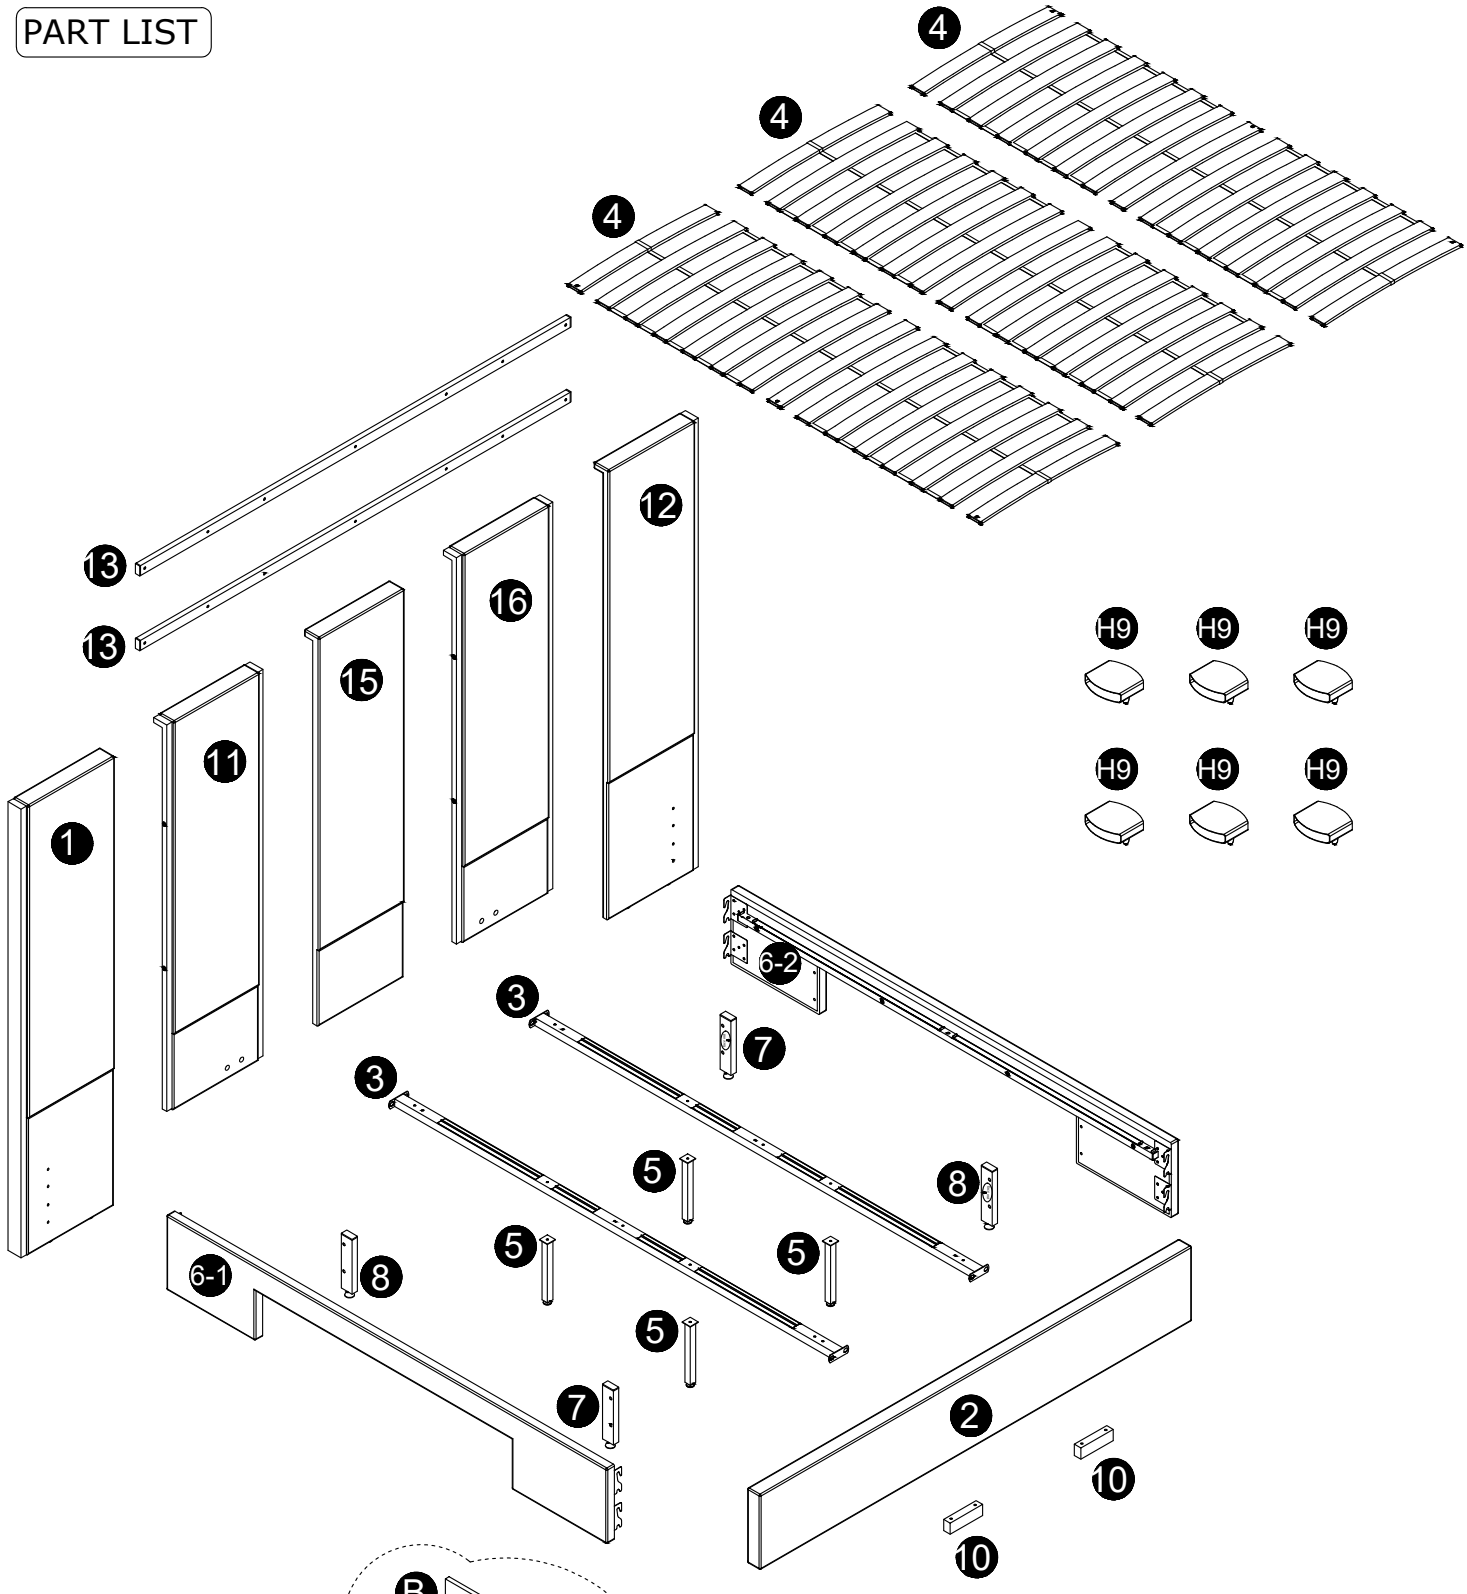
PART LIST

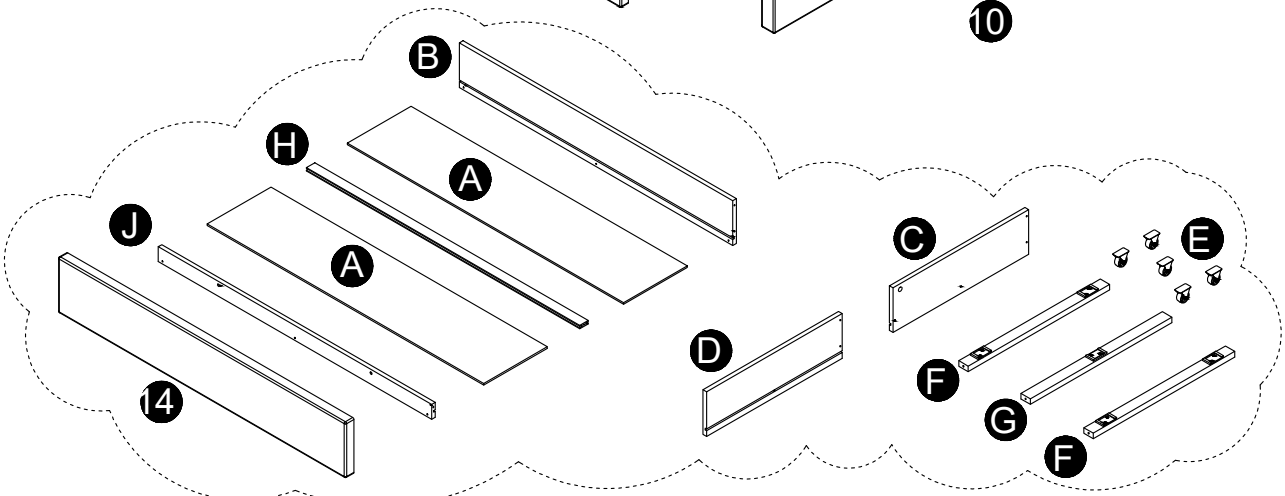
4
4
4
13
13
12
16
15
11
1
H9
H9
H9
H9
H9
H9
6-2
3
7
3
5
8
5
5
6-1
8
5
7
2
10
10






B
H
A
J
A
14
D
C
E
F
G
F

X2

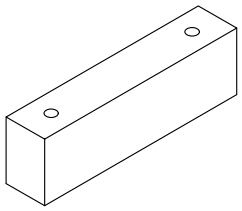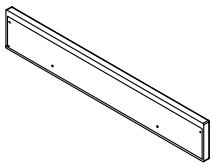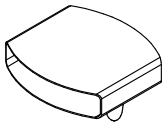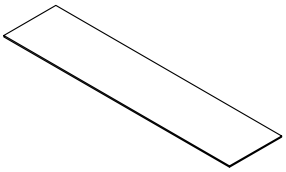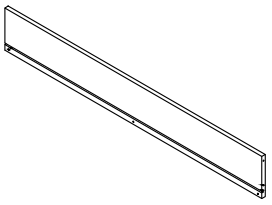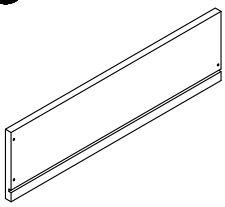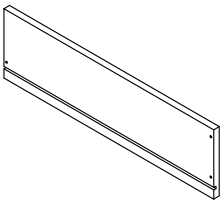
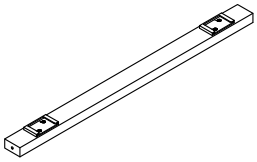
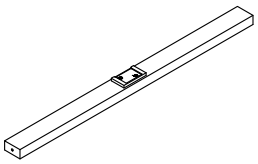
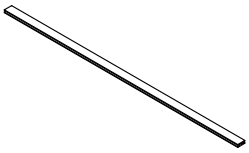
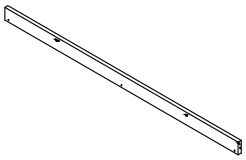
Components of Carton A

1 x 1pc 	5 x 4pcs 	7 x 2pcs 	8 x 2pcs 	10 x 2pcs 
12 x 1pc 	14 x 2pcs 	H9 x 6pcs 	A x 4pcs 	B x 2pcs 
C x 2pcs 	D x 2pcs 	E x 10pcs 	F x 4pcs 	G x 2pcs 
H x 2pcs 	J x 2pcs 			

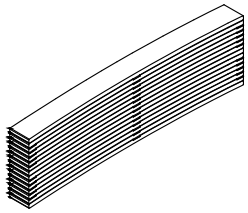Components of Carton B

4 x 3pcs 	11 x 1pc 	15 x 1pc 	16 x 1pc 

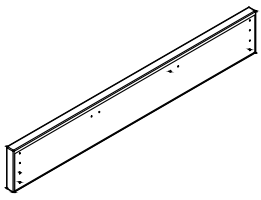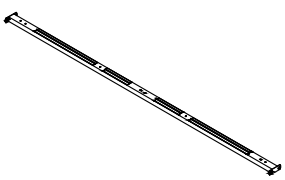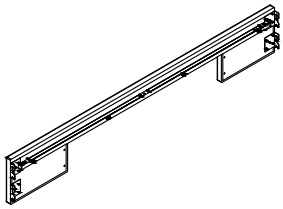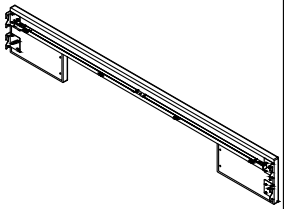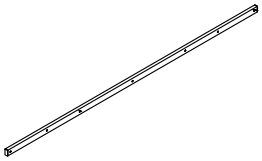
Components of Carton C

2 x 1pc 	3 x 2pcs 	6-1 x 1pc 	6-2 x 1pc 	13 x 2pcs 


Please ensure to thoroughly inspect the small inner cardboard box containing the hardware, which are tied with a red string, before disposing of the box.

HARDWARE LIST


Components of Carton A

 H1 M5 x 1pc	 H2 M8x25mm x 28pcs	 H3 M8x50mm x 22pcs	 H4 M8x40mm x 8pcs
 H6 M8x22mm x 4pcs	 H8 x 6pcs	 H10 M6x45mm x 28pcs	 H11 M4 x 1pc
 H12 x 4pcs	 H13 x 4pcs		

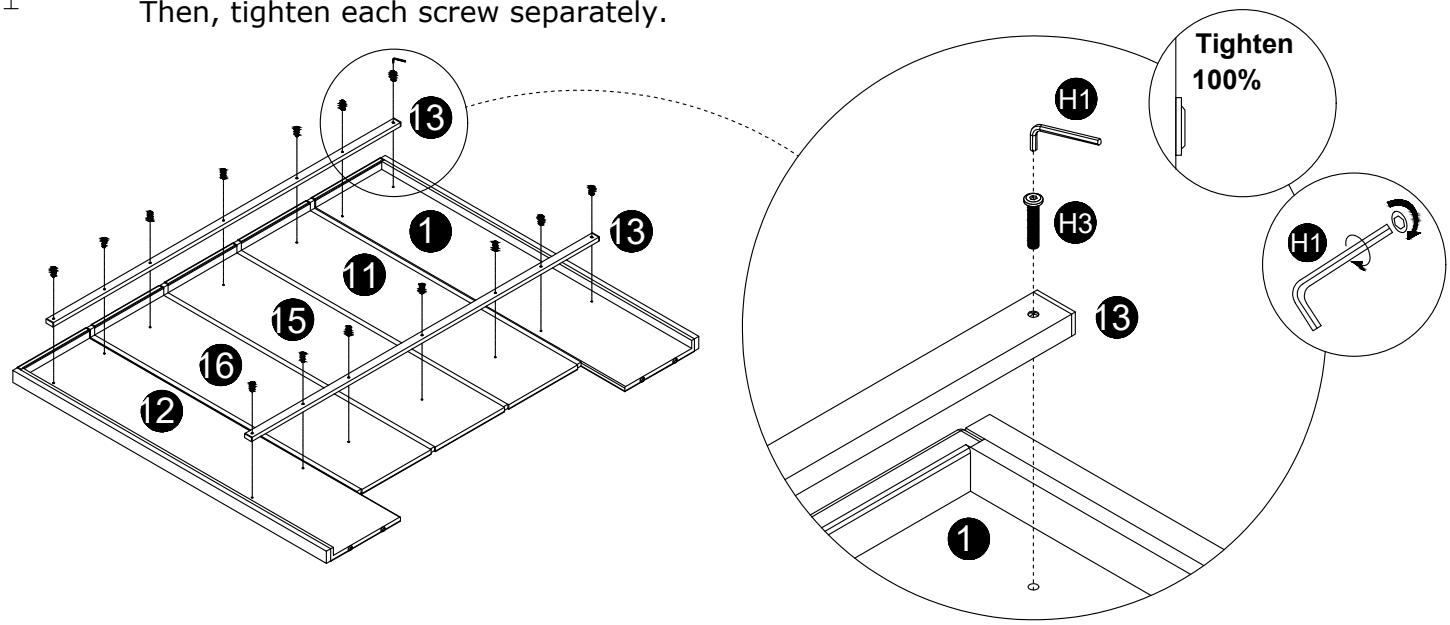
1 As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately.




2

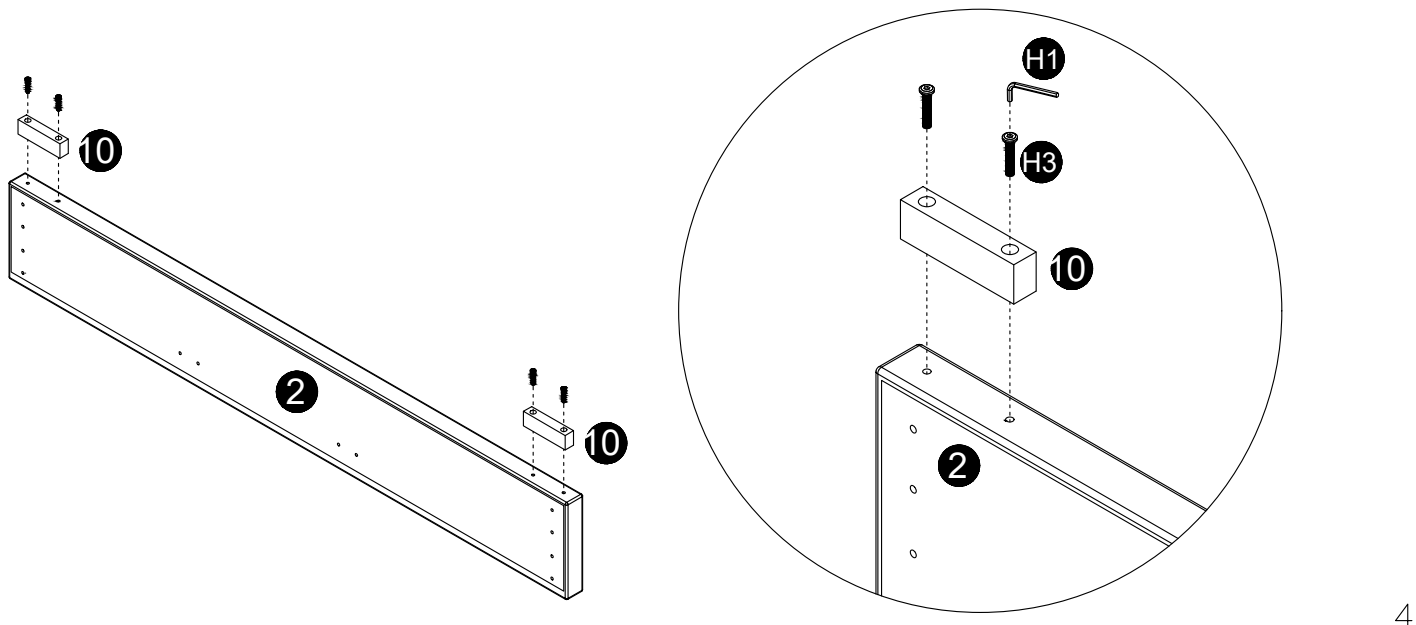


3

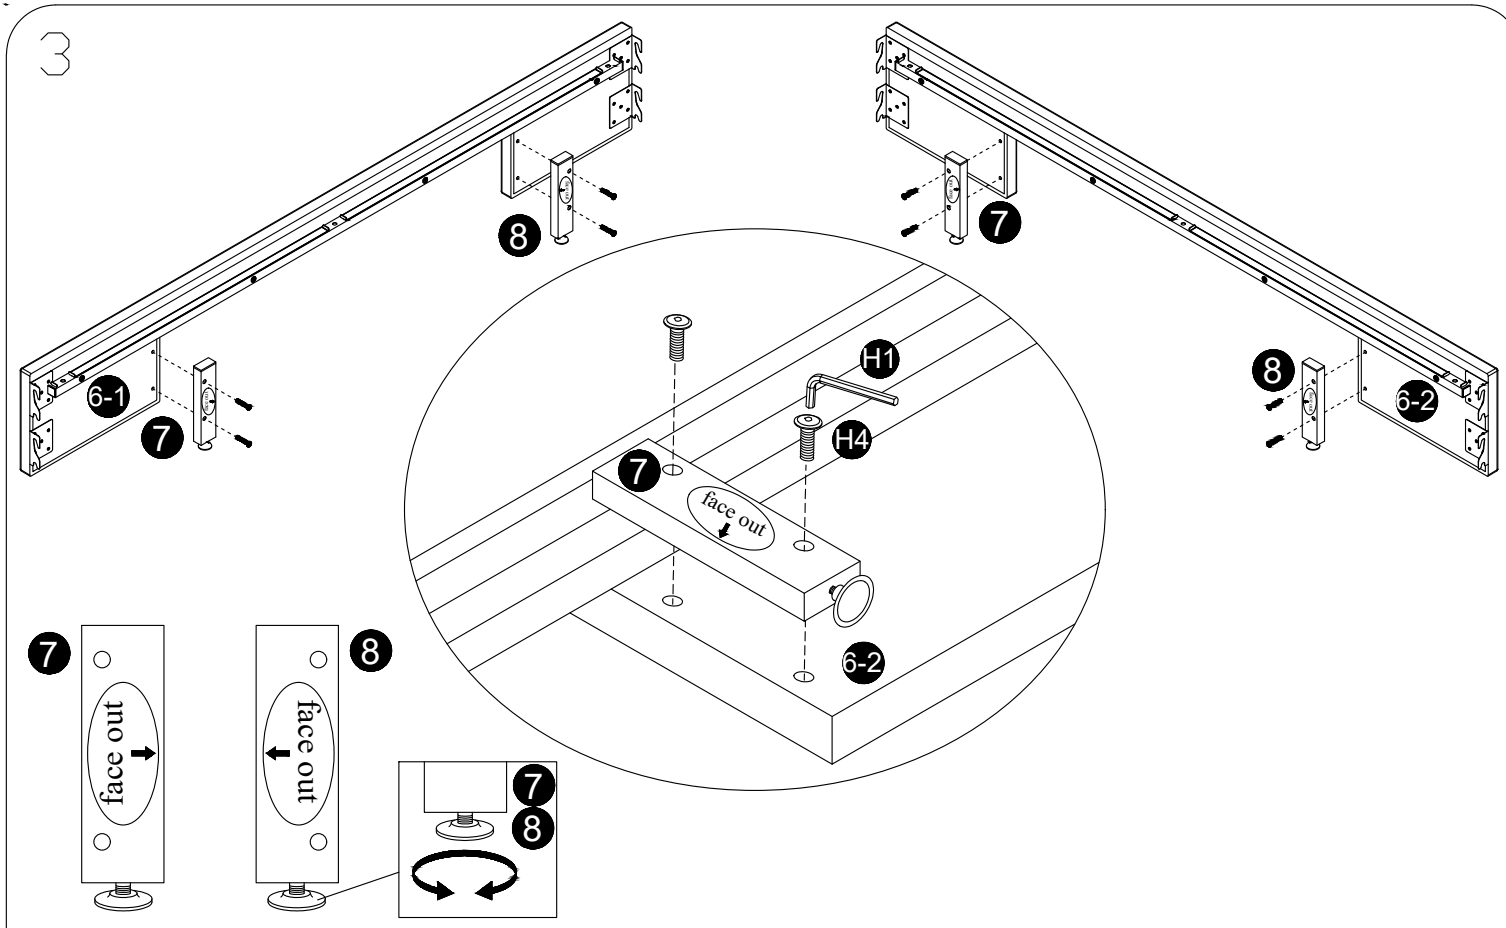
8
7
6-1
7
H1
H4
7
face out
6-2
8
6-2
7
face out
8
face out
7
8

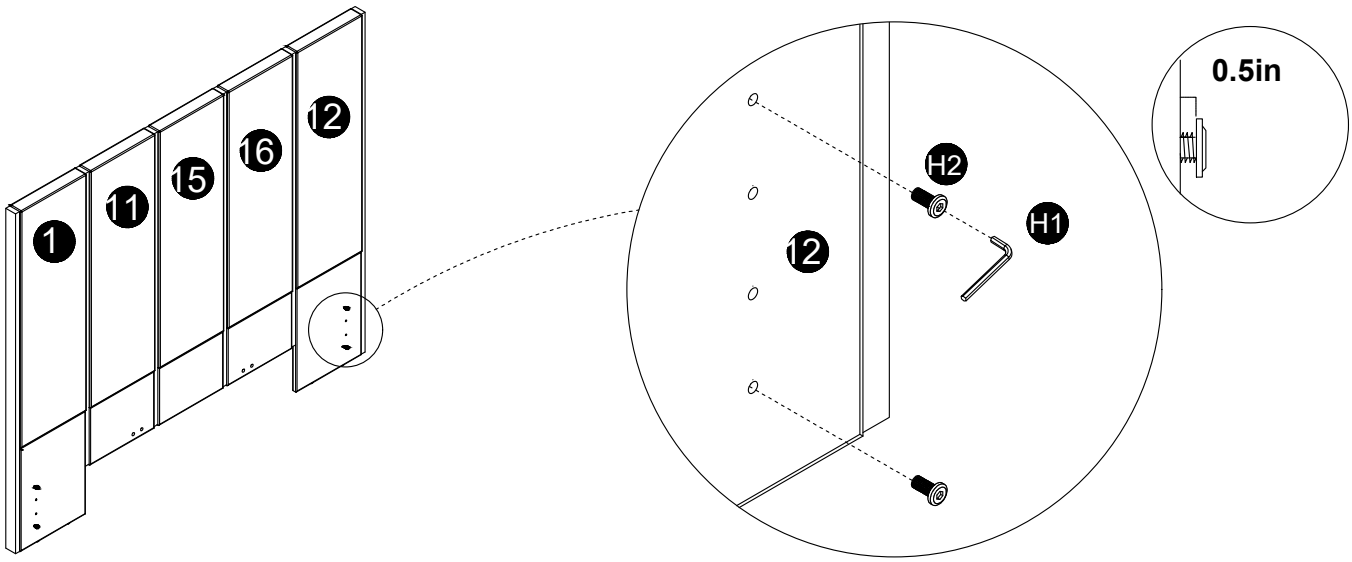
4


12
16
15
11
1
H2
H1
12
0.5in

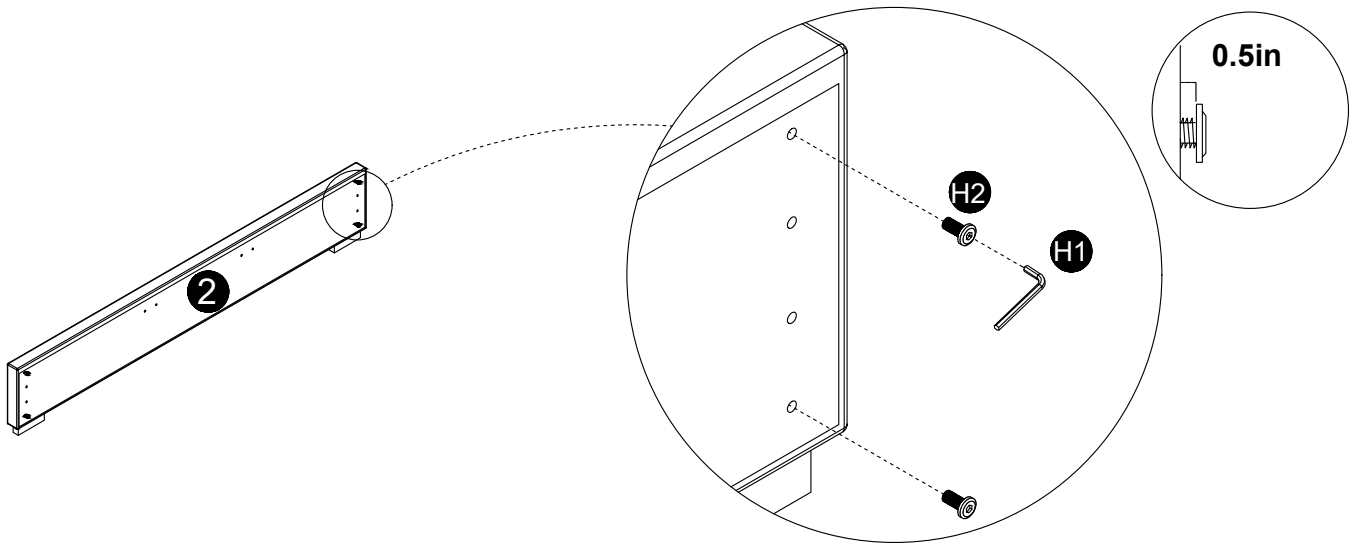5


2
H2
H1
0.5in

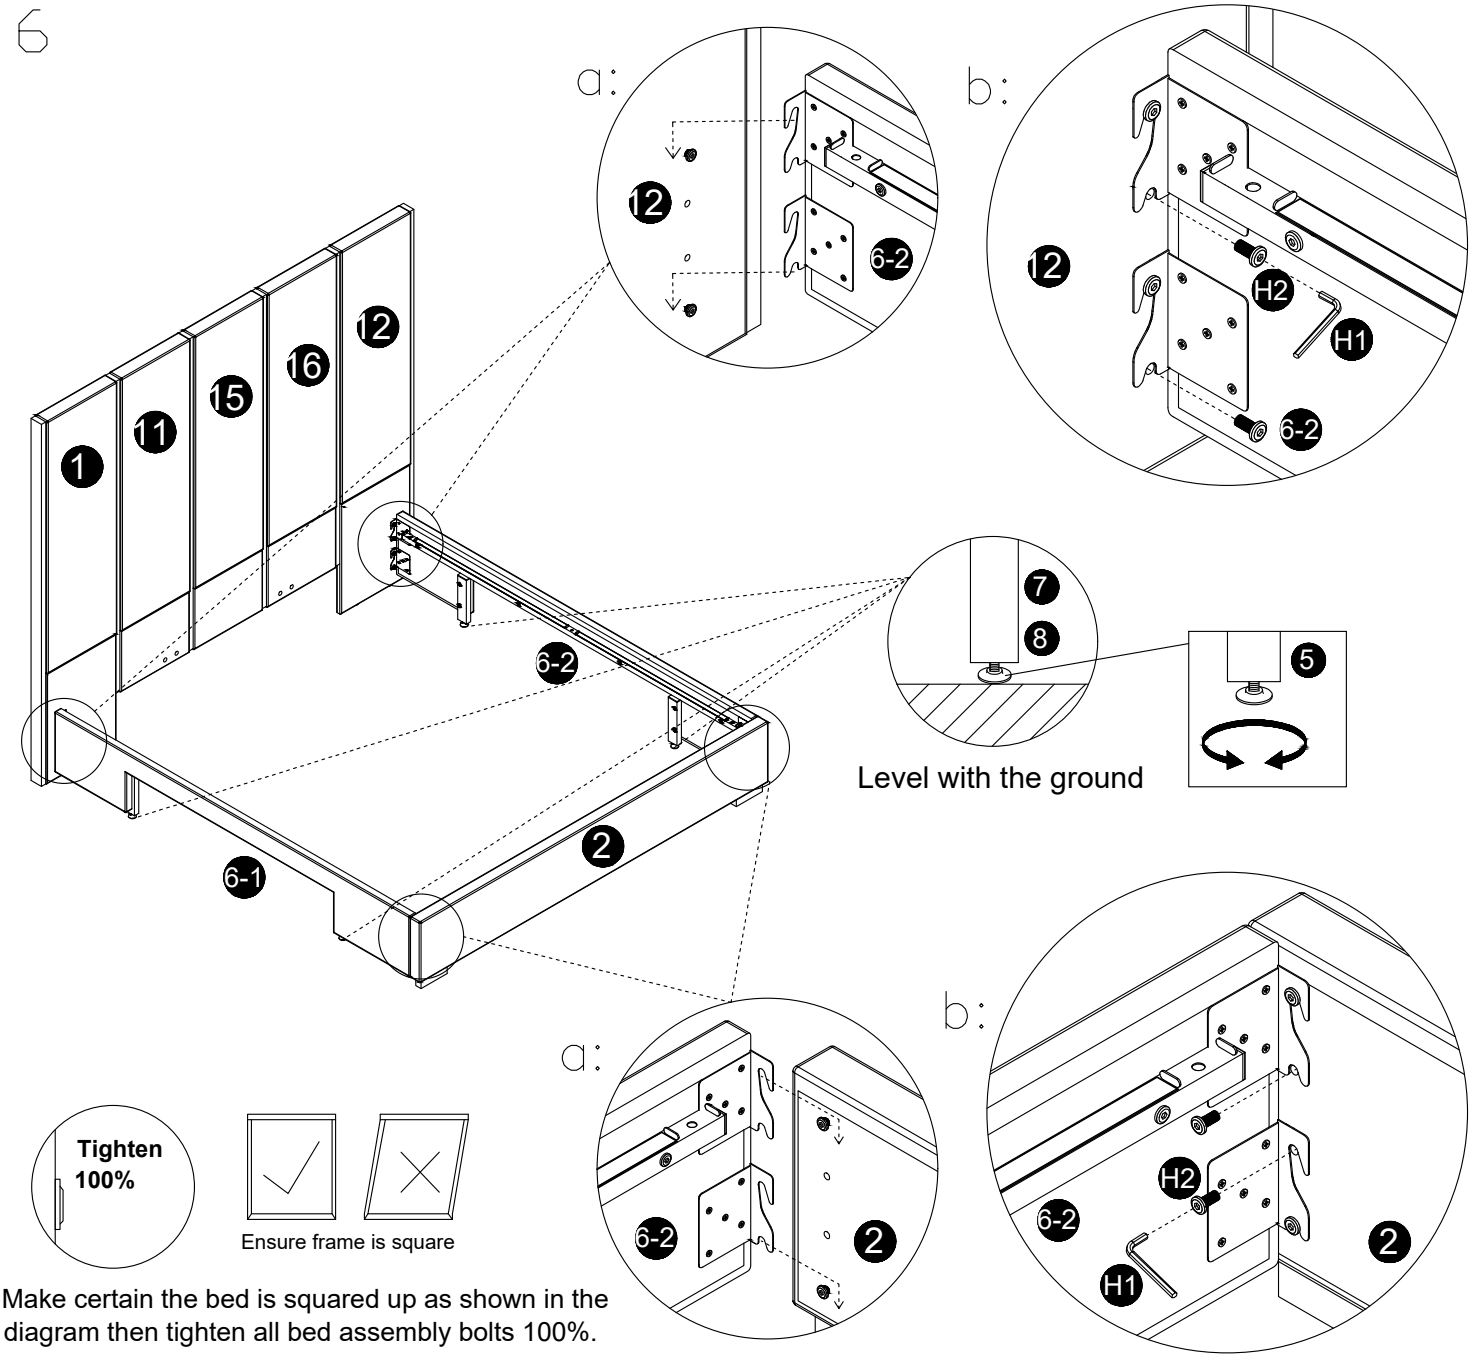
6




Ensure frame is square

Make certain the bed is squared up as shown in the diagram then tighten all bed assembly bolts 100%.

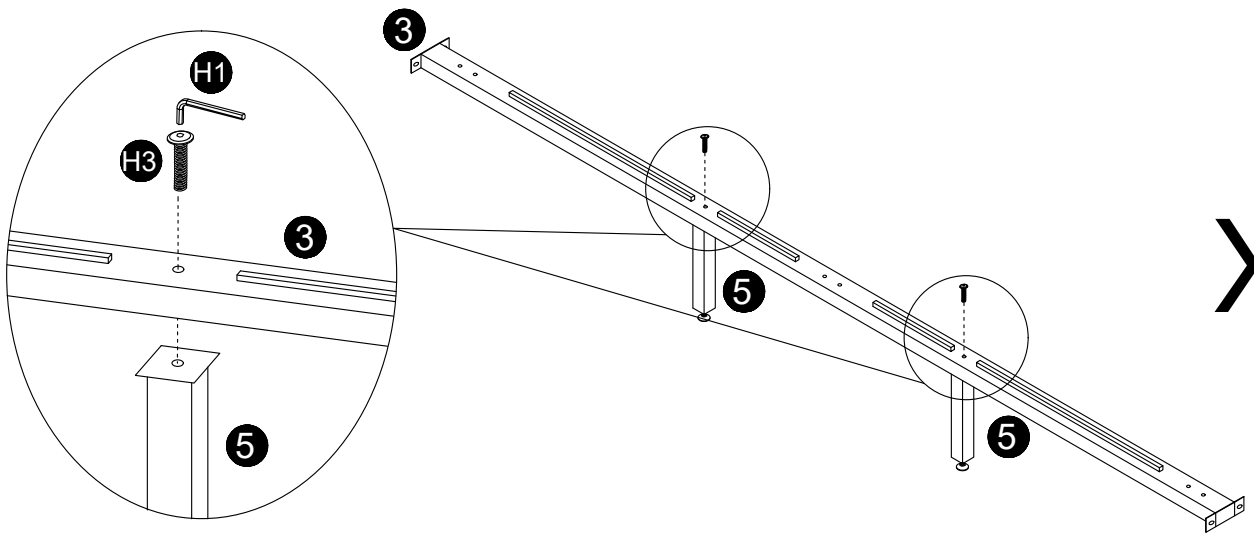
7




X2

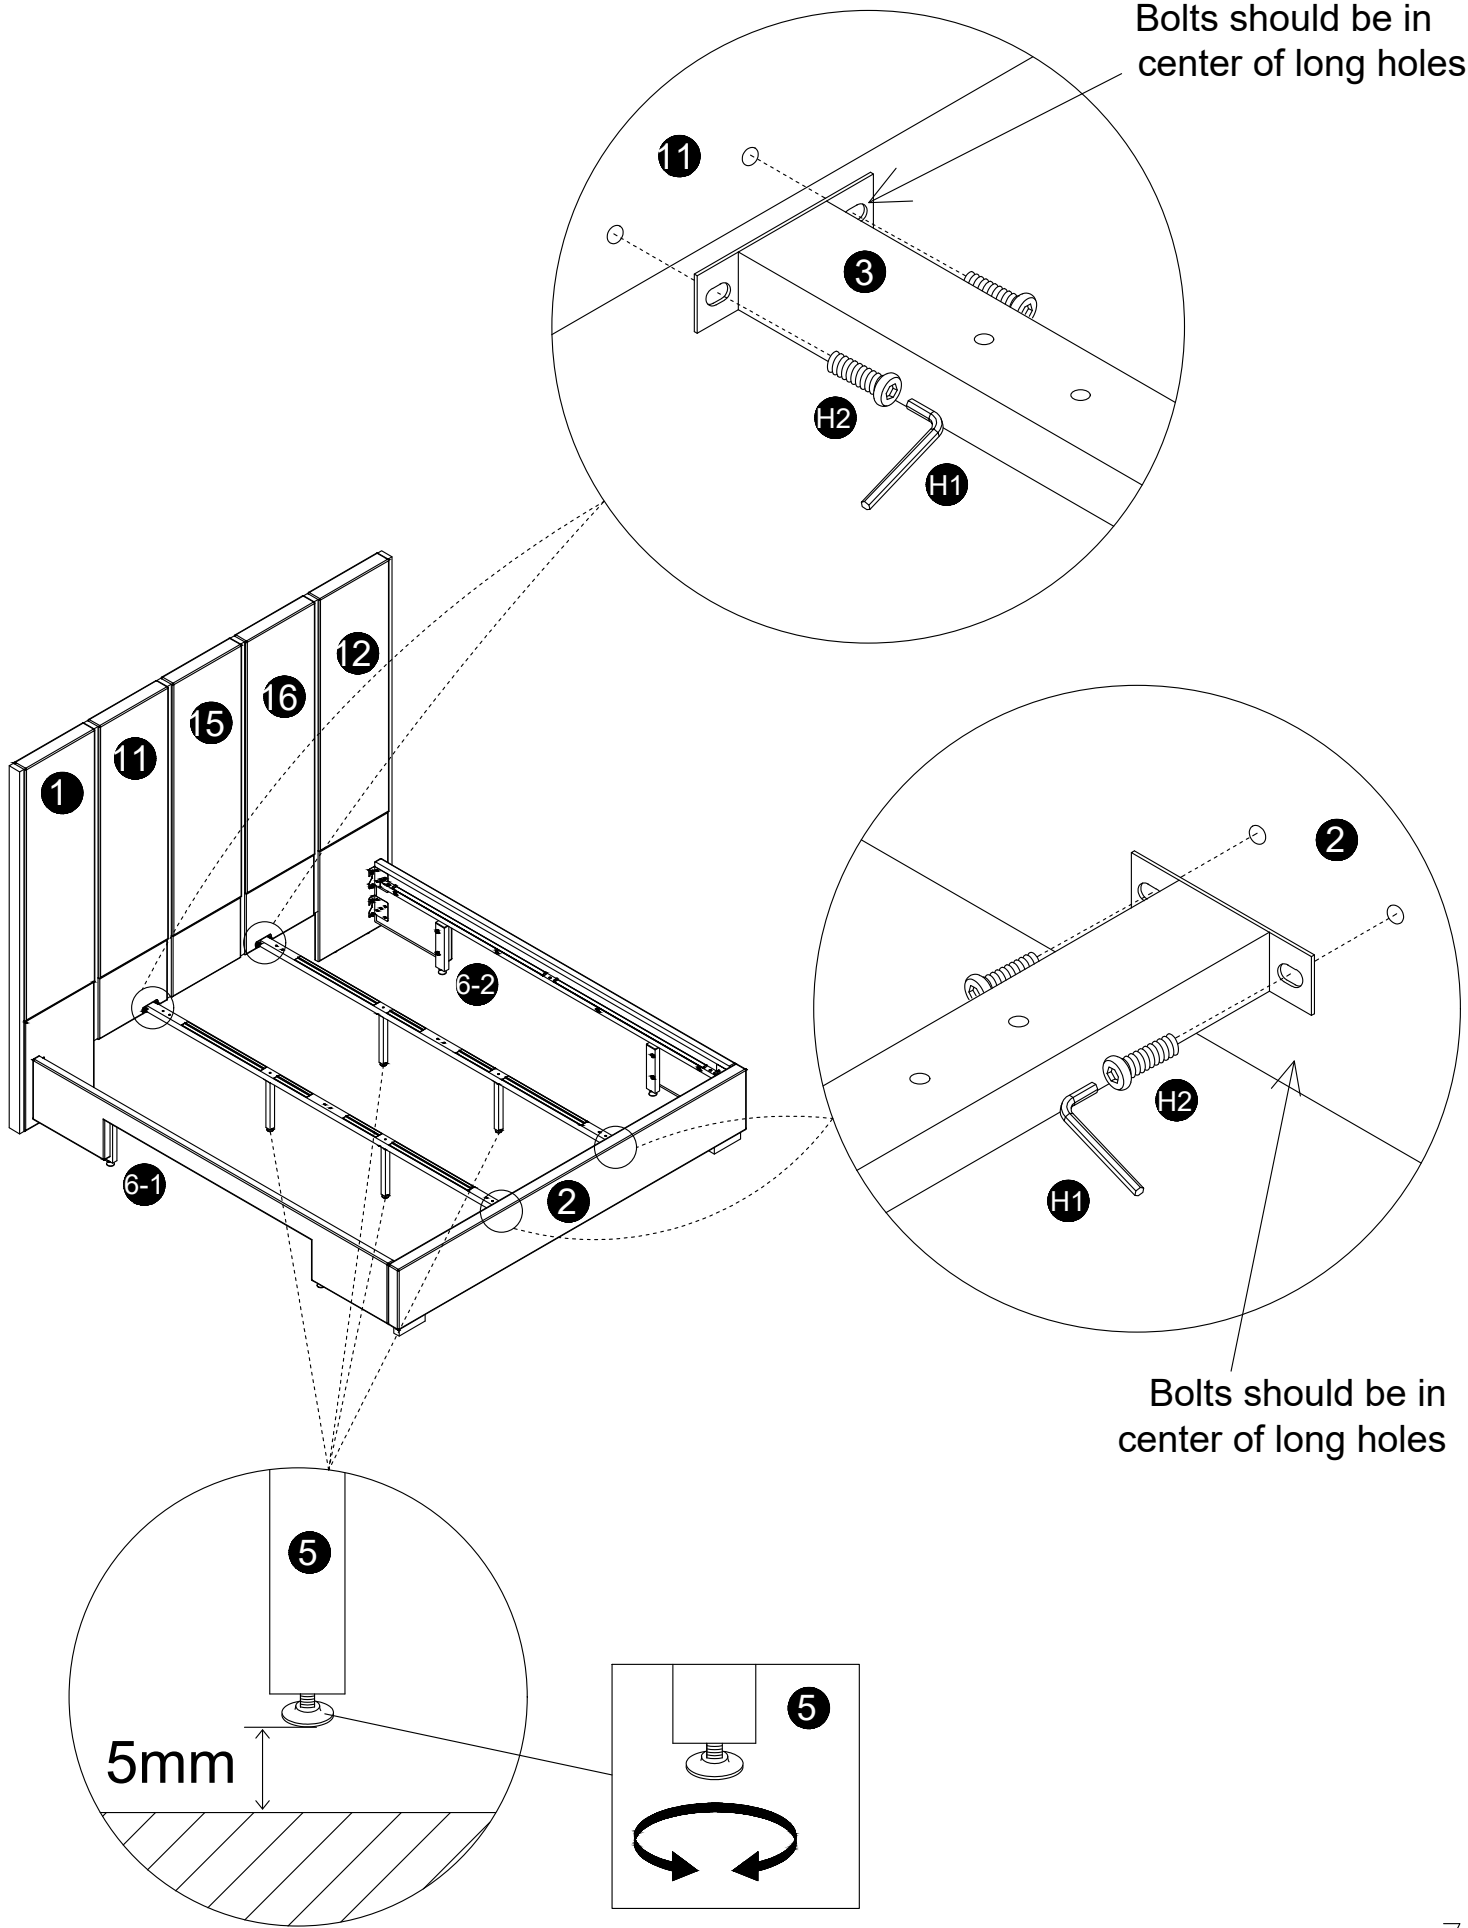
Bolts should be in
center of long holes
11
3
H2
H1
12
16
15
11
1
6-2
6-1
2
2
H2
H1
Bolts should be in
center of long holes
5
5mm
5

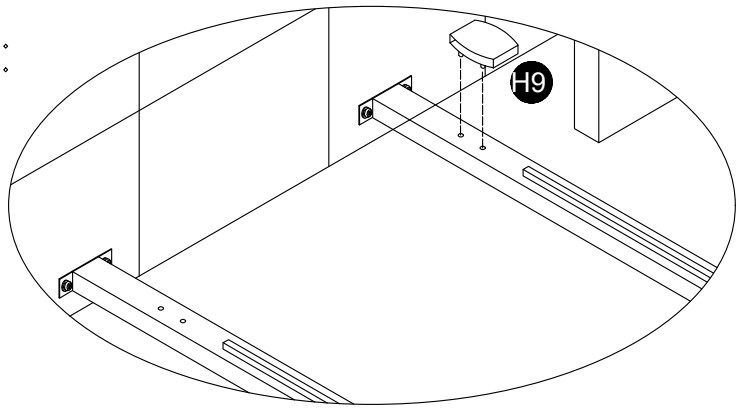
a:



H9

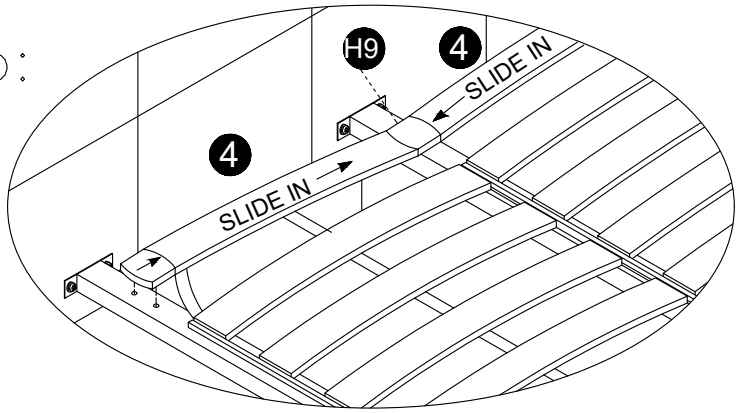
b:


H9
4
SLIDE IN
4
SLIDE IN

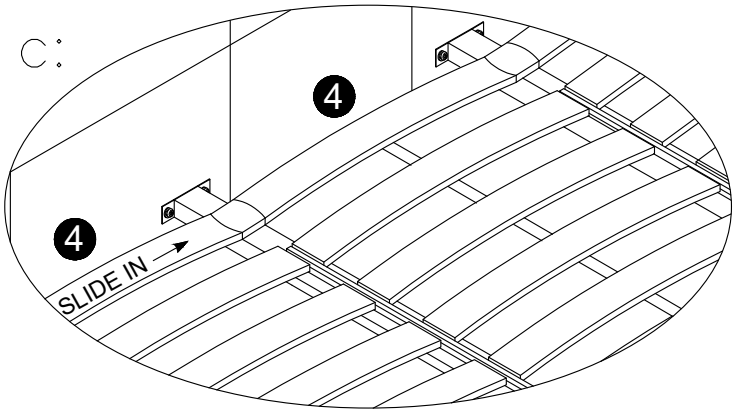c:



4
4
SLIDE IN

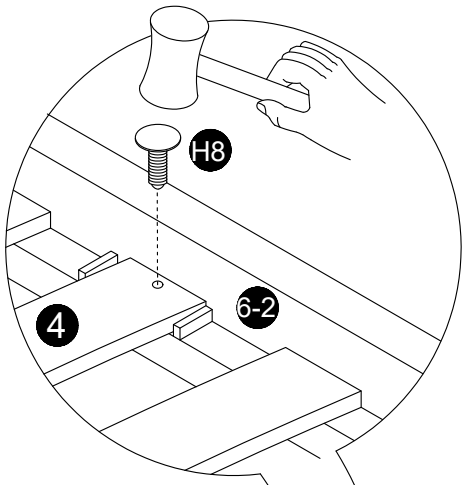
H8
4
6-2

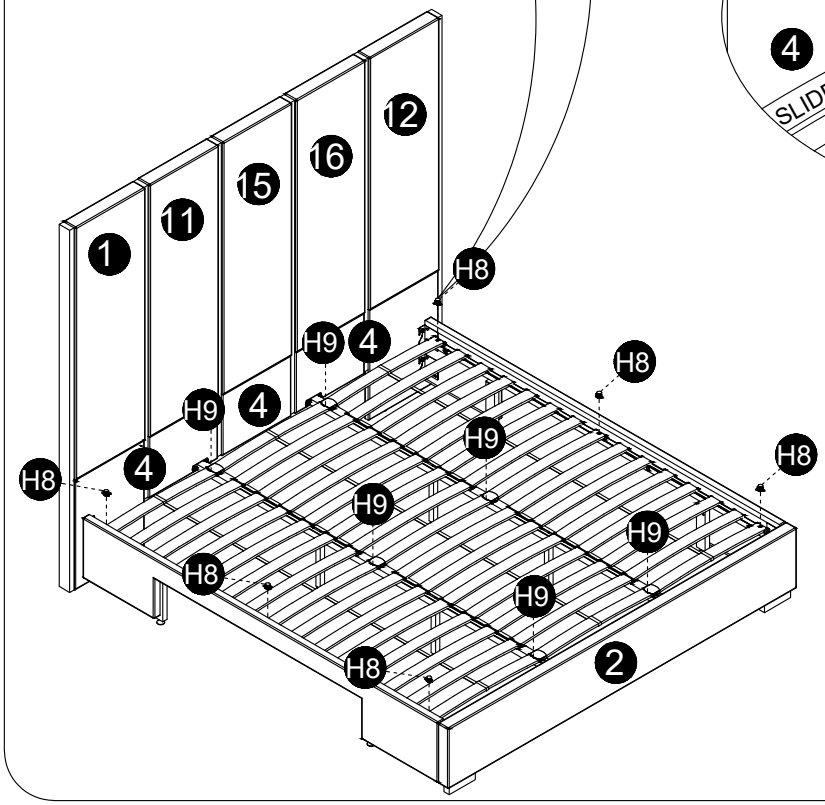
12
16
15
11
1
H8
H9
4
H8
H9
4
H8
4
H9
H8
H9
H8
H9
H8
2

10

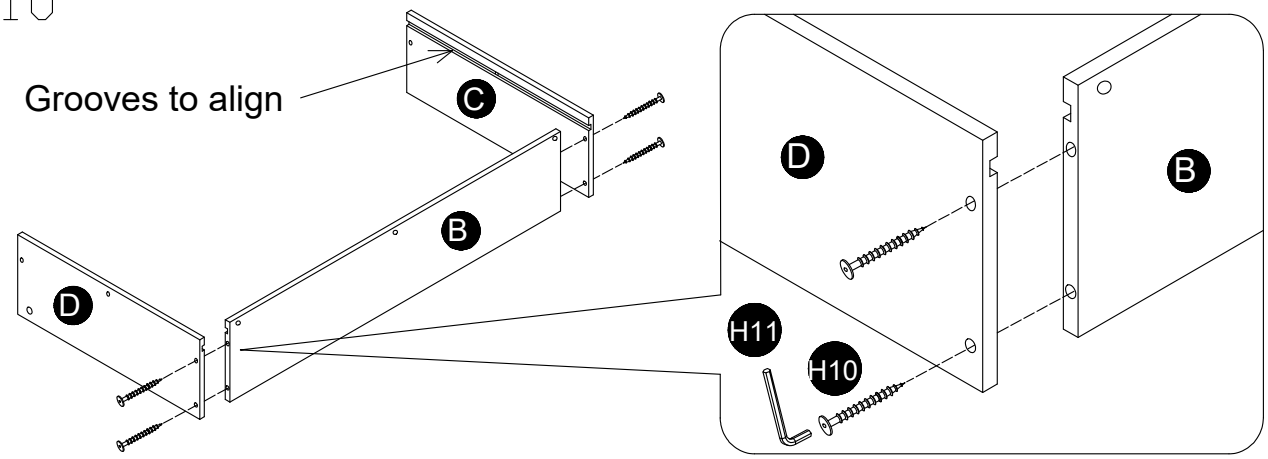
x2




11

x2

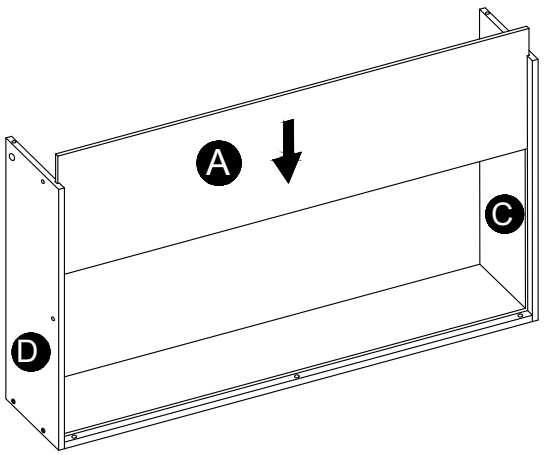
a:




b:

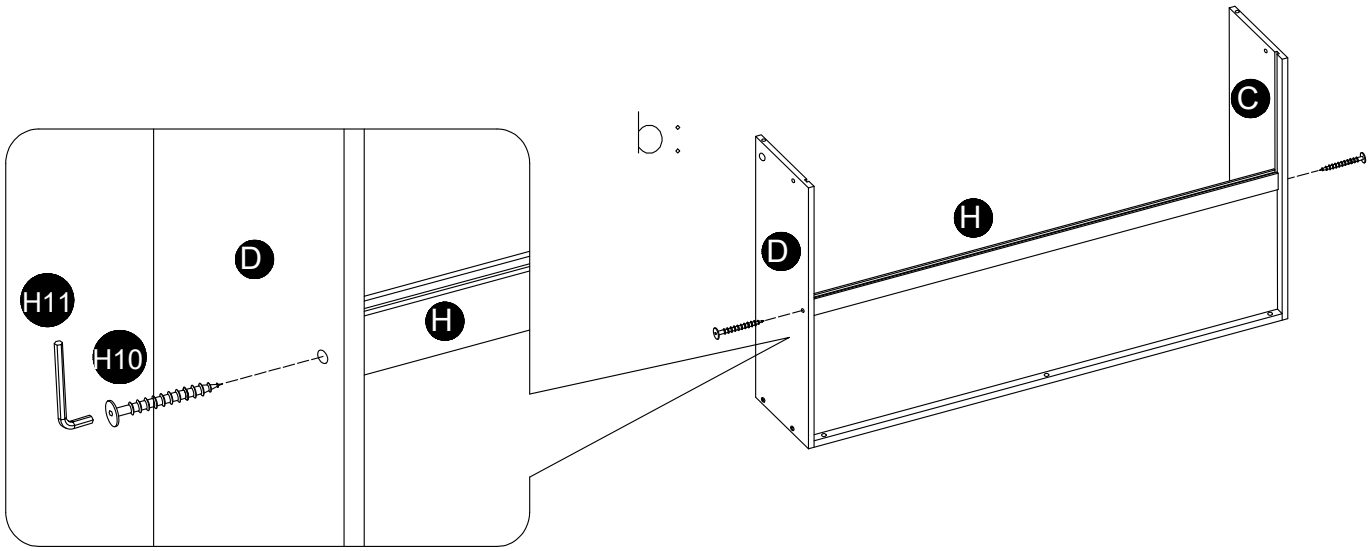

c:

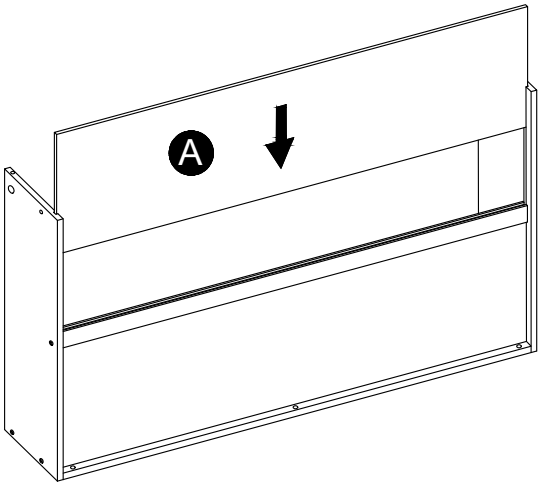


12

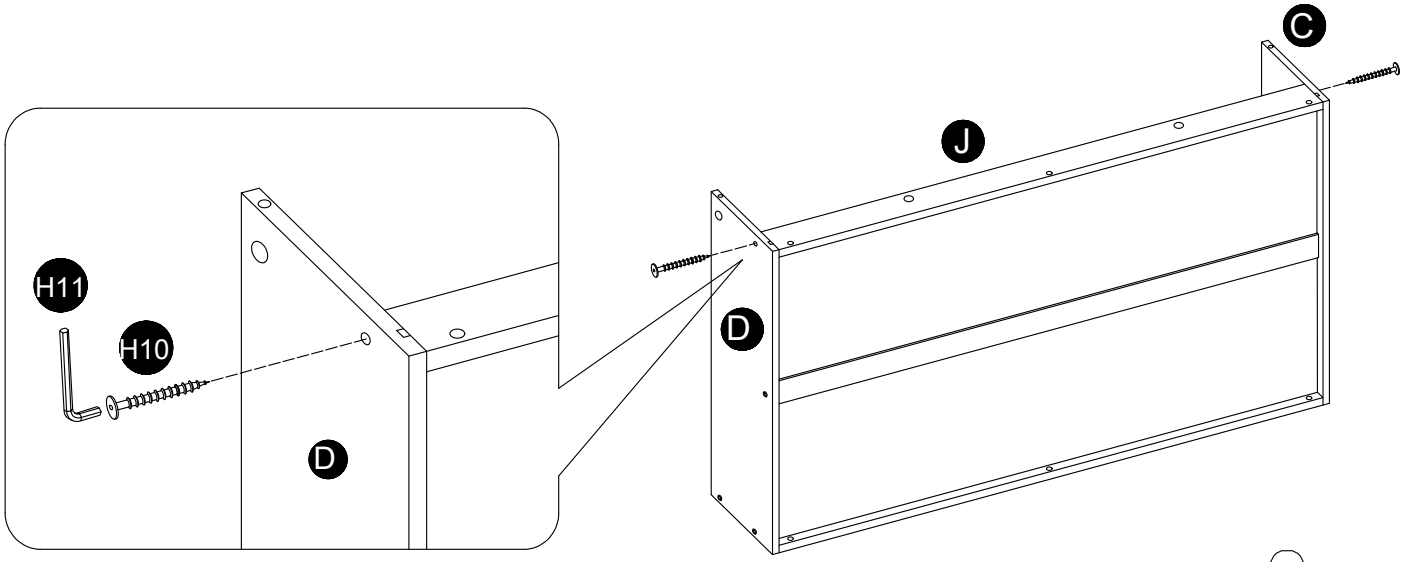



x2


13

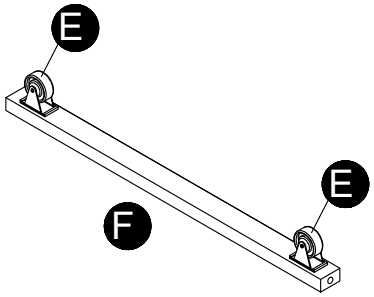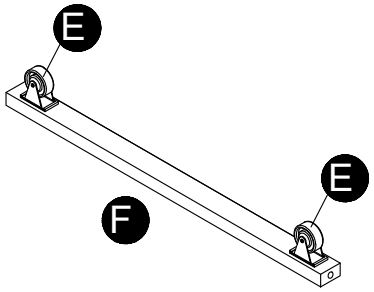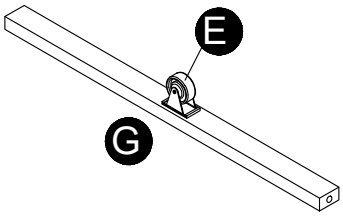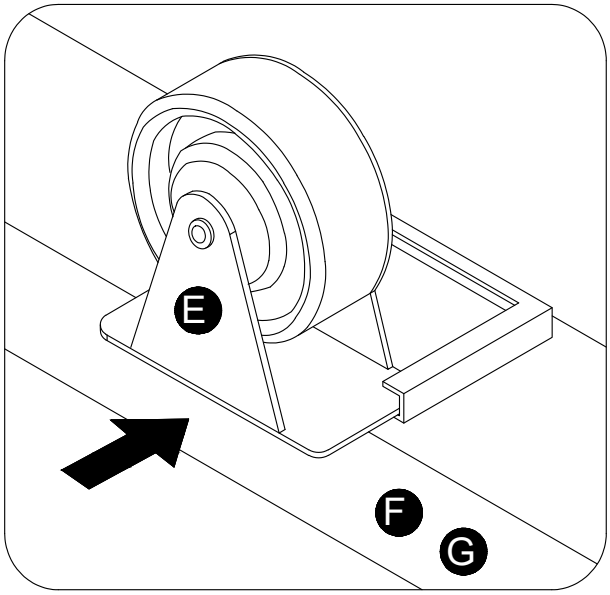x2












14 x2

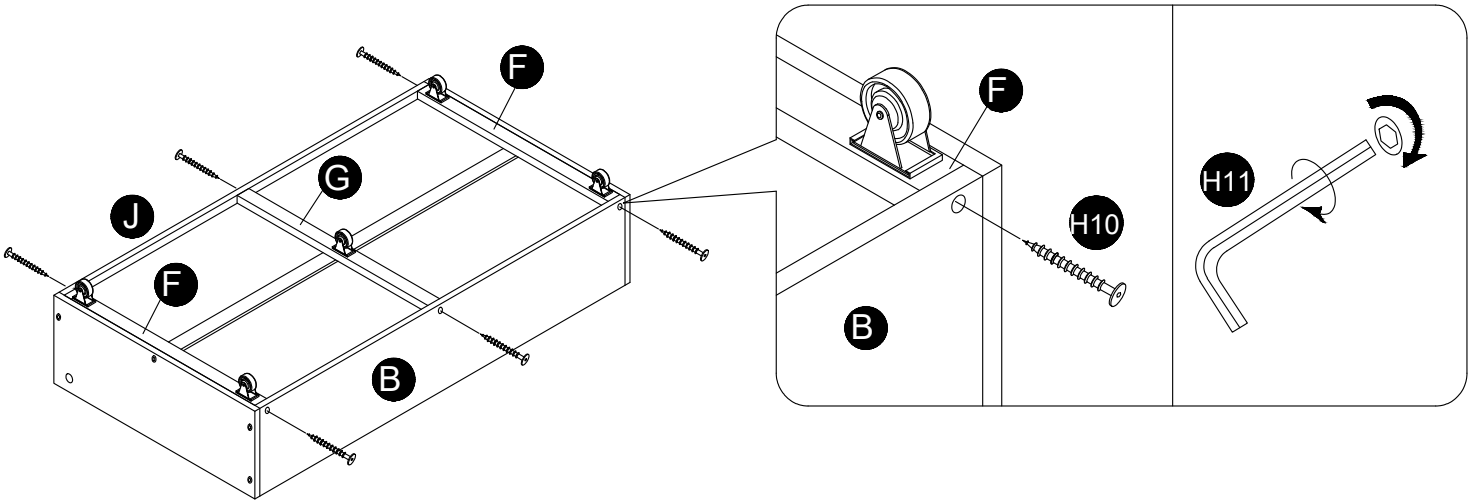


15 x2

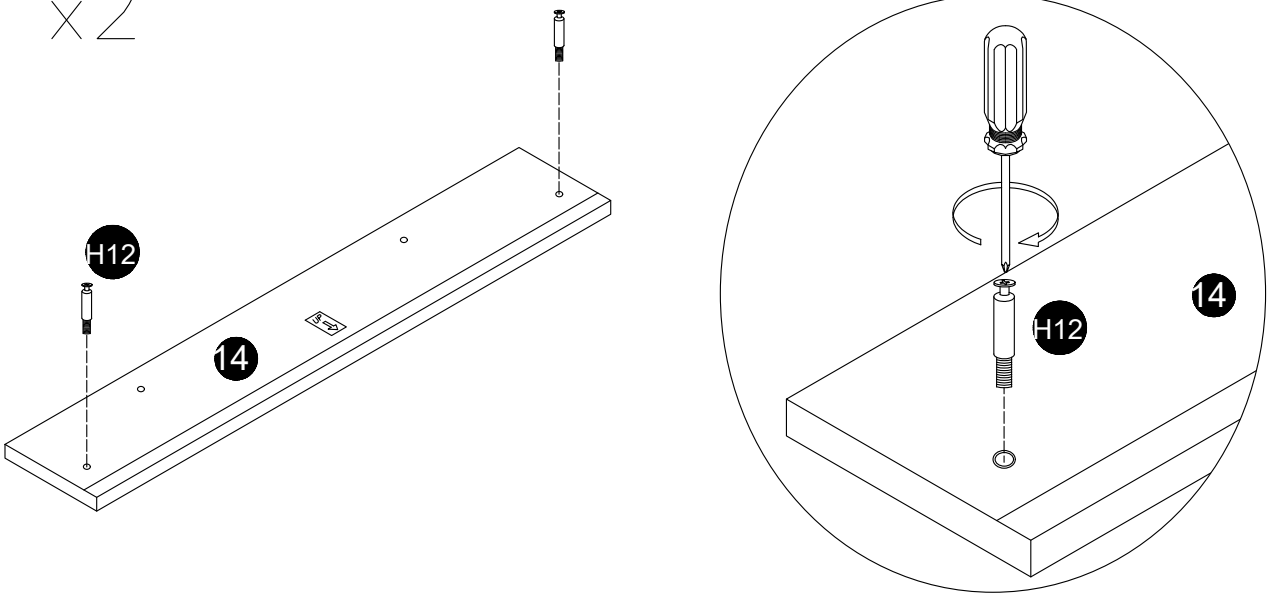


16 x2

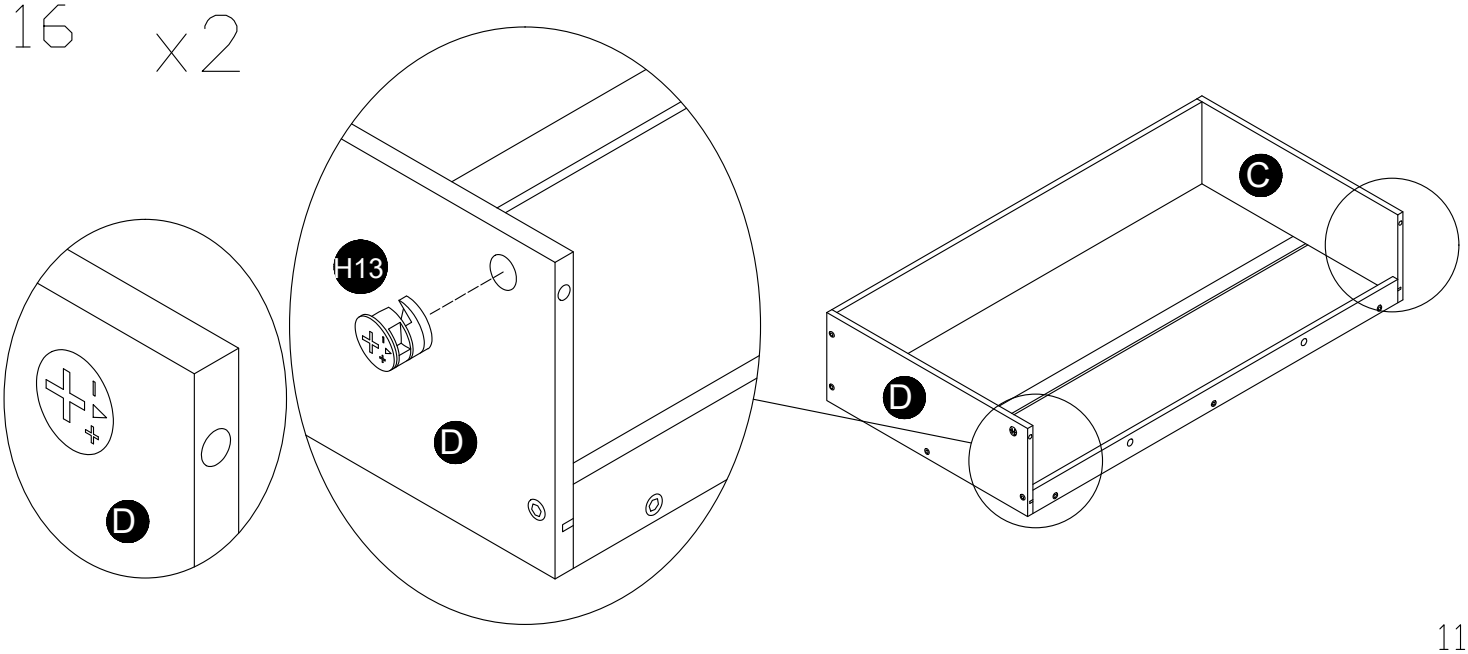


17 x2

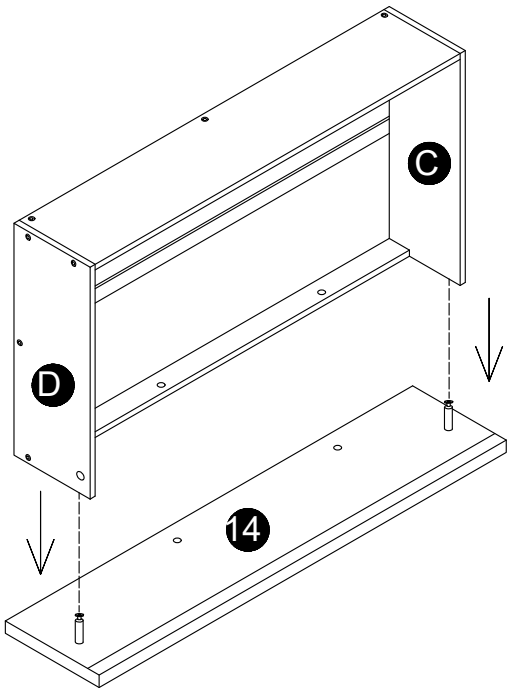


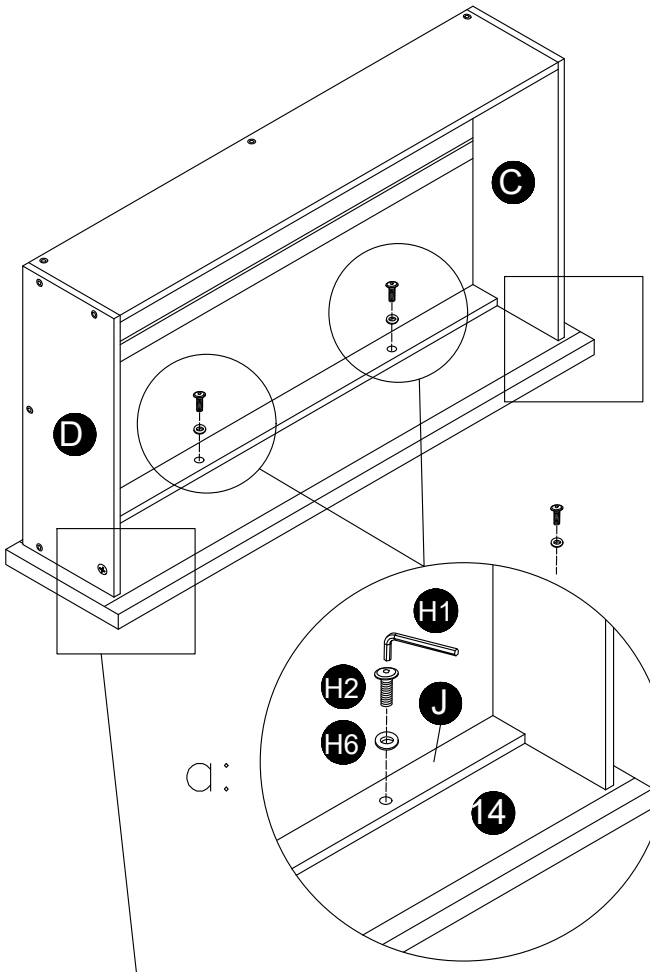

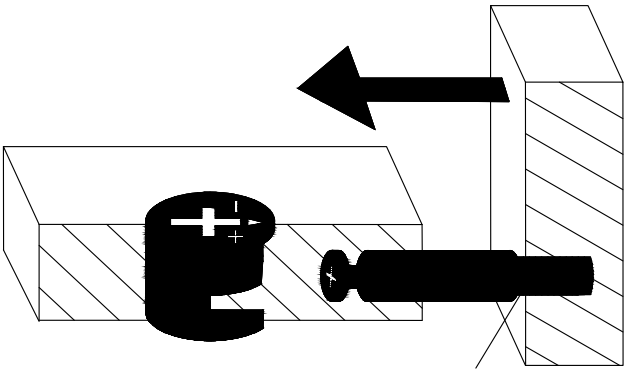
PUSH THE TWO PANELS TOGETHER ALLOWING THE DOWEL TO ALIGN WITH THE HOLE



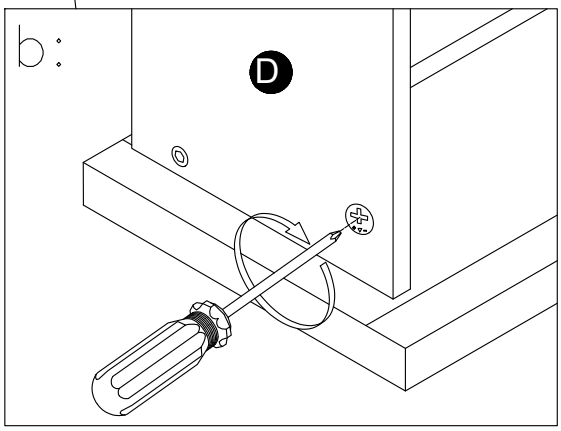
If H12 cannot lock into H13,
you can adjust H12 outward by 2mm.



TURN THE CAM IN A CLOCKWISE DIRECTION

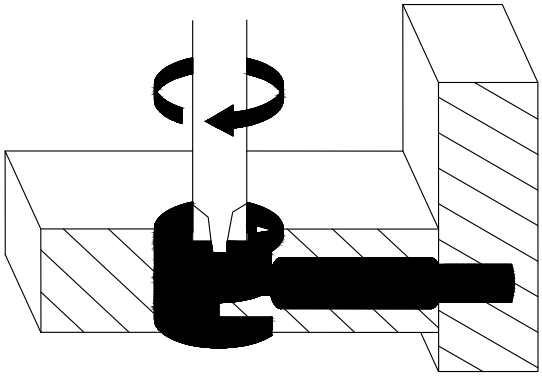

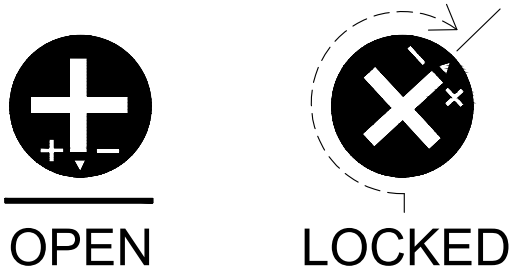DON'T STOP UNTILTHE 2 O'CLOCK LOCK
TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITIONS SHOWN IN THE DIAGRAMS BELOW



Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.