
S07A


Installation Instructions


Sliding Shower and Bath Doors

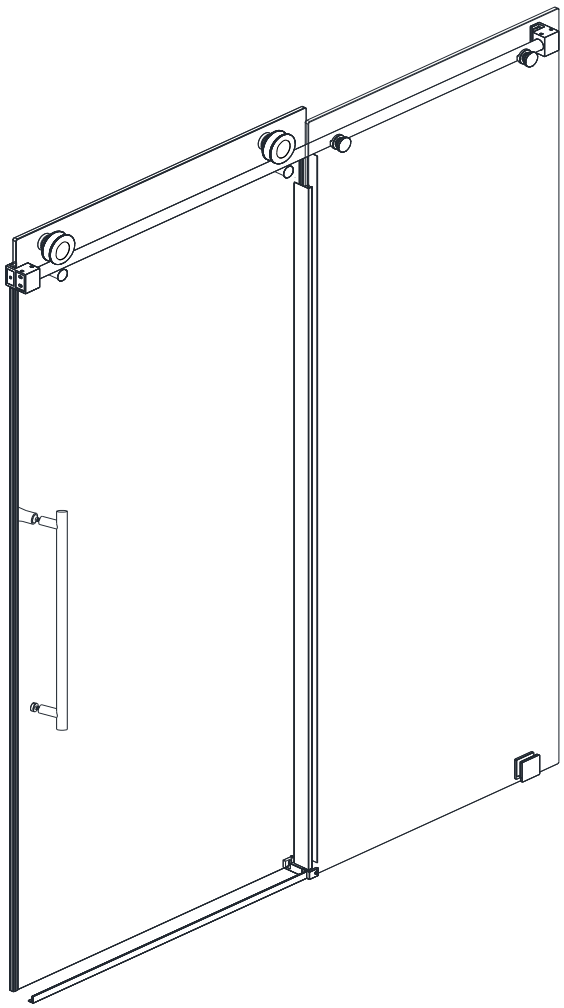

Scan for **YouTube HD** Product Install Video

Scan QR Code for Installation Video

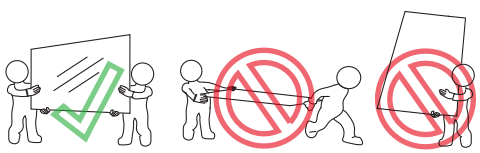

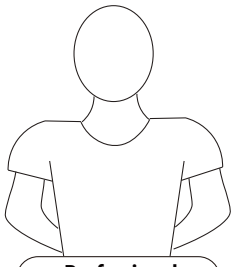

This door requires professional installation. Two installers recommended.


All the plastic bag are not a toy, keep it out of reach of infants and children to avoid choking hazards.

V01-2026-01


Tools




Level




Tape Measure



Pencil



Phillips Screwdriver



Silicone



Power Drill



Drill Bit Ø1/8" (3mm)




Drill Bit Ø3/16" (4mm)




Drill Bit Ø1/4" (6mm)




Drill Bit Ø5/16" (8mm)

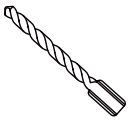


Drill Bit Ø3/8" (10mm)

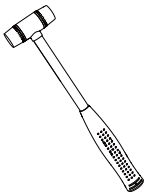

Soft Head Hammer

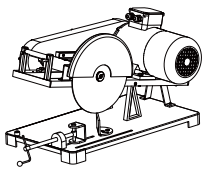


Chop saw**



Safety Glasses




Work Gloves



Hacksaw**



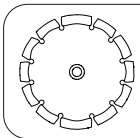


**Use the proper saw blade to cut stainless steel.



Painter's Tape




Razor Knife



Extender Driver Bit



#3 Phillips Driver Bit

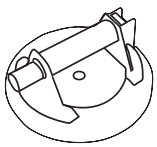

Professional-grade Glass suction cup

TIP


Measure the finished opening before proceeding with the installation to be sure that the correct model size has been ordered.

Be sure to cover the shower drain to prevent losing small parts.

Threshold must be level; Walls must be plumb.

Parts
1/1


Shower Door Components - Detailed Diagram

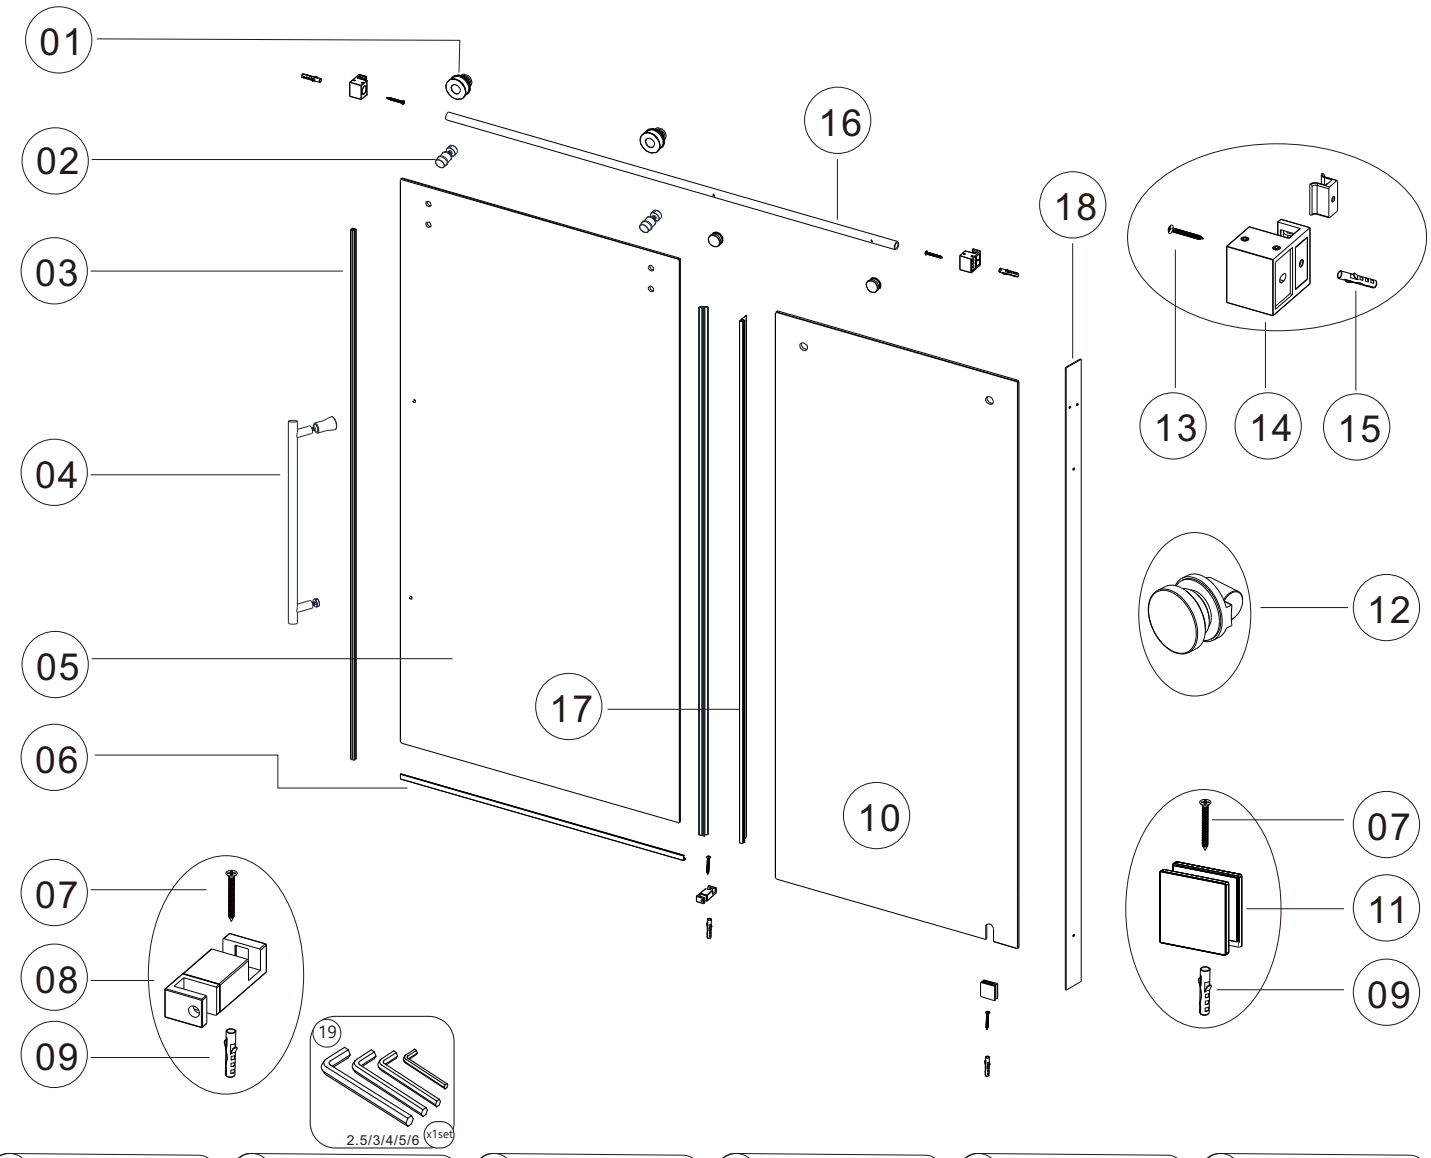

01 Roller Assembly x2	02 Anti-jump Pin x2	03 Bulb Vinyl Strip x2	04 Handle x1	05 Sliding Glass x1	06 Bottom Threshold x1
07 St4x30 Countersunk Screw x2	08 Guide block x1	09 Wall Anchor (1/4"/6mm) x2	10 Fixed Glass x1	11 Bottom Clamp x1	12 Glass-to-rail bracket x2
13 St6x60 Truss Head Screw x2	14 L R Guide Rail Bracket x2	15 Wall Anchor (5/16"/8mm) x2	16 Top Guide Rail x1	17 Vertical Vinyl Strip x1	18 Quick Positioning Plate x1

Inst.Steps
1/1

Check shower base/floor level and wall plumb

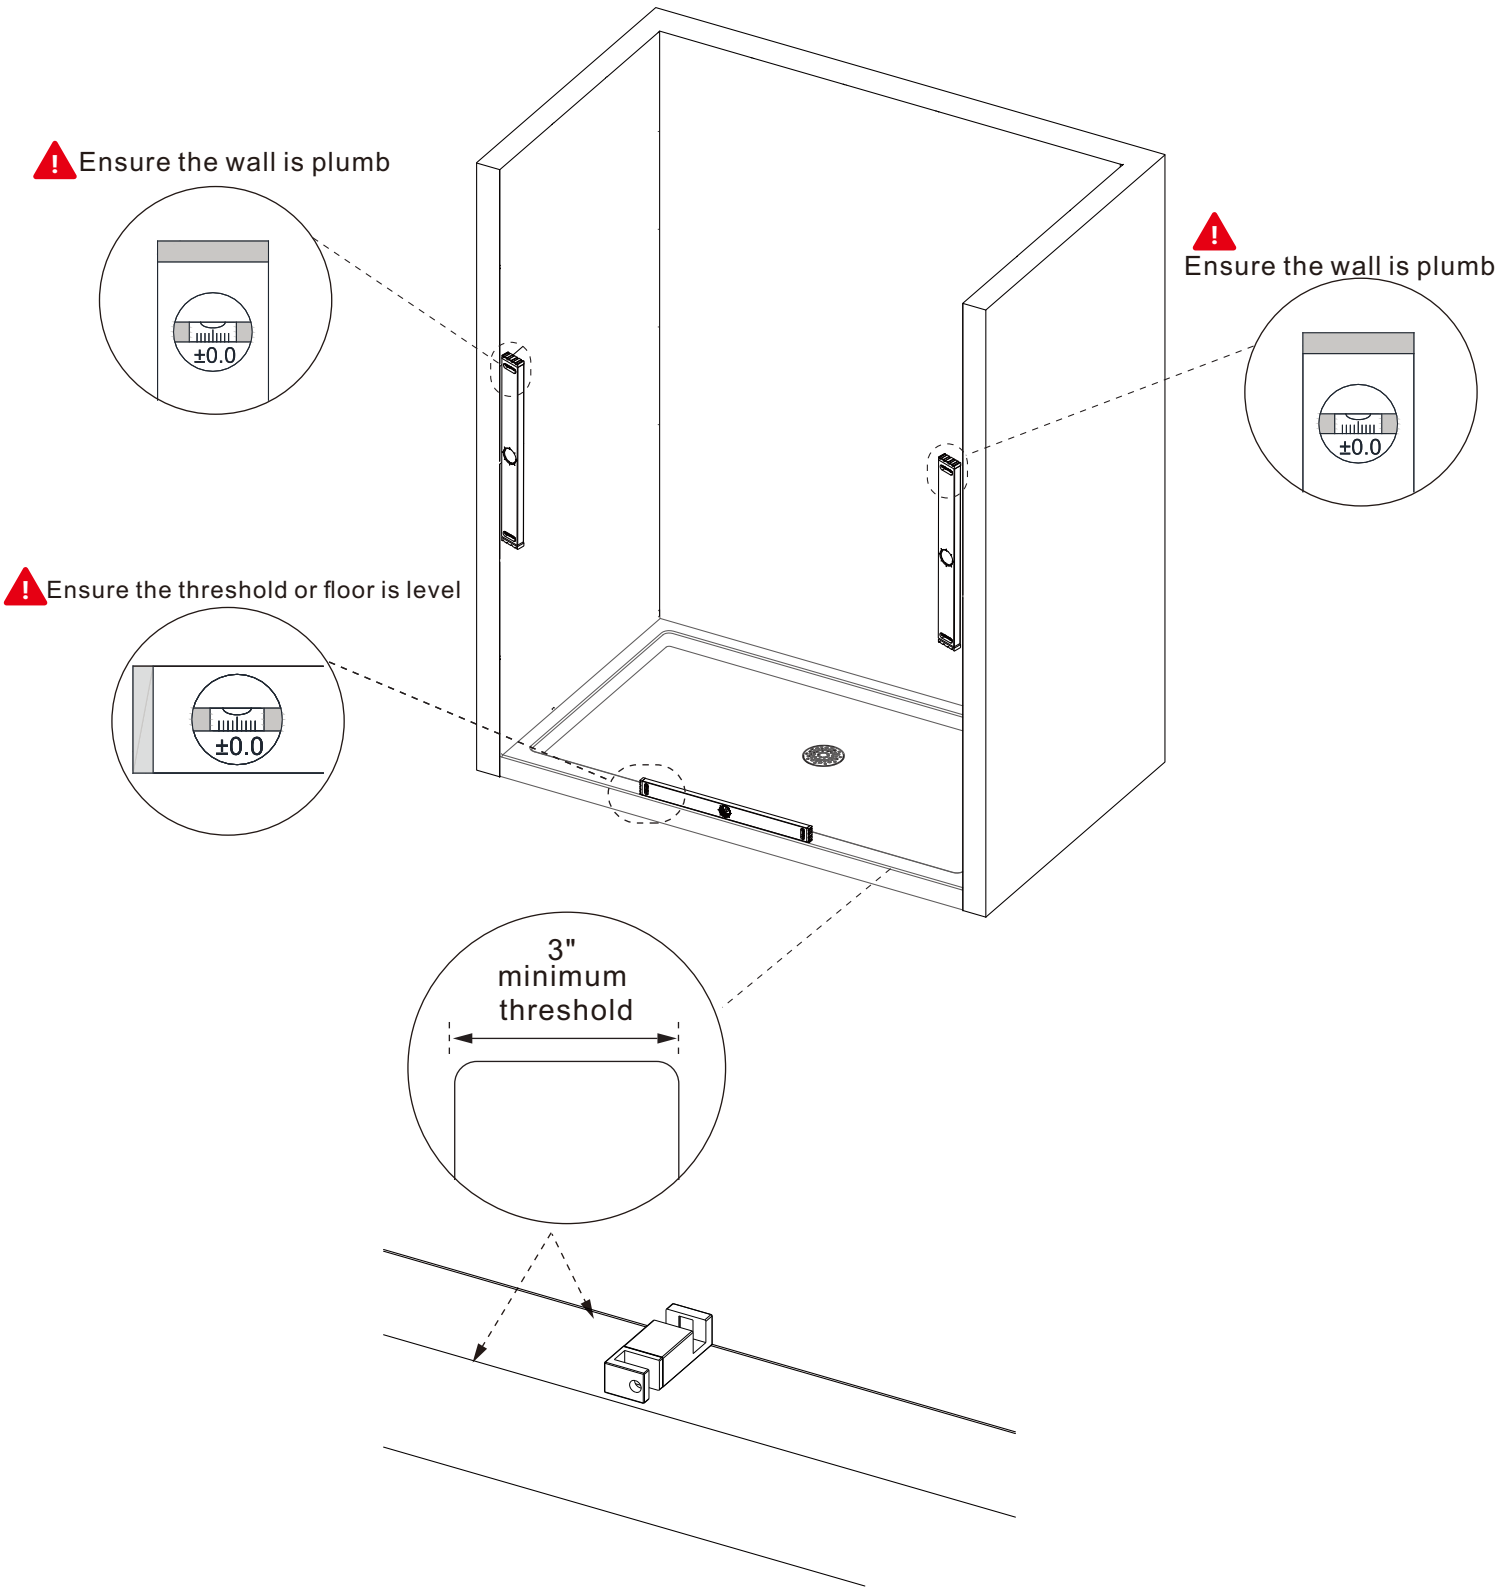


NOTE

If installed on a threshold, the shower door requires a minimum of 3 inches (3") of flat threshold space.

Inst.Steps

2/1

Measure installation width, then cut the top guide rail to fit.

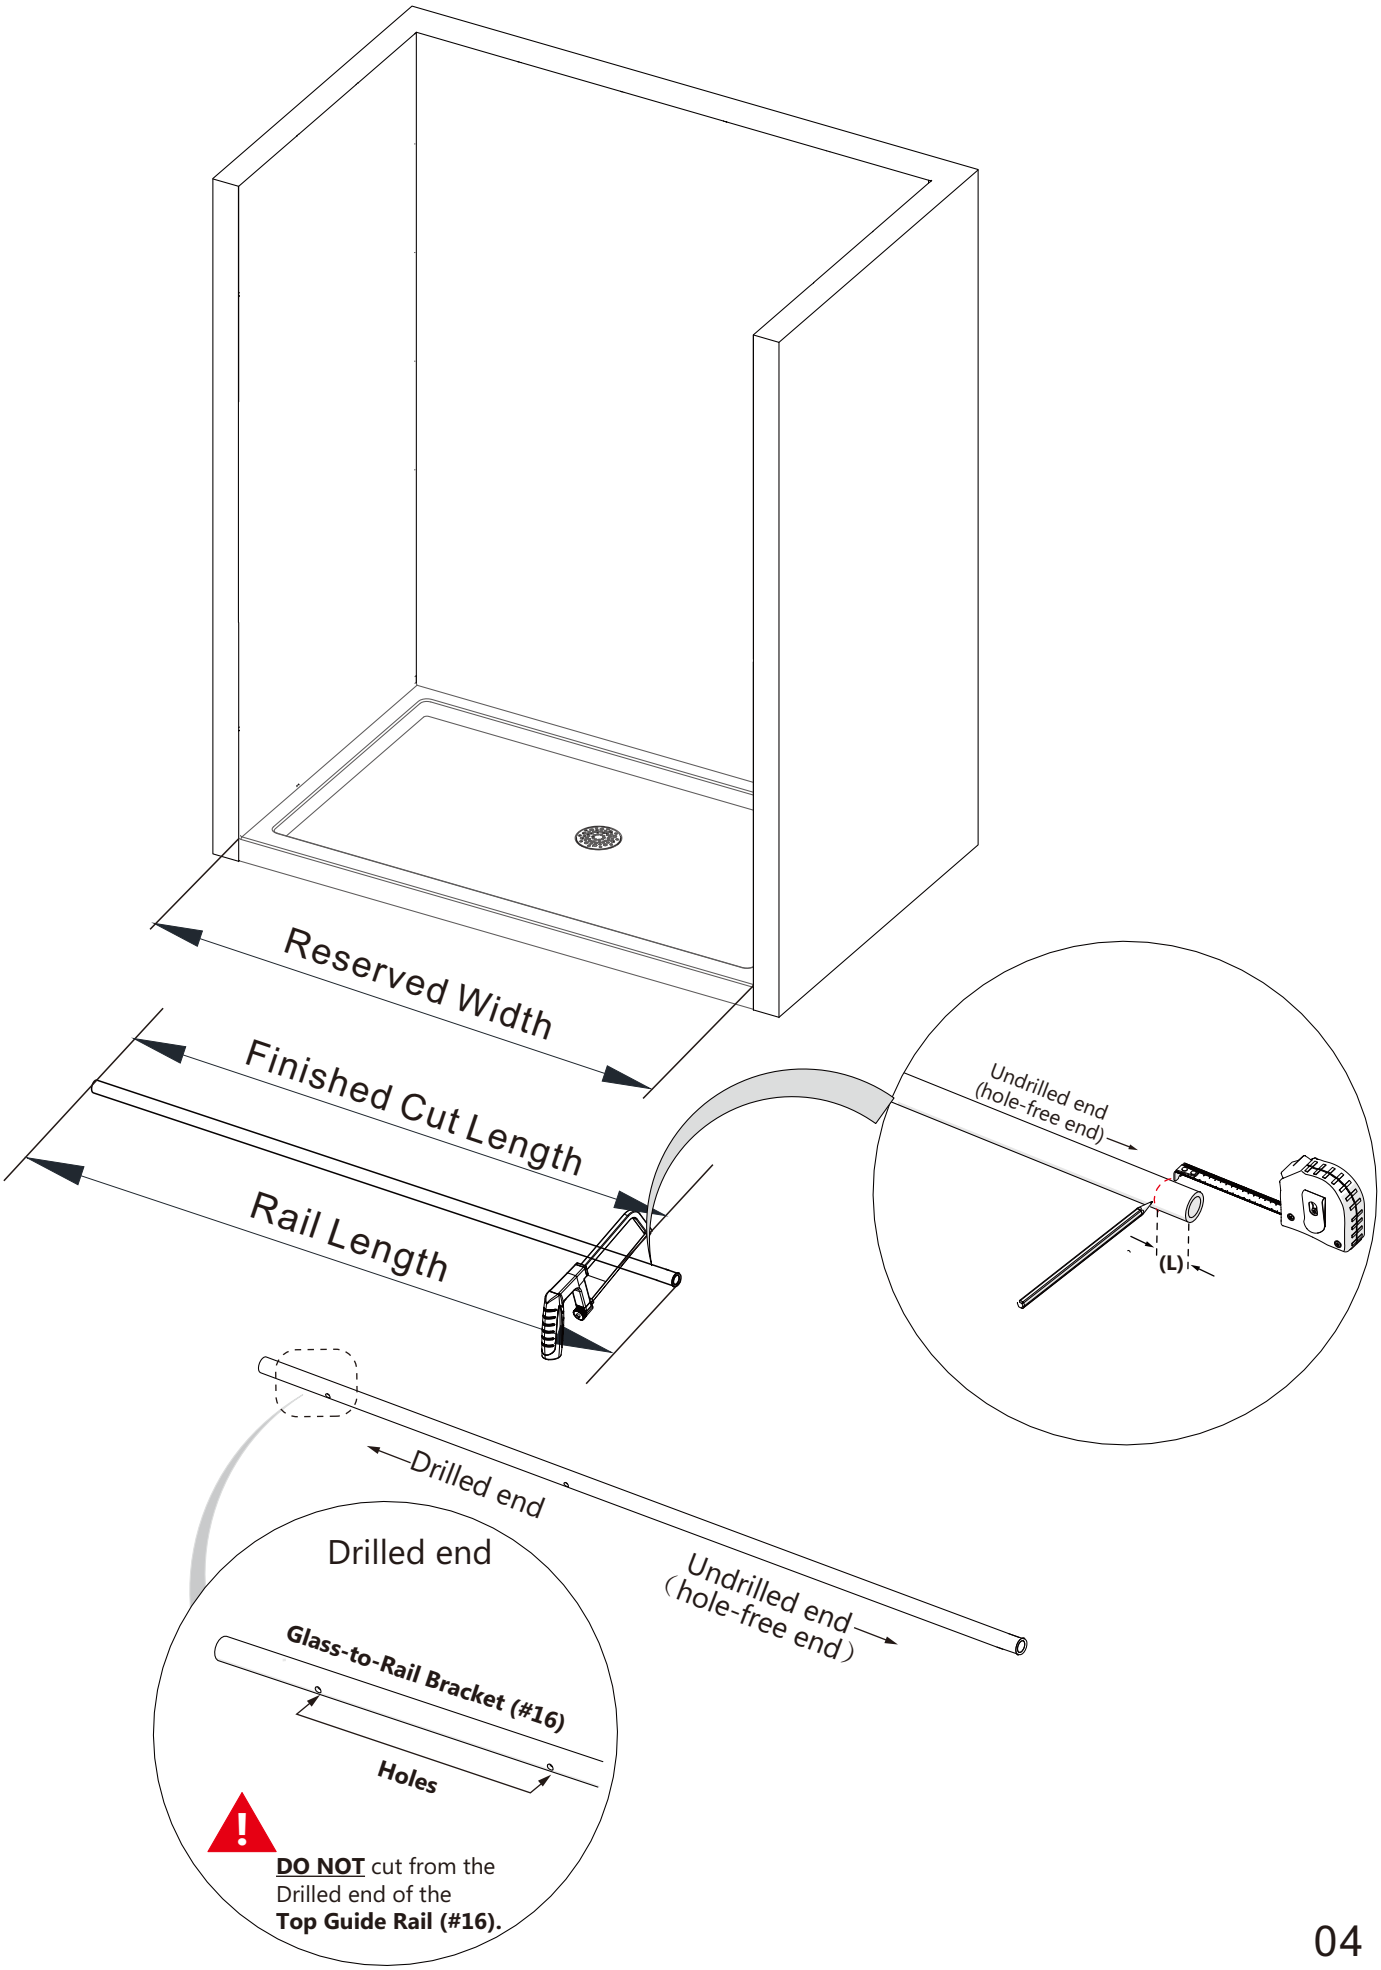

Inst.Steps
2/2

Measure install width cut rail to fit


Reserved Width, Rail Length & Finished Cut Length（Table 1）

NO	Reserved Width	Rail Length	Finished Cut Length
1	44"(1118mm)~45"(1143mm)(Incl. 44")	46 7/8"(1191mm)	42 7/8"(1089mm)~43 7/8"(1114mm)
2	45"(1143mm)~46"(1168mm)(Incl. 45")	46 7/8"(1191mm)	43 7/8"(1114mm)~44 7/8"(1140mm)
3	46"(1168mm)~47"(1193mm)(Incl. 46")	46 7/8"(1191mm)	44 7/8"(1140mm)~45 7/8"(1166mm)
4	47"(1193mm)~48"(1219mm)(Incl. 47")	46 7/8"(1191mm)	45 7/8"(1166mm)~46 7/8"(1191mm)
5	48"(1219mm)~49"(1244mm)(Incl. 48")	50 7/8"(1292mm)	46 7/8"(1191mm)~47 7/8"(1216mm)
6	49"(1244mm)~50"(1270mm)(Incl. 49")	50 7/8"(1292mm)	47 7/8"(1216mm)~48 7/8"(1241mm)
7	50"(1270mm)~51"(1295mm)(Incl. 50")	50 7/8"(1292mm)	48 7/8"(1241mm)~49 7/8"(1267mm)
8	51"(1295mm)~52"(1320mm)(Incl. 51")	50 7/8"(1292mm)	49 7/8"(1267mm)~50 7/8"(1292mm)
9	52"(1320mm)~53"(1346mm)(Incl. 52")	54 7/8"(1393mm)	50 7/8"(1292mm)~51 7/8"(1318mm)
10	53"(1346mm)~54"(1371mm)(Incl. 53")	54 7/8"(1393mm)	51 7/8"(1318mm)~52 7/8"(1343mm)
11	54"(1371mm)~55"(1397mm)(Incl. 54")	54 7/8"(1393mm)	52 7/8"(1343mm)~53 7/8"(1368mm)
12	55"(1397mm)~56"(1422mm)(Incl. 55")	54 7/8"(1393mm)	53 7/8"(1368mm)~54 7/8"(1394mm)
13	56"(1422mm)~57"(1447mm)(Incl. 56")	58 7/8"(1490mm)	54 7/8"(1394mm)~55 7/8"(1419mm)
14	57"(1447mm)~58"(1473mm)(Incl. 57")	58 7/8"(1490mm)	55 7/8"(1419mm)~56 7/8"(1445mm)
15	58"(1473mm)~59"(1498mm)(Incl. 58")	58 7/8"(1490mm)	56 7/8"(1445mm)~57 7/8"(1470mm)
16	59"(1498mm)~60"(1524mm)(Incl. 59")	58 7/8"(1490mm)	57 7/8"(1470mm)~58 7/8"(1490mm)
17	60"(1524mm)~61"(1549mm)(Incl. 60")	62 7/8"(1597mm)	58 7/8"(1490mm)~59 7/8"(1521mm)
18	61"(1549mm)~62"(1574mm)(Incl. 61")	62 7/8"(1597mm)	59 7/8"(1521mm)~60 7/8"(1546mm)
19	62"(1574mm)~63"(1600mm)(Incl. 62")	62 7/8"(1597mm)	60 7/8"(1546mm)~61 7/8"(1572mm)
20	63"(1600mm)~64"(1625mm)(Incl. 63")	62 7/8"(1597mm)	61 7/8"(1572mm)~62 7/8"(1597mm)
21	64"(1625mm)~65"(1651mm)(Incl. 64")	66 7/8"(1698mm)	62 7/8"(1597mm)~63 7/8"(1622mm)
22	65"(1651mm)~66"(1676mm)(Incl. 65")	66 7/8"(1698mm)	63 7/8"(1622mm)~64 7/8"(1648mm)
23	66"(1676mm)~67"(1701mm)(Incl. 66")	66 7/8"(1698mm)	64 7/8"(1648mm)~65 7/8"(1673mm)
24	67"(1701mm)~68"(1727mm)(Incl. 67")	66 7/8"(1698mm)	65 7/8"(1673mm)~66 7/8"(1698mm)
25	68"(1727mm)~69"(1752mm)(Incl. 68")	70 7/8"(1800mm)	66 7/8"(1698mm)~67 7/8"(1724mm)
26	69"(1752mm)~70"(1778mm)(Incl. 69")	70 7/8"(1800mm)	67 7/8"(1724mm)~68 7/8"(1749mm)
27	70"(1778mm)~71"(1803mm)(Incl. 70")	70 7/8"(1800mm)	68 7/8"(1749mm)~69 7/8"(1775mm)
28	71"(1803mm)~72"(1828mm)(Incl. 71")	70 7/8"(1800mm)	69 7/8"(1775mm)~70 7/8"(1800mm)

Inst.Steps
3/1

Measure Wall Bracket Holes

Height of the Wall Bracket Holes		
No	Height of the Shower Door	Height of the Wall Bracket Holes
1	66"/1676mm	62 1/4"/1581mm
2	76"/1930mm	72 1/4"/1835mm
3	78"/1981mm	74 1/4"/1886mm
4	80"/2032mm	78 1/4"/1988mm

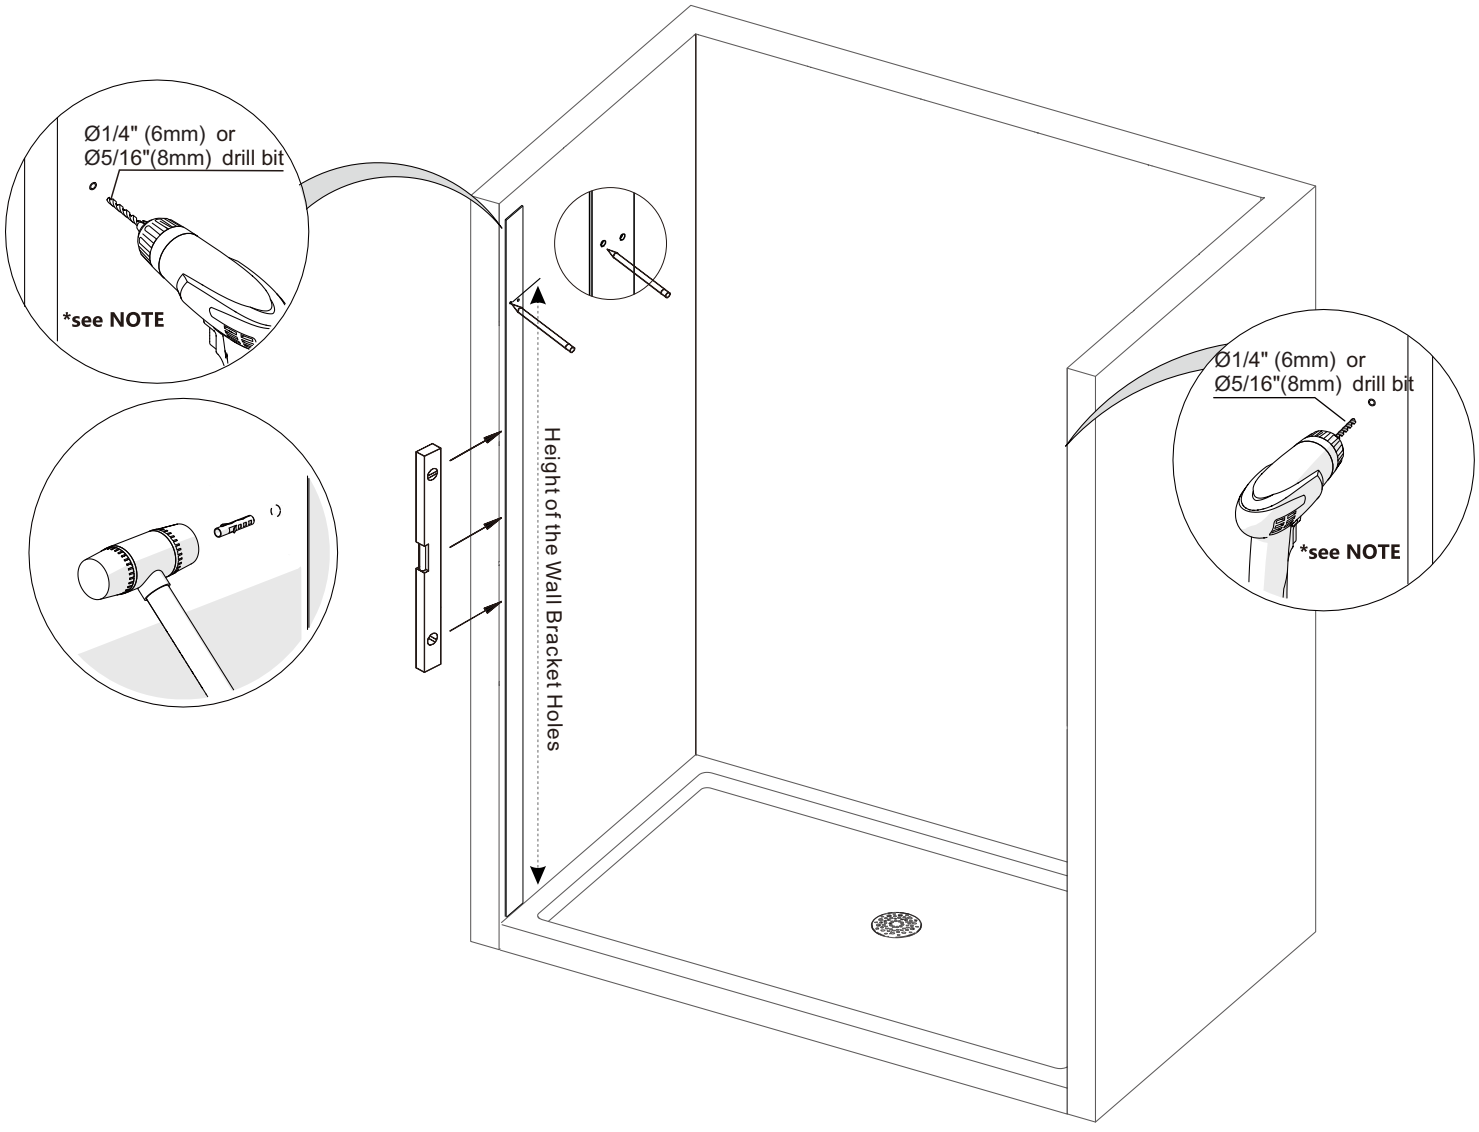

Drill & Screw Recommendations by Installation Case


For Guide Rail Brackets:
- **If a stud is present behind the wall**:
  drill a **Ø1/4"(6mm)** hole up to the stud. **(recommended)**


OR
- **If no stud is present behind the wall**:
  drill a **Ø5/16"(8mm)** hole and install the **Wall Anchor .**

Parts Need	Tools Need
15 Wall Anchor (5/16"/8mm) x2	


Inst.Steps
4/1

Wall Bracket Assembly & Installation

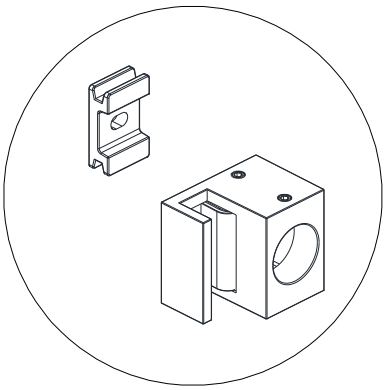




CORRECT -
recommended.

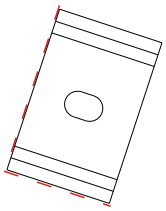


INCORRECT -
not recommended.

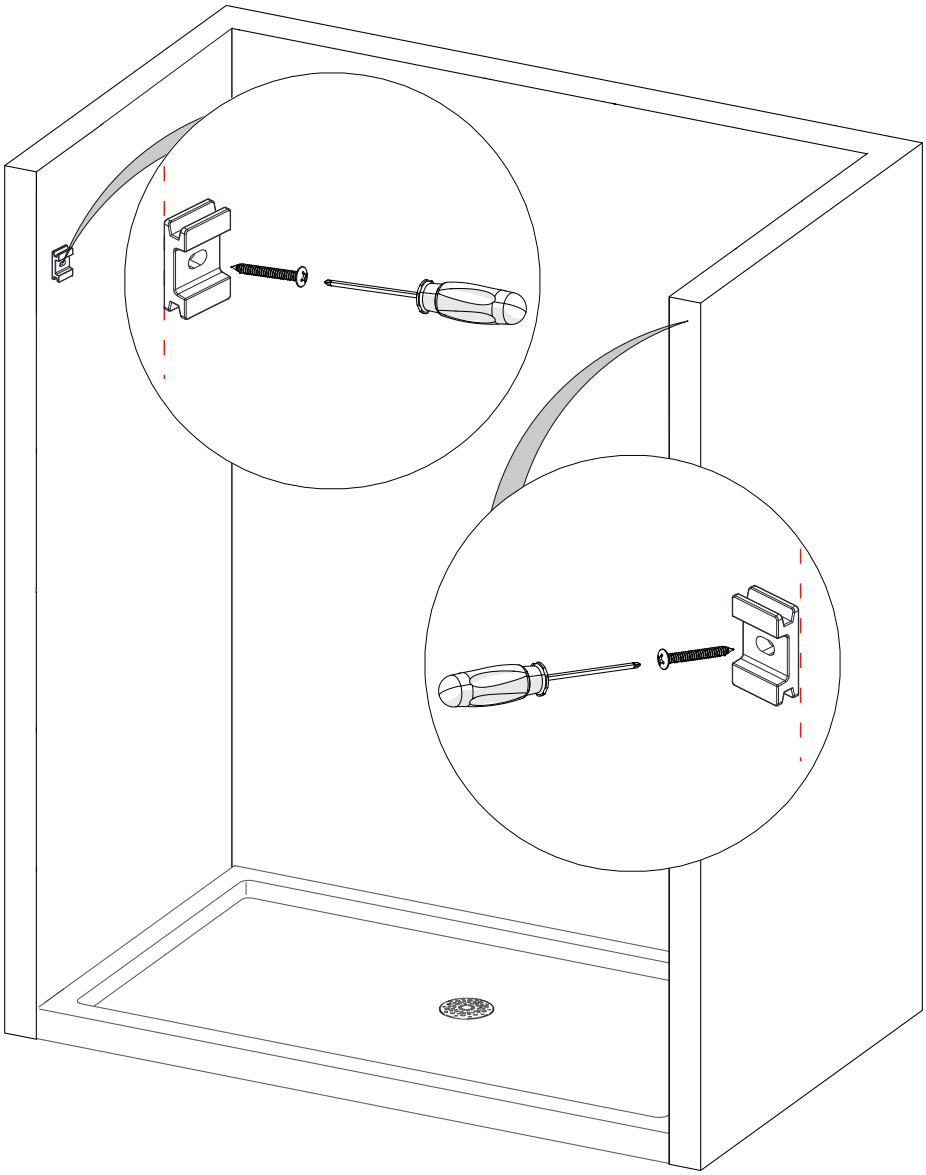


The adjustment set screws within the Guide Rail Bracket (#14) must be aligned vertically for easier access to adjust for level if necessary after the glass is installed. Align the set screws vertically and tighten.


DO NOT attach the handle to the Sliding Glass until instructed.
DO NOT attempt to lift the Sliding Glass with the handle as this may result in damage to the glass and/or serious personal injury. Use a professional grade glass suction cup and an assistant.

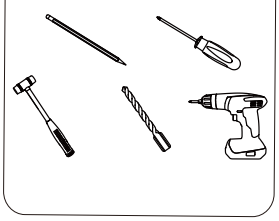
Parts Need	Tools Need
13  St6x60 Truss Head Screw x2	

Inst.Steps
5/1


Sliding Glass Roller Installation

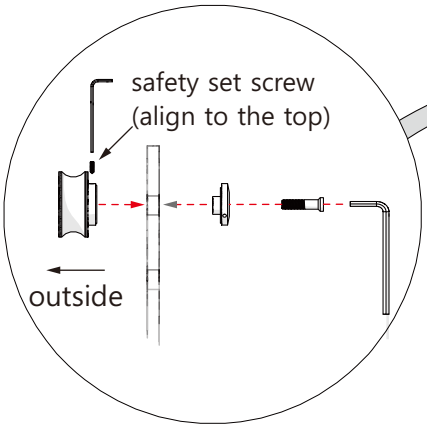

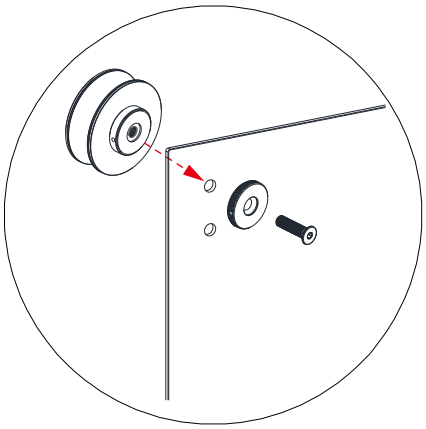





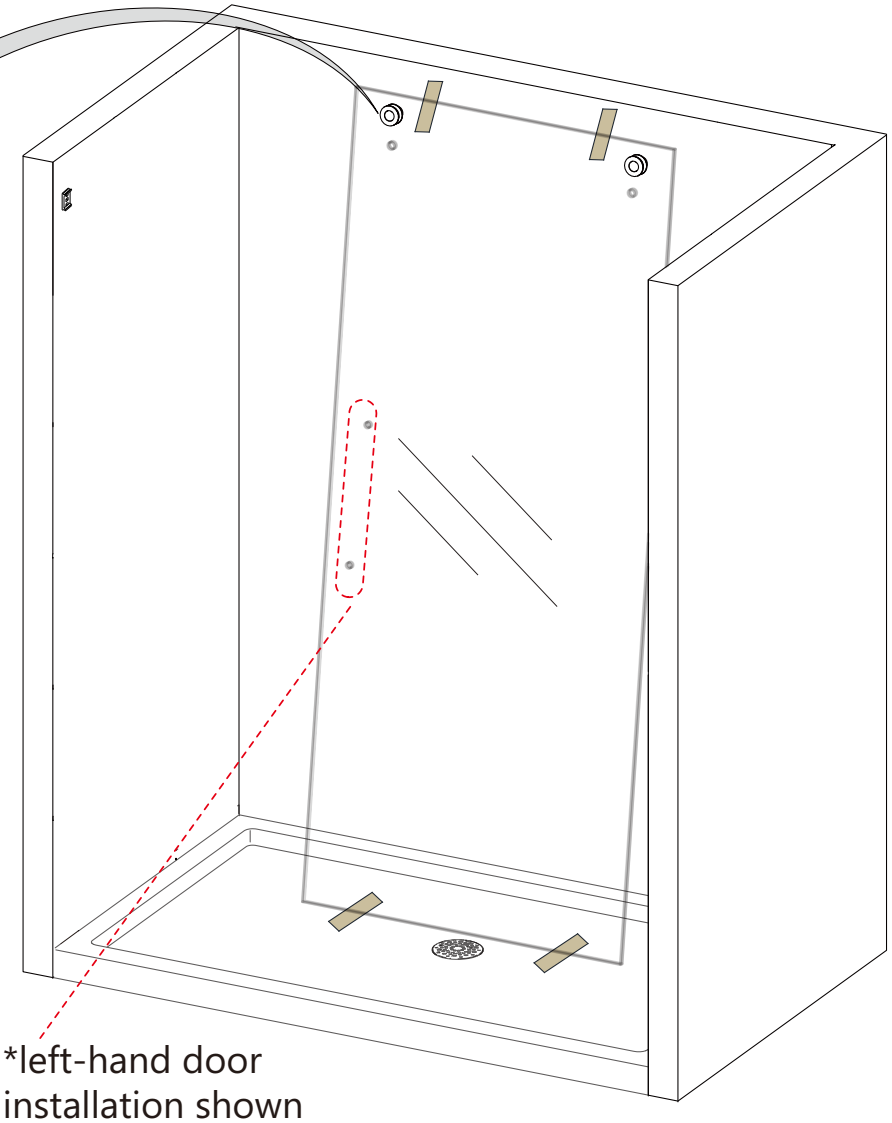


*left-hand door
installation shown

Leave the corner protectors on the glass until it is necessary to remove them


Before you install the **Fixed Glass (#10)**, attach the top **Roller Assemblies (#01)** to the **Sliding Glass (#05)** with the wheels facing outside of the shower.
Align the **safety set screw** towards the top for easier access. Then, take the **Sliding Glass (#05)** into the shower area and lean it against the wall with the handle holes on the correct side. Always use padding to protect the glass and shower surfaces.

Parts Need

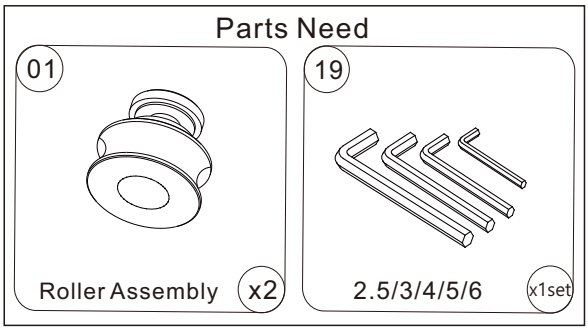


Inst.Steps
6/1

Top Guide Rail Installation

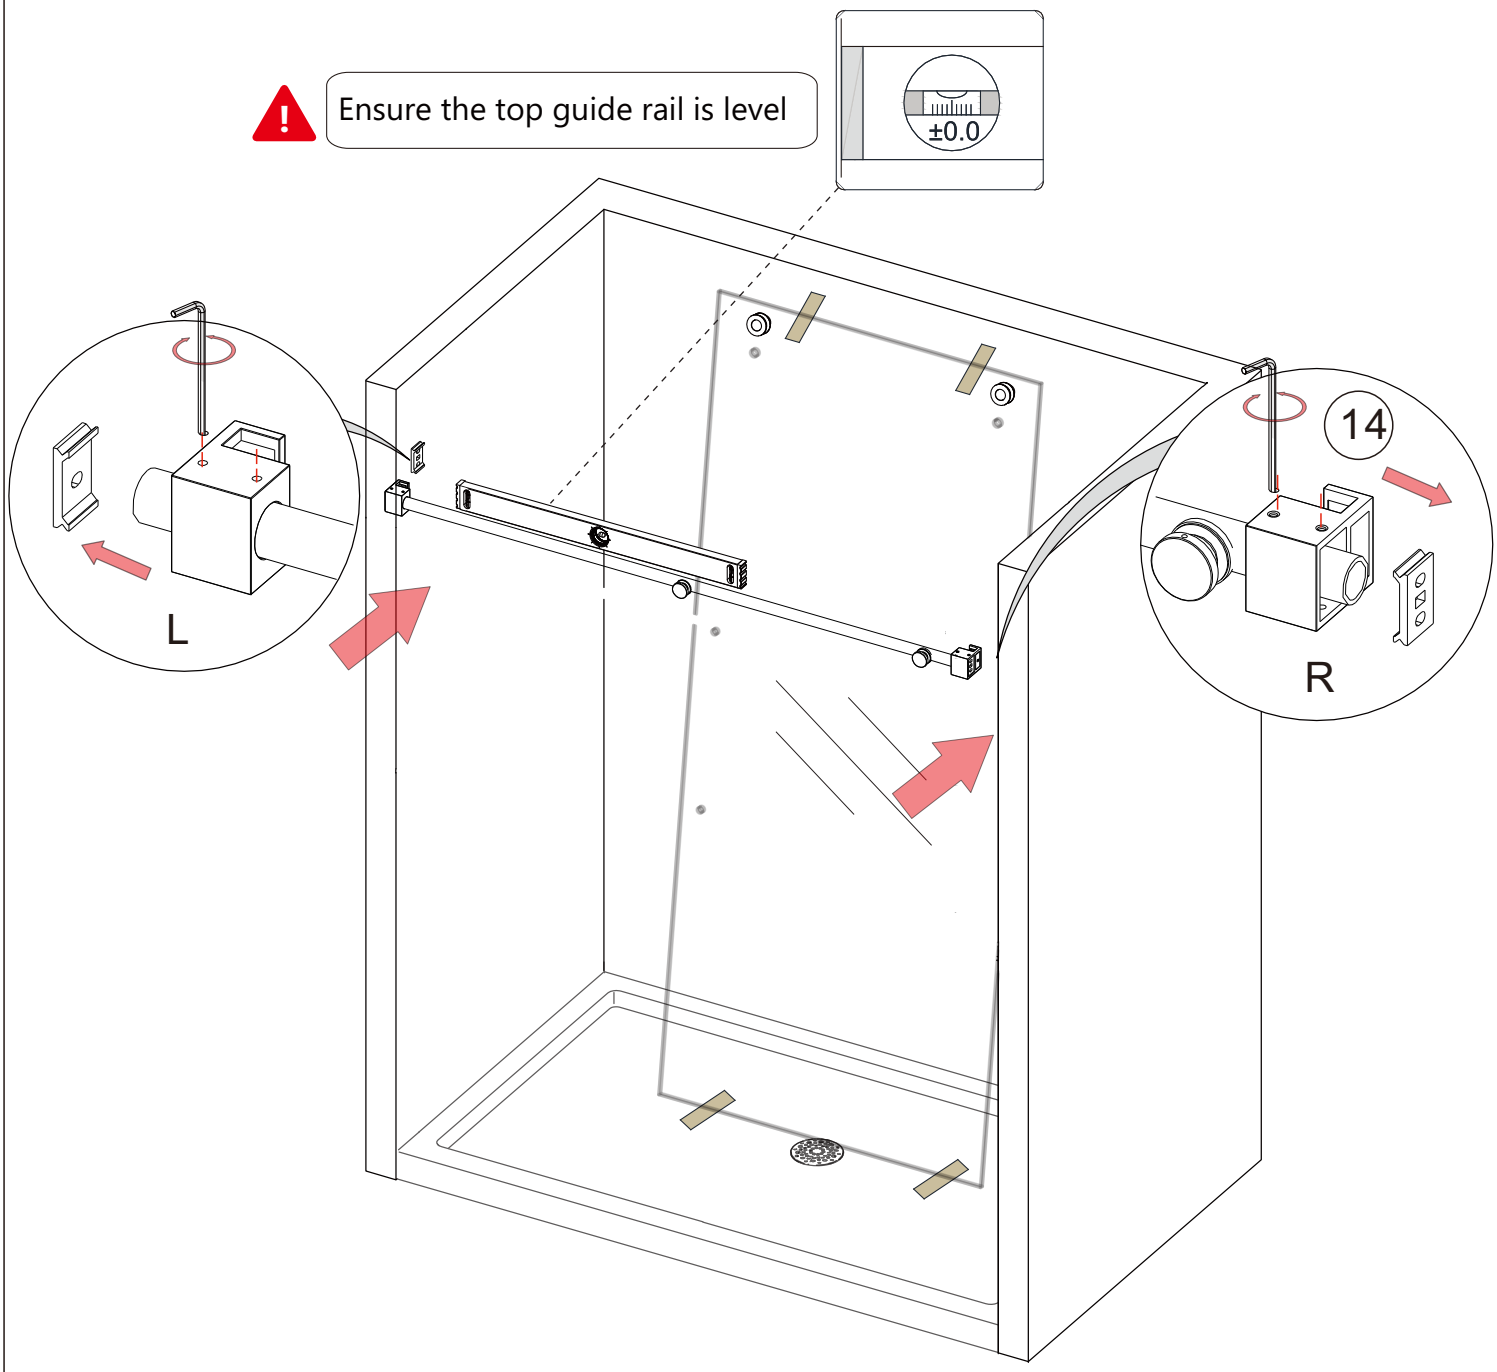


Parts Need

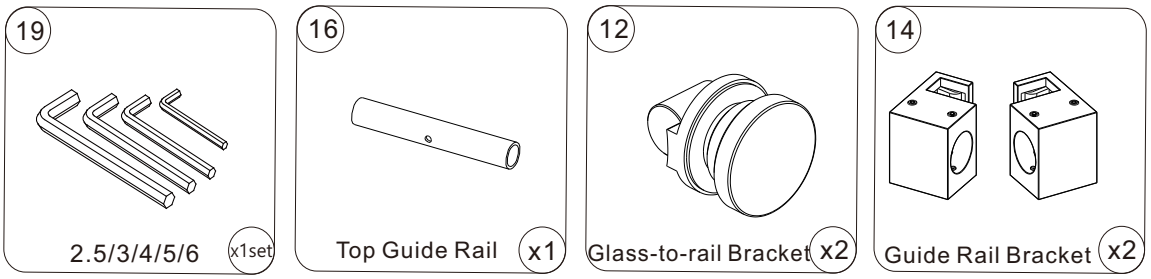


Inst.Steps
7/1

Fixed Glass of Installation

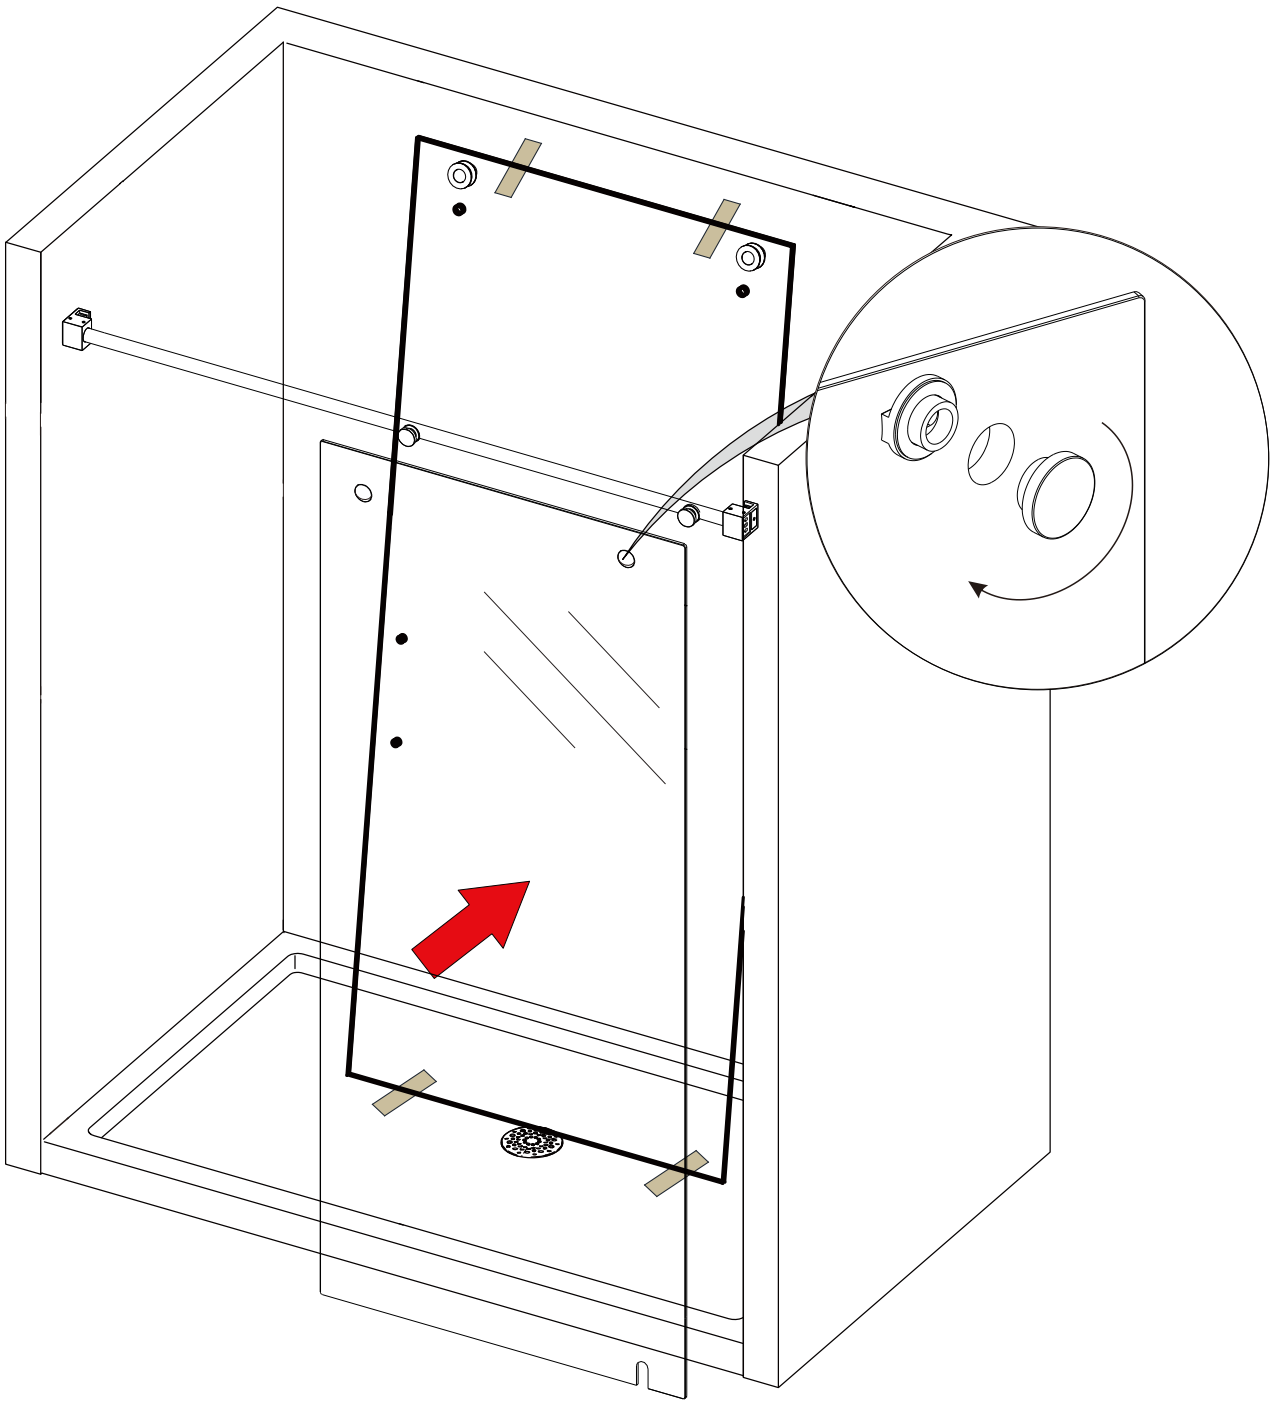


The **Fixed Glass (#10) must be installed to the outside** of the **Top Guide Rail (#16)**.

Parts Need

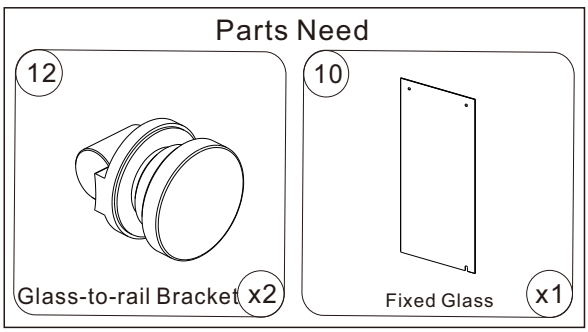

Inst.Steps
8/1

Bottom Threshold Strip & Bottom Guide of Installation

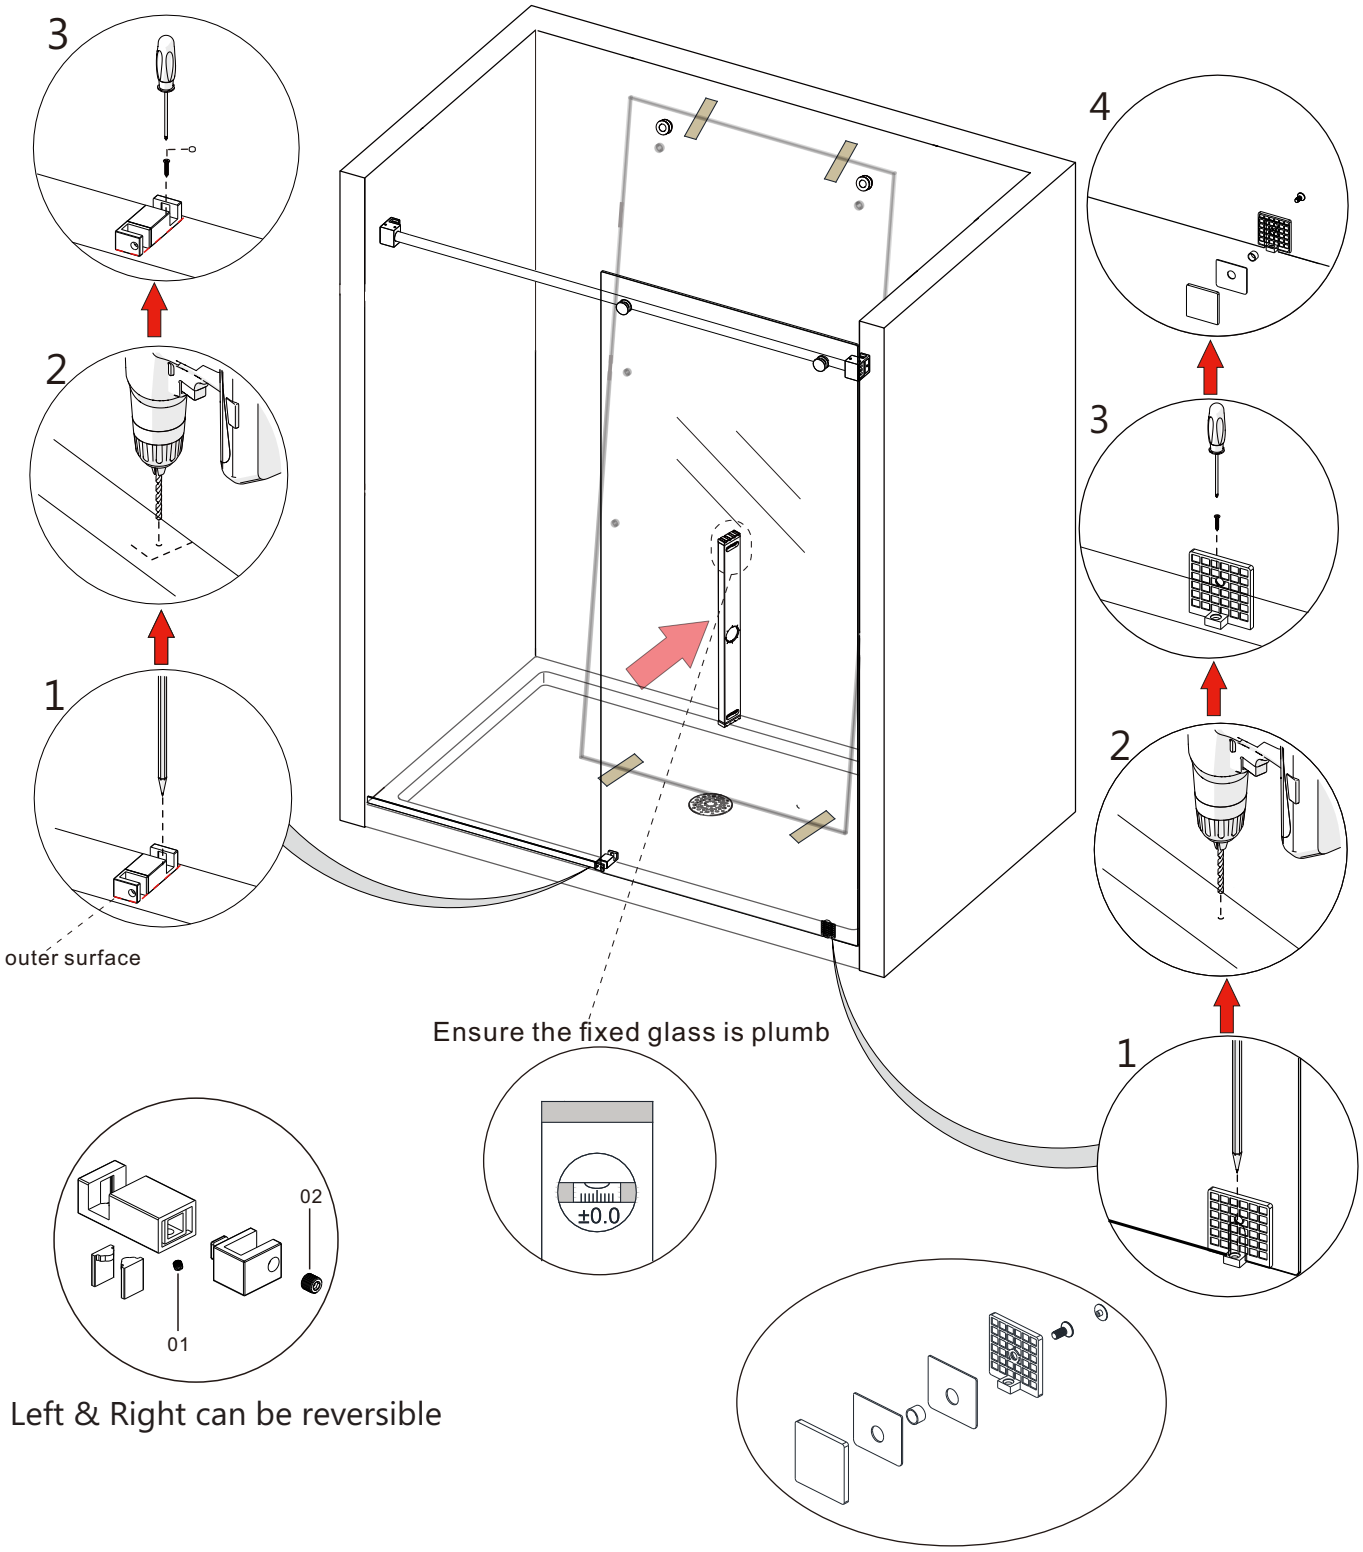

Drill & Screw Recommendations by Installation Case

- For installation into an **Acrylic Threshold**:
  drill a **Ø1/8"(3mm)** hole and use the **St4 x 30mm Countersunk Screw (#07).**


OR


- For installation into a **Tile Threshold**:
  drill a **Ø3/16"(4mm)** hole up to the stud and use the **St4 x 30mm Countersunk Screw (#07).**


Parts Need		Tools Need
11 Bottom Clamp x1	08 Guide Block x1	



Inst.Steps
9/1

Bottom Threshold Strip installation

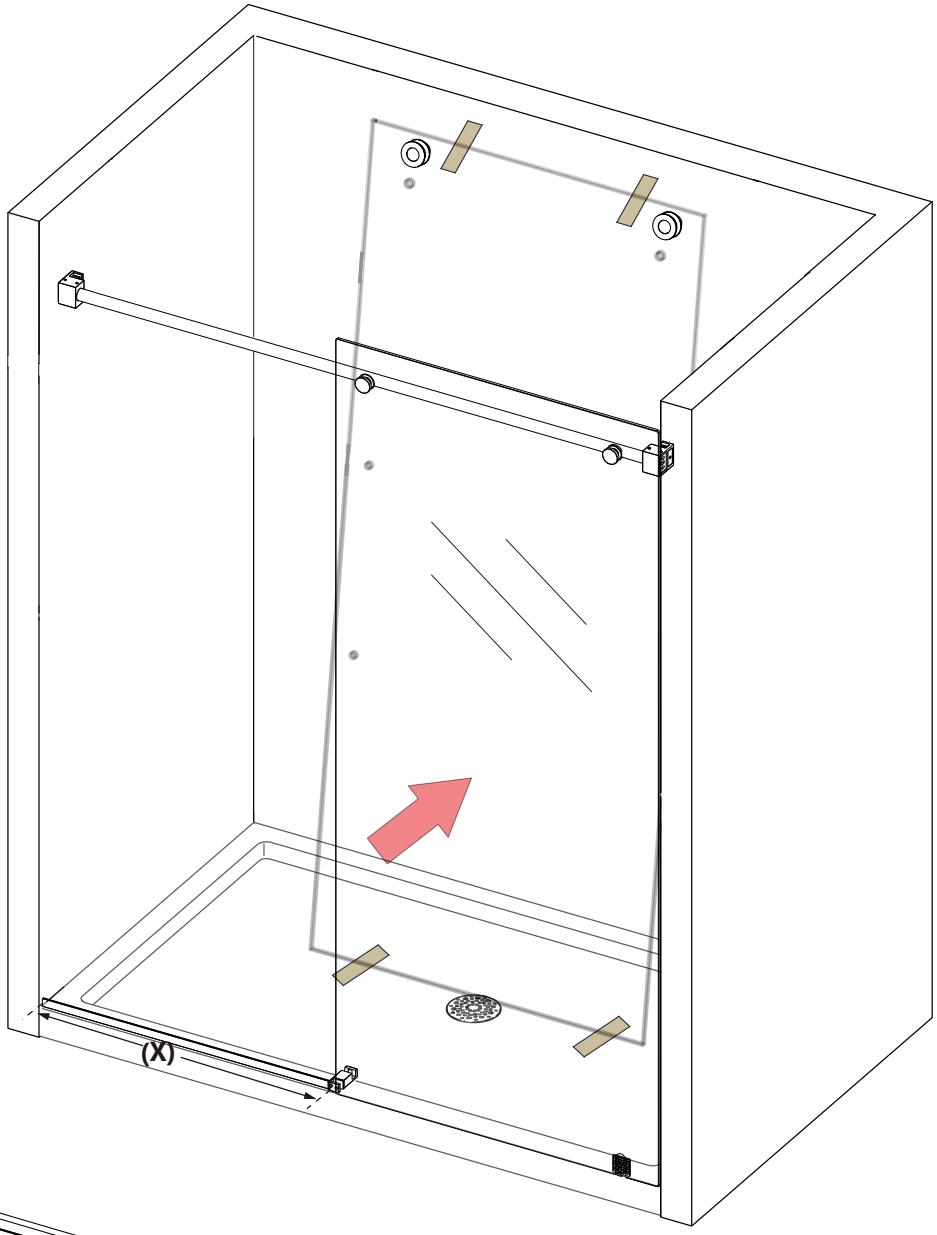

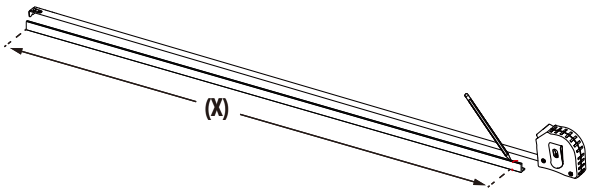

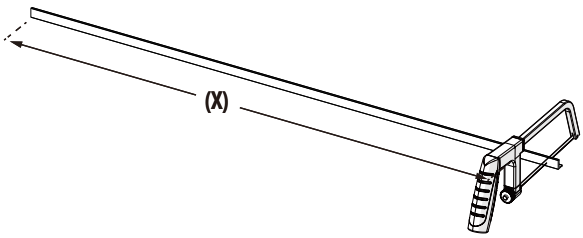


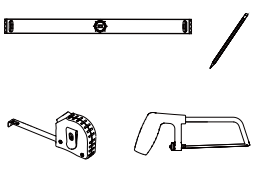Parts Need	Tools Need
06  Bottom Threshold x1	

Inst.Steps
10/1

Sliding Glass Installation, Roller Assembly & Adjustment


Mount roller-fitted sliding glass on top rail; keep grooves snug against rail.

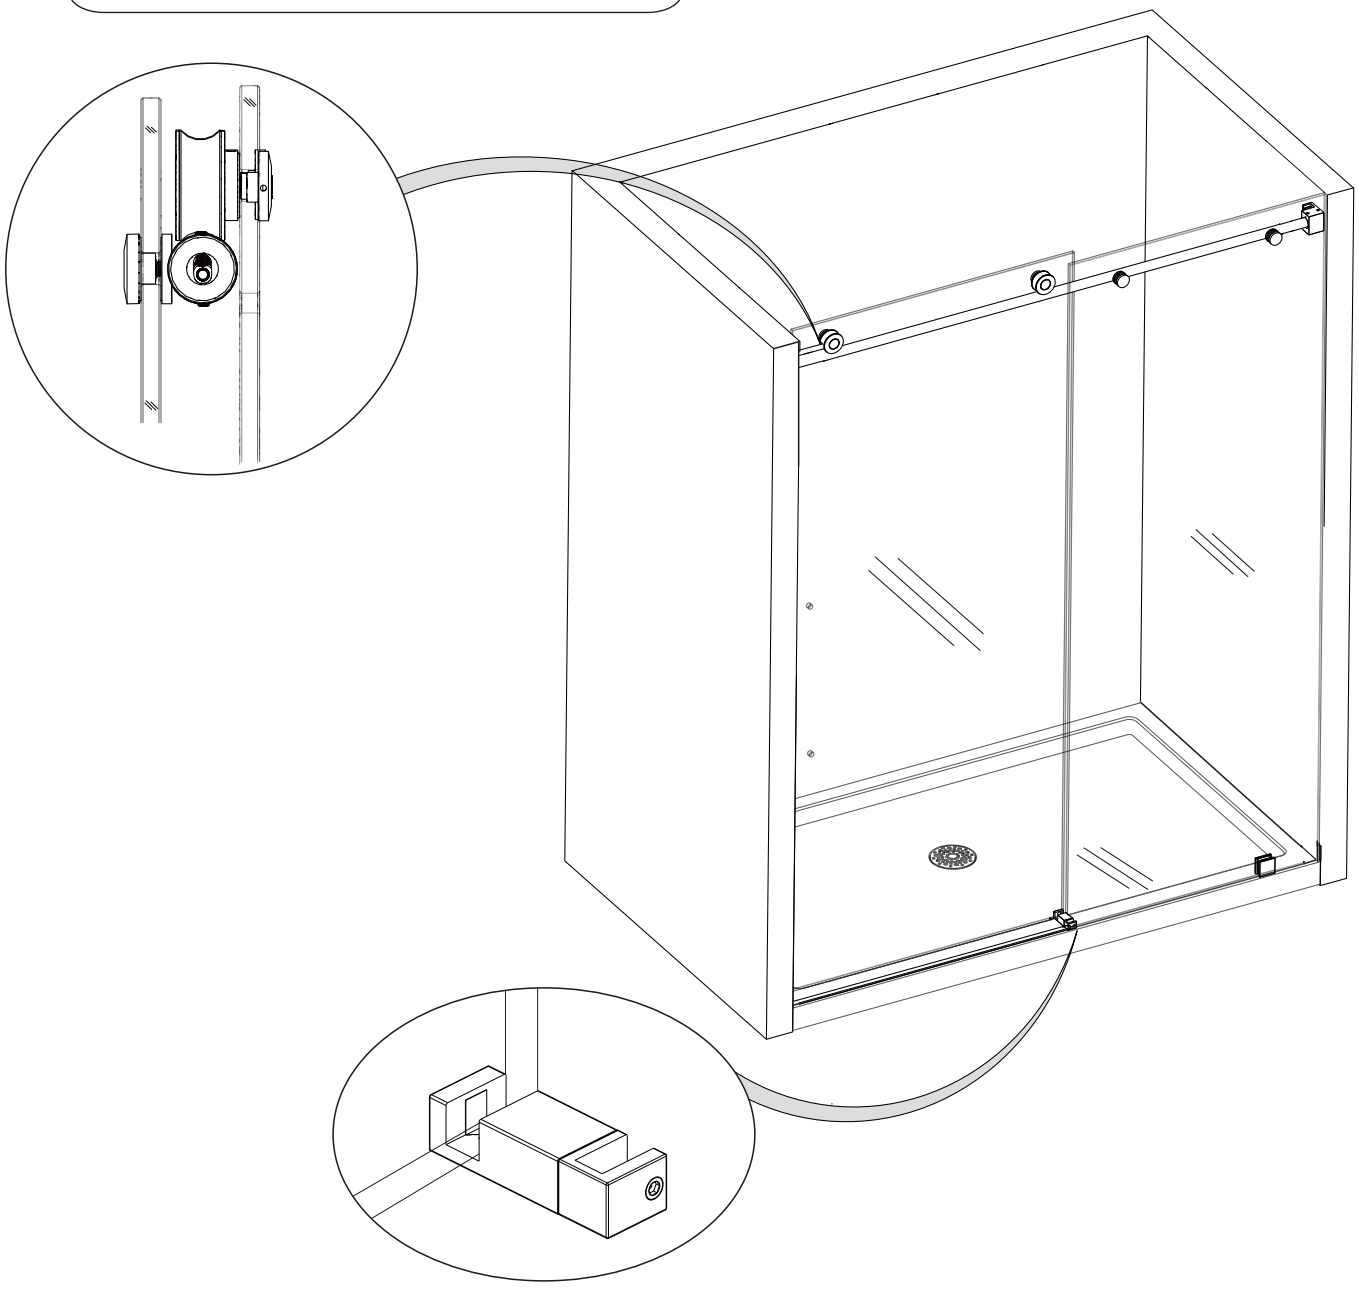


Rest the bottom of the sliding glass in the sliding groove of the floor guide block.


Inst.Steps
10/2

Sliding Glass Installation, Roller Assembly & Adjustment

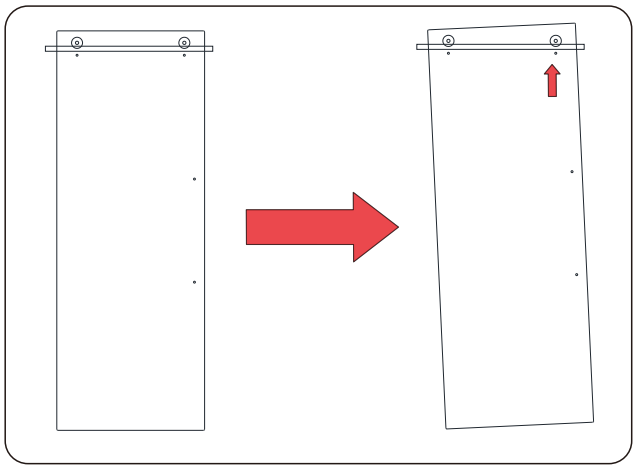

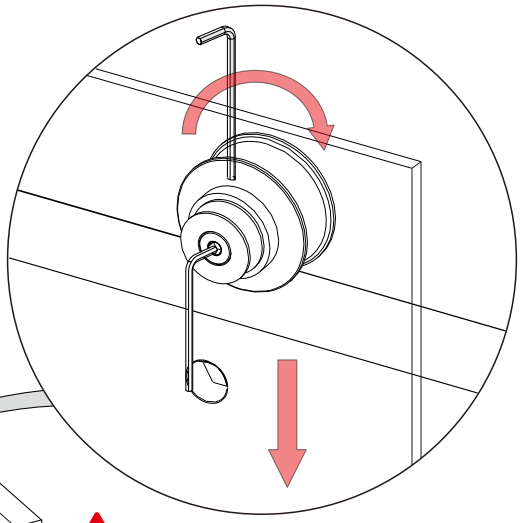


Back out screws partially

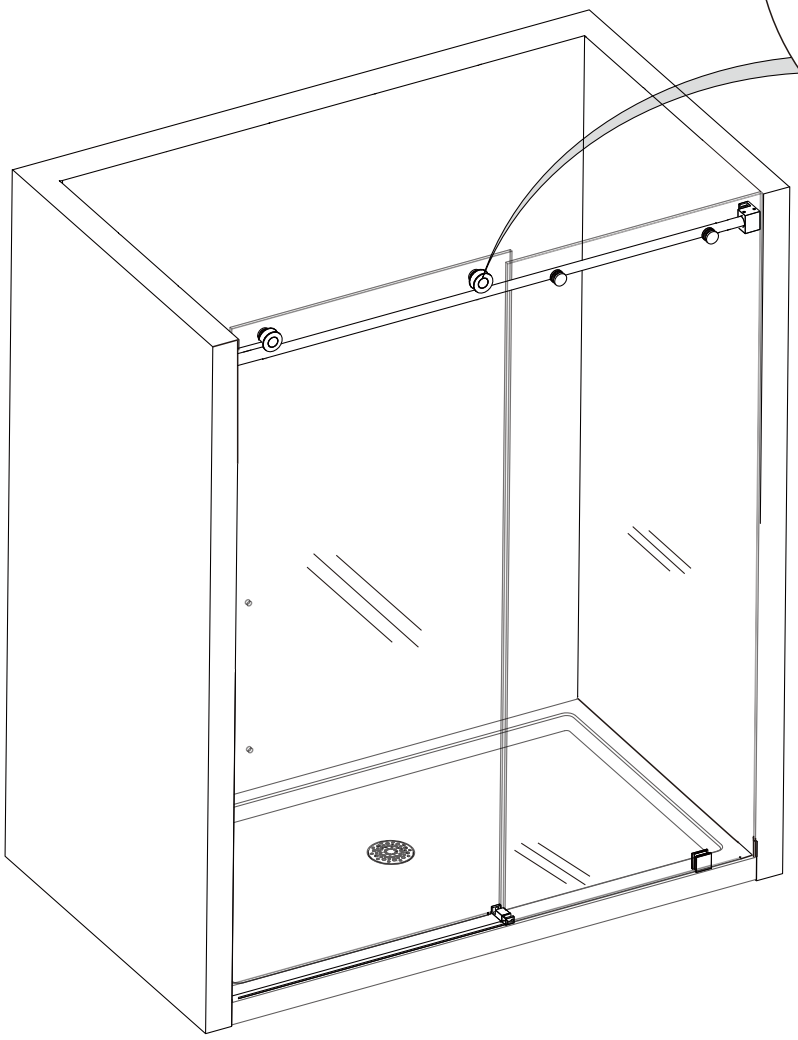


Adjust the right eccentric rollers to conform the sliding glass to snug right wall contact.


Inst.Steps
10/3

Sliding Glass Installation, Roller Assembly & Adjustment

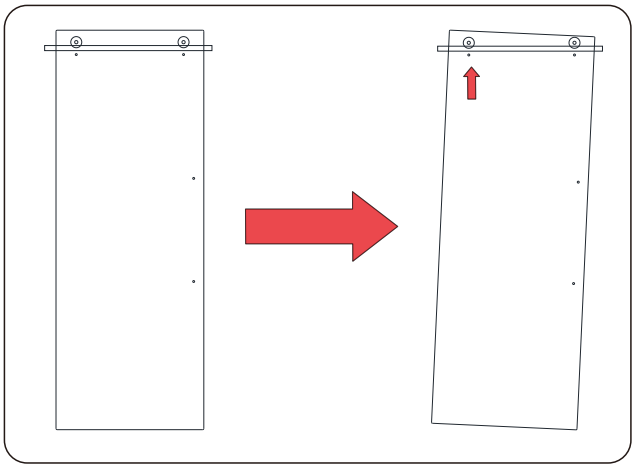

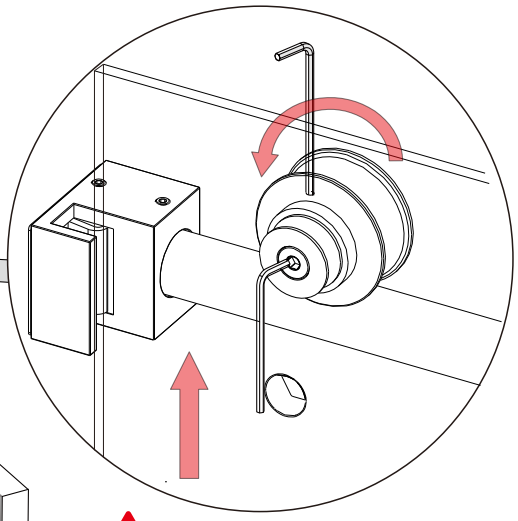


Back out screws partially

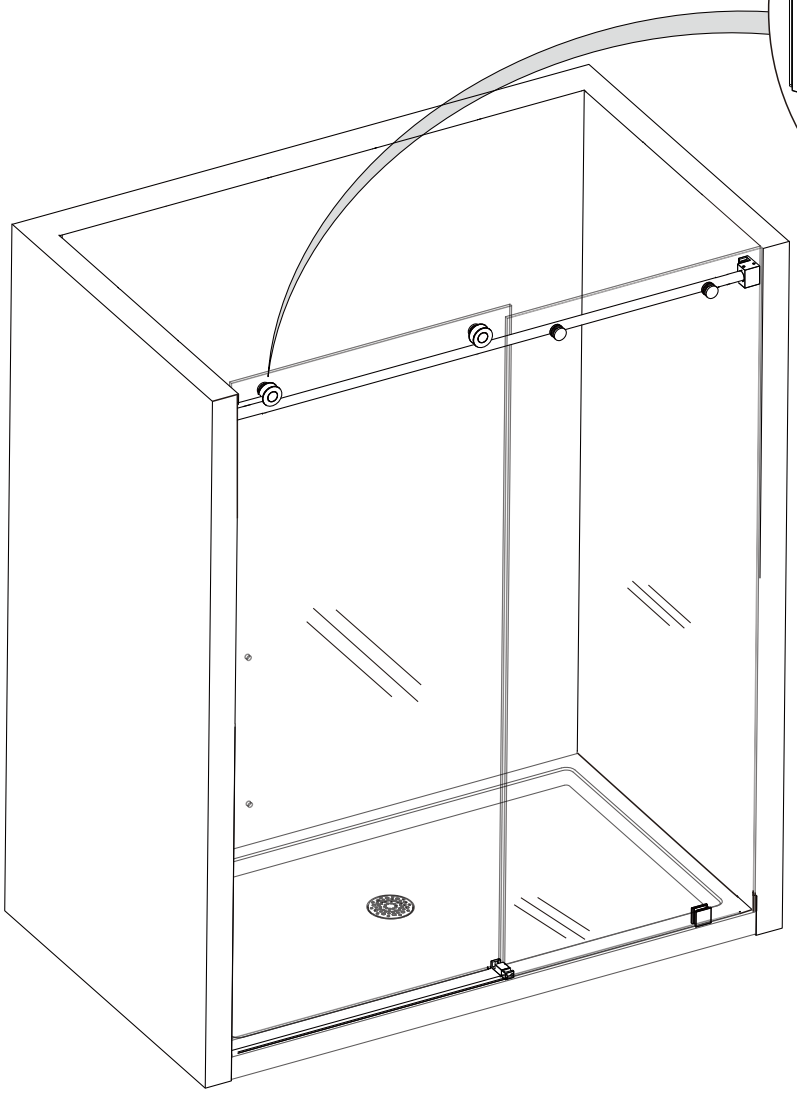


Adjust the left eccentric rollers to conform the sliding glass to snug left wall contact.


Inst.Steps
11/1

Anti-Jump Pin Installation

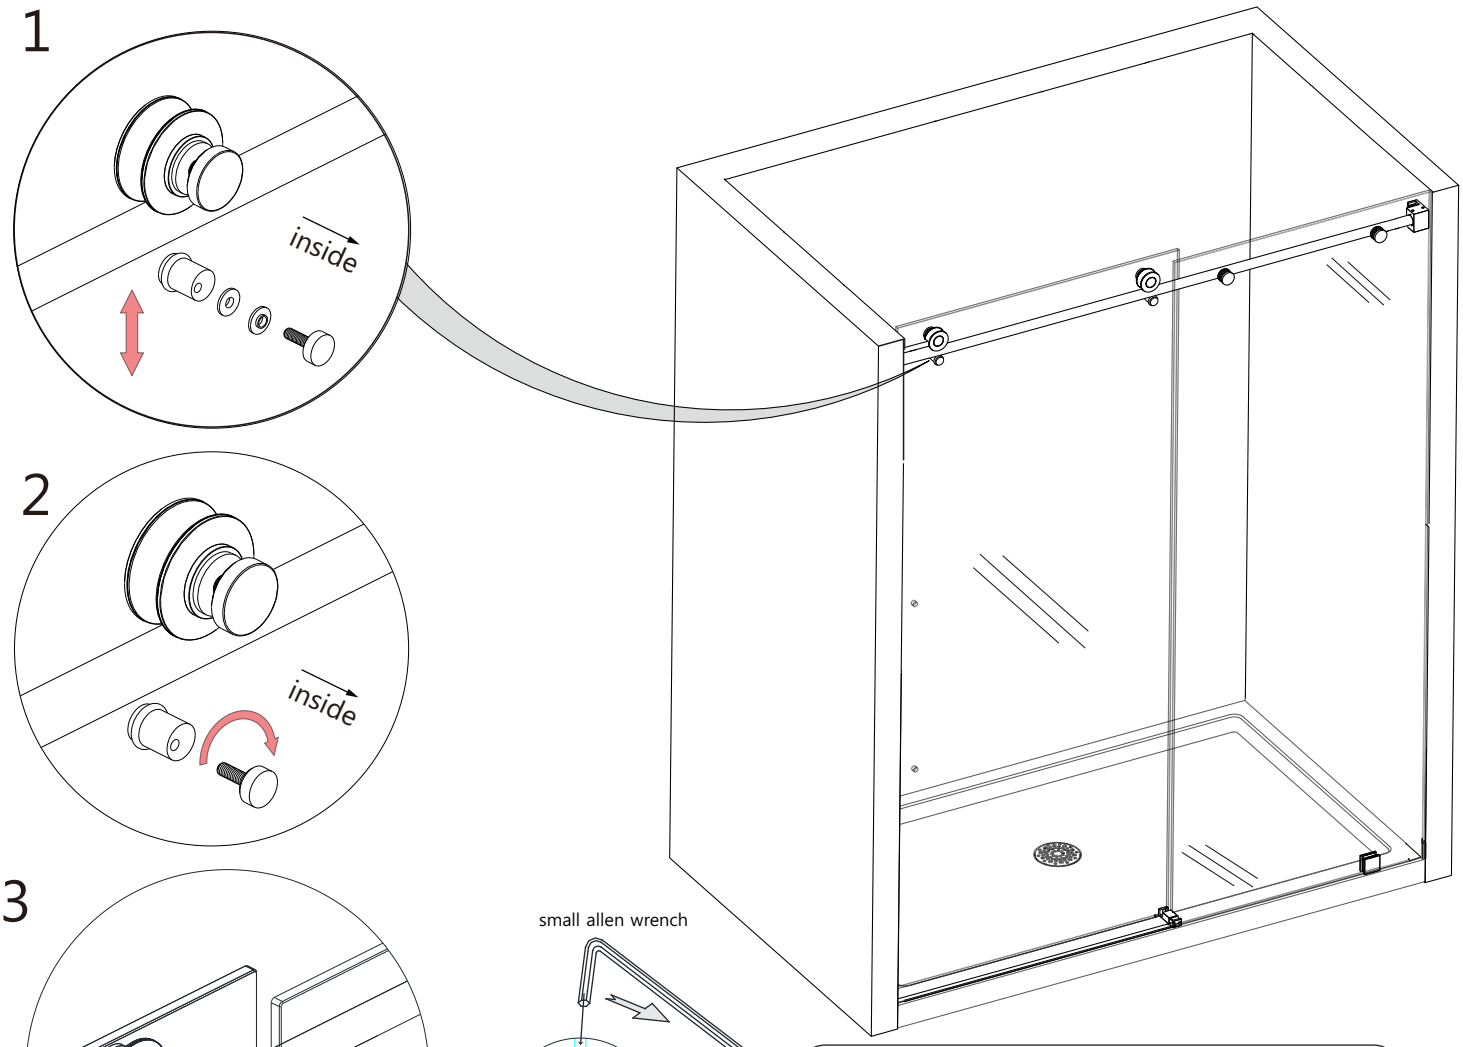

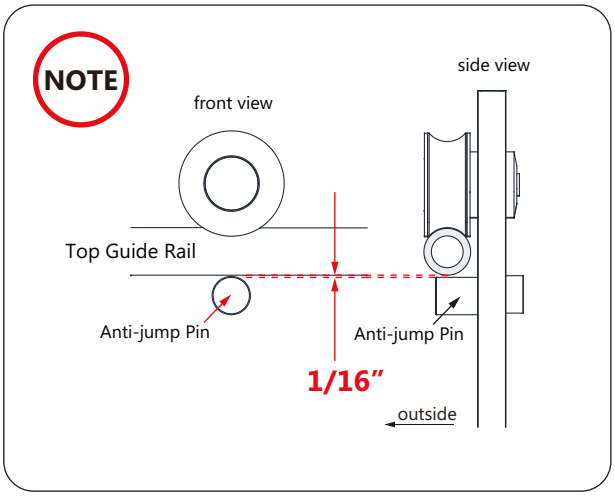


Position the **Anti-jump Pin (#02)** 1/16" below the rail. Hold the roller guard bolt with the **Allen Wrench (#19)** and tighten the interior post using a small allen wrench.

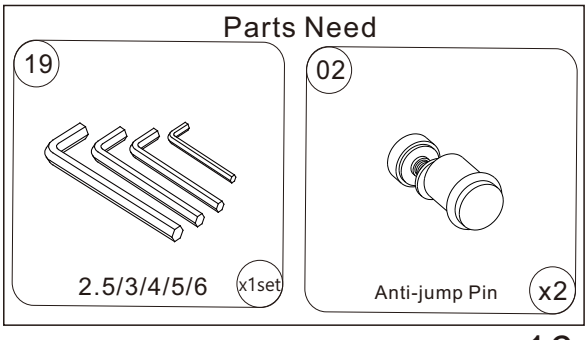

Inst.Steps
12/1


Vinyl Seals & Handle Installation

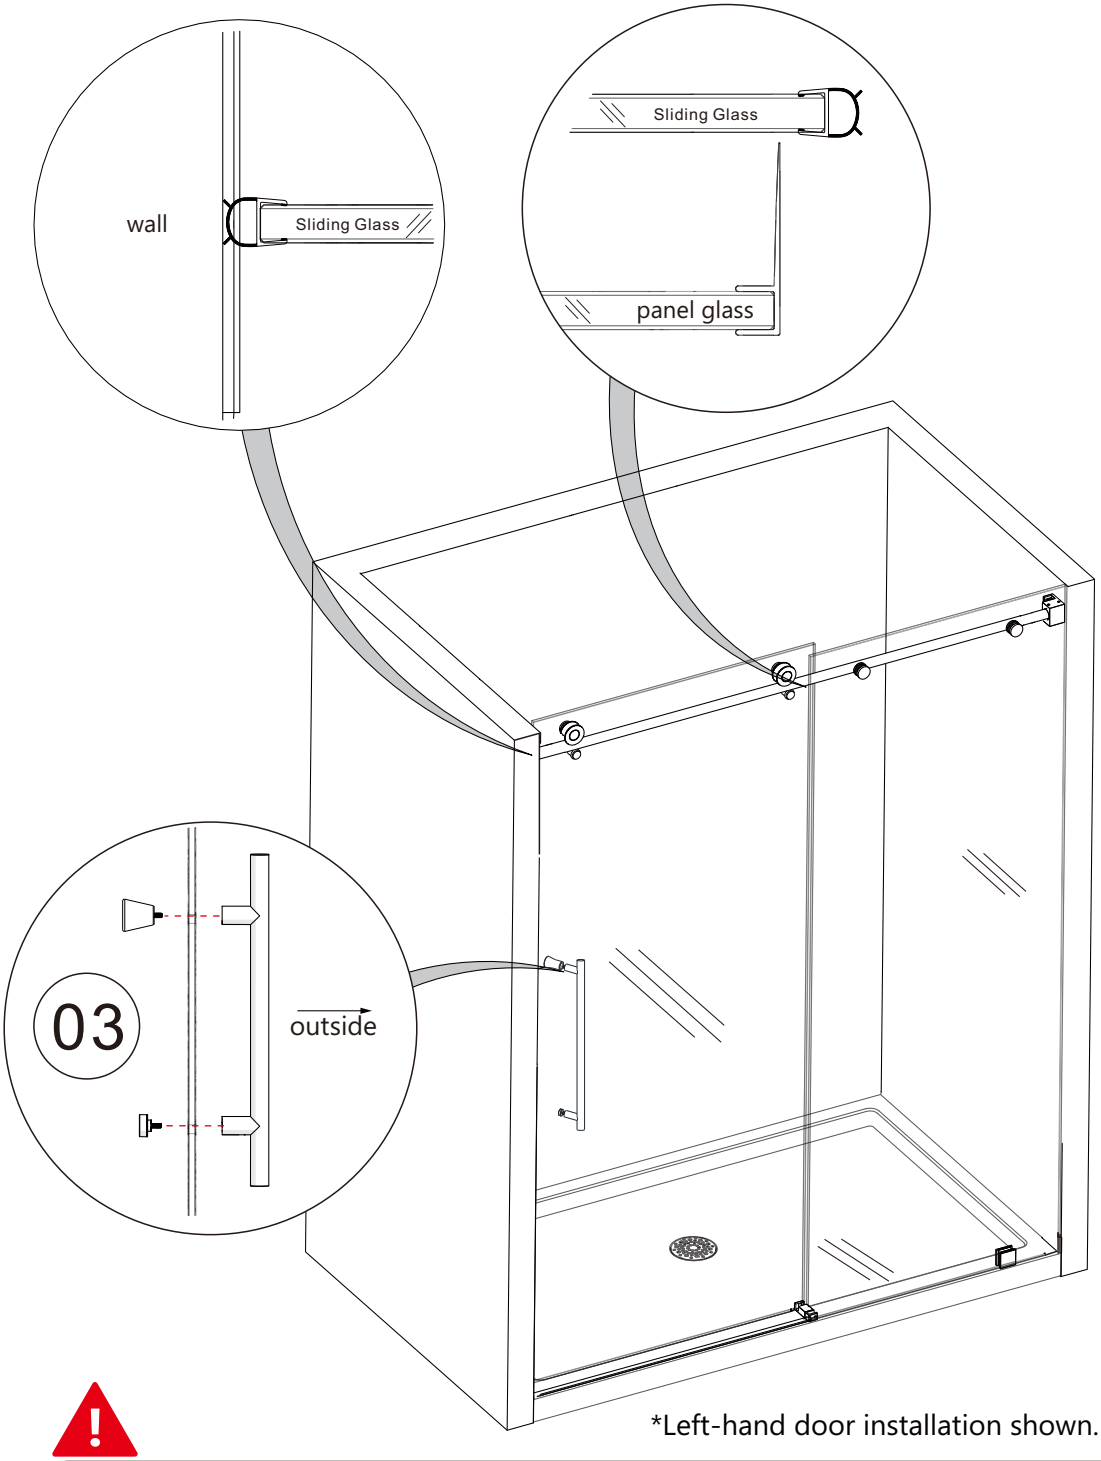



*Left-hand door installation shown.

Use a razor knife to trim the **Vertical Vinyl Seal (#17)** at the top to avoid interfering with the **Lower roller (#01)** and at the bottom where the door meets the **top guide rail (#16)**.


Parts Need

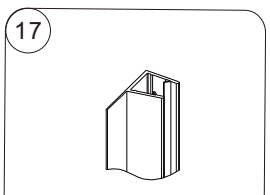

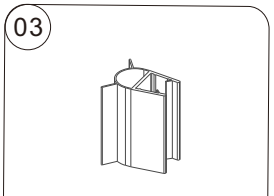

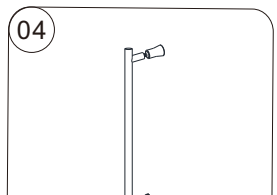


Tools Need

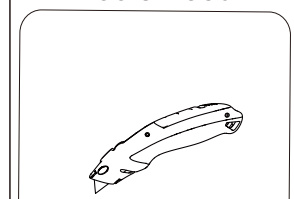

Inst.Steps
13/1

Silicone Application & Curing


The surfaces need to be clean and free of debris before applying silicone.

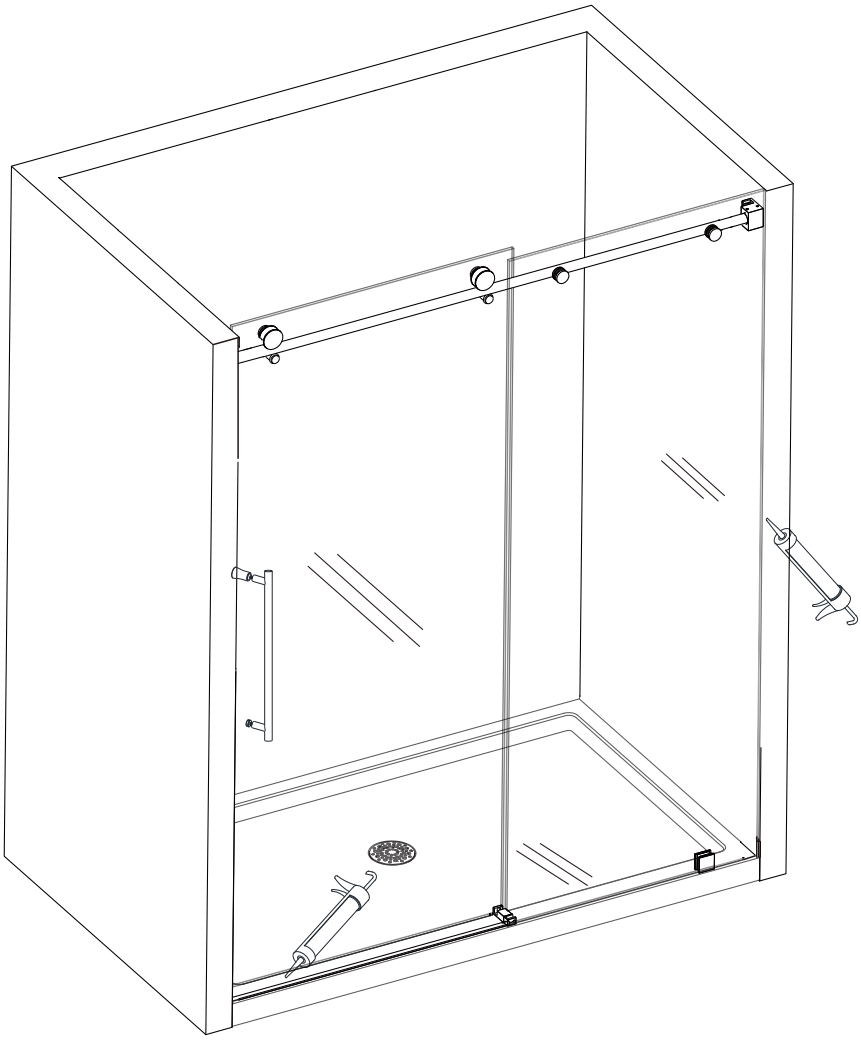



Allow 24 hours for the silicone to cure before using the shower.

DO NOT hang or drape a towel or wash cloth over the Top Guide Rail as this may cause the Roller Assembly wheels to get stuck and possibly cause serious damage or injury.

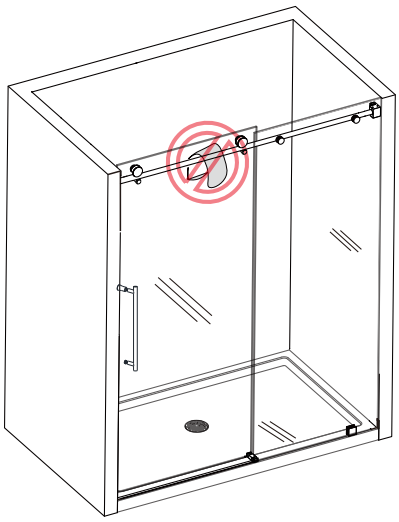

Troubleshooting

Problem/Symptom	Suggested Solution
Missing Parts	•Check all shipping/packaging material for missing parts/components. •Please contact us using the contact information at the bottom of this page.
Top Guide Rail was cut too short or was cut from wrong end during installation.	•The **Top Guide Rail (#16)** is pre-cut for the model size, and will be shorter than the model width to allow for the **Guide Rail Brackets (#14)**. •If the **Top Guide Rail (#16)** is cut too short or cut from the wrong end, contact Please contact us using the contact information at the bottom of this page.
Water Leakage	•Confirm the **Bottom Threshold (#06)**, **Bulb Vinyl Strip (#03)**, and the **Vertical Vinyl Strips (#17)** are installed correctly. •Confirm that the entire unit has been properly sealed with silicone caulk; allow at least 24 hours to allow the silicone to cure and set before using the shower unit. •Direct the shower head/water flow away from the area.
The door rolls open or closed	•Check the **Top Guide Rail (#16)** for level. Adjust the **Guide Rail Brackets (#14)** •Adjust the **Roller Wheel Assemblies (#01)** on the door, if needed, to allow the door to seal evenly against the wall. •To influence the **Top Guide Rail (#16)** slightly, the innermost **Glass-to-Rail Brackets (#12)** can be adjusted. •Confirm the **Guide Block (#08)** is square to the **Fixed Glass (#10)** and threshold.
The door does not track smoothly	•Confirm the **Sliding Glass (#05)** is not making contact with the bottom of the **Guide Block (#08)**. •If the **Sliding Glass (#05)** needs to be raised, adjust the **Roller Wheel Assemblies (#01)** to raise it. •Be sure that there is nothing on the **Top Guide Rail (#16)** that could block the **Roller Wheel Assemblies (#01)**. •Check the **Bottom Roller Assemblies (#01)** are 1/16" beneath the **Top Guide Rail (#16)** and are not making any contact with the **Top Guide Rail (#16)**.
Mishandled glass	• Always take precautions when handling tempered glass. • A glass suction cup and an assistant are helpful when carrying large, heavy lites of glass. •Never allow tempered glass (especially the edges) to come in contact with any hard surface, which can cause chipping, splintering or complete glass failure. •Any damaged glass should be immediately replaced. •Do not use a shower with damaged glass. •Leave plastic corner protectors on the glass until ready to install. •Always protect the glass once removed from the box by padding the top and bottom of the glass with cardboard, styrofoam or other soft material until ready to install.

Do not return product to store. Contact us with any questions.
Add: 830 N. Central Avenue, Upland CA, 91786
Web: www. ibathwiller. com
Email: supports@ibathwiller.com
TEL: 909-282-5408