



SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

WHEN FITTING CAMLOCK
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING QUICKFIT
TURN CLOCKWISE UNTIL SECURE

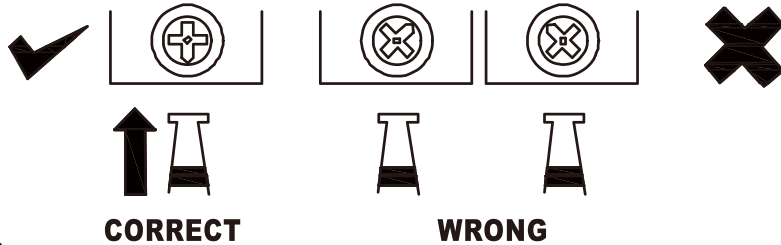


CAM-LOCK

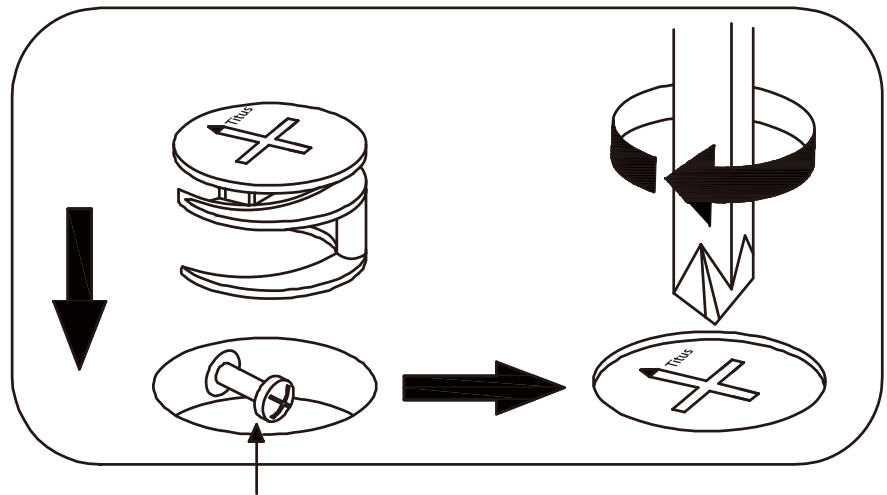

Quickfit head needs to be in centre

QUICKFIT



Tighten until shoulder is flush with panel. DO not overtighten or undertighten (see example below)

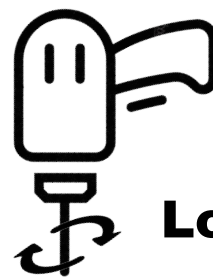




Low-Speed Gear !!!



Shoulder

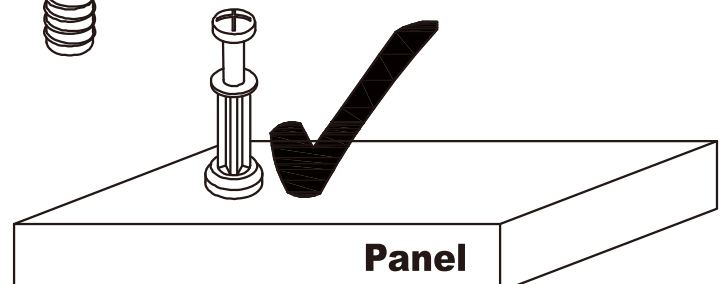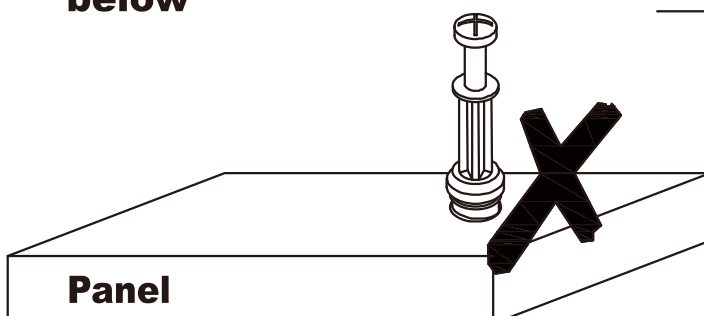


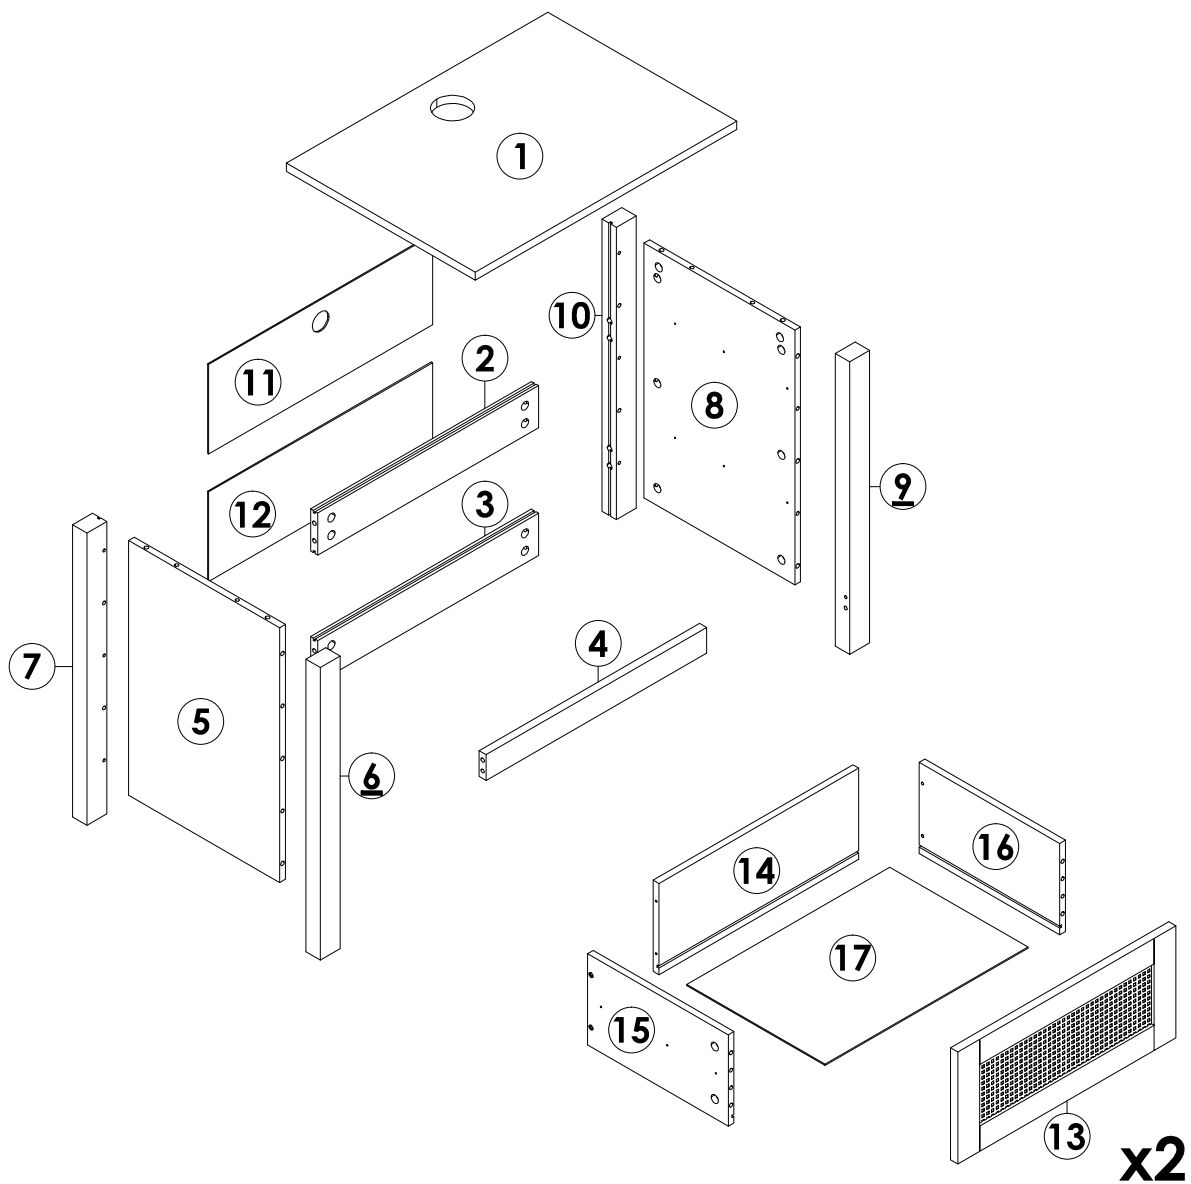


													
6x35mm		15x9mm		4x40mm		6x30mm		3.5x12mm		64mm			
A	34PCS	B	34PCS	C	8PCS	D	22PCS	E	4PCS	F	2PCS	G	1PC
													
290mm		290mm		3x12mm				3x14mm					
H	4PCS	I	4PCS	J	24PCS	K	4PCS	L	8PCS	M	8PCS		

STEP 1


1. Unfold the small part "I" of the large part "H", all the way to the end and in the direction shown.

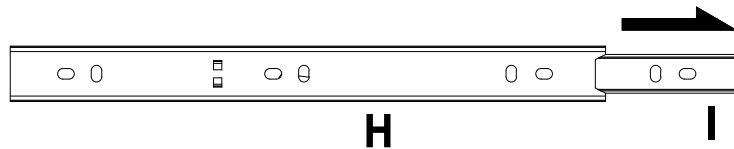



2. Press the lever of part "I", in the direction indicated, at the same time as you separate part "H" from part "I".

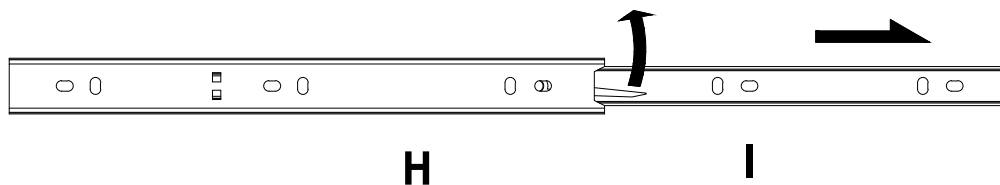

3. You should get two Sliders as shown below.

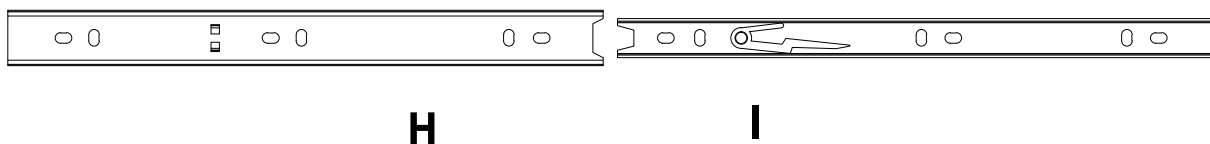


STEP 2

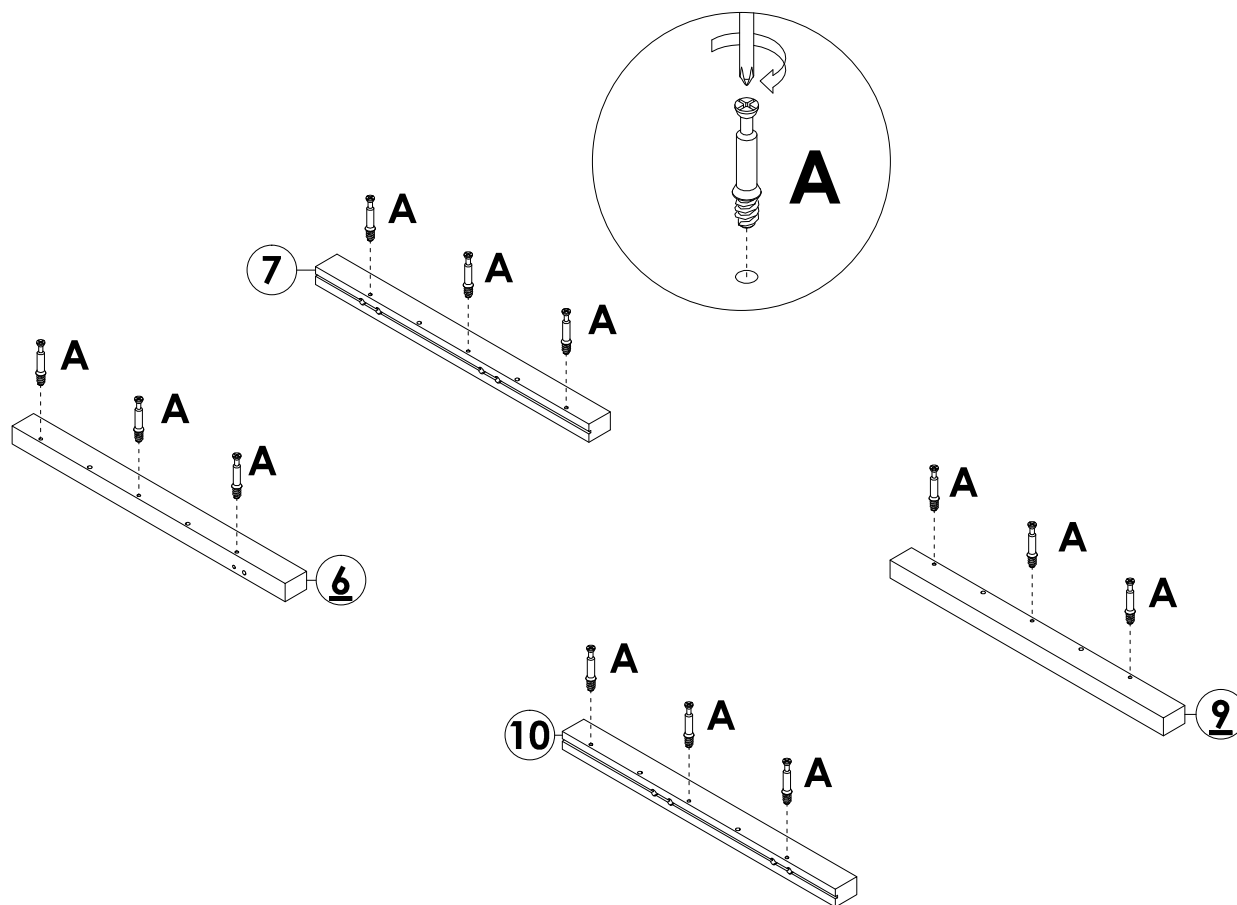


A x 12PCS

STEP 3

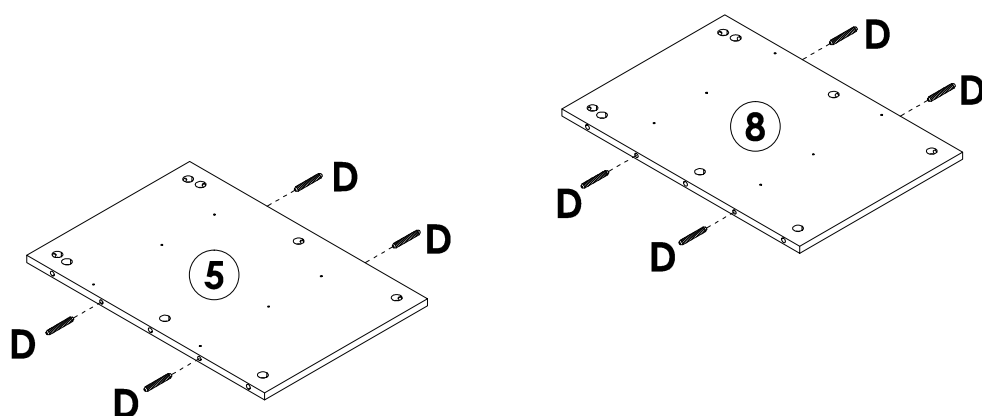


D x 8PCS

STEP 4

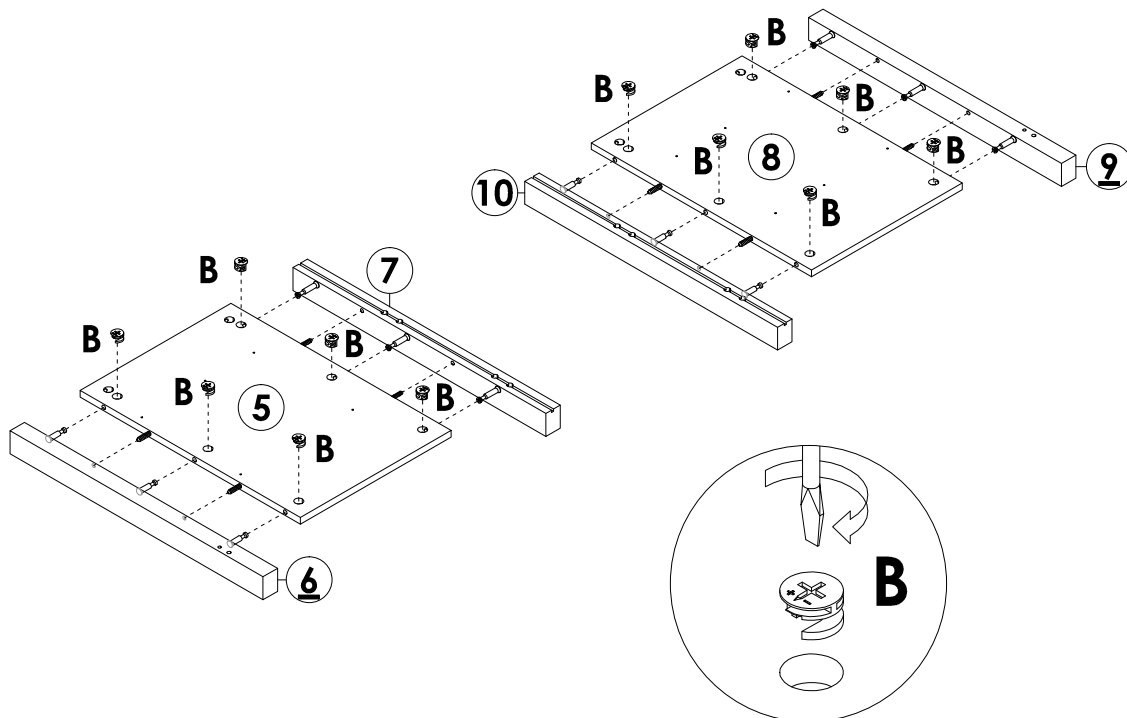

B x 12PCS

STEP 5


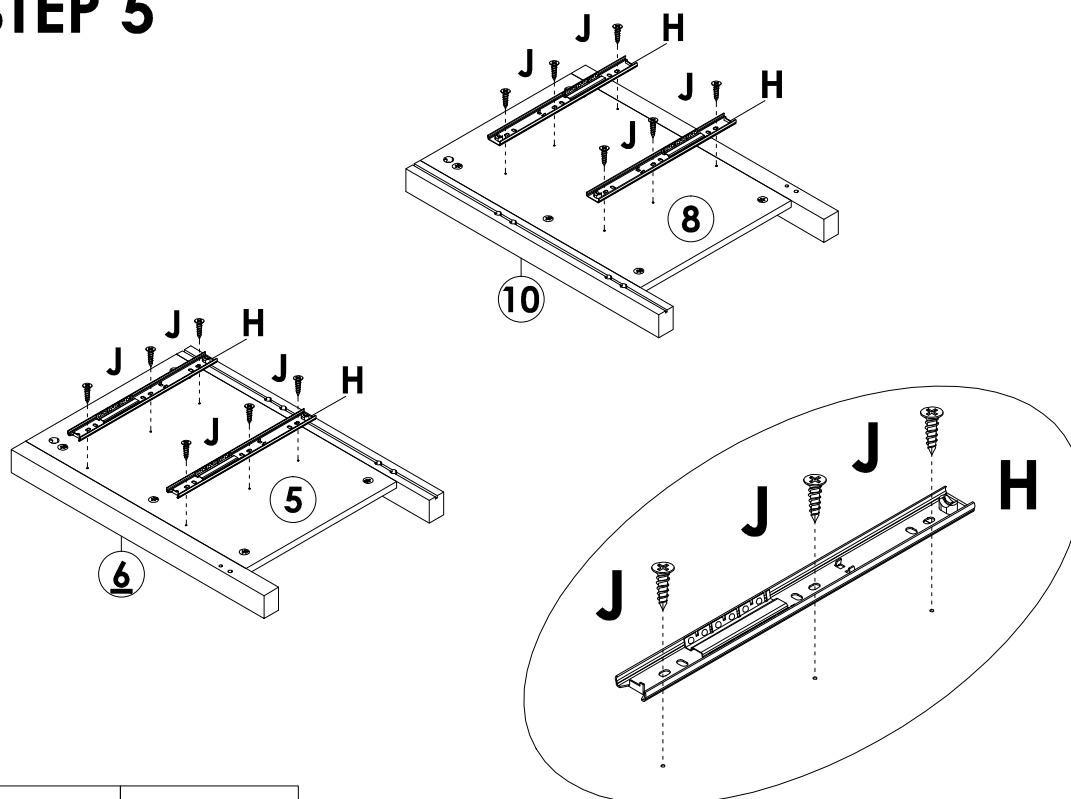


H x 4PCS




J x 12PCS

STEP 6

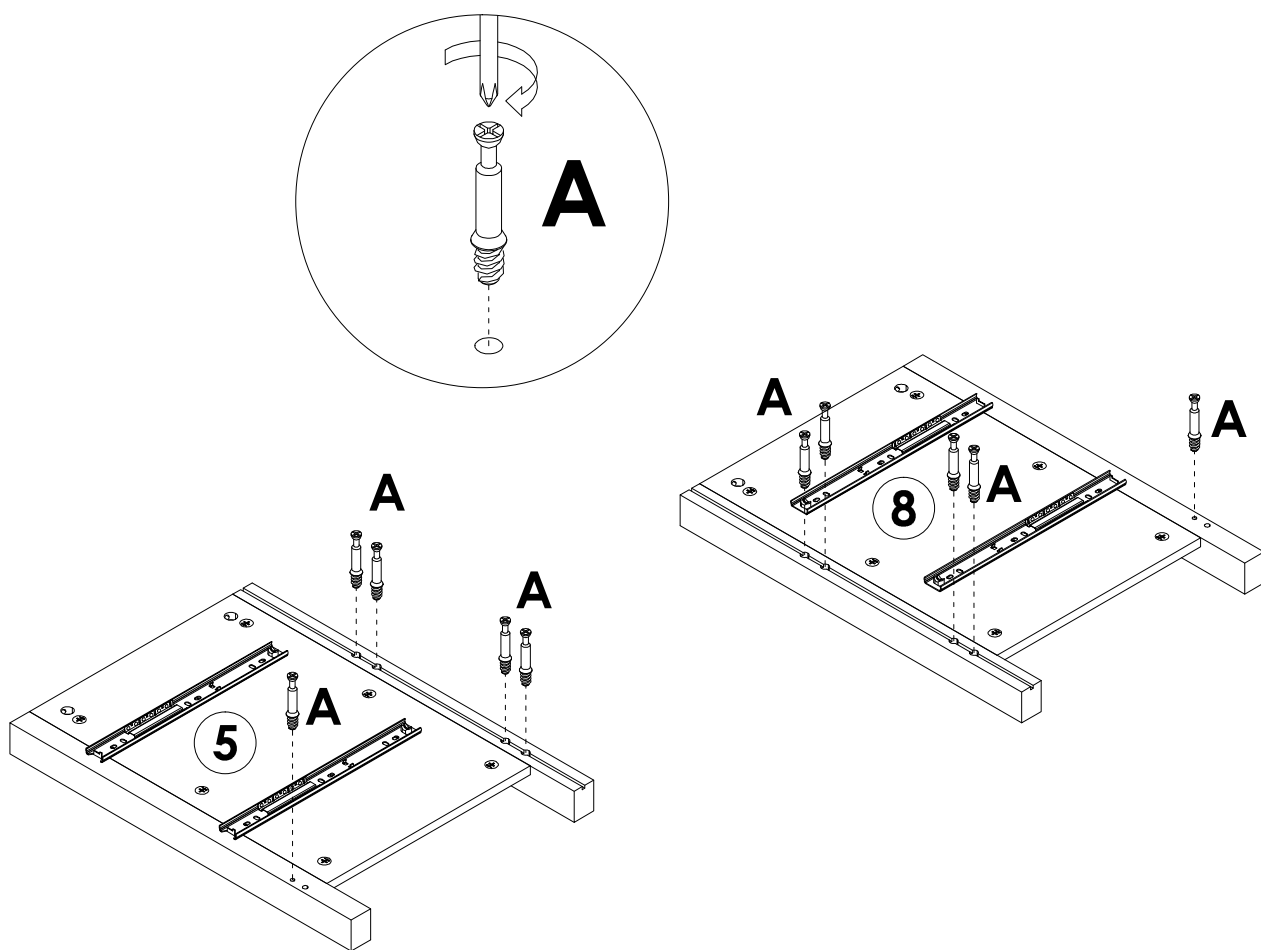



A x 10PCS

STEP 7

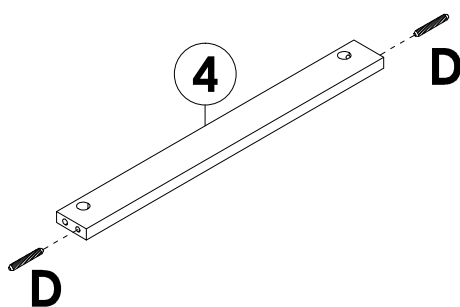


D x 2PCS

STEP 8

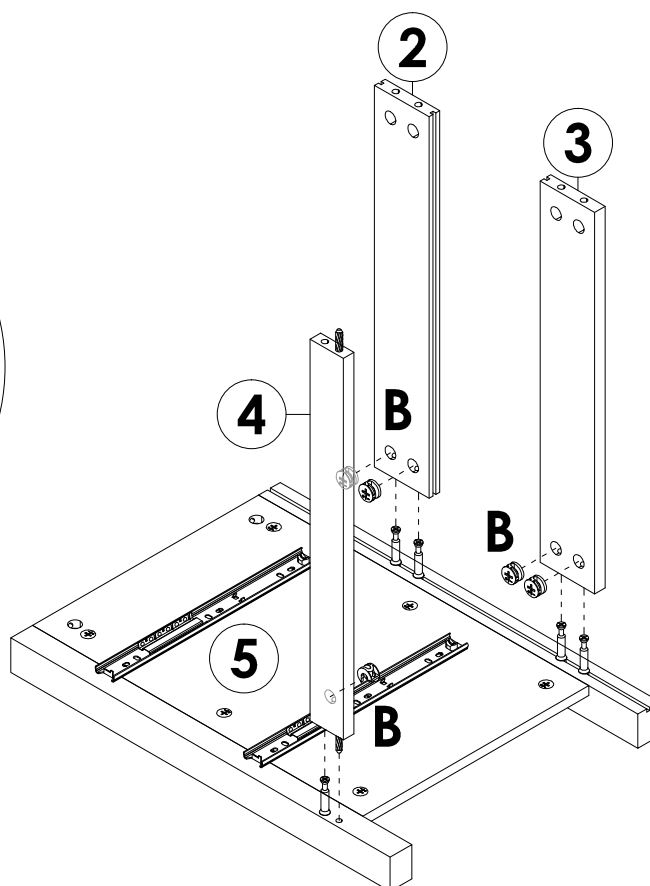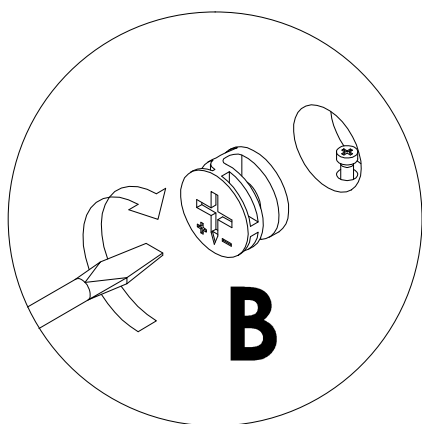


B x 5PCS

STEP 9

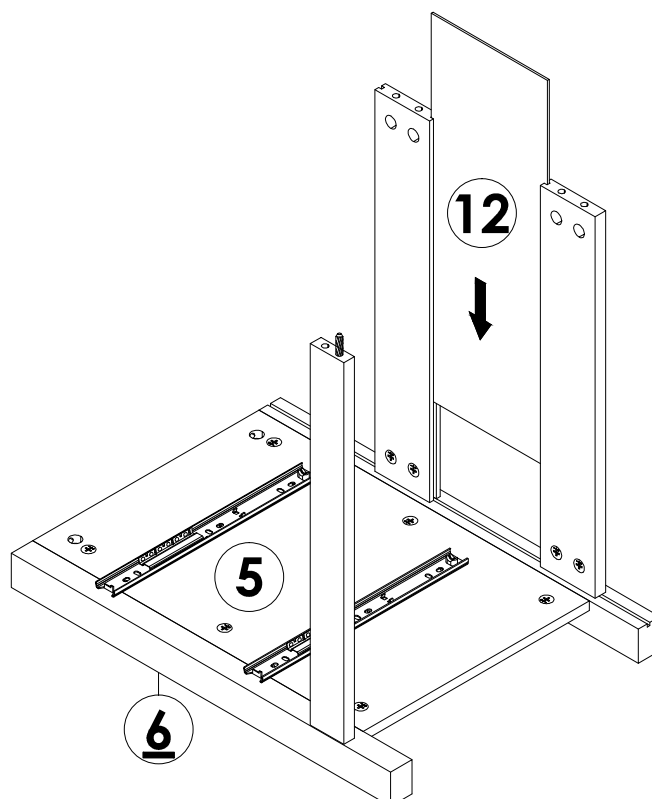


STEP 10

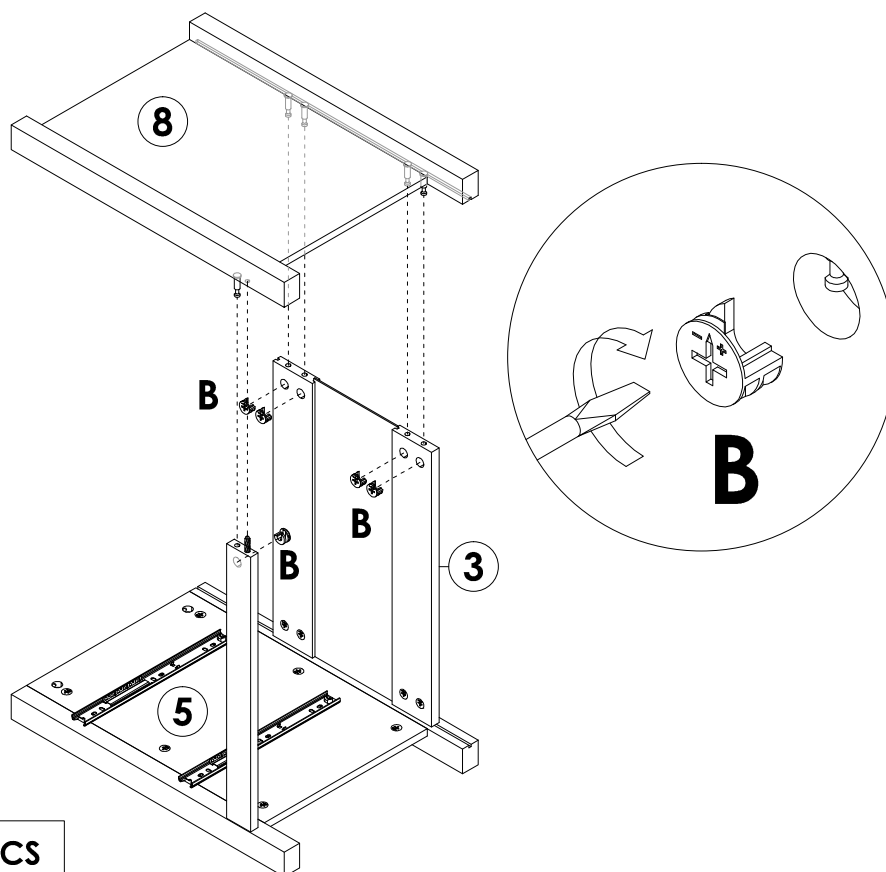


B x 5PCS

STEP 11

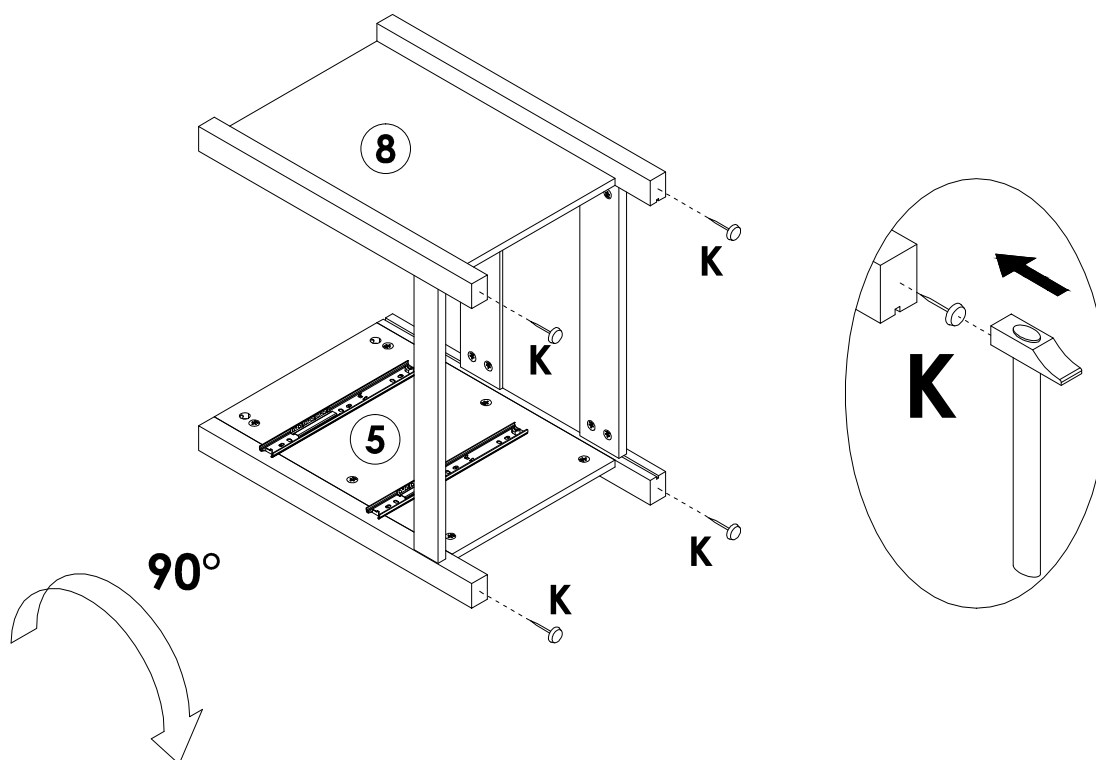



K x 4PCS

STEP 12

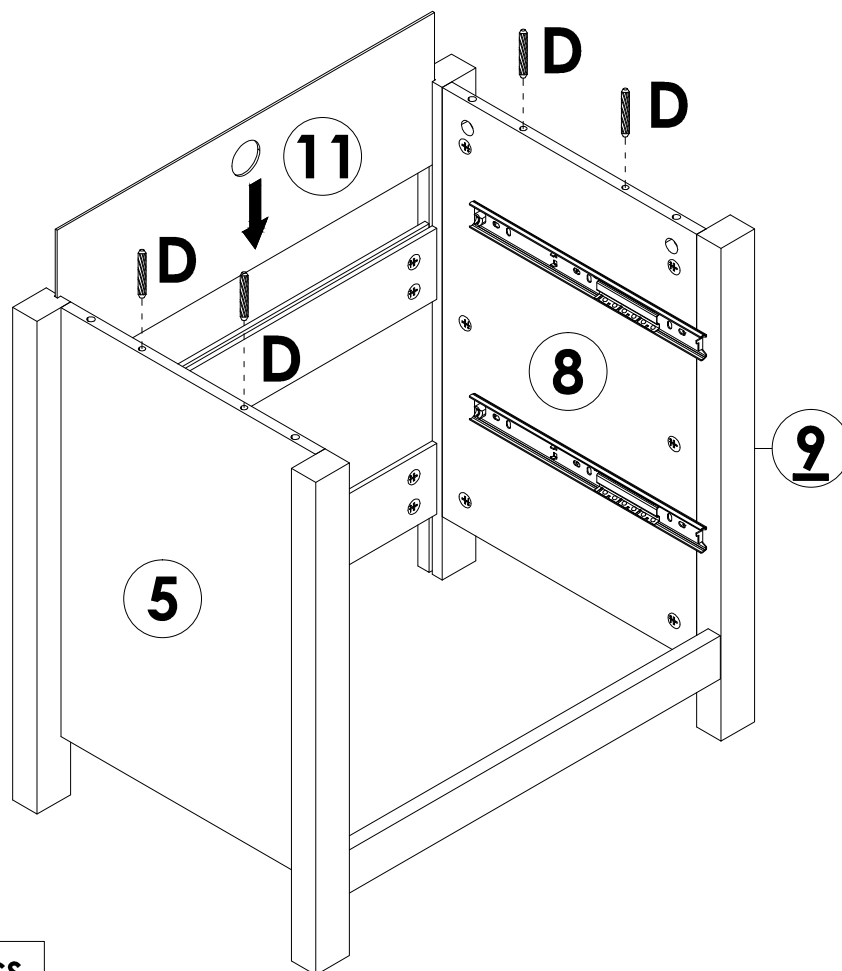



D x 4PCS

STEP 13

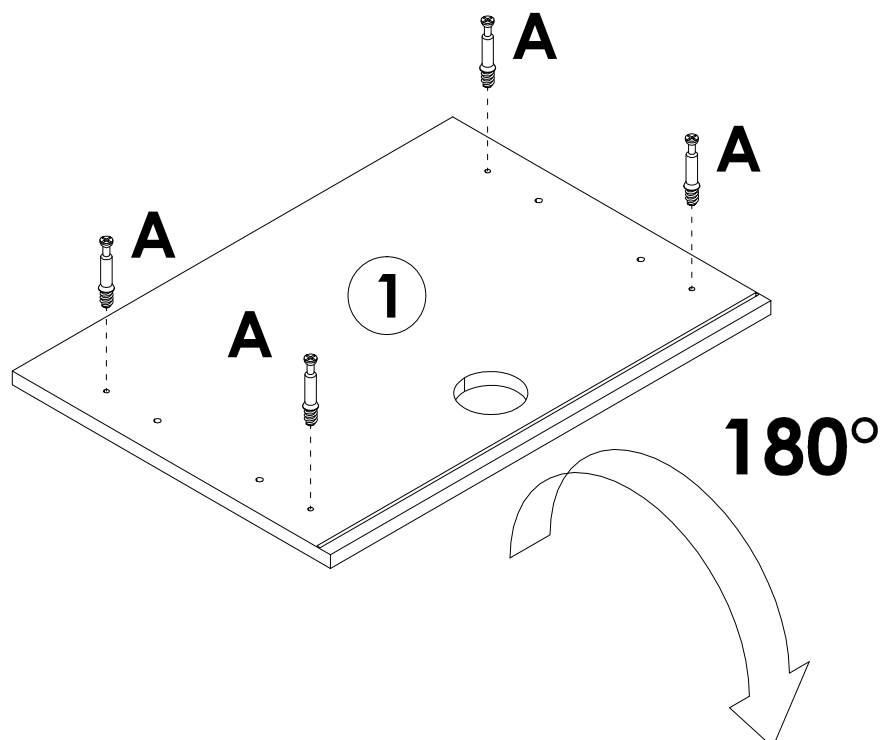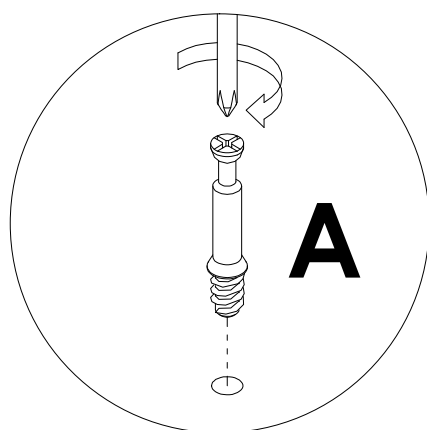




A x 4PCS

STEP 14

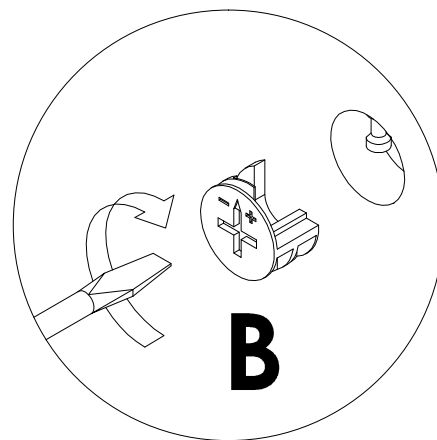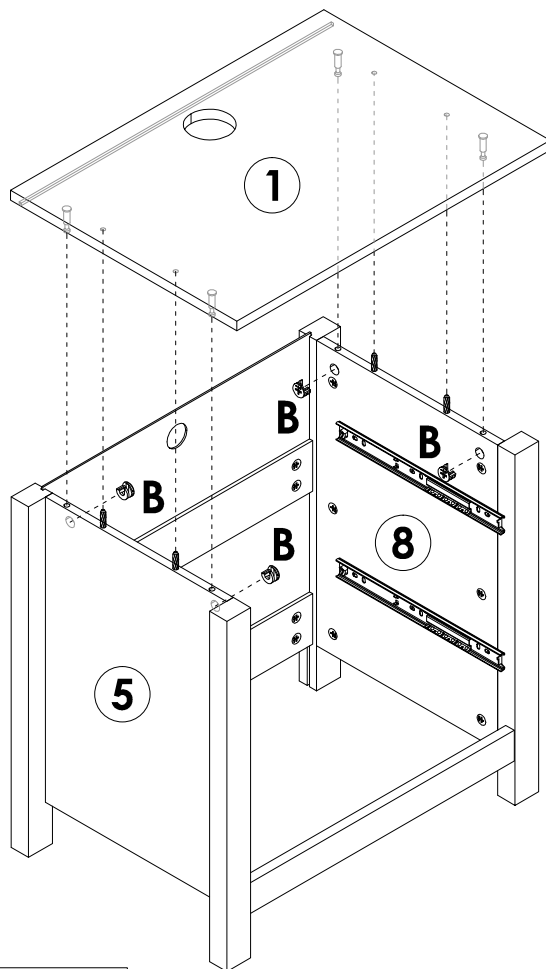



B x 4PCS

STEP 15

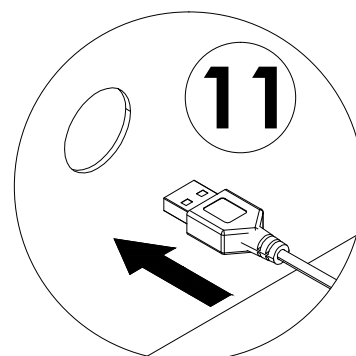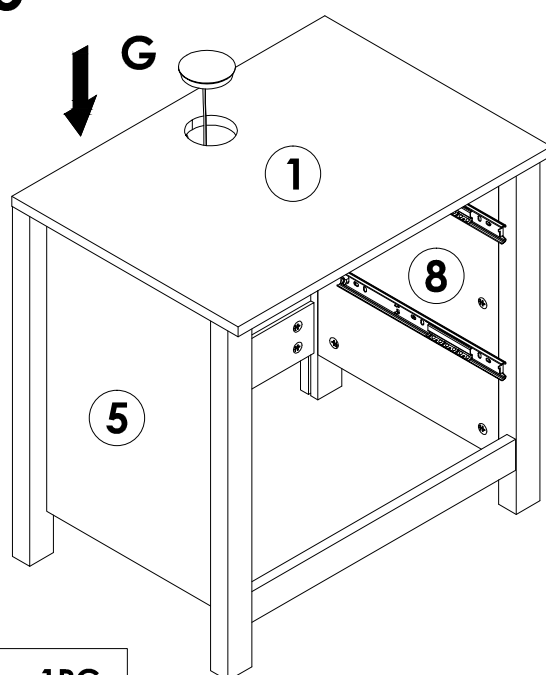


G x 1PC

STEP 16

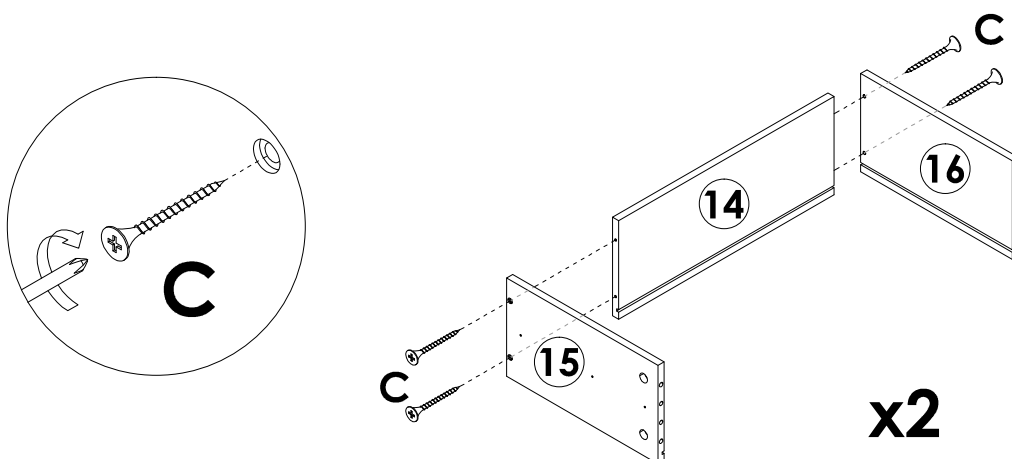




C x 8PCS

STEP 17

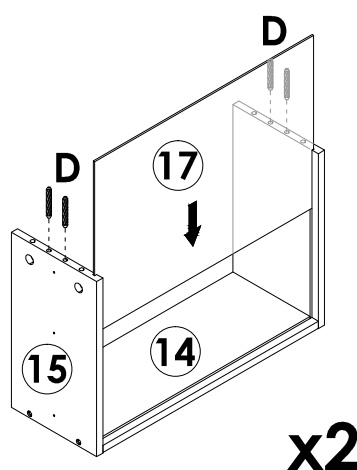


D x 8PCS


STEP 18

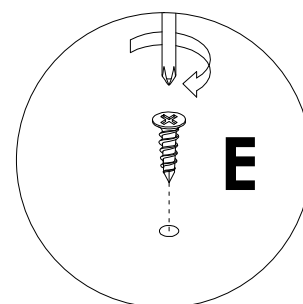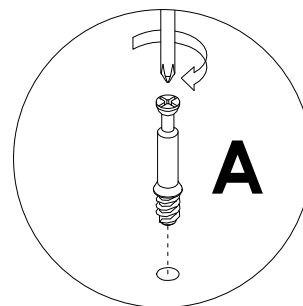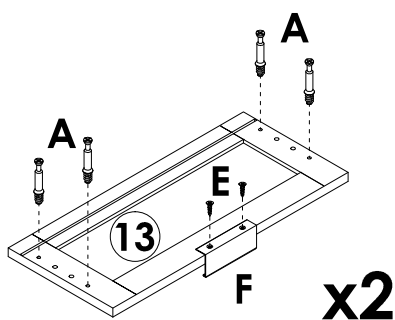


A x 8PCS




E x 4PCS



F x 2PCS

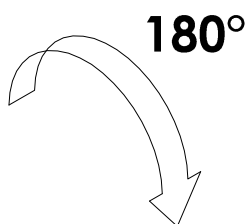


STEP 19

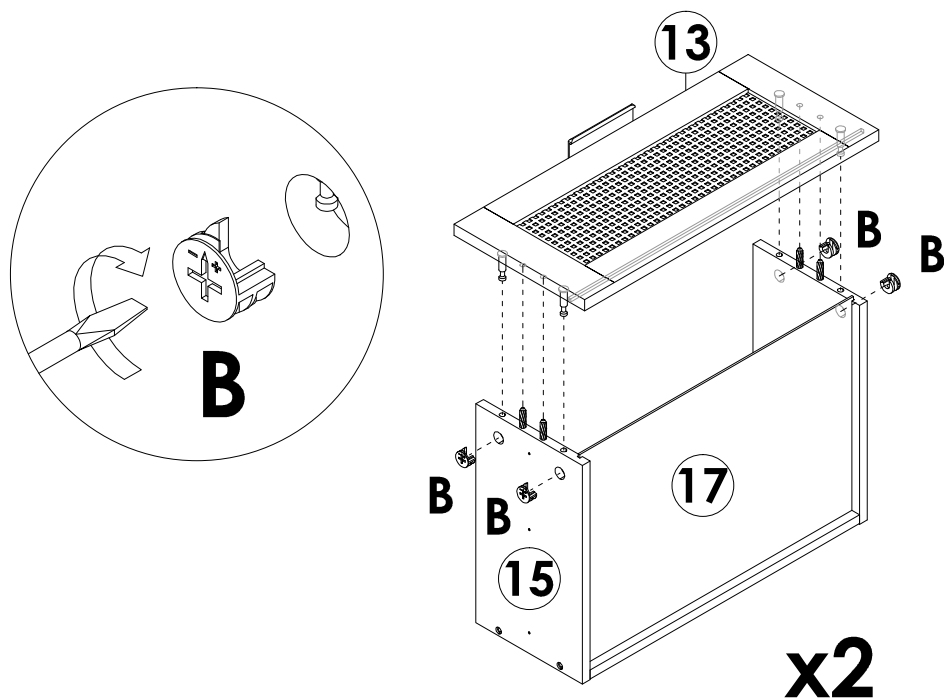

B x 8PCS

STEP 20

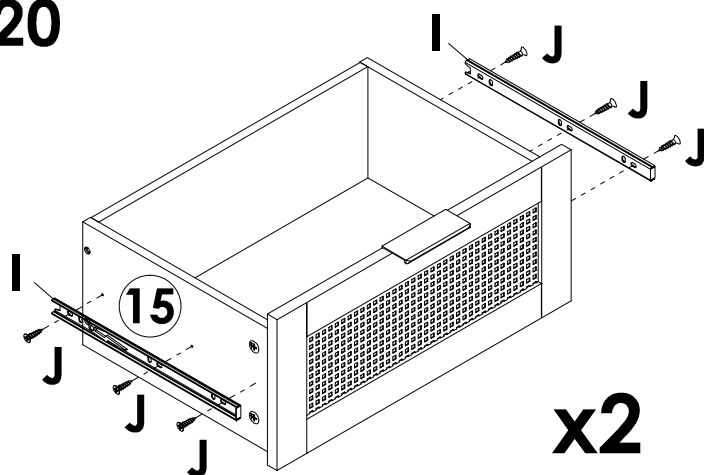



I x 4PCS





J x 12PCS


STEP 21

Both sides of the drawer need to be entered at the same time.

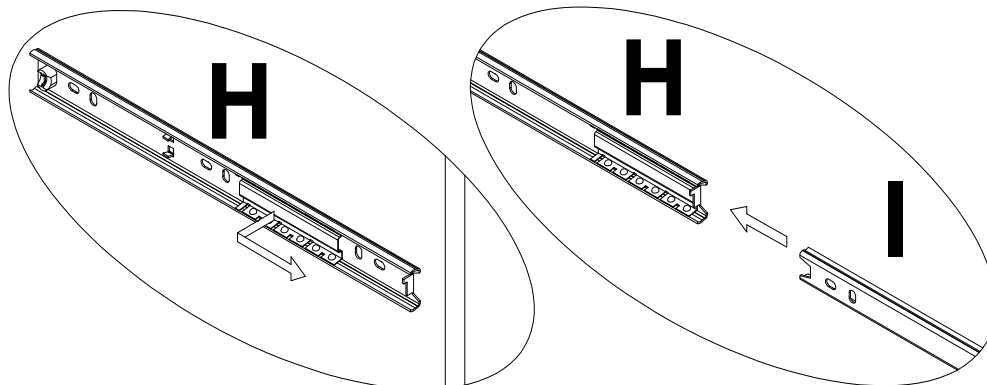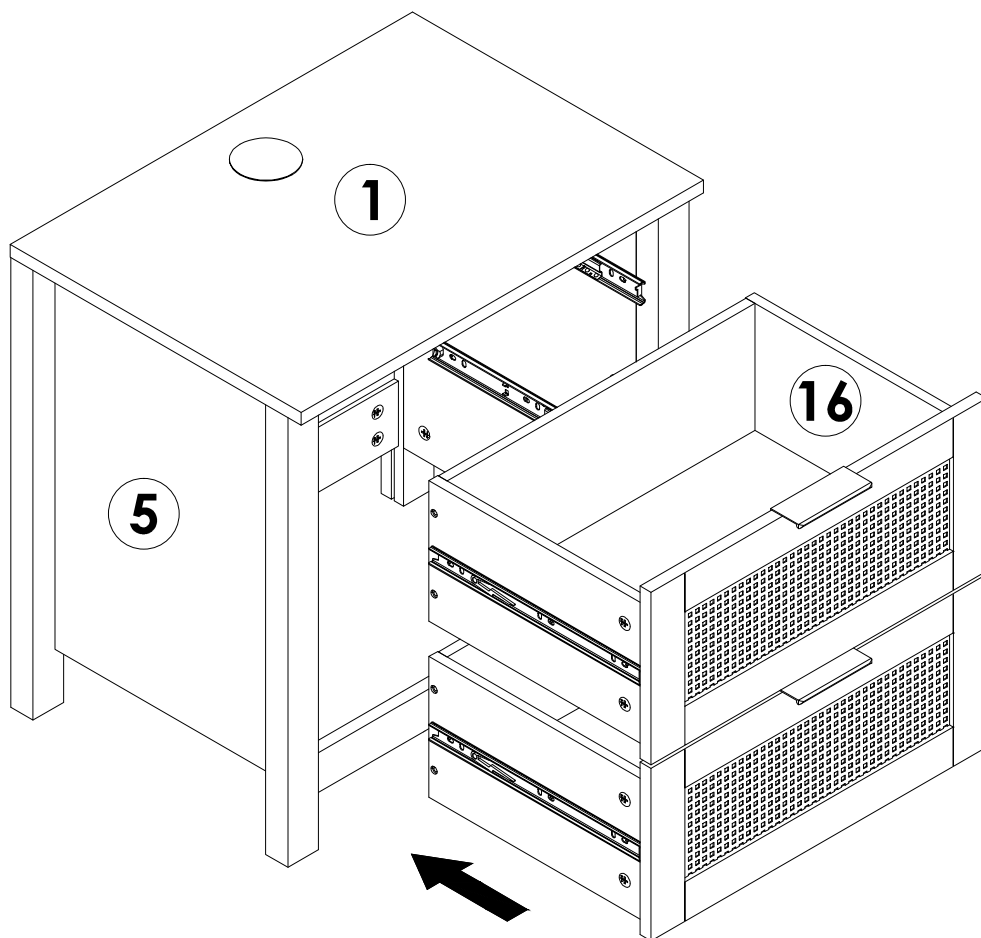

STEP 22

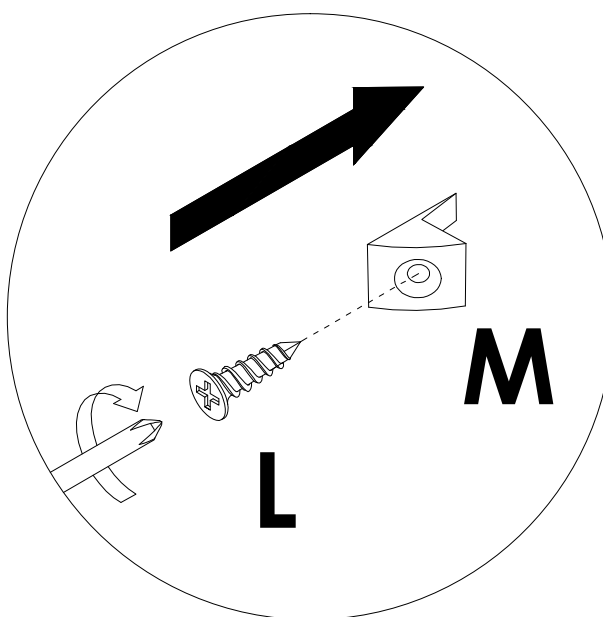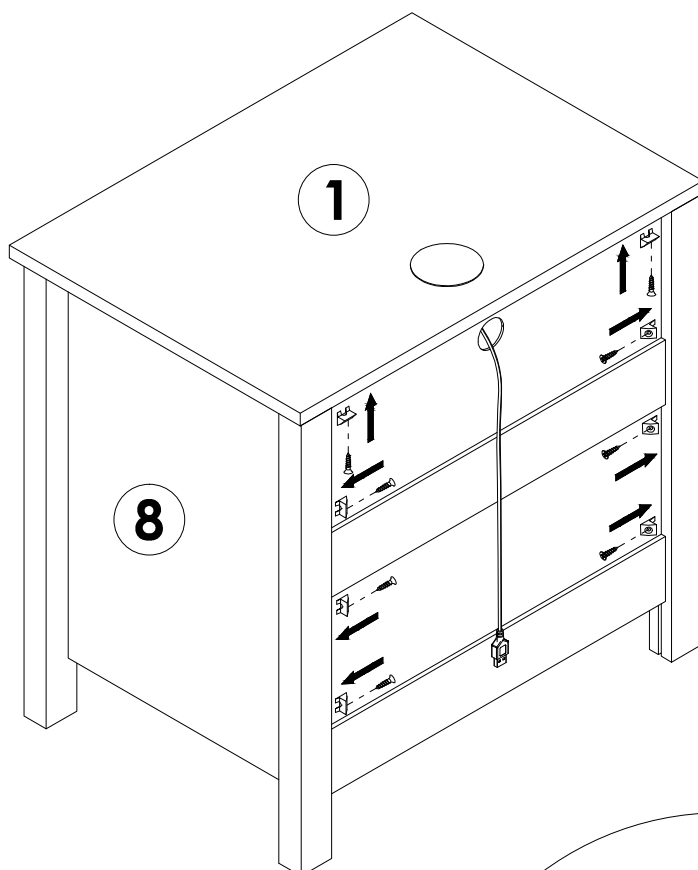

	L x 8PCS
	M x 8PCS