


6x4FT Storage Shed

Product ID. 7A4PX

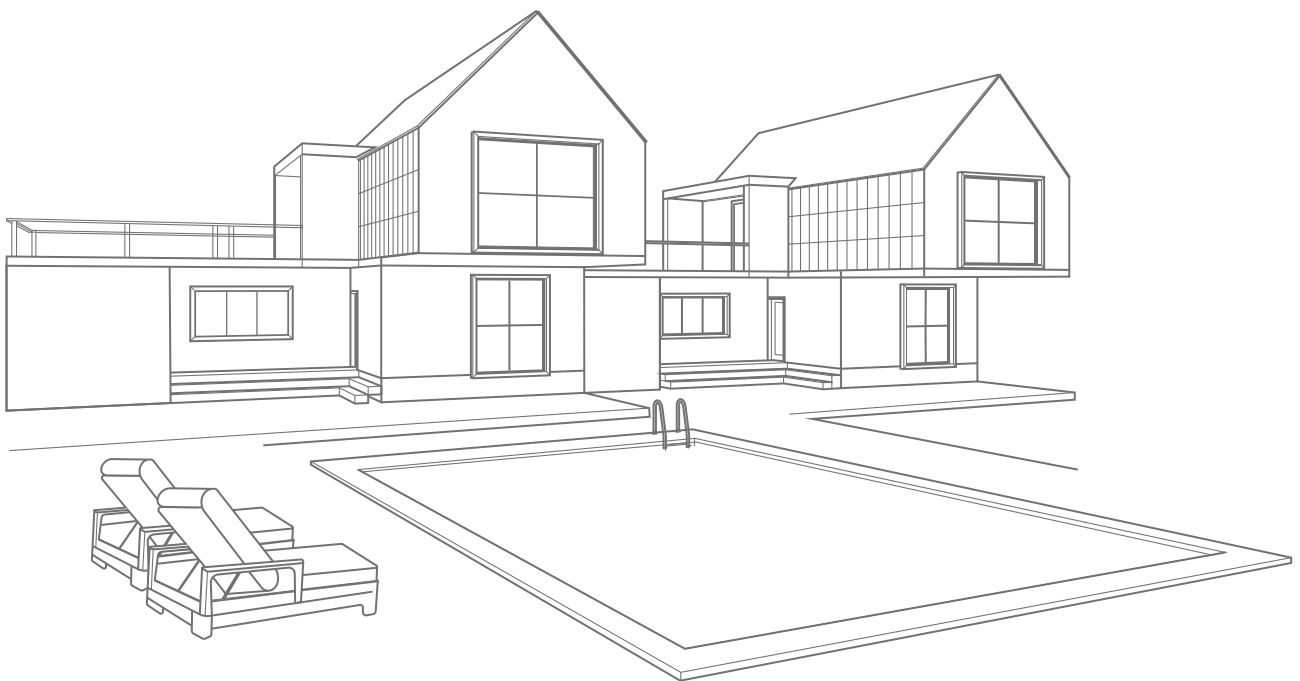

Scan for Support
support@garvee.com



Distributed by
GARVEE.com

V260408CJ96



Instructions for Assembly



WARNING

Please read the instruction manual carefully before assembly.
Please assembly strictly in accordance with the instruction.
Please double-check to ensure that all parts of the package contents intact.
To avoid injury, work gloves are recommended during assembly.


Level the ground surface

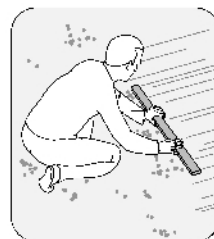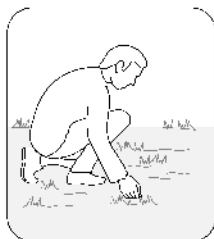

Recommendation: Construct a wooden or concrete base as a foundation


Option

A

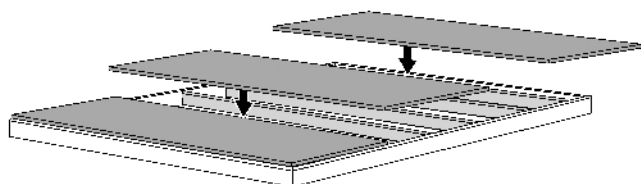

Option


B

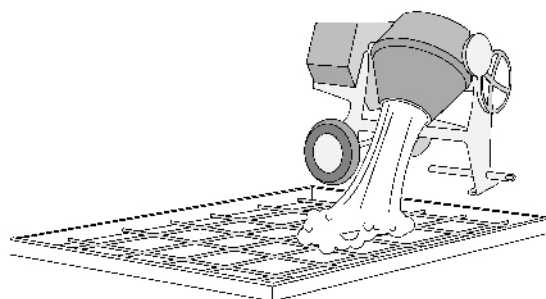

BEFORE STARTING ASSEMBLY

Read the care and safety guidelines at the end of this manual Check to ensure that there are no missing or damaged parts BEFORE starting or arranging assembly Remove all parts from the package(s) and spread them out on a clean work surface Review all assembly instructions Assemble all the parts according to the directions in this manual Do not skip any steps.

REQUIRED TOOLS (Tools Not Included)



(Rubber mallet)



For concrete floors, please prepare 4 pieces of 8*80mm expansion screw, we don't provide them.



For wooden floors, please prepare 4 pieces of 4*60mm wood screws and washers, we don't provide them.




ASSEMBLY REQUIRES TWO PEOPLE

PARTS LIST

NO.	PART.	Qty.
P1		1
P2		1
P3		1
P4		2
P5		2
P6		2
P7		2
P8		1
P9		1
P10		2
P11		4
P12		1
P13		1
P14		2
P15		1
P16		1
P17		2
P18		1
P19		1
P20		2
P21		1
P22		1
P23		1

NO.	PART.	Qty.
P24		1
J1		4
J2		4
J3		2
J4		2
J5		2
J6		2
M1		1
M2		1
M3		1
M4		1
M5		1
M6		1
M7		4
M8		3
M9		1
M10		1
M11		4
M12		2
BY		2
L1		1
L2		2
L3		2

NO.	PART.	Qty.
L4L		2
L4R		2
L5		4
L6		2
H1		1
H2		1
C1		1
C2		1
C3		2
SG		2
D1		220
D2		60
J7		8
G		1

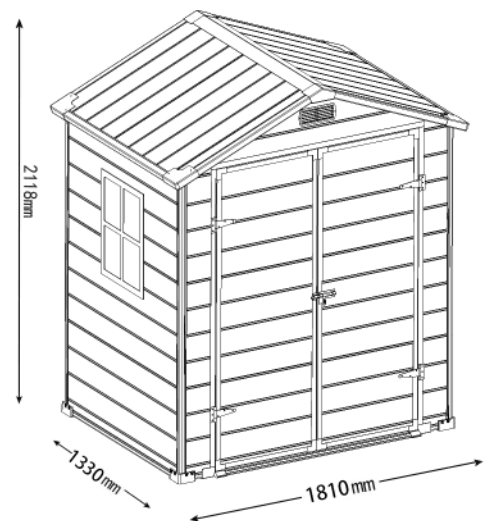

- Use spatula (part" SG") for easier insertion of panel into profile
- Please ensure the panels are all installed on position before screwing




FLOOR ASSEMBLY




● Use spatula (part "SG ") for easier insertion of panel into profile


Note: The crease line of the floor must be underneath

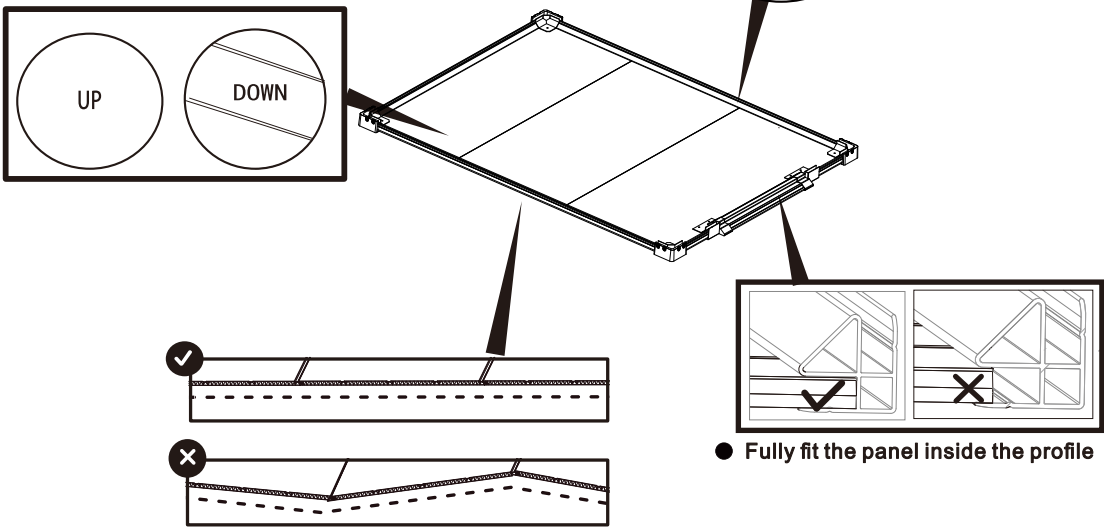


Step 1

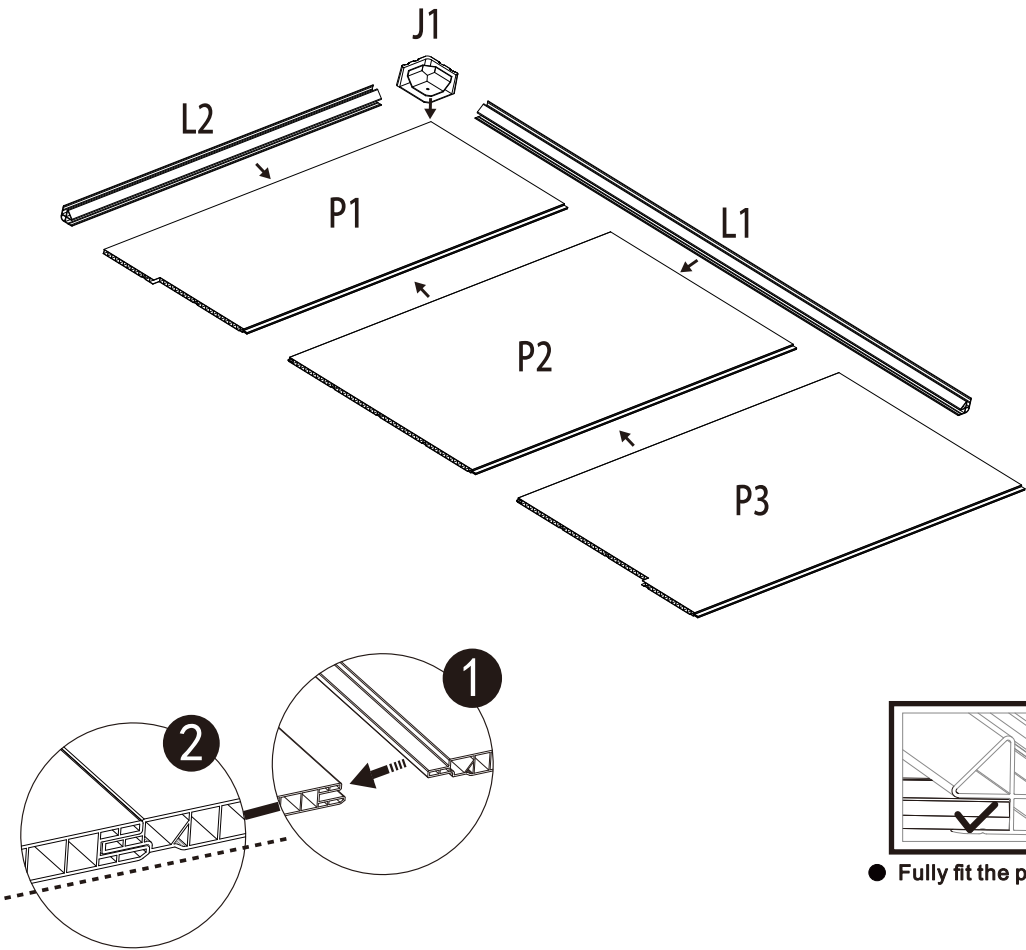



Step 2

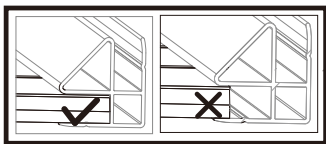

- Fully fit the panel inside the profile

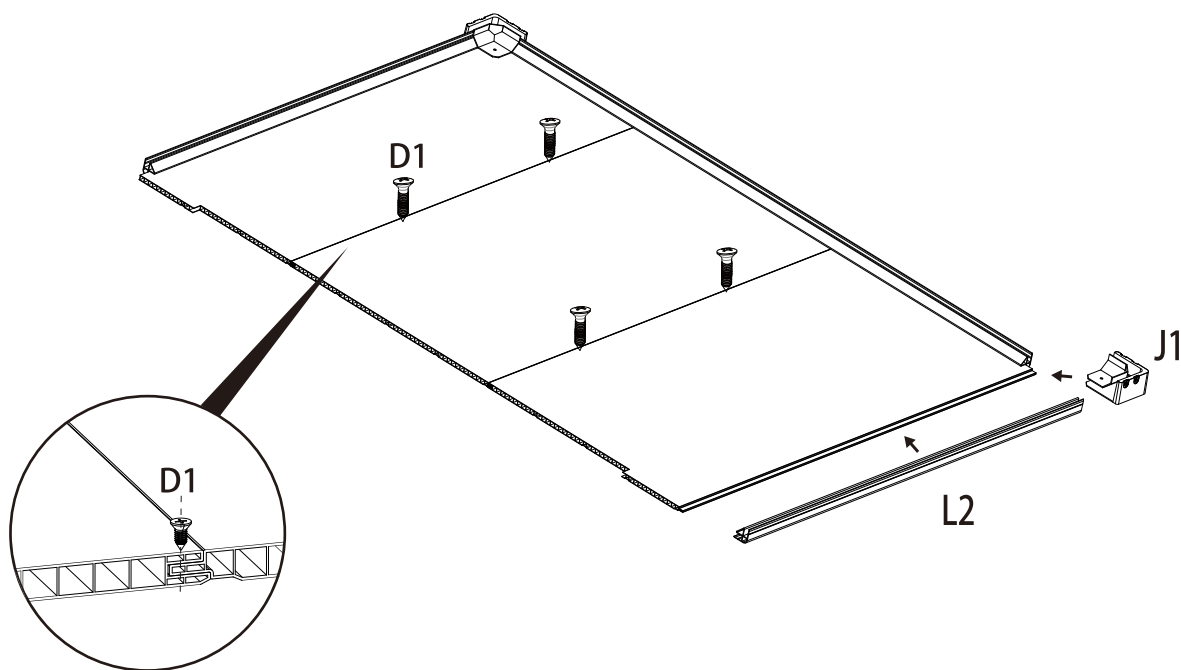


Step 3

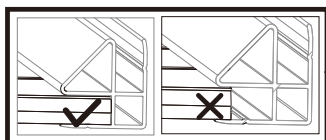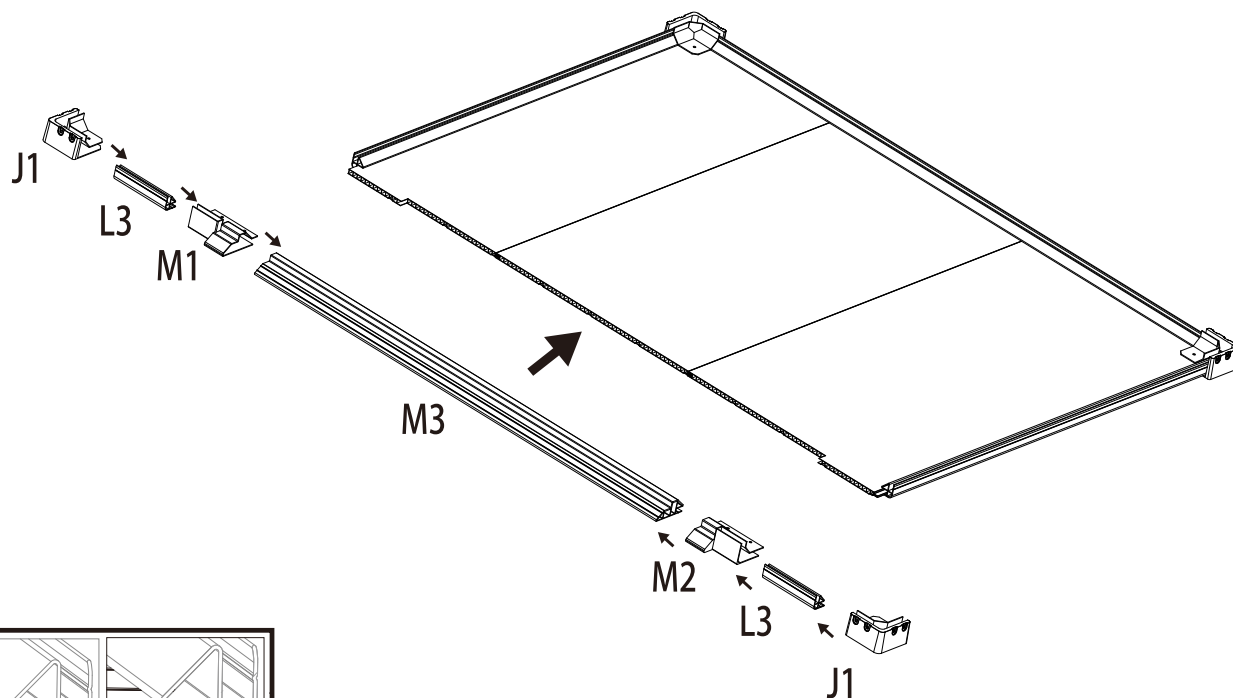


- Fully fit the panel inside the profile


Step 4

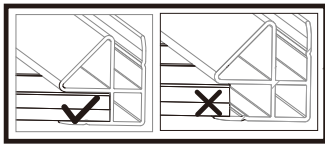

- Fully fit the panel inside the profile

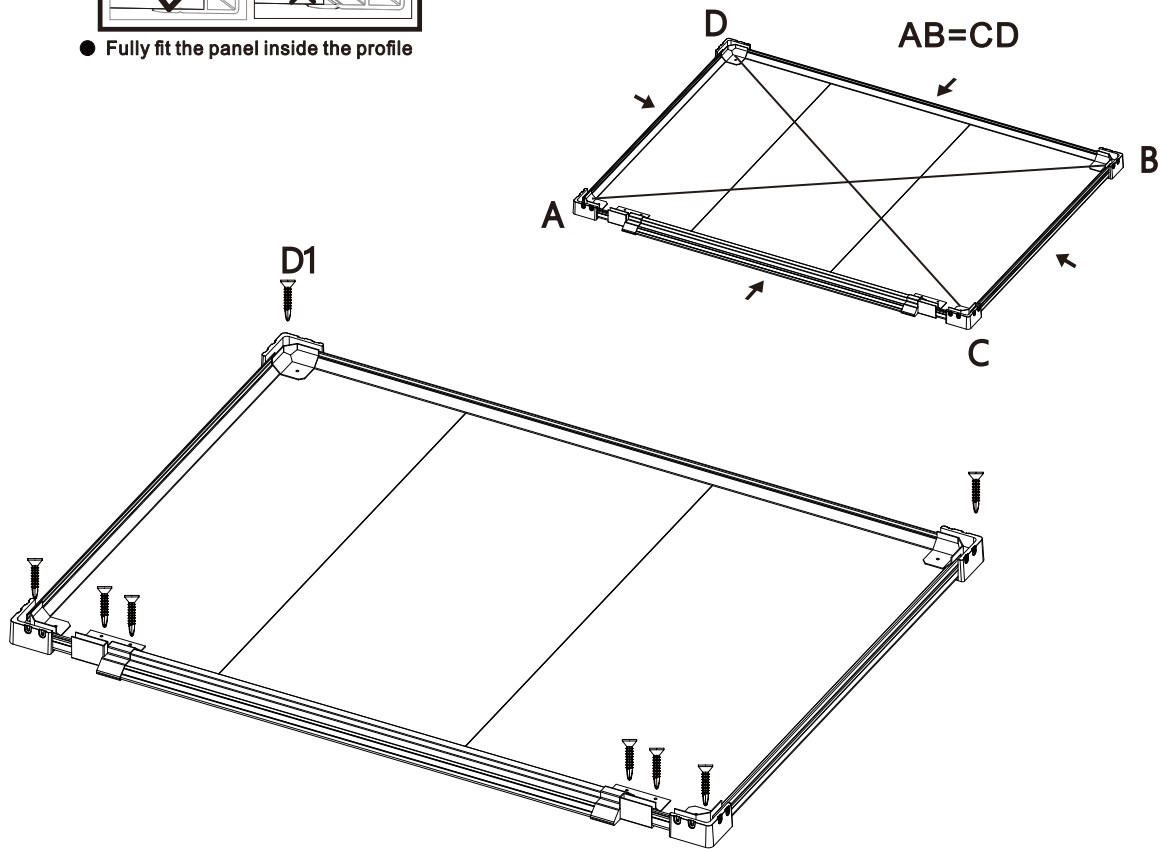


Step 5

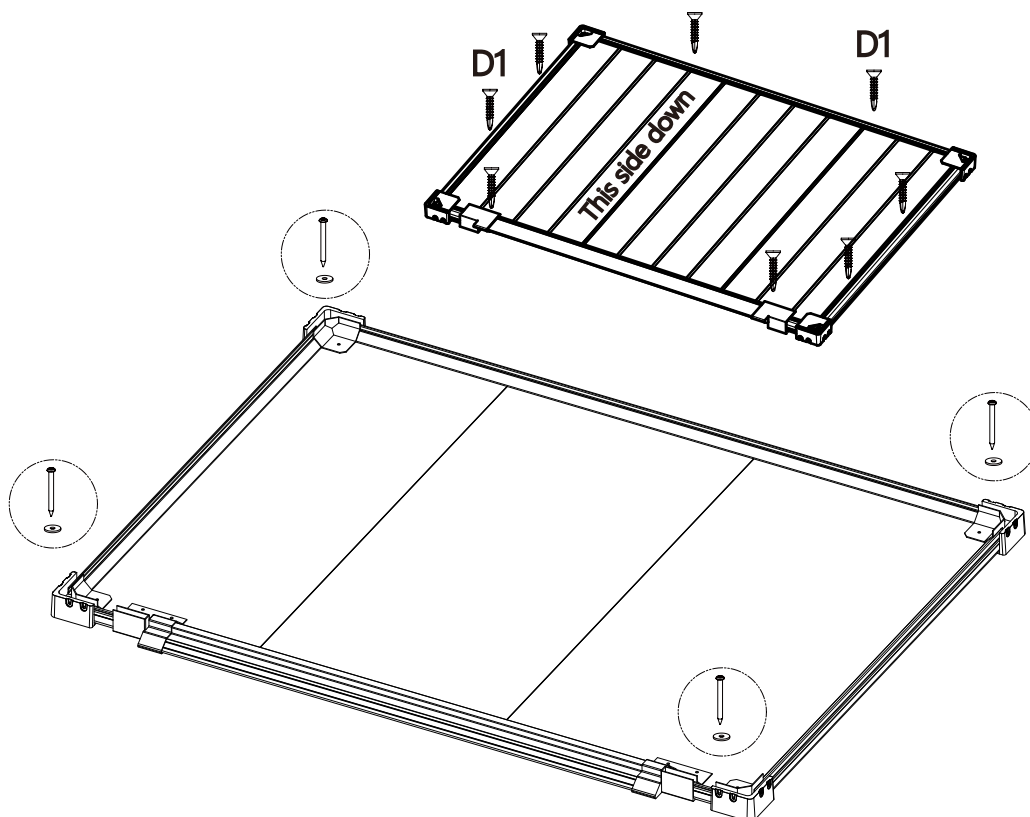


For concrete floors, please prepare 4 pieces of 8*80mm expansion screws, we don't provide them.
For wooden floors, please prepare 4 pieces of 4*60mm wood screws and washers, we don't provide them.


Step 6

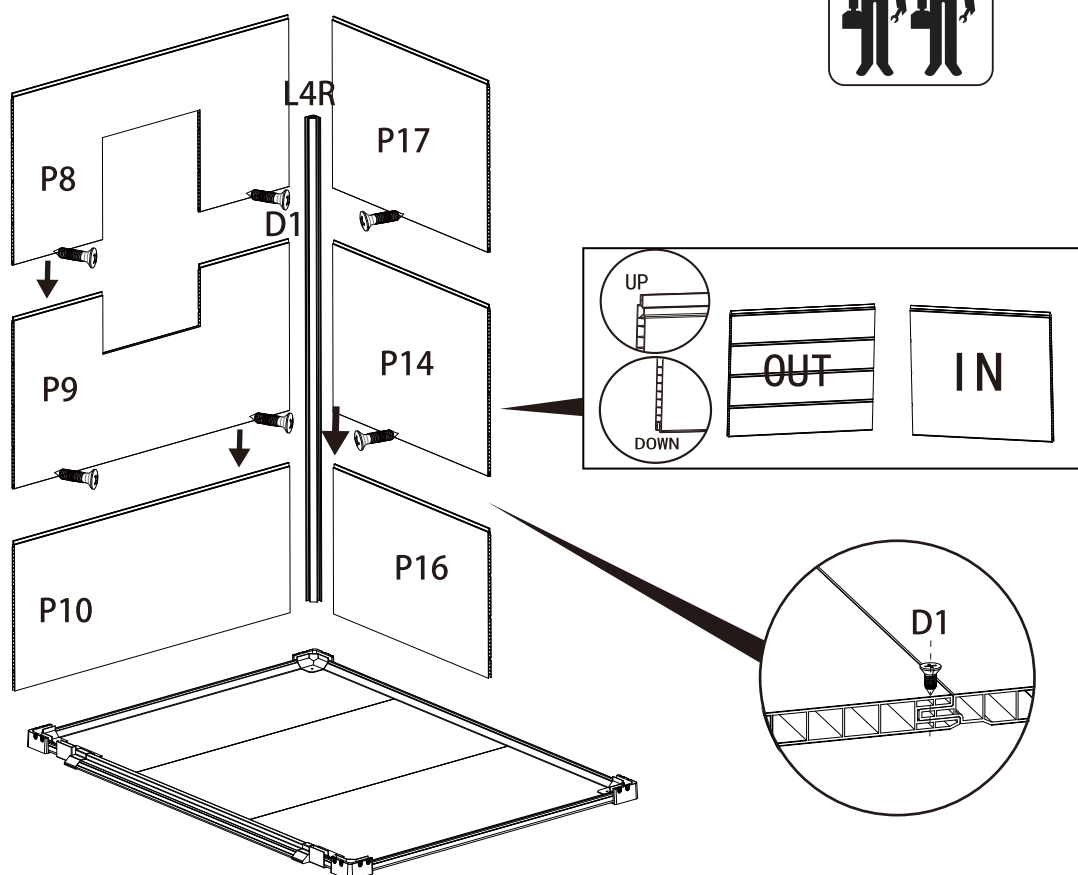



Step 7

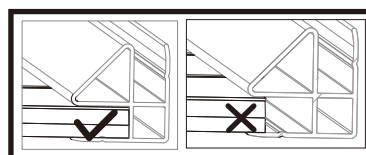


● Fully fit the panel inside the profile

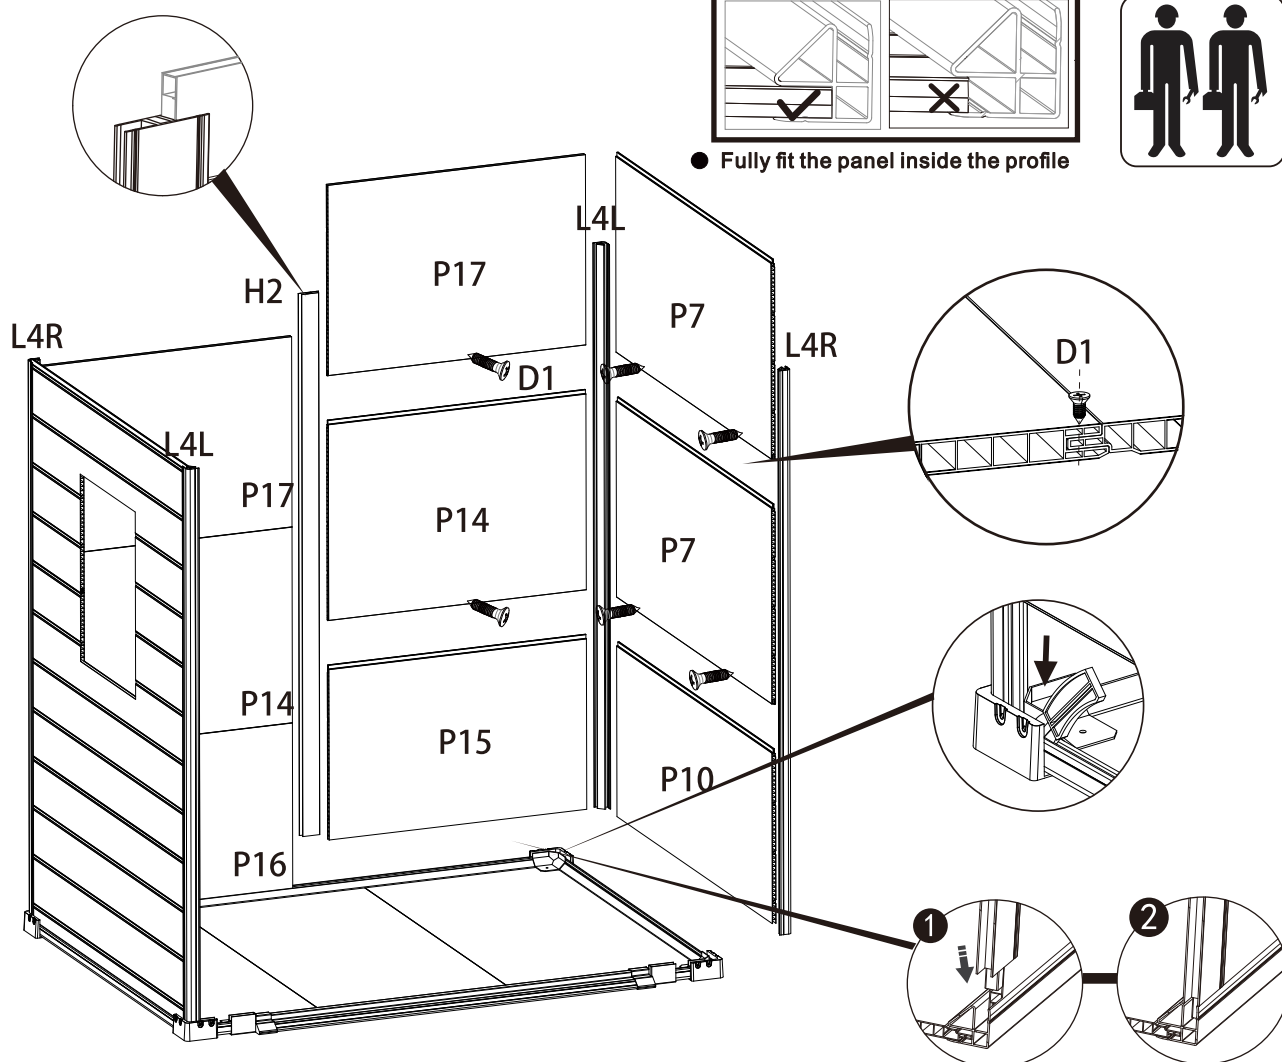


Step 8

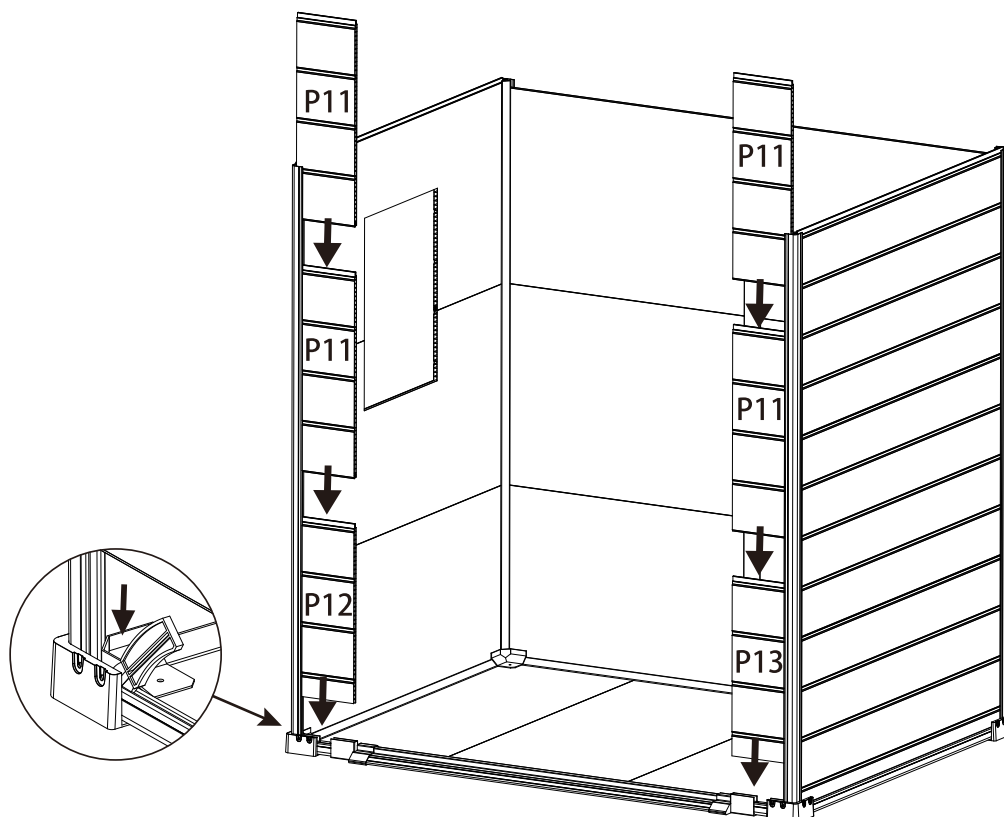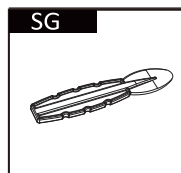




Step 9

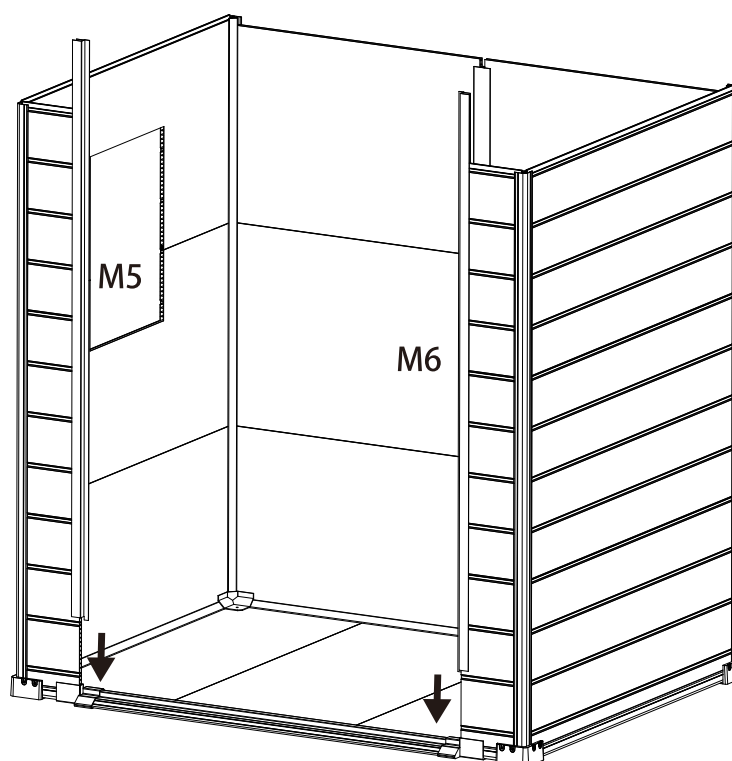


Step 10

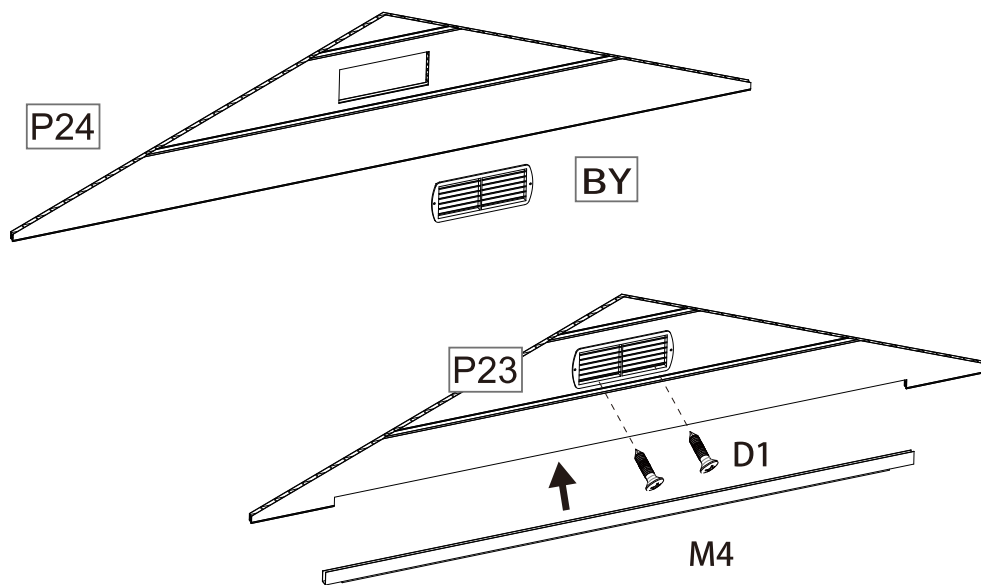


Step 11

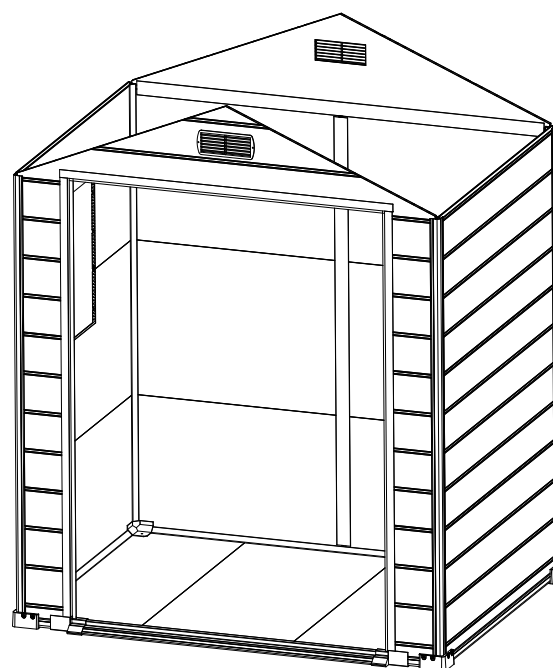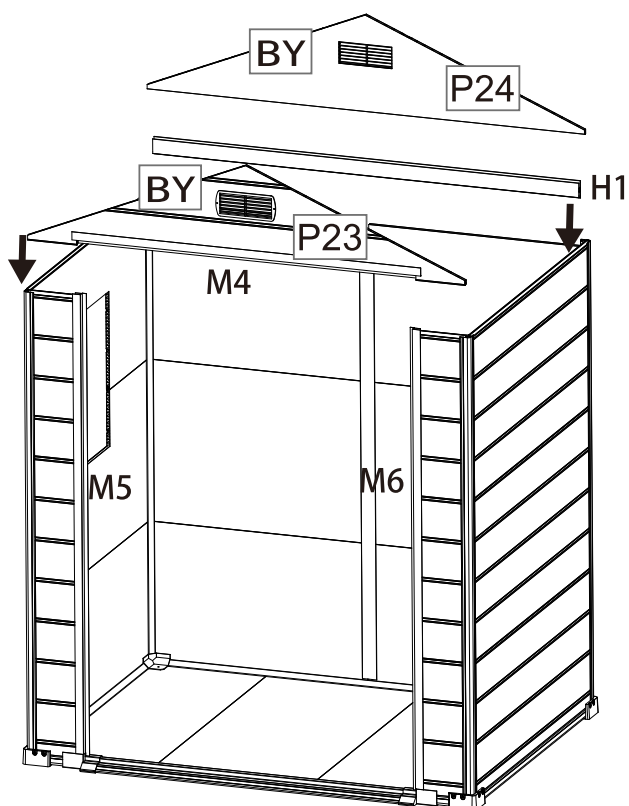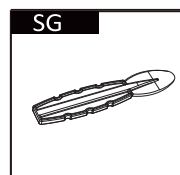


Step 12

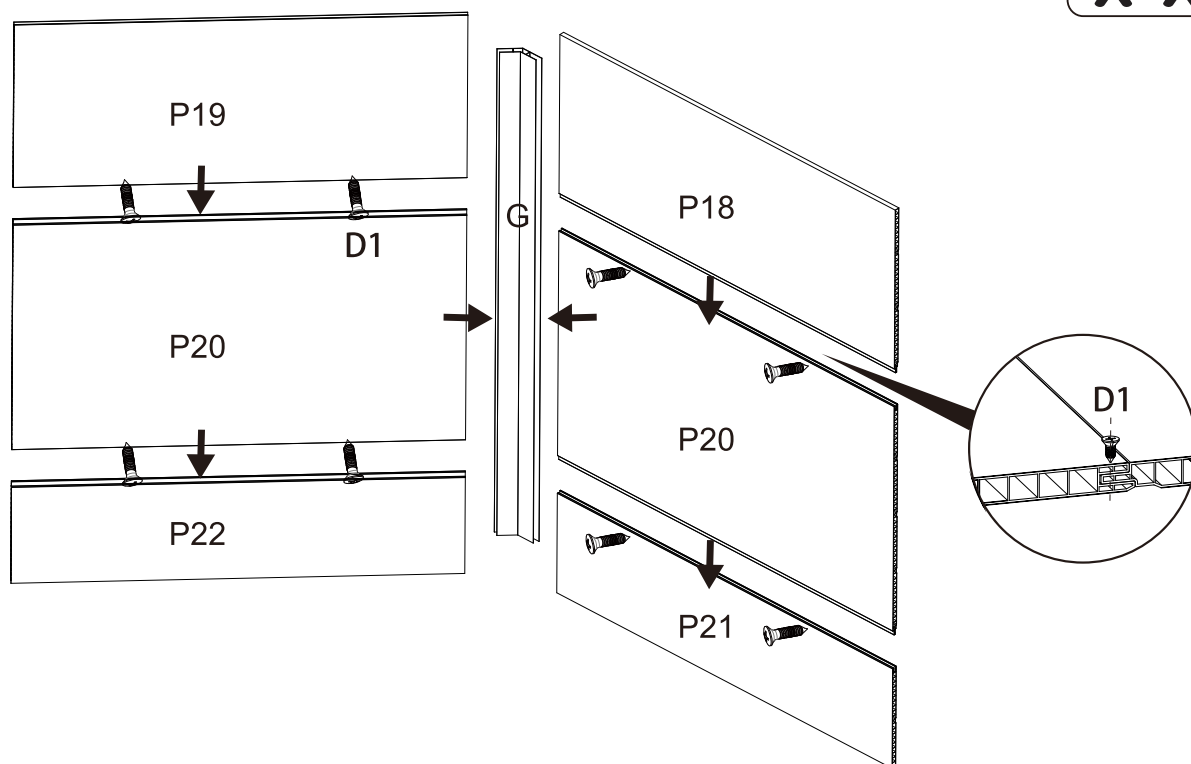




Step 13

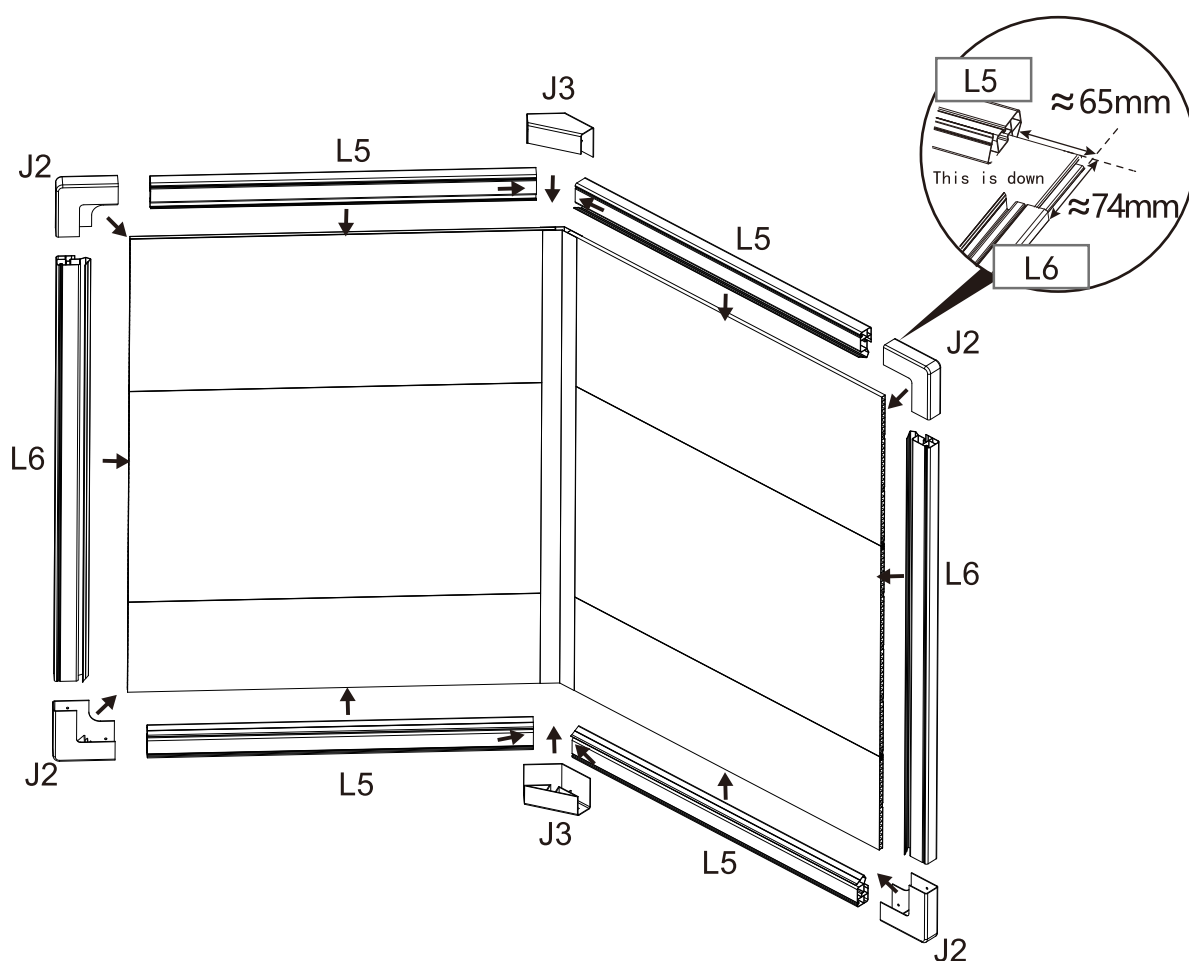

Step 14



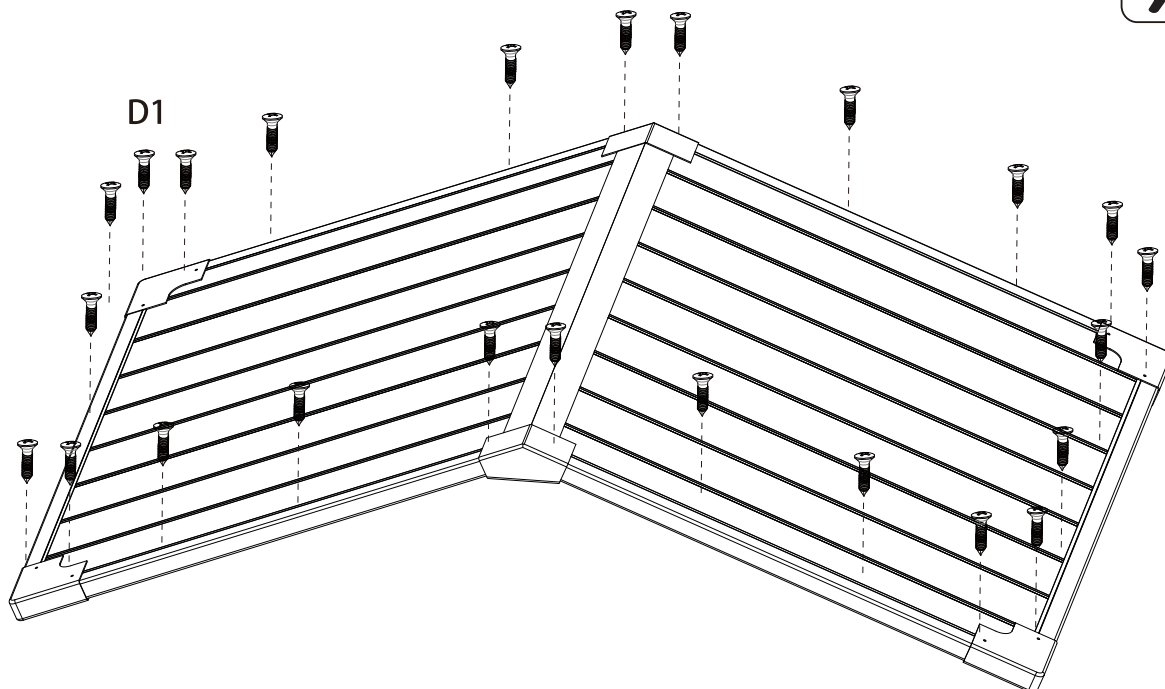


Step 15

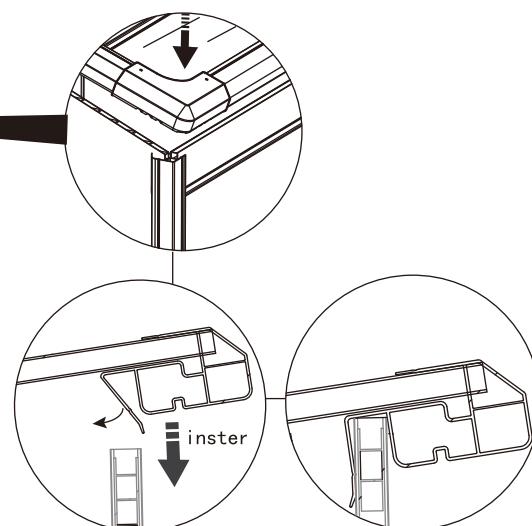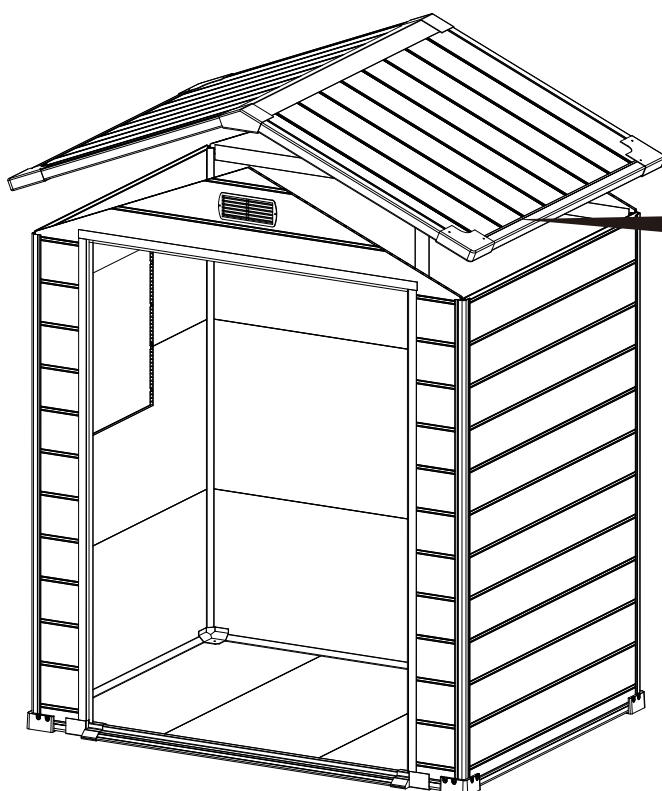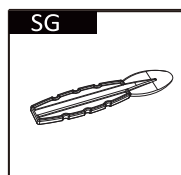



Fully fit the panel inside the profile

Step 16

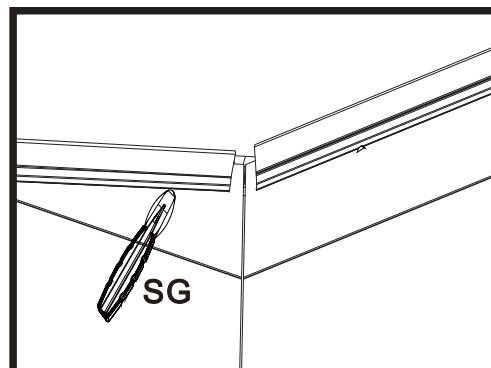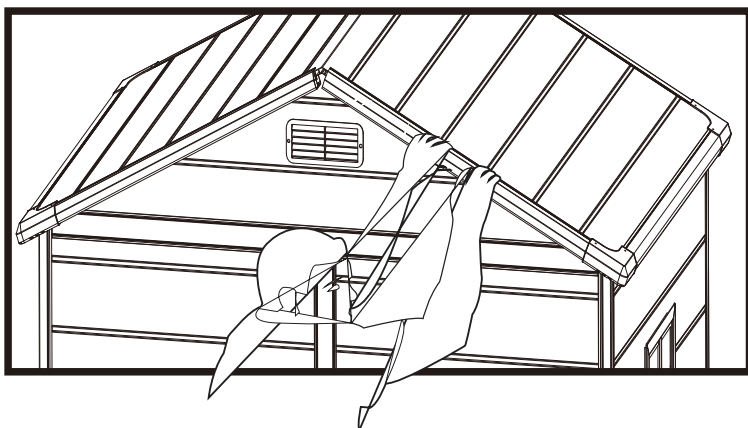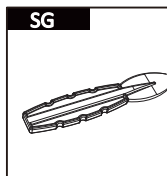


Fully fit the panels inside the profiles of roof

Step 17

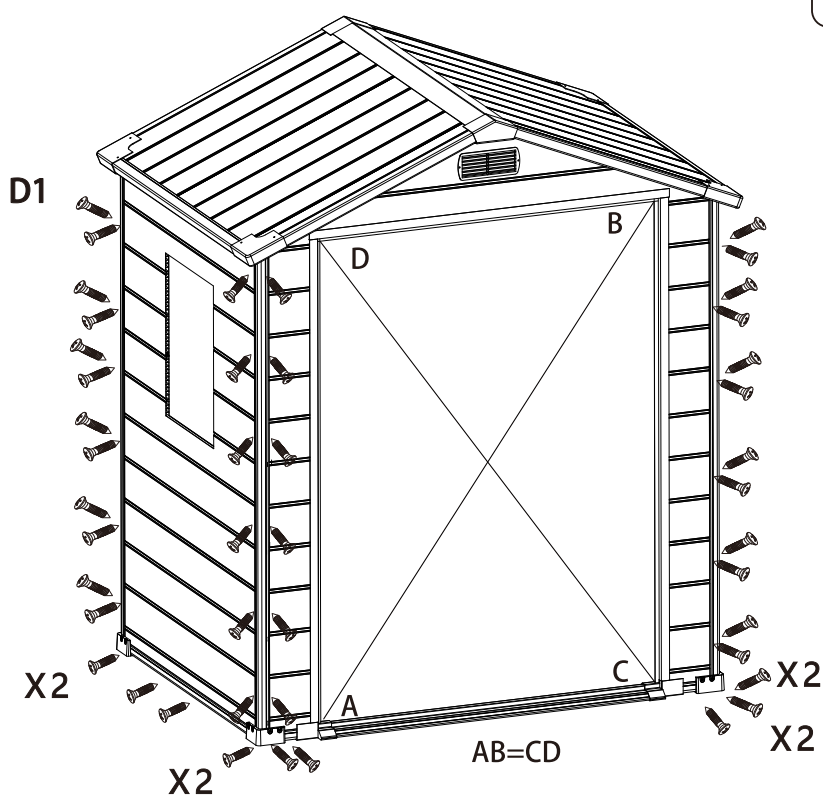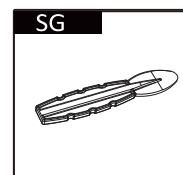


Fixing four-side wall plate by self-tapping


Step 18

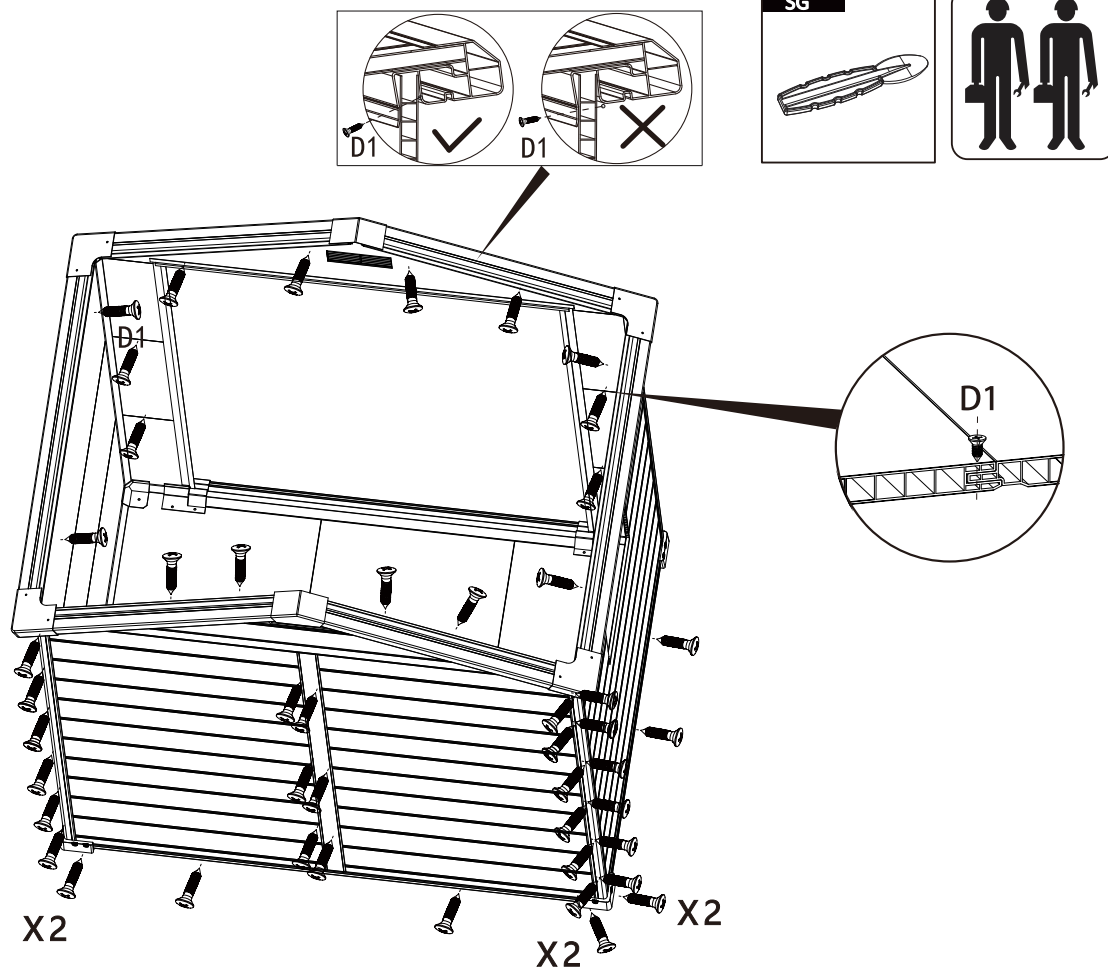


Step 19

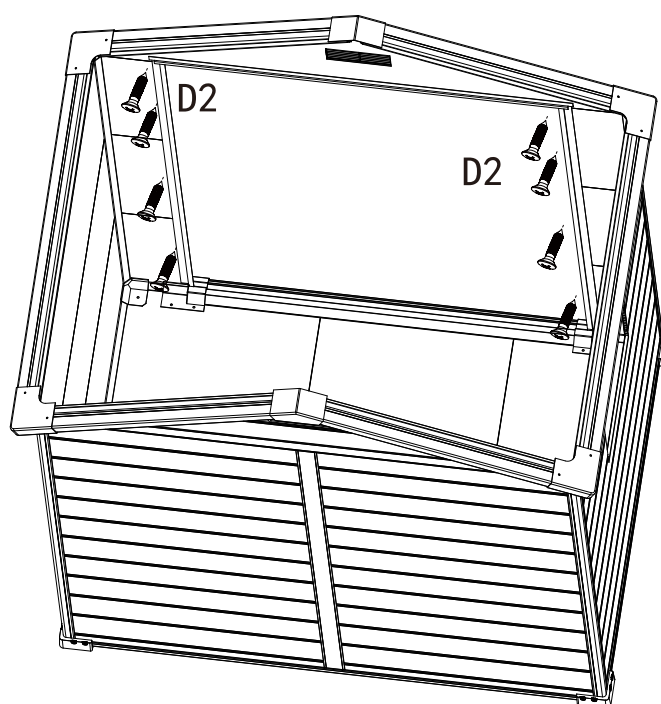


Step 20

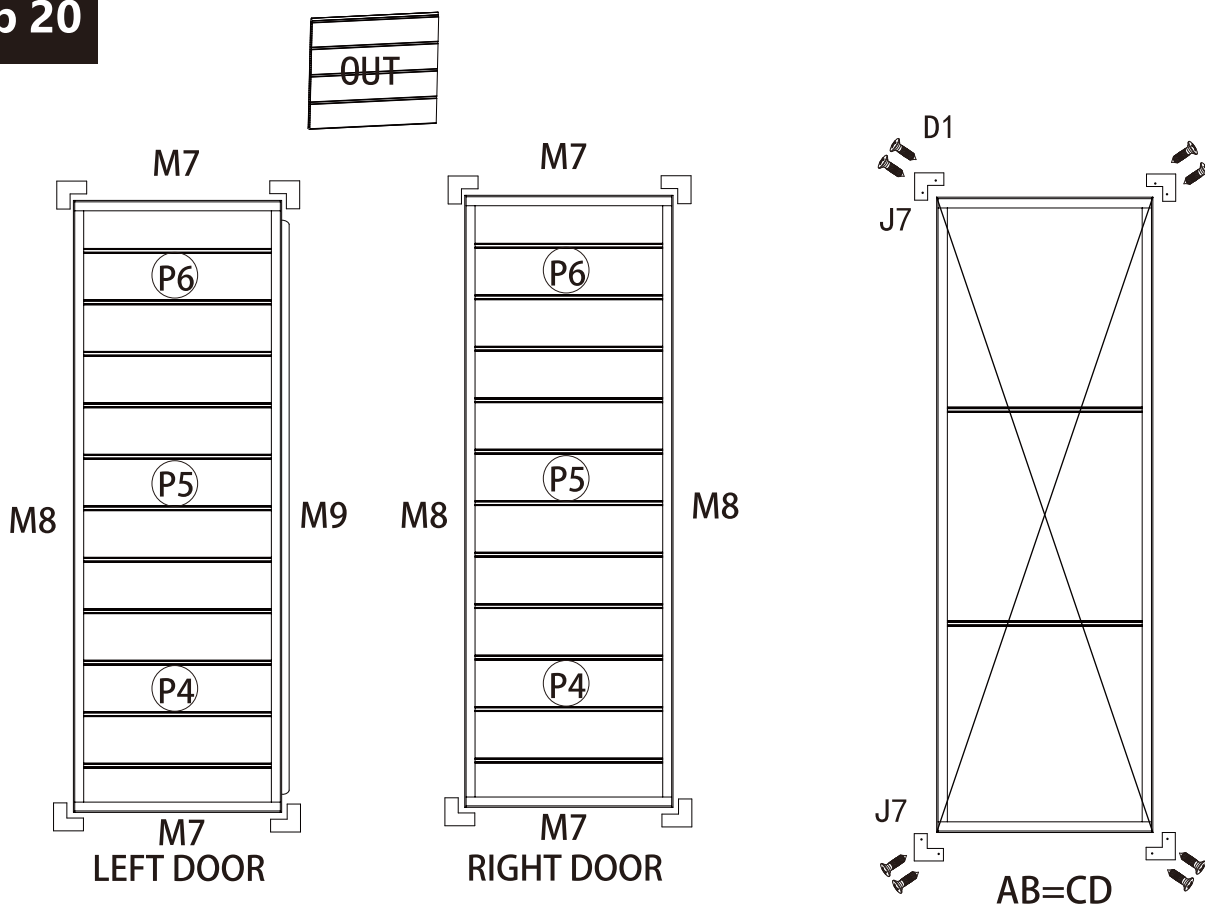


Step 21

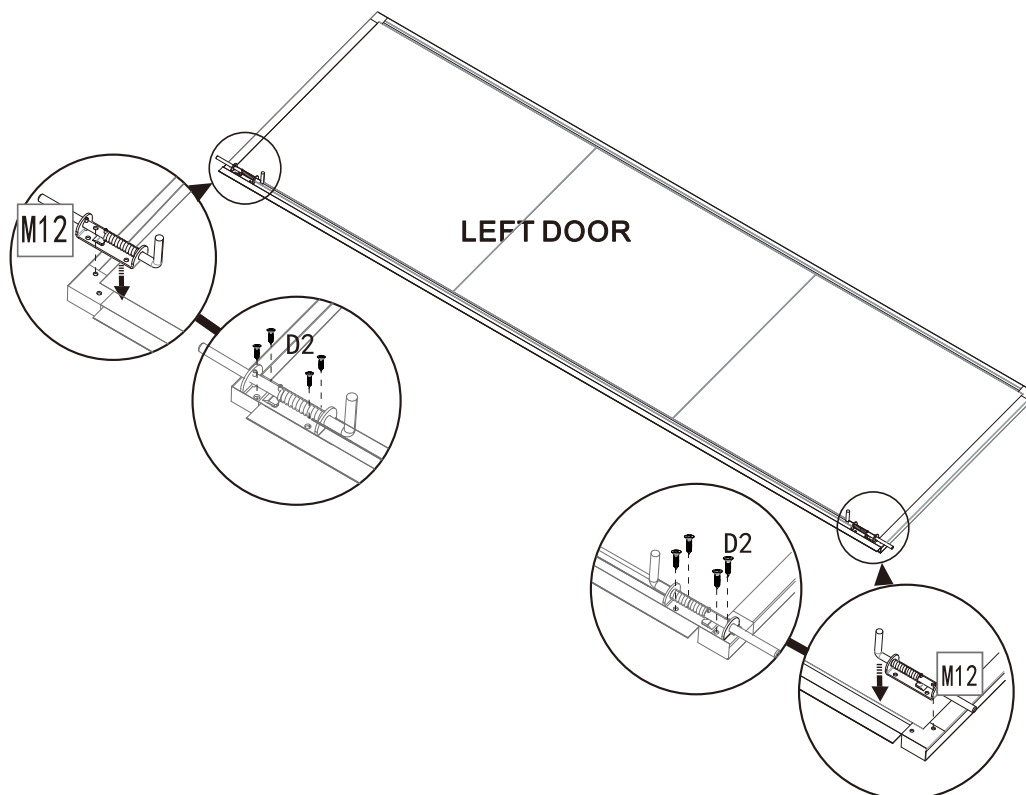

Step 22

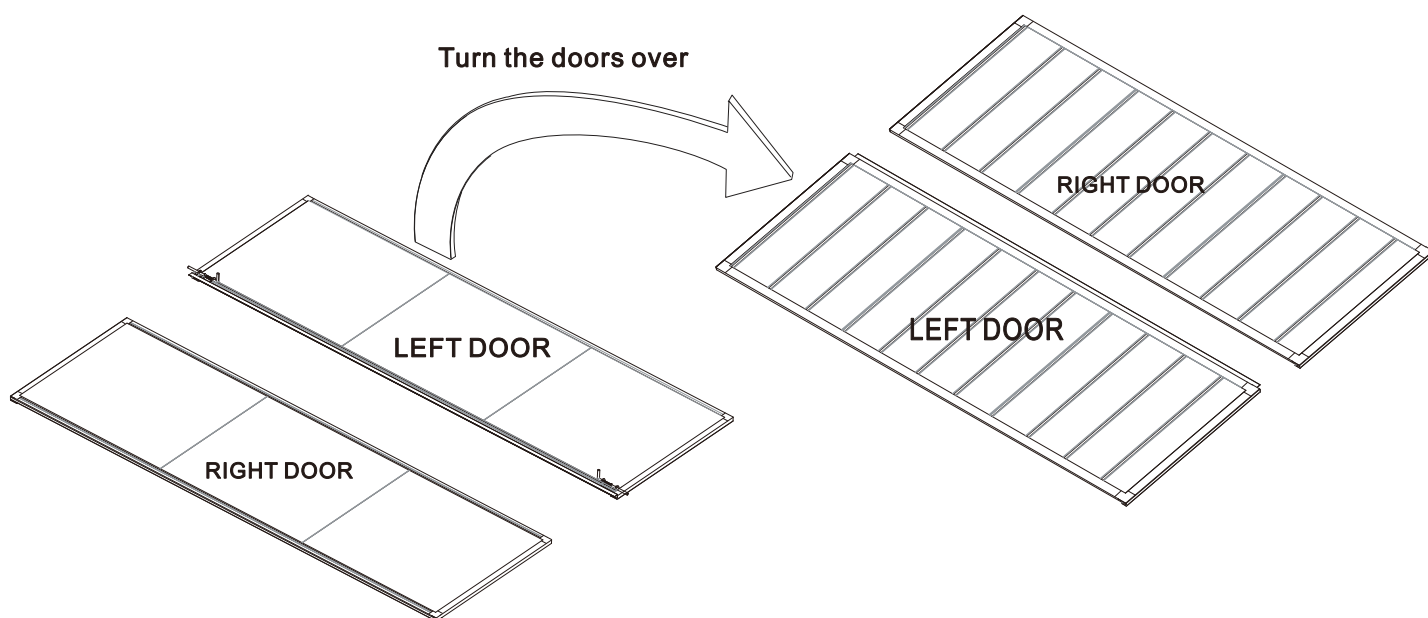


Step 23

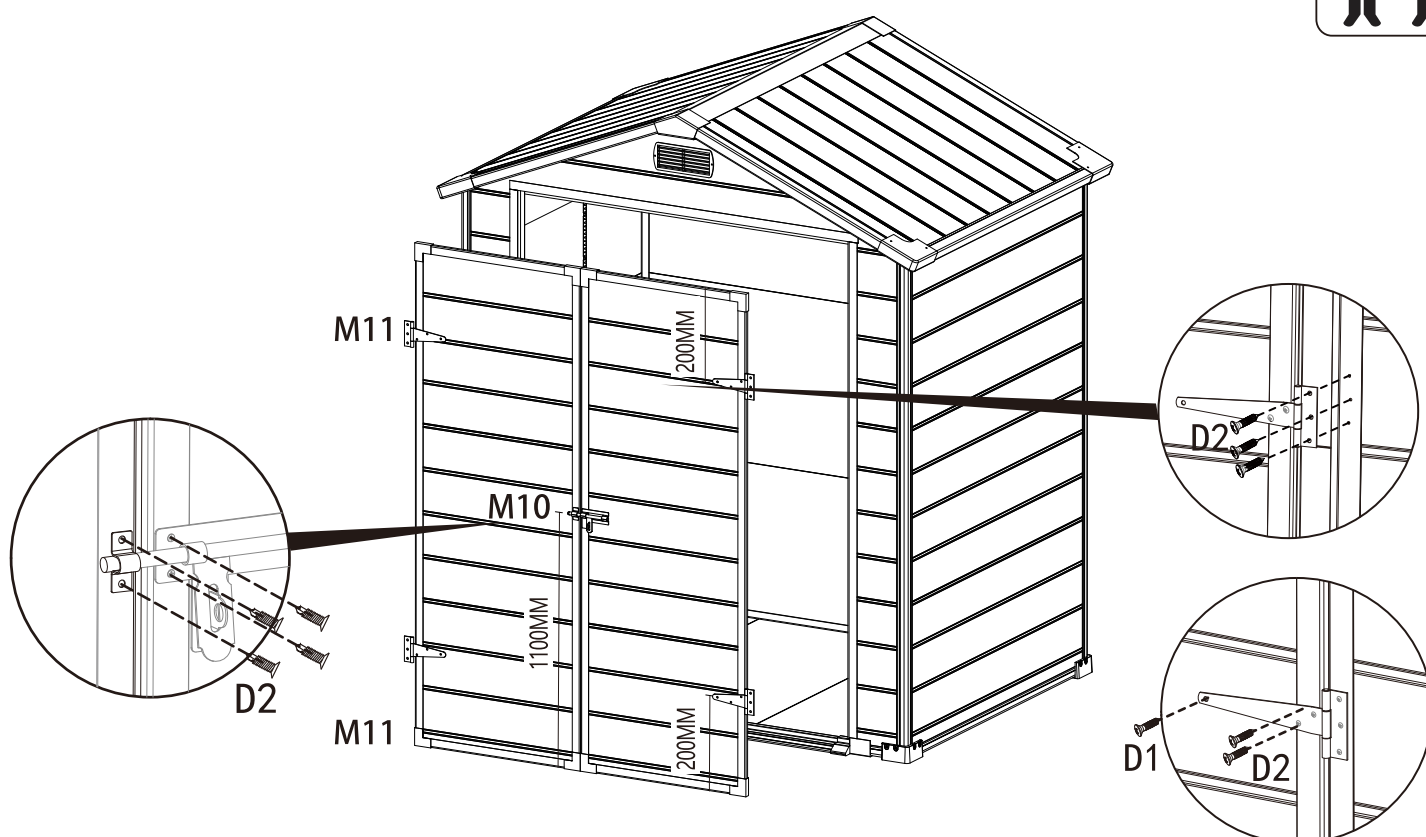


Step 24

- Remove the film before fixing C2

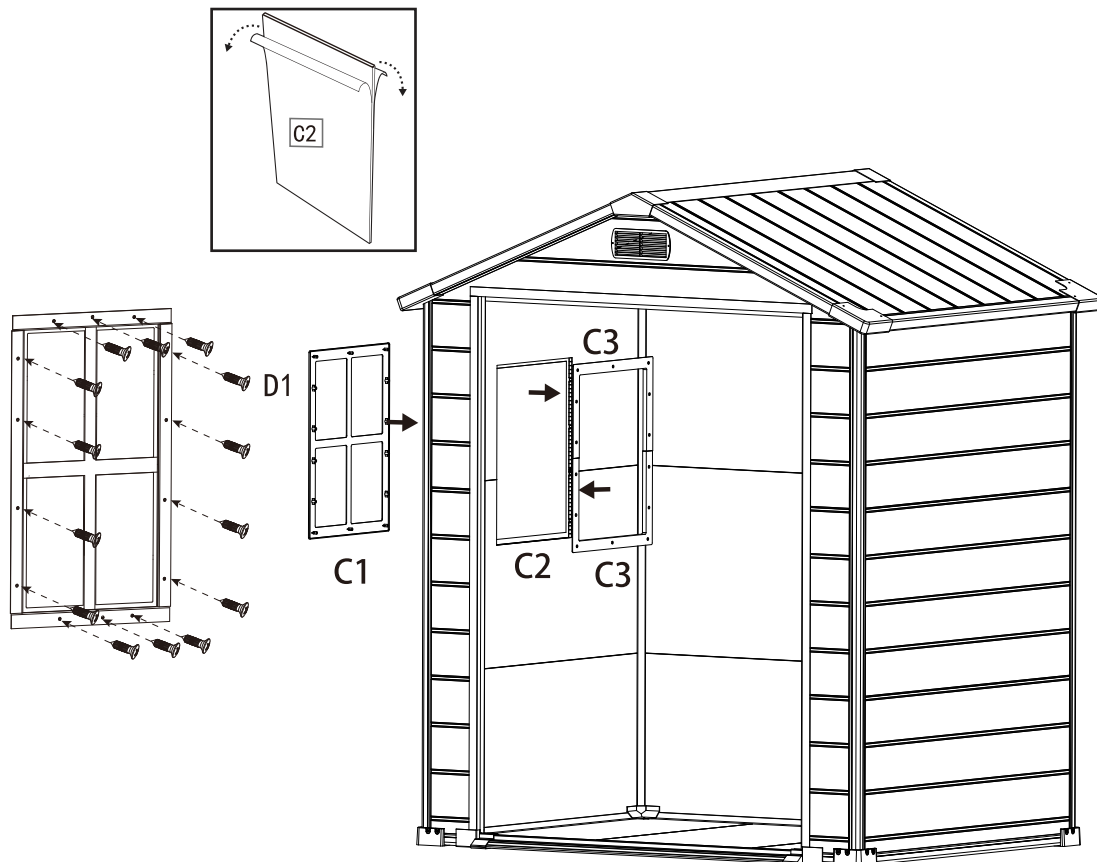



Step 25

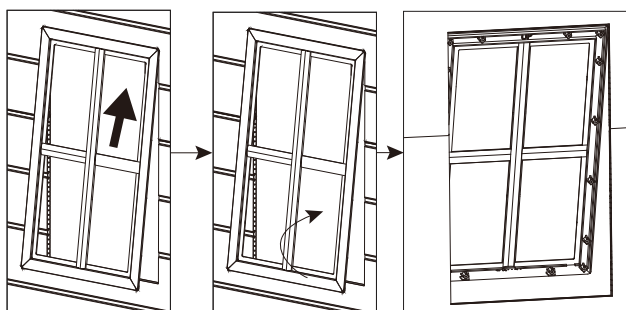

- Need two persons to fix C2, one person presses it, and the other person assembles it.



Step 26

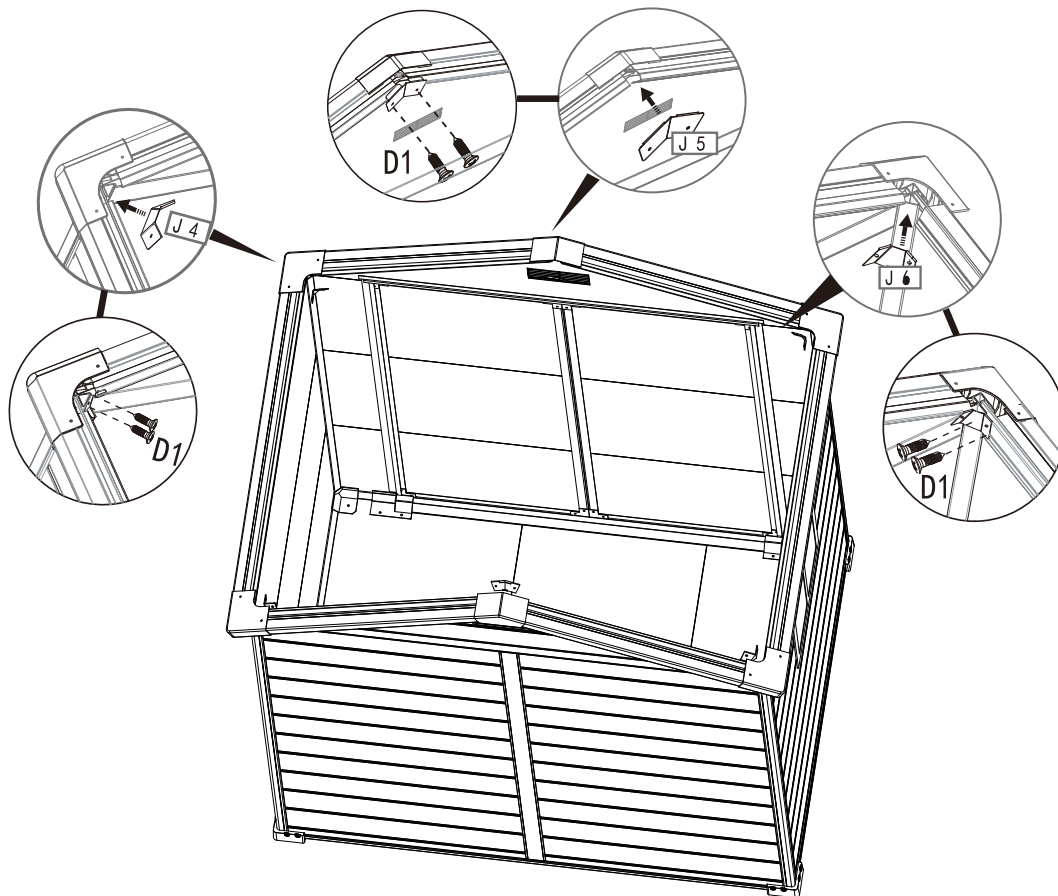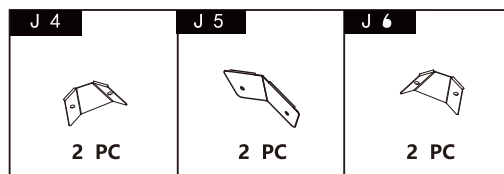

GARVEE
support@garvee.com