


ASSEMBLY INSTRUCTIONS


TWIN BED

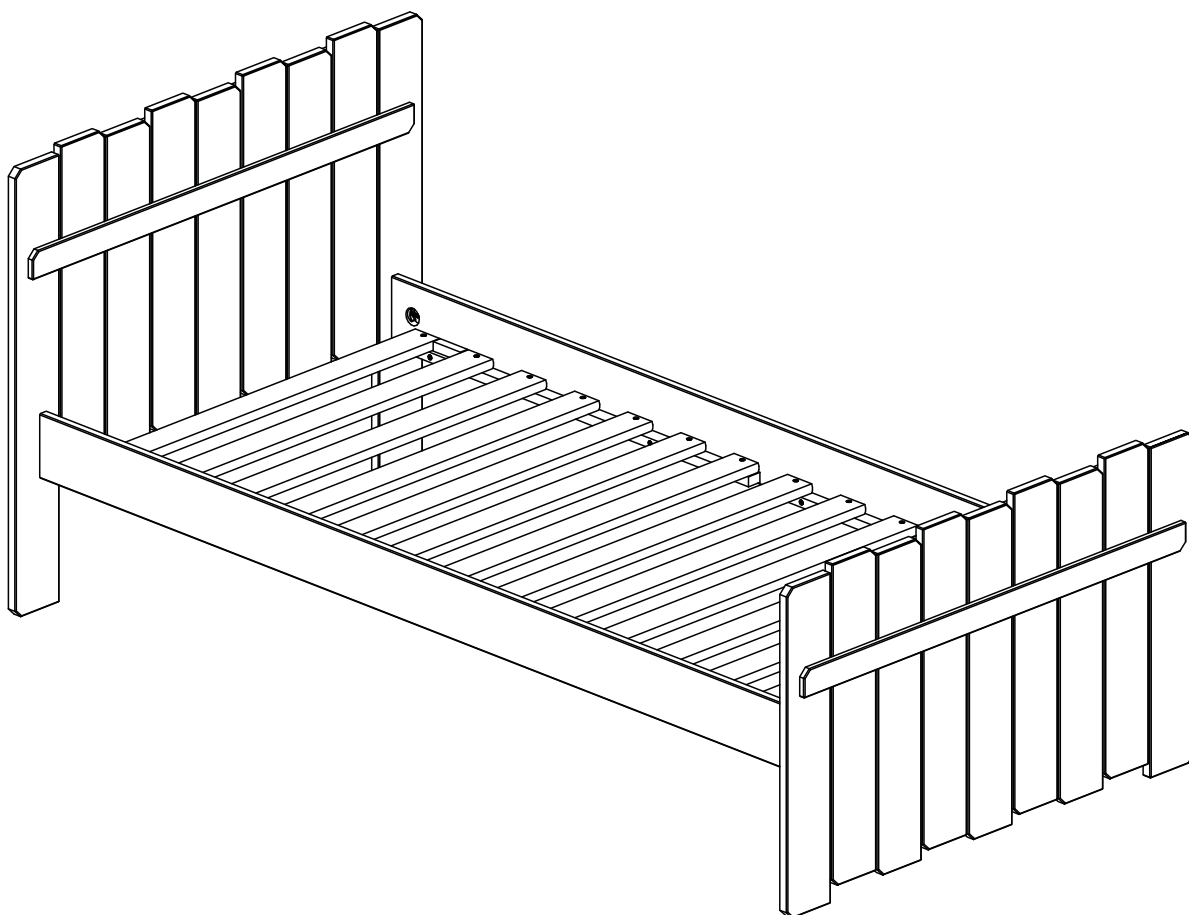



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

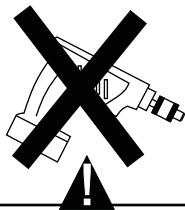


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

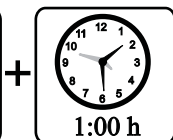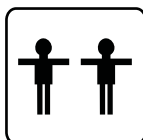

Tools Required



(Not included)




(Not included)







IMPORTANT:

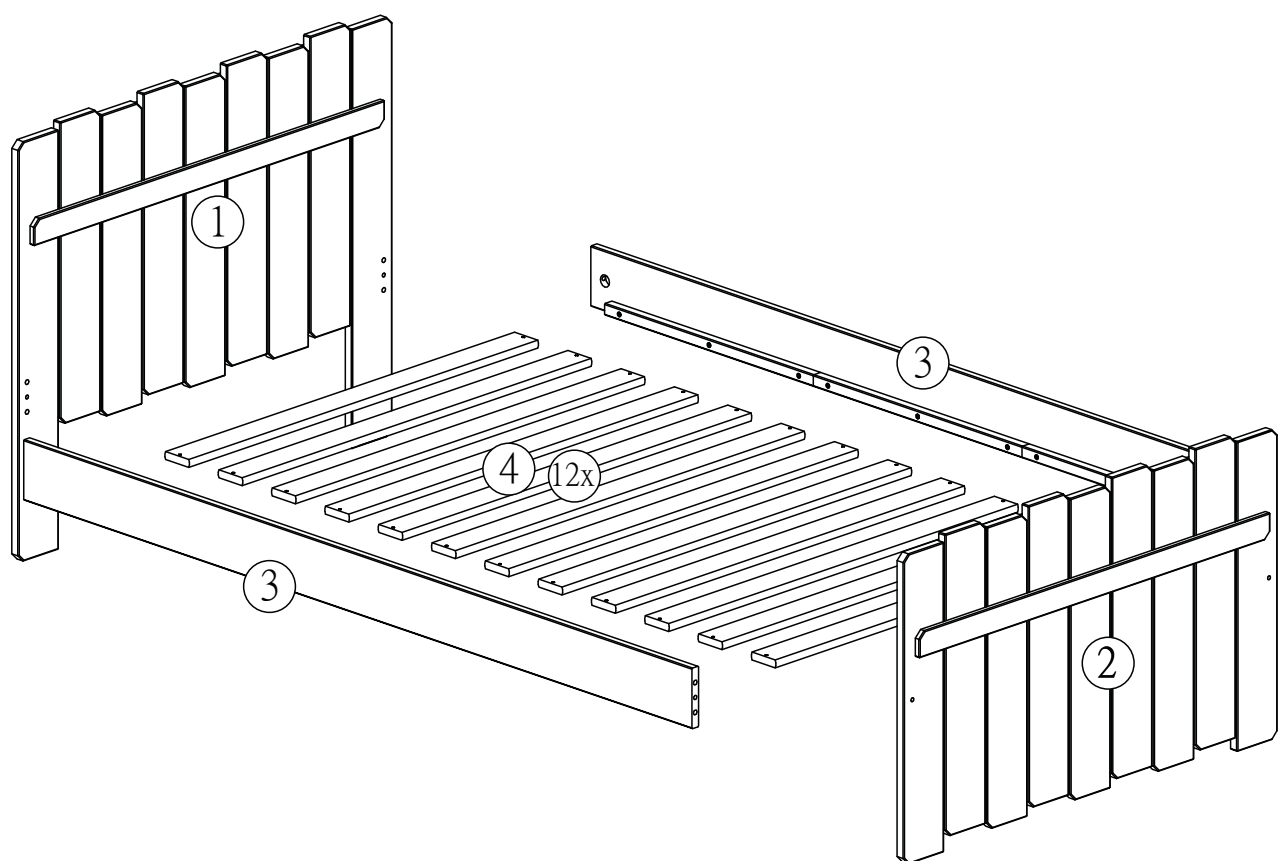PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Part List - TWIN BED






Identifying the Hardware-Identify the hardware using the illustrations below.

A  10 x 40 Wood Dowel Qty 08	B  1/4 x 60 Screw Qty 04	C  1/4" Half Moon Qty 04
D  4,0 x 30 Screw Qty 24	E  Hex Screwdriver Qty 01	F  Spacer Qty 02


01


x2

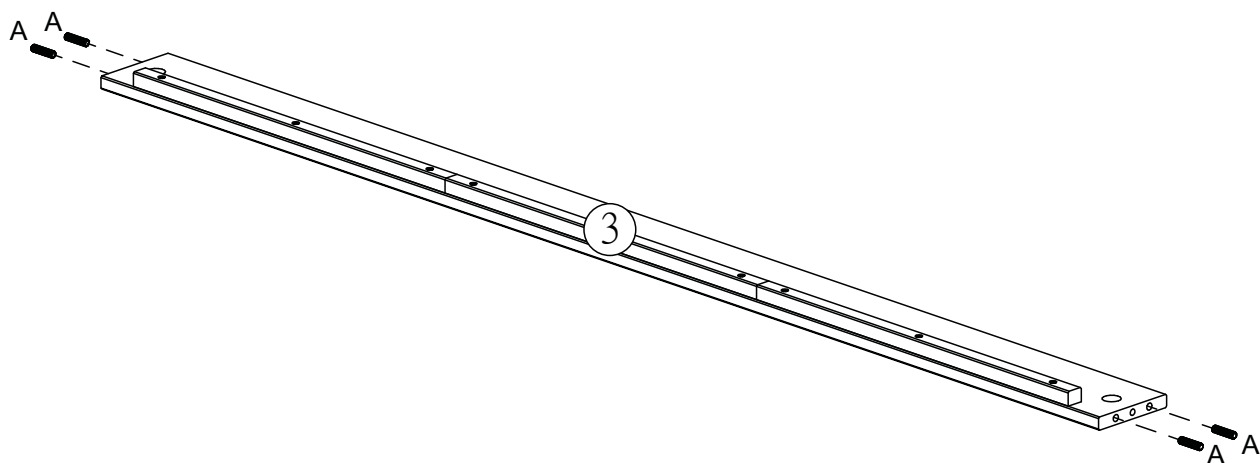

A  **Qty 08**
10 x 40 Wood Dowel

02



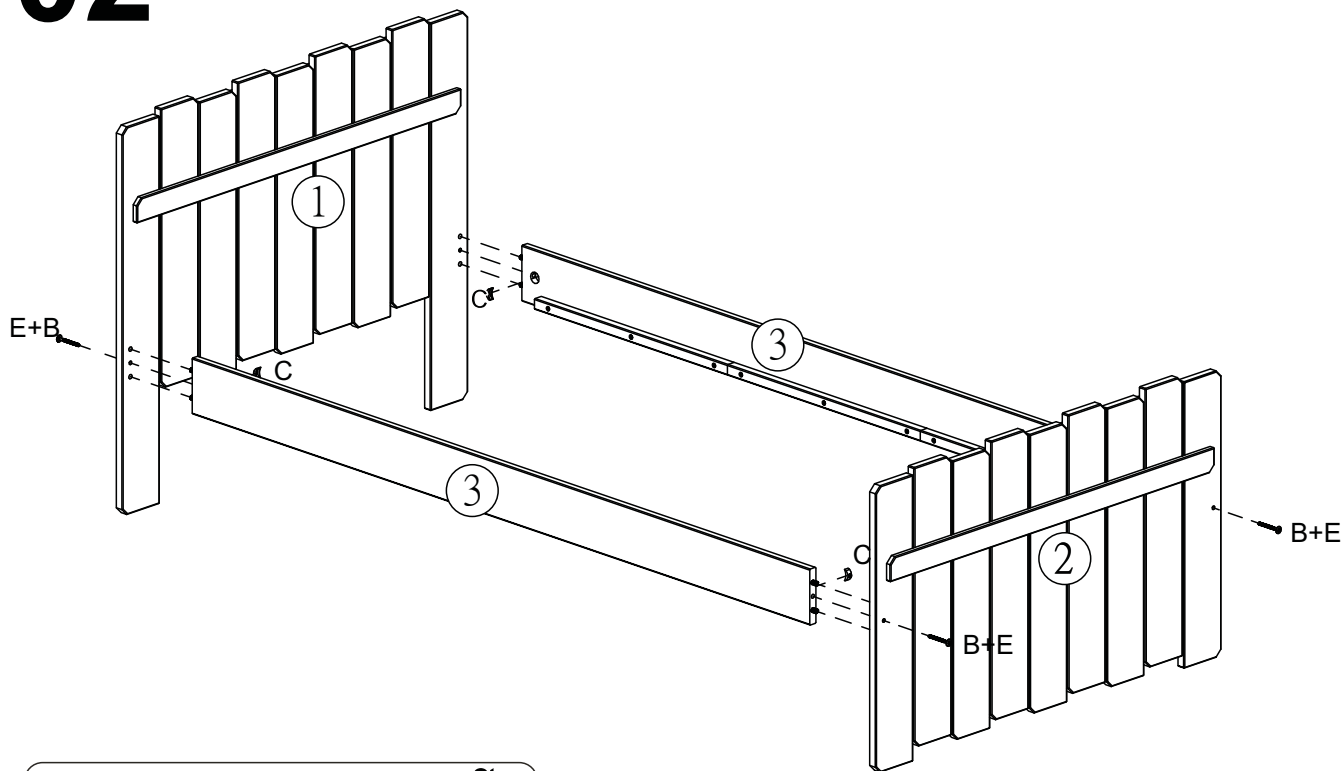



B  **Qty 04**
1/4 x 60 Screw


C  **Qty 04**
1/4" Half Moon

E  **Qty 01**
Hex Screwdriver

03

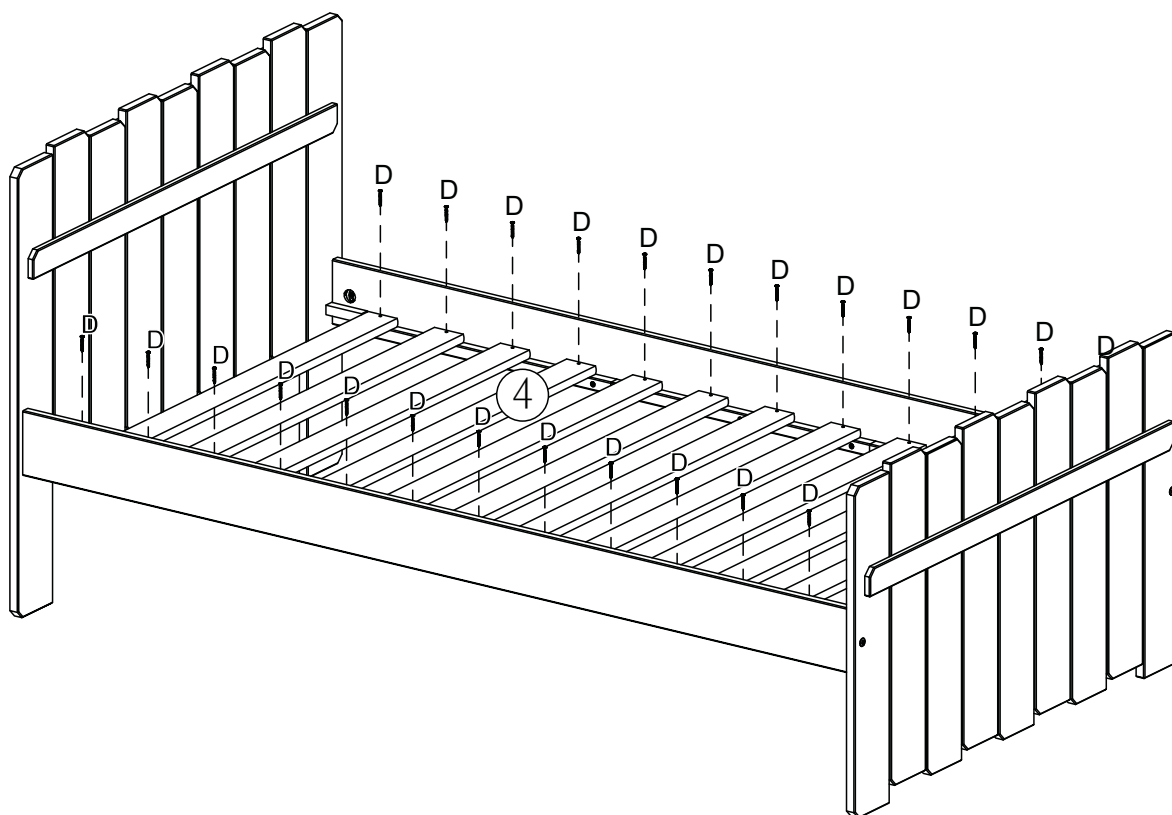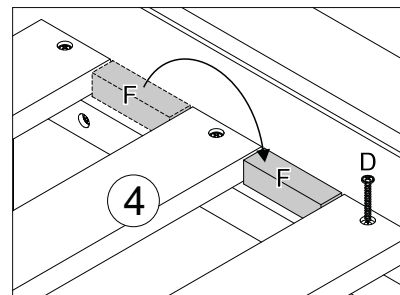


D  4,0 x 30 Screw Qty **24**

F  Spacer Qty **02**

ASSEMBLY INSTRUCTIONS

2 DRAWERS FOR TWIN BED

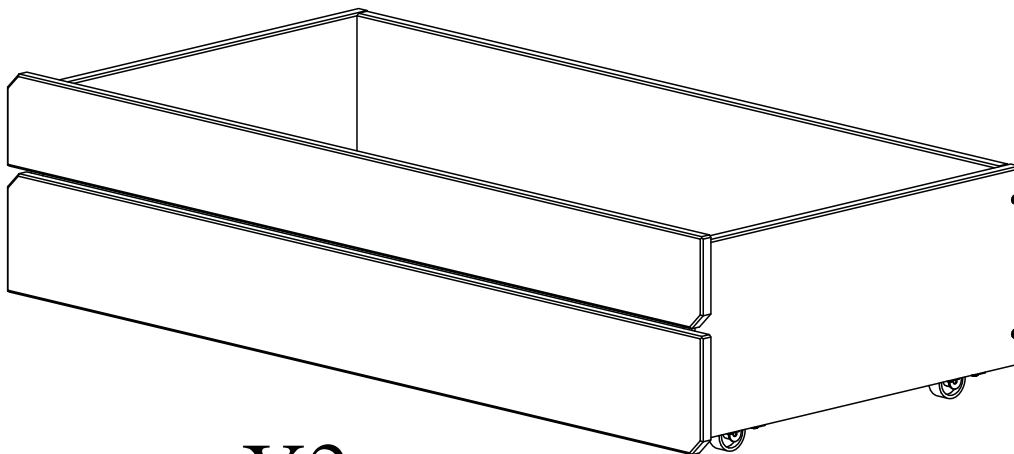


X2

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

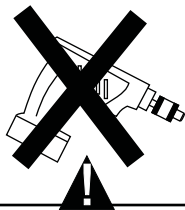


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.




+

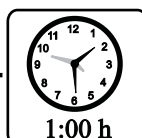

Tools Required



(Not included)




(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY


Part List - 2 DRAWERS FOR TWIN BED


X2

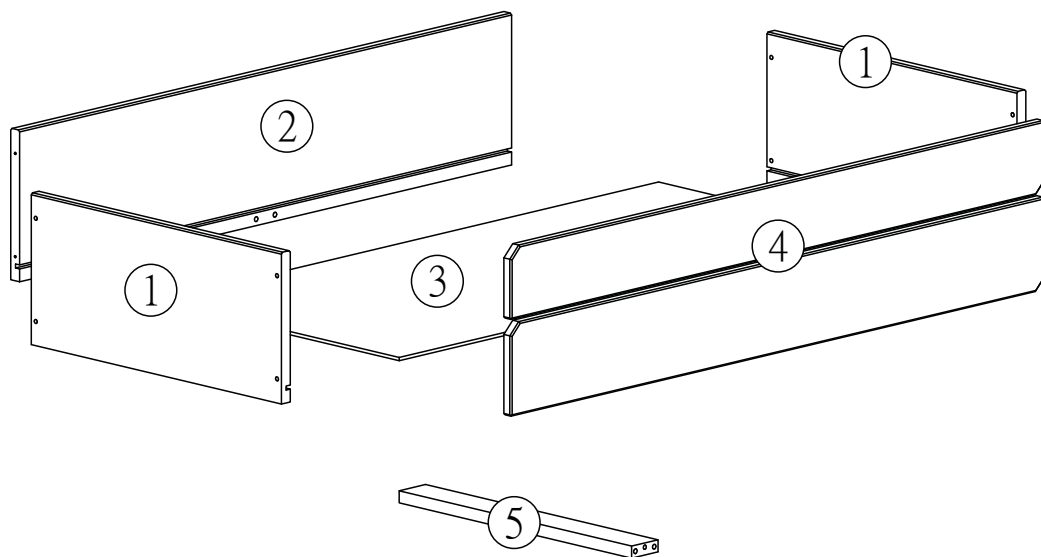


Identifying the Hardware-Identify the hardware using the illustrations below.

A  Qty
6 x 30 Wood Dowel **08**



B  Qty
4,0 x 30 Screw **20**

C  Qty
08

D  Qty
3,0 x 16 Screw **32**

01




X2

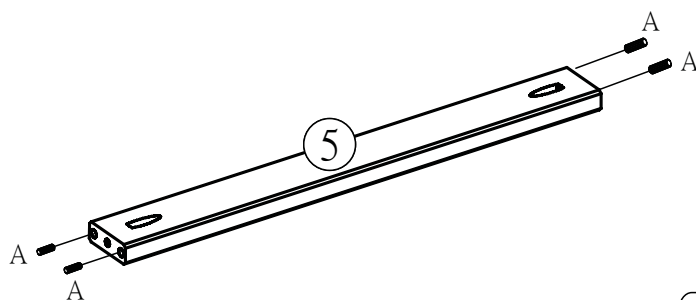


A  **Qty 08**
6 x 30 Wood Dowel

02


X2

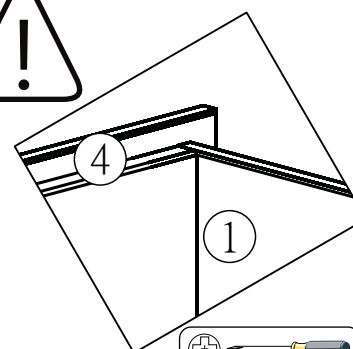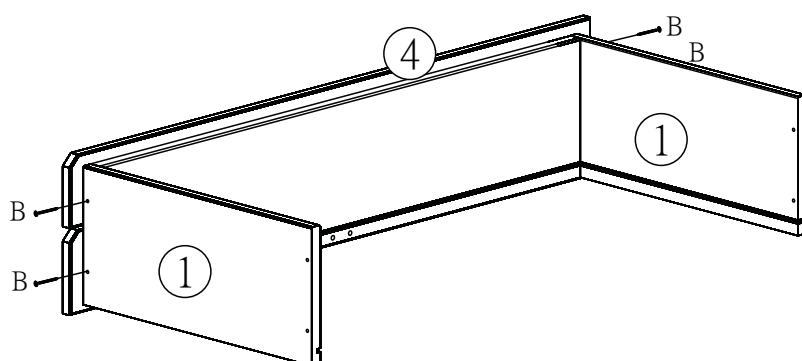

B  **Qty 08**
4,0 x 30 Screw



03


X2

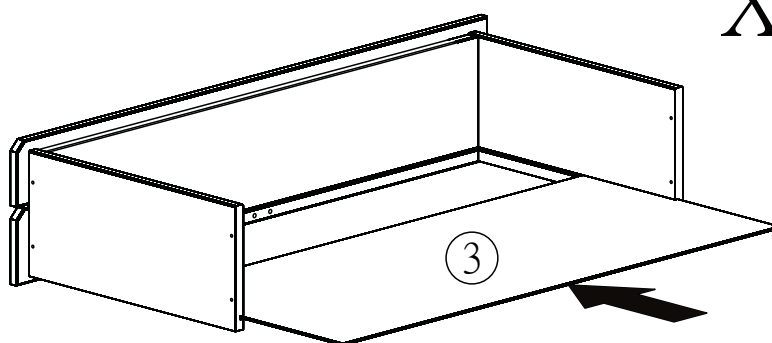

04



X2

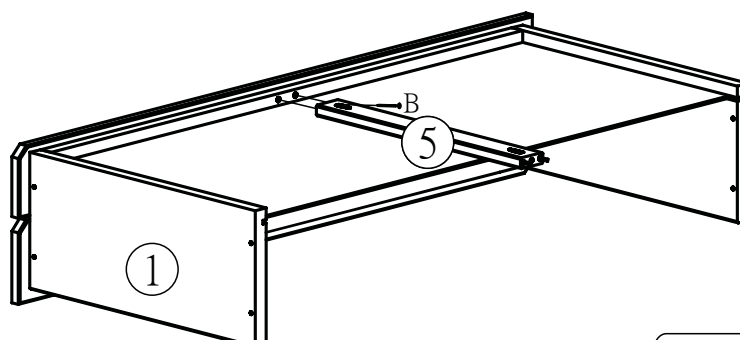


B  **Qty 02**
4,0 x 30 Screw

05


X2

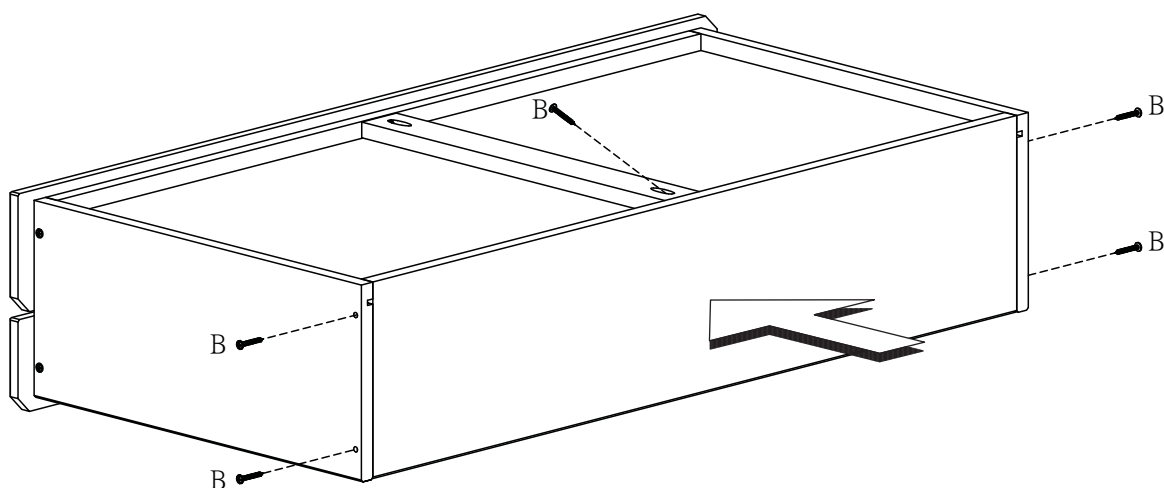


B  **4,0 x 30 Screw** Qty **10**

06

X2

C  Qty **08**

D  **3,0 x 16 Screw** Qty **32**

