

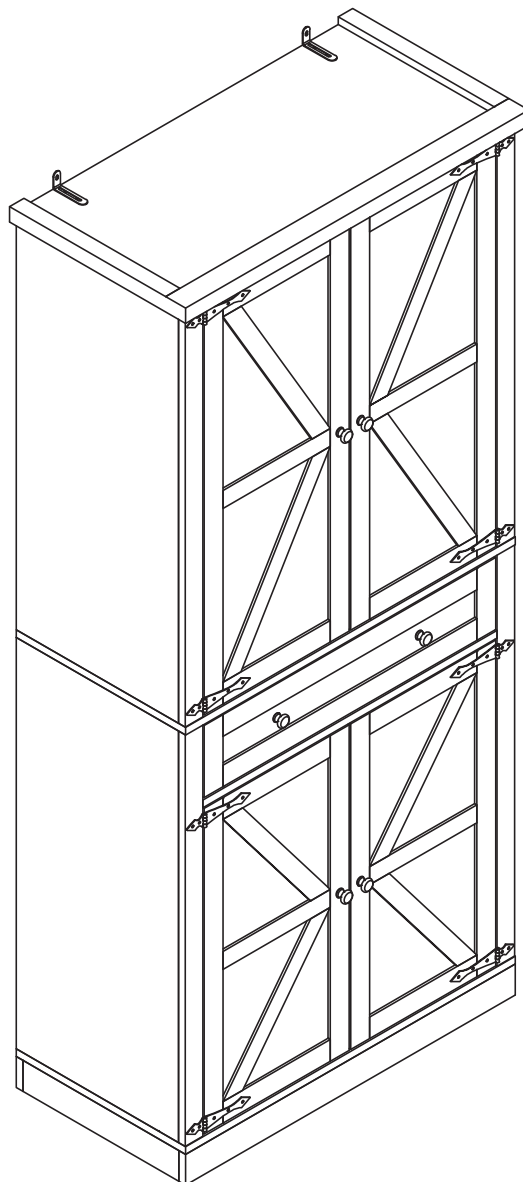
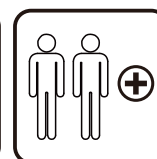
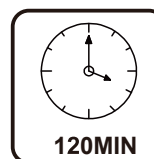


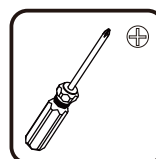

HLG027

Version:2.0

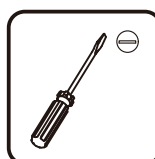

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

. THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!



---NEED HELP WITH YOUR FURNITURE?---

Scan the QR code to contact us!



If you're experiencing any issues—whether due to shipping, assembly, or any other reason
—we're here to help.
For any damaged or missing components, we're happy to provide FREE replacement parts.




WhatsApp

Email: support@anymaple.com


WANT TO CONTACT US THROUGH AMAZON?

- ▶ Log in to your Amazon account.
- ▶ Go to “Your Orders” and locate your furniture order.
- ▶ Click on “Get Help with Order” to send us a message directly.


Our customer support team is ready to assist you and we will respond within
12-24 HOURS to resolve your concerns quickly!

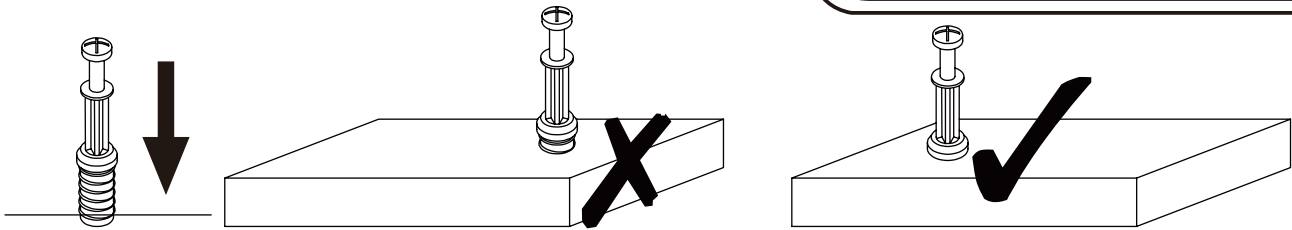


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

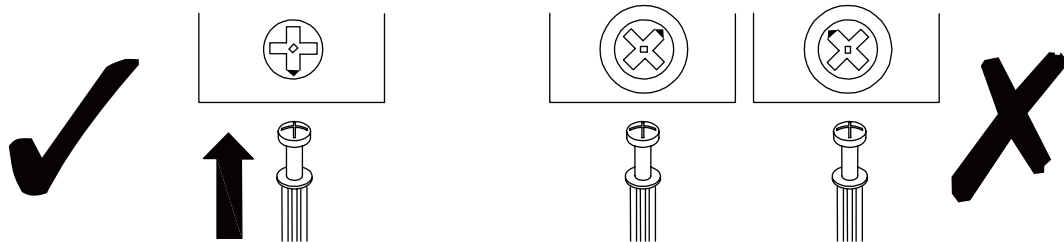









EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.









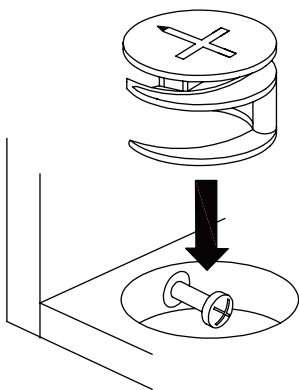










EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

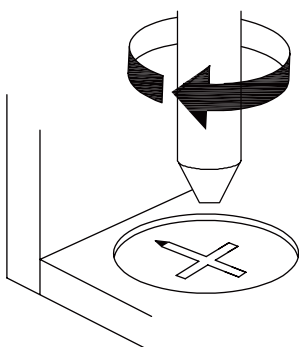


EN_Turn cam lock clockwise to tighten.

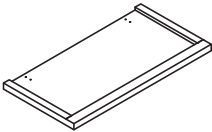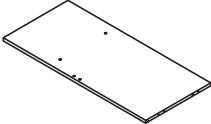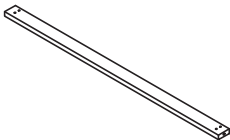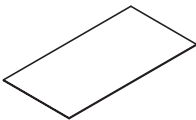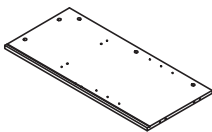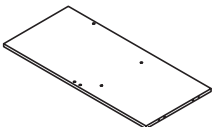NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x2	
④		x4	
⑤		x2	
⑥		x2	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x1	

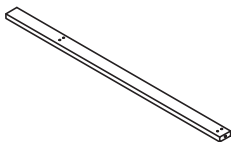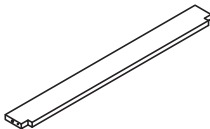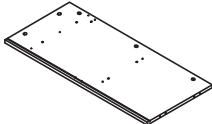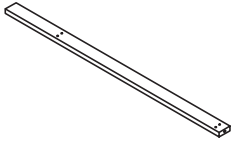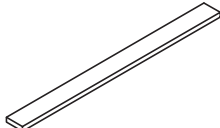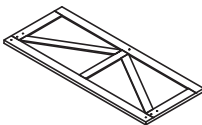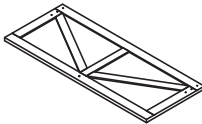NO.	PARTS	QTY	SPARE
⑪		x2	
⑫		x1	
⑬		x1	
⑭		x1	
⑮		x1	
⑯		x1	
⑰		x2	
⑱		x2	
⑲		x1	
⑳		x1	

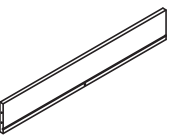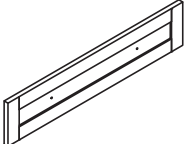
NO.	PARTS	QTY	SPARE
②1		x1	
②2		x1	
②3		x1	
②4		x1	
②5		x1	
②6		x1	
②7		x1	
②8		x1	
	 Hardware Kit	x1	

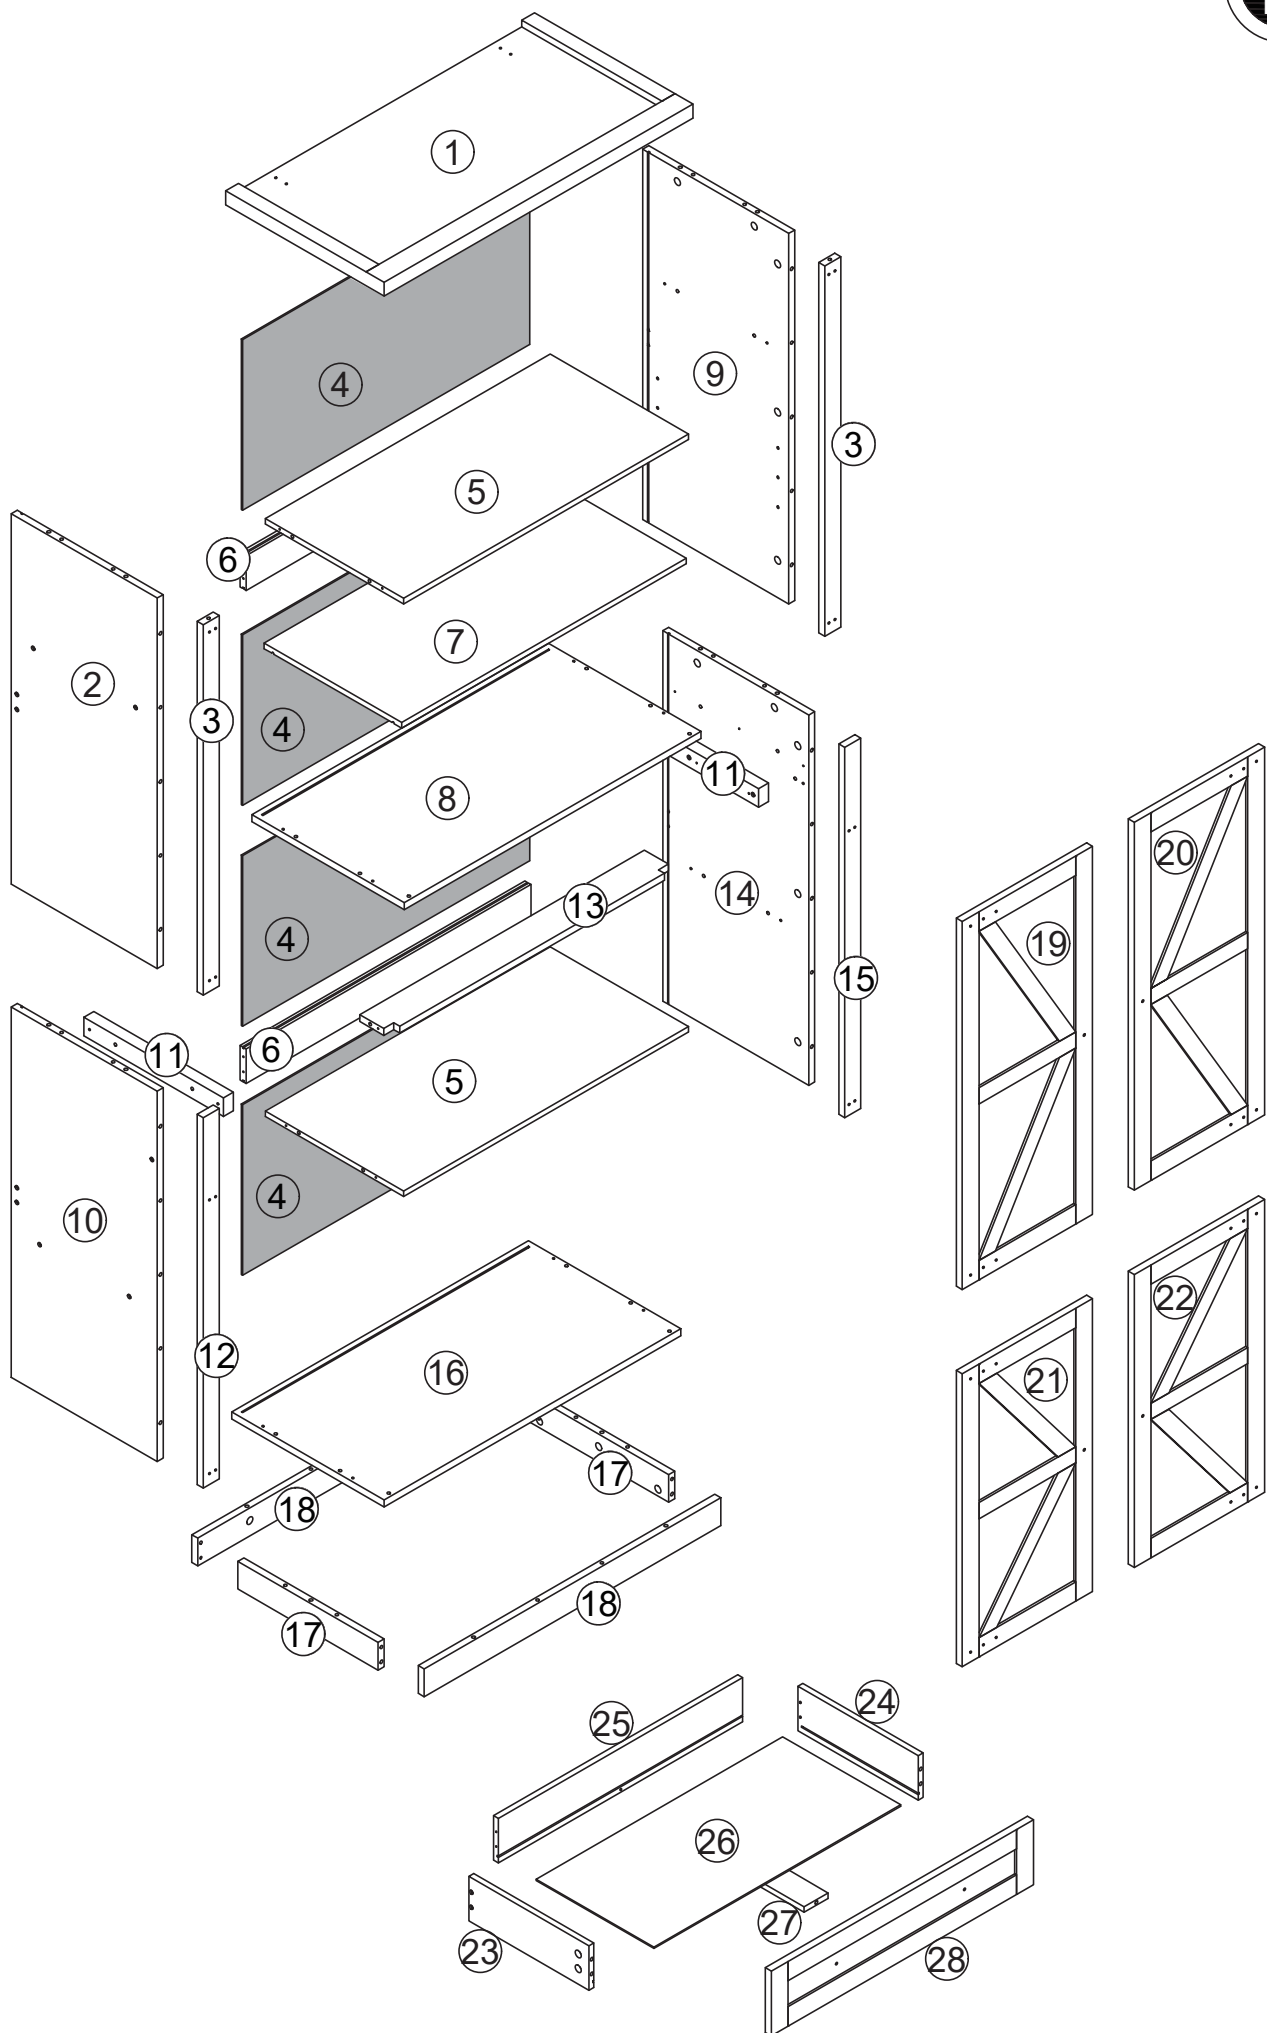

 A x35 Ø6x35mm +2(spare)	 B x35 Ø15x10mm +2(spare)	 C x56 Ø6x30mm +2(spare)	 D x33 Ø4x35mm +2(spare)	 E x12 Ø3.5x12mm +1(spare)	 F x40 Ø4x12mm +2(spare)
 G x2	 H x4	 I x4	 J x2	 K x6	 L x2
 M x4	 N x8	 O x16 Ø3x16mm +2(spare)	 P x18 Ø15mm +2(spare)	 Q x2 Ø6x30mm	 R x6 Ø4x30mm
 CL x1 L300mm	 CR x1 L300mm	 DL x1 L300mm	 DR x1 L300mm		

D x5

01


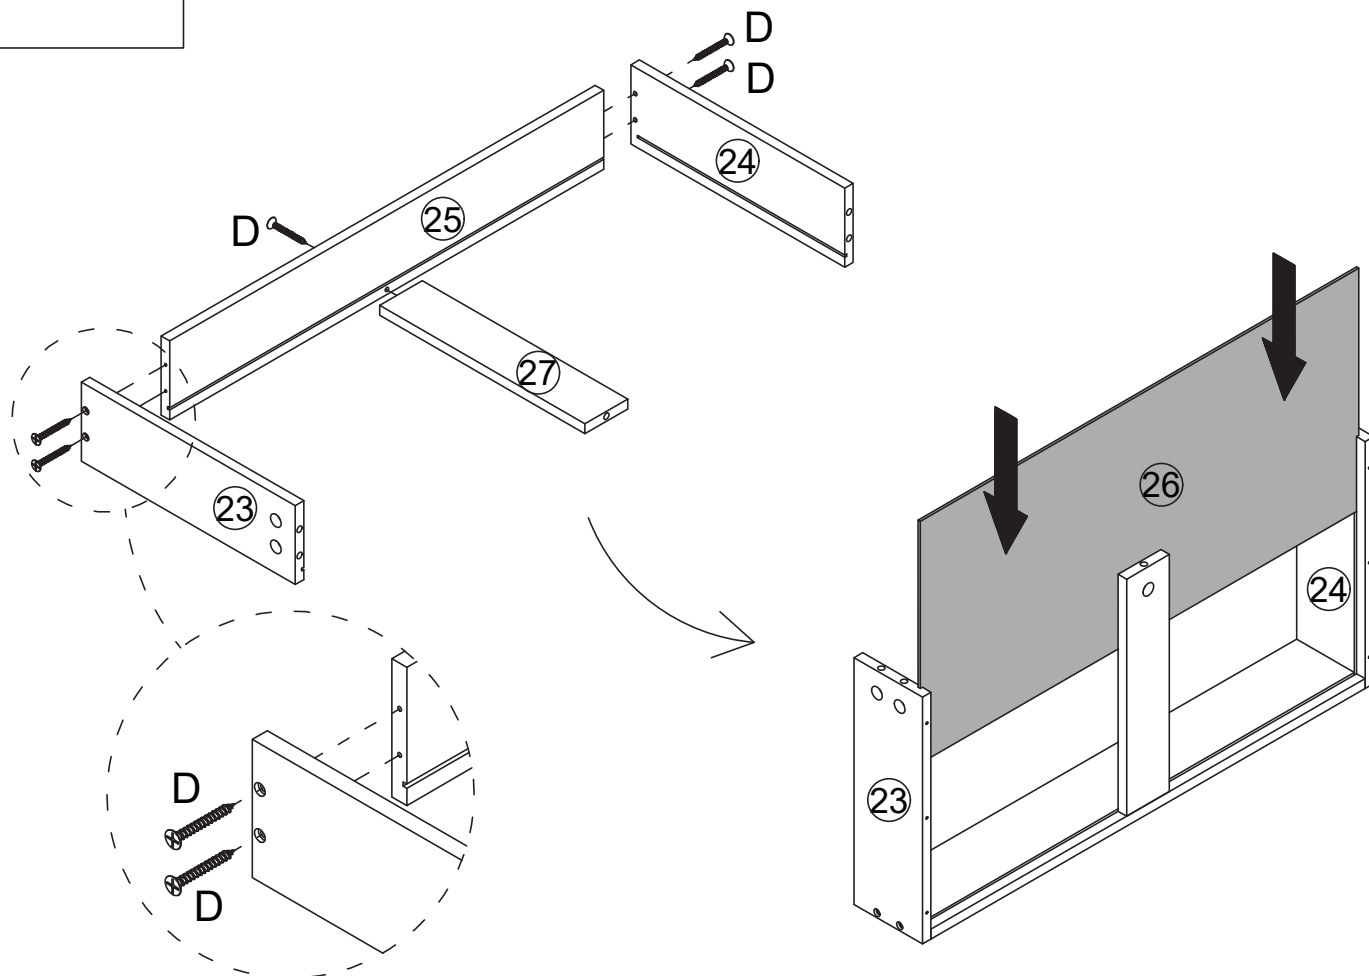


A x5







K x2

L x2

02

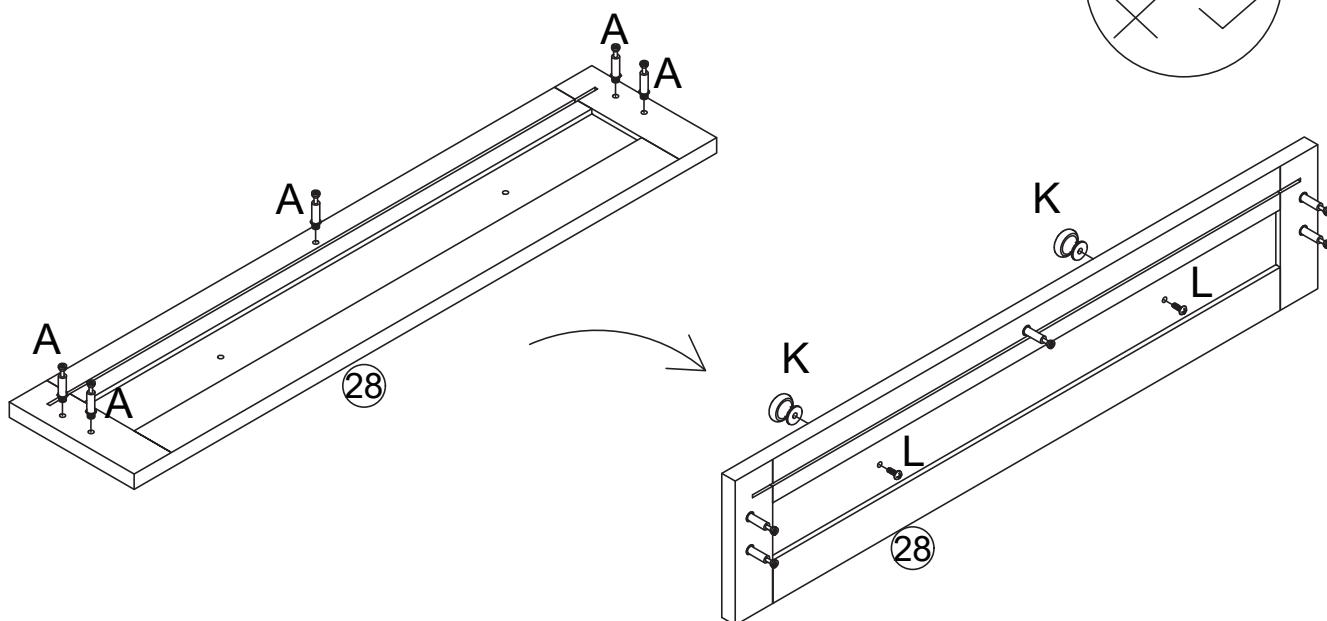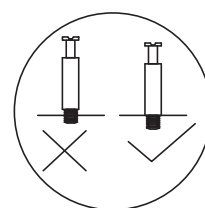



B x5 	E x6 	DL x1 	DR x1 
--	--	---	---

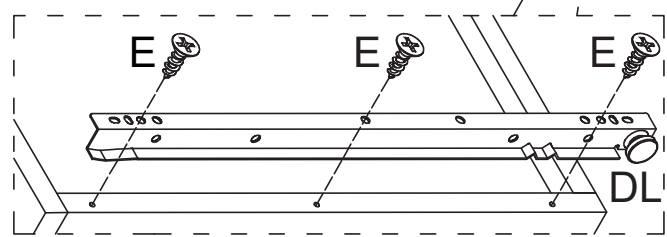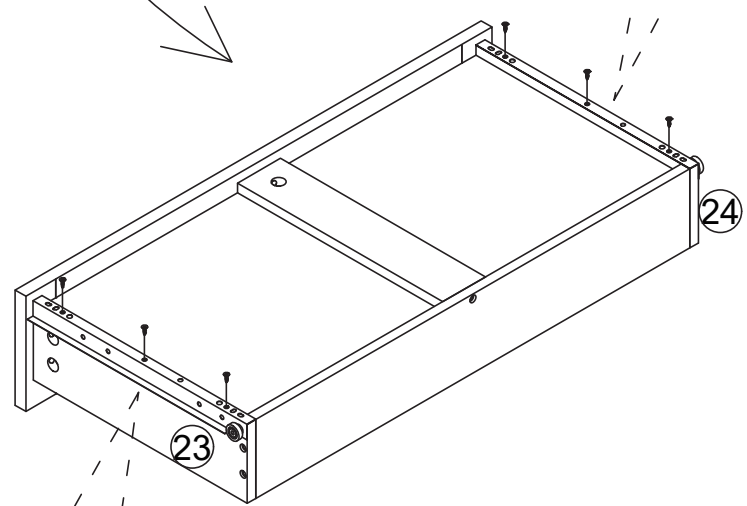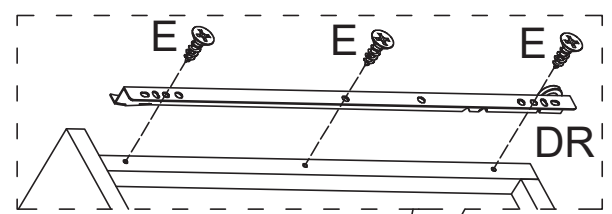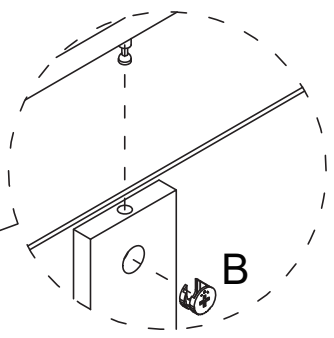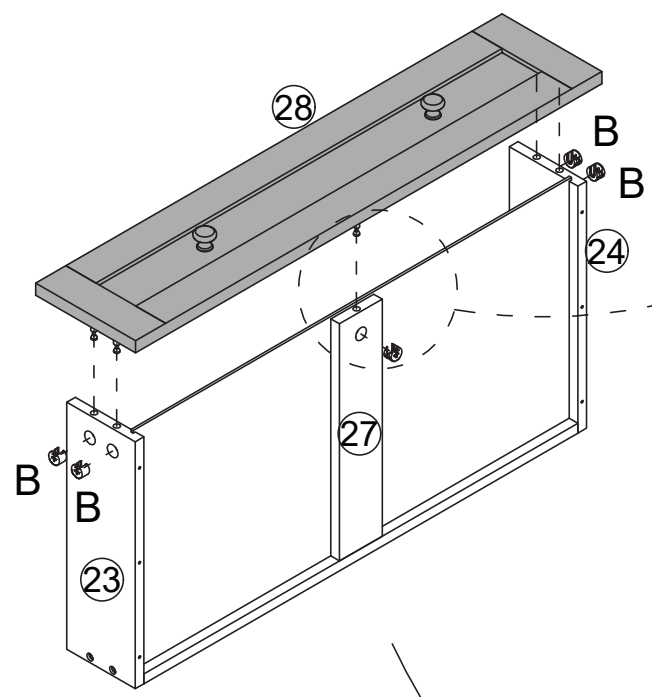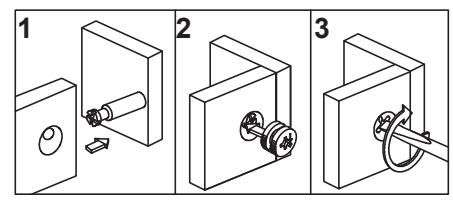

C x4

R x6

04

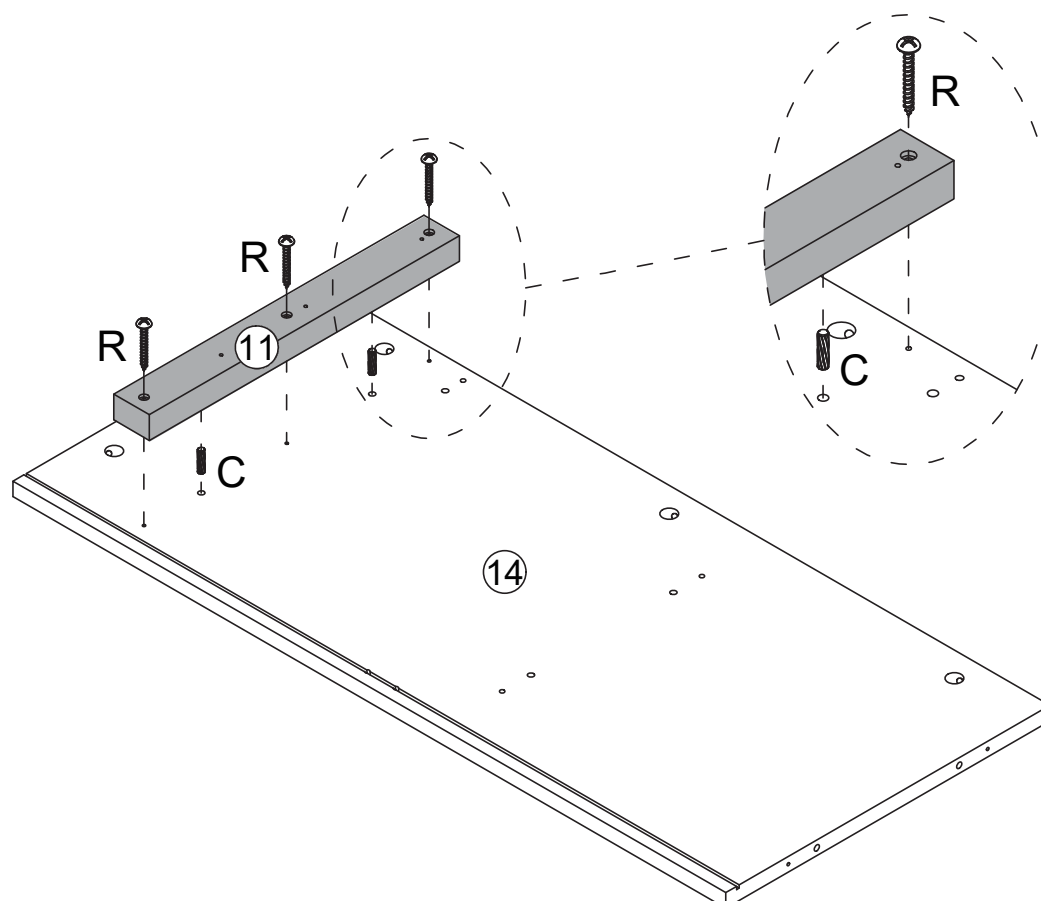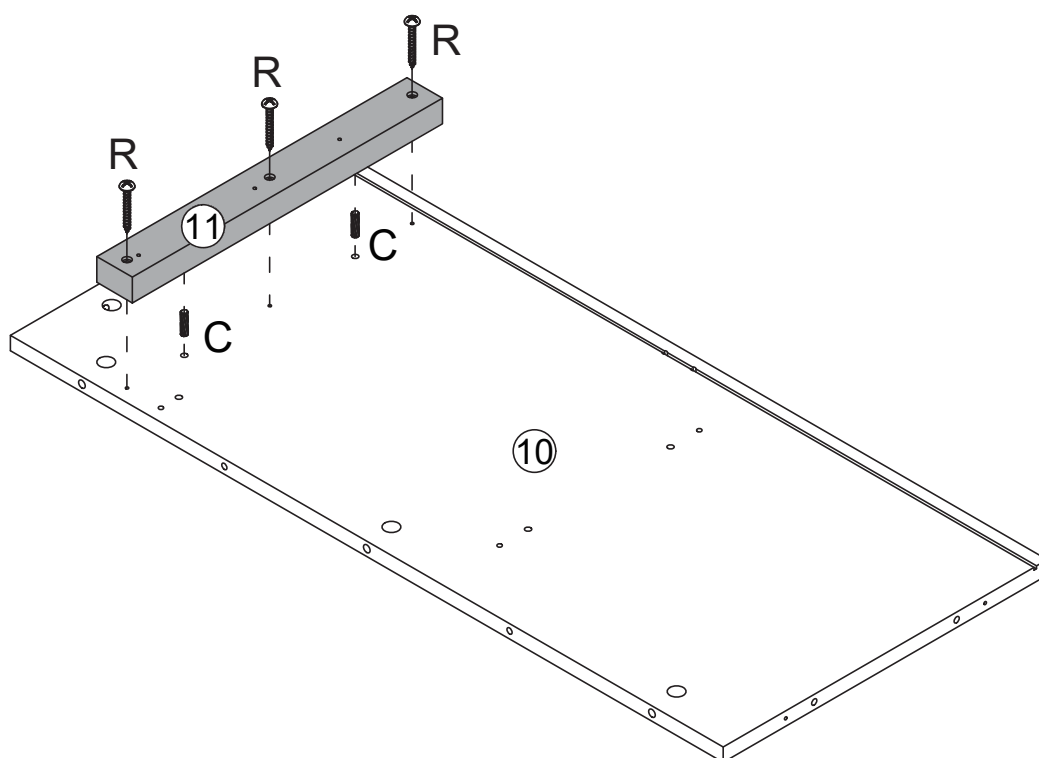





E x6




CL x1




CR x1

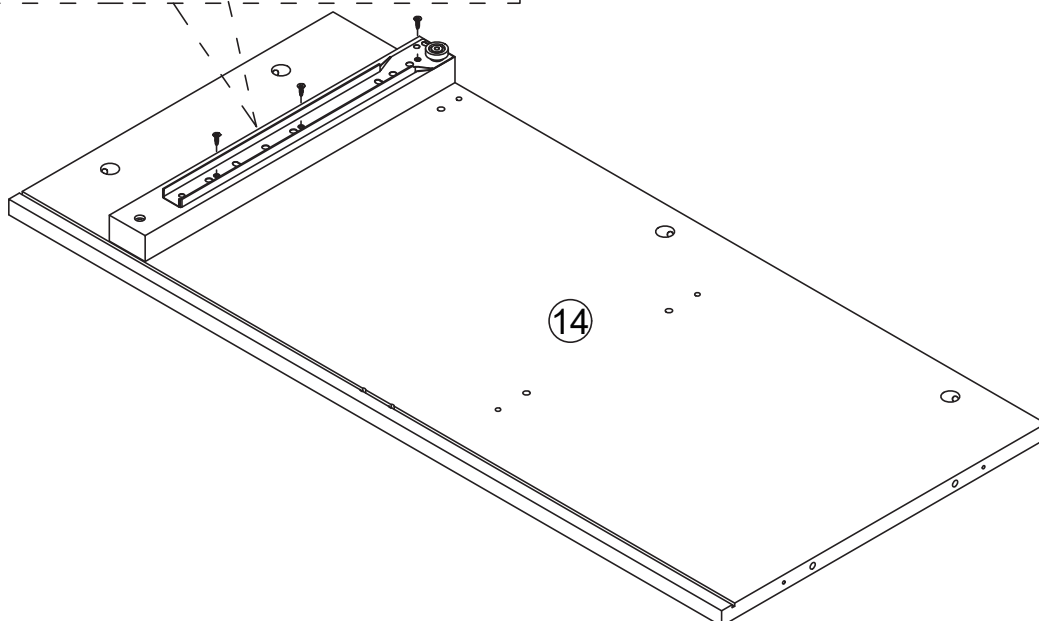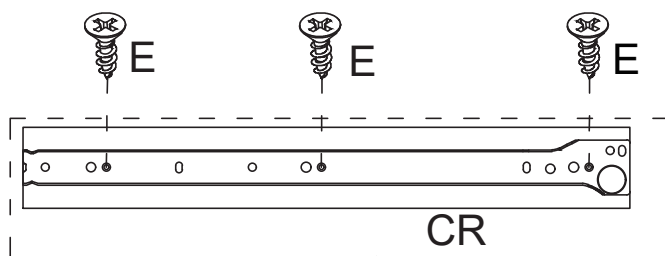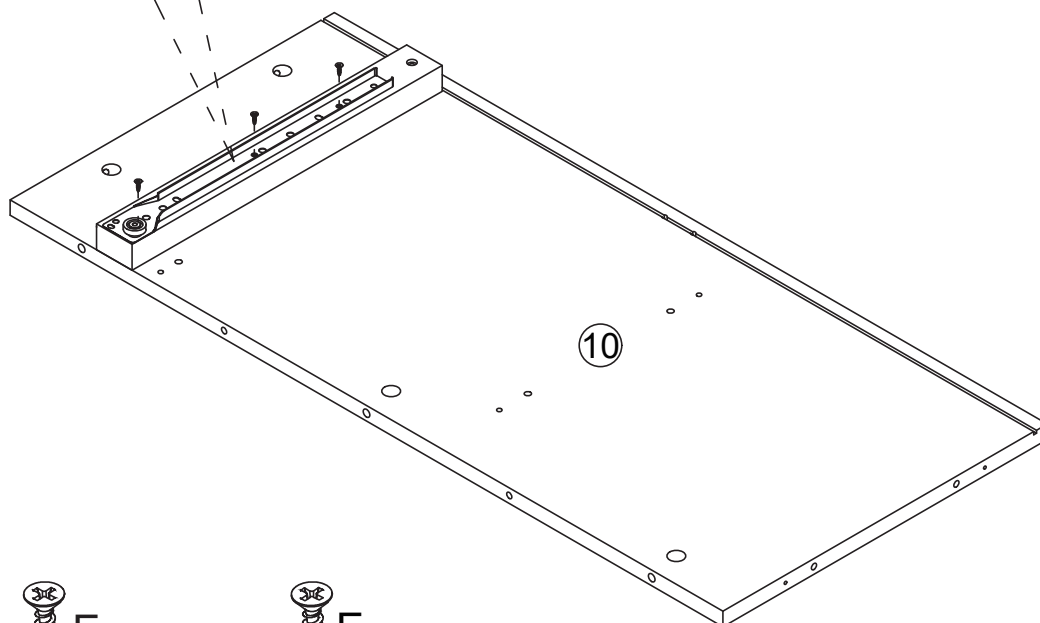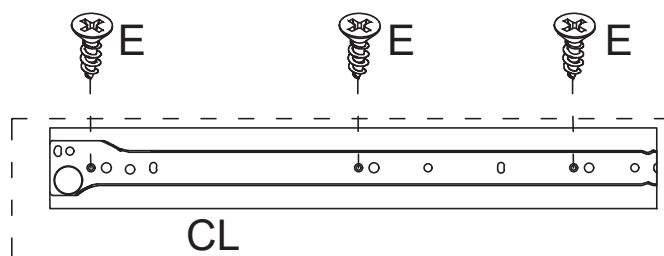

G x1



06

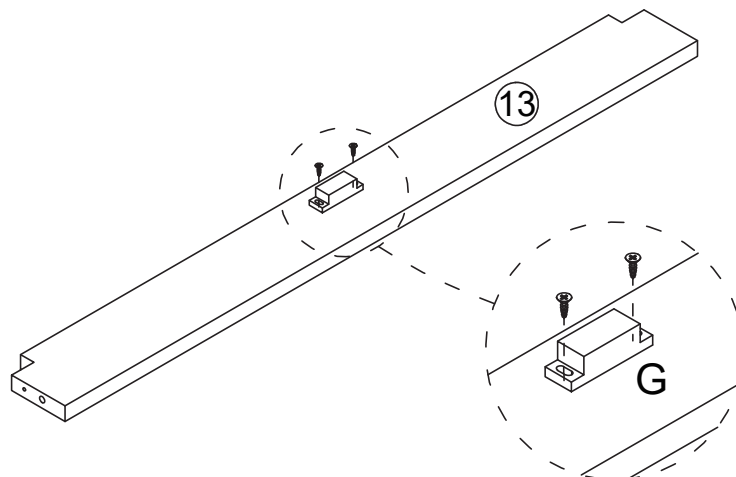


C x3



D x5




07

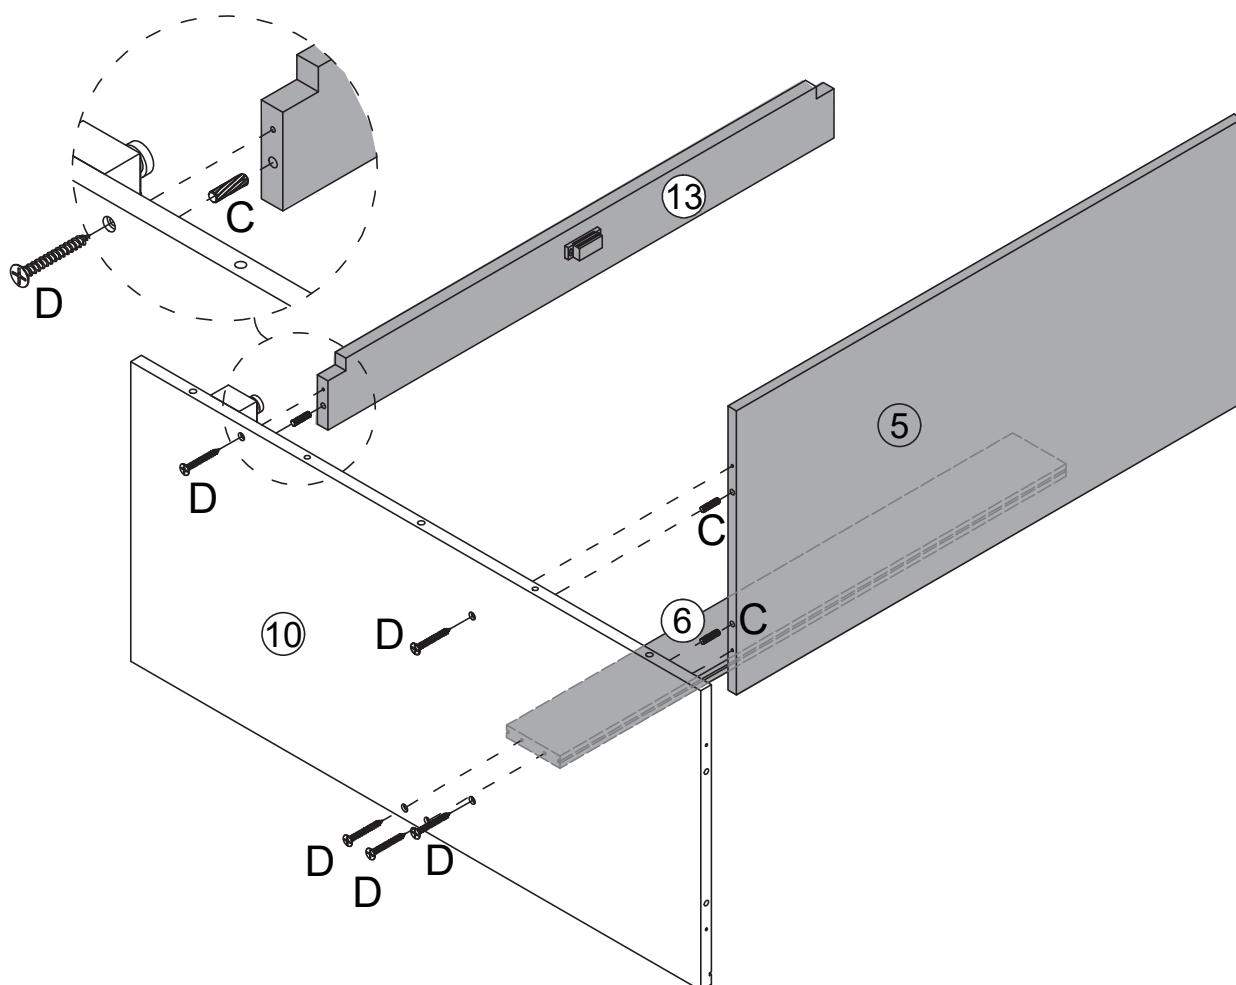




C x3

D x5

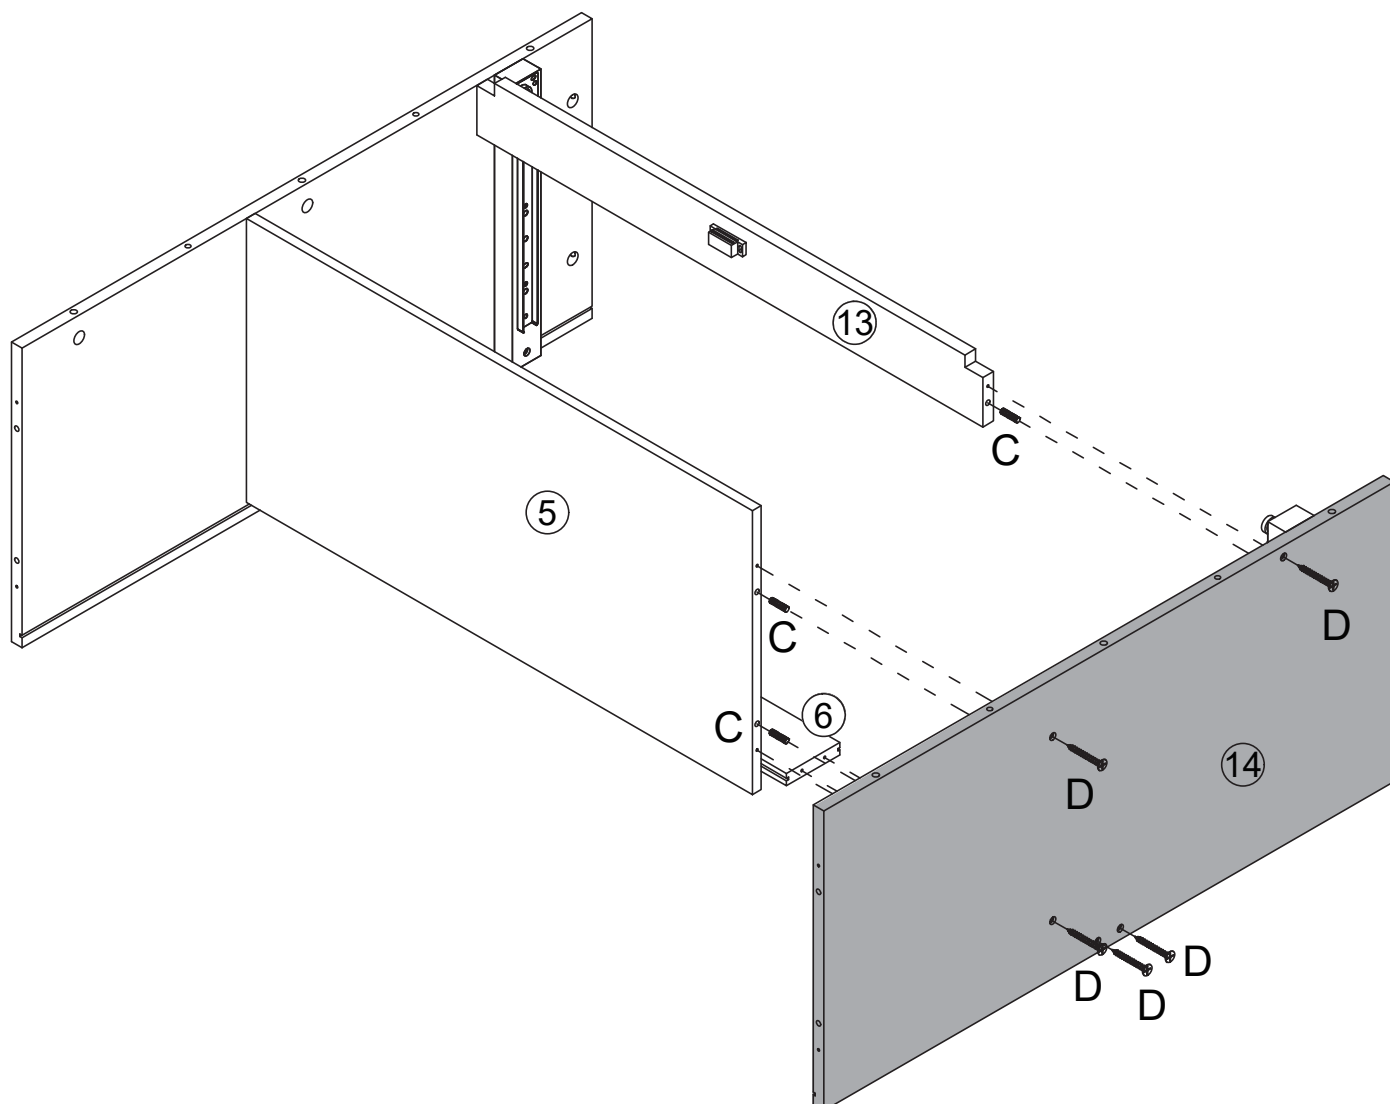



A x6

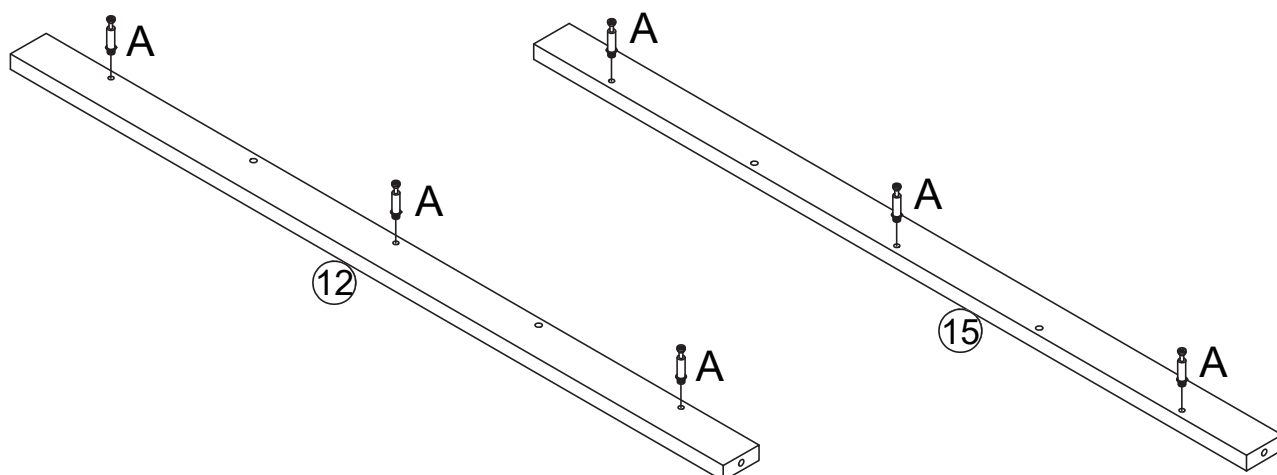

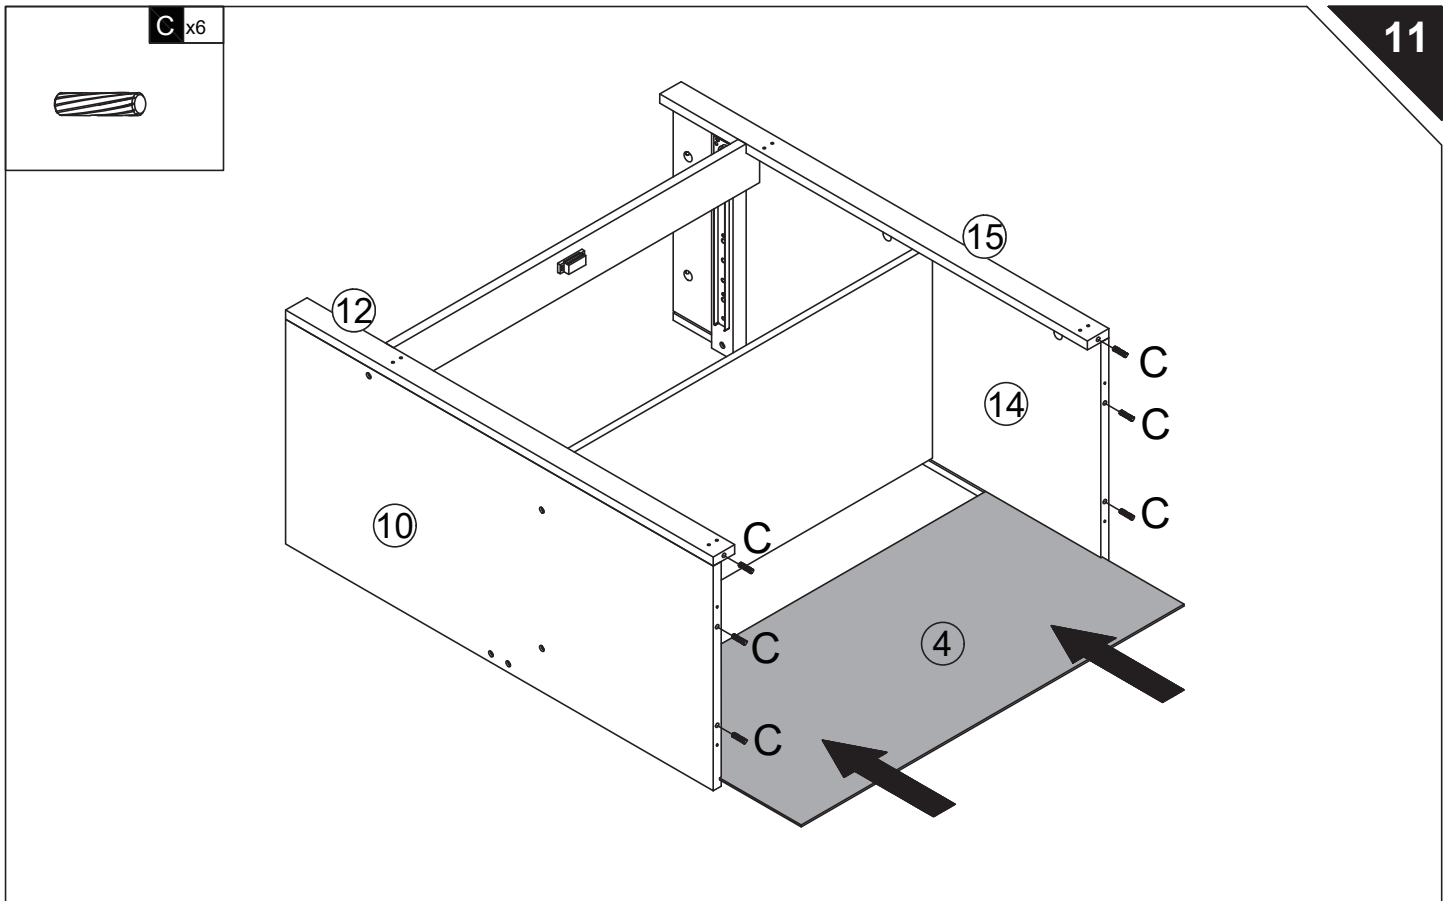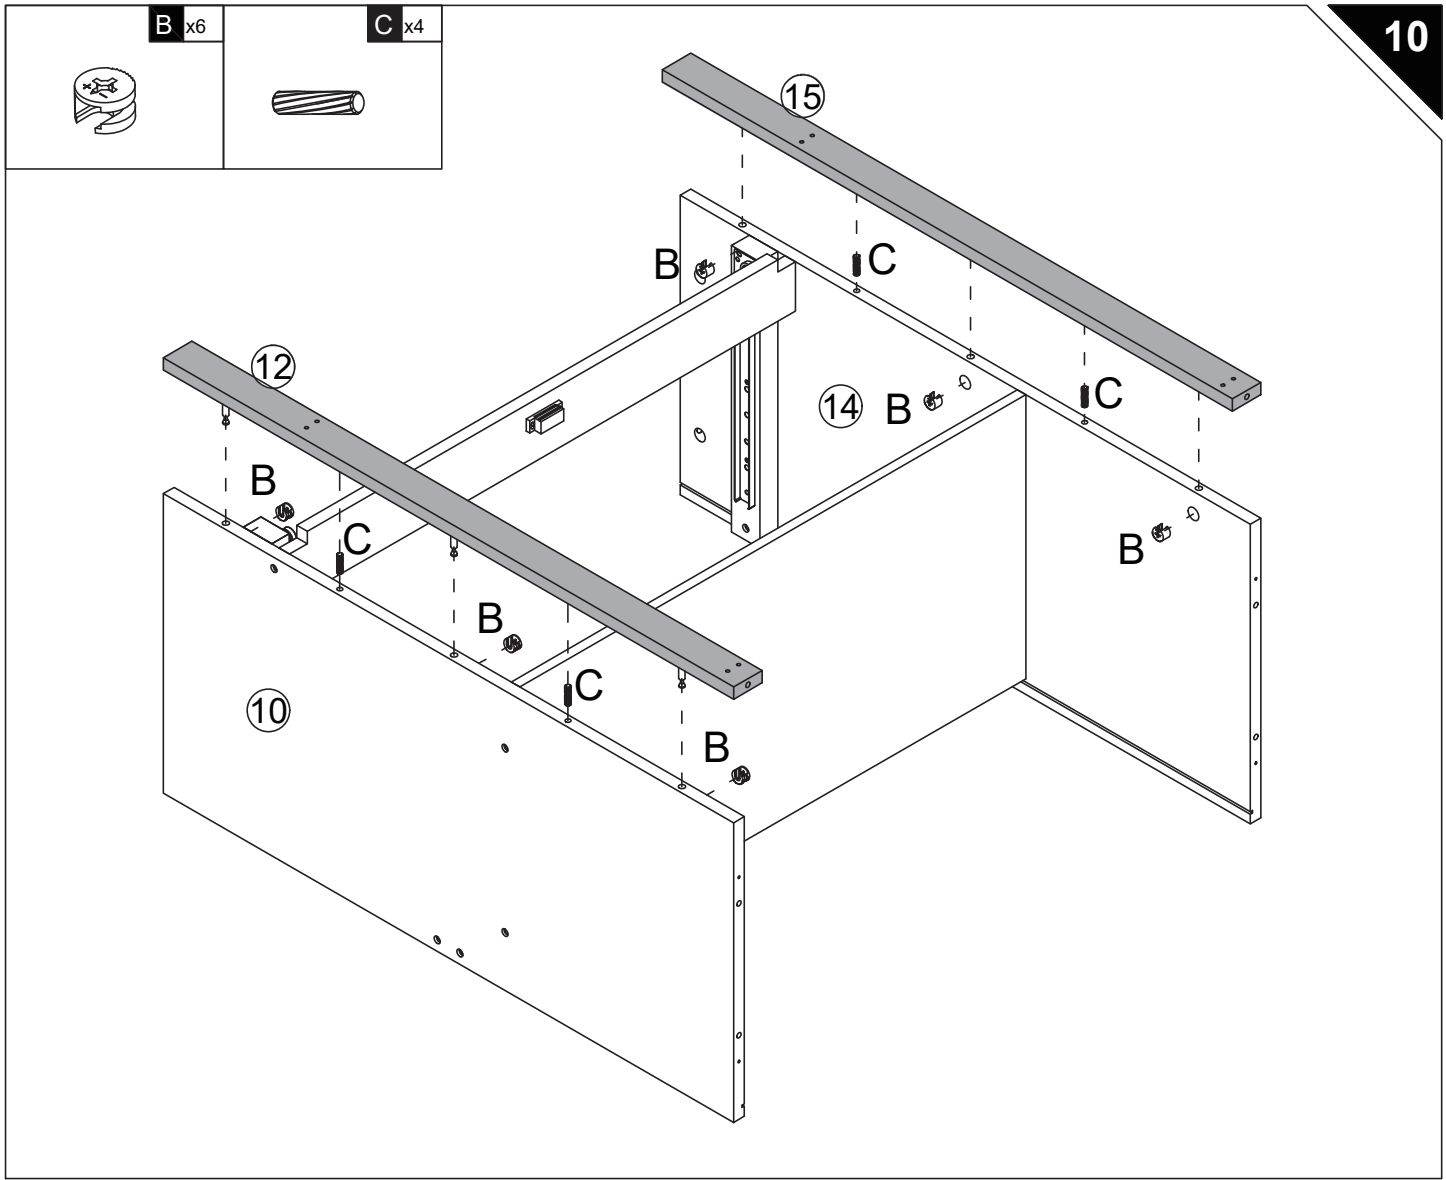

A x10


12

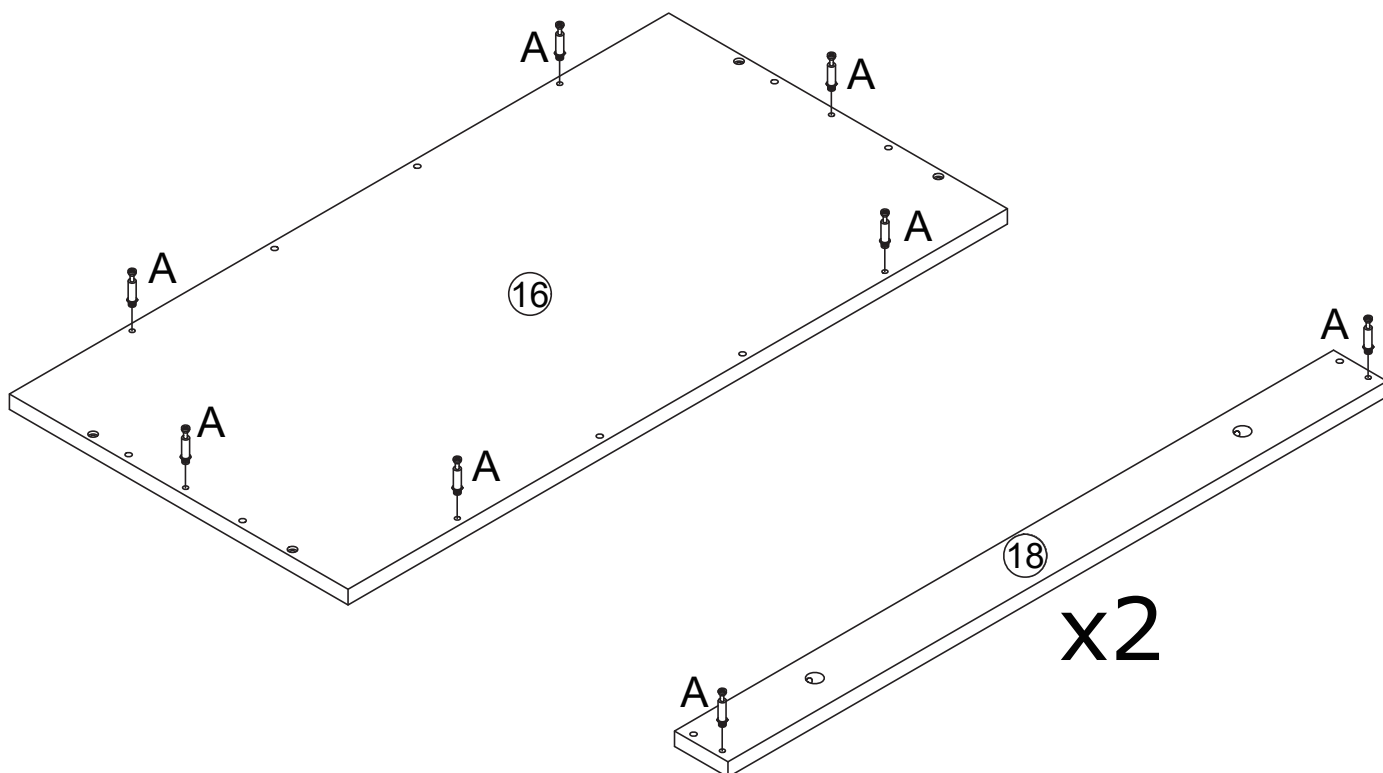

B x4

C x4


13

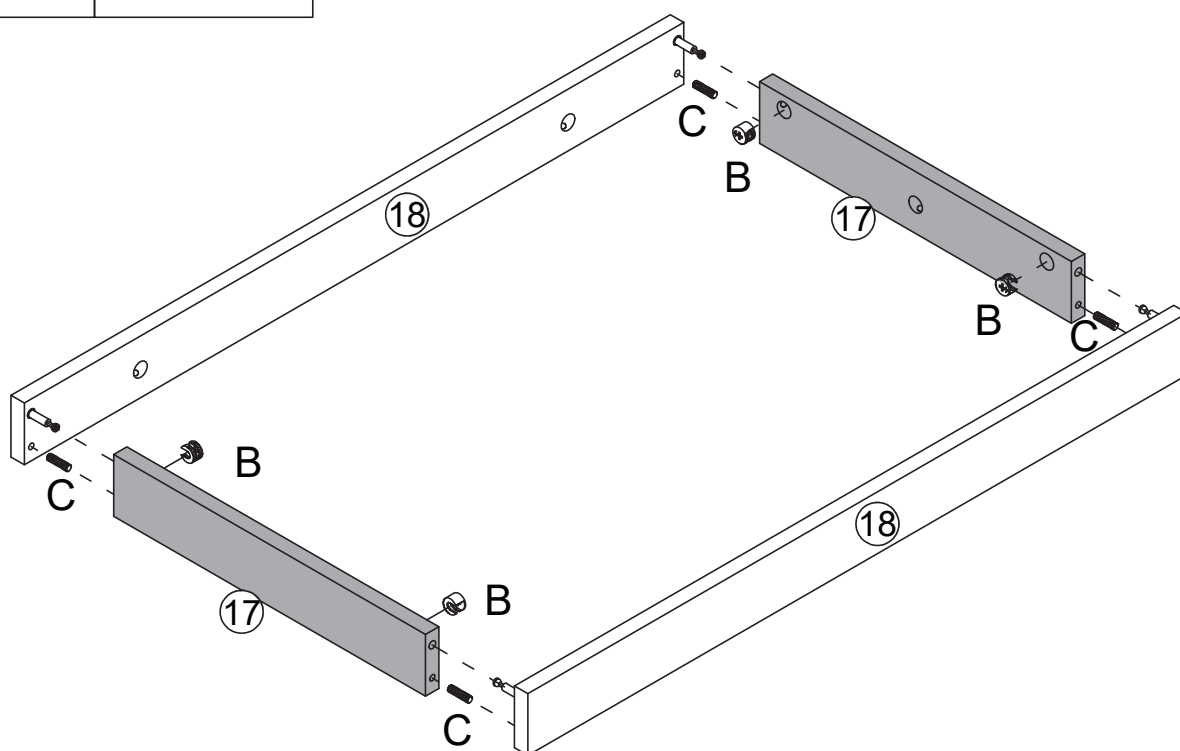

B x6


C x8




D x4

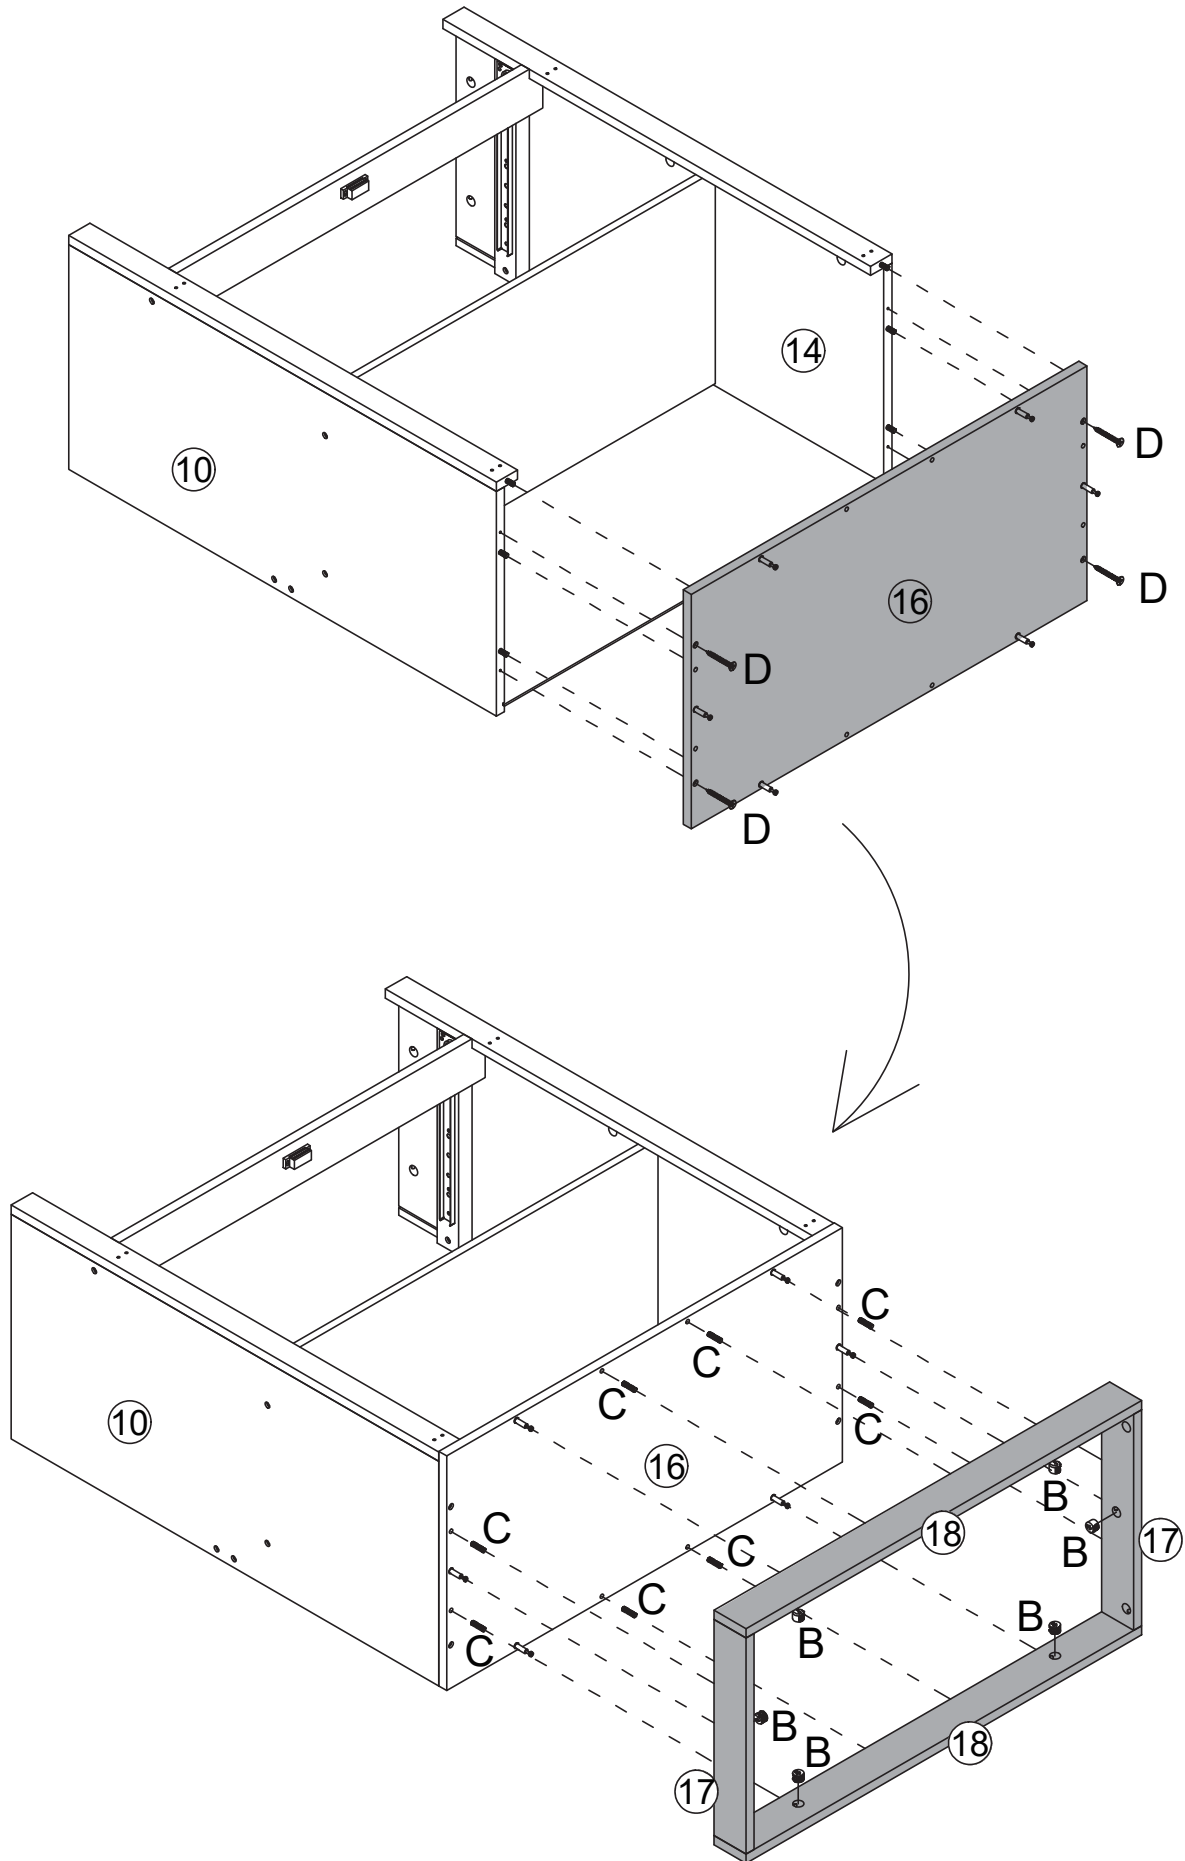

C x4

D x8

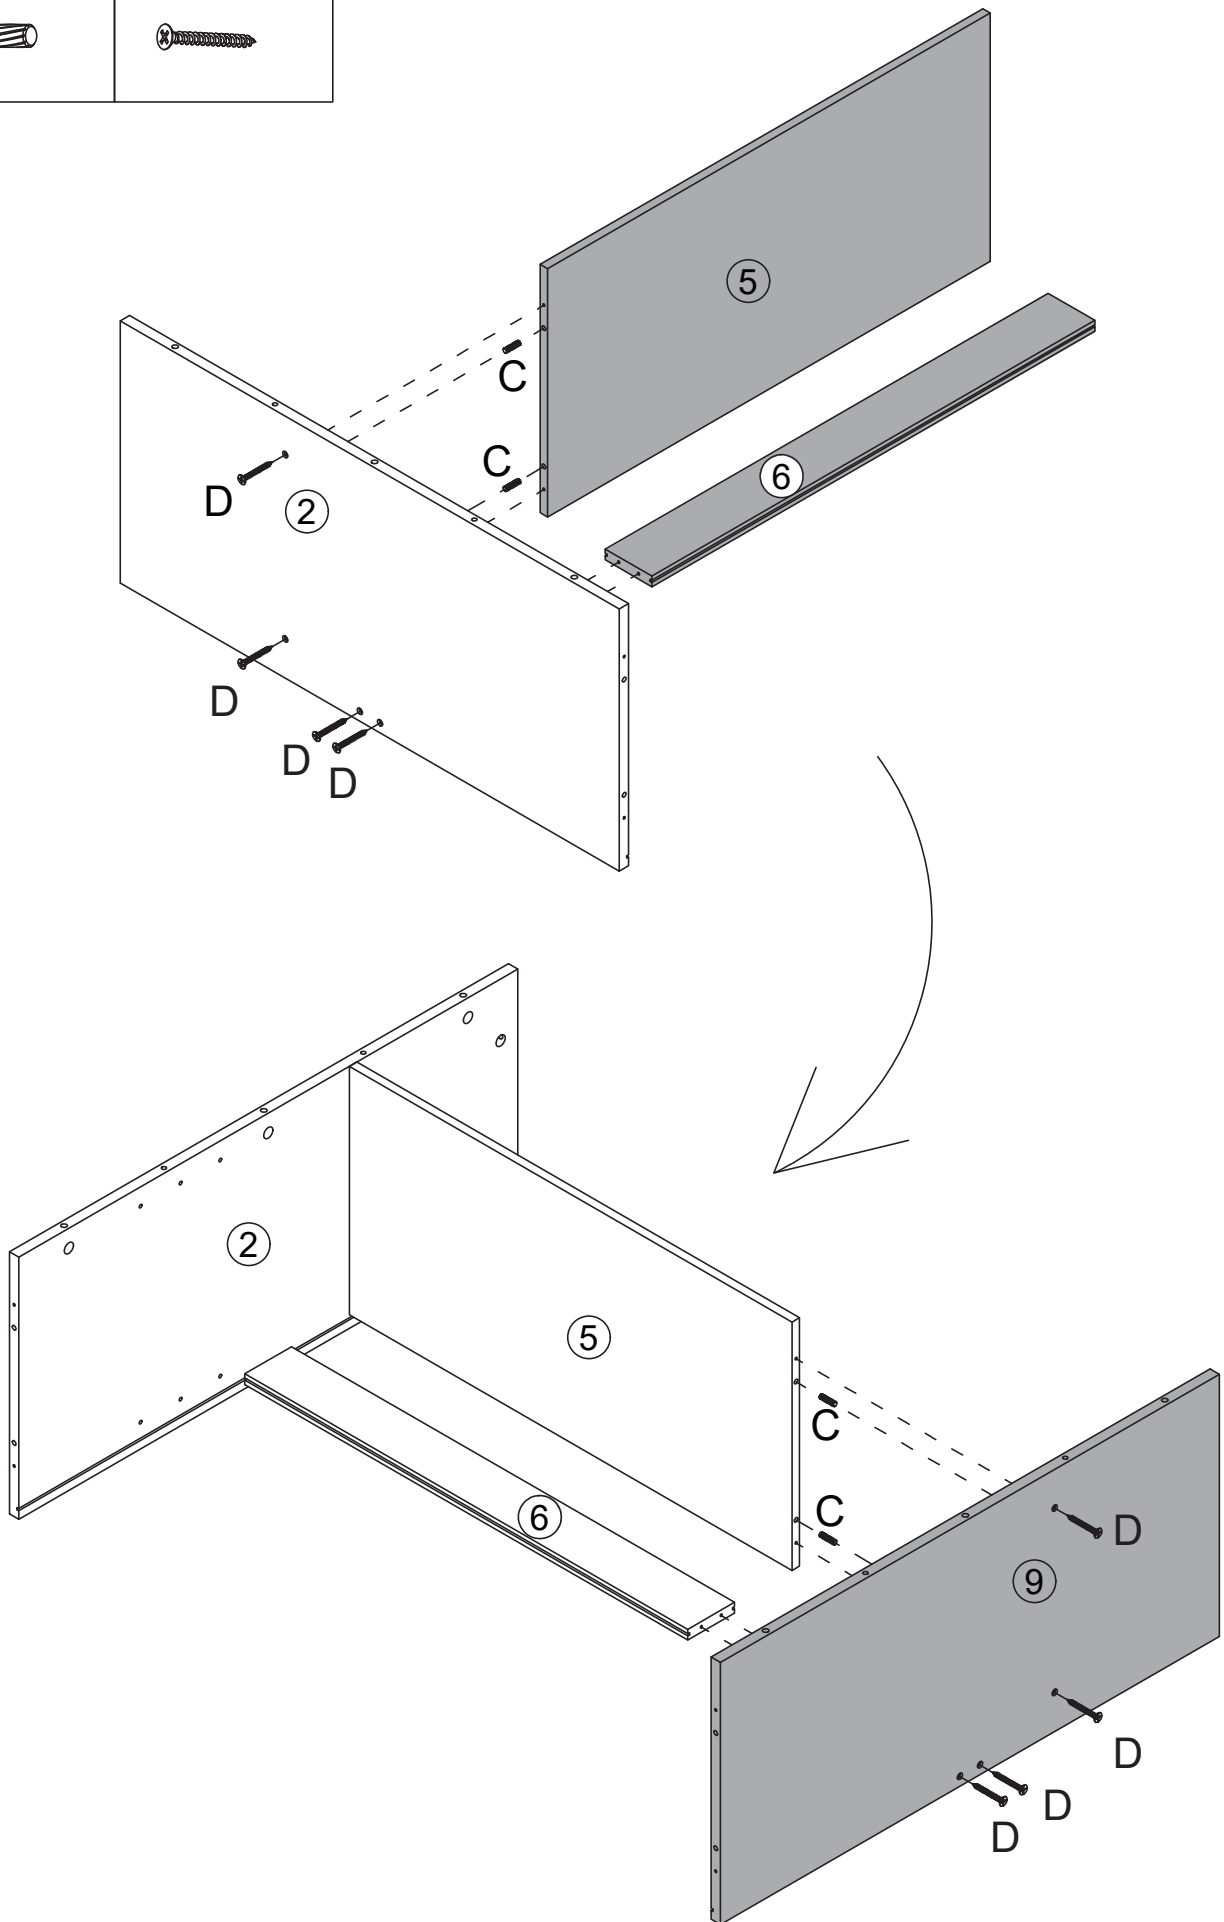

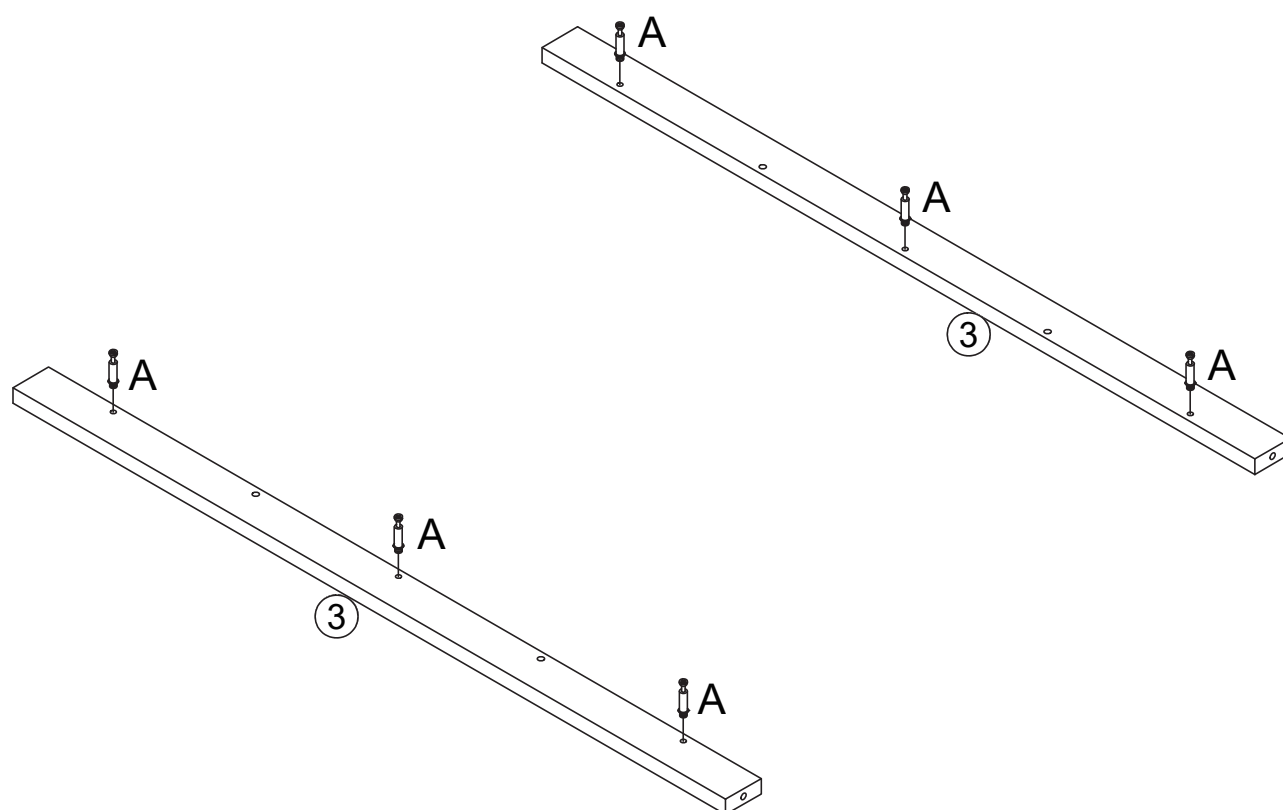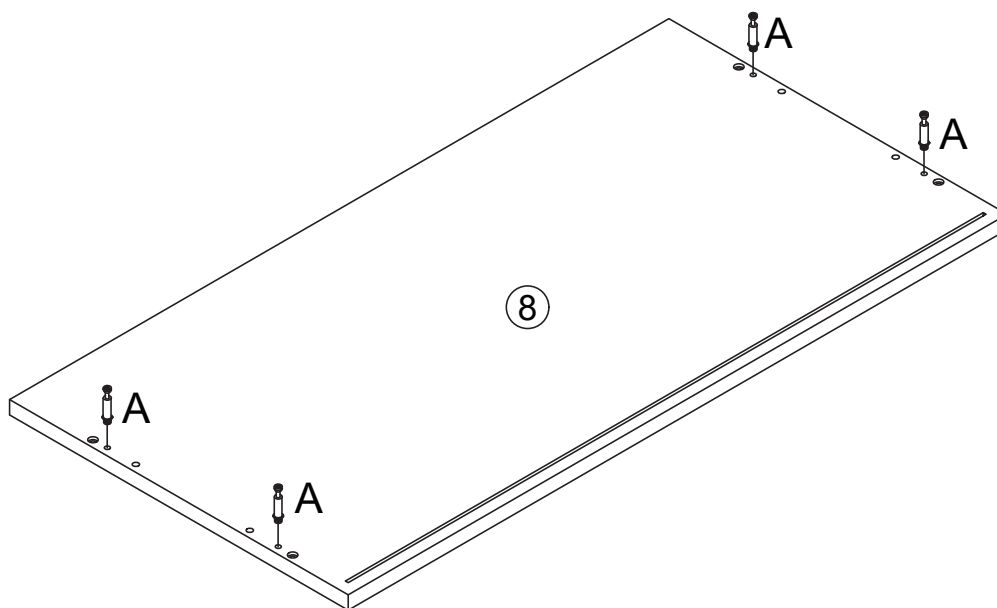


B x6

C x4




17

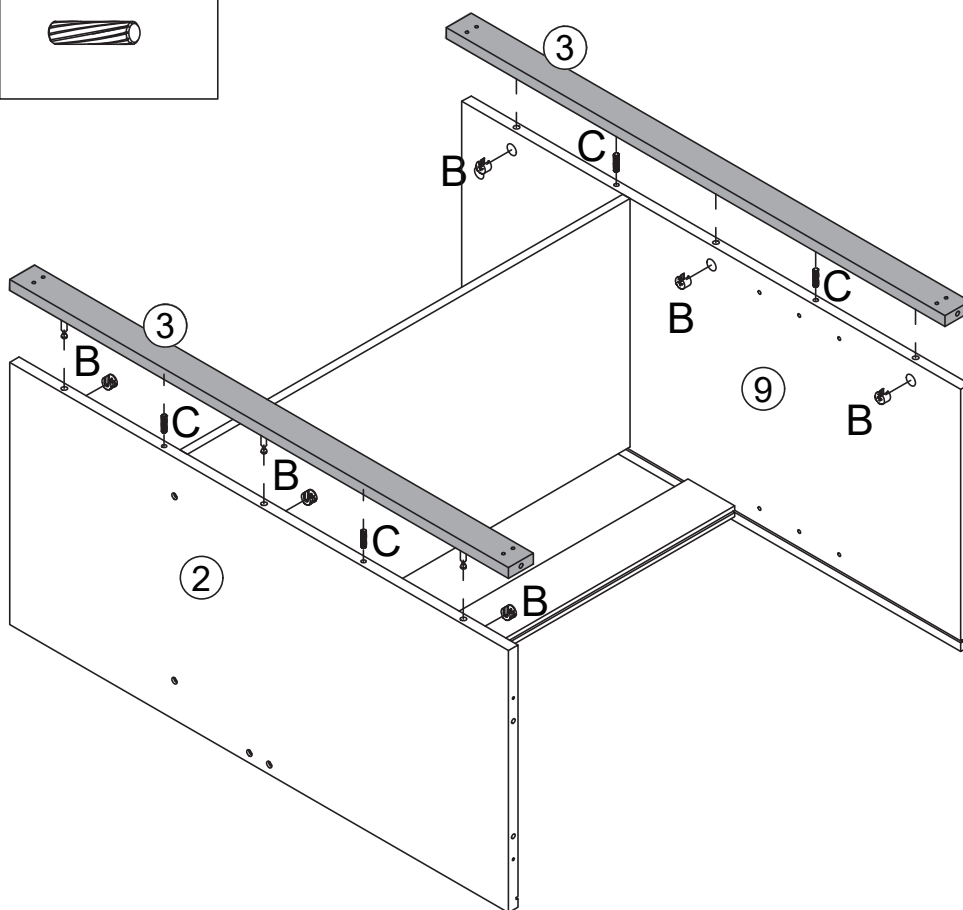

C x6




18

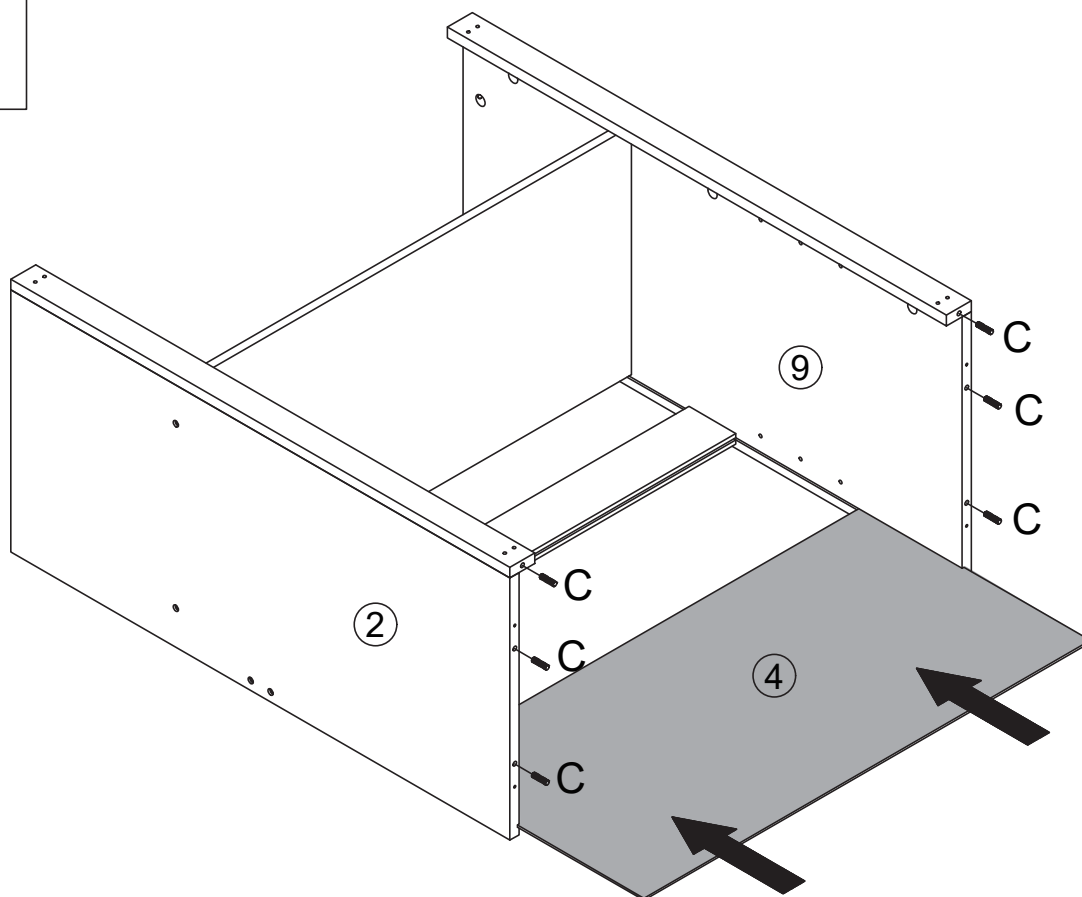


D x4

19

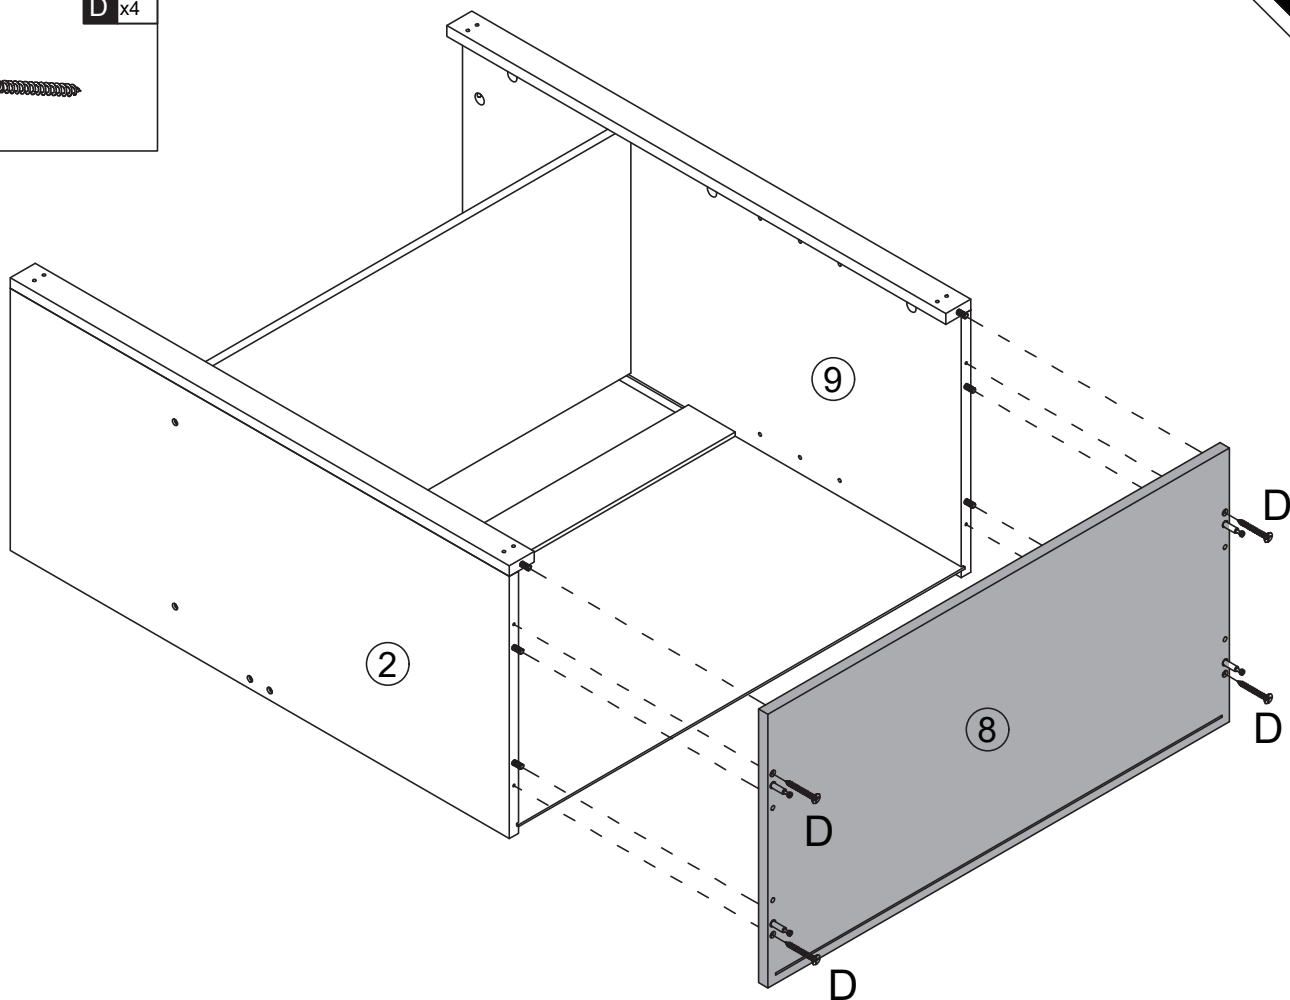



C x6

20

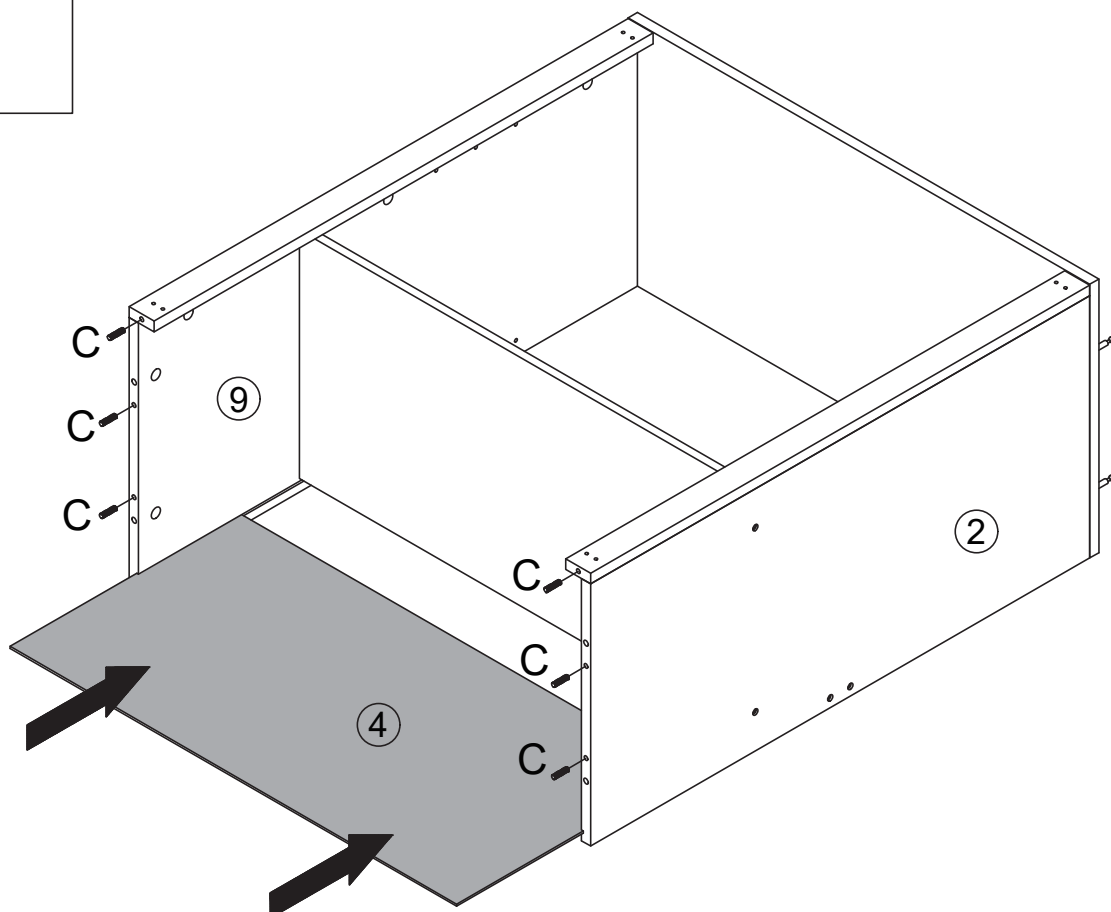


A x4


G x1

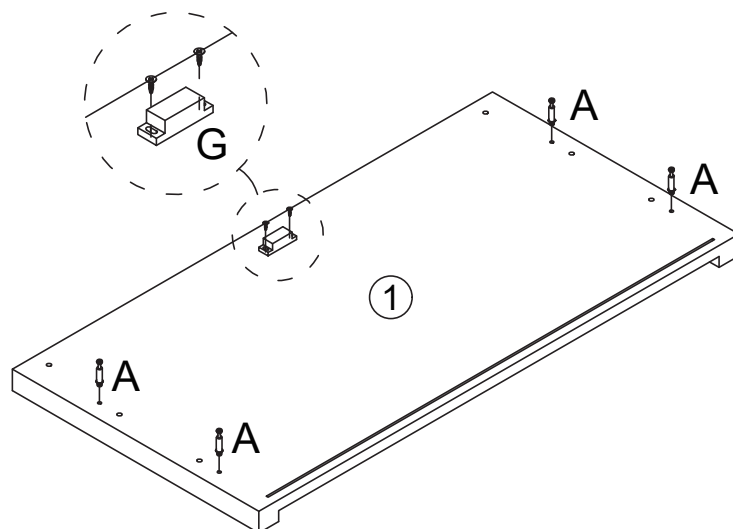


B x4


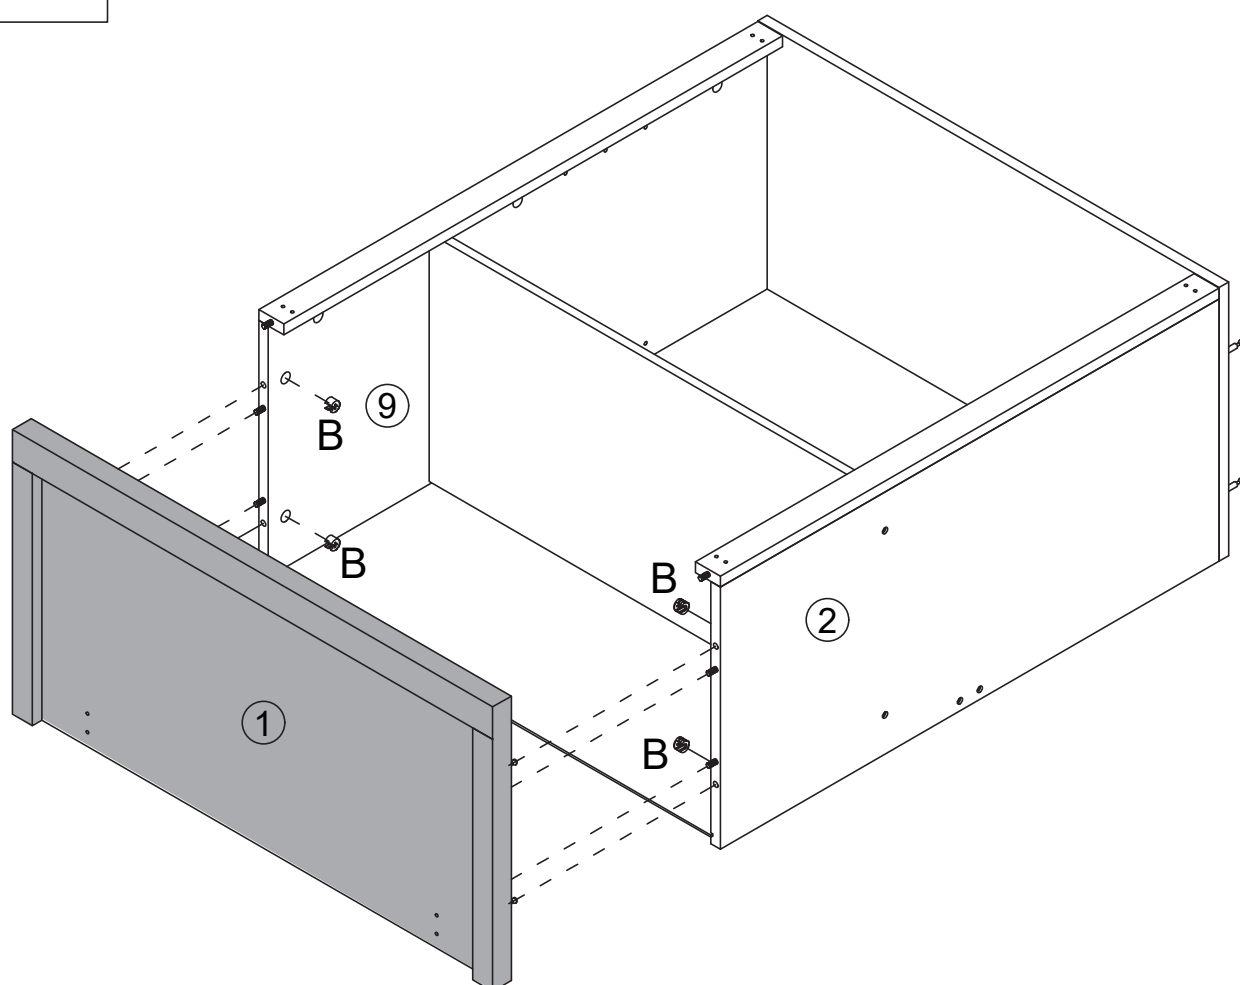


J x2

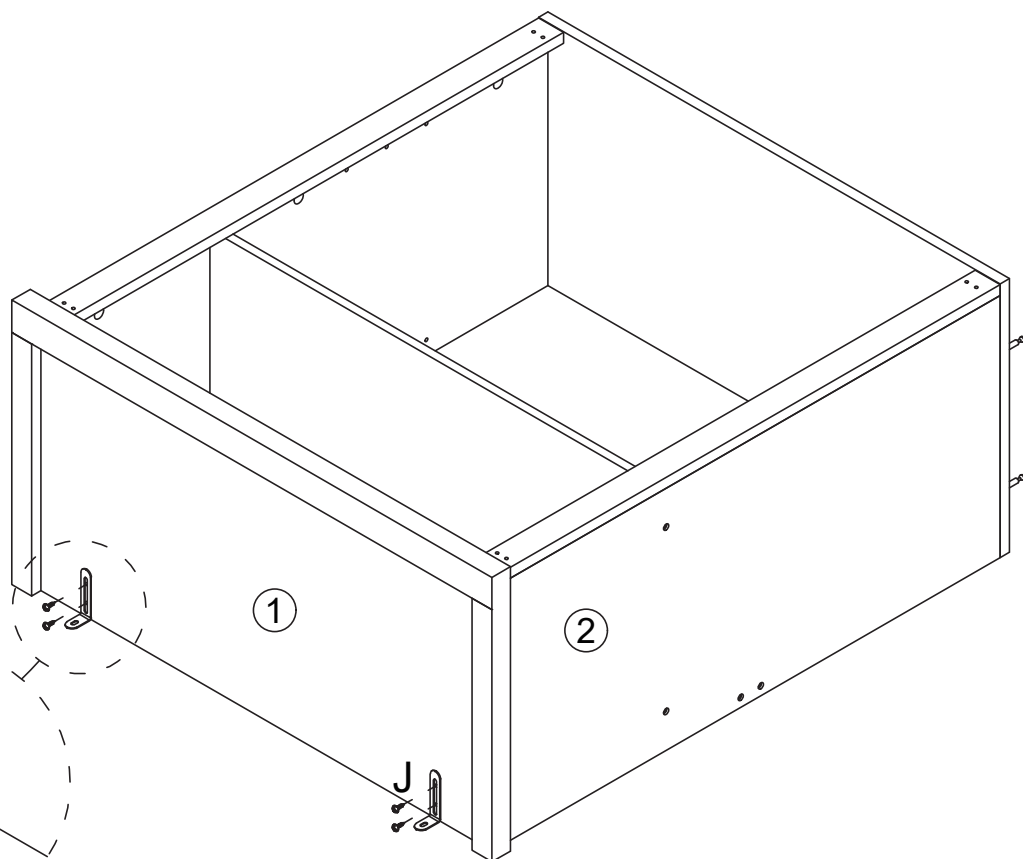


C x4

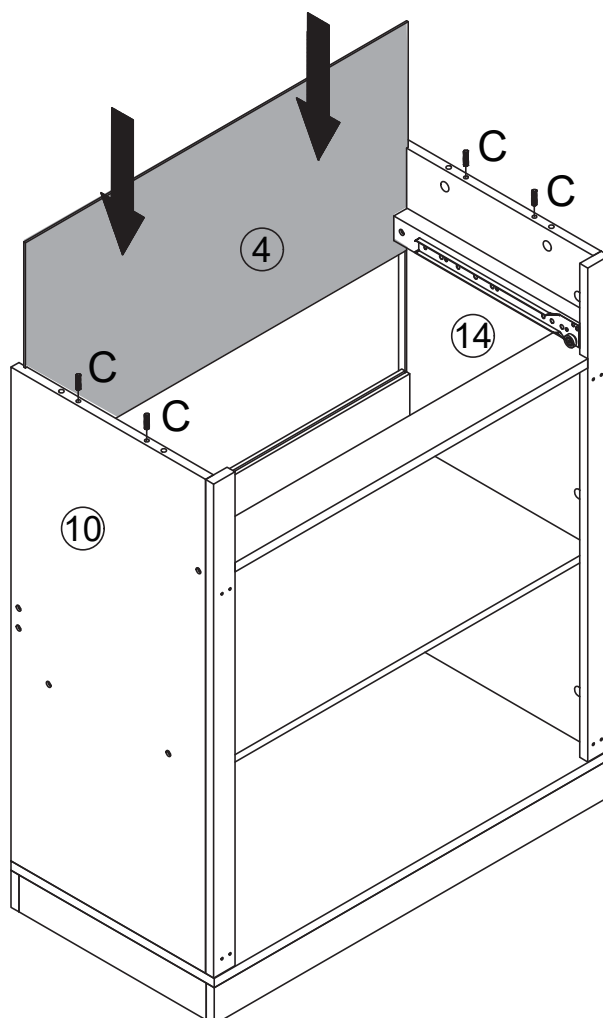

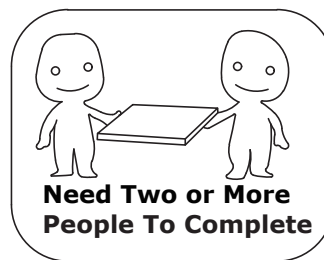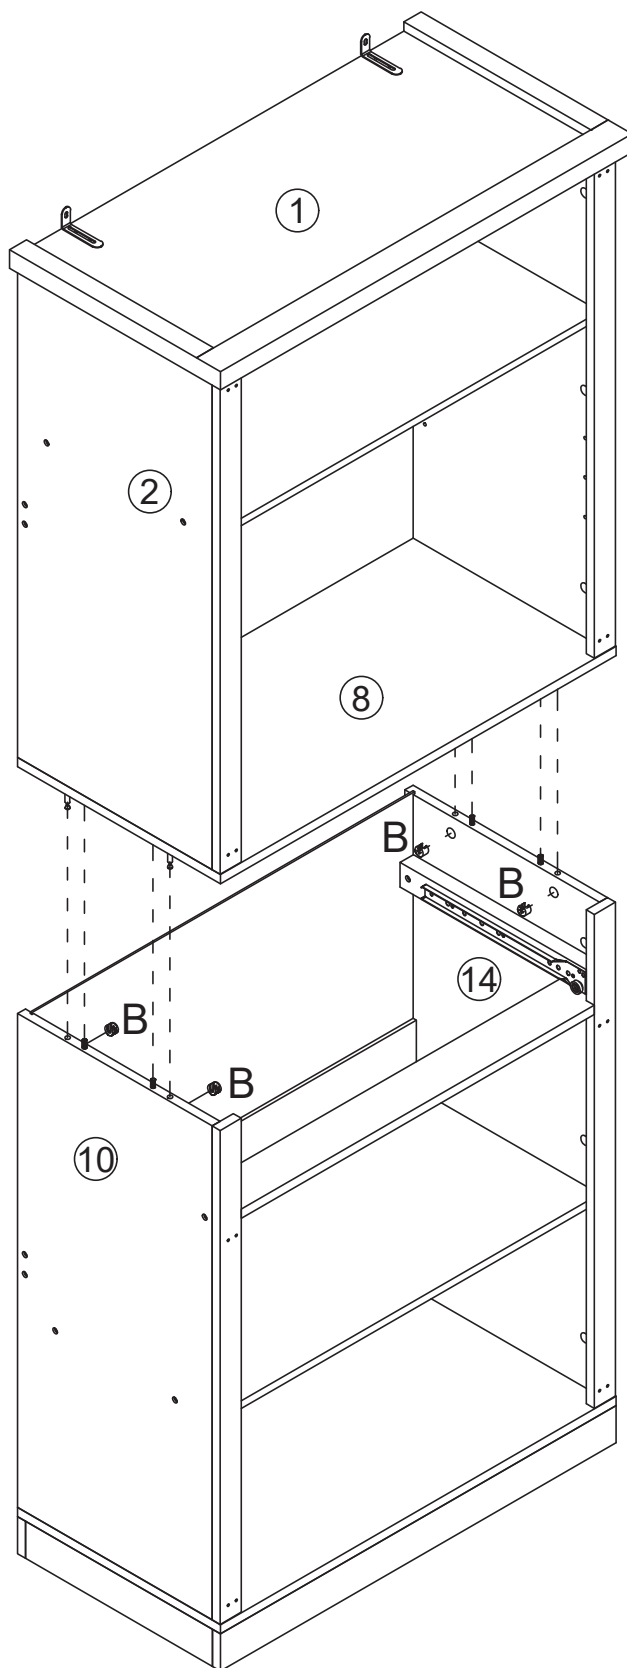

**Need Two or More
People To Complete**

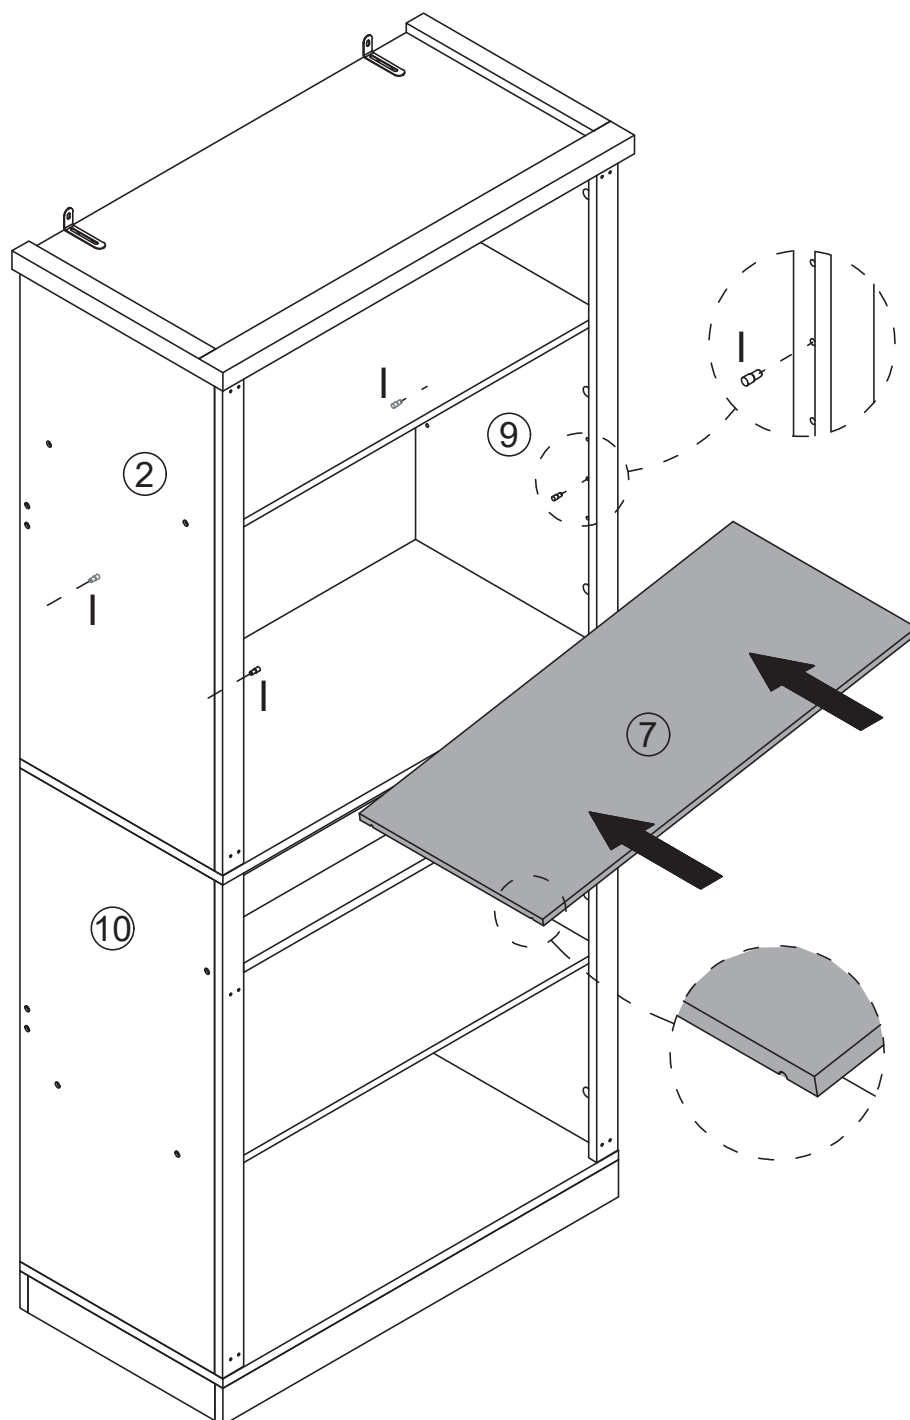








H x4



K x4




M x4

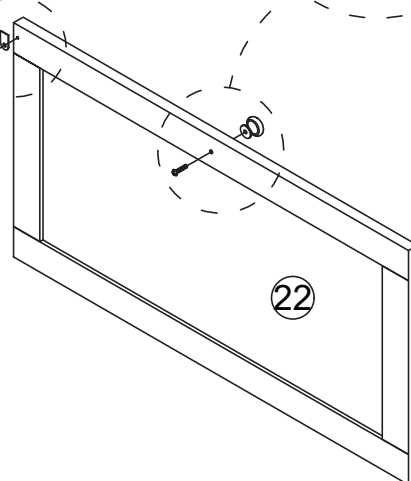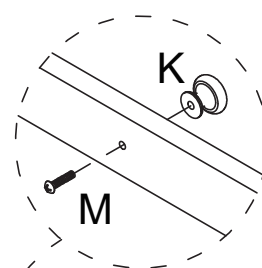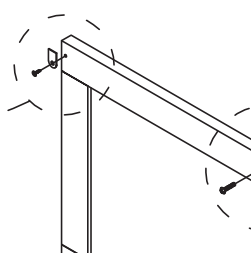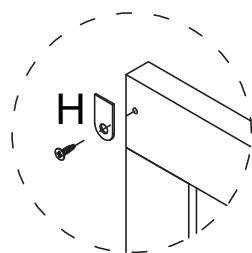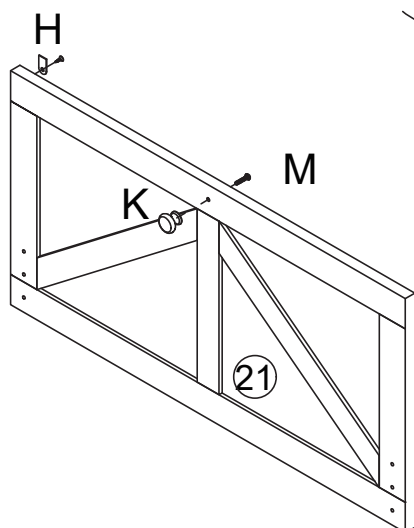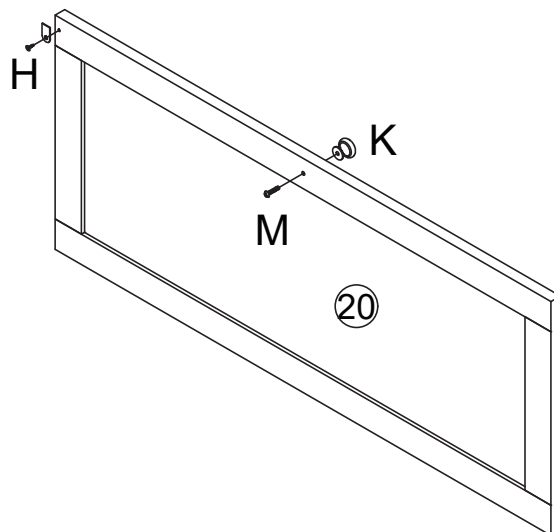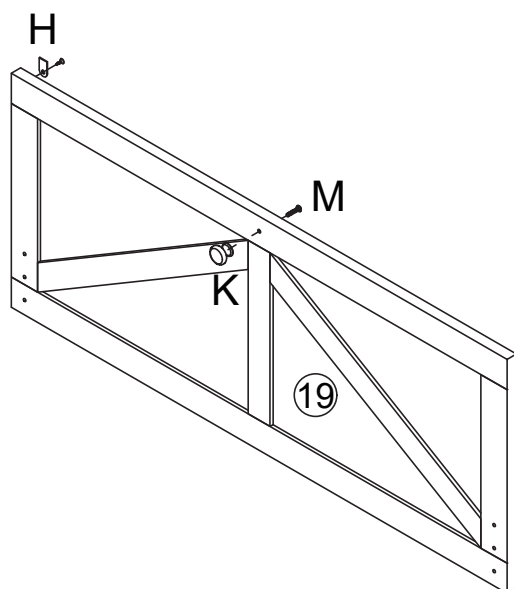




F x24



N x8

28

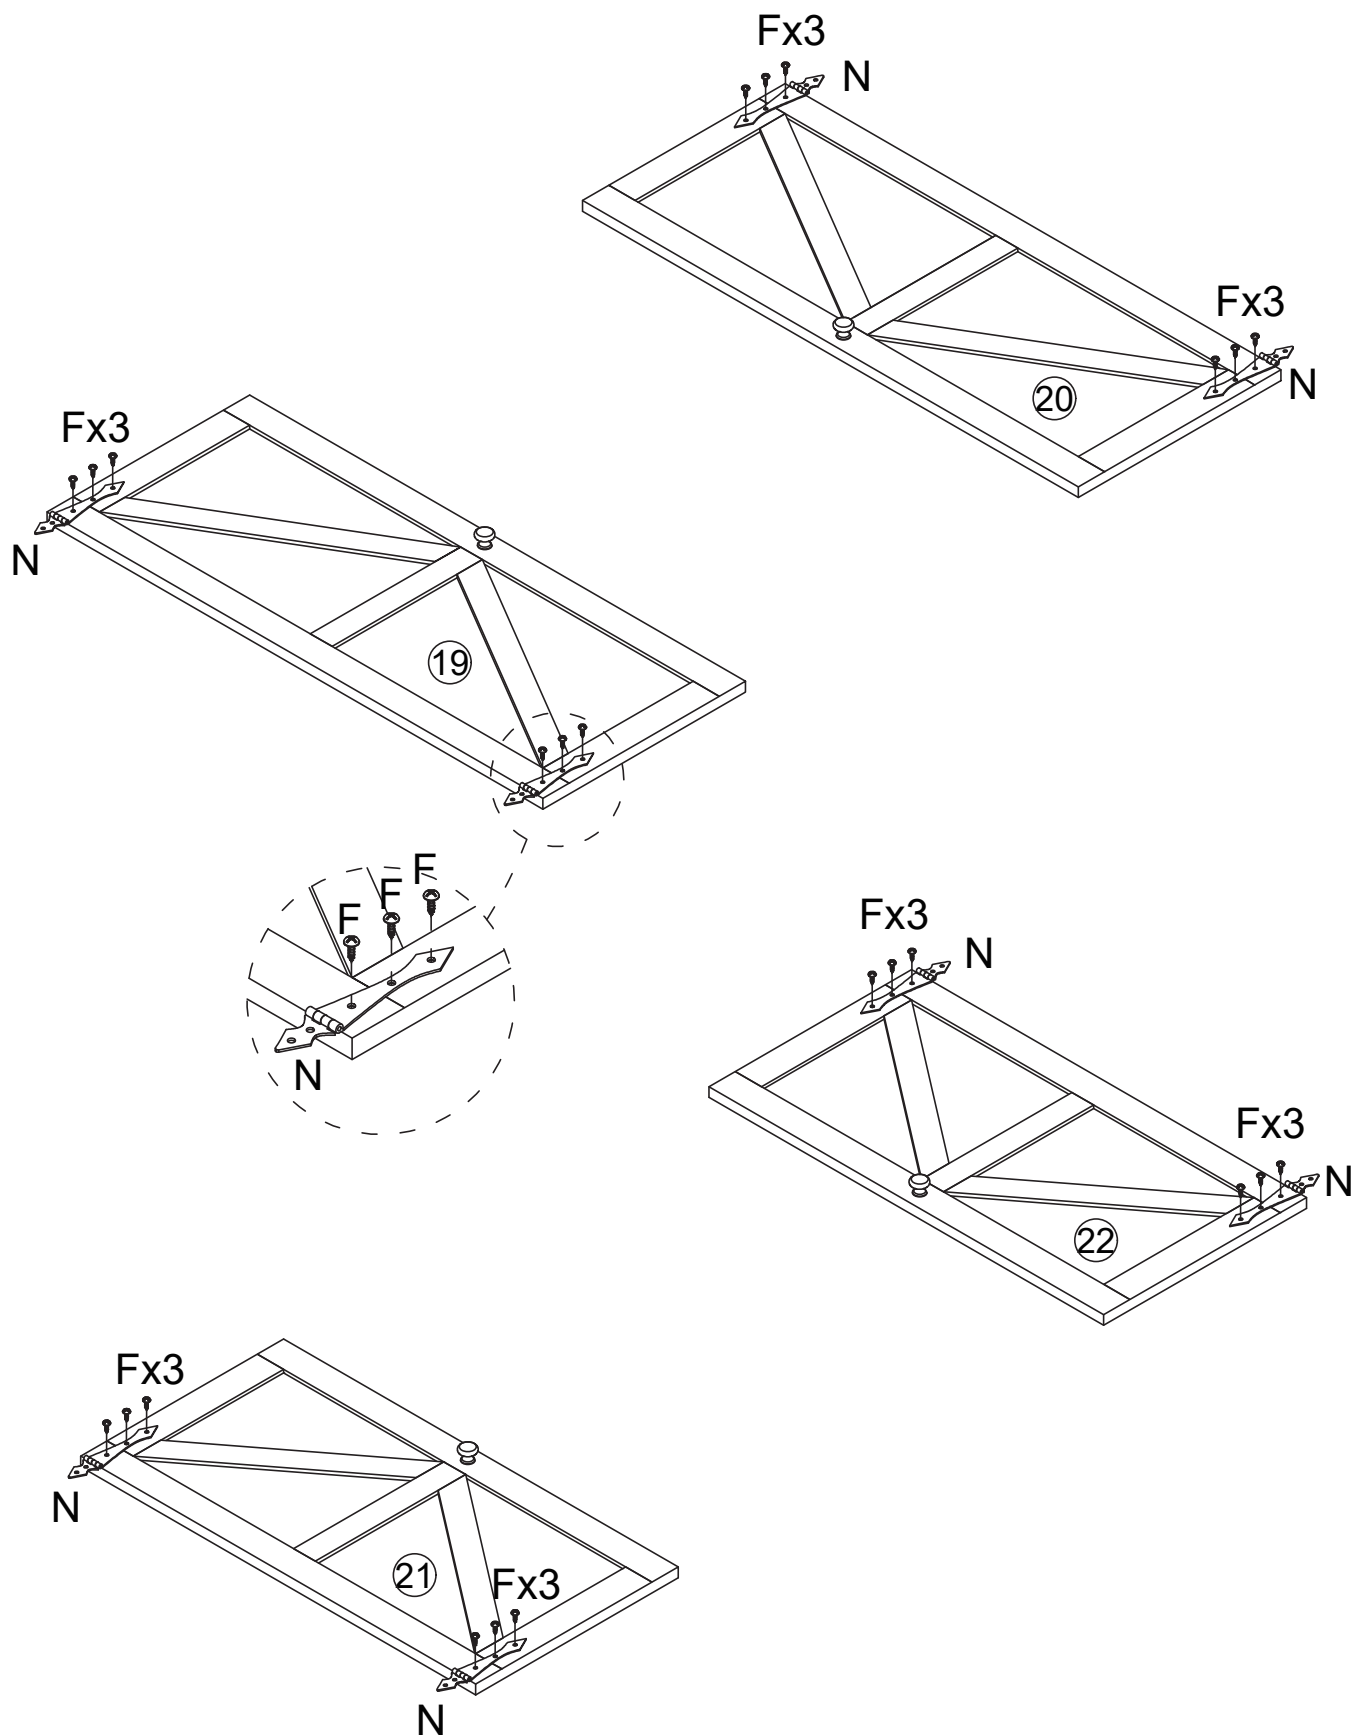

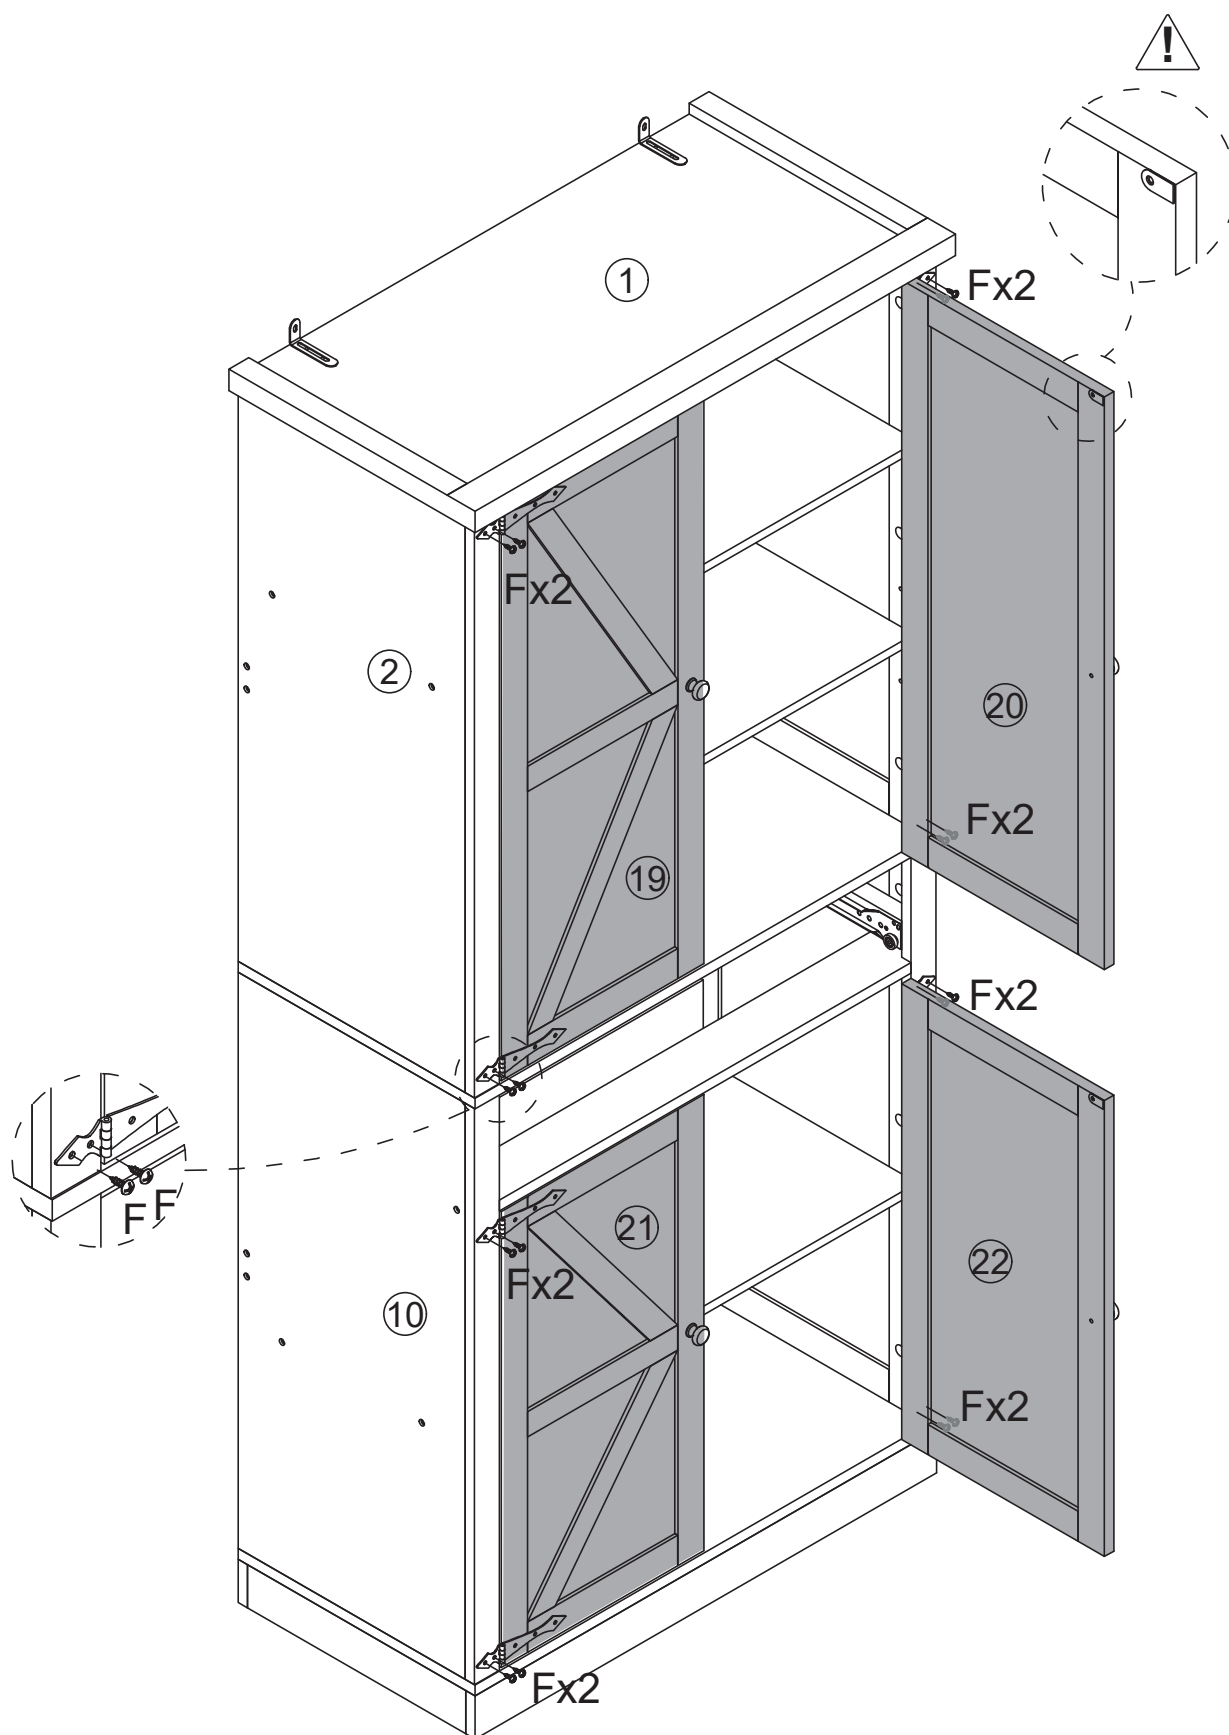

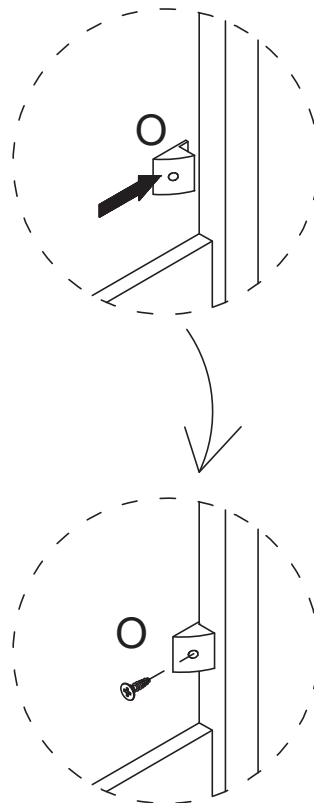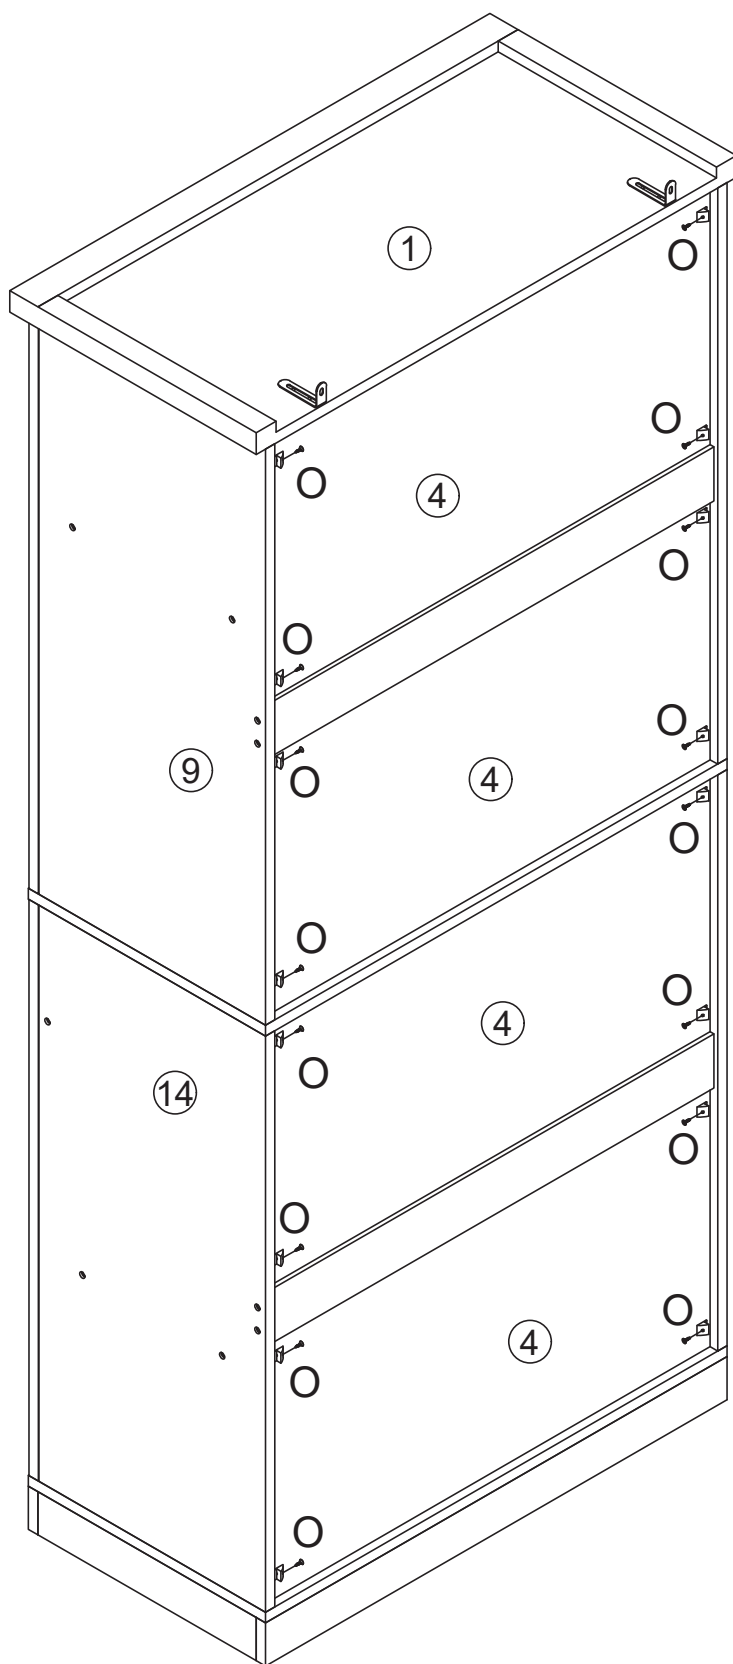

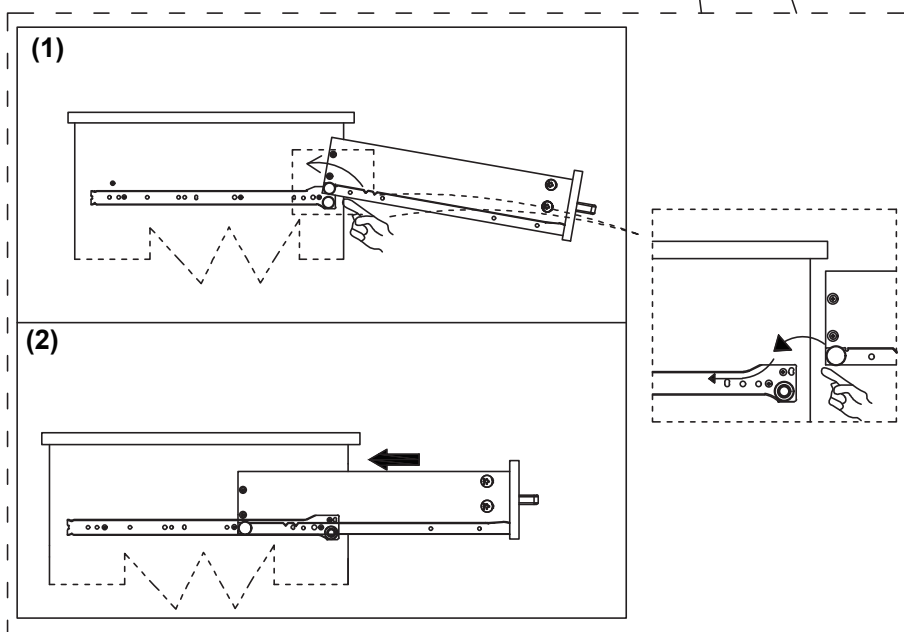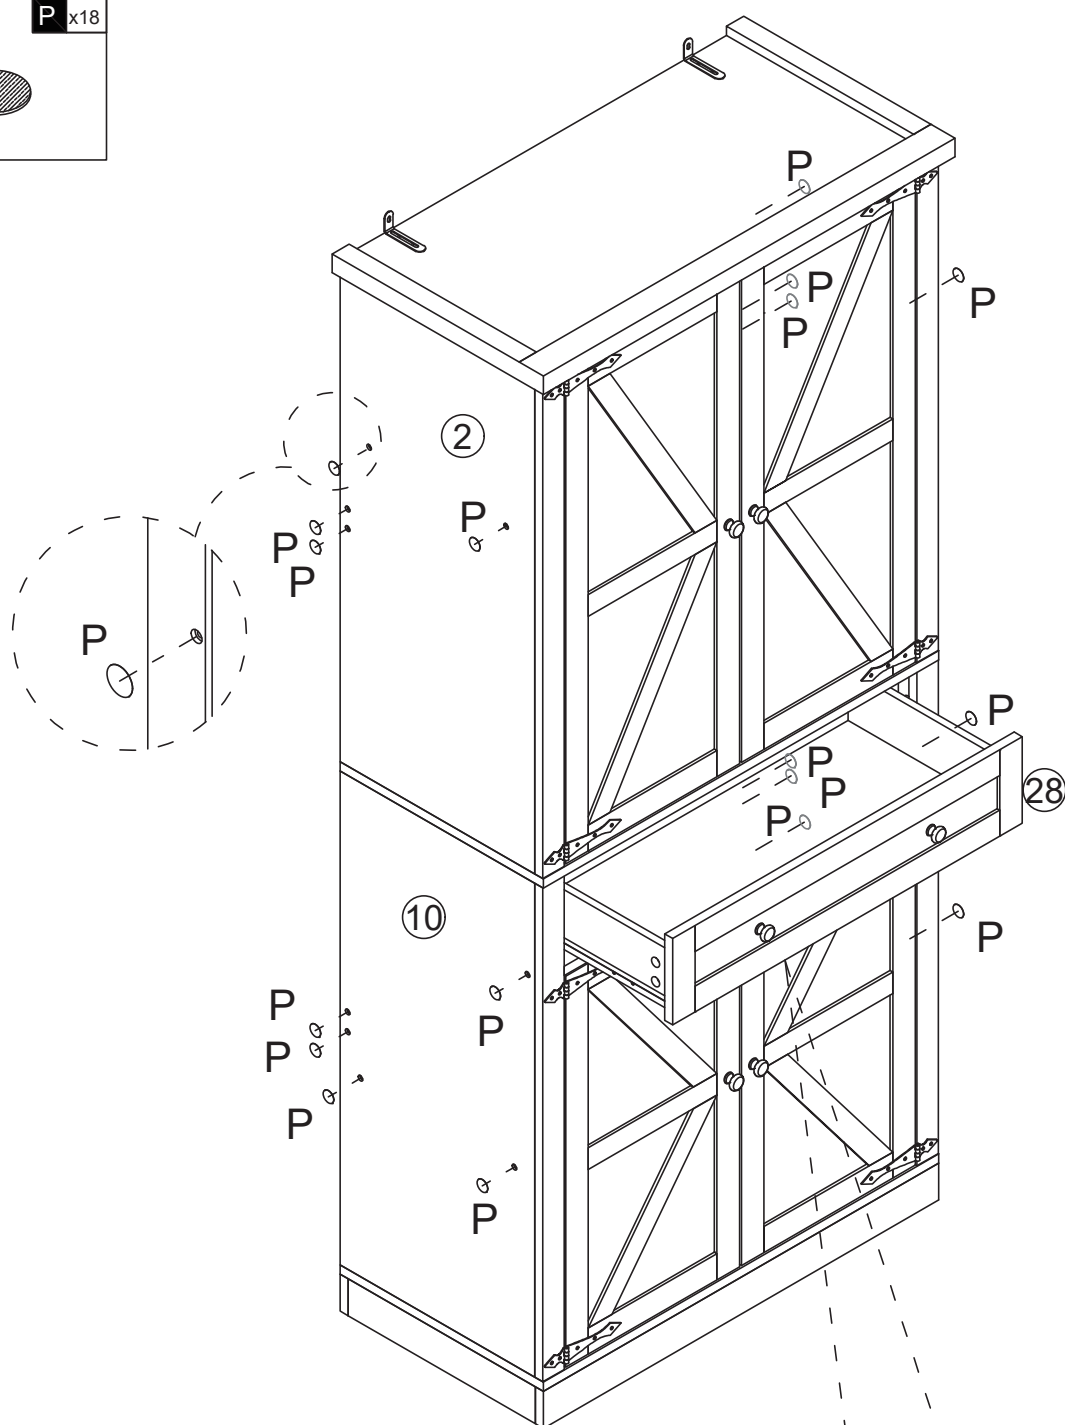

D x2


Q x2



Done

WALL


I x2

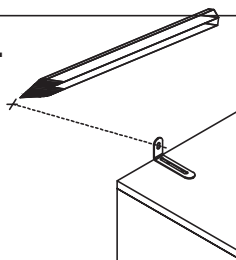

WALL +


drilling hole
Ø6x30mm

II x2

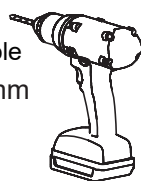


WALL

III x2

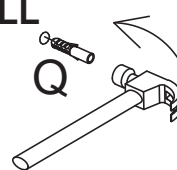

WALL



Q D

