

INSTALLATION MANUAL

Illuminated Address Numbers




To our customer,

From the bottom of our hearts: We are deeply thankful to you for buying our US made product.

In Advanced Multi Sign we proud ourselves of designing and manufacturing with your satisfaction in mind.

WARNING: THIS PRODUCT MUST BE INSTALLED BY A LICENSED ELECTRICIAN OR A COMPETENT PERSON.

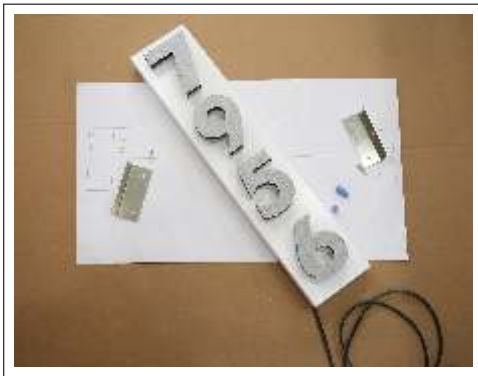

Step 1:

Unpack on a clean surface.

Make sure you have all shipped components:

- (2) Waterproof connectors
- (2) Anchoring angles
- (1) Installation pattern



(Ask your electrician to test it before handling, any defect could be easily corrected at this stage)

WARNING!! IF IT DOESN'T WORK. DO NOT ATTEMPT TO FIX IT.

DO NOT DISASSEMBLE OR TROUBLE SHOOT.

CALL US during our regular business hours, Eastern Standard time from 9am to 4pm.

Our number: 305-805-3636 ext 0)



Step 2:

This are the typical tools you may need for the installation of the sign.

- Measuring tape
- Level
- Power drill with drill bit
- 4 Anchor screws for you specific type of wall.

(We do not provide the screws)

<https://advanced-multi-sign-and-beyond.myshopify.com>

INSTALLATION MANUAL

Illuminated Address Numbers



Step 3:

Lay flat the installation pattern, use the level to straighten it and then taped it to the wall.

Important: After selecting the desired location and making sure you have direct access behind the address numbers.

Make sure the power connections will be at least 1 inch (2.54 cm) away from the edges.



Step 4:

Commence the perforations followed by the pattern marks.


Use the appropriate drill bit for the designated anchoring system.



Step 5:

Install anchoring hardware system provided in the package.

(Make sure is level as well)

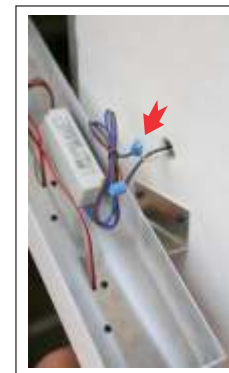

Step 6:

Open electrical hole.

You can also use existing light fixture cables.

Using the water tie connectors provided, proceed first to connect black with black and blue with blue wires or (in some cases as pictured) brown with black and white with blue.

INSTALLATION MANUAL

Illuminated Address Numbers



Step 7:

Carefully proceed to place the numbers within the top and bottom anchor angles as per the sample picture.

Securely screw the top and bottom sections of the numbers with the counter sink screws provided in the package.



Step 8:

Remove the protective cover and don't forget to clean it.



Step 9:

Enjoy it.

Thanks for buying from us.