





























## 4 Drawer Filing Cabinet Hardware List

ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
A	Cam Bolt 6X35mm		24pcs	I	Screw 2.5X14mm		16pcs
B	Cam Lock 15X10mm		24pcs	J	Allen Head Screw 5X45mm		8pcs
C	Wooden Dowel 8X30mm		8pcs	K	Allen Key 115X30mm		1pc
D	Handle		4pcs	L	Bracket		2pcs
E	Screw 3X12mm		64pcs	M	Cable Tie		1pc
F	Metal Drawer Glide 380X35X13mm		8pcs	N	Screw 3.5X40mm		1pc
G	Metal Rod 5X383mm		8pcs	O	Plastic Anchor		1pc
H	Screw 4X30mm		16pcs				

# Part List


ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
1	Top Panel		1pc	7	Drawer Front Panel		4pcs
2	Left Side Panel		1pc	8	Drawer Left Side Panel		4pcs
3	Right Side Panel		1pc	9	Drawer Right Side Panel		4pcs
4	Bottom Panel		1pc	10	Drawer Back Panel		4pcs
5	Wooden Leg		4pcs	11	Drawer Bottom Panel		4pcs
6	Back Panel		1pc				

## STEP 1

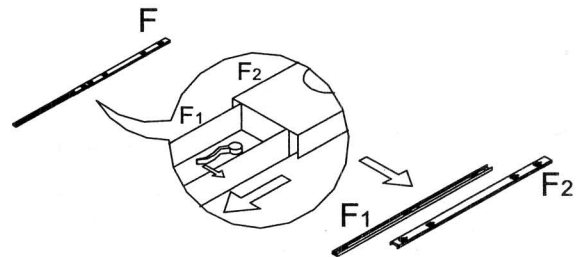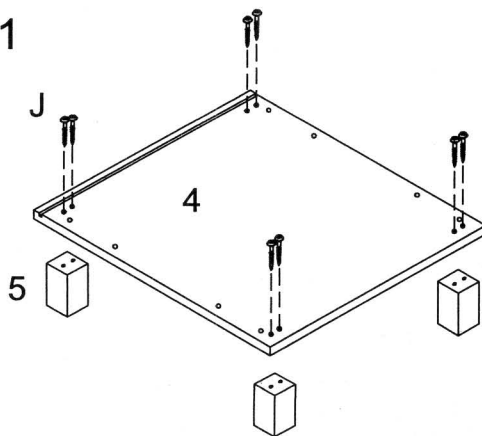


1. Assemble the wooden legs (5) to bottom panel (4) by using allen head screw (J), tighten with allen key (K).
2. Split metal drawer glide (F) to two parts (F1 and F2) as shown.

## STEP 2

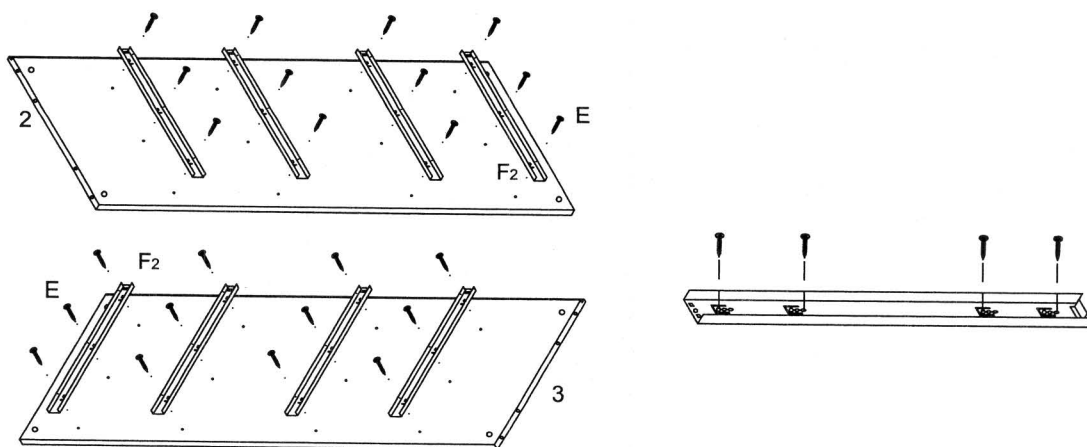


1. Assemble the metal drawer glide (F2) to side panel (2 & 3) by using screw (E) as shown.

## STEP 3

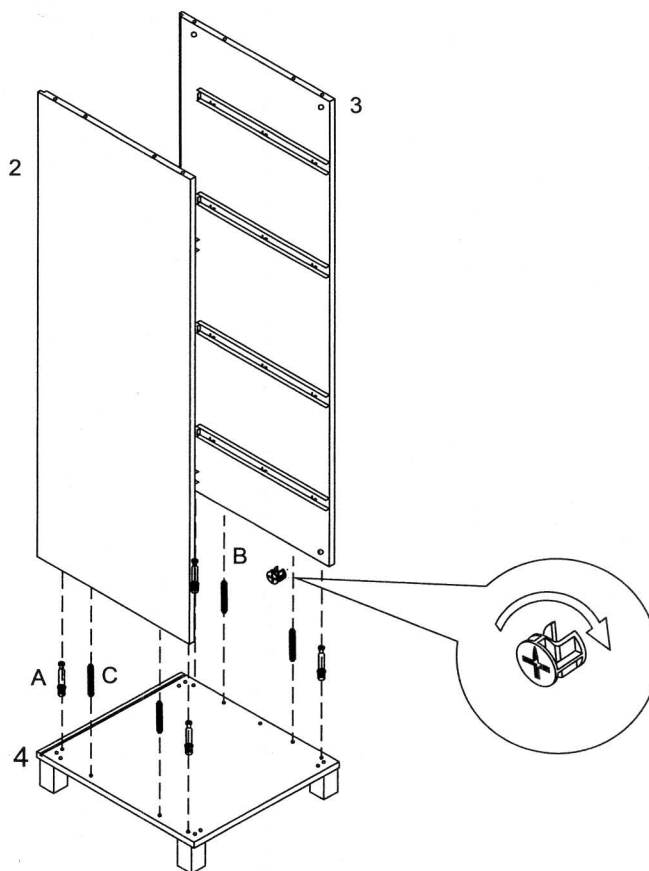


1. Insert wooden dowel (C) and screw the cam bolt (A) to the holes on bottom panel (4) as shown.
2. Attach the left side panel (2) and right side panel (3) to the bottom panel (4).
3. Insert the cam lock (B) to the holes on side panel (2 & 3) then rotate clockwise to secure cam bolt in place.

## STEP 4

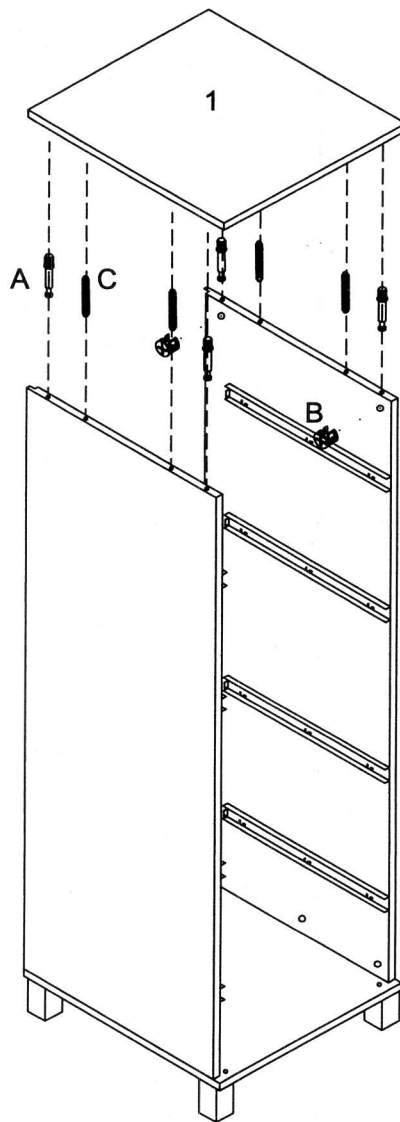

1. Insert wooden dowel (C) and screw the cam bolt (A) to the holes on top panel (1) as shown.
2. Attach the top panel (1) to the unit from step 3.
3. Insert the cam lock (B) to the holes from step 3 then rotate clockwise to secure cam bolt in place.


## STEP 5

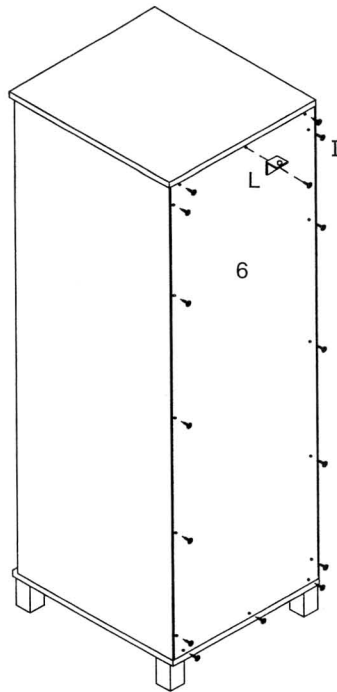

1. Attach the back panel (6) to the unit from step 4 by using screw (I).
2. Assemble the bracket (L) to the up middle hole on back panel (6) by using screw (I).


---

## STEP 6

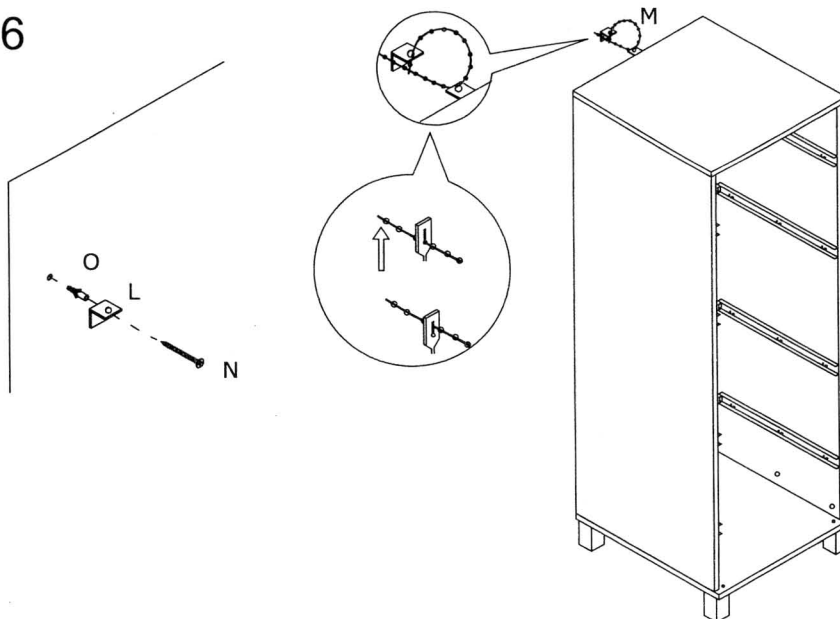


1. Drill a 7/32" hole in the dry wall. Press the plastic wall anchor (O) to the drywall. Ensure that the anchor fits securely in the wall.
2. Attach the bracket (L) to the wall by using screw (N).
3. Fix the cabinet on the wall using cable tie (M).

## STEP 7

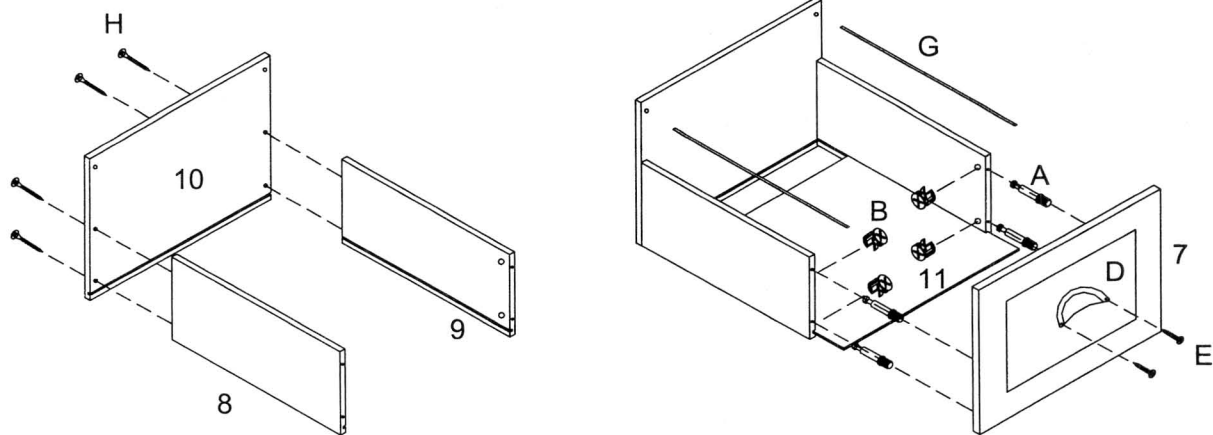


1. Assemble drawer side panel (8 & 9) and drawer back panel (10) together by using screw (H). Do not overtighten.
2. Screw the cam bolt (A) to drawer front panel (7).
3. Assemble the handle (D) to drawer front panel (7) by using screw (E).
4. Assemble the metal rod (G), drawer bottom panel (11) and drawer front panel (7) to the drawer.
5. Insert the cam lock (B) to the holes on drawer side panel (8 & 9) then rotate clockwise to secure cam bolt in place.

## STEP 8

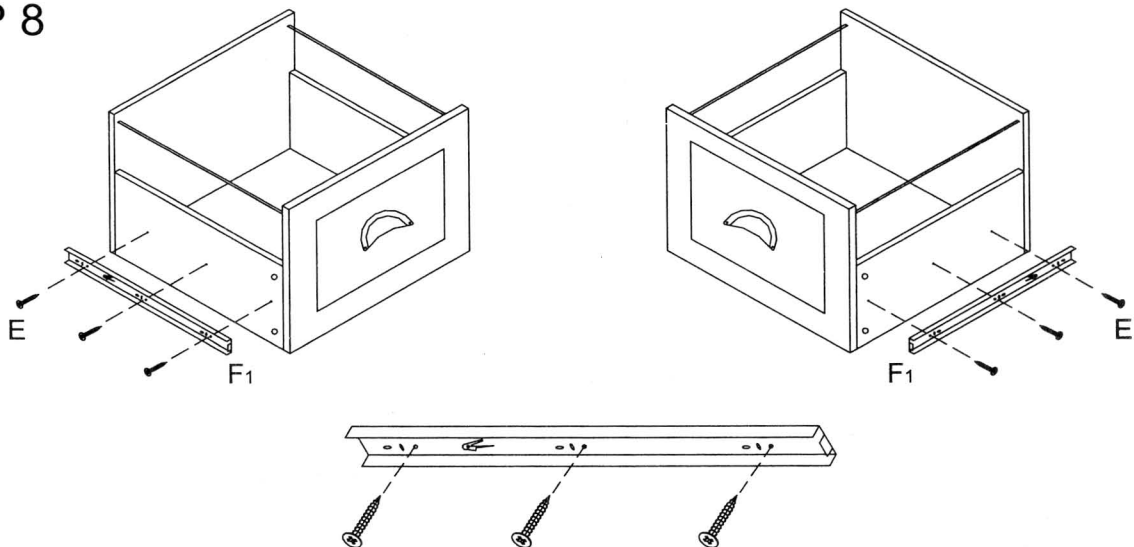

1. Assemble drawer metal glide (F1) to drawer side panel (8 & 9) by using screw (E) as shown.

## STEP 9

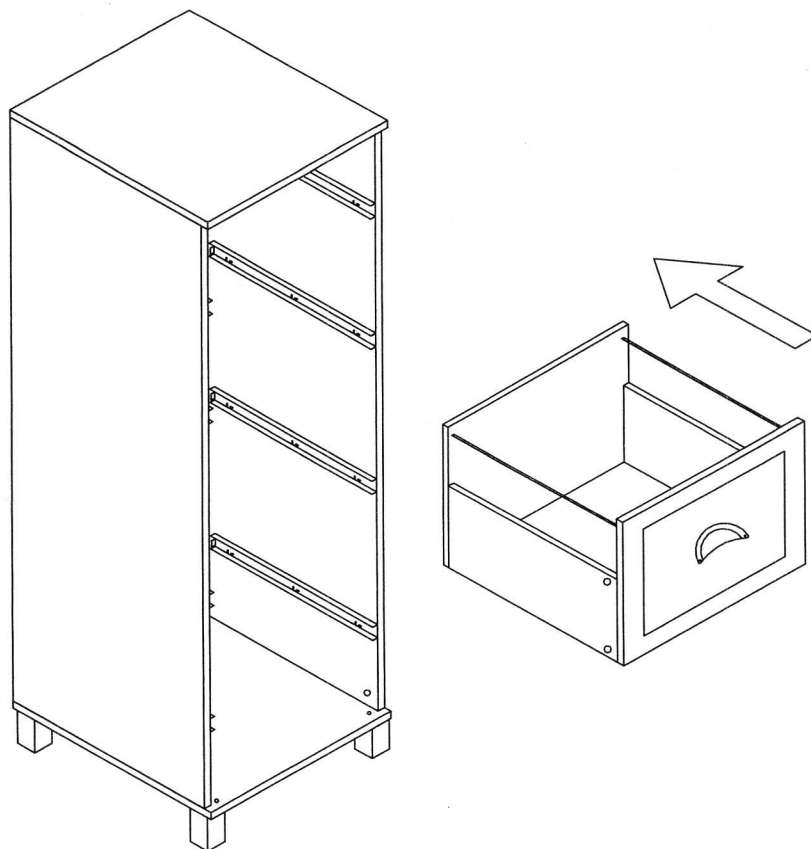

1. Insert the drawer into the cabinet.

---

## STEP 10

