
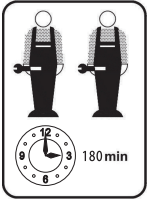


Assembly Instruction


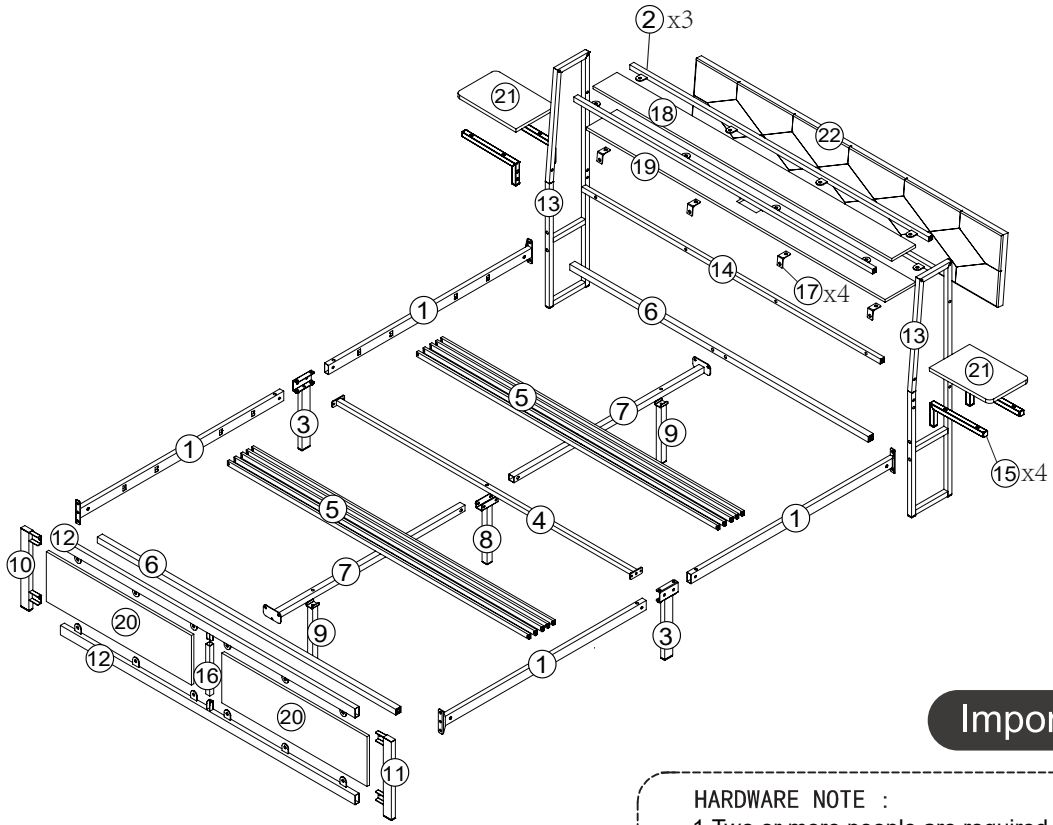




Important Note

HARDWARE NOTE :


1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

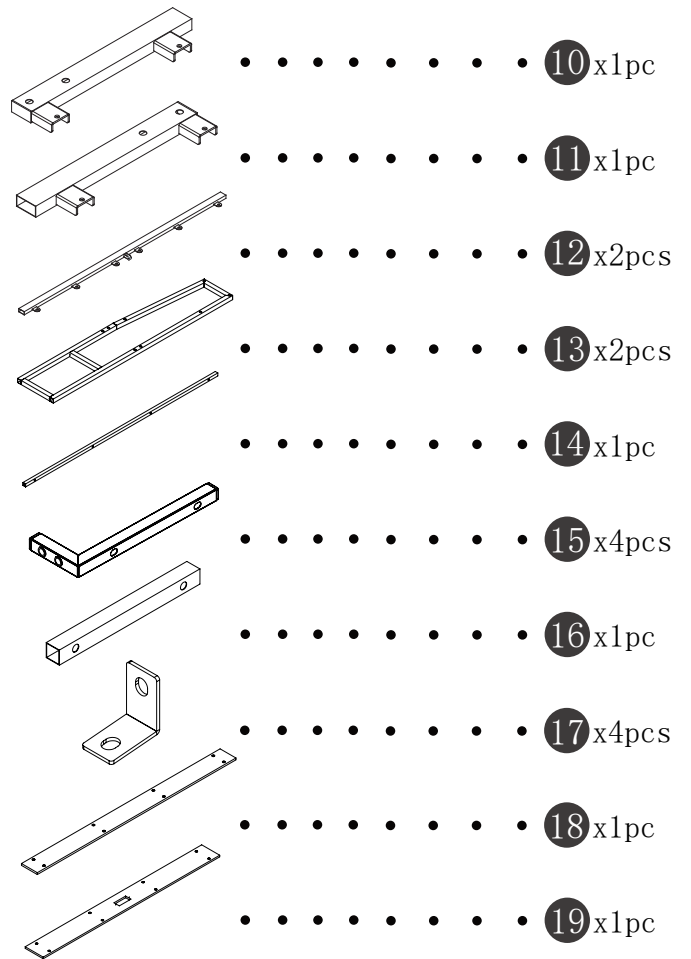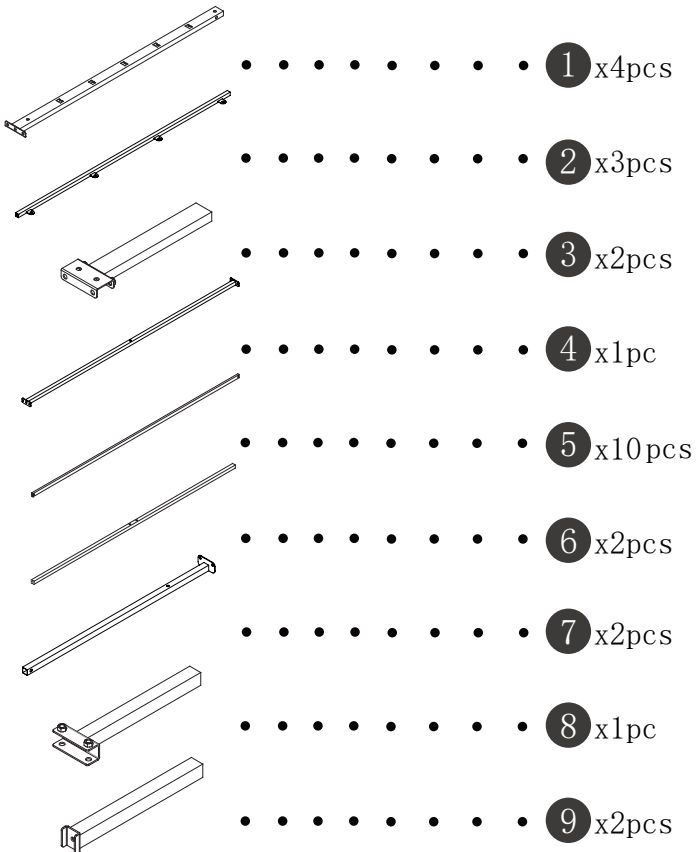


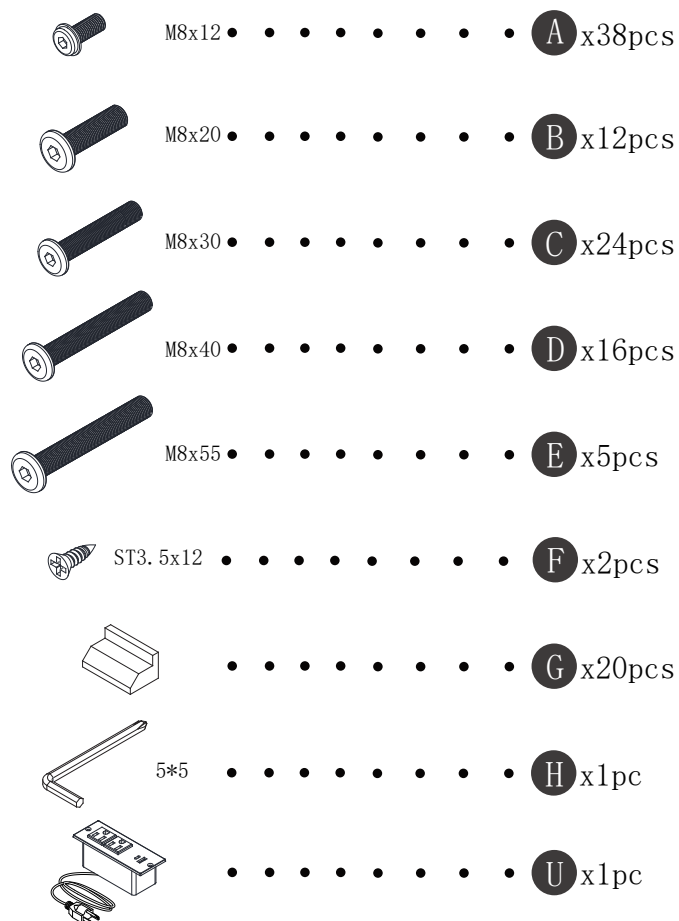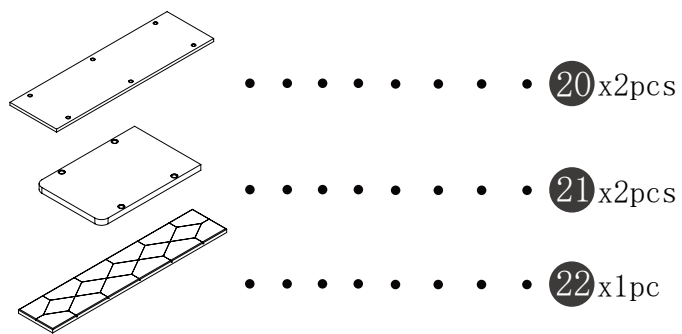


1

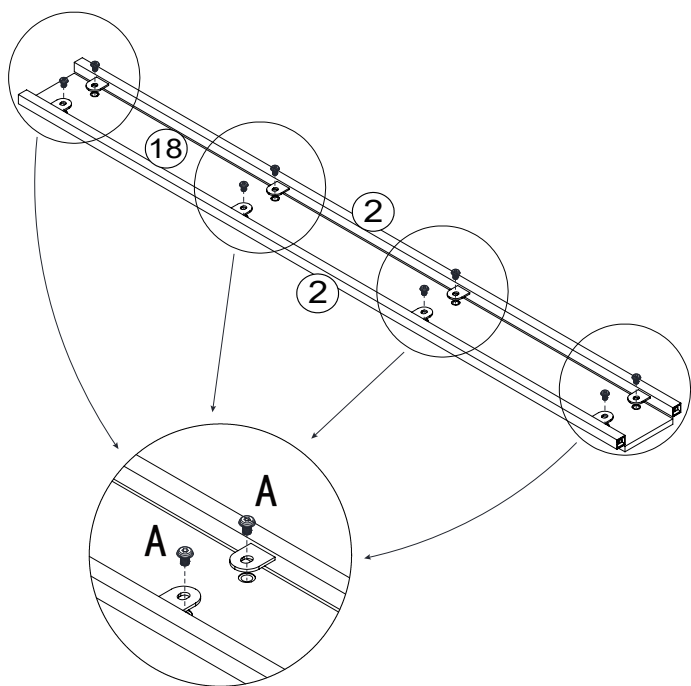


2

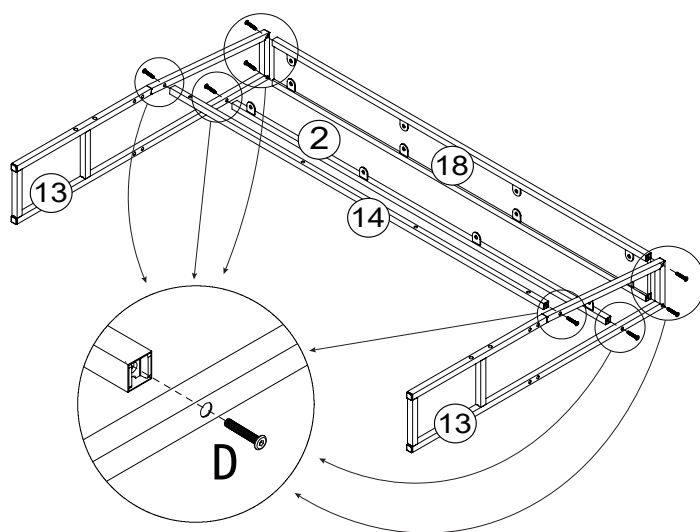

! Do not fully tighten the screws yet.




3

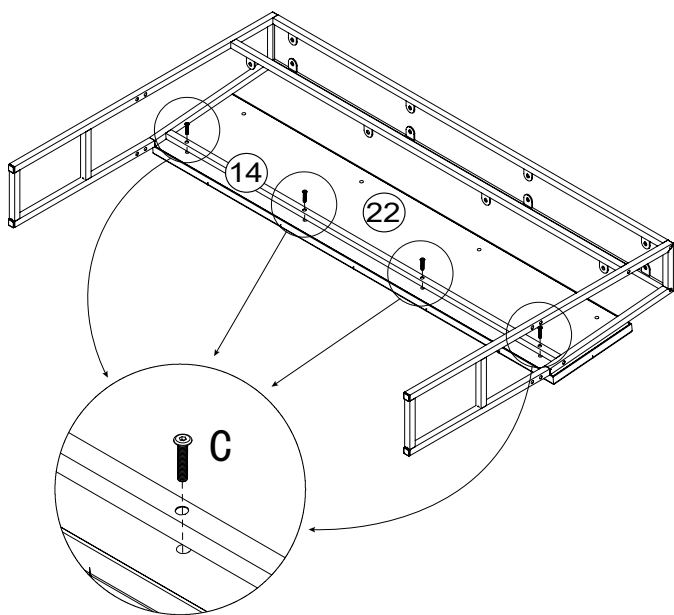

! Do not fully tighten the screws yet.

C		4pcs
M8x30		


4

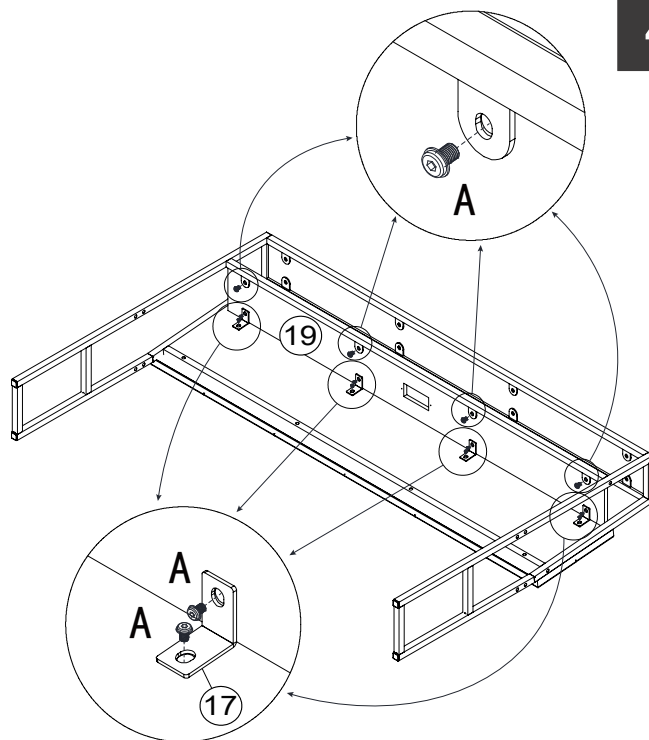

! Fully tighten all the screws.


A		12pcs
M8x12		

5

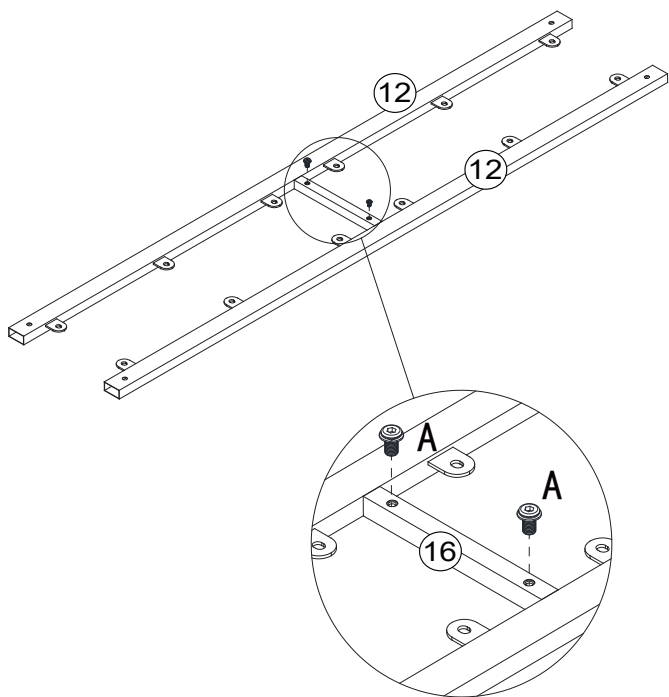

A		2pcs
M8x12		



6

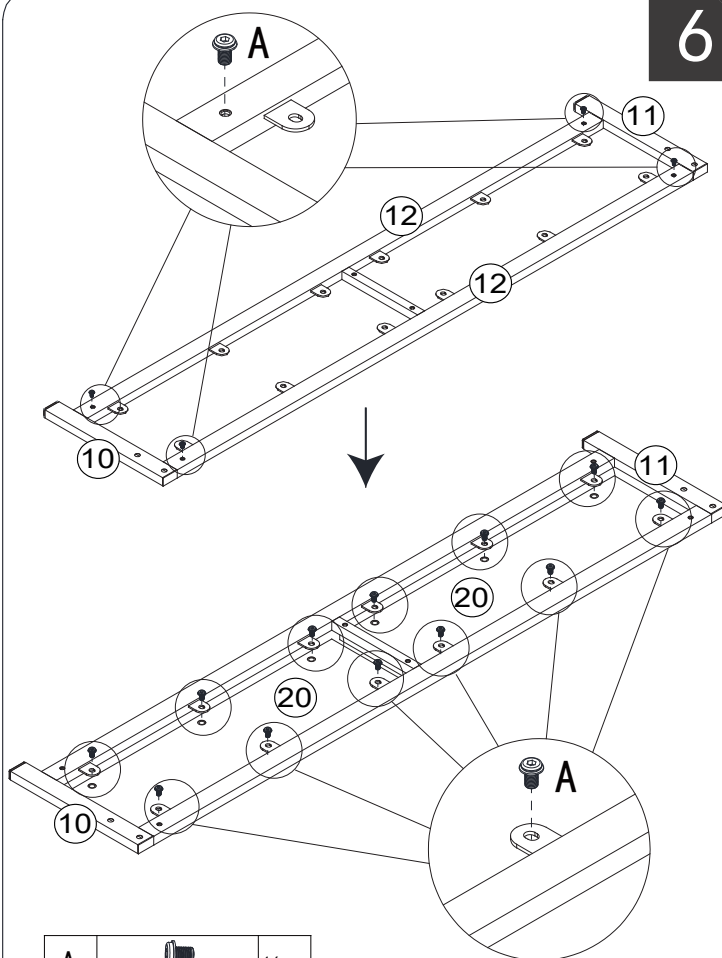



A		16pcs
M8x12		

X2


7

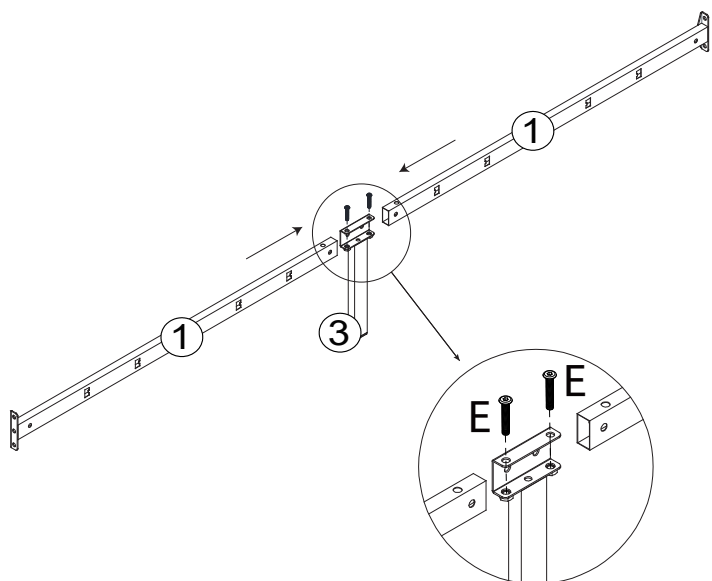


8

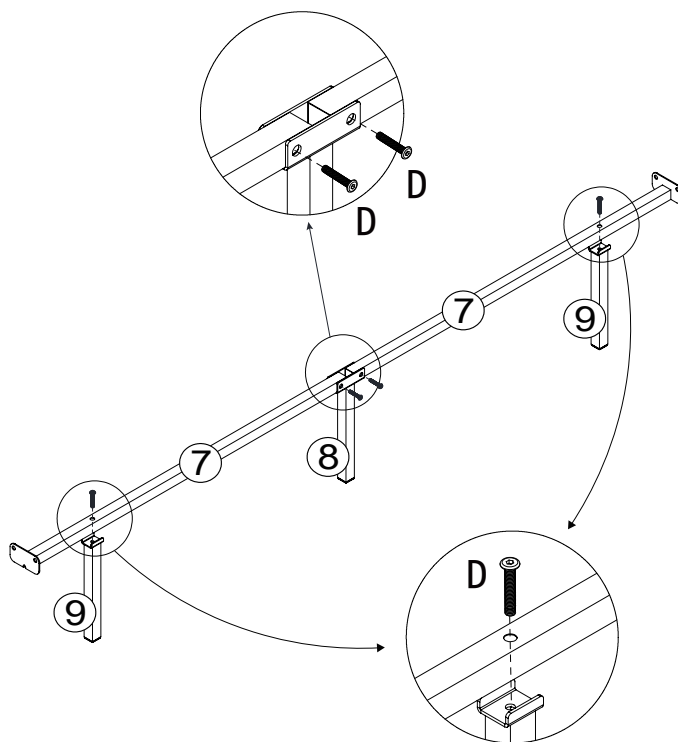


9

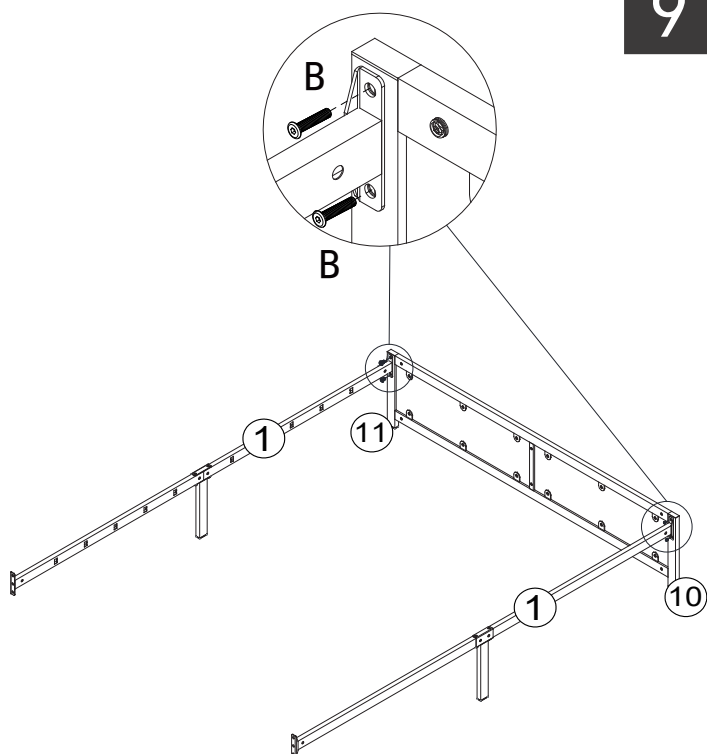

10

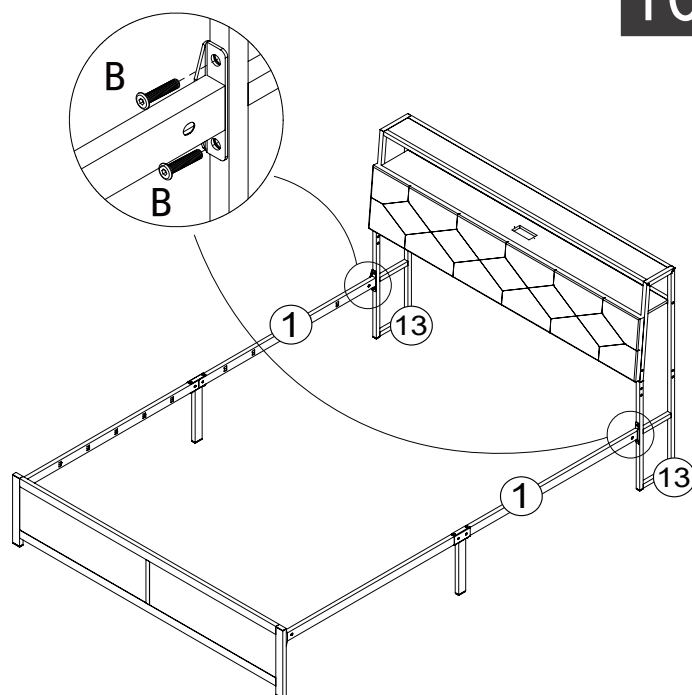


11

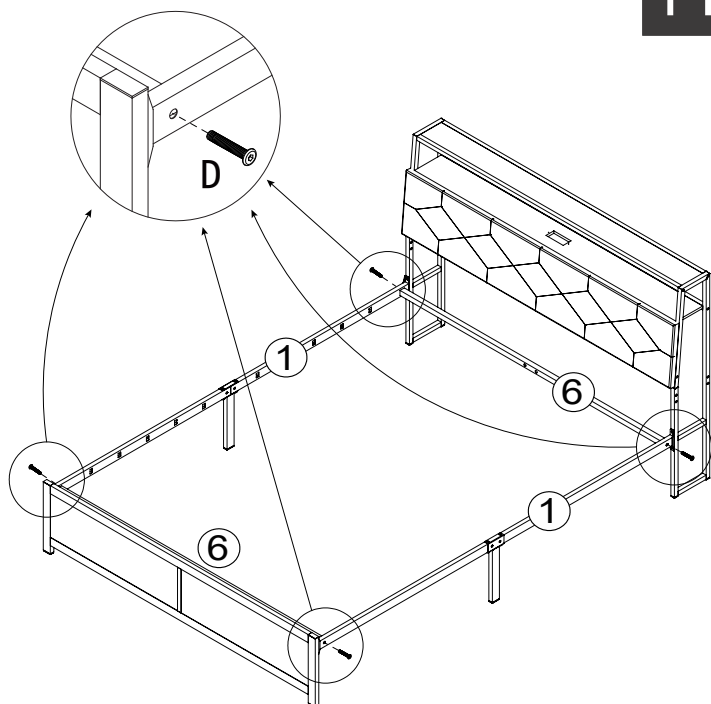


D		4pcs
	M8x40	

12

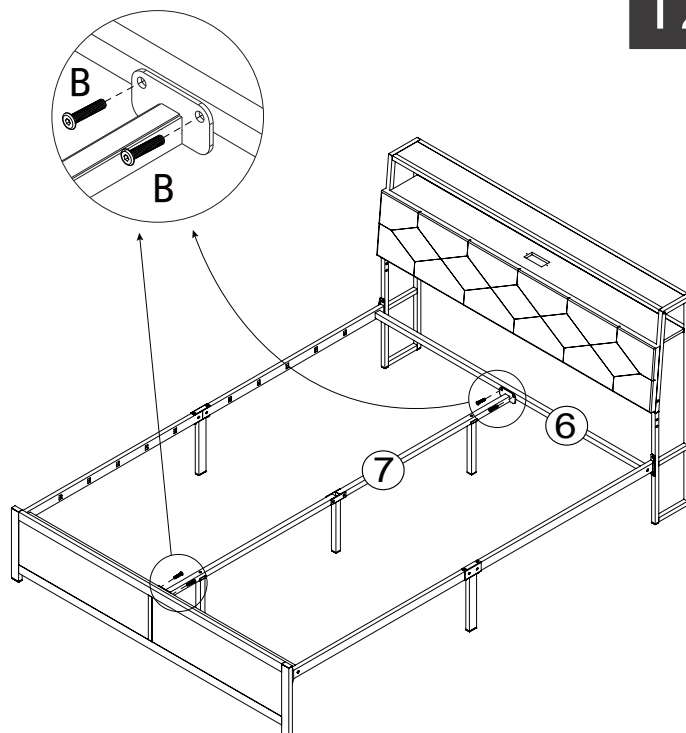

B		4pcs
	M8x20	


13

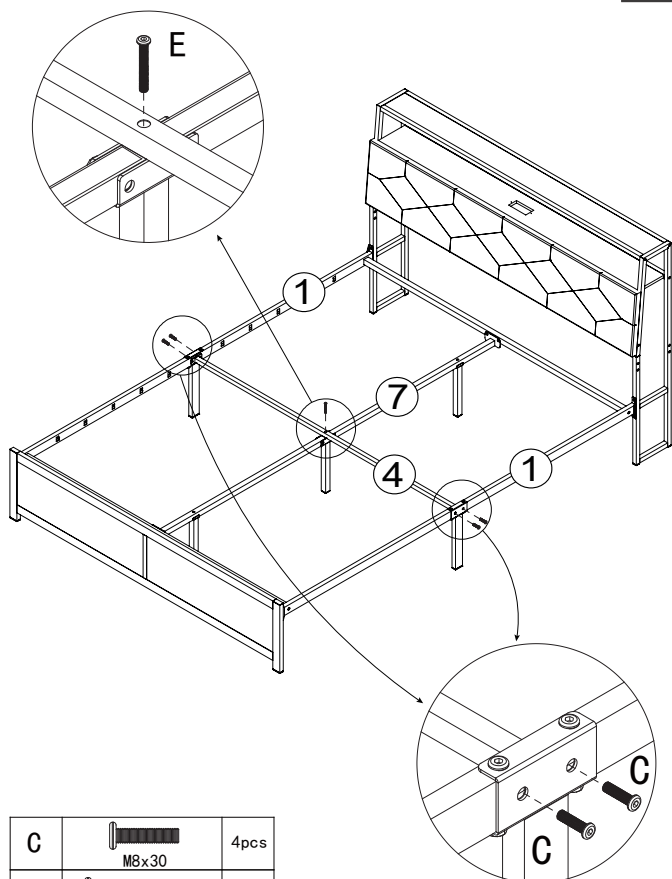

C		4pcs
	M8x30	
E		1pc
	M8x55	


X2

14

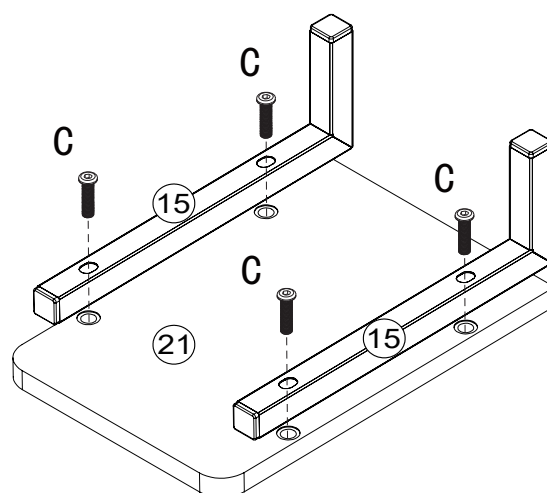


C		8pcs
	M8x30	

15

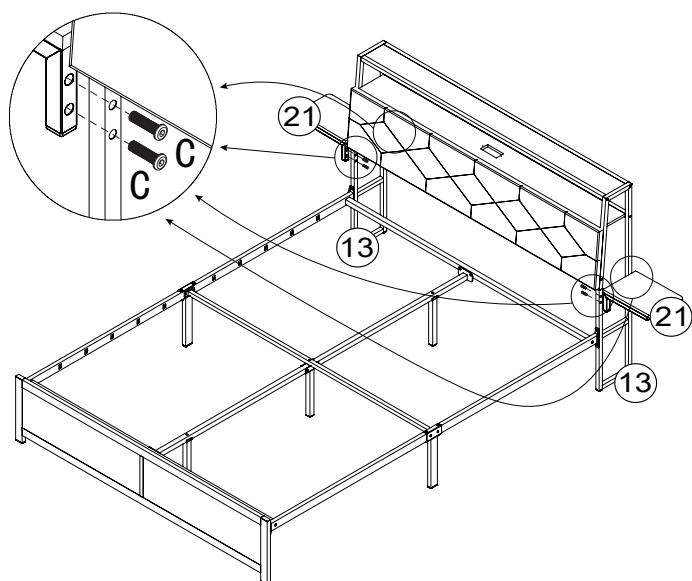


C		8pcs
	M8x30	

16

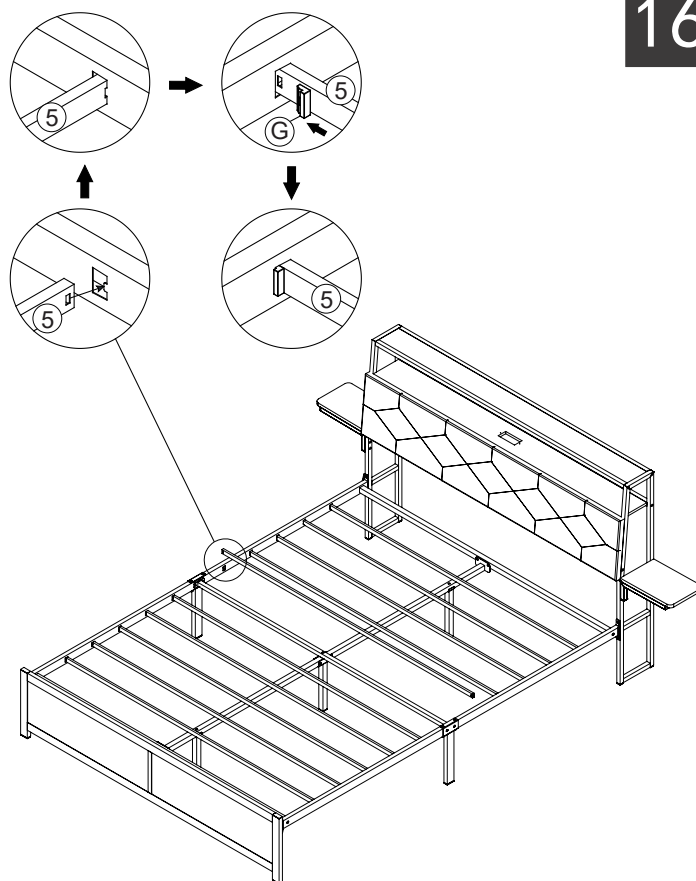


G		20pcs
---	---	-------

17

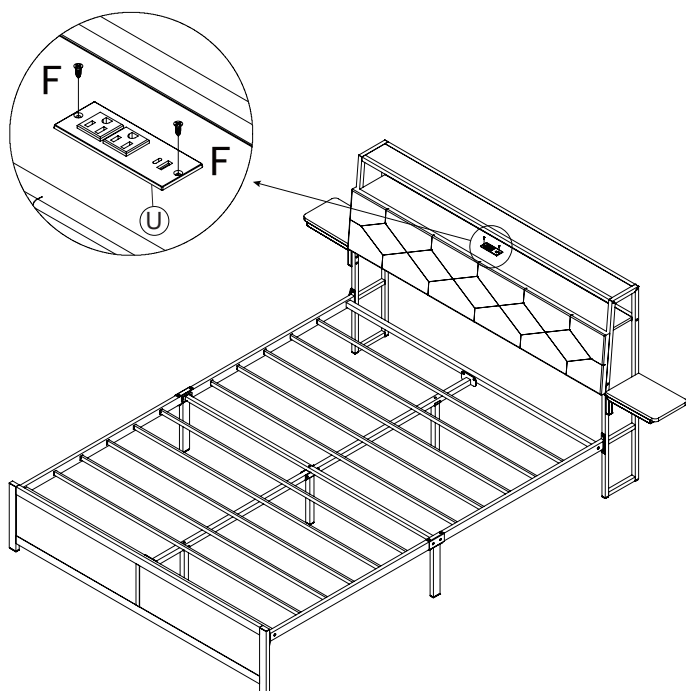

F		2pcs
	ST3.5x12	

18

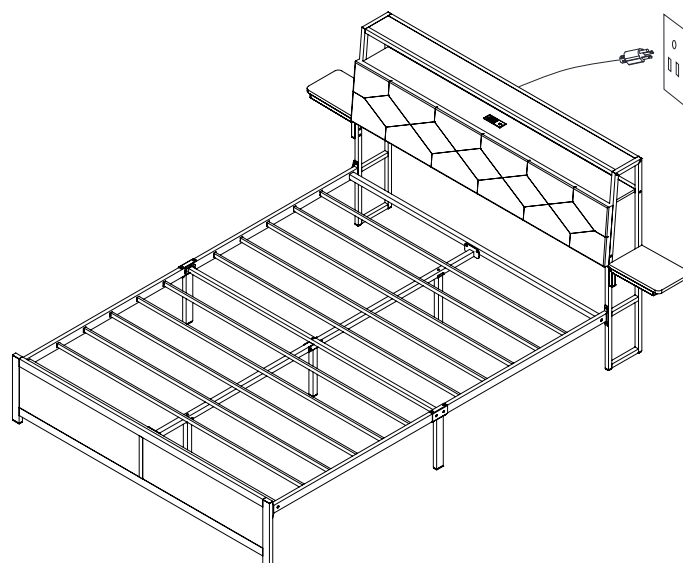

Finish