



Installation Manual

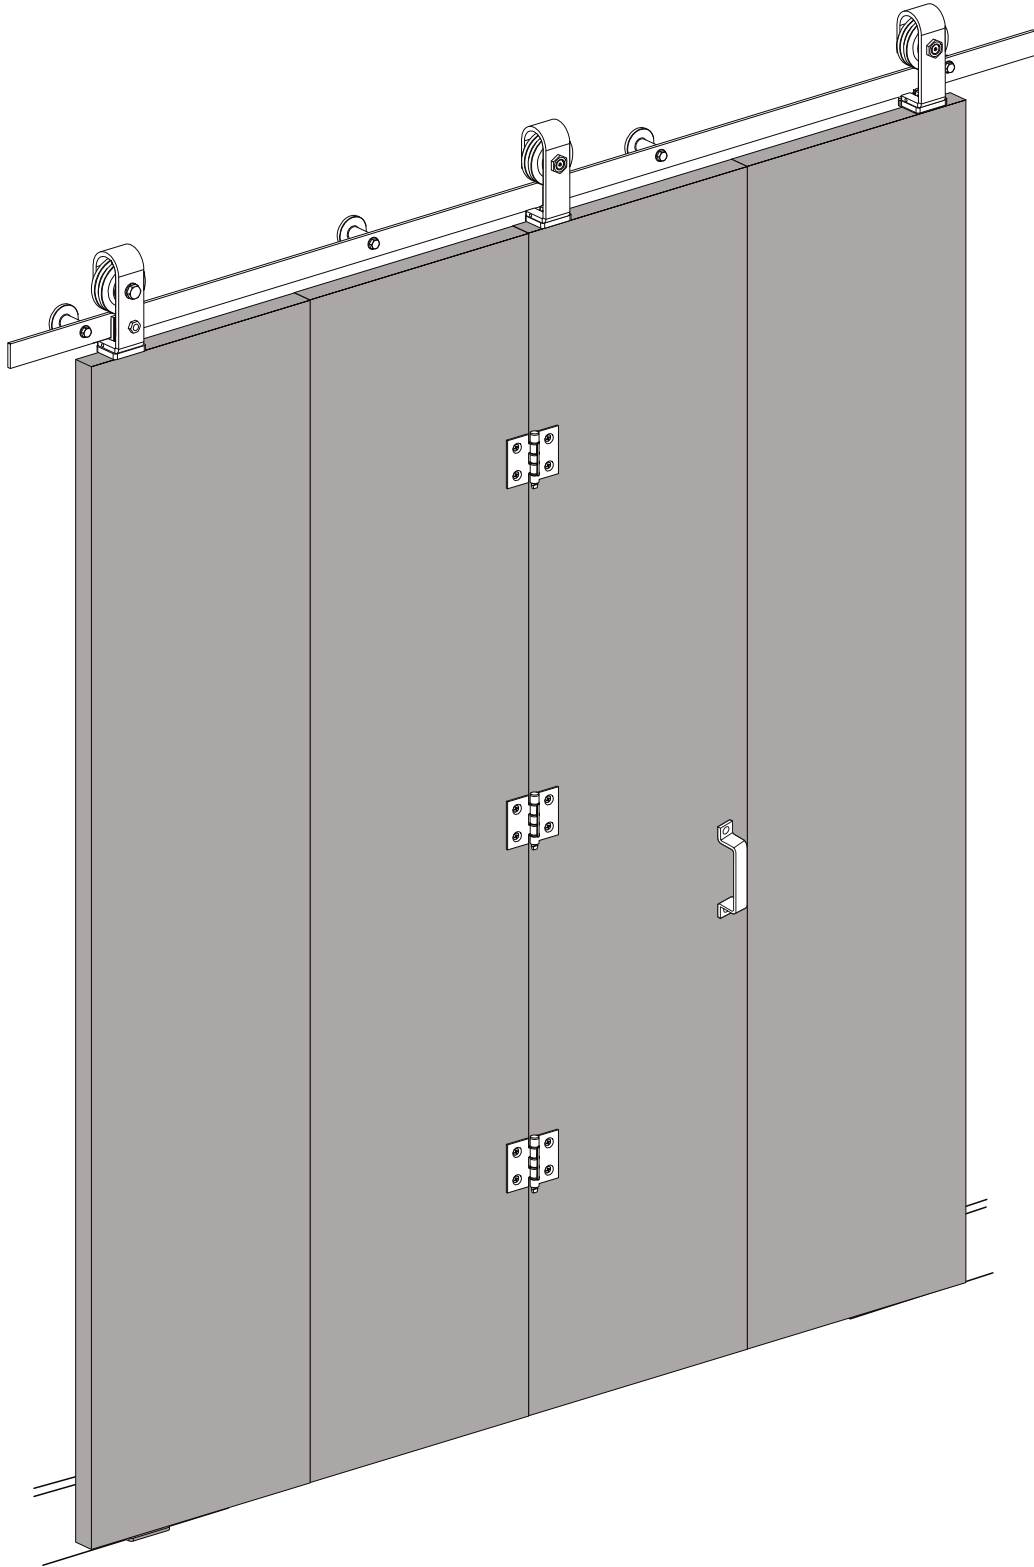


Components list








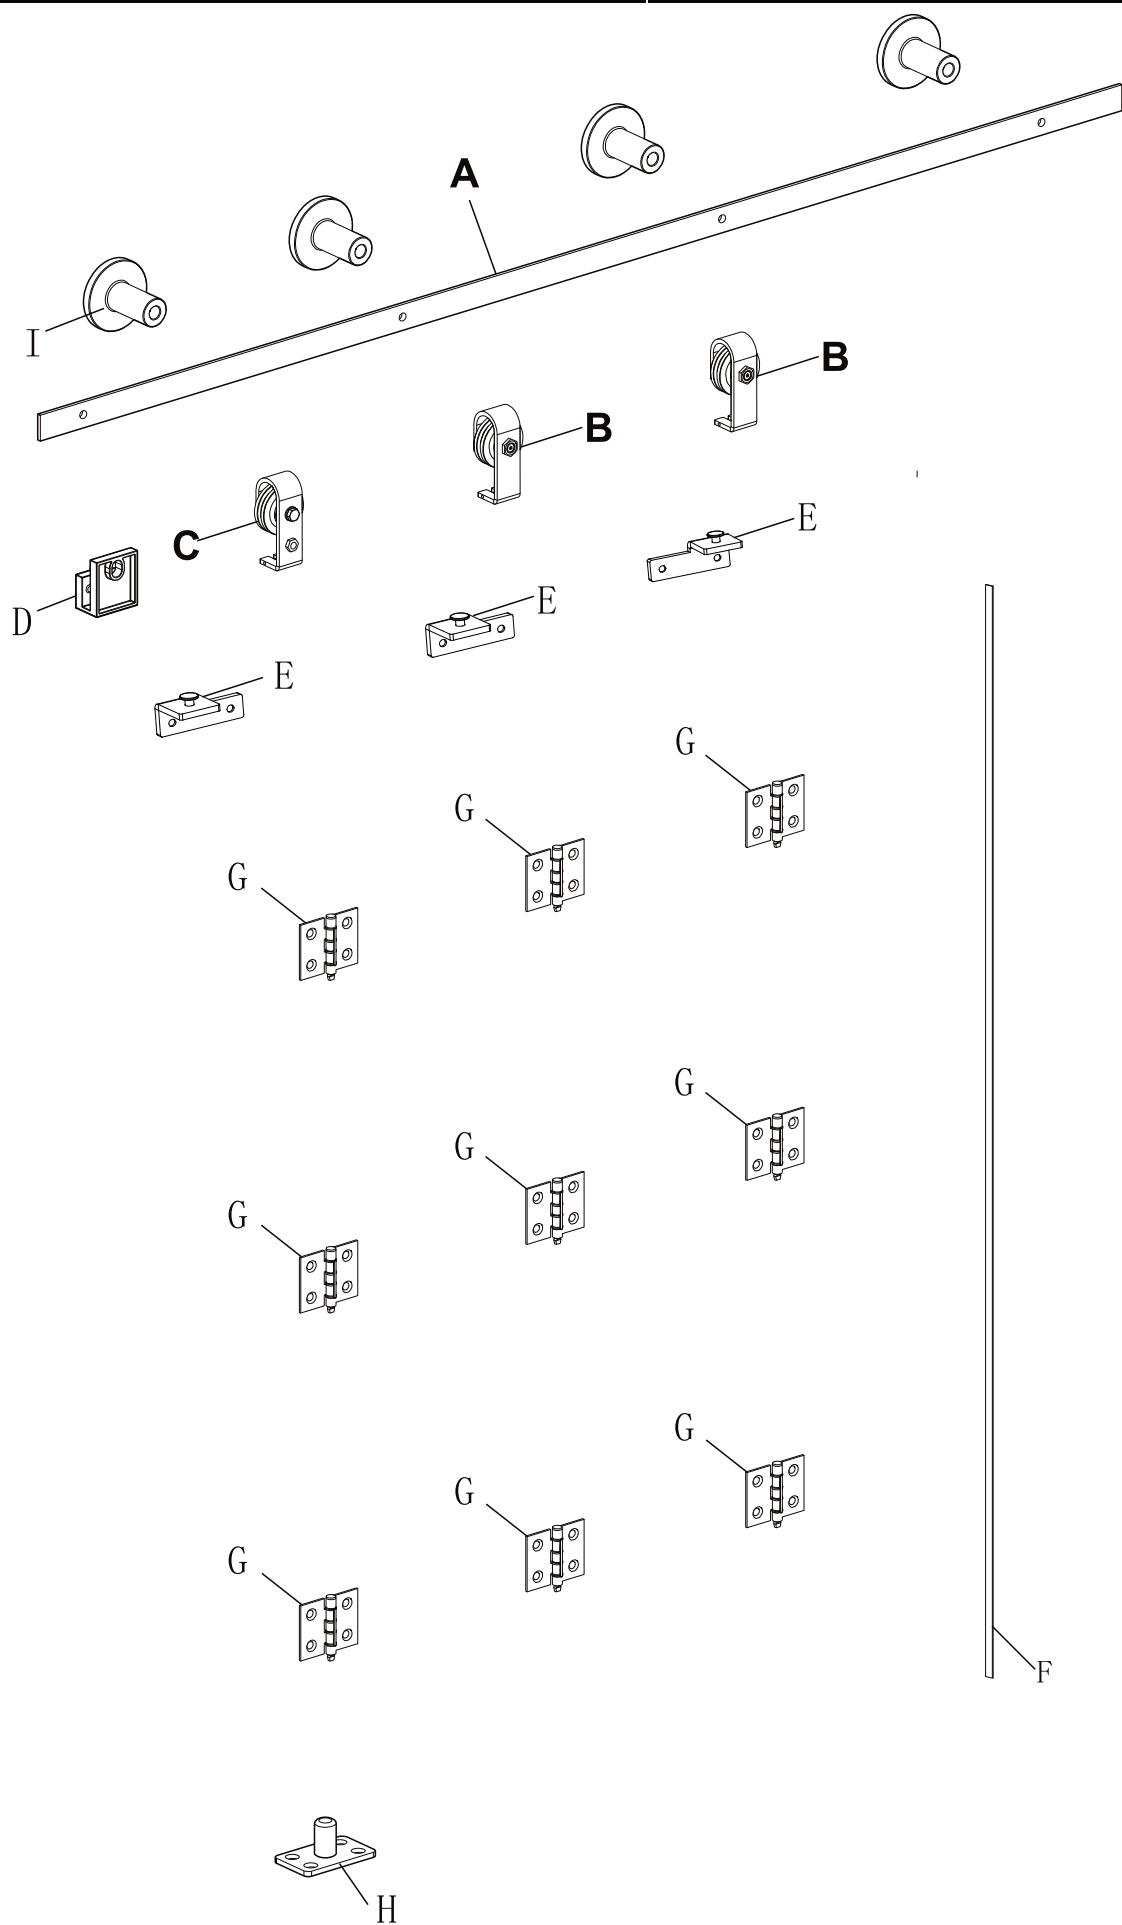


Pre-installation


TOOLS REQUIRED

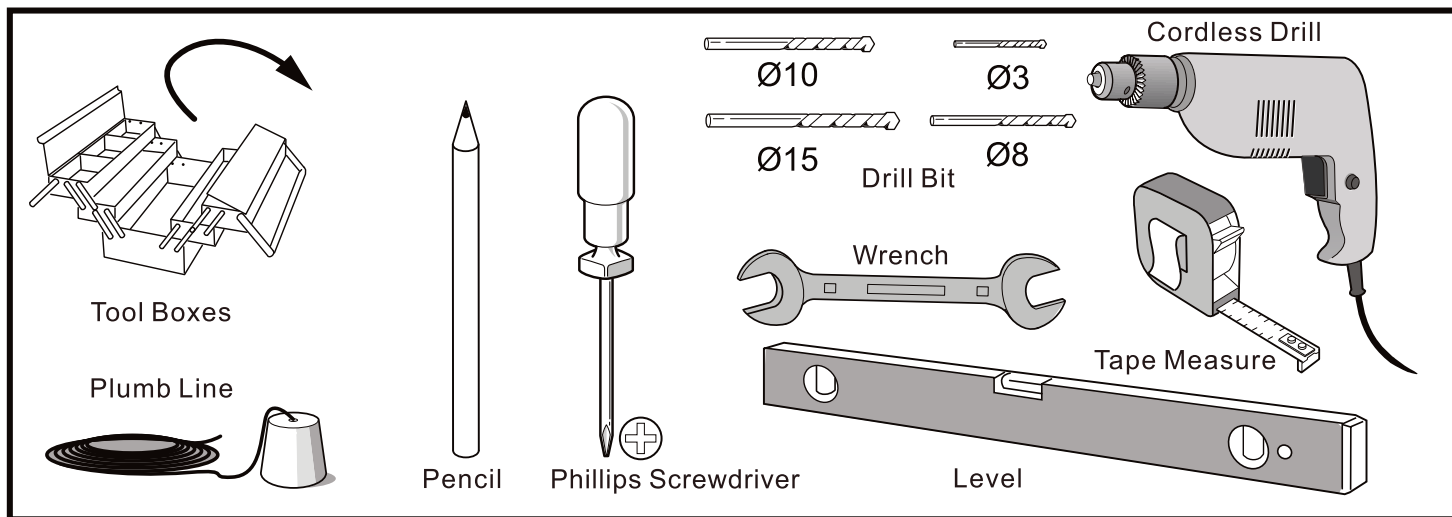

HARDWARE INCLUDED

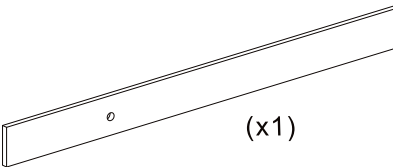A  (x4) Washers  Ø10(x4) Wall Screw  8x110(x4) Anchor Floor	 (x1) Track	B  (x2) Movable Pulley	C  (x1) Fixed Pulley  (x1) Nut  M5x26(x1)
D  (x1) Fixator  M5x6(x2) Screw	E  ST 6 X 30 (x6) Anchor Floor  (x1) Pulley Base  (x2) Pulley Base	F  x1	
G  (x9)  6X25(x36)	H  (x1) Socket  (x1) Floor Guide  Ø8(x4)  ST4. 2X32(x4)	I  (x4) Wall Spacer	
J  2mm 2.5mm 4mm Allen Wrench Set	K  (x1) Door Handle  (x2)		


Installation

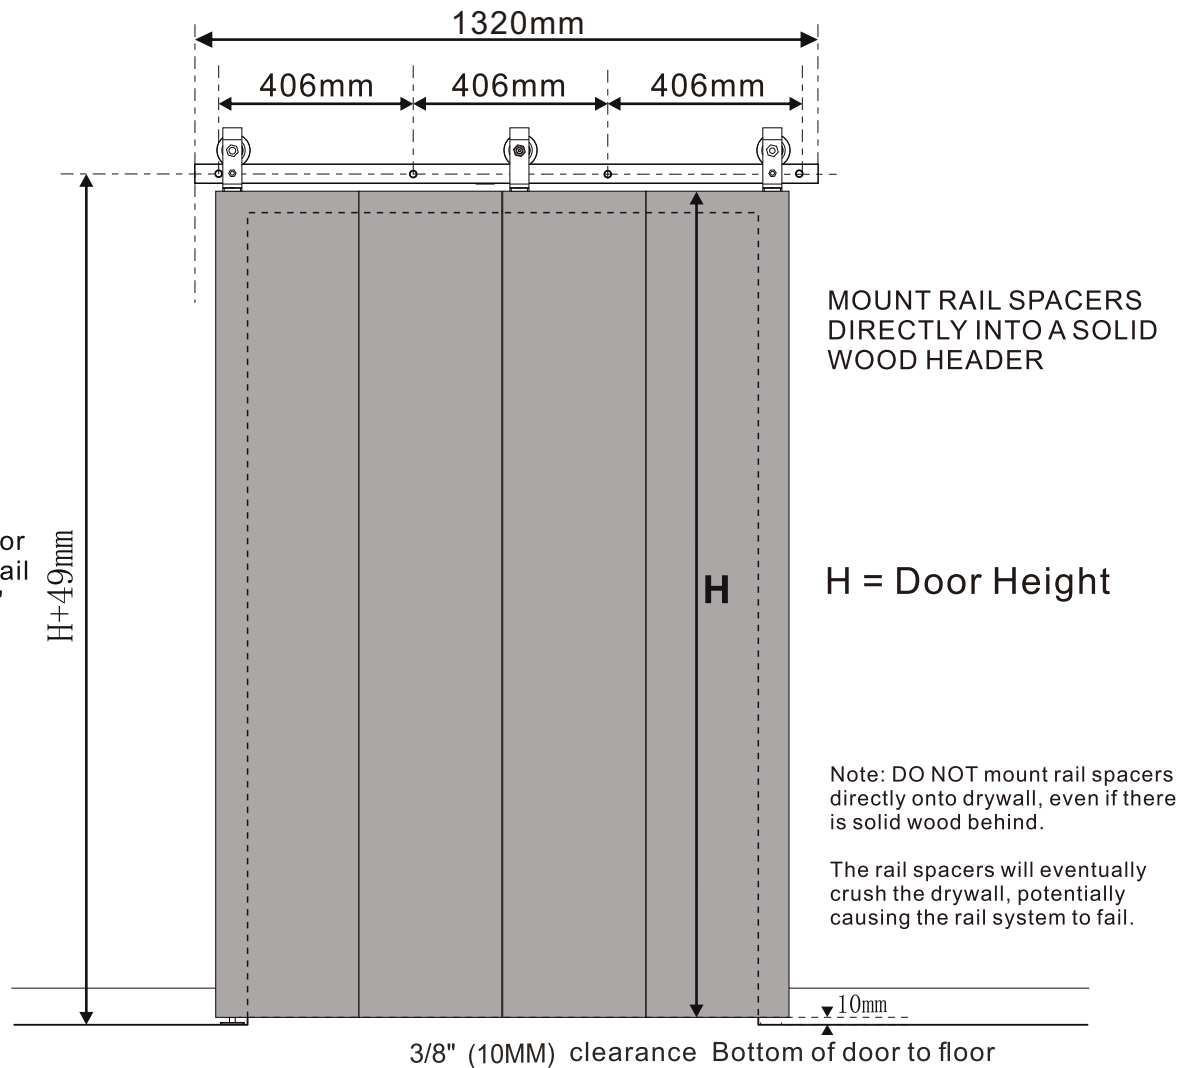

1

Locate spacer holes


1. Location of track = $H + 1 \frac{15}{16}"$ (49mm)
2. Use your guide marks to position the track in place, ensuring that it is level.
3. Mark the mounting holes on the track using a pencil.

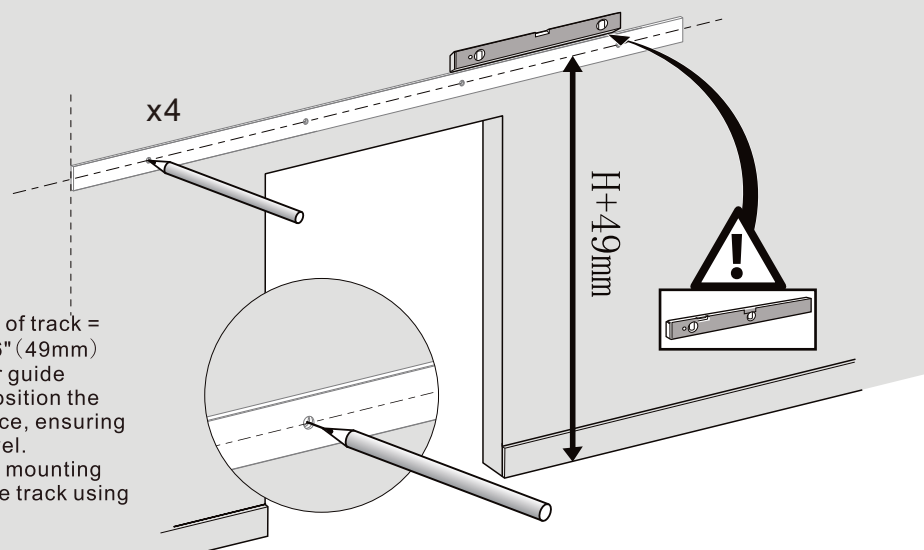

Installation

2

Drill holes

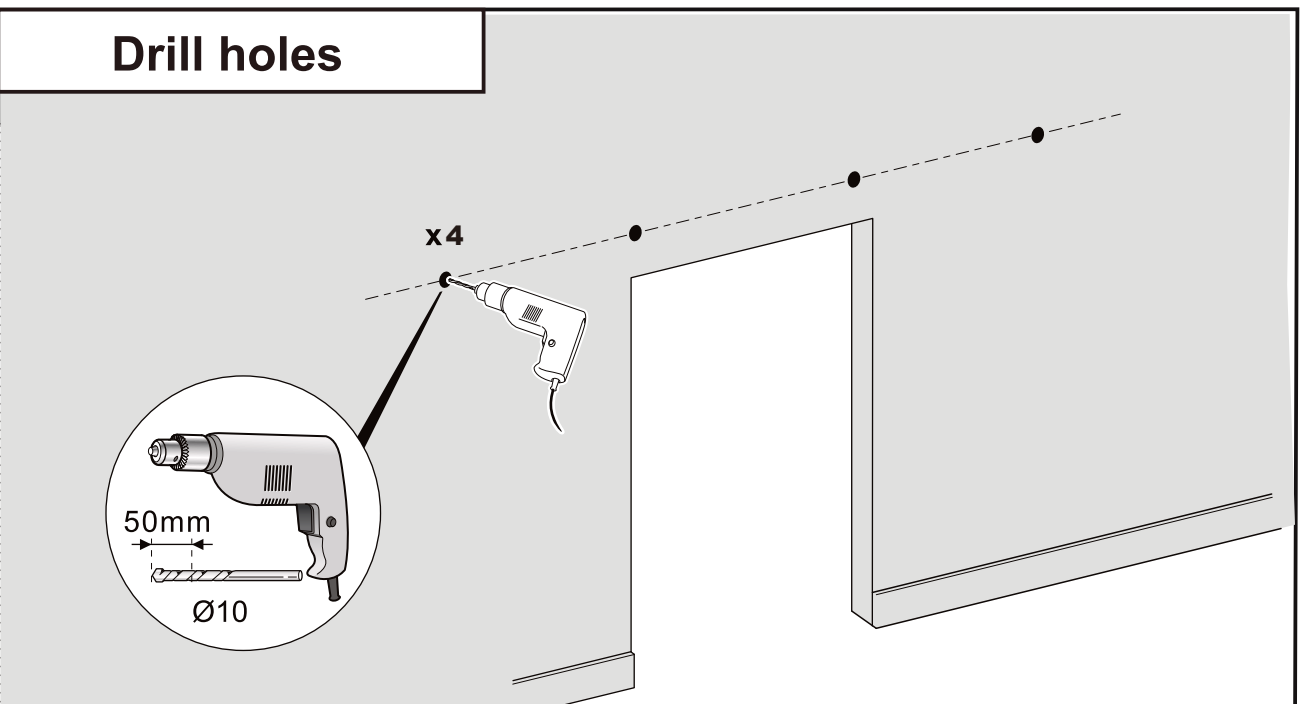



Bit diameter: $\frac{3}{8}$ " (10MM)

Borehole depth: $1\frac{31}{32}$ " (50MM)

Then, pre-drill $\frac{3}{8}$ " (10mm) holes into the concrete according to your marks.

3

Install Track

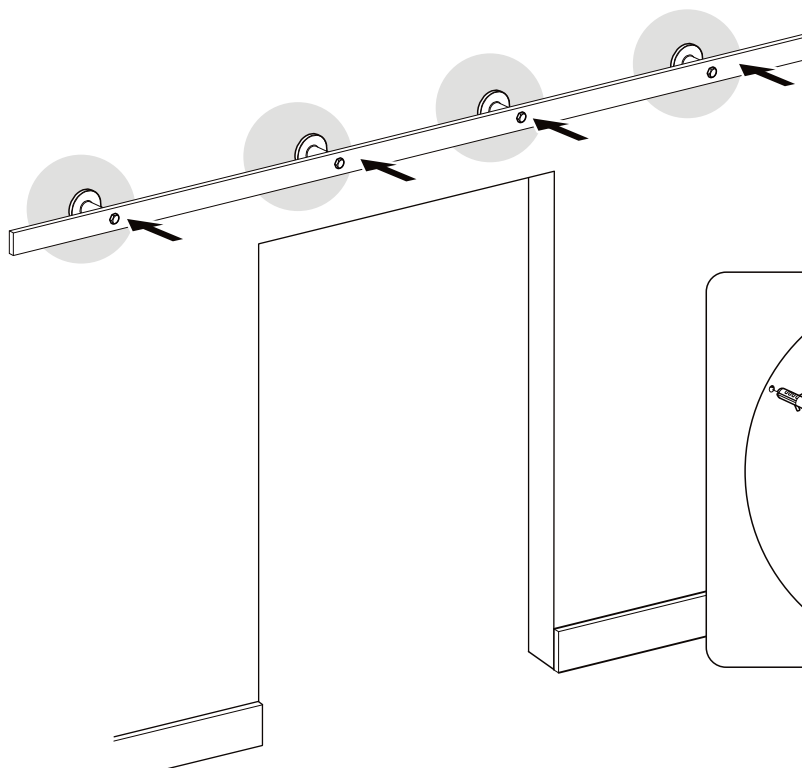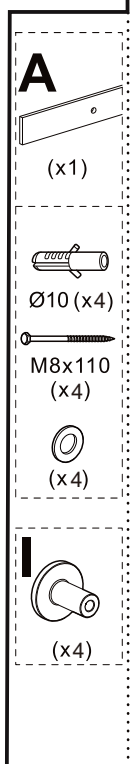




Insert the provided anchors and carriage bolts (with washers). Unscrew and separate the carriage bolts and anchors, and take care to install correctly, securing with a wrench.

(X4)

4




Install hinges

Link the 4 door panels using the hinges G in order of labeling A1 A2 A3 A4. (Note that the labeling is on the back of the door panel)

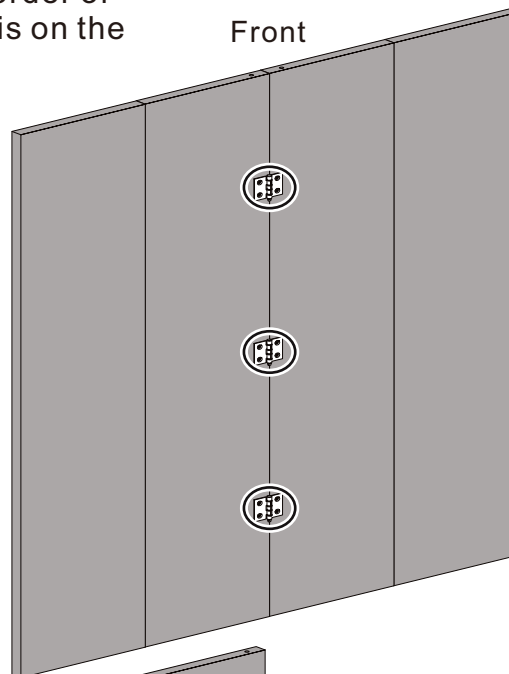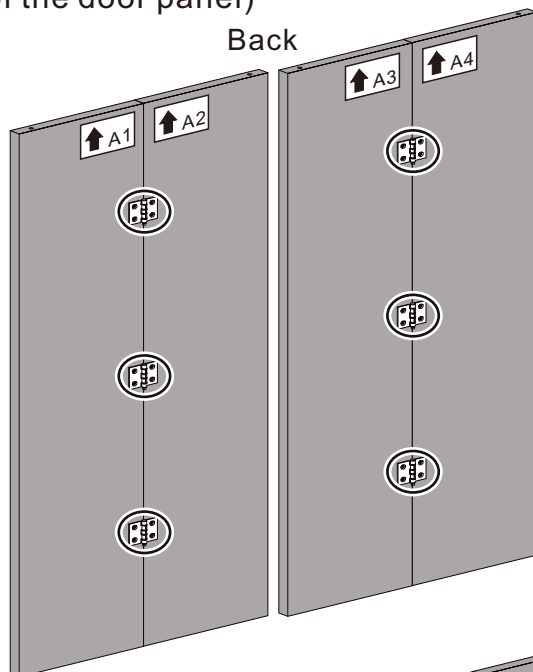

Lay Panels side by side on a flat, clean surface. Push the Panels together and mount hinges in pre-drilled pilot holes. Mount Top Hinge/Center Hinge/Bottom Hinge at the door as shown.

Note: Use Short Screws

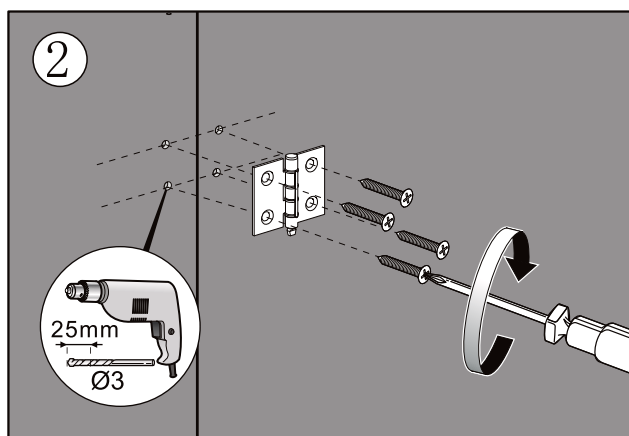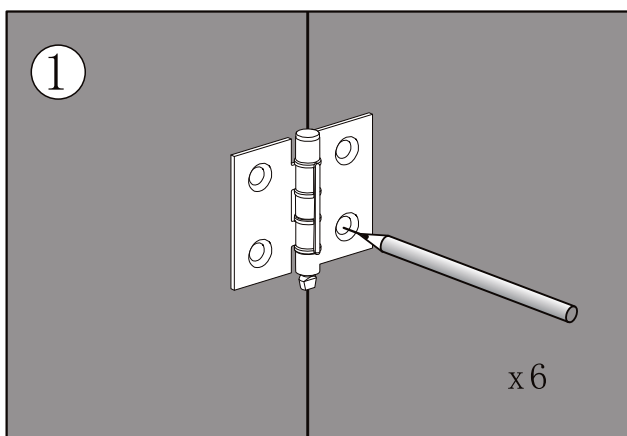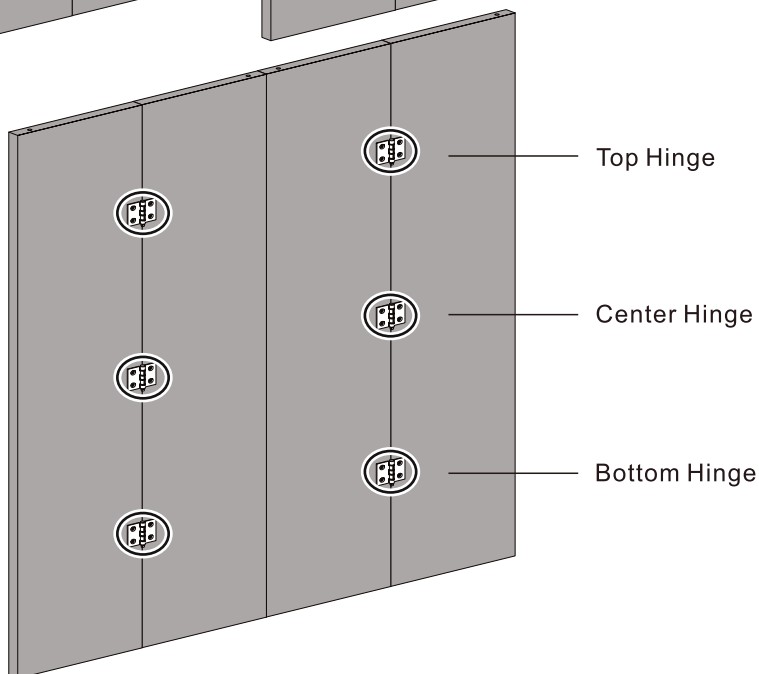

Bit diameter: $\frac{3}{16}$ " (4.8MM)
Borehole depth: 1" (25MM)

5


Install pulley base E

Drilling a pilot hole before using a screw to prevent cracking the wood.

E



(x1)




(x2)

E



ST6X30
(x6)

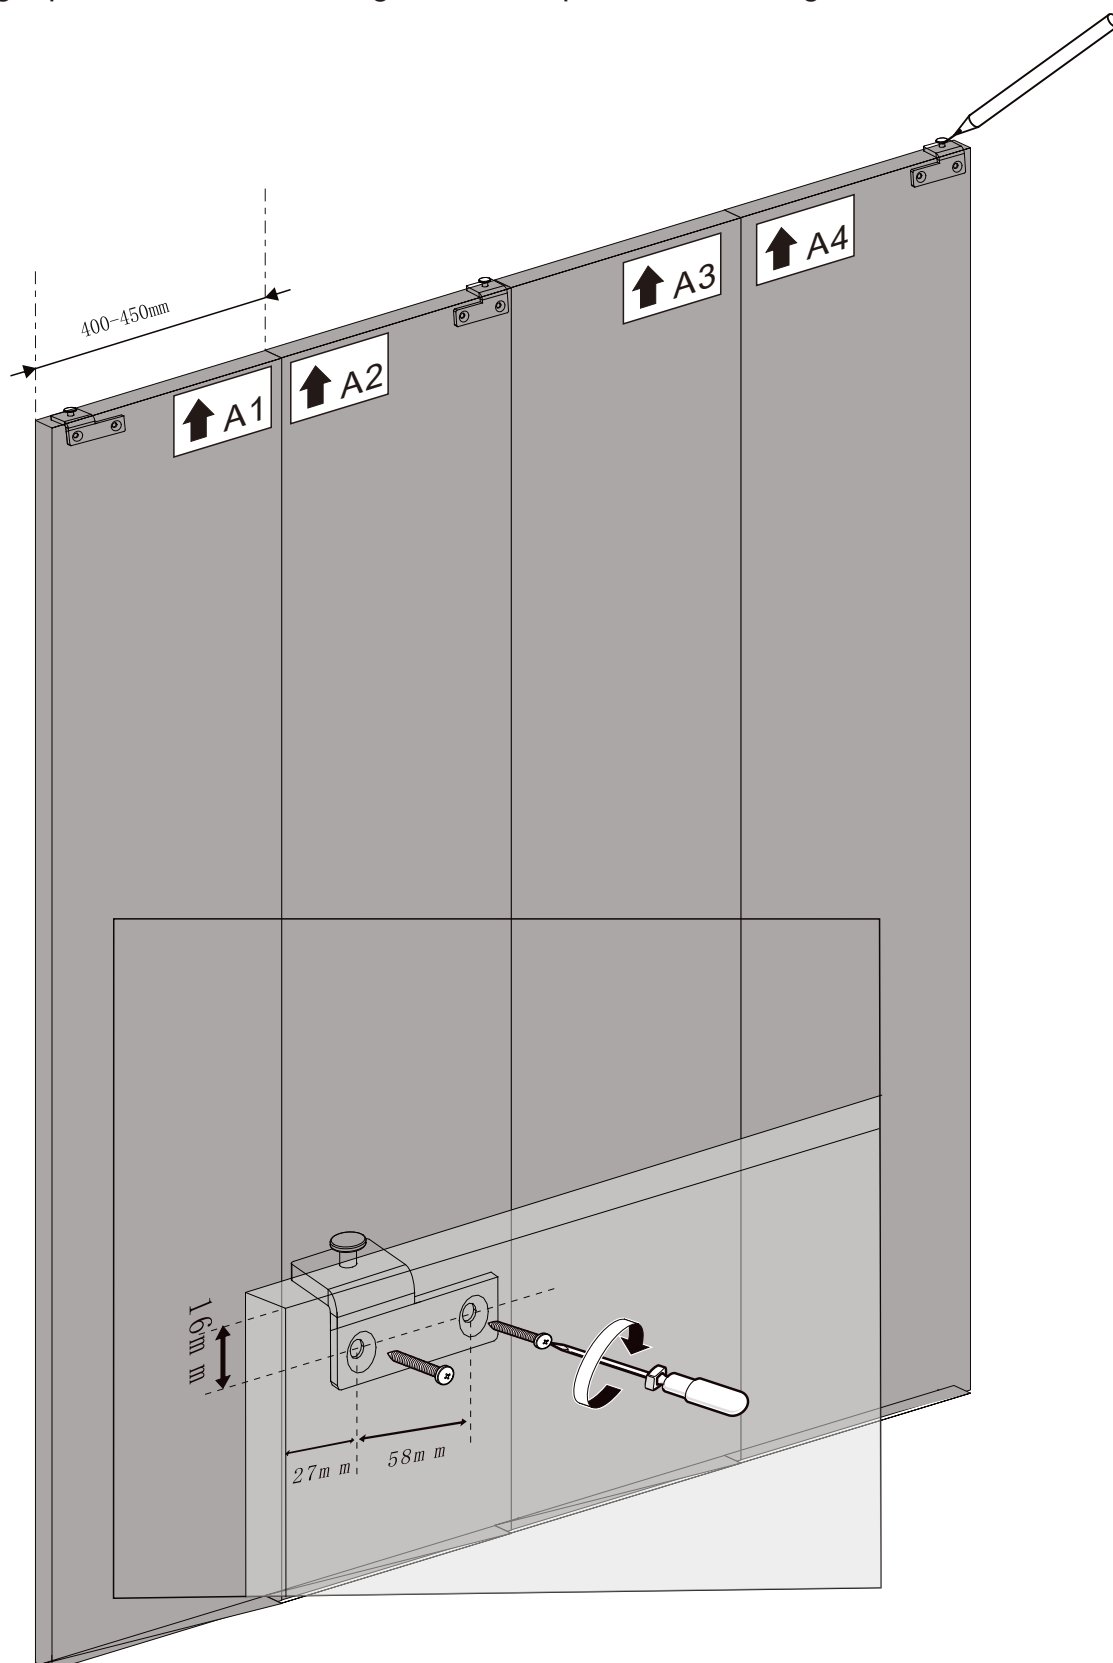

Note: Be sure to pre-punch the holes according to the standard dimensions shown in the diagrams so that the door panels will operate properly.

6


Hang up pulley

C




(x1)

B



(x2)

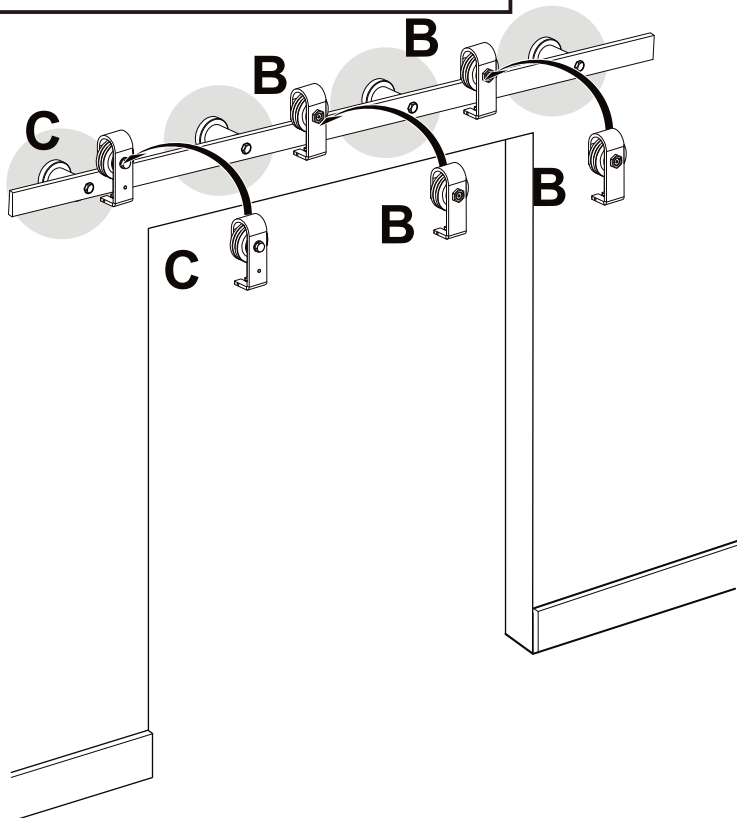


Hang the Fixed Pulley and the Movable Pulley in the correct positions on the track

7

Install floor guide H

H




(x1)



(x1)



ST4, 2X32
(x4)



Ø8 (x4)



≥30mm

≥ 1 3/16" (30MM)

Tip: The min. spacing from central position of fixed pulley C to spacer is 1 3/16" (30MM).




≥30mm

Adjust with a plumb line so as to make vertical

Bit diameter:
5/16" (8MM)

Borehole depth:
1 3/8" (35MM)




Position the floor-guide just outside the opening of the door frame. Slide the door side-to-side to test for functionality, then mark the holes with a pencil and punch a hole with diameter 5/16" (8mm) depth 1 3/8" (35mm). Then put the socket on the hole, and knock it in with a wooden hammer. Finally, put the floor guide into the socket.

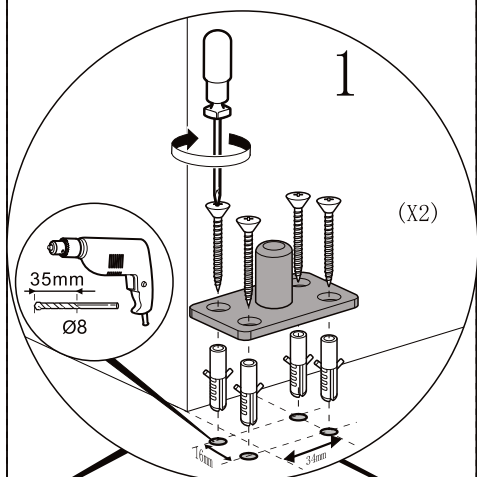


4L-70mm



≥30mm

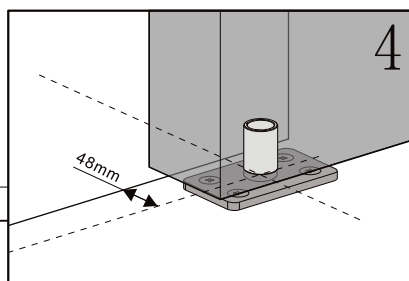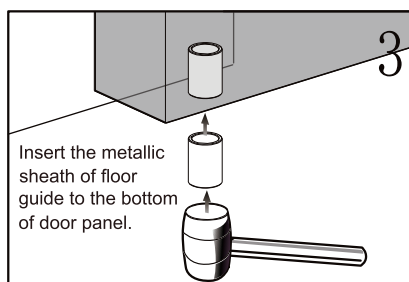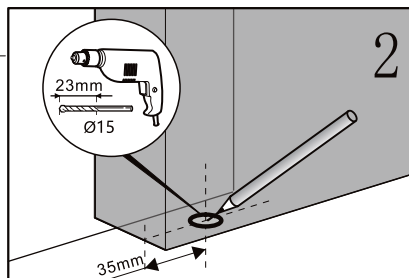

C




(x1)


J

2mm
(x1)


fixed pulley C

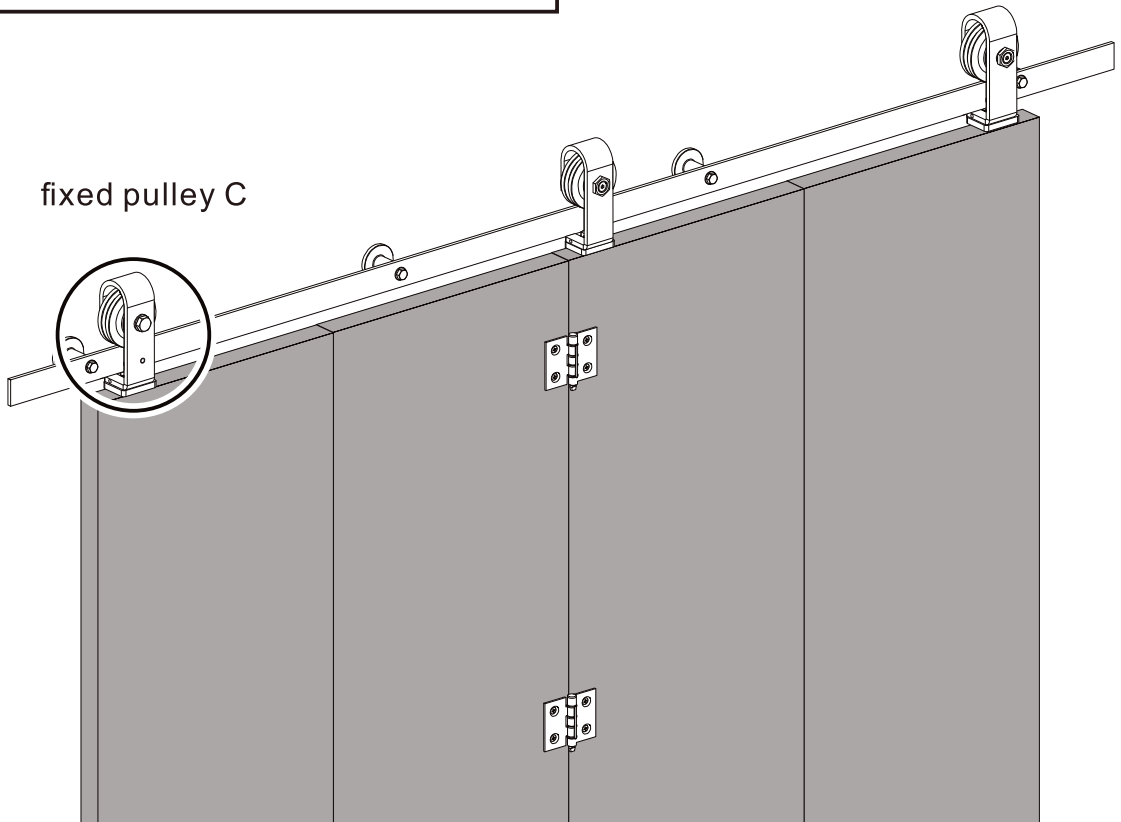


- ① Unscrew the small screw at the bottom of hanging pulley to install the **base E**.

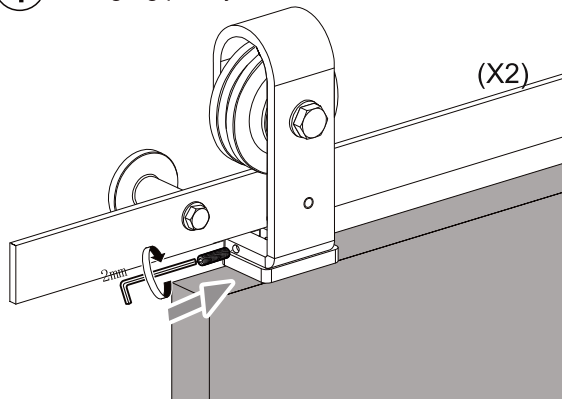

②

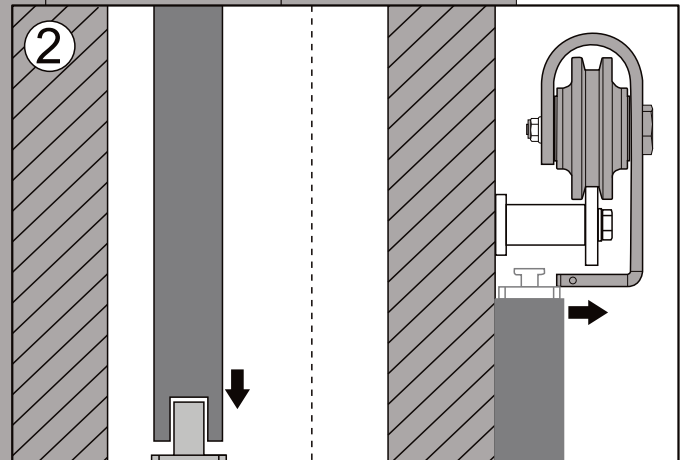

③

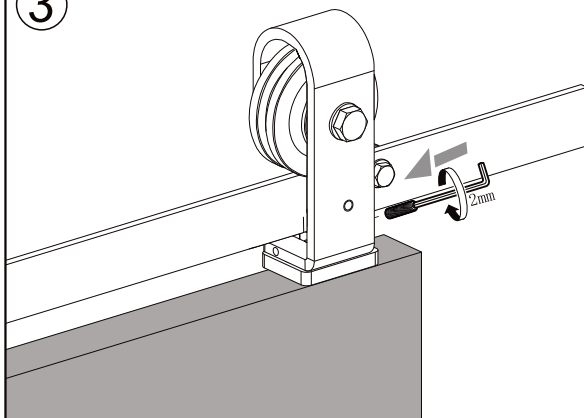

Unscrew the screw, adjust the position of the door and the floor guide, then push in the hanger roller slot, and fix it with screw.

Install movable pulley B

Unscrew the screw, adjust the position of the door and the floor guide then push in the hanger roller card slot, fix it with screws. Using a wrench to adjust the height of the hanger roller to a suitable position, and tighten it.



(x2)








J



2mm
(x1)



4mm
(x1)

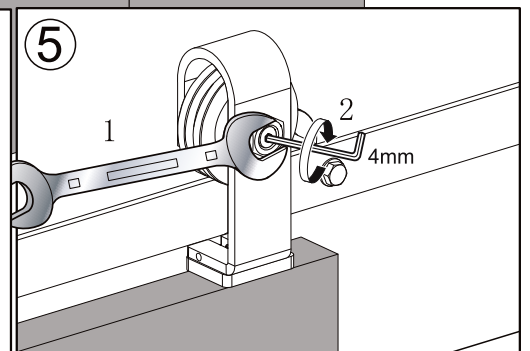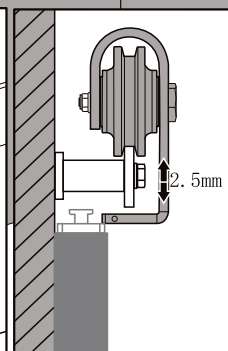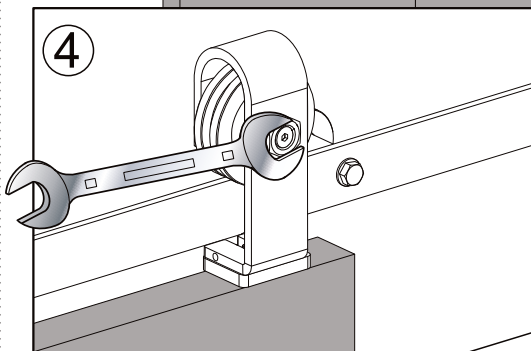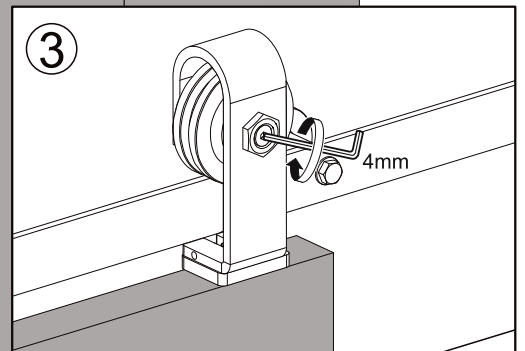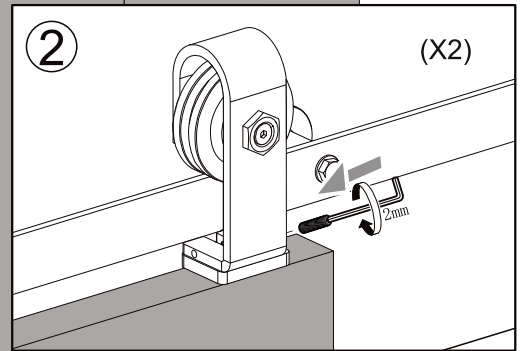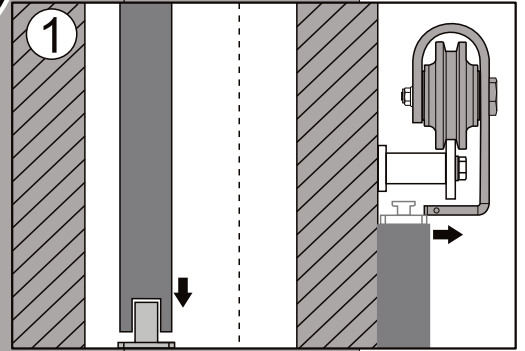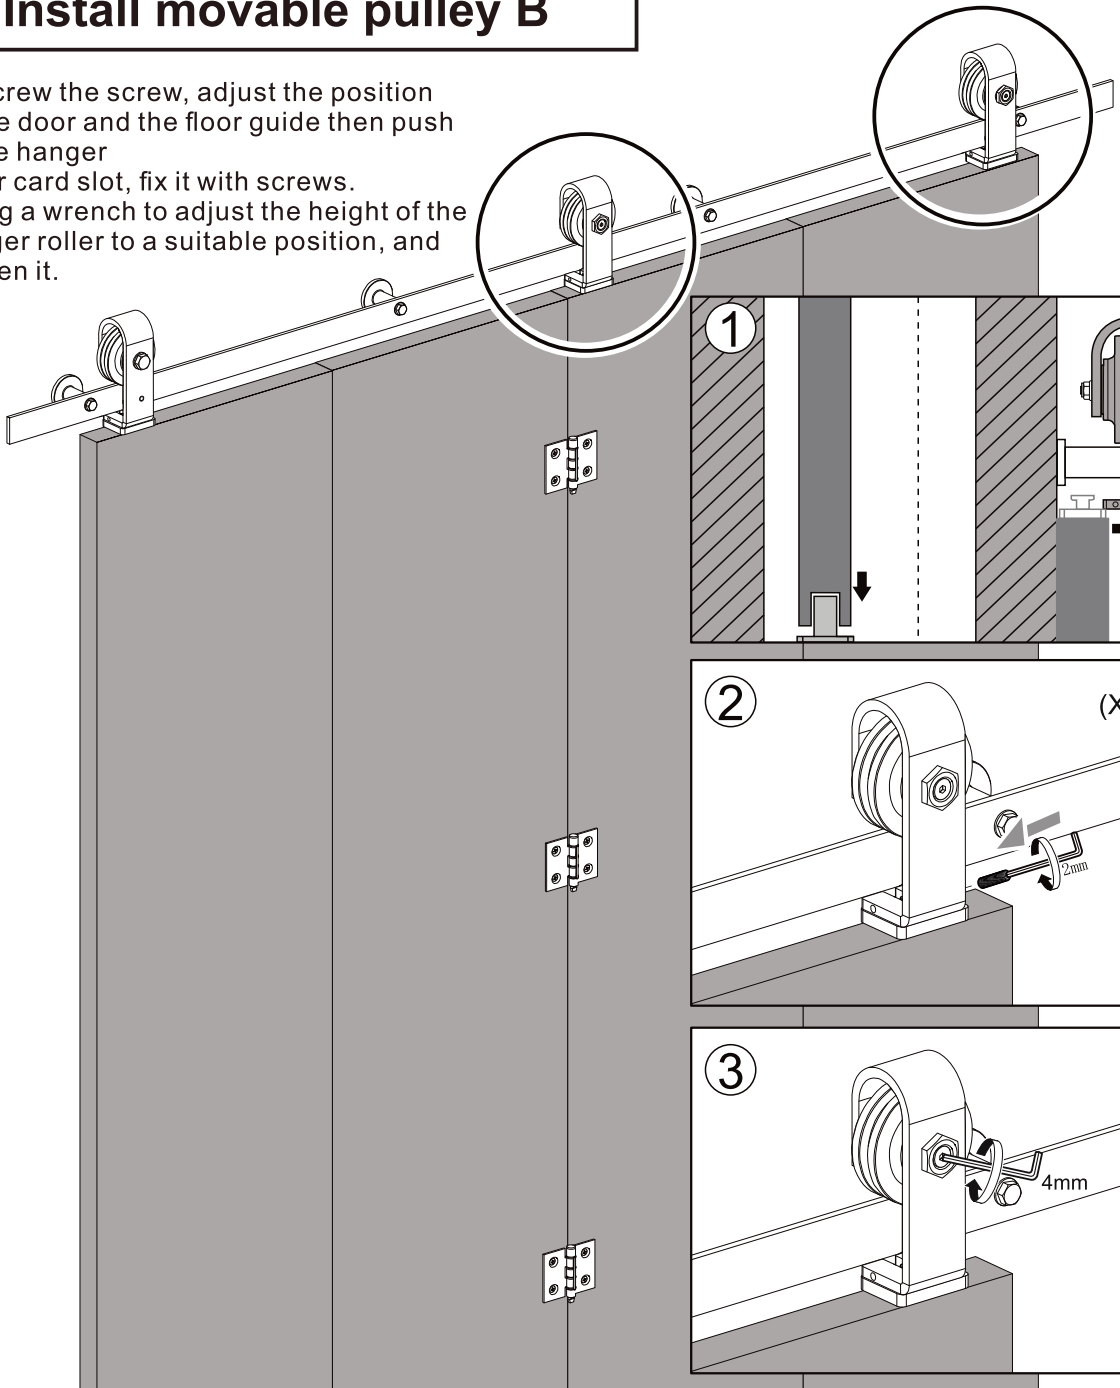

If the height of two doors are uneven, align them by adjusting the height of movable **pulley B** by hexagon wrench and wrench.
(adjustment range: **2.5MM**)

CM5x26
(x1)


(x1)

J2.5mm
(x1)**D**

(x1)




M5x6(x2)

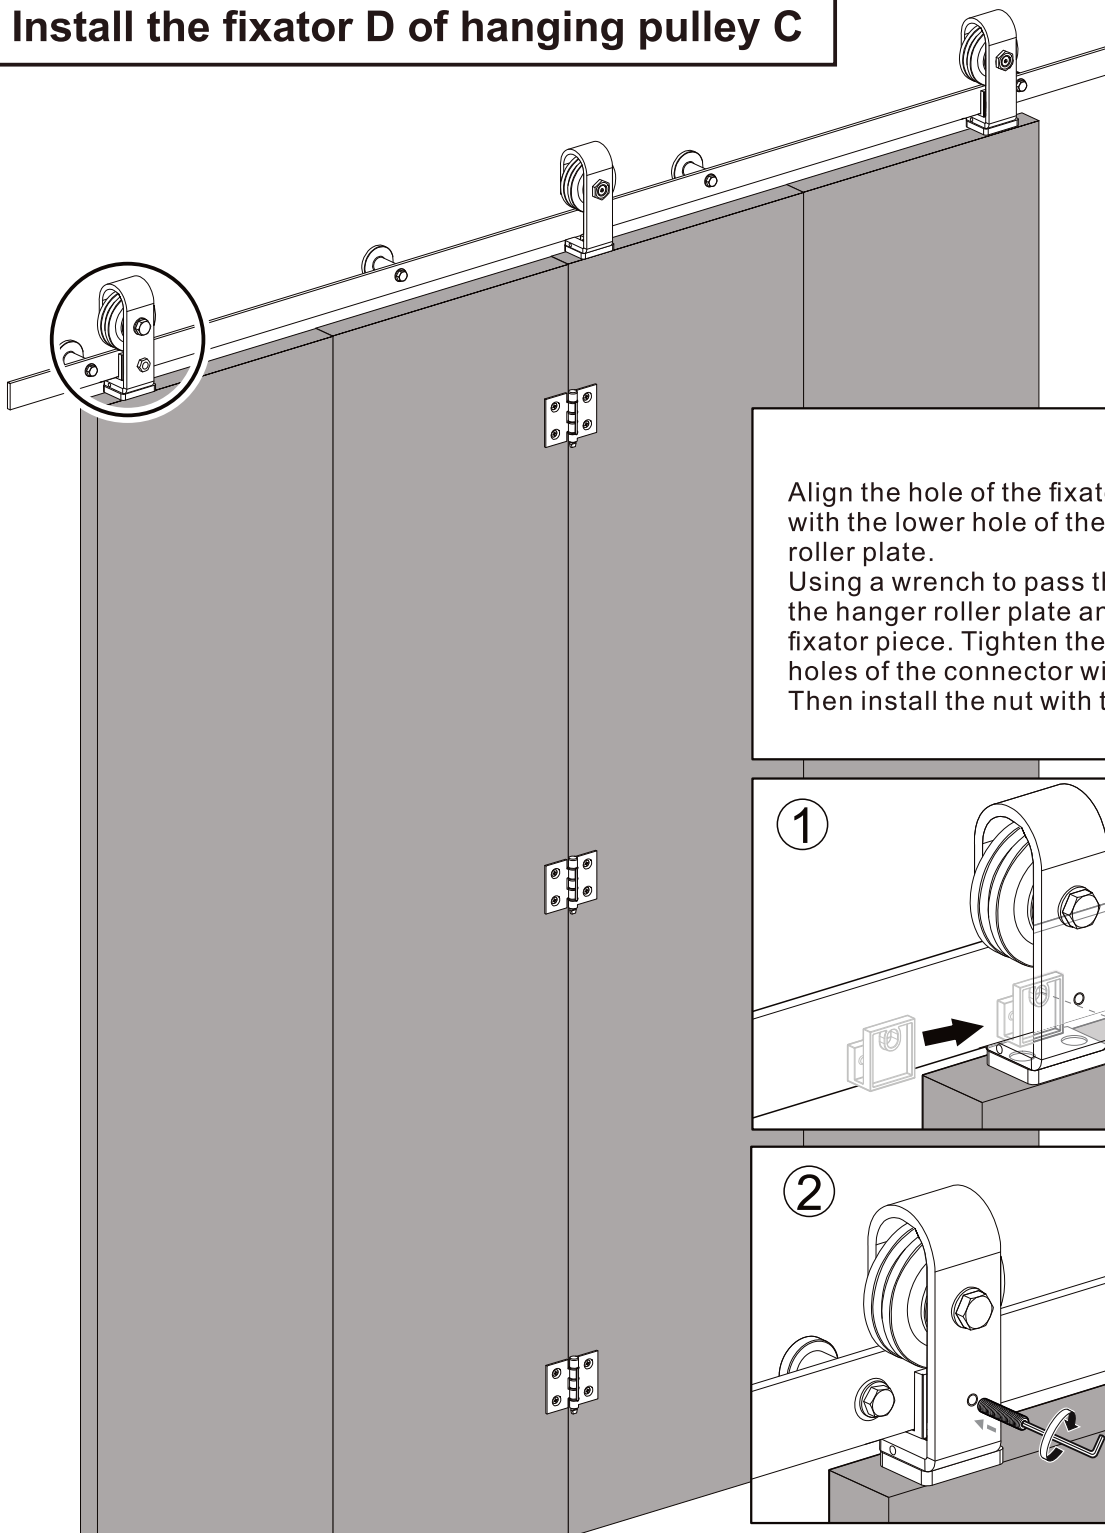


Align the hole of the fixator piece with the lower hole of the hanger roller plate. Using a wrench to pass through the hanger roller plate and the fixator piece. Tighten the other two holes of the connector with a screw. Then install the nut with the wrench.


①

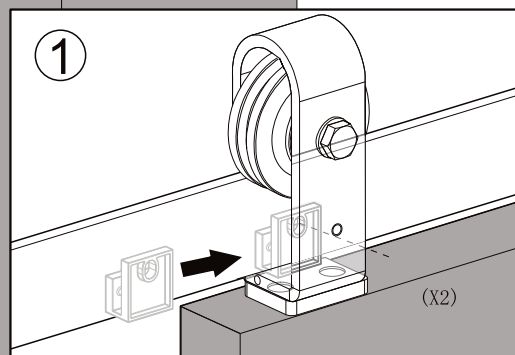


②

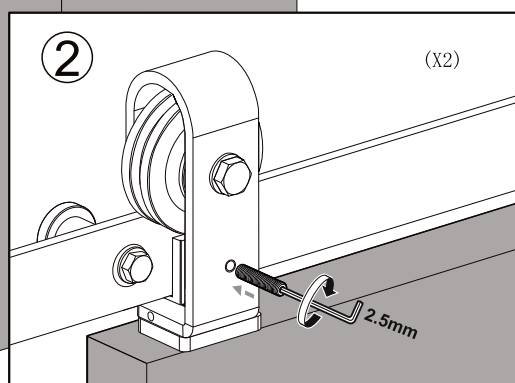

③

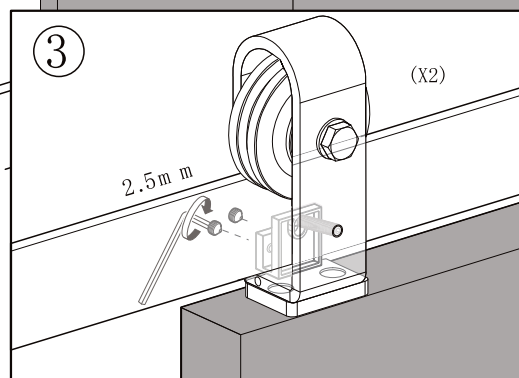


④

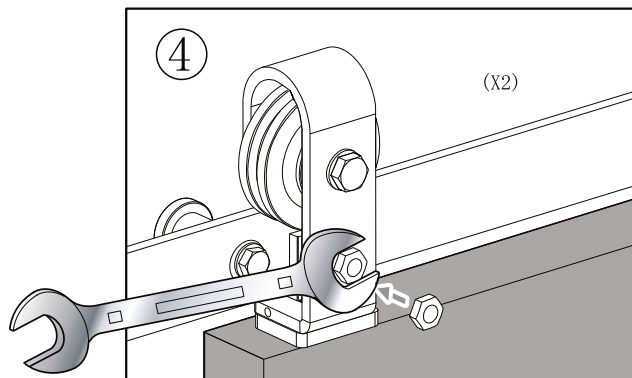

11


Attach the Door Handle

k

(x1)



(x2)

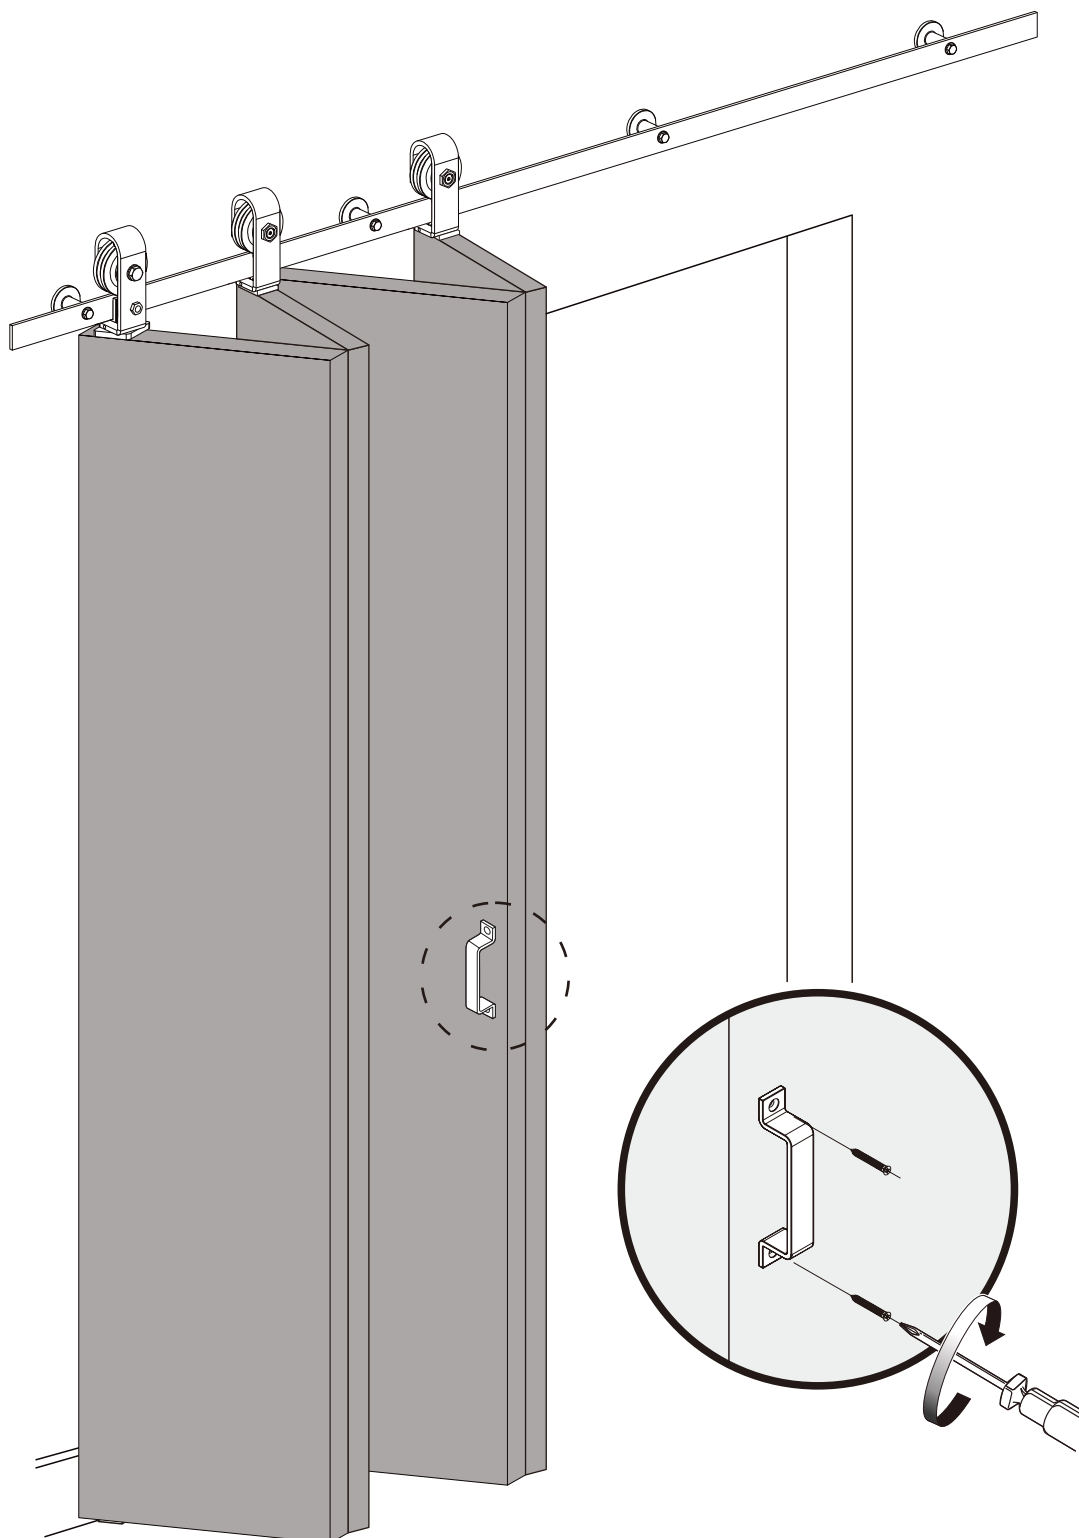

Only use screws to mount the door handle in the pre-drilled pilot hole.