


ASSEMBLY INSTRUCTIONS

2634K




Weight Capacity Max to 700LBS



Mattress Size :






80"L x 76"W x (8"-12")H

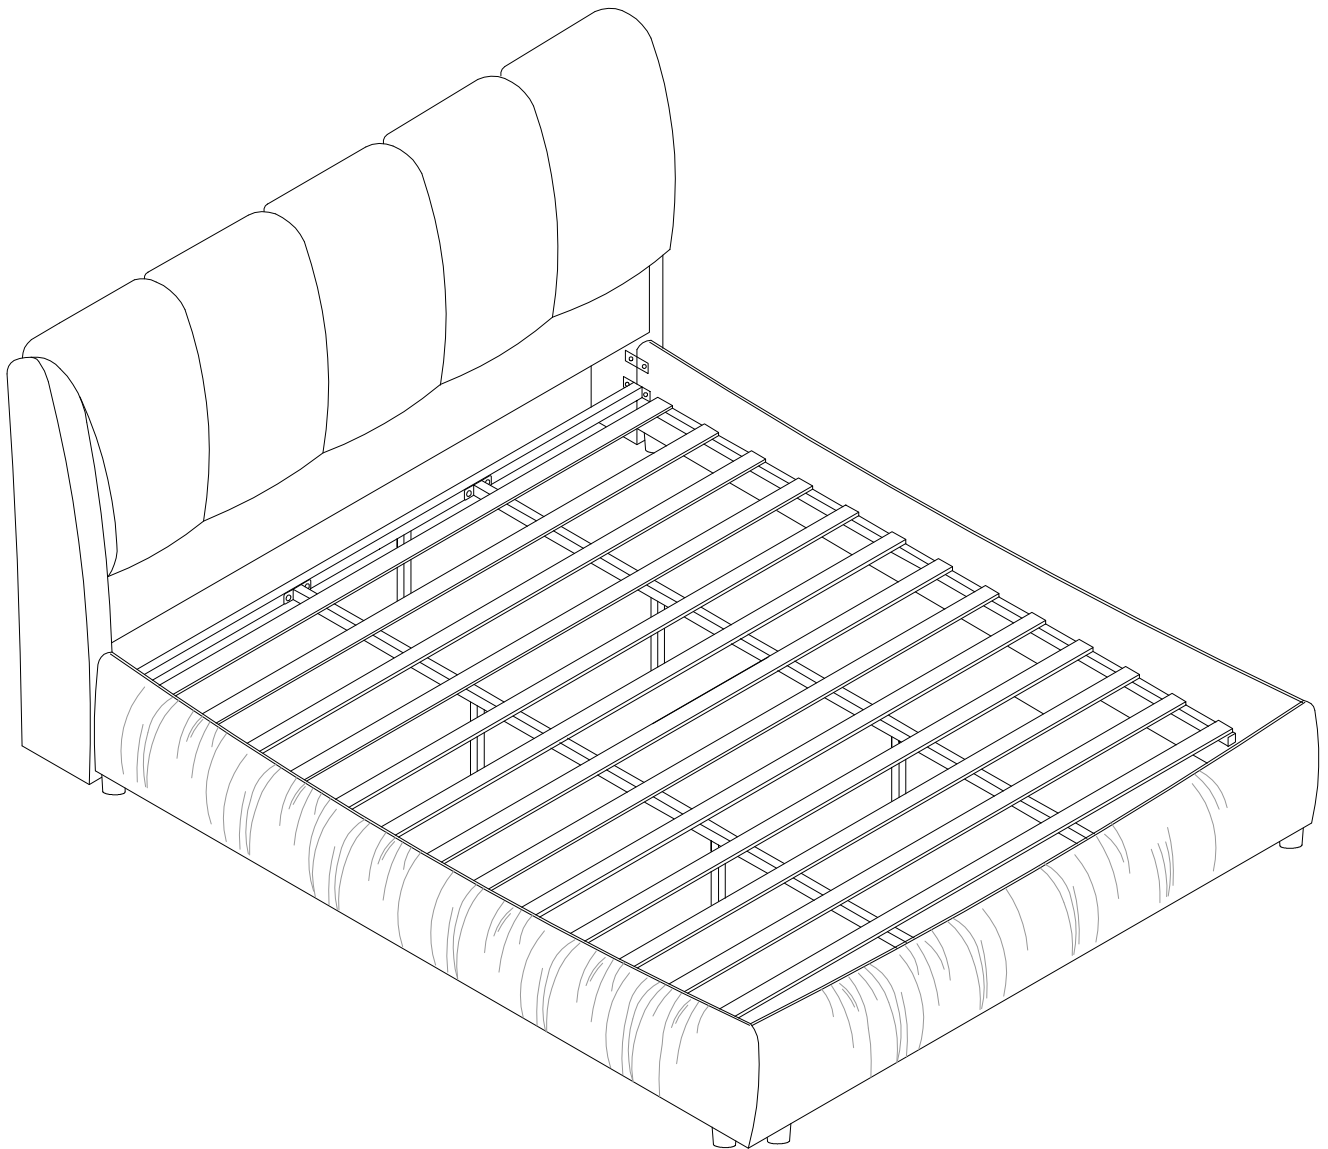



Install all screws according to the instructions, and then tighten them completely.

PACKING DETAILS:TOTAL 3 BOXES





2634K-A

	2-(1pc)
	3-(1pc)
	4-(1pc)
	5-(1pc)
	11-(2pcs)
	12-(5pcs)
	13-(6pcs)
(Hardware Packet)	
 Bolt M8*45	A-(8pcs) +1
 Bolt M8*25	B-(20pcs) +1
 M8	C-(28pcs) +1
 M8*19	D-(28pcs) +1
 M8	E-(1pc)
 M4*25	F-(14pcs) +1

2634K-B

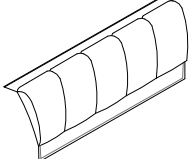
	1-(1pc)
	8-(1pc)
	14-(1set)

2634K-C

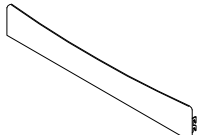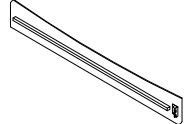
	6-(1pc)
	7-(1pc)
	9-(1pc)
	10-(2pcs)

ASSEMBLY INSTRUCTIONS

STEP 1

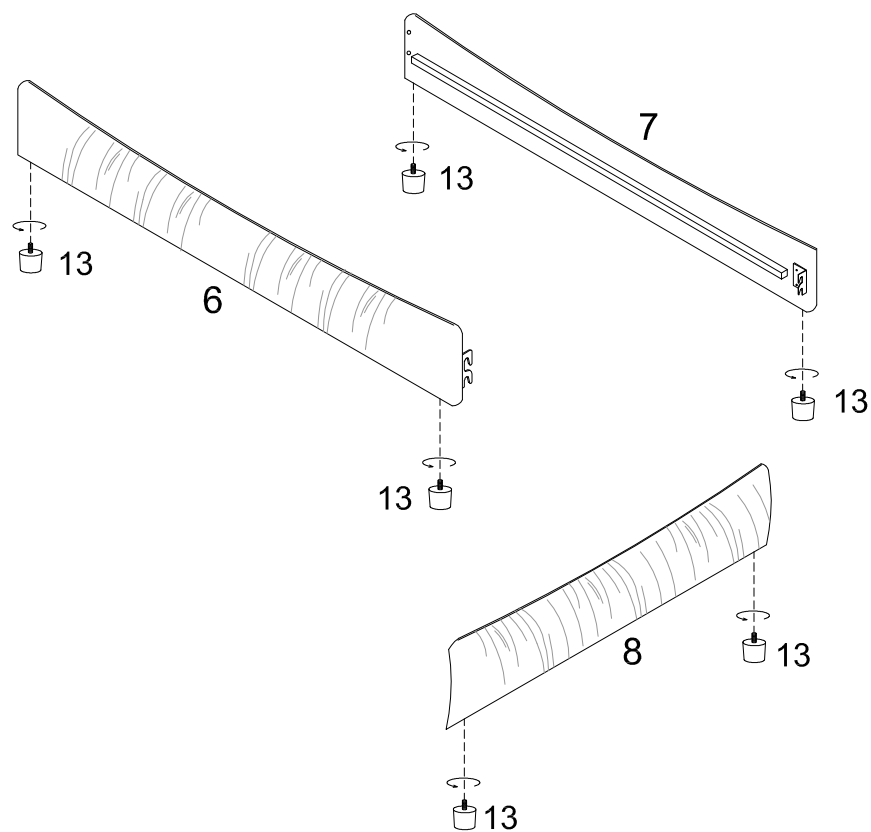


STEP 2

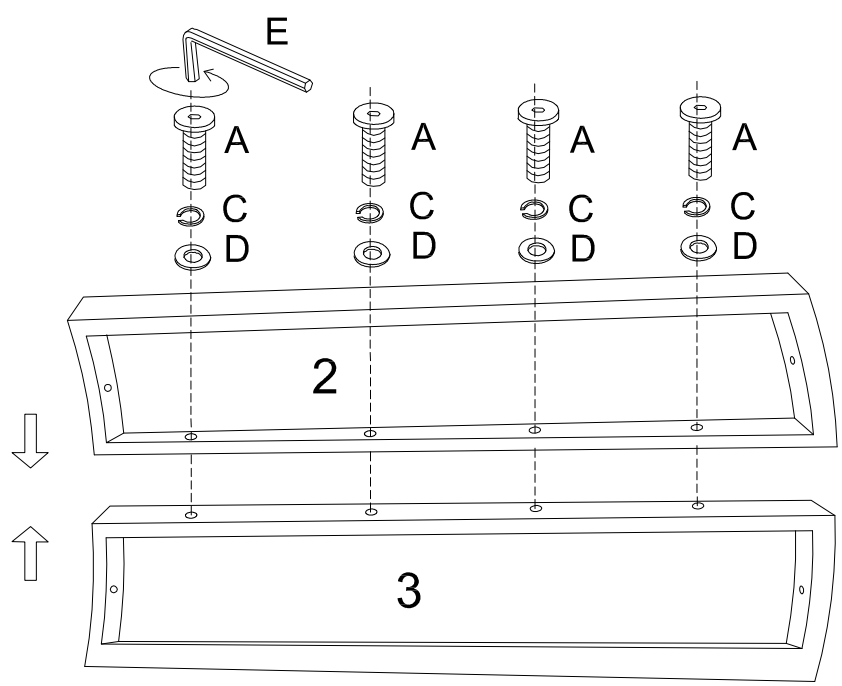


ASSEMBLY INSTRUCTIONS

STEP 3

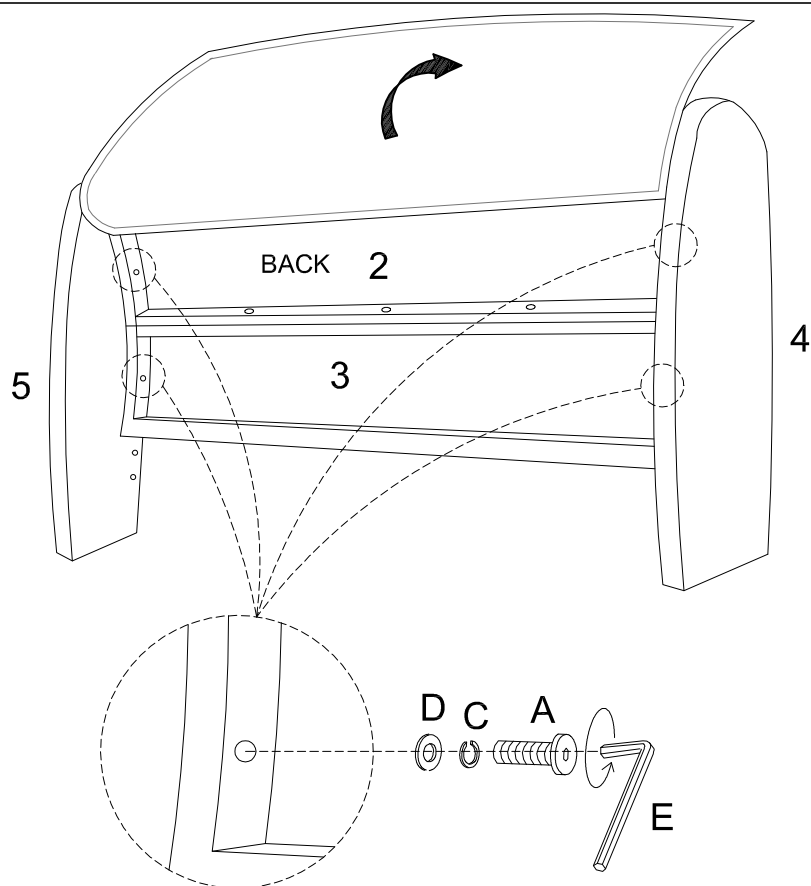

STEP 4

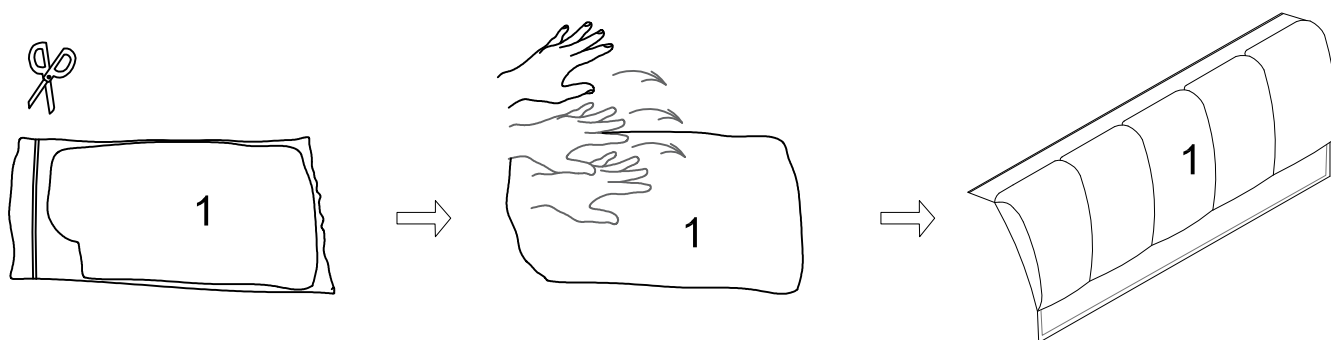


The compressed bedside soft bag will rebound 75-85% after being opened for 24 hours.


After opening the bag, use your hand to pat it so the back inflates by itself.

ASSEMBLY INSTRUCTIONS

STEP 5

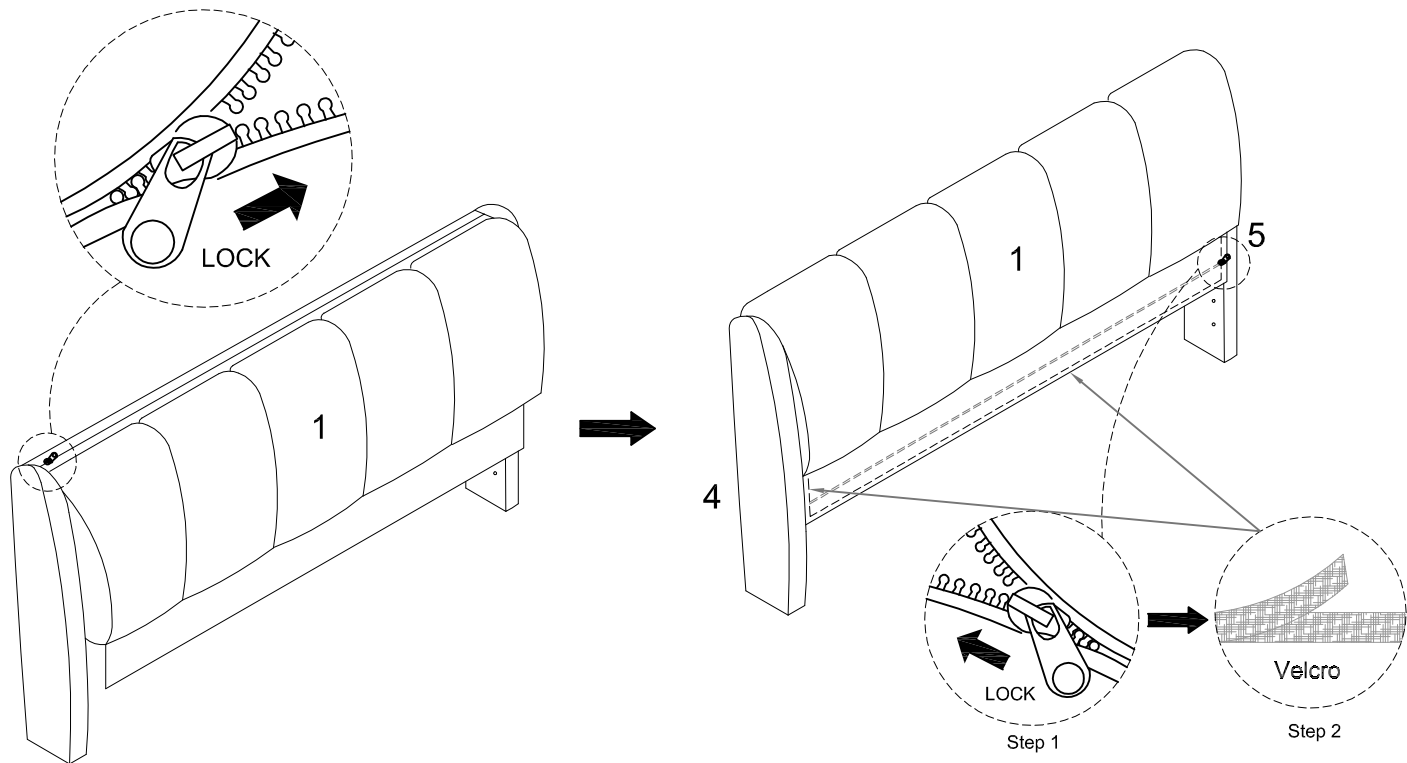


STEP 6

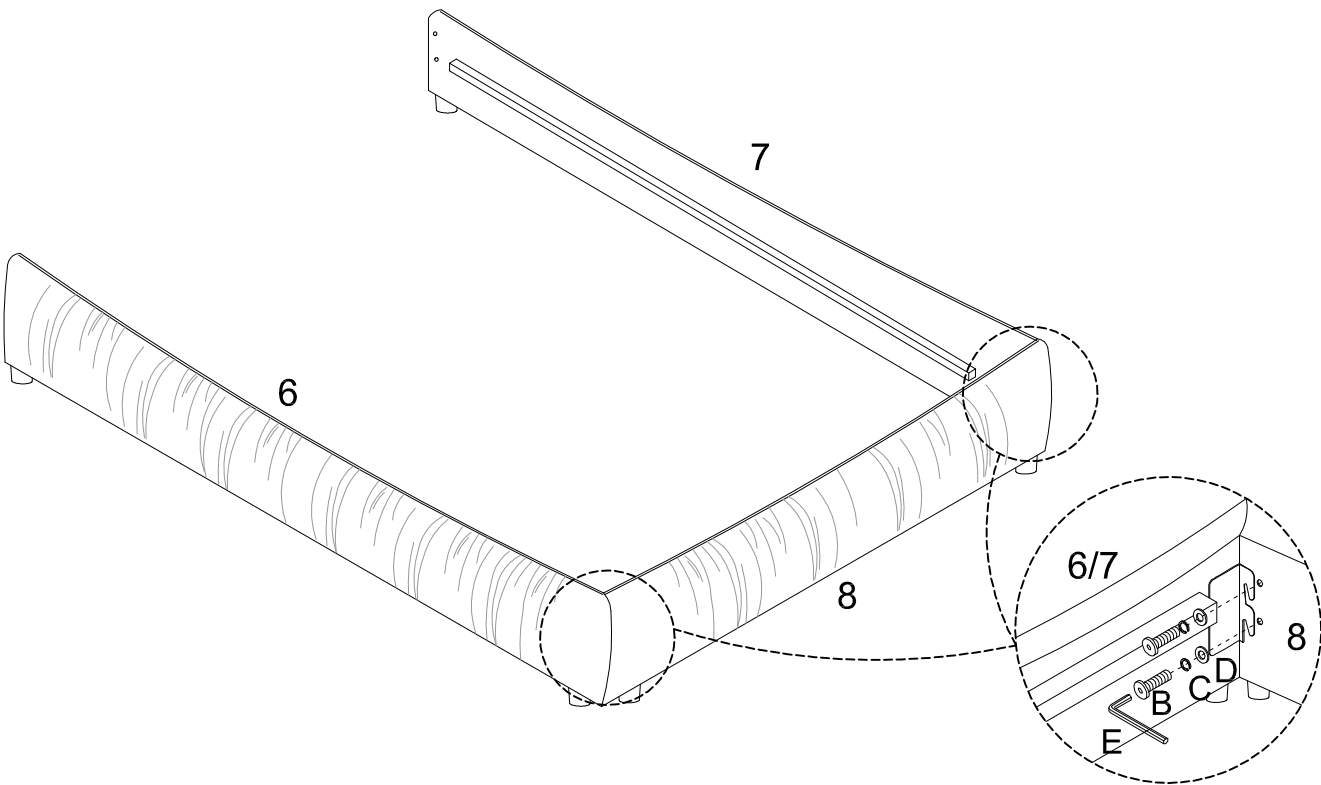


ASSEMBLY INSTRUCTIONS

STEP 7

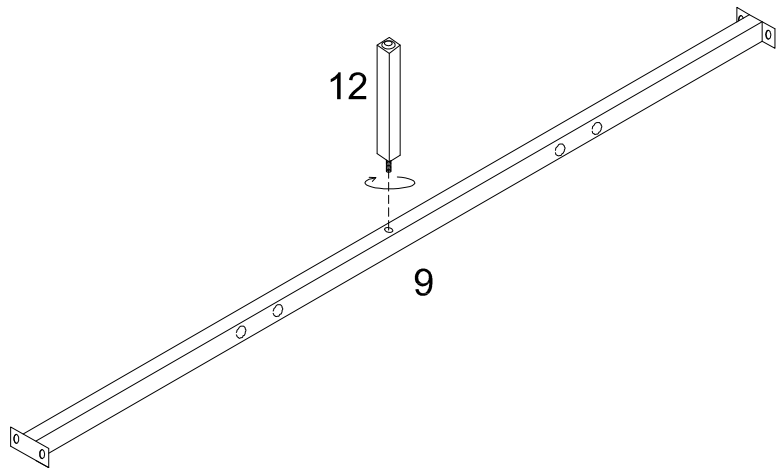


STEP 8

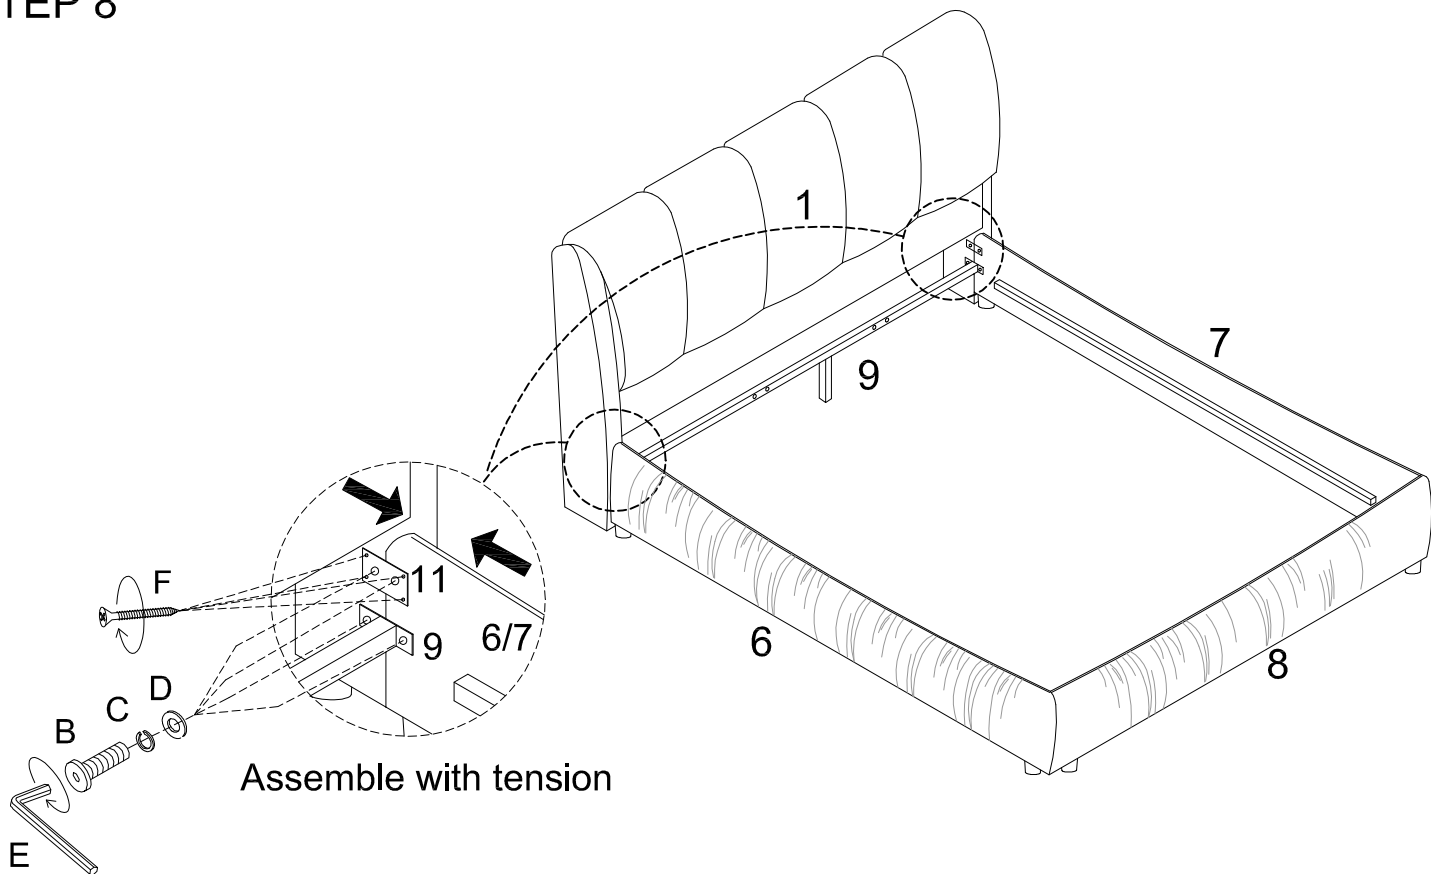


ASSEMBLY INSTRUCTIONS

STEP 9

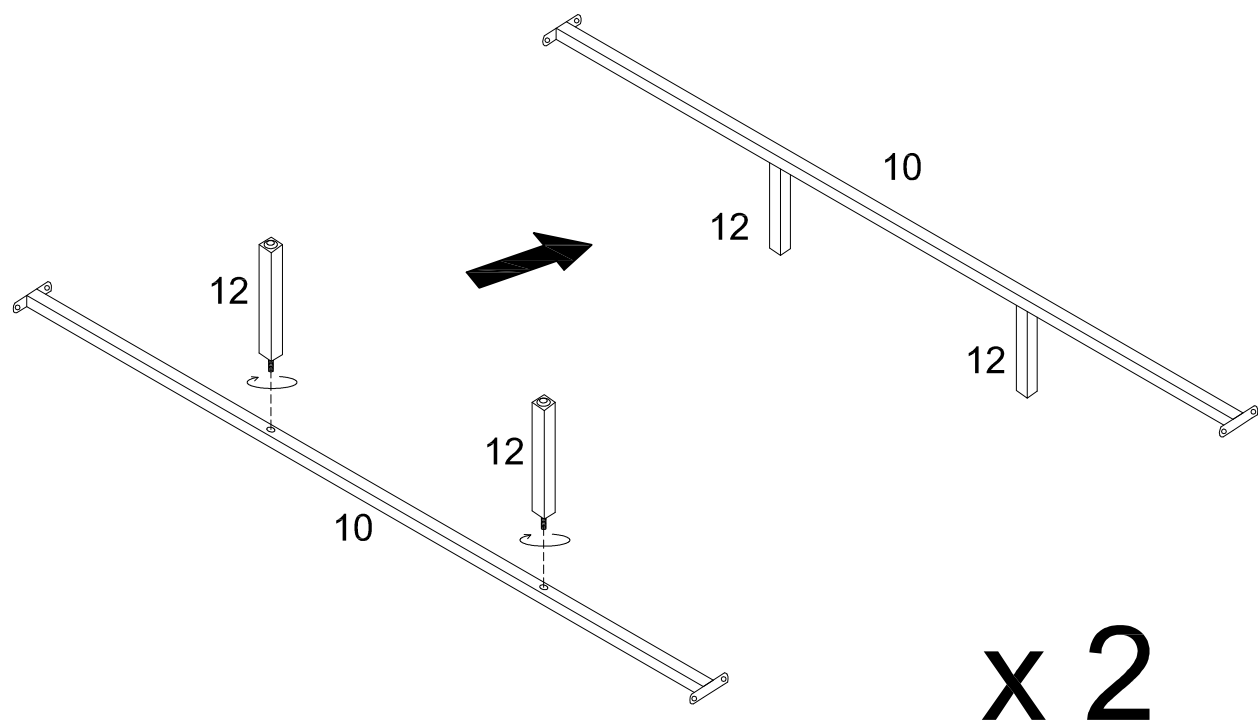


STEP 10

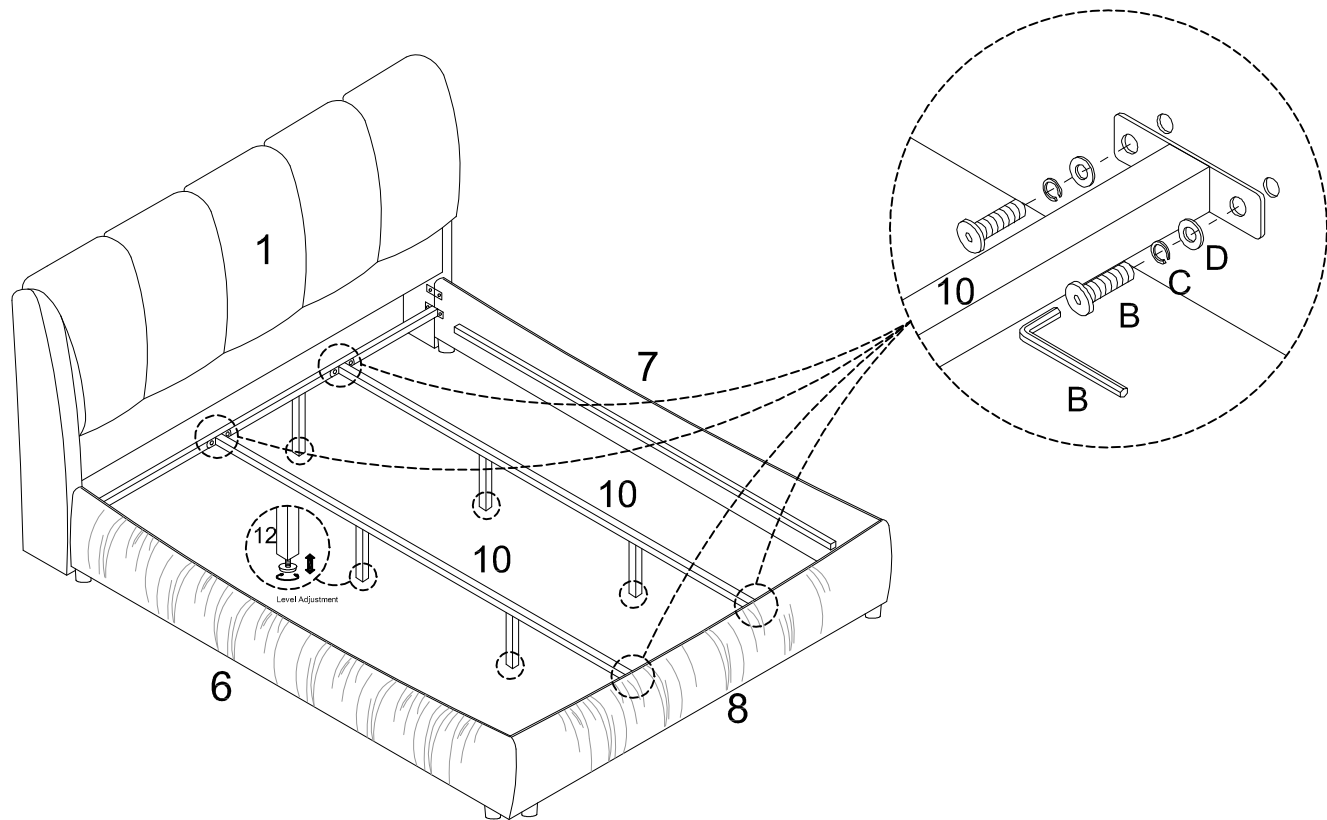


ASSEMBLY INSTRUCTIONS

STEP 11

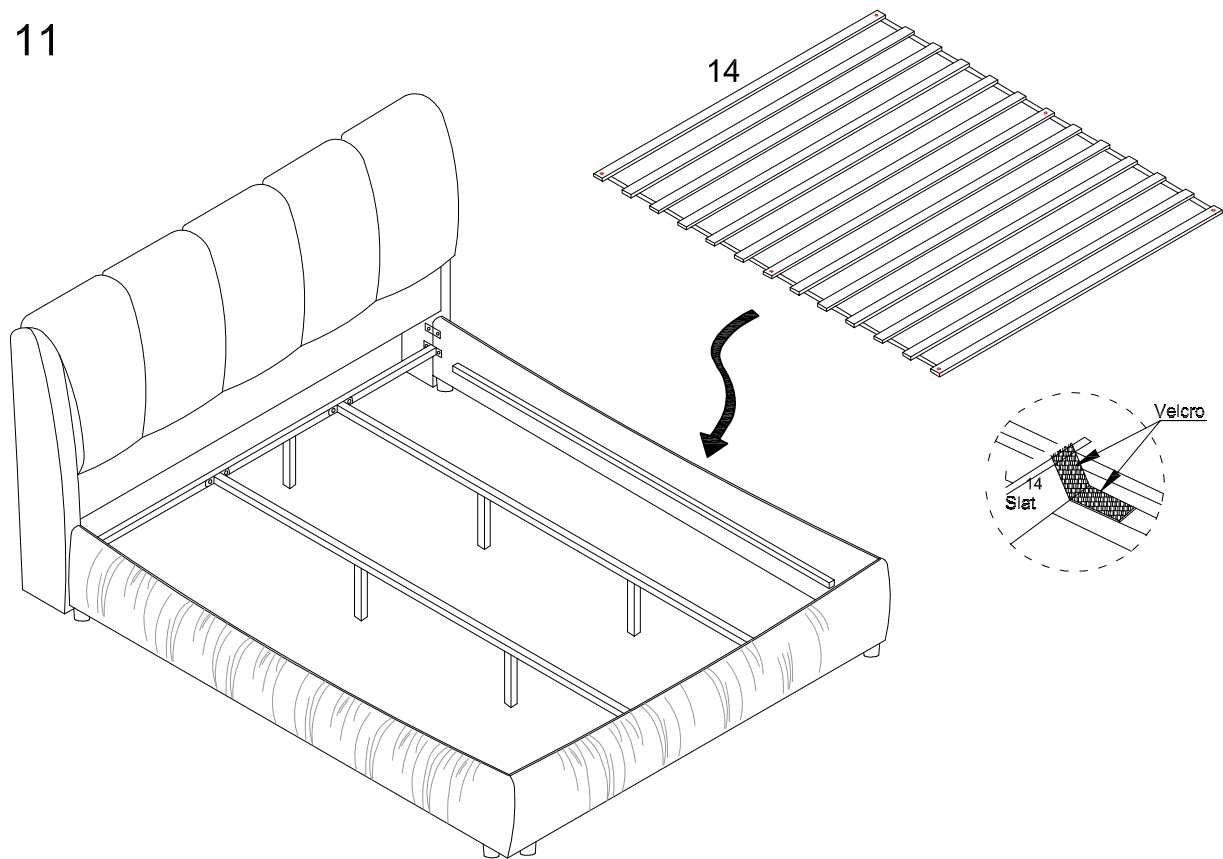

STEP 12

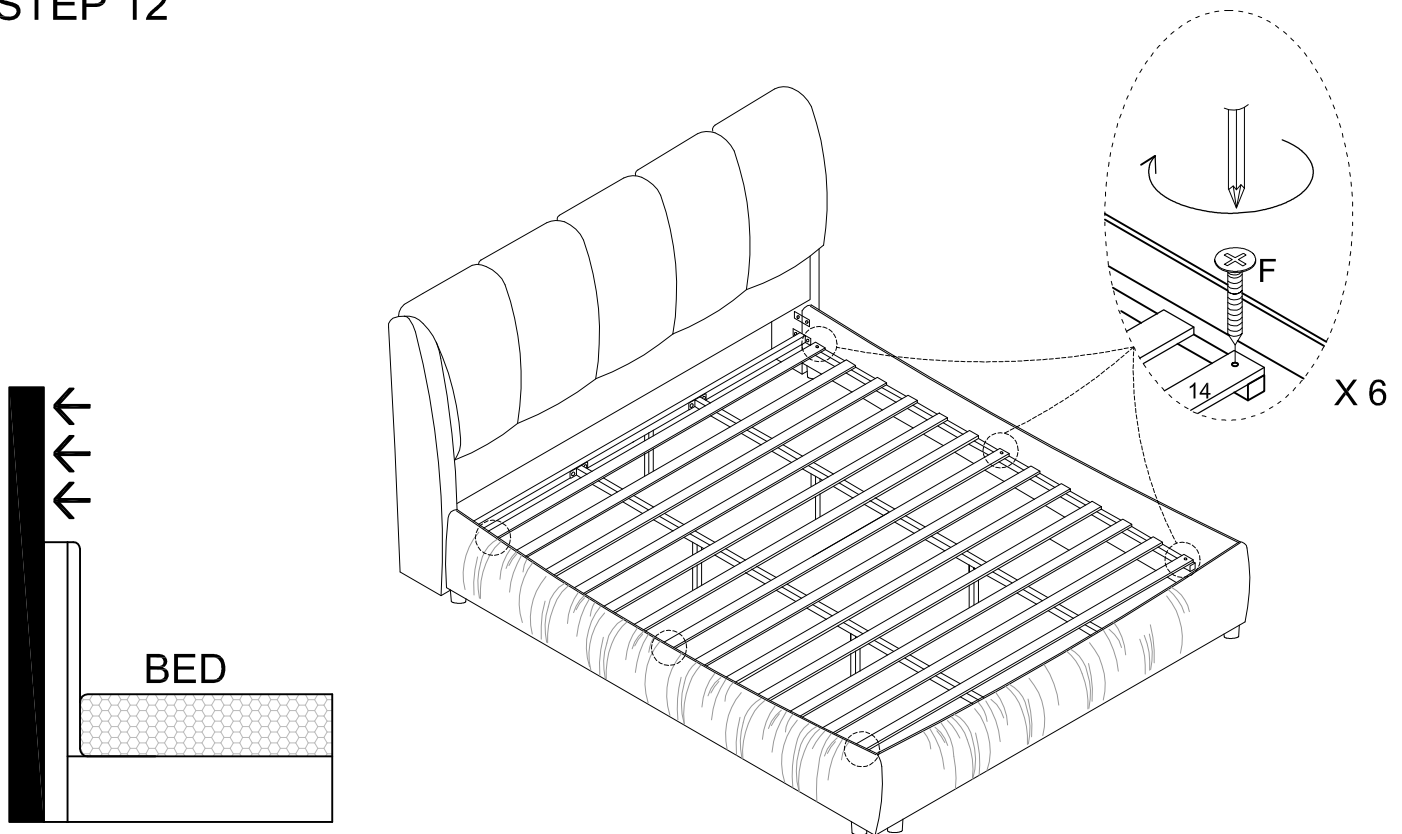

Use Against the Wall