




























WT14-2 #

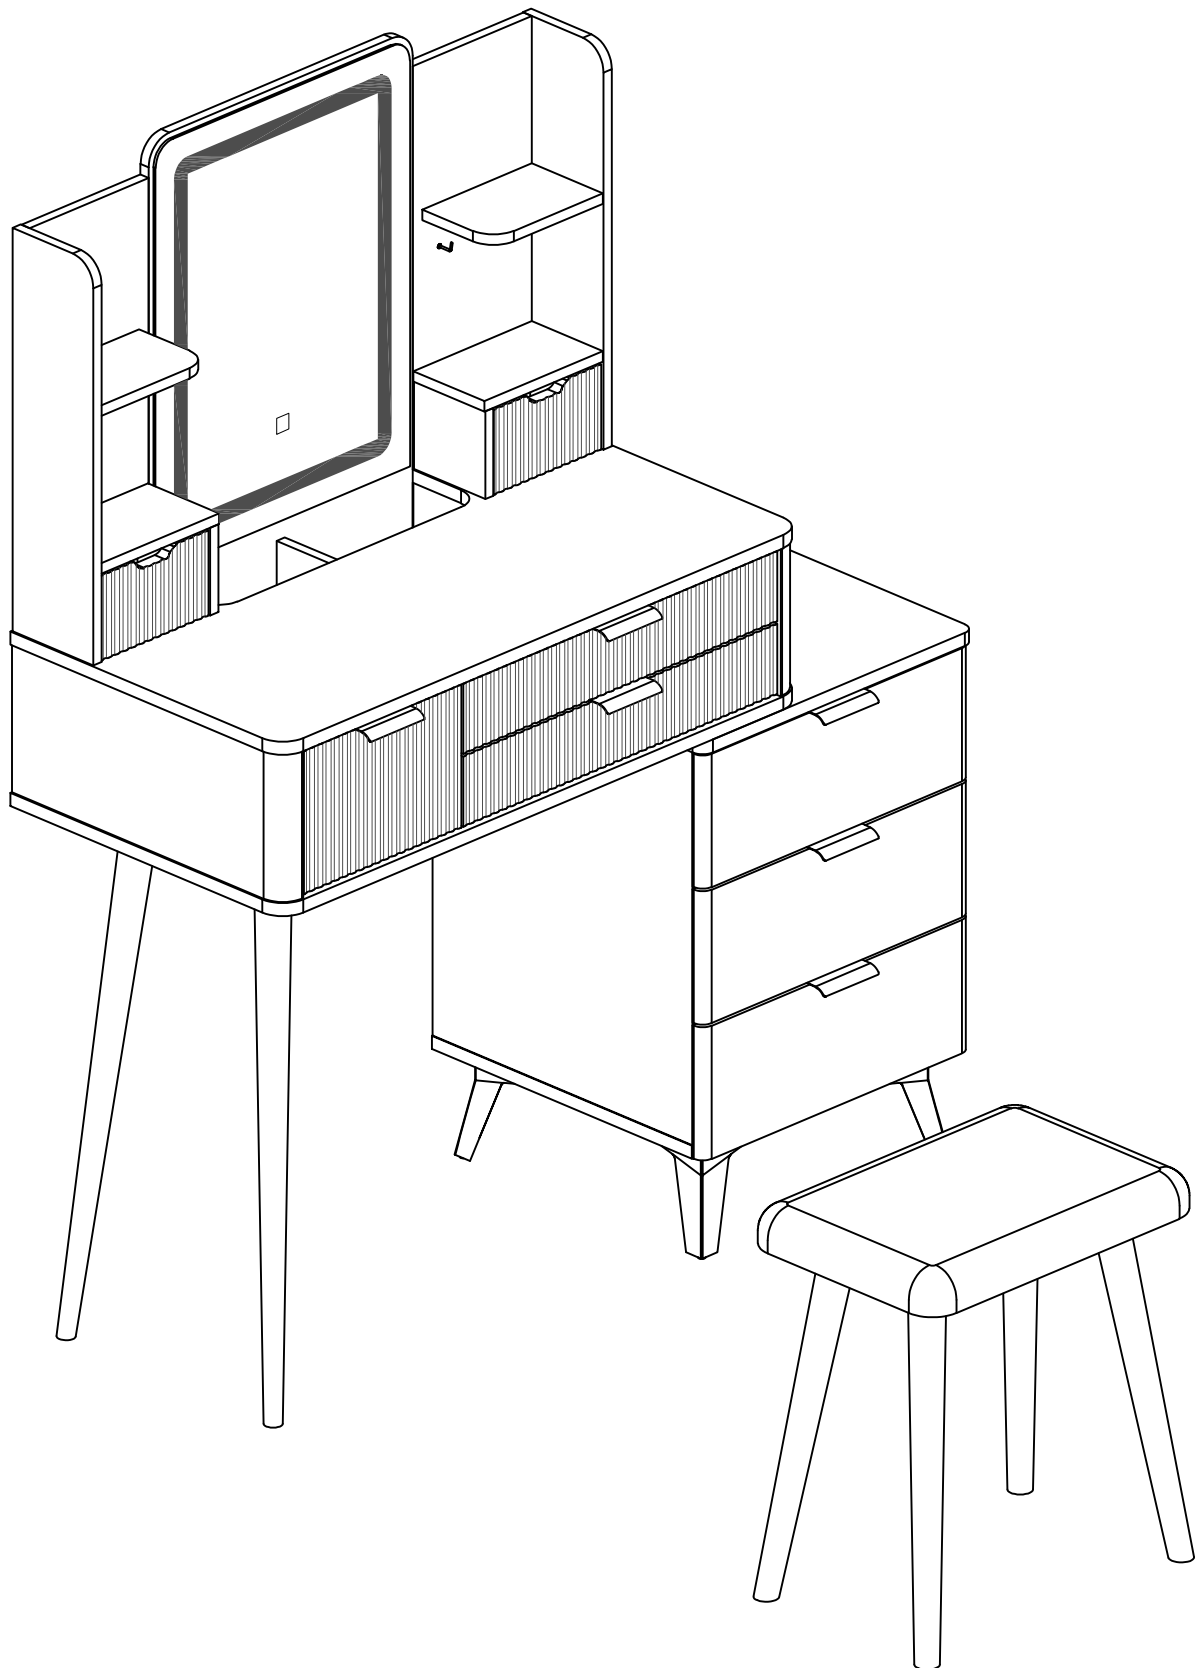







① X 1	② X 1	③ X 1	④ X 1
⑤ X 1	⑥ X 2	⑦ X 2	⑧ X 1
⑨ X 1	⑩ X 1	⑪ X 1	⑫ X 1
⑬ X 1	⑭ X 1	⑮ X 1	⑯ X 2
⑰ X 1	⑱ X 1	⑲ X 2	⑳ X 3
㉑ X 1	㉒ X 1	㉓ X 2	㉔ X 2




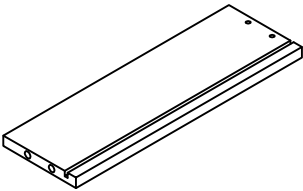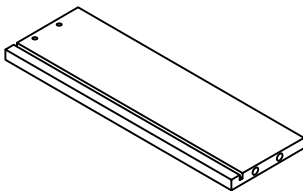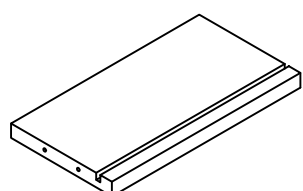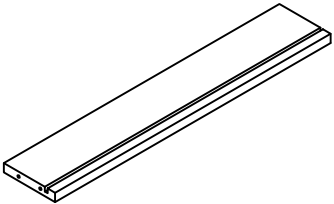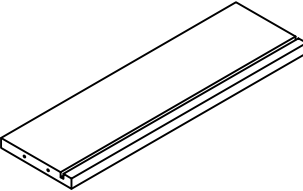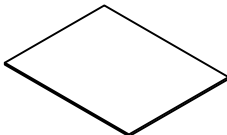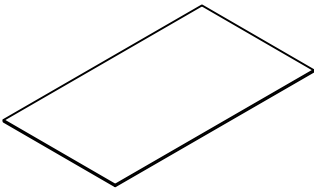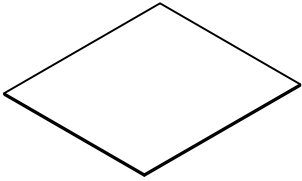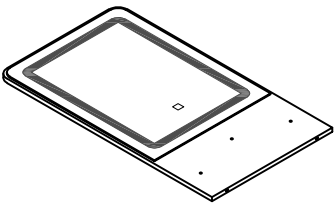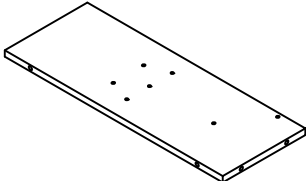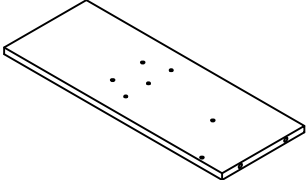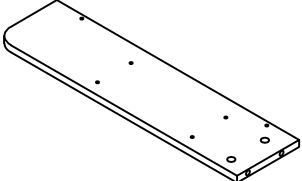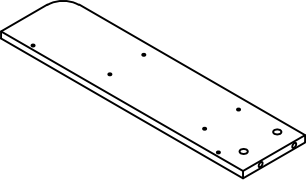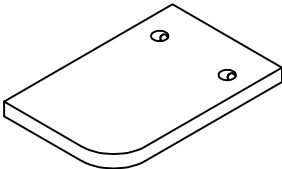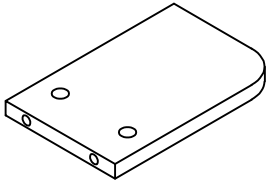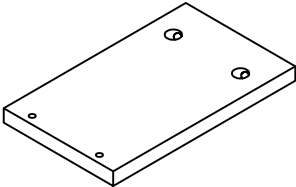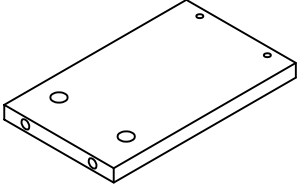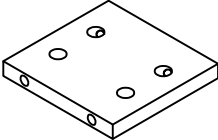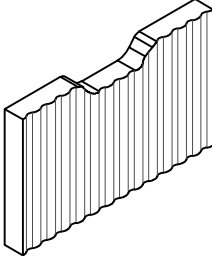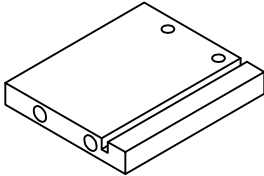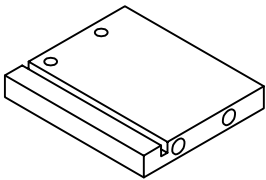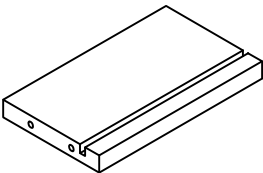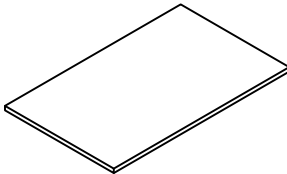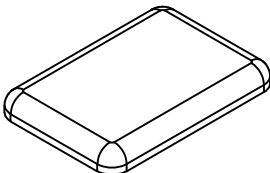25  X 3	26  X 3	27  X 1	28  X 2
29  X 3	30  X 1	31  X 2	32  X 3
33  X 1	34  X 1	35  X 1	36  X 1
37  X 1	38  X 1	39  X 1	40  X 1
41  X 1	42  X 2	43  X 2	44  X 2
45  X 2	46  X 2	47  X 2	48  X 1




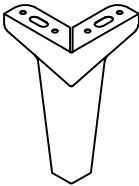49  X 2	50  X 4	51  X 4	52  X 1


Slides Must Be Separated Before Assembly,
After Separated, Set Aside Until Needed for Assembly.

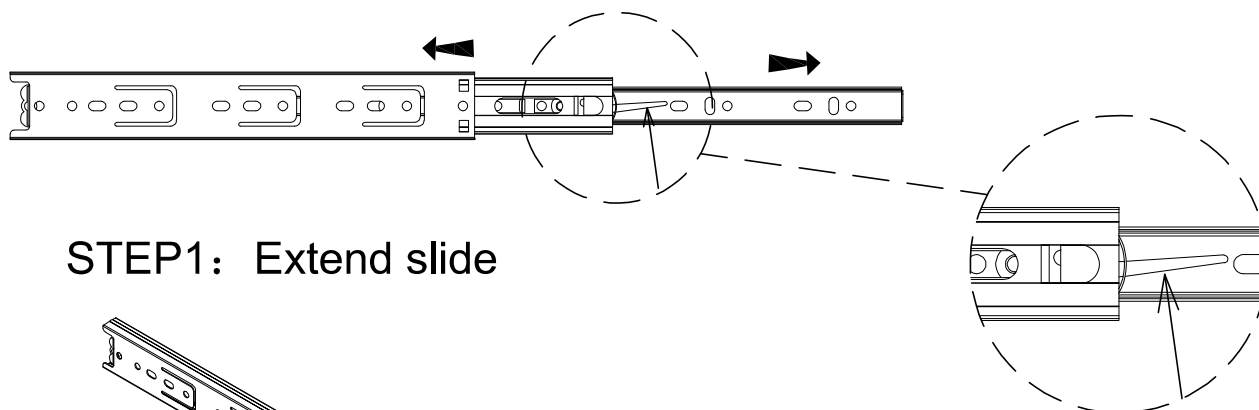


STEP1: Extend slide

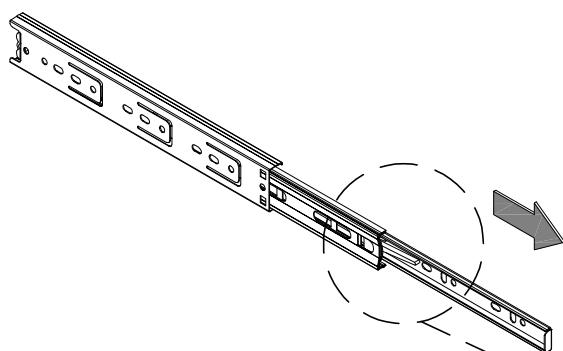

STEP2: Push Lever UP


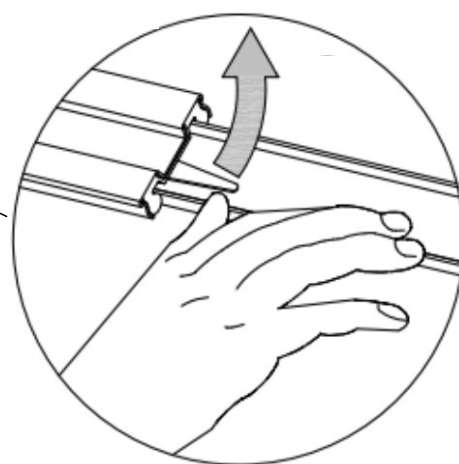


STEP3: Remove Runner

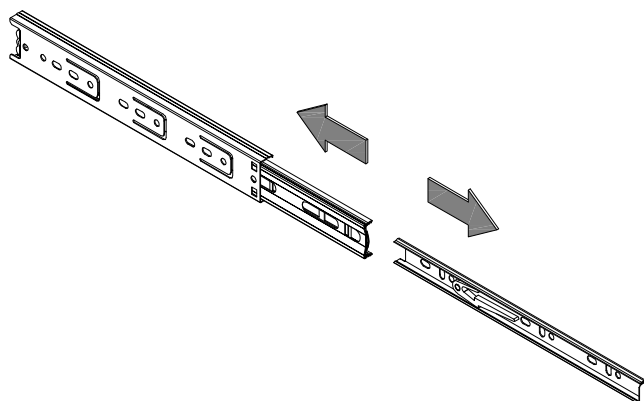

Cam Lock Fastening System


This Cam Lock Fastening System will be used throughout the assembly process

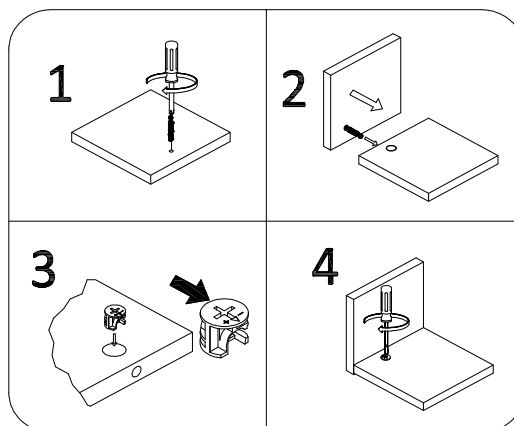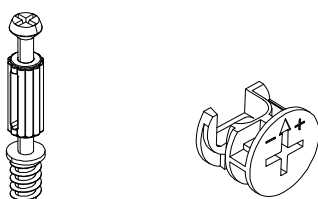

Installation Steps



1 ▶

B	$\phi 7 \times 40$	G	M3.5*12
			
	X 6		X 16

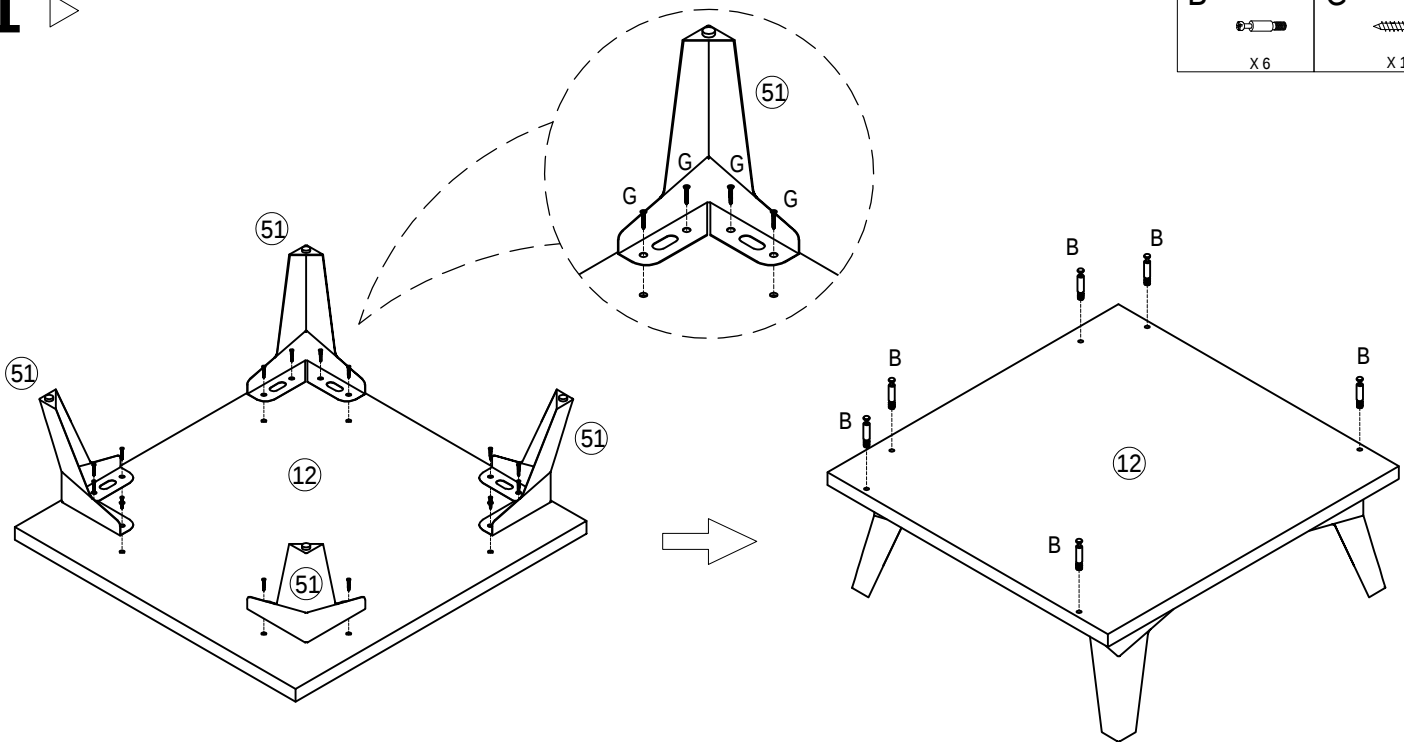

2 ▶

B	$\phi 7 \times 40$	G	M3.5*12	L	10" L2
					
	X 12		X 12		X 3

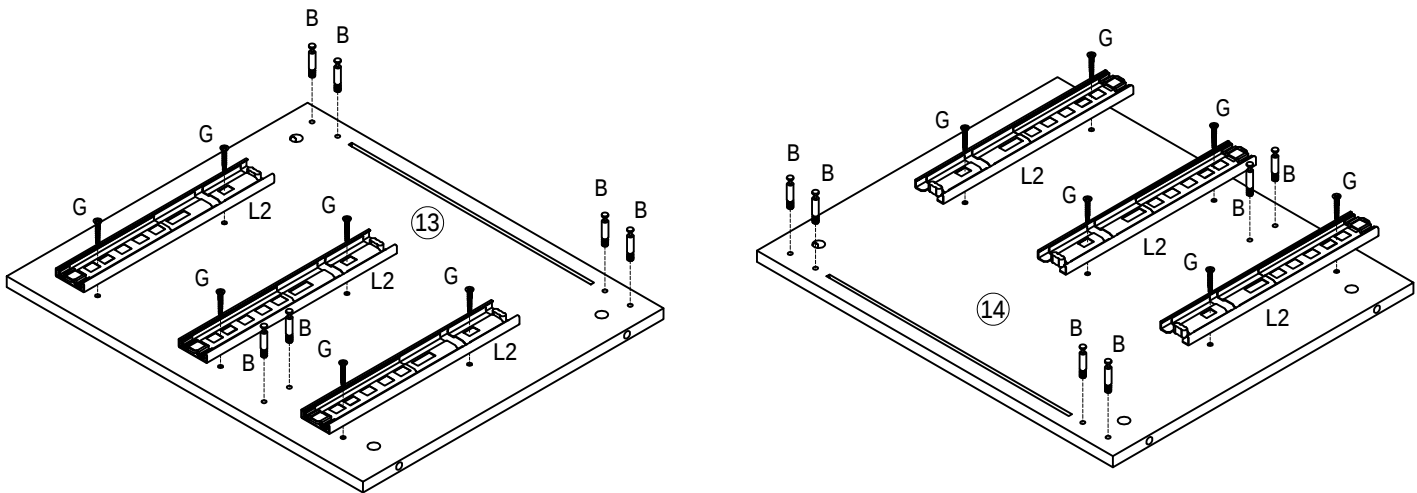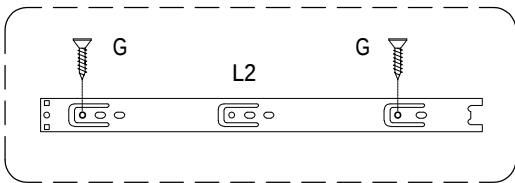


Installation Steps


3 ▶

A $\phi 12 \times 10$

X 6

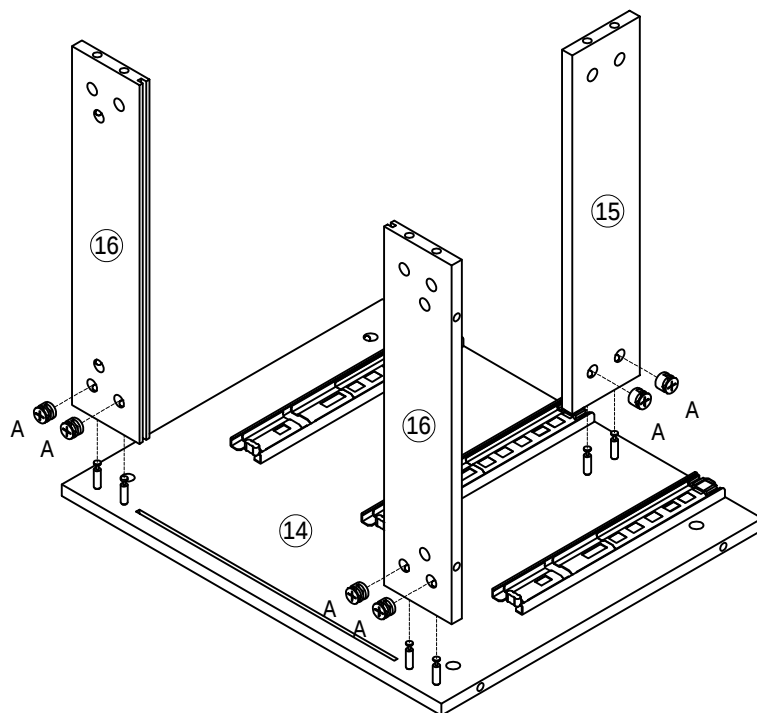

4 ▶

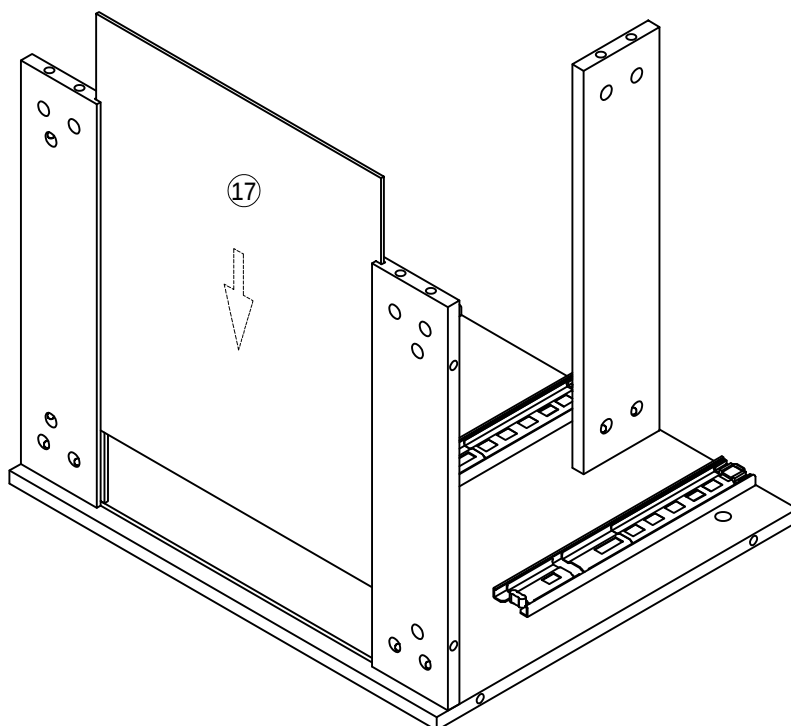


Installation Steps

5 ▶

A $\phi 12 \times 10$




X 6

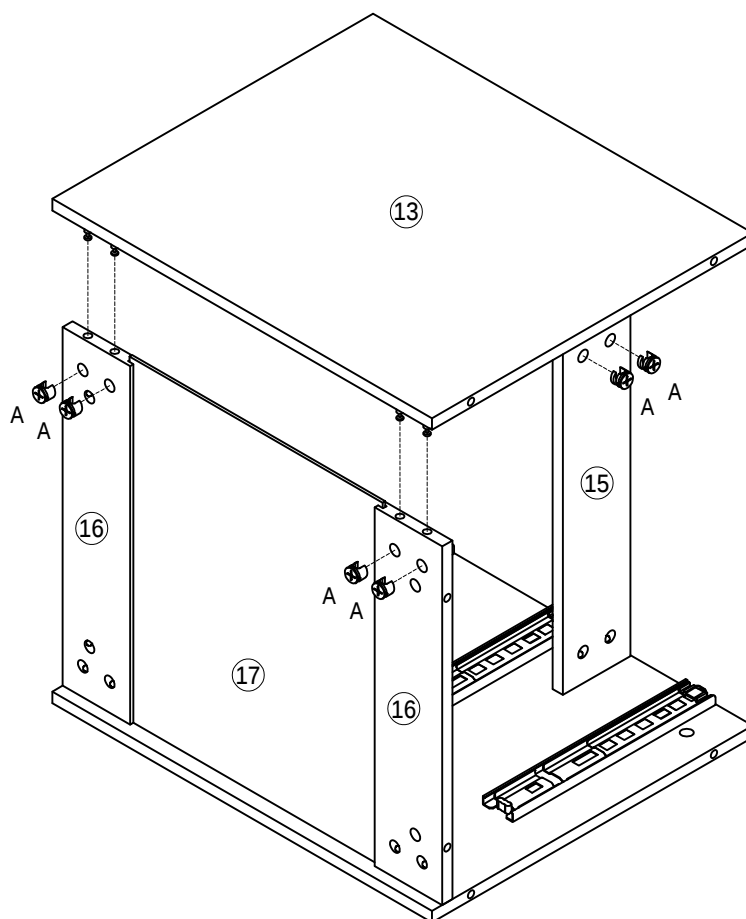

6 ▶

A $\phi 12 \times 10$




X 6

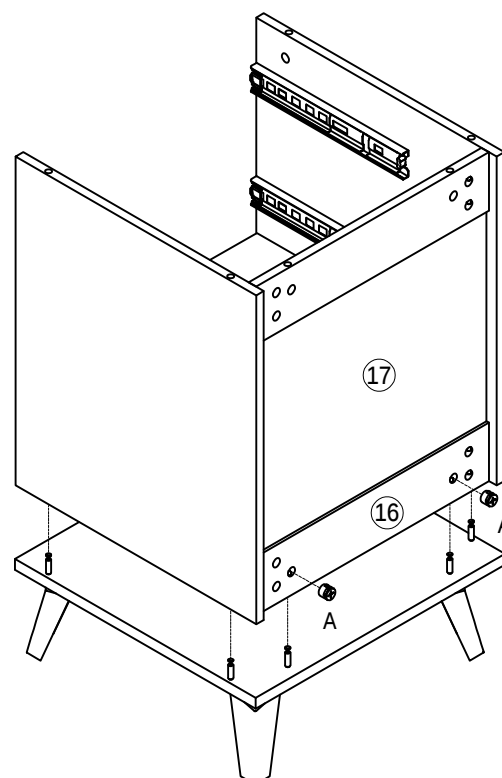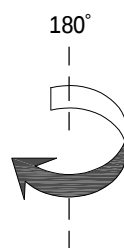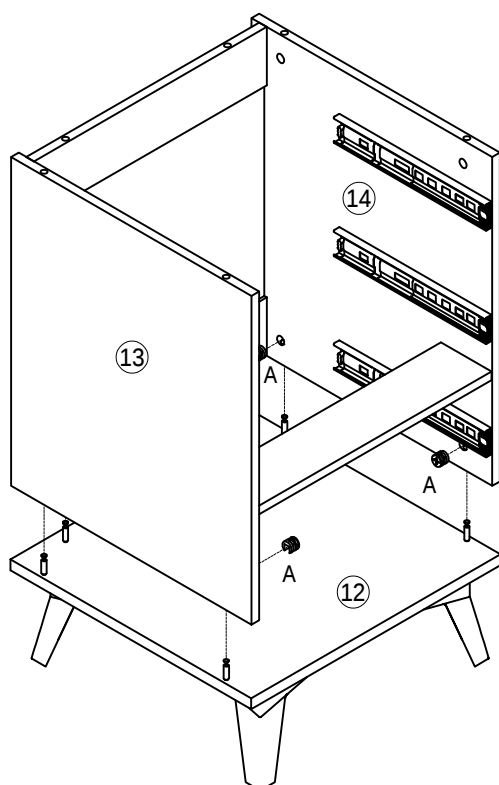

Installation Steps

7 ▶



A	φ12*10	B	φ7*40
			
	X 6		X 6

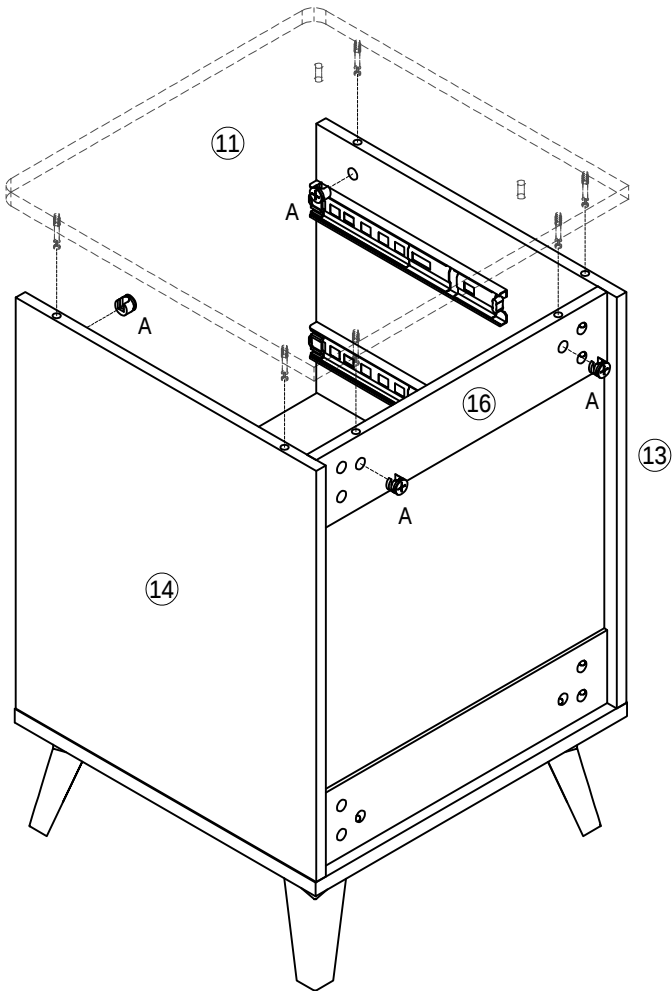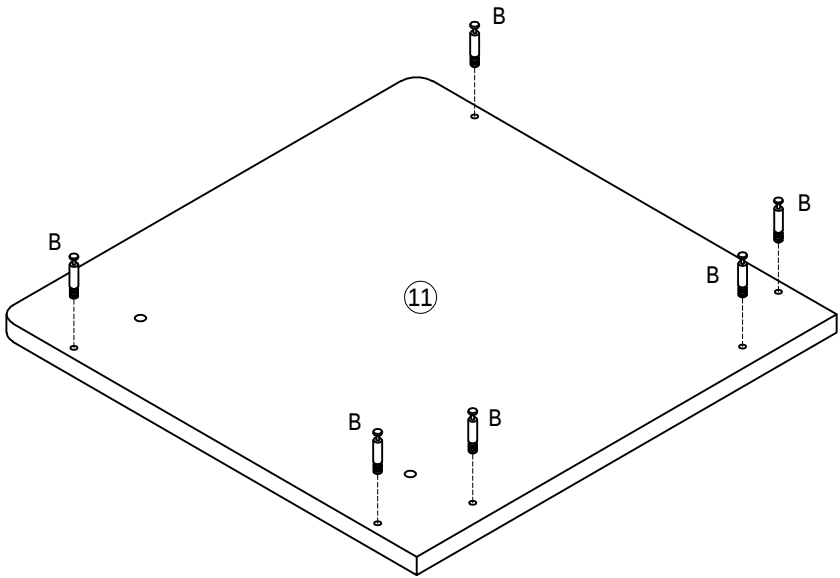

Installation Steps


8 ▶

H	M3.5*16	J
		
X 4		X 4

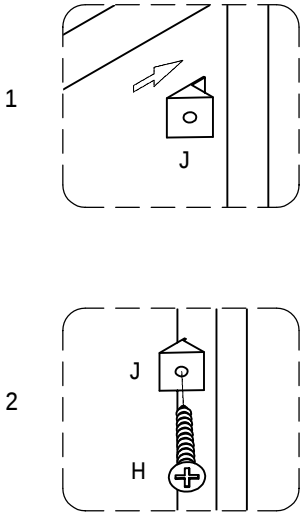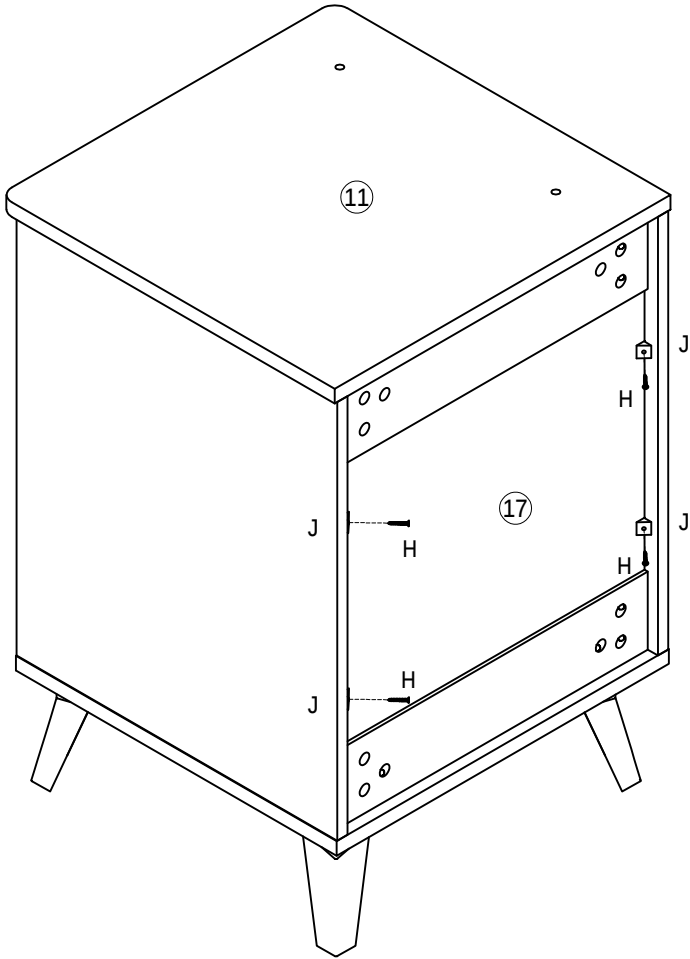

9 ▶


D	M6*15
	
X 8	

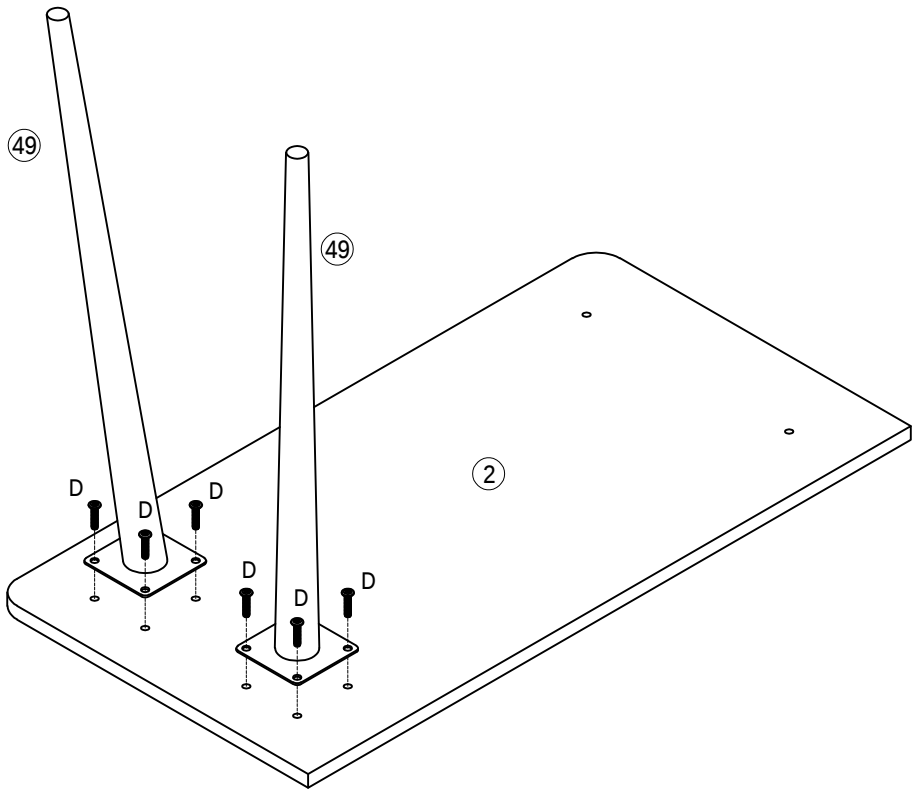

Installation Steps


10 ▶

E M6*30
X 2

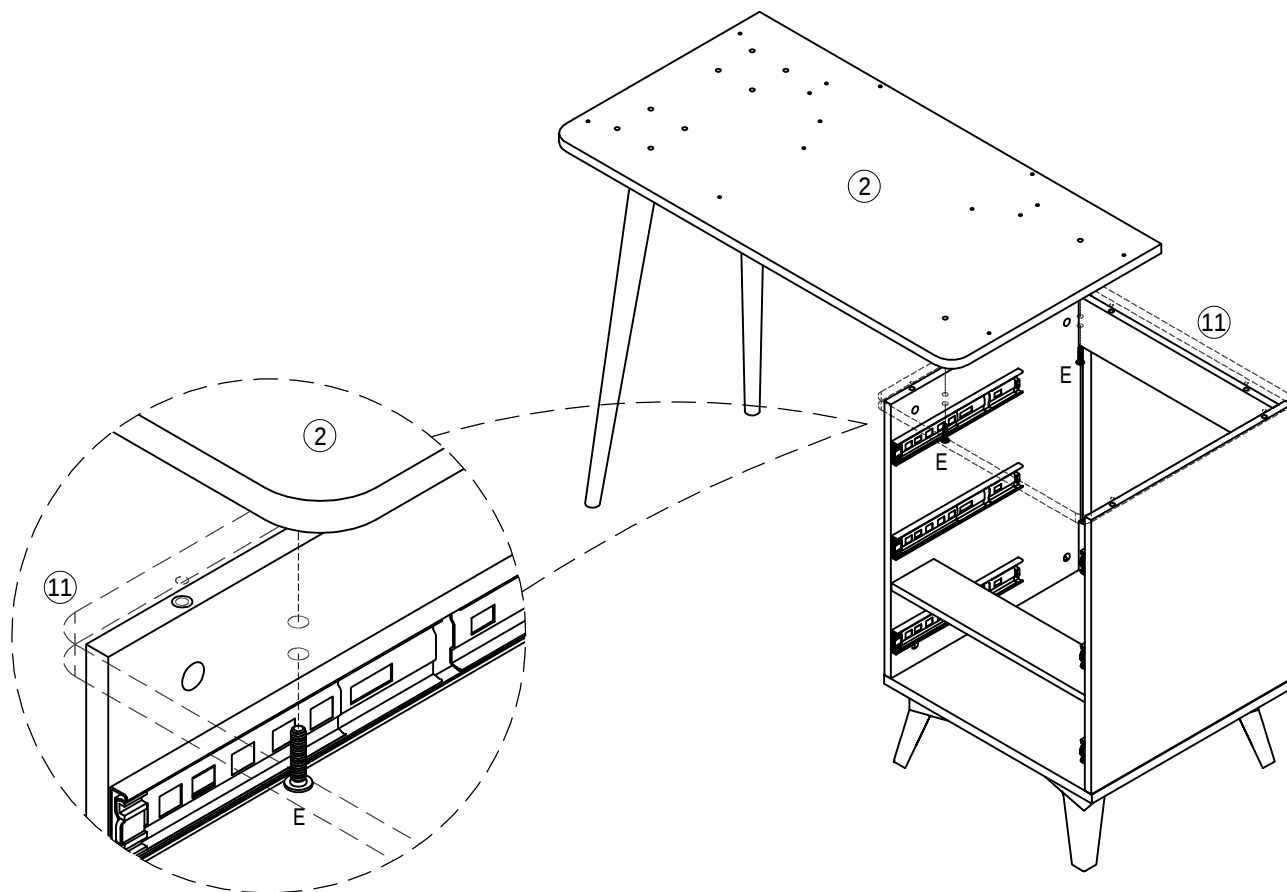

11 ▶






B $\phi 7 \times 40$
X 14

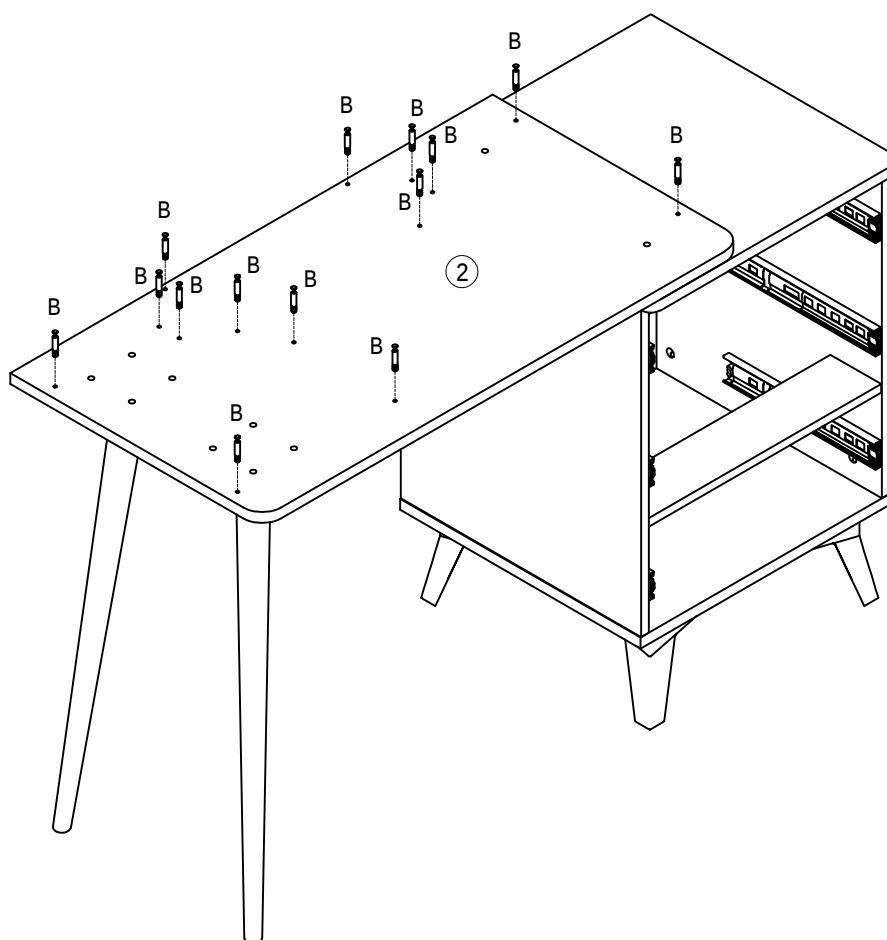

Installation Steps

12 ▶


B	$\phi 7 \times 40$	G	M3.5*12	L	10"
					
	X 4		X 10		X 3

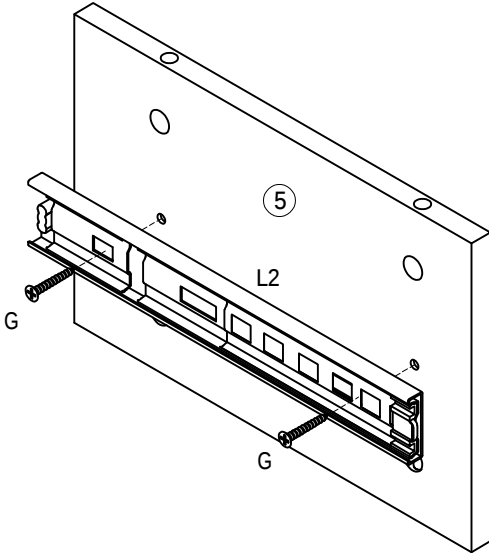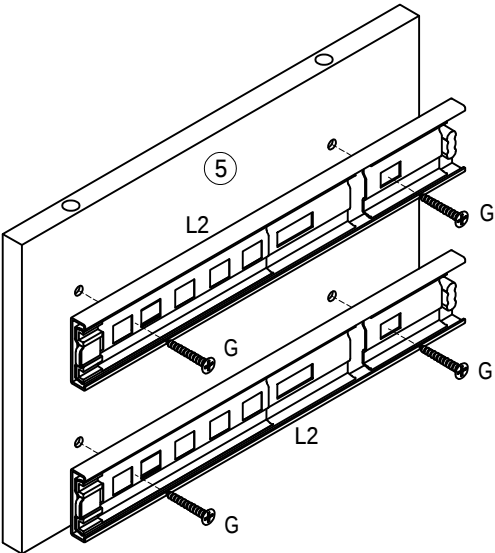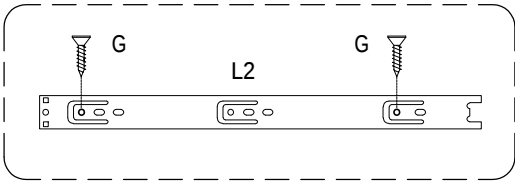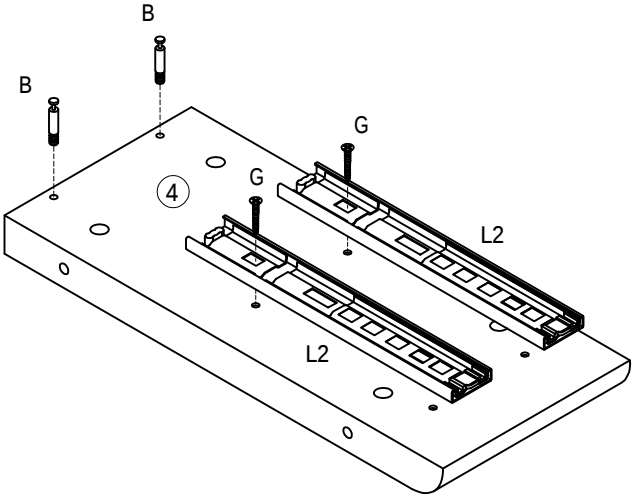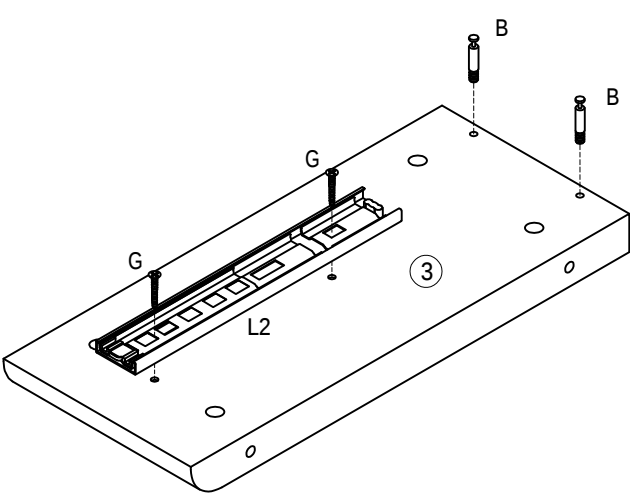

Installation Steps


13 ▶

C M5*40
X 4

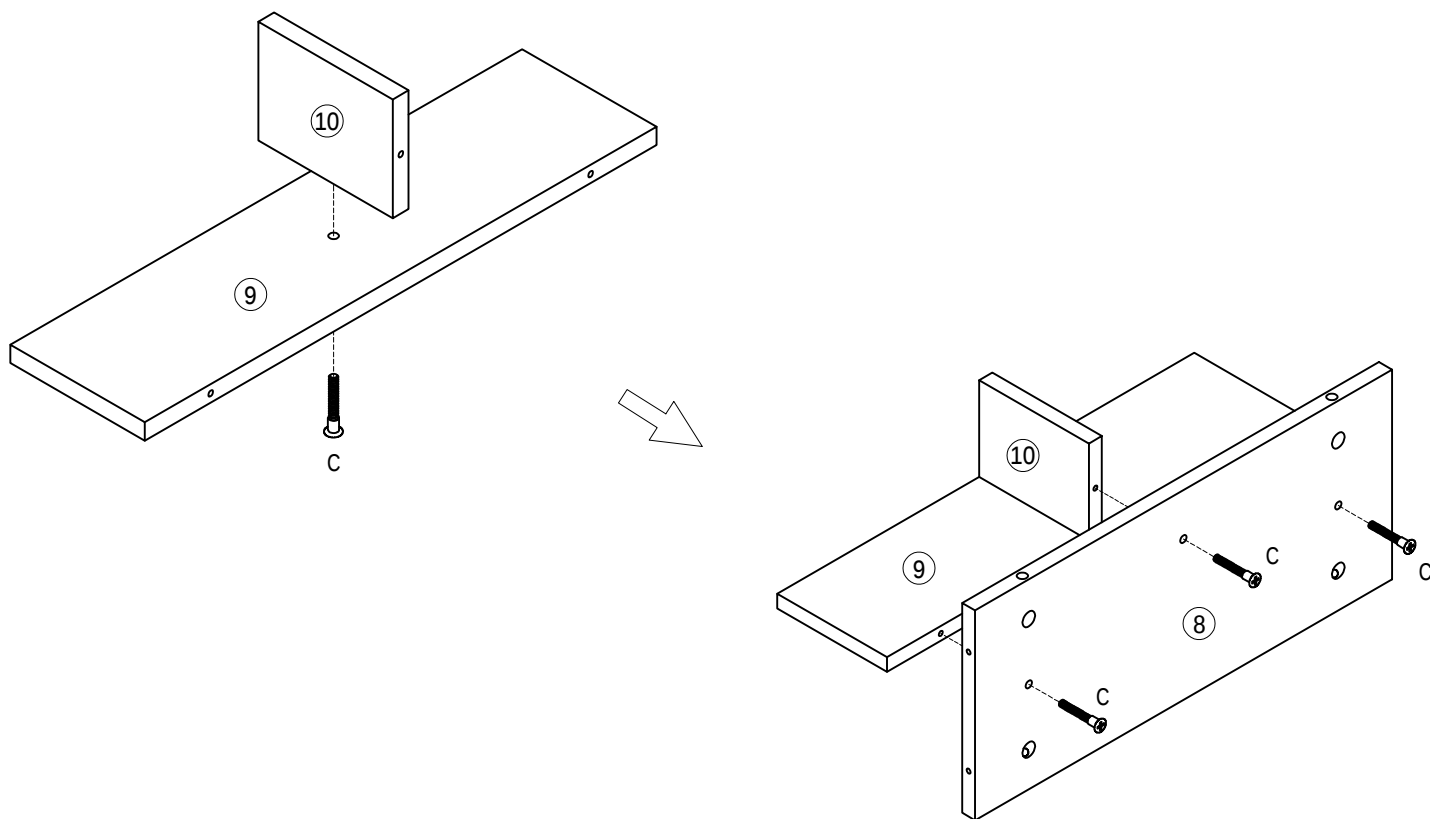


14 ▶

C M5*40
X 4

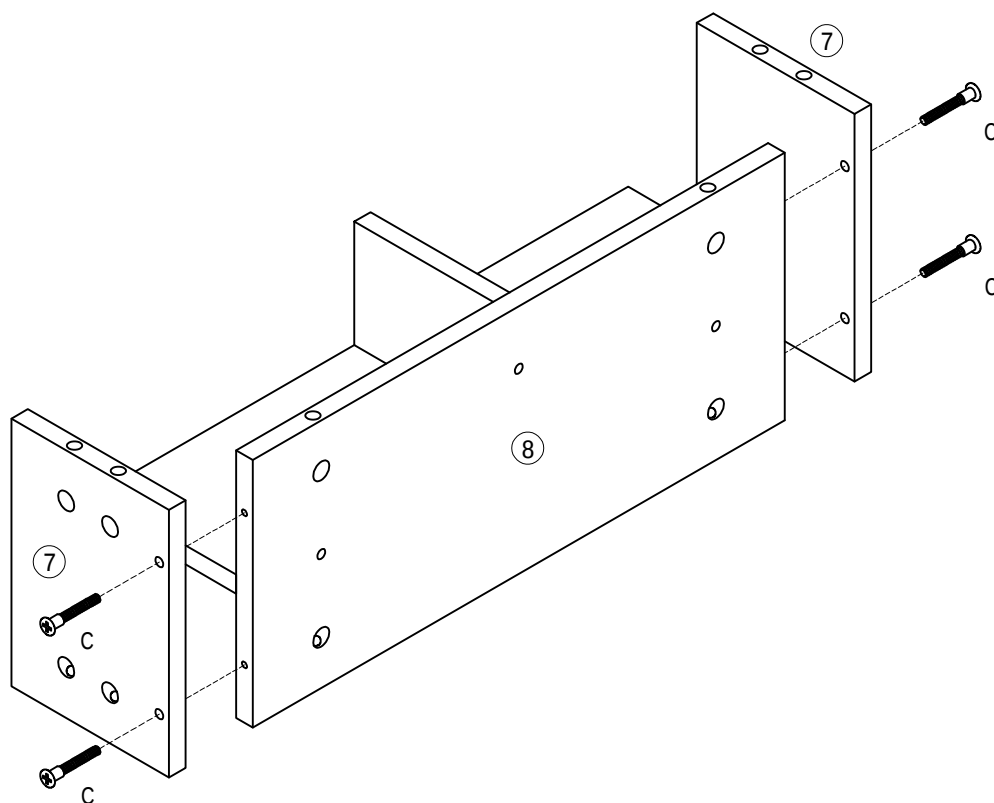



Installation Steps

15 ▶

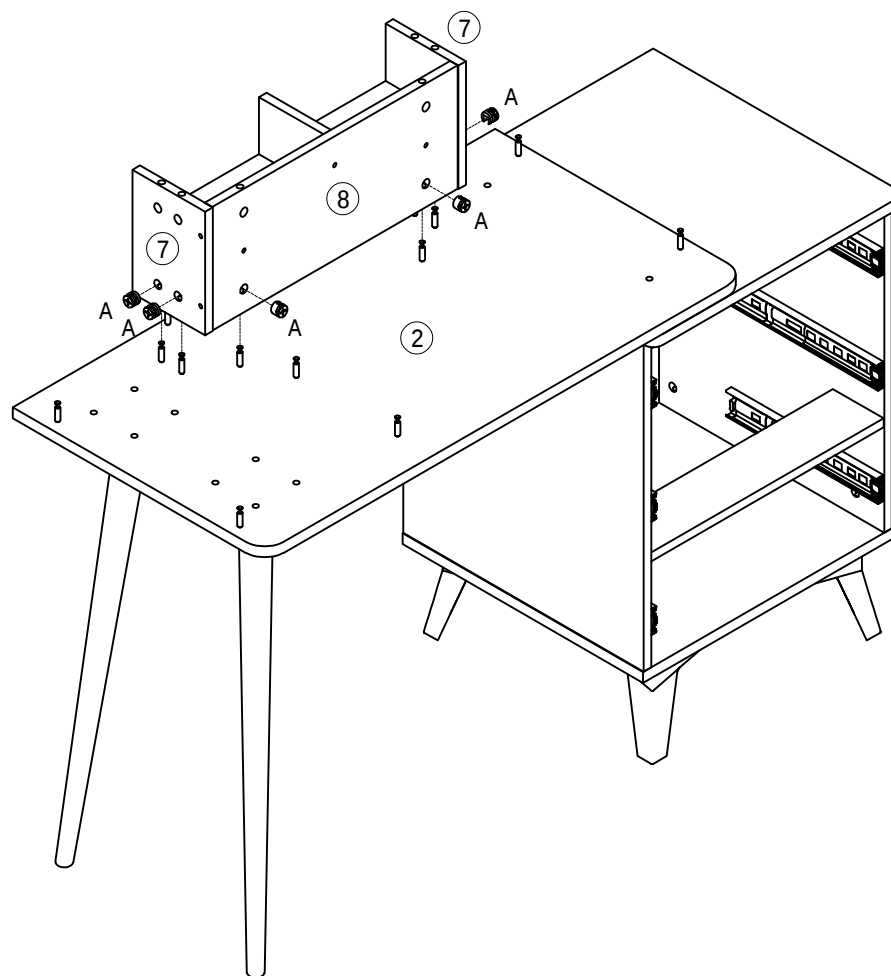

A $\phi 12 \times 10$
X 6

16 ▶

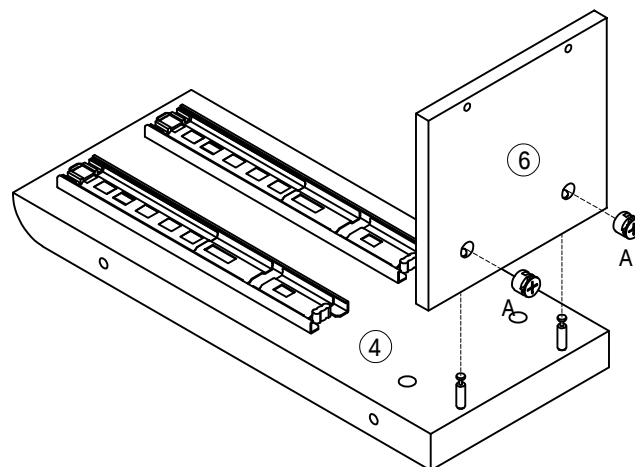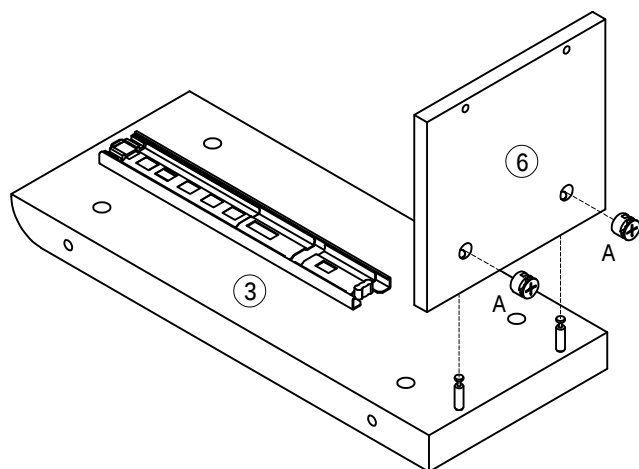


A $\phi 12 \times 10$
X 4

Installation Steps

17 ▶

A $\phi 12 \times 10$


X 4

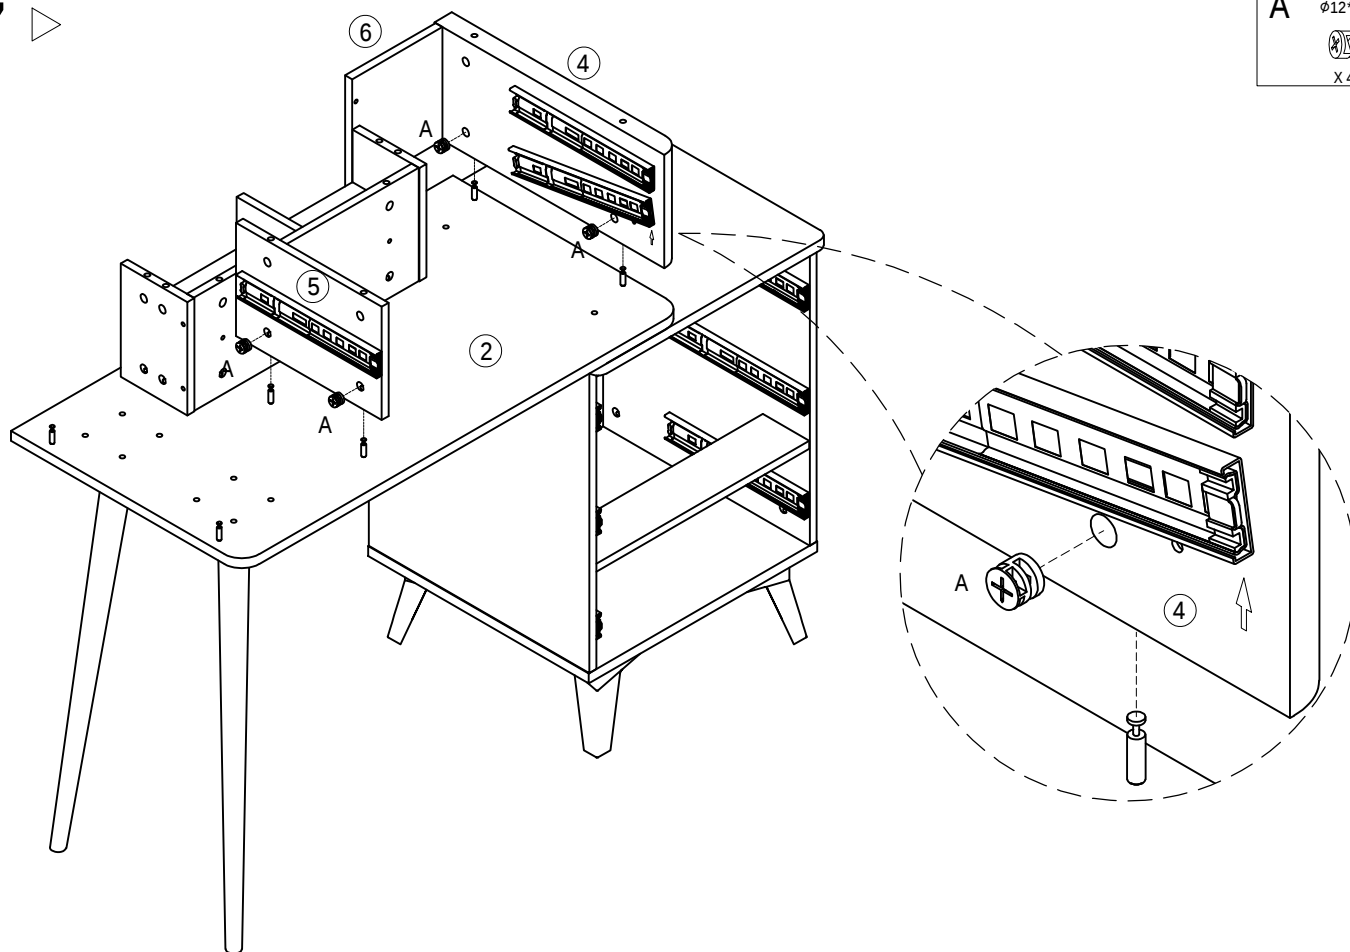

18 ▶


A $\phi 12 \times 10$

X 2

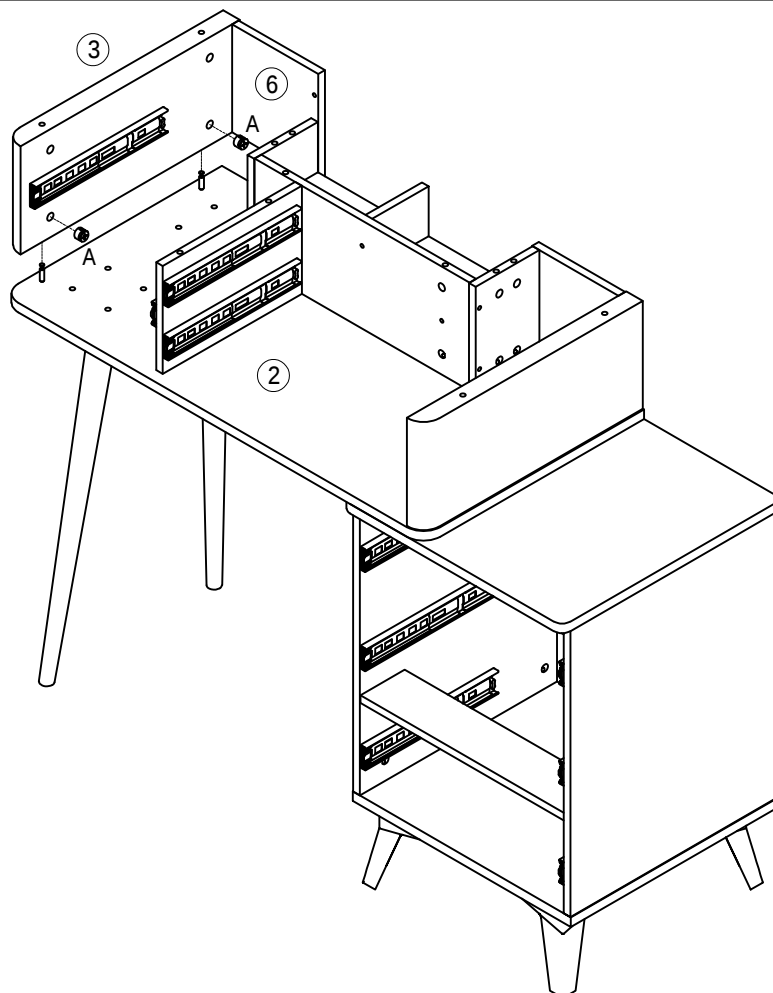


Installation Steps

19 ▶

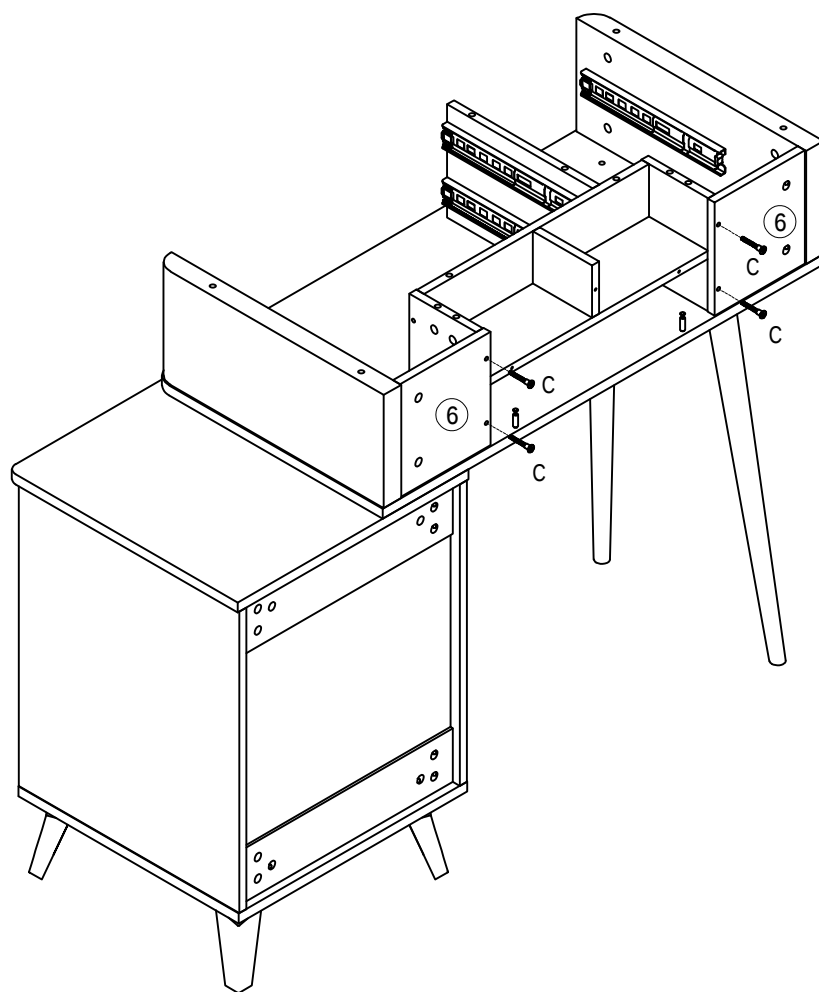

C M5*40
X 4

20 ▶

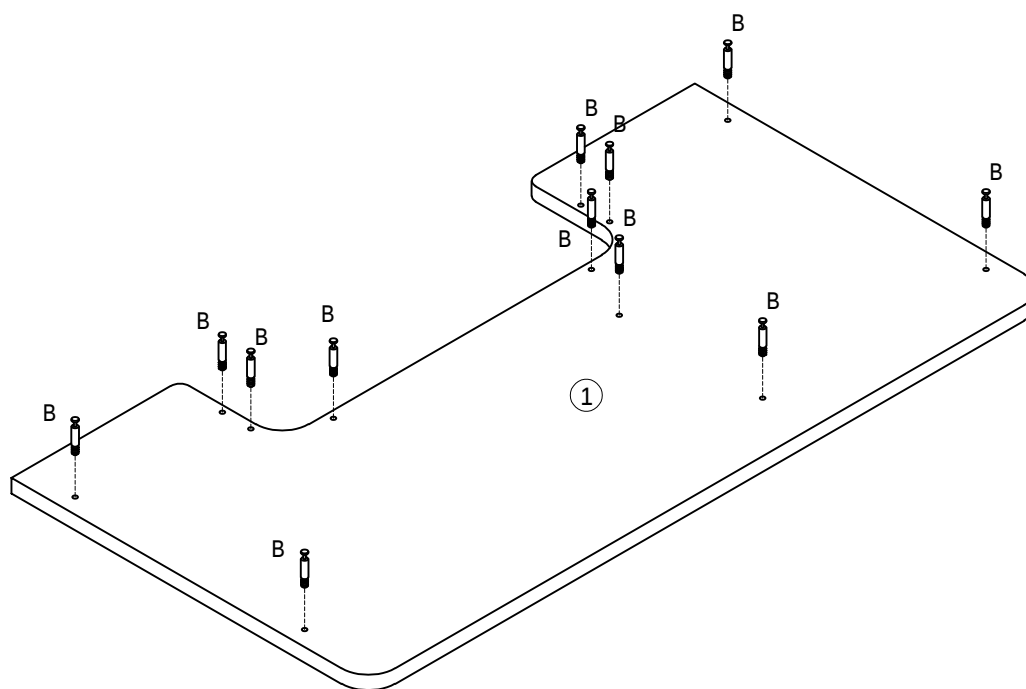


B $\phi 7 \times 40$
X 12

Installation Steps

21 ▶

A $\phi 12 \times 10$


X 12

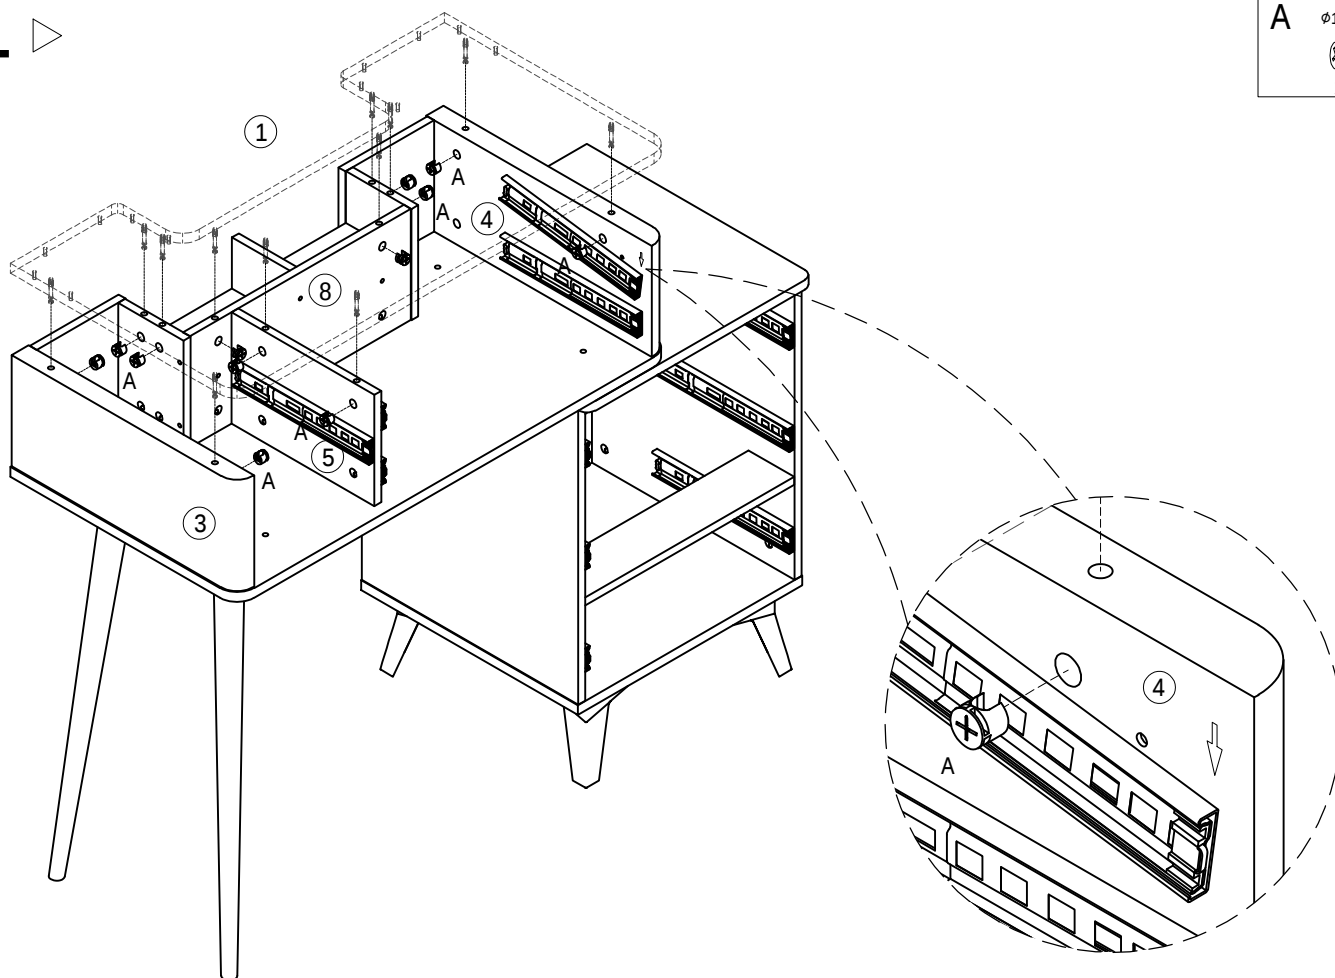

22 ▶

G M3.5*12


X 2

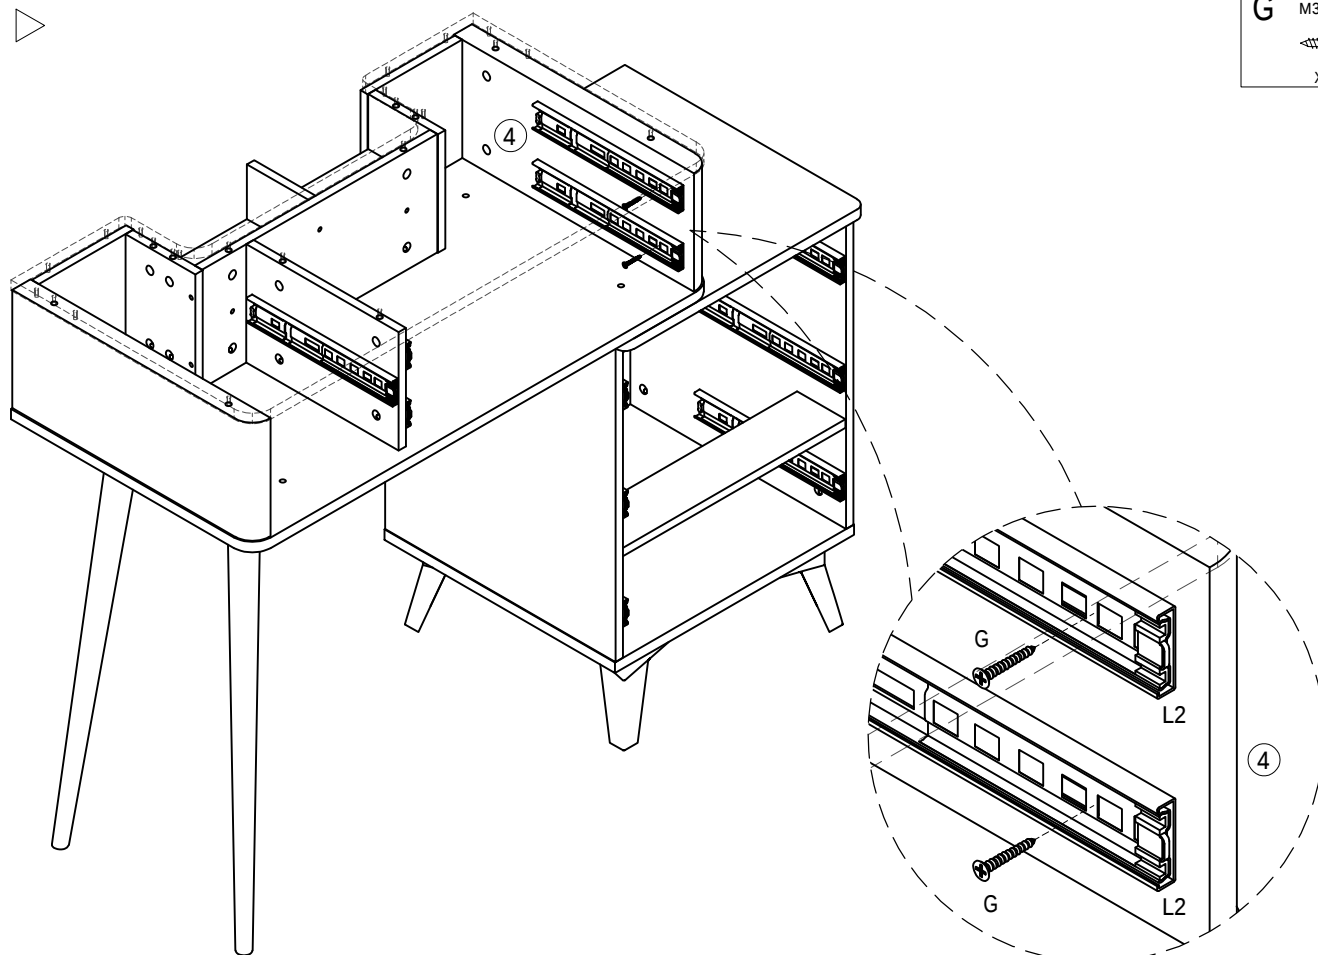

Installation Steps

23 ▶



B $\phi 7 \times 40$
X 12

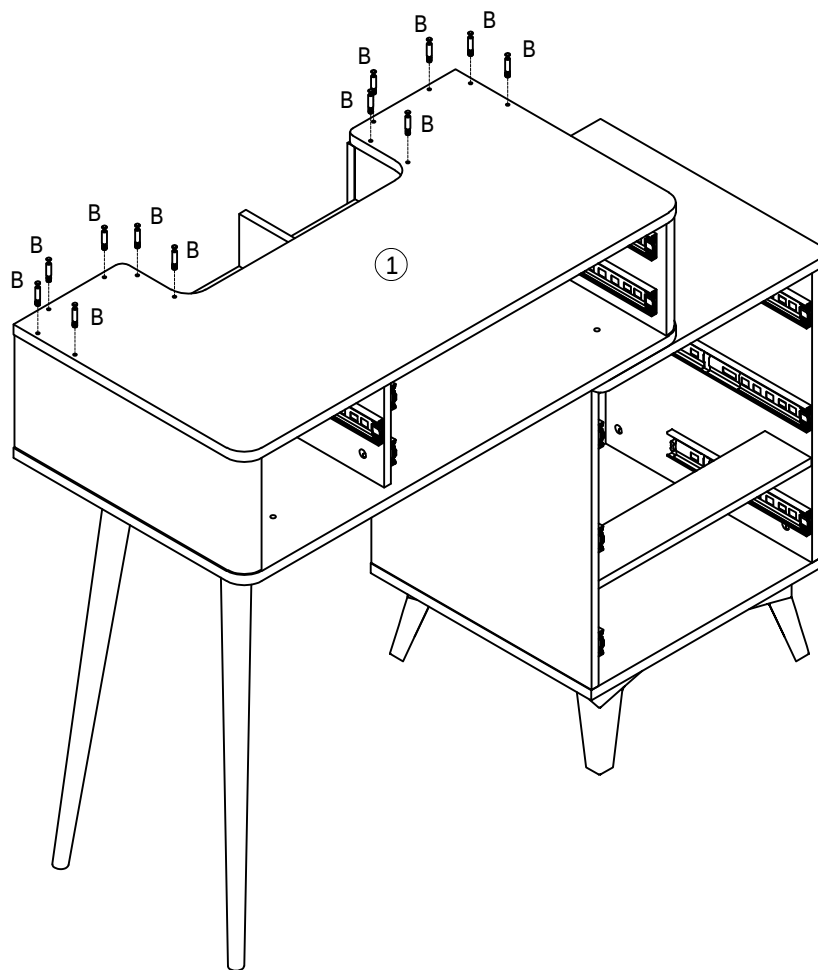

Installation Steps

24 ▶







A $\varnothing 12 \times 10$  X 2	C M5*40  X 3
--	---

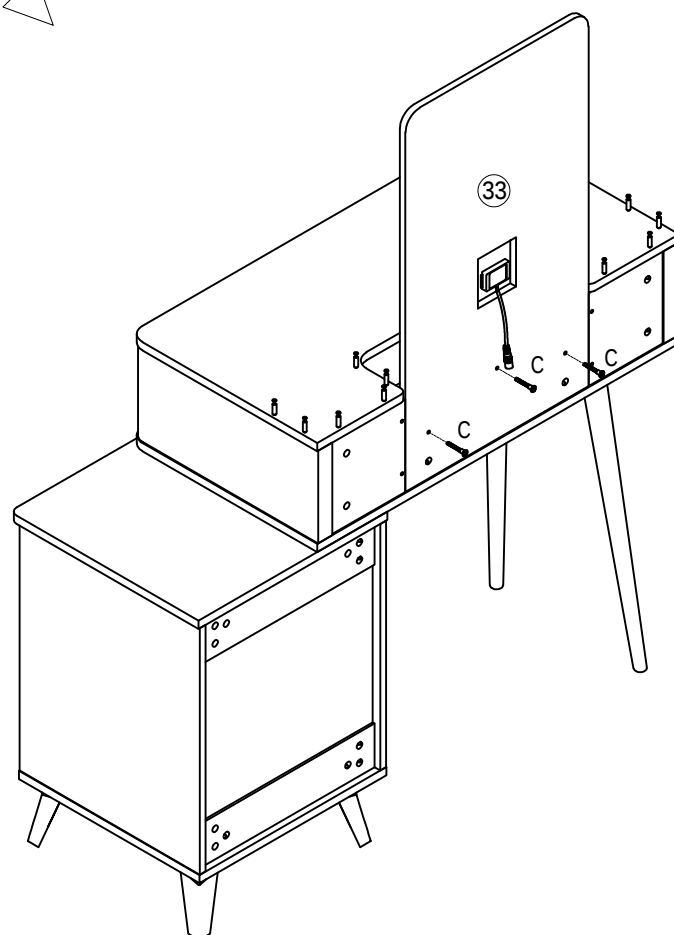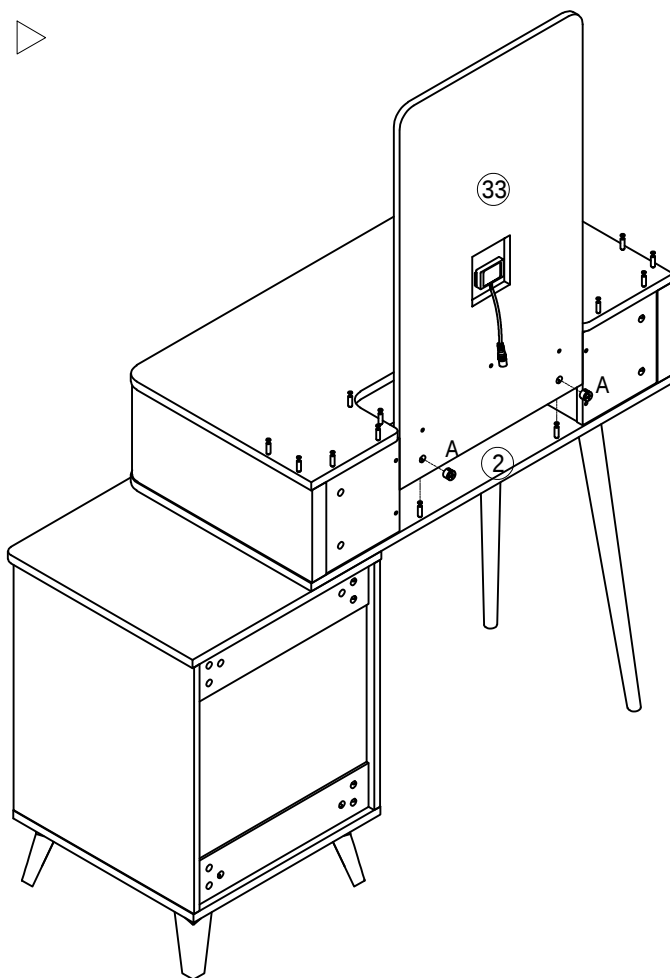

Installation Steps

25 ▶


B	$\phi 7 \times 40$	K	3/4
			
	X 16		X 6

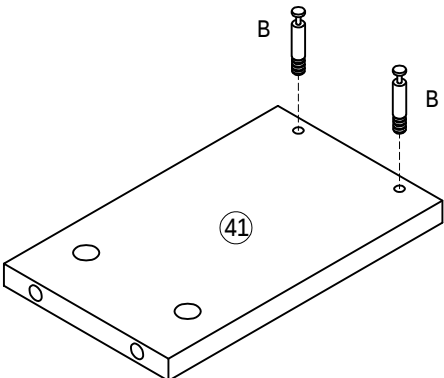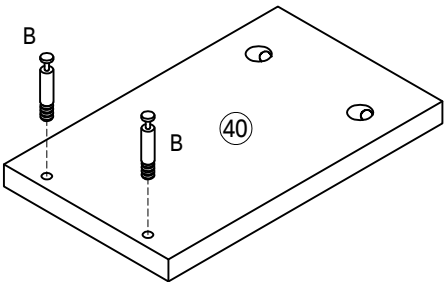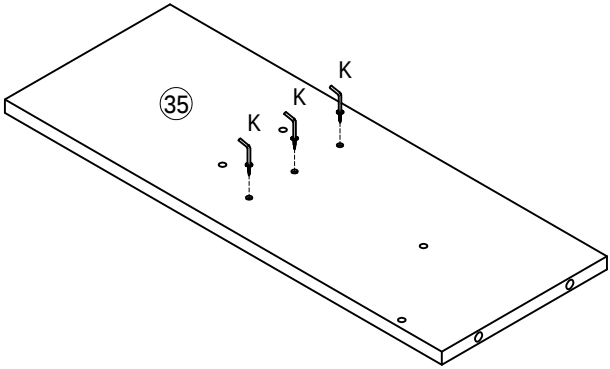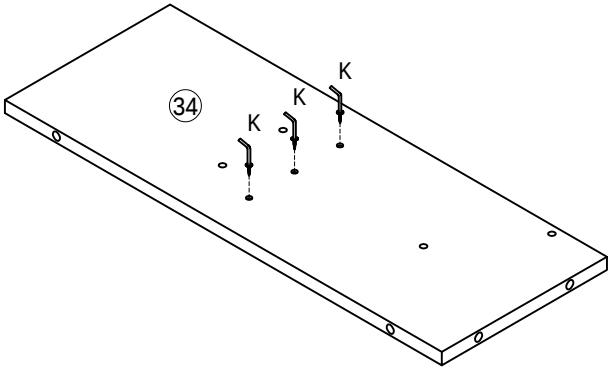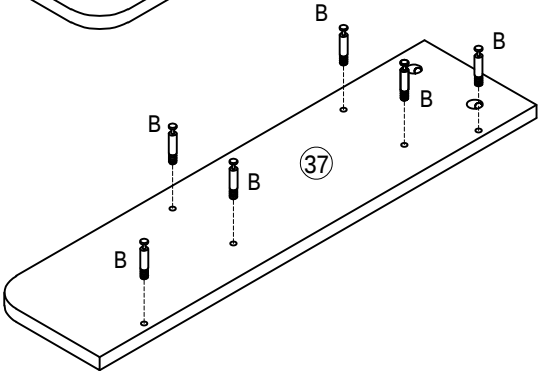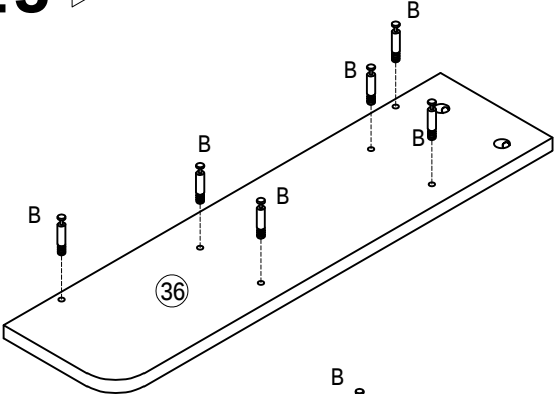

Installation Steps

26 ▶





A	Ø12*10	C	M5*40
			
	X 8		X 4

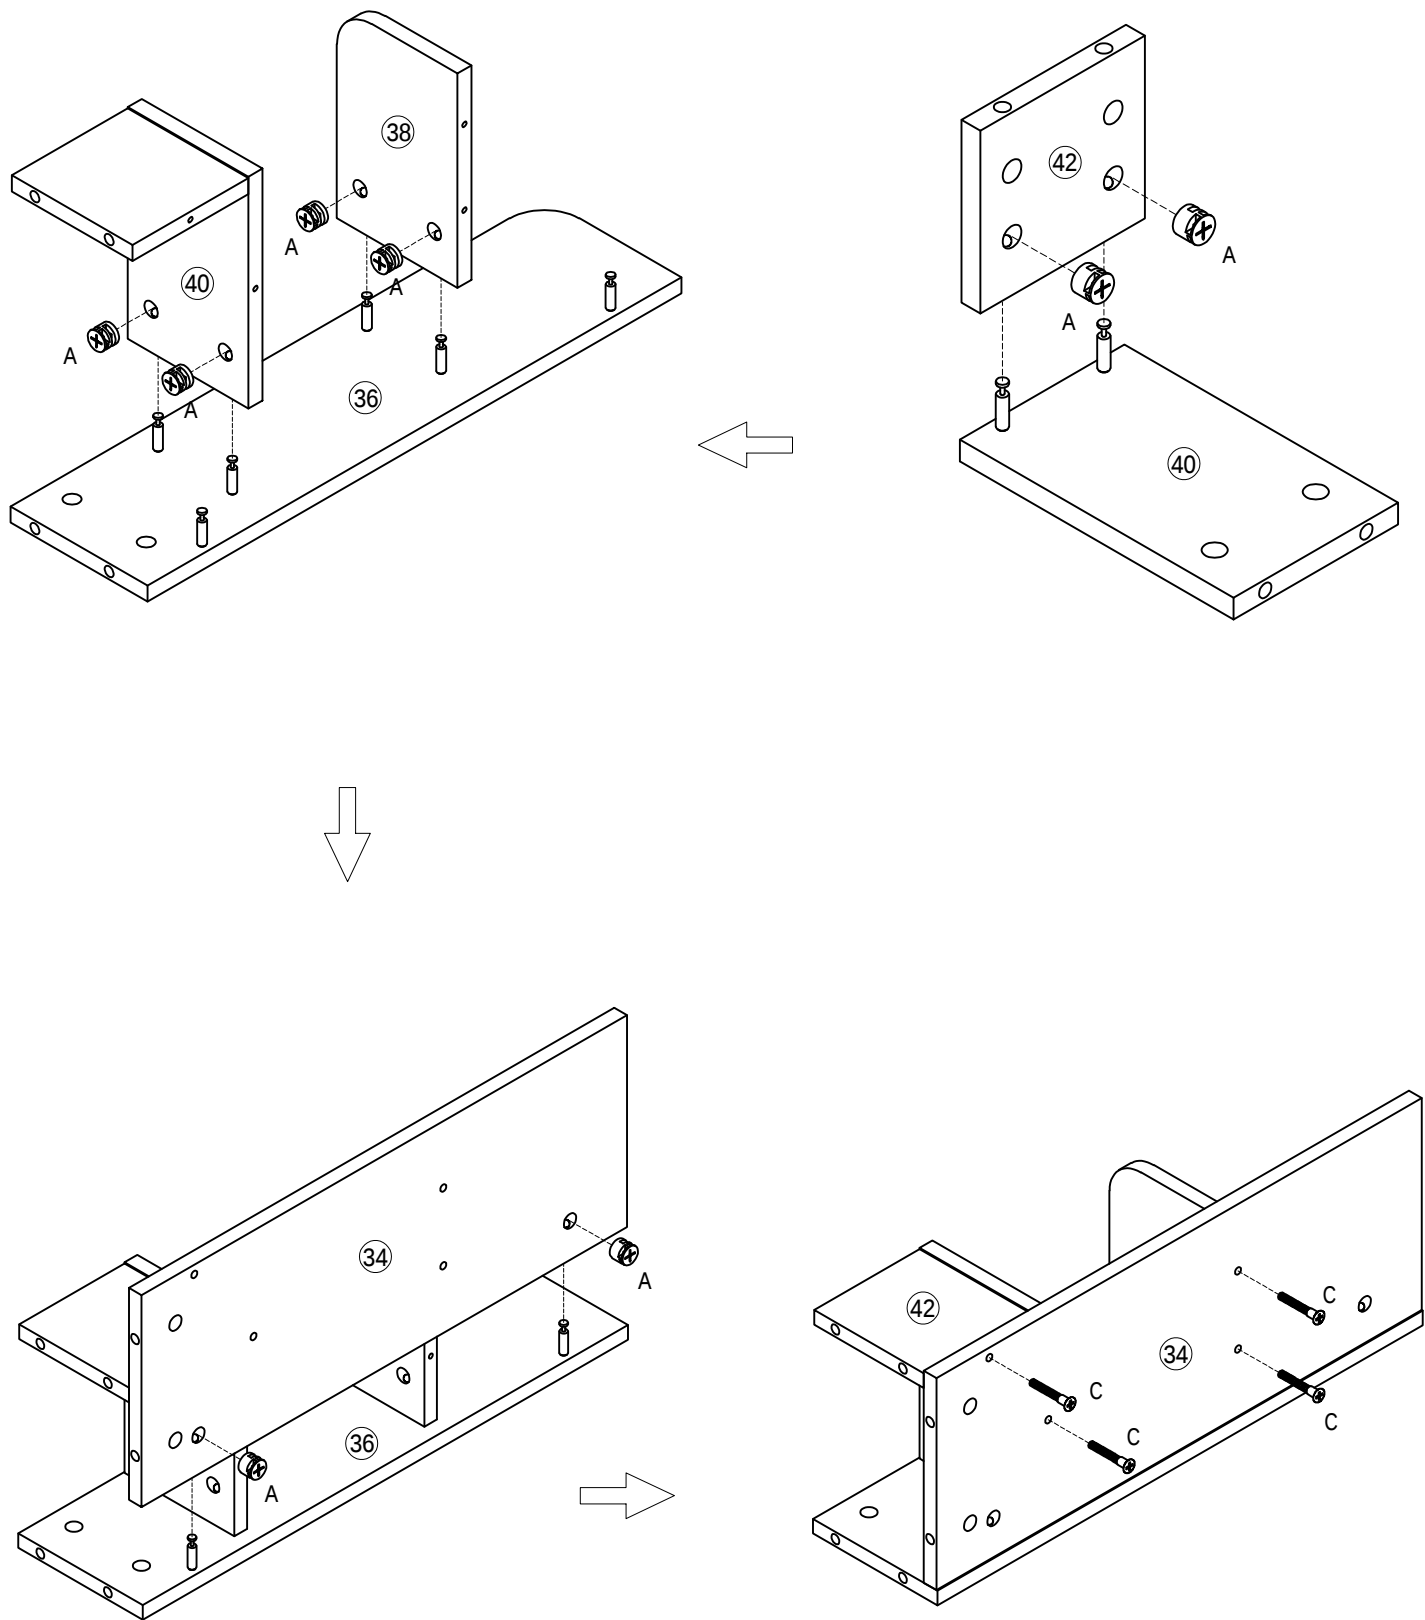

Installation Steps

27 ▶





A	Ø12*10	C	M5*40
			
	X 8		X 4

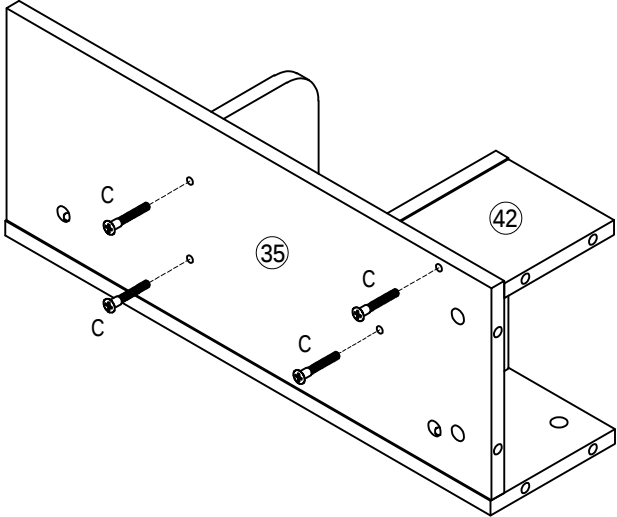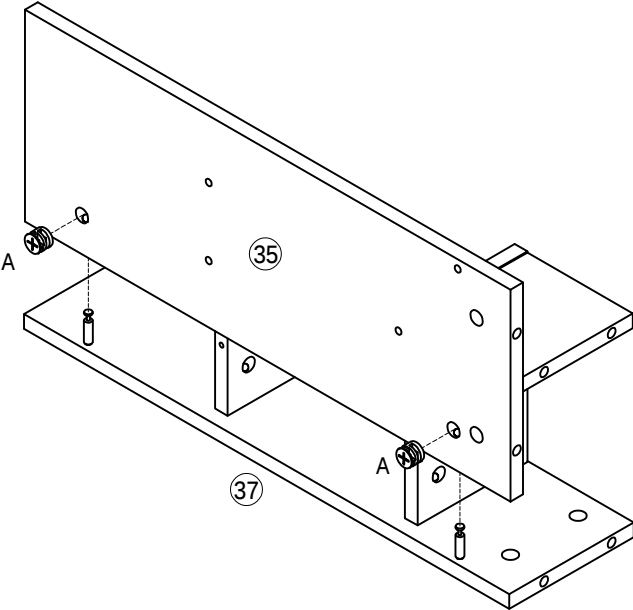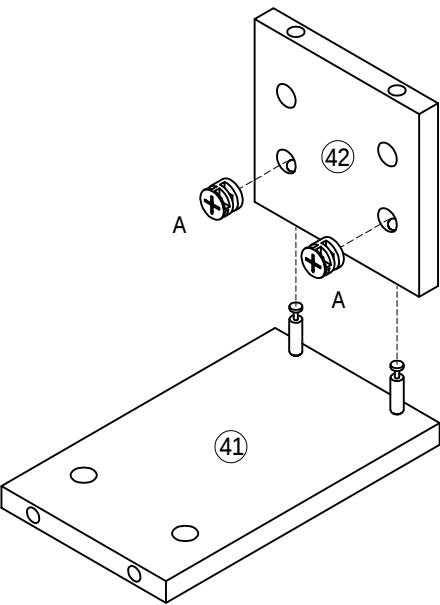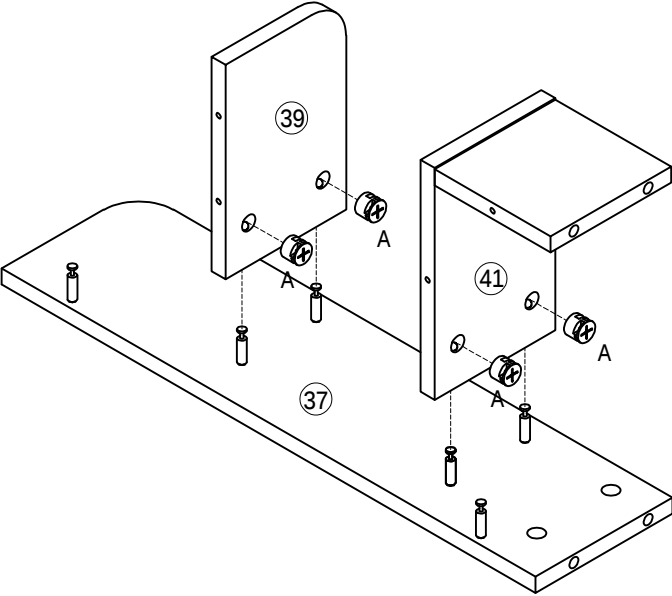

Installation Steps



28 ▶

A	$\varnothing 12 \times 10$	G	M3.5*12	M	
					
	X 12		X 16		X 4

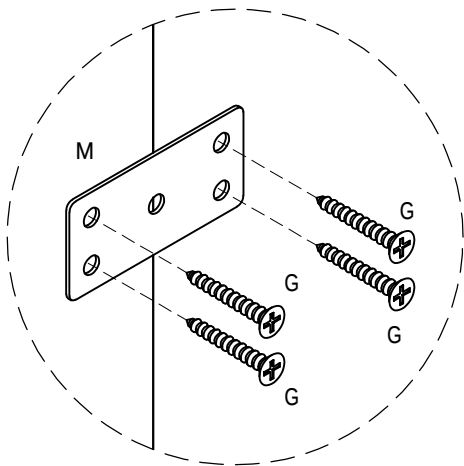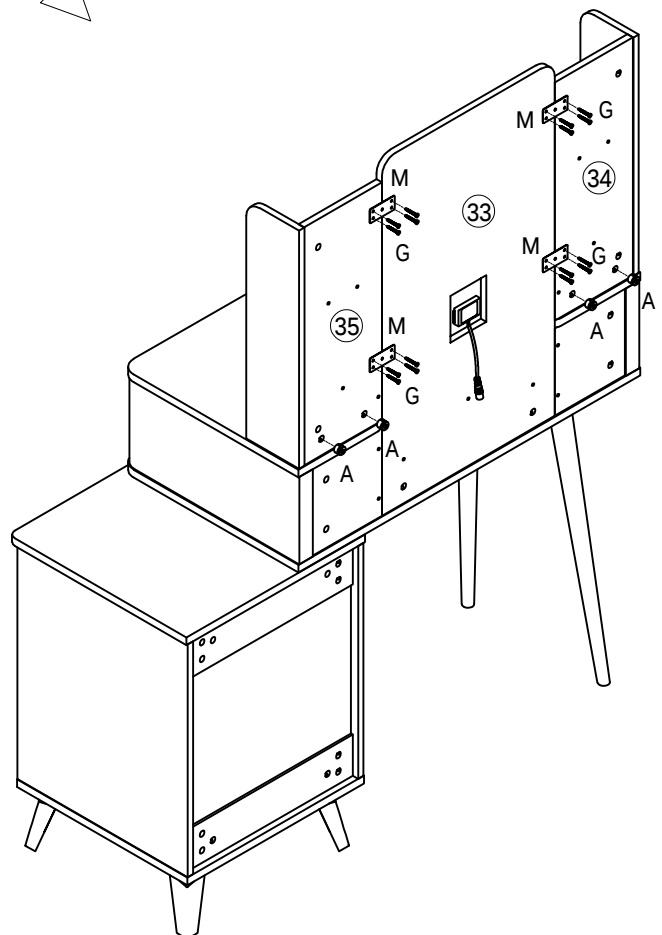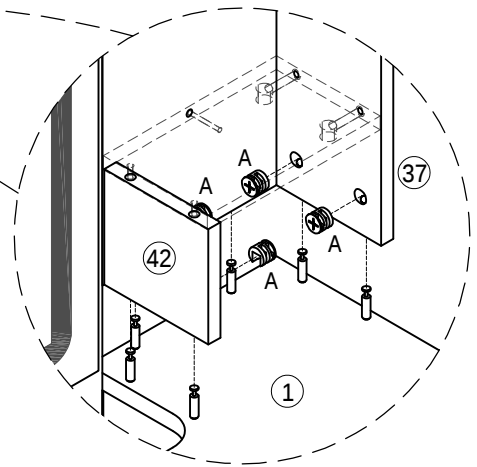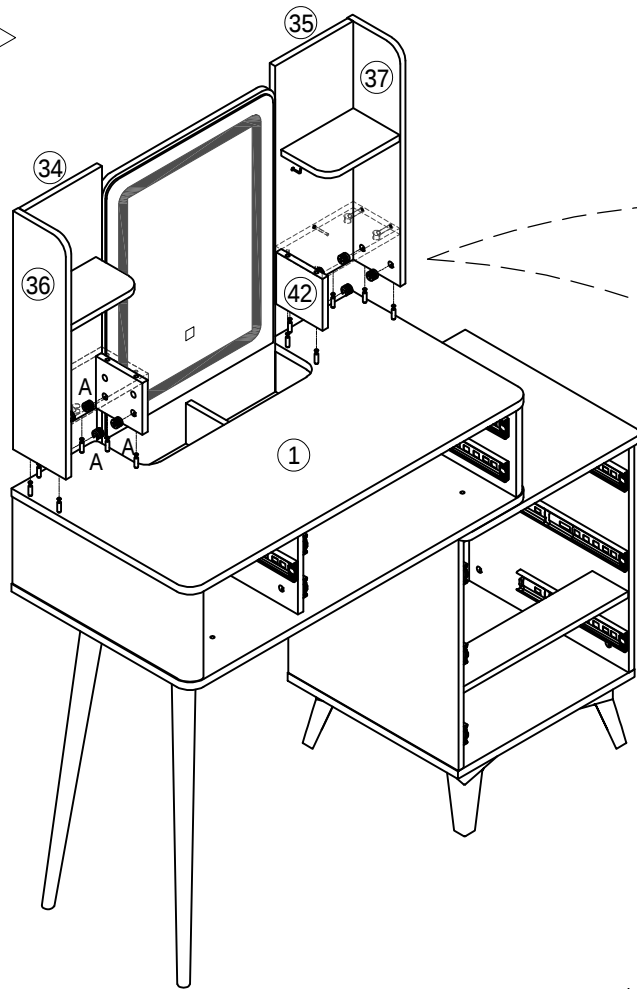


Installation Steps

29 ▶

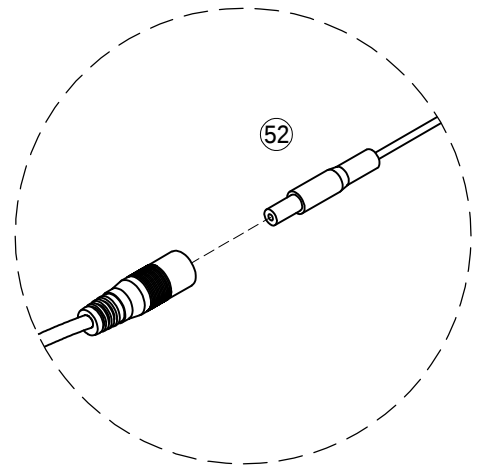
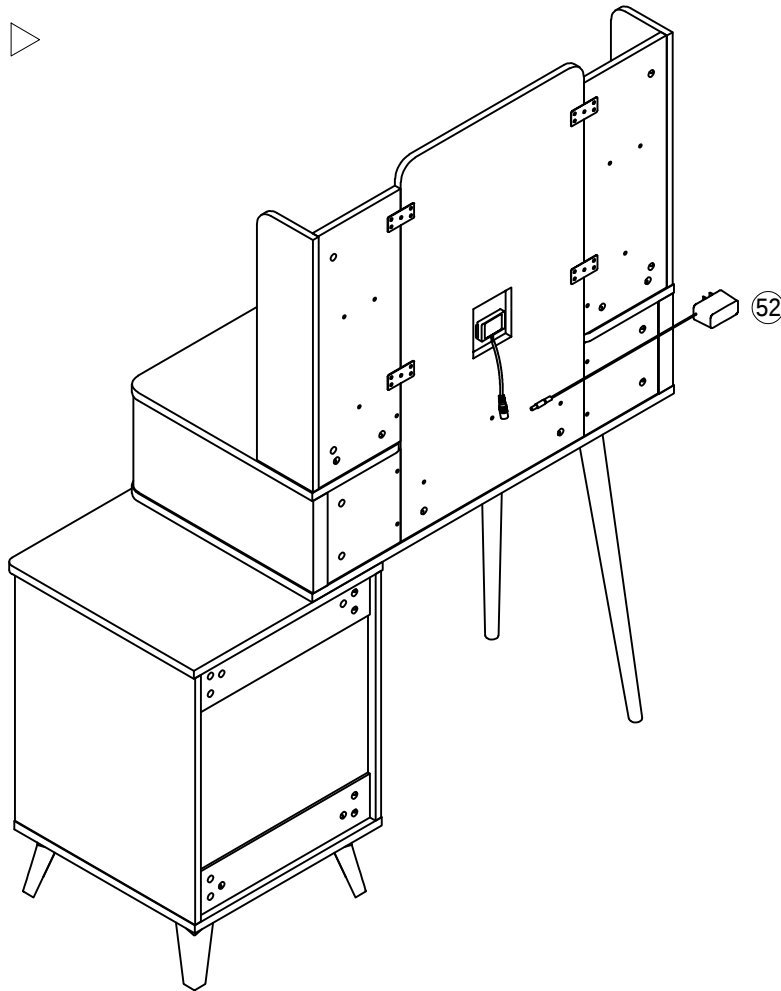


30 ▶


x 2

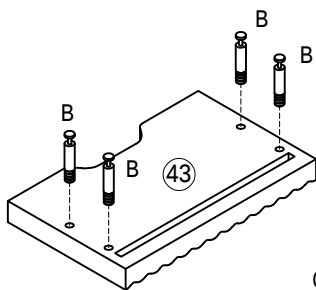

x 2

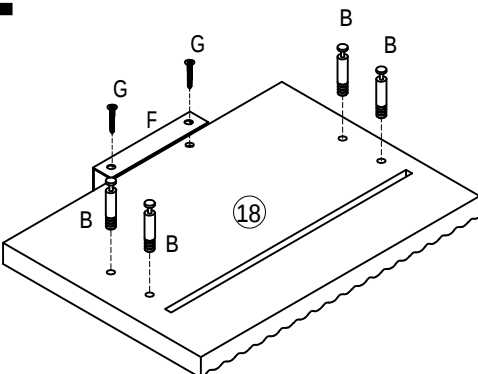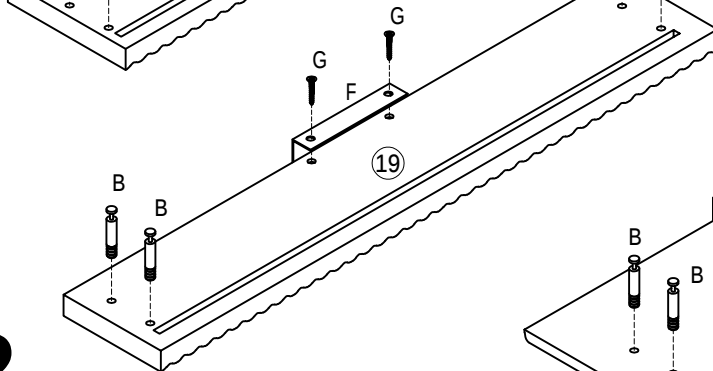

x 3



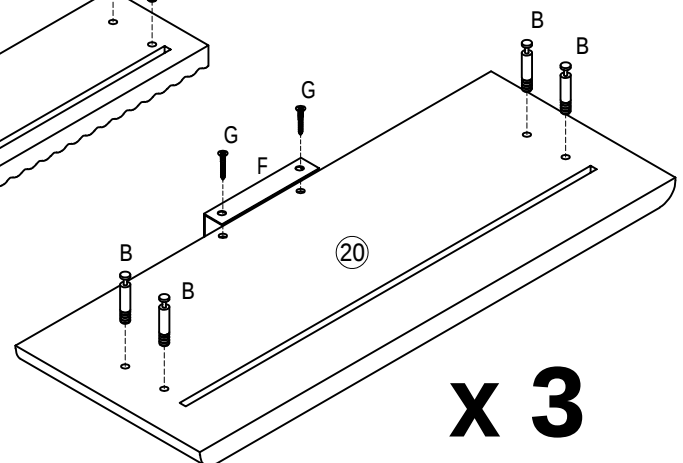


B	$\varnothing 7 \times 40$	F	64mm	G	M3.5*12
					
X 32		X 6		X 12	

Installation Steps

31 ▶




A	Ø12*10	C	M5*40
			
	X 4		X 4

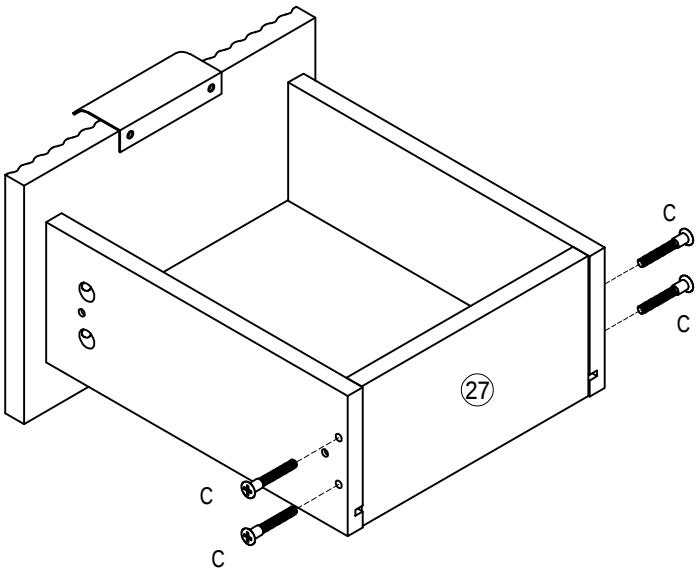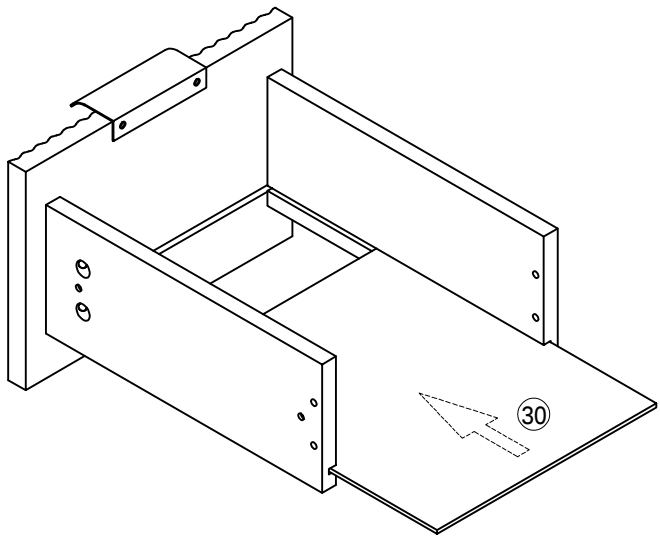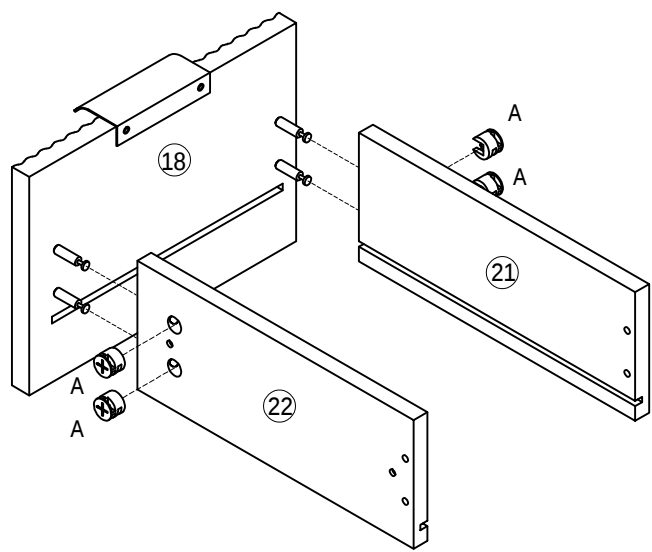

Installation Steps

32 ▶

A	Ø12*10	C	M5*40
			
	X 8		X 8

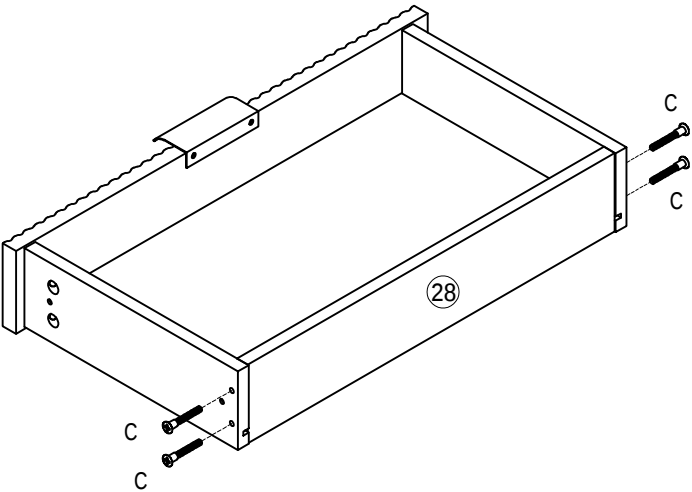
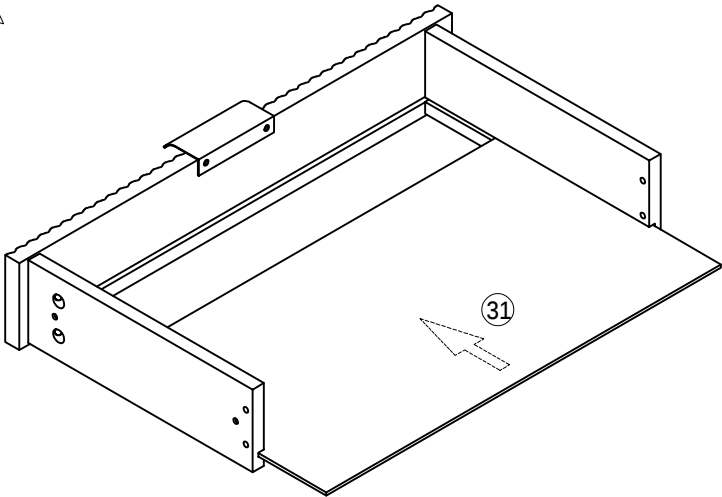
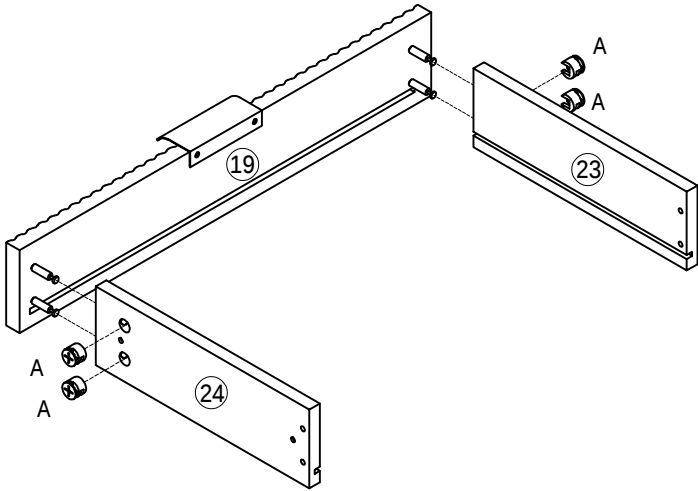


x 2

Installation Steps

33 ▶

A $\varnothing 12 \times 10$  X 12	C M5*40  X 12
---	--

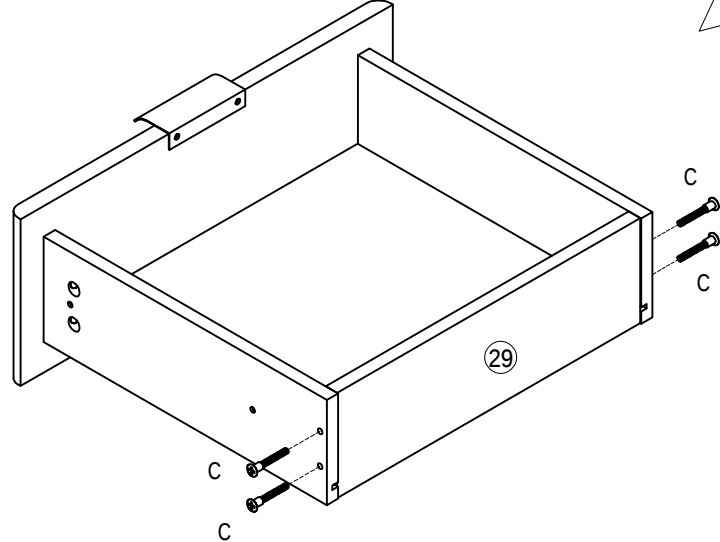
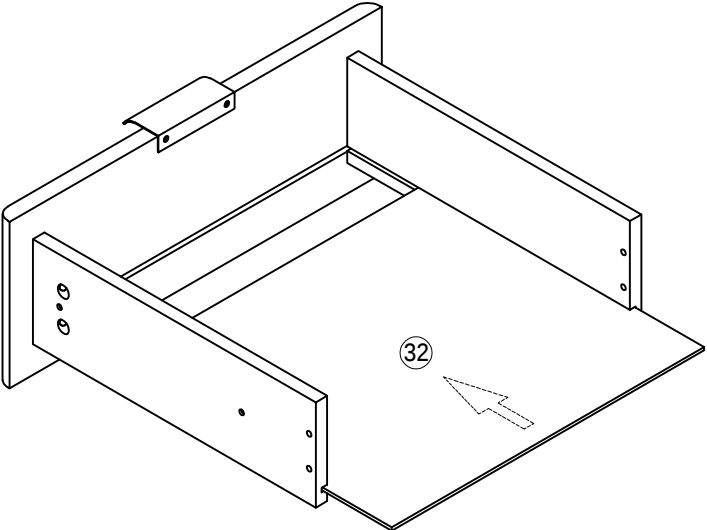
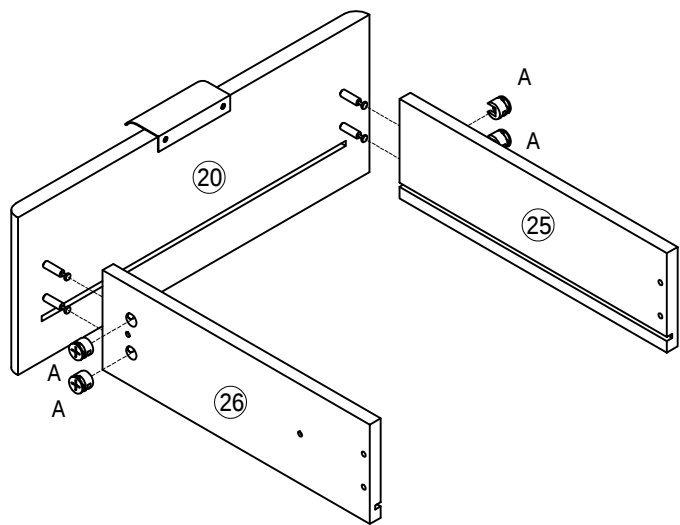


x 3

Installation Steps

34 ▶


A	φ12*10	C	M5*40
			
	X 8		X 8

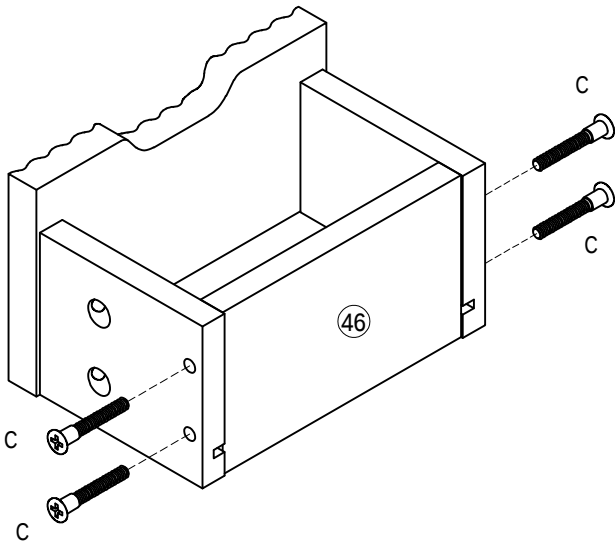
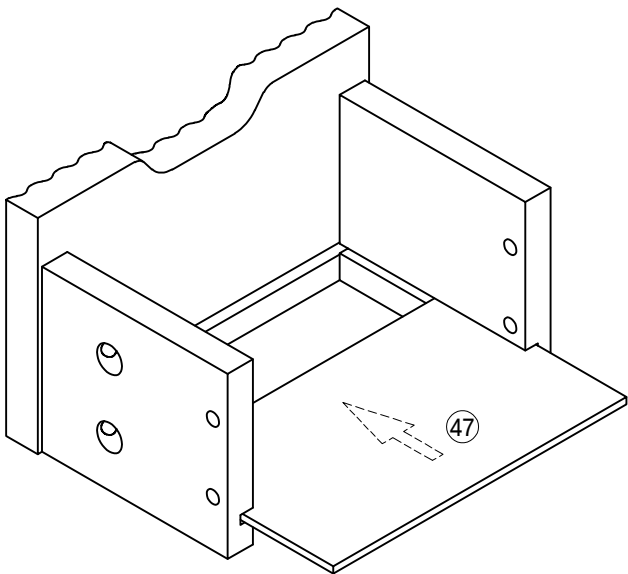
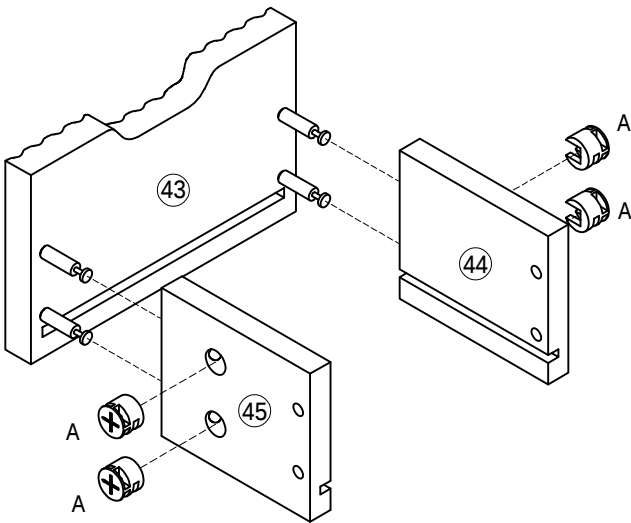


x 2



Installation Steps

35 ▶



G	M3.5*12	L	10°
			
X 24		X 6	

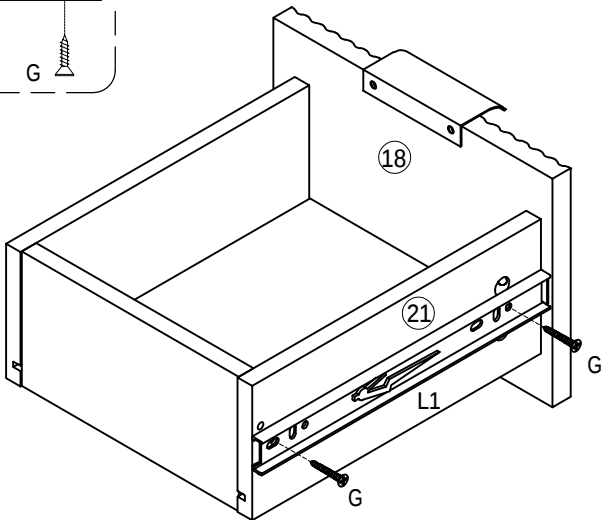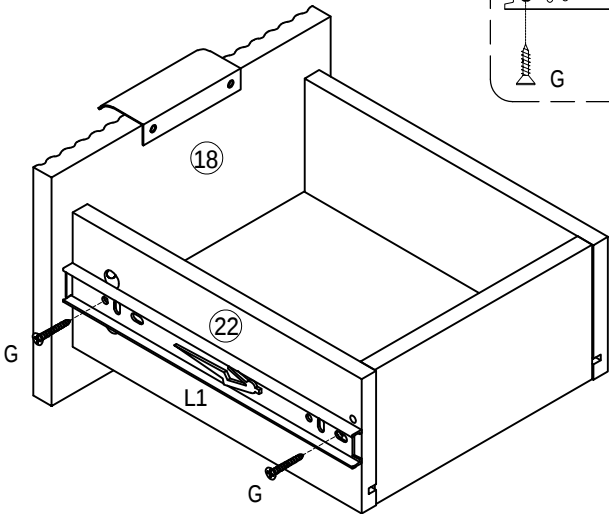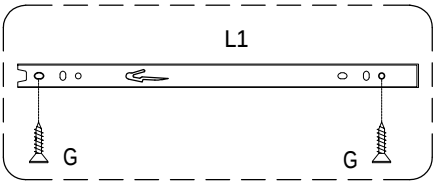

x 2

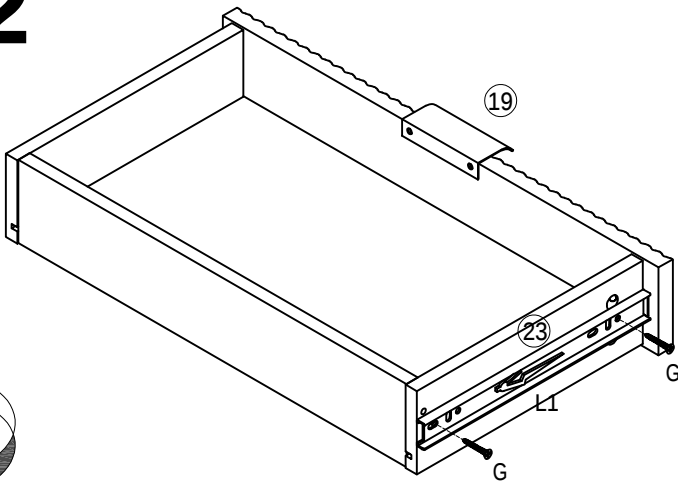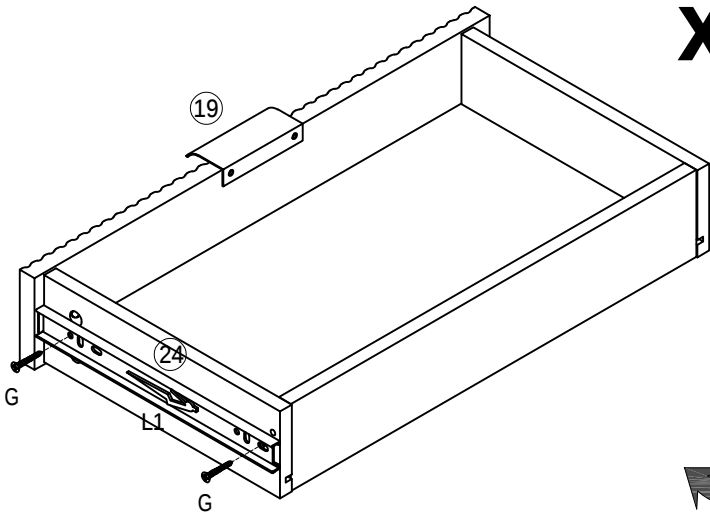


x 3

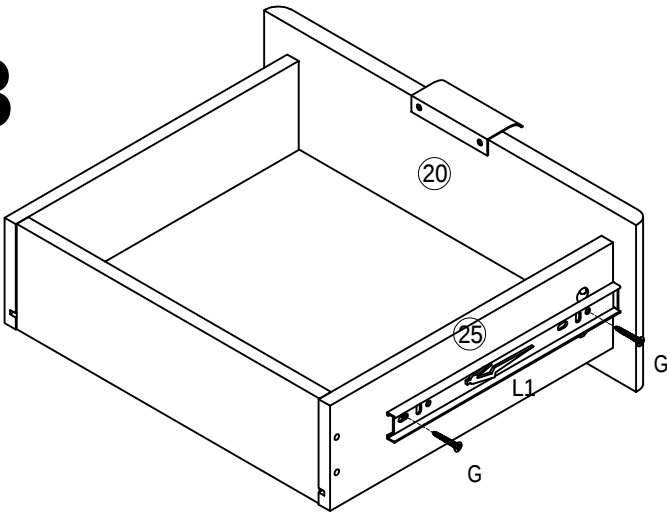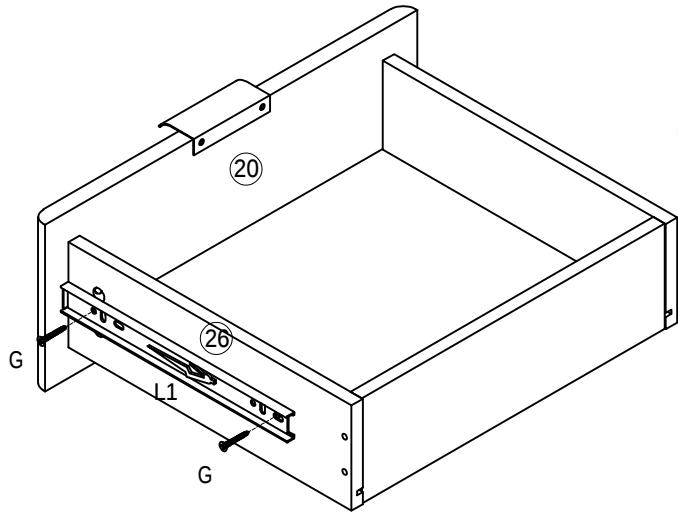


Installation Steps

36 ▶

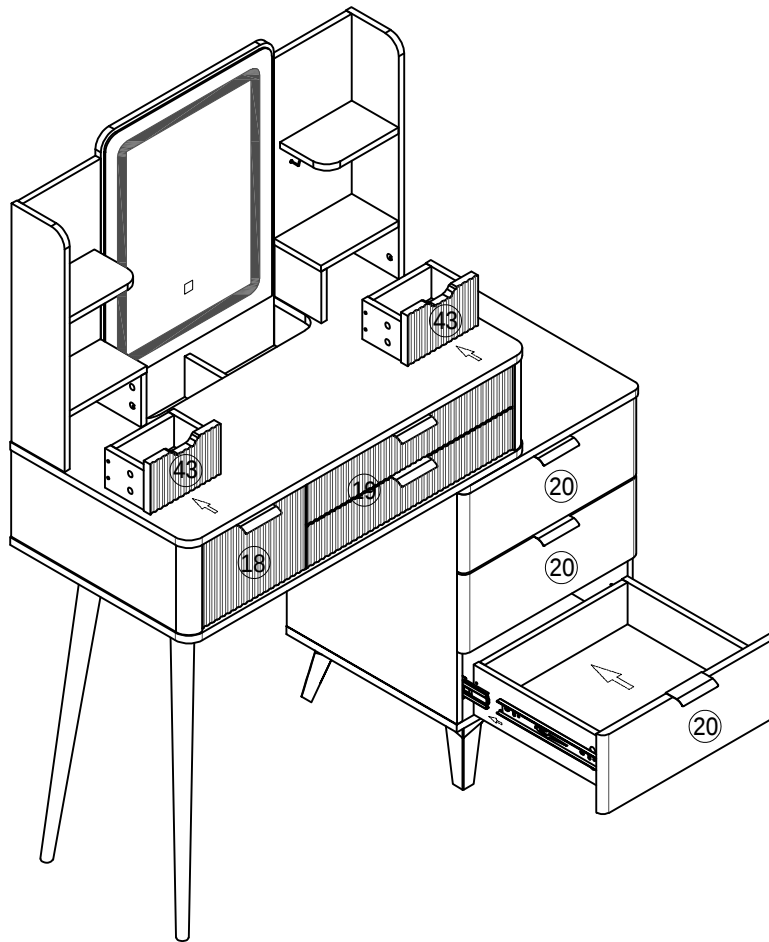

37 ▶

D M6*15
X 16

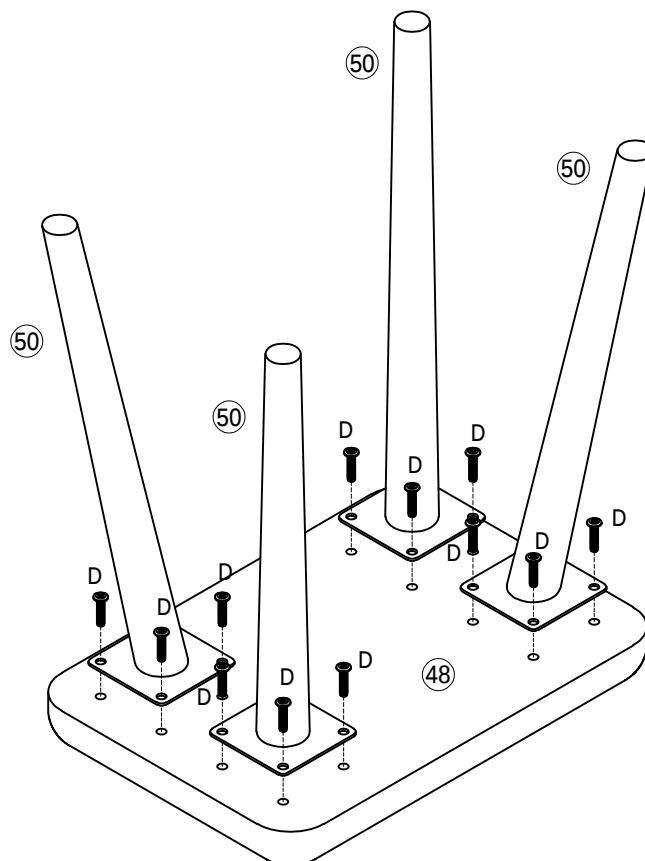

Installation Steps

38 ▶

