

LOFT BED

SAFETY WARNINGS

1. Follow the information on the warnings appearing on the upper bunk end structure and on the carton. Do not remove warning label from bed
2. Always use the recommended size mattreress or mattress support, or both, to help prevent the likelihood of entrapment or falls.
3. Surface of mattress must be at least 5 inches (127mm) below the upper edge of guardrails.
4. Do not allow children under 6 years of age to use the upper bunk
5. Prohibit more than one person on the upper bunk
6. Periodically, check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight
7. Do not allow horseplay on or under the bed and prohibit jumping on the bed
8. Always use the ladder for entering and leaving the upper bunk.
9. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
10. Use of a nightlight may provide added safety precaution for a child using the upper bunk.
11. Always use guardrail on both long sides of the upper bumk. If bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be place against the wall to prevent entrapment between the bed and wall.
12. The use of water or sleep flotation mattresses is prohibited.
13. Keep these instruction for future reference.

STRANGULATION HAZARD

Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hooks, belts and jump ropes.

SIZE OF MATTRESS AND FOUNDATION

Use only mattress which is 74" - 75" long and 37 1/2" - 38 1/2" wide on twin upper bunk
Ensure thickness of mattress and foundation combined does not exceed 8" and mattress and is at least 5" below upper edge of guardrails.






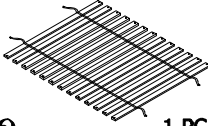
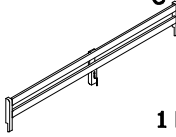

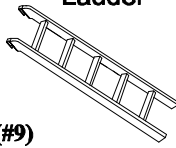




Replacement parts, maybe obtained from dealer or directly from us

Assembly Instructions













Page 2 of 7

LOFT BED

COMPONENT LIST

Headboard  (#1) 1 PC.	Footboard  (#2) 1 PC	Chest  (#3) 1 PC	Legs  (#4) 4 PCS	Side Rail  (#5) 2 PCS.
Slats Roll  (#6) 1 PC	Guard Rail Long  (#7) 1 PC	Guard Rail Short  (#8) 1 PC.	Ladder  (#9) 1PC	Left & Right Side Frame  (#10) 2 PCS.
Bookcase top  (#11) 1 PC	Middle Shelf  (#12) 1PC		Back Rail  (#13) 1 PC	

HARDWARE LIST

HEX NUT Ø5/16mm *13  (A) 8 PCS	Bolts: 5/16"x 90mm  (B) 8 PCS.	Bolts: 5/16"x 30mm  (C) 23 PCS.	Bolts: 5/16"x 38mm  (D) 3 PCS.	Bolts: 5/16"x 63mm  (E) 2 PCS.
Lock Washer: Ø 5/16"  (G) 28 PCS.	WASHER Ø 5/16"x19mm  (H) 28 PCS.	ALLEN KEY  (K) 1 PC.	Screw Ø3.5 * 15mm  (L) 6 PCS.	Screw Ø4 * 30mm  (M) 26 PCS.
WRENCH 13mm  (N) 1 PC	 screw driver "Not provided"			

PACKING METHOD :

Box 1/5 =CHEST, LOFT ASSEMBLY HARDWARE AND INSTRUCTIONS.

Box 2/5 = BOOKCASE SIDE FRAME , MIDDLE SHELF, TOP

Box 3/5 = HEADBOARD + FOOTBOARD + SLATS

Box 4/5 = SIDE RAILS + BACK RAIL

Box 5/5 = LADDER + GUARDRAILS

Assembly Instructions


Page 3 of 7

LOFT BED



OPTIONAL LOWER BED

Fully Loft bed Assembled
Left Side Facing

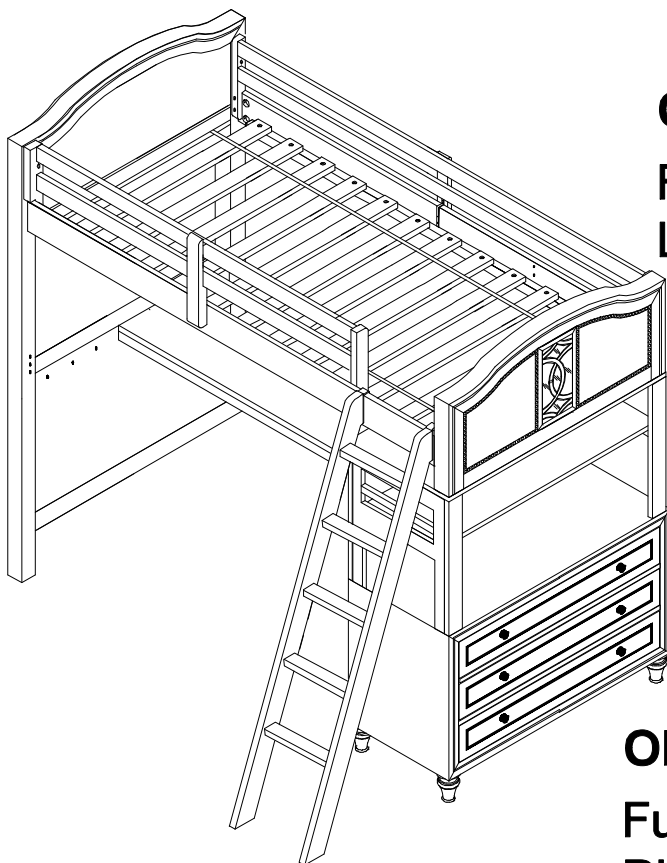


OPTIONAL DESK

Fully Loft bed Assembled
Right Side Facing

Assembly Instructions

Page 4 of 7

ITEM: Chest Assembly (**Box 1/5**)

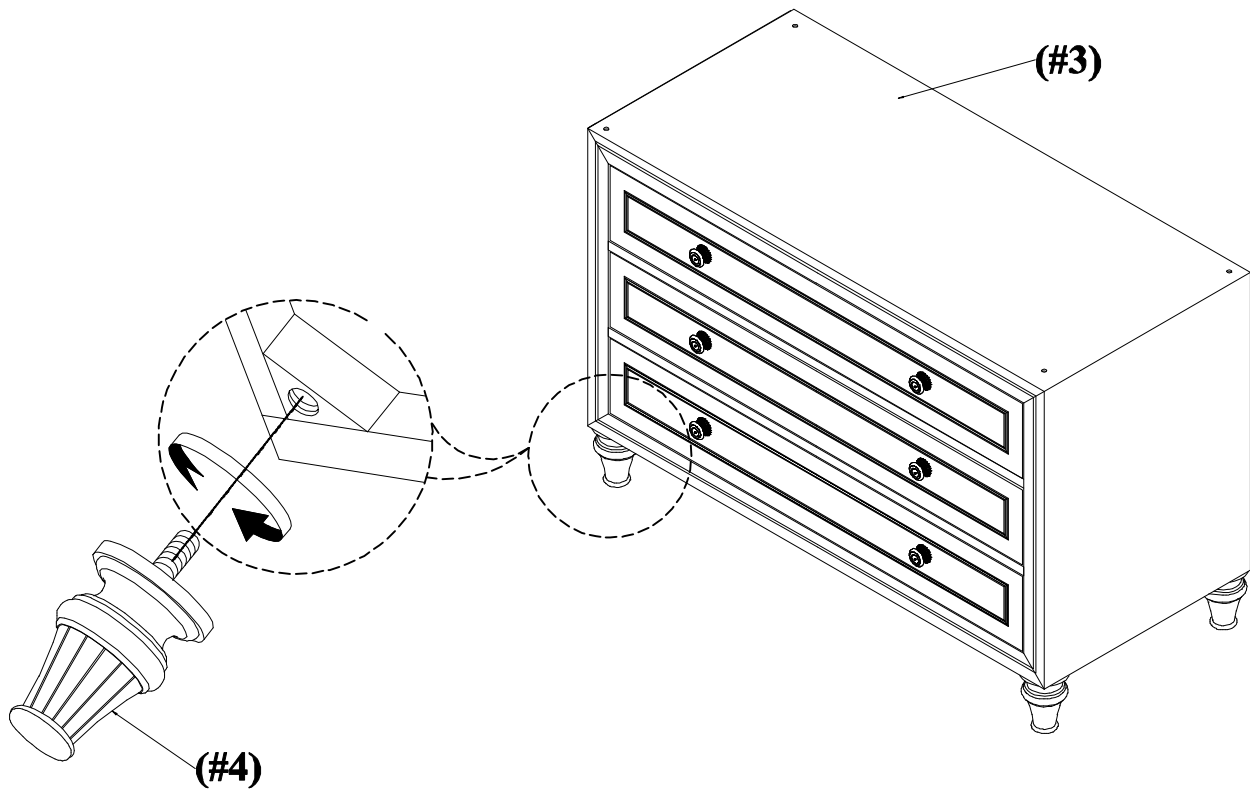

DETAIL A.


CHEST ASSEMBLY :

1. Screw the feet into the Chest (#3) bottom as Shown in DETAIL A; tighten fully.
2. Place Chest in upright position.


Assembly Instructions

Page 5 of 7


ITEM: Bookcase Assembly (Box 2/5)

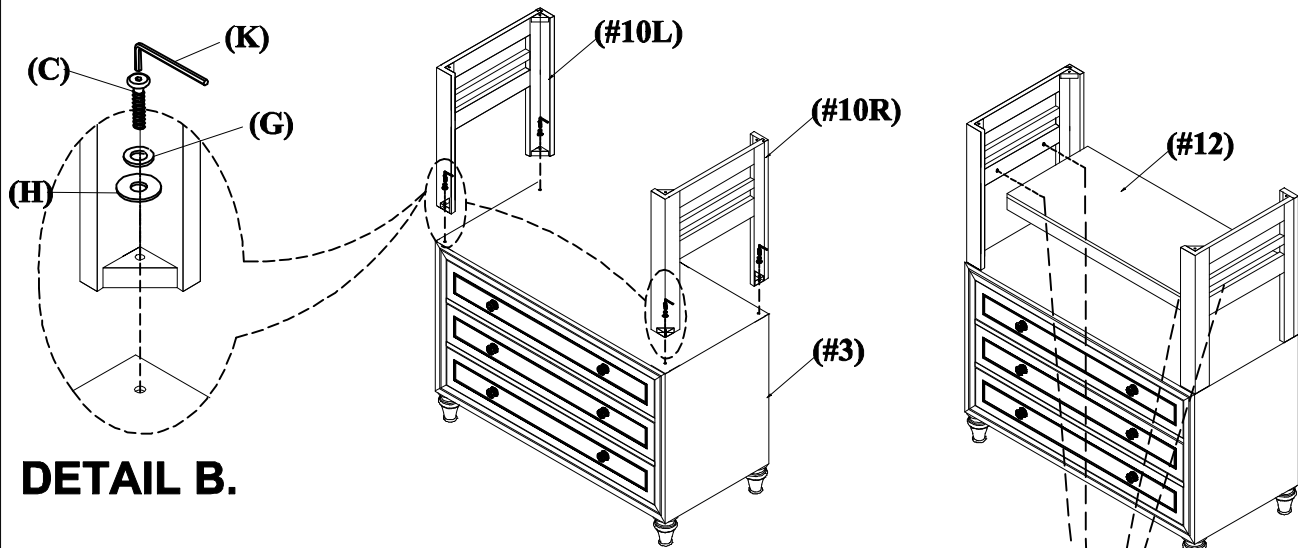

DETAIL B.

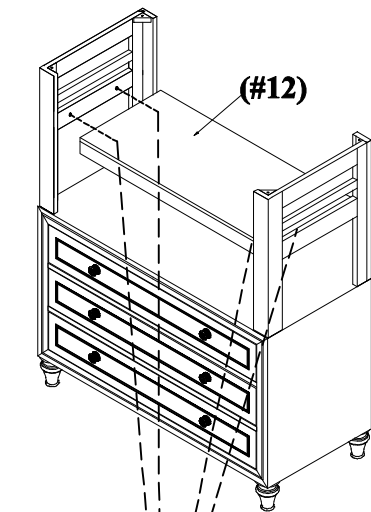

DETAIL C.

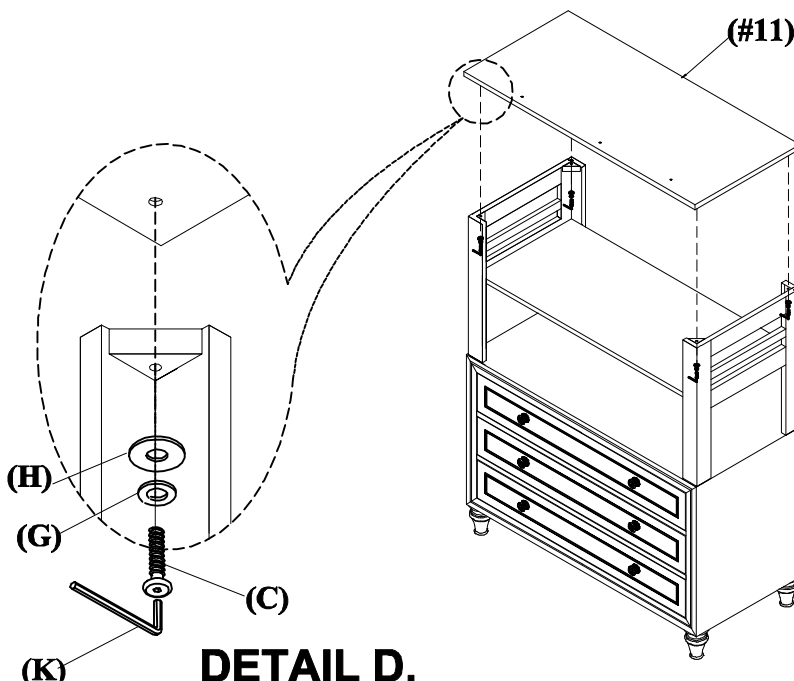

DETAIL D.


Bookcase Assembly:

1. Attach the Left Side Frame (#10L) to the left Side of the top of the Chest (#3) using Bolt (C), Washer (H), And Lock Washer (G) as shown in **DETAIL B**; tighten loosely.
 - a. Make sure the holes in the back upright of the Left Side Frame (#10L) for attaching the Back Rail (#13) are at the back side of the Chest (#3).
2. Attach the Right Side Frame (#10R) to the Right Side of the Chest (#3) using Bolt (C), Washer (H), And Lock Washer (G) as shown in **DETAIL B**; tighten loosely.
 - b. Make sure the holes in the back upright of the Right Side Frame (#10R) for attaching the Back Rail (#13) are at the back side of the Chest (#3).
3. Attach the Middle Shelf (#12) to the Side Frames (#10L/R) using Bolt (C), Washer (H), and Lock Washer (G) as shown in **DETAIL C**; tighten loosely.
4. Assemble the Bookcase Top (#11) to the Side Frames (#10L/R) using Bolt (C), Washer (H), and Lock Washer (G) as shown in **DETAIL D**; tighten **FULLY**.
5. Go back and tighten **FULLY** all the Bolts in Steps 1, 2, & 3.

Assembly Instructions

Page 6 of 7

ITEM: Headboard/footboard/Slats Assembly Box 3/5
Side Rail/Back Rail (Box 4/5)

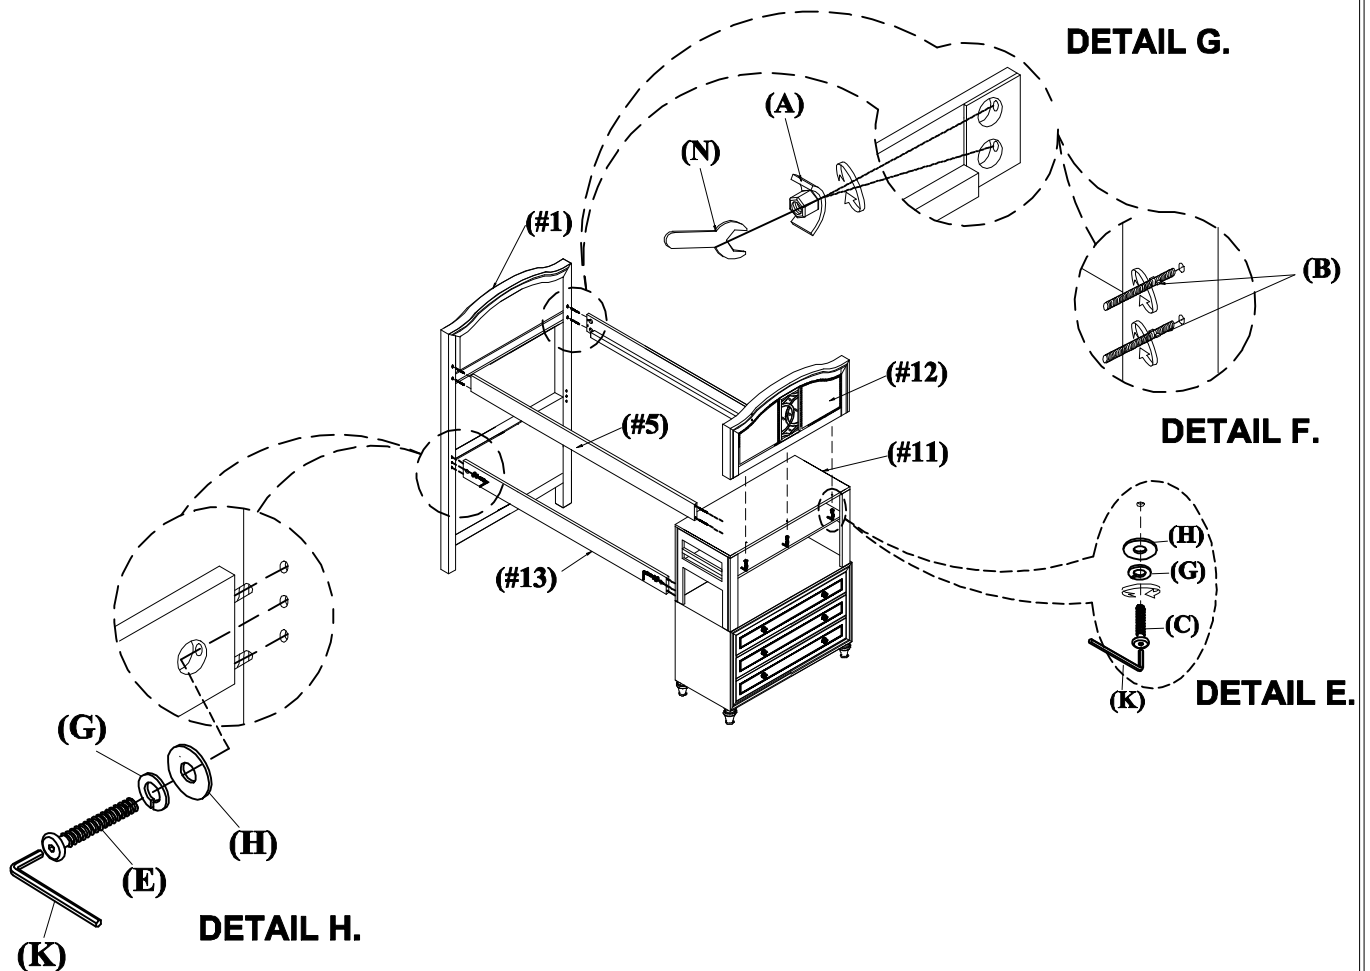

HEADBOARD/FOOTBOARD ASSEMBLY :


1. Place the Footboard (#2) carefully onto the front edge of the Bookcase Top (#11) as shown in **DETAIL E**.
2. Align the holes in through the Bookcase Top (#11) with the holes in the bottom of the Footboard (#2).
3. Attach the Footboard (#2) to the Bookcase Top (#11) using Bolt (C), Washer (H), and Lock Washer (G); tighten fully.
4. Insert the end of Bolt (B) with the shorter distance to the "CRIMP" in the Bolt, into both the Headboard (#1) and the Footboard (#2) as shown in **DETAIL F**; tighten Fully.
5. Insert the 2 Bed Rails (#5) over the Bolts (B) in the Footboard (#2) as shown in **DETAIL G**.
6. Attach the 4 Hex Nuts (A) onto 4 Bolts (B) and tighten loosely.
7. Stand the Headboard (#1) upright and insert the side rails (#5) over the Bolts (B) in the Headboard (#1) as shown in **DETAIL G**.
8. Attach the 4 Hex Nuts (A) onto 4 Bolts (B) and tighten loosely.
9. Attach the Back Rail (#13) to the Headboard (#1) and to the back of the Bookcase Side Frame (#10L/R) as shown in **DETAIL H**, using Bolt (E), Washer (H), and Lock Washer (G) and tighten loosely.

IMPORTANT: DO NOT TIGHTEN FULLY ANY OF THE BOLTS OR HEX NUTS (STEPS 6, 8, AND 9 ABOVE) UNTIL AFTER YOU HAVE INSTALLED THE GUARD RAILS. AFTER THE GUARD RAILS HAVE BEEN INSTALLED, GO BACK AND TIGHTEN FULLY ALL OF THE BOLTS IN THE HEADBOARD FOOTBOARD ASSEMBLY (STEPS 6, 8, AND 9 ABOVE). TIGHTENING FULLY BEFORE GUARD RAIL INSTALLATION WILL CAUSE A VERY TIGHT FIT OF THE LONG GUARD RAIL AND COULD CAUSE DAMAGE TO THE FINISH.

Assembly Instructions

Page 7 of 7


ITEM: Guard Rail Assembly /Ladder Assembly (Box 5/5)

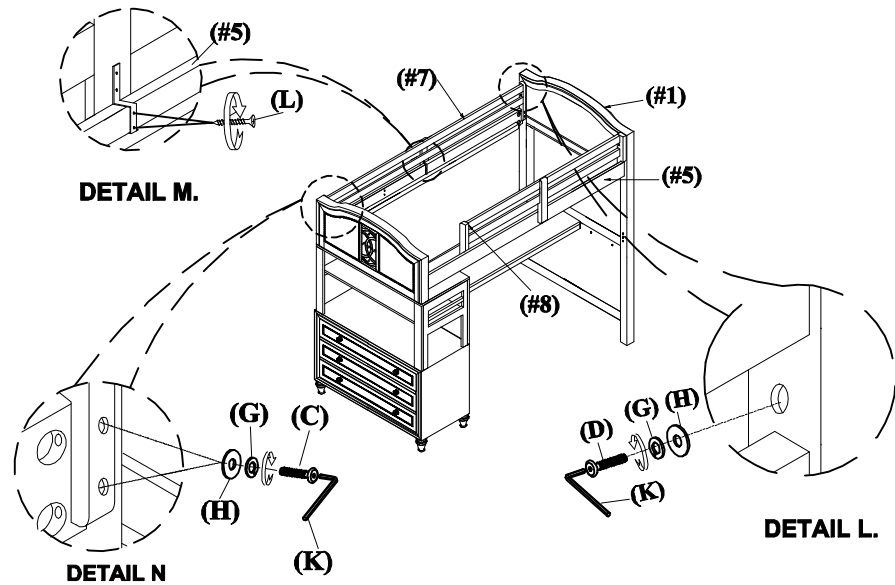

Guard Rail Assembly

IMPORTANT: THE SIDE OF THE UPPER BED TO WHICH YOU ATTACH THE SHORT GUARD RAIL (#8) DETERMINES THE LOCATION OF THE LADDER (AT THE OPEN END OF THE SHORT GUARD RAIL). PLEASE MAKE SURE TO LOCATE THE SHORT GUARD RAIL (#8) IN THE POSITION YOU SELECT TO BEST FIT THE SIZE AND SHAPE OF YOUR BEDROOM.

1. Attach the LONG Guard Rail (#7) and the SHORT Guard Rail (#8) by Aligning the holes on the Headboard (#1) with the holes in the end of both sets of Guard Rails.
2. Attach by using Bolt (D), Washer (H) and Lock Washer (G) as shown in **DETAIL L**; tighten fully.
3. Attach the "Metal Support Bracket" pre-attached to the LONG Guard Rail (#7) and the SHORT Guard Rail (#8) to the inside of the side rails (#5) using Screw (L) as shown in **DETAIL M**; tighten fully.
4. Attach the Ends of the LONG Guard Rail (#7) and the SHORT Guard Rail (#8) to the Bed Rails (#5) using Bolt (C), Washer (H), and Lock Washer (G) as shown in **DETAIL N**; tighten Fully.

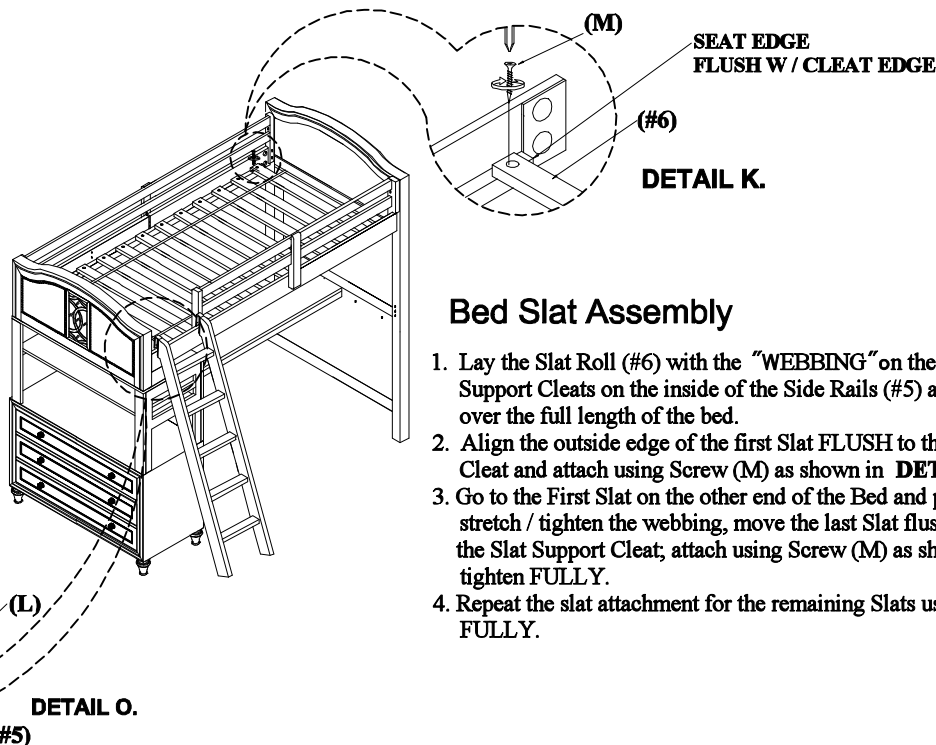

Bed Slat Assembly

1. Lay the Slat Roll (#6) with the "WEBBING" on the top side, onto the Slat Support Cleats on the inside of the Side Rails (#5) and stretch the Slat Roll over the full length of the bed.
2. Align the outside edge of the first Slat FLUSH to the end of the Slat Support Cleat and attach using Screw (M) as shown in **DETAIL K**; tighten Fully.
3. Go to the First Slat on the other end of the Bed and pull the Slat Roll so to stretch / tighten the webbing, move the last Slat flush to the end of the Slat Support Cleat; attach using Screw (M) as shown in **DETAIL K**; tighten FULLY.
4. Repeat the slat attachment for the remaining Slats using Screw (M); tighten FULLY.

Ladder Assembly

1. Attach the Metal Bracket already pre-attached to the Ladder (#9) to the Side Rail (#5) at the opening at the end of Short Guard Rail (#8) using Screw (L) as shown in **DETAIL O**; tighten Fully.