



ASSEMBLY INSTRUCTIONS


TOOLS REQUIRED



Screwdriver
(Not included)



(Included)
Allen Wrench

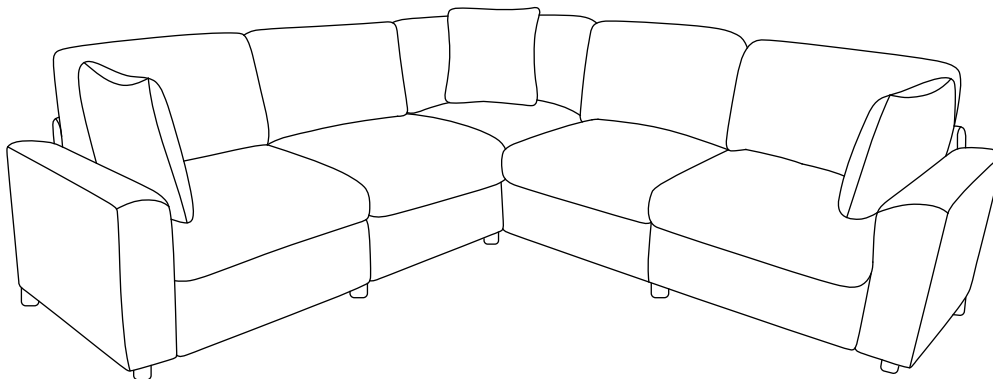

2 - People

ASSEMBLY RATING



EASY —————> DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



CHECK BEFORE STARTING

☐

Are you missing anything?

Double-check all parts, hardware and accessories listed are all accounted for.

☐

Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!

☐

Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!


☐

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling.



PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

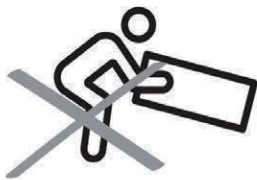

Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

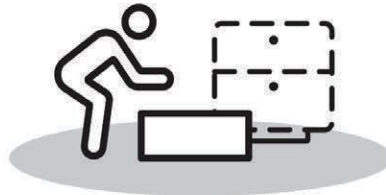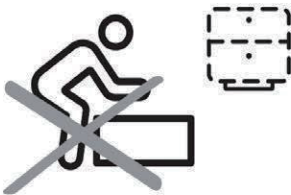

Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches and damages.

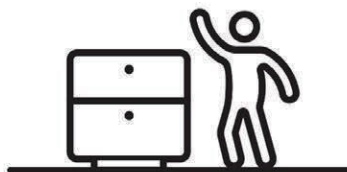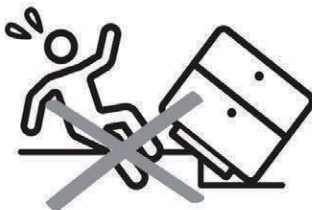

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.


ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly
and insert screws or bolts into
their respective holes.

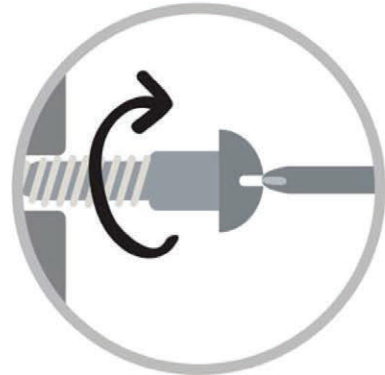

Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



Save the instructions and store
any supplied tools for later
maintenance.

Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.



After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.


Sofa




- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

LAF Chair
 Armless Chair
 Square corner
 Armless Chair
 RAF Chair


PARTS

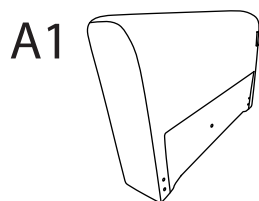


A1
 LEFT ARMREST
 1 pc.

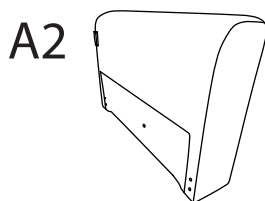


A2
 RIGHT ARMREST
 1 pc.

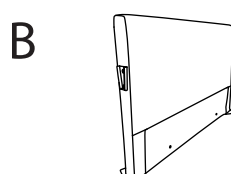


B
 UNIVERSAL
 BACKREST
 4 pc.

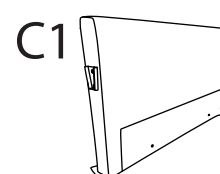


C1
 LEFT CORNER
 BACKREST
 1 pc.

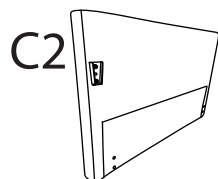


C2
 RIGHT CORNER
 BACKREST
 1 pc.

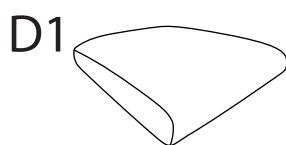


D1
 UNIVERSAL MAIN
 SEAT CUSHION
 4 pc.

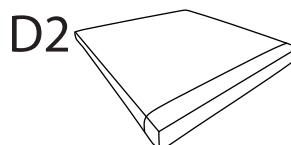


D2
 UNIVERSAL SUB-
 SEAT CUSHION
 4 pc.

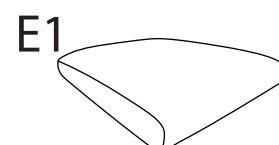


E1
 CORNER MAIN
 SEAT CUSHION
 1 pc.

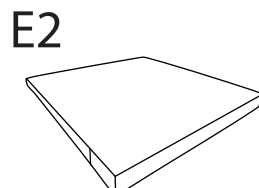

E2
 CORNER SUB-
 SEAT CUSHION
 1 pc.

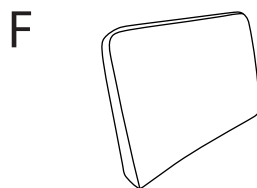


F
 UNIVERSAL
 BACK PAD
 5 pc.

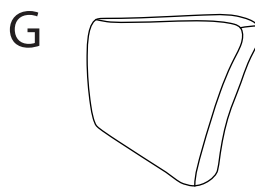


G
 CORNER LEFT
 BACK PAD
 1 pc.




H
 FRONT SEAT BAFFLE
 4 pc.




I
 SEAT CONNECTION
 PLATE
 1 pc.

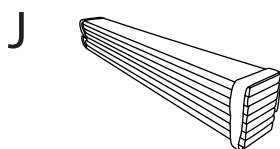

J
 PORK RIB PLATE
 5 pc.

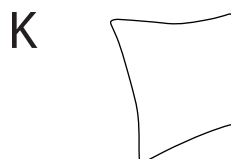


K
 THROW PILLOW
 3 pc.

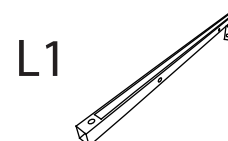

L1
 HANDRAIL
 SQUARE TUBE
 4 pc.

HARDWARE


L2

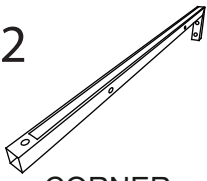

CORNER
SQUARE TUBE

2 pc.


M

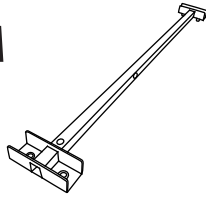

CONNECTING PIPE

3 pc.


N

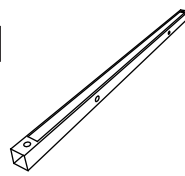

CENTRAL SQUARE
TUBE

4 pc.


O

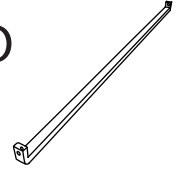

GENERAL-PURPOSE
SUPPORT PIPE

4 pc.


P



L-SHAPED
ANGLE IRON

2 pc.

Q1

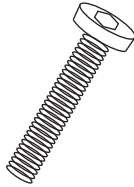

M8*60 MM BOLT

3 pc.

Q2



M8*45 MM BOLT

53 pc.+1pc.


Q3



M8*30 MM BOLT

1 pc.+1pc.

R



BUTTERFLY NUT


3 pc.

S



$\phi 8*22$ Gasket
60 pc.+2pc.


T1

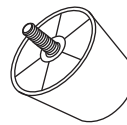

SHORT FEET

6 pc.


T2

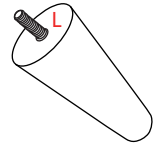

TALL FEET

6 pc.

U



PLASTIC GASKET

12 pc.


V



FELT PAD

12 pc.


W

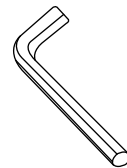

WRENCH

1 pc.


X

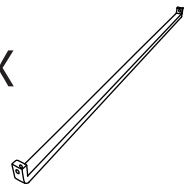

CORNER
SUPPORT PIPE




1 pc.




Y








ARMREST PAD

3 pc.

Carton	Disignation	Part		Hardware
01	LEFT ARMREST	A1		 L1 x 2 pcs  M x 1 pcs  O x 1 pcs
	UNIVERSAL BACKREST	B		 Q2 x 13 pcs  Q2 x 13 pcs
	UNIVERSAL MAIN SEAT CUSHIAN	D1		 T1x 2 pcs  T2 x 2 pcs
	UNIVERSAL SUB-SEAT CUSHION	D2		 U x 4 pcs  V x 4 pcs
	UNIVERSAL BACK PAD	F		 W x 1 pcs  Y x 1 pcs
	FRONT SEAT BAFFLE	H		
	PORK RIB PLATE	J		
	THROW PILLOW	K		


Carton	Disignation	Part		Hardware
02	RIGHT ARMREST	A2		 L1 x 2 pcs  M x 1 pcs  O x 1 pcs
	UNIVERSAL BACKREST	B		 Q2 x 13 pcs  S x 13 pcs
	UNIVERSAL MAIN SEAT CUSHIAN	D1		 T1x 2 pcs  T2 x 2 pcs
	UNIVERSAL SUB-SEAT CUSHION	D2		 U x 4 pcs  V x 4 pcs
	UNIVERSAL BACK PAD	F		 W x 1 pcs  Y x 1 pcs
	FRONT SEAT BAFFLE	H		
	PORK RIB PLATE	J		
	THROW PILLOW	K		

Carton	Disignation	Part		Hardware
03	UNIVERSAL BACKREST	B		 L1 x 2 pcs
	UNIVERSAL MAIN SEAT CUSHIAN	D1		 O x 1 pcs
	UNIVERSAL SUB-SEAT CUSHION	D2		 Q1 x 1 pcs
	UNIVERSAL BACK PAD	F		 Q2 x 4 pcs
	FRONT SEAT BAFFLE	H		 R x 1 pcs
	PORK RIB PLATE	J		 S x 6 pcs


Carton	Disignation	Part		Hardware
04	LEFT CORNER BACKREST	C1		 L2 x 2 pcs
	RIGHT CORNER BACKREST	C2		 M x 1 pcs
	CORNER MAIN SEAT CUSHION	E1		 P x 2 pcs
	CORNER SUB-SEAT CUSHION	E2		 Q1 x 1 pcs
	UNIVERSAL BACK PAD	F		 Q2 x 20 pcs
	CORNER LEFT BACK PAD	G		 Q3 x 2 pcs
	SEAT CONNECTION PLATE	I		 Rx 1 pcs
	PORK RIB PLATE	J		 Sx 24 pcs
	THROW PILLOW	K		 T1 x 2 pcs
				 T2 x 2 pcs
				 U x 4 pcs
				 V x 4 pcs
				 X x 1 pcs
				 Y x 1 pcs

ASSEMBLY INSTRUCTIONS

- 1 Take out all the accessories and the compression bag from the box. Open the compression bag and take out the sponge pad. Let it stand for 15 minutes to wait for the sponge to rebound.

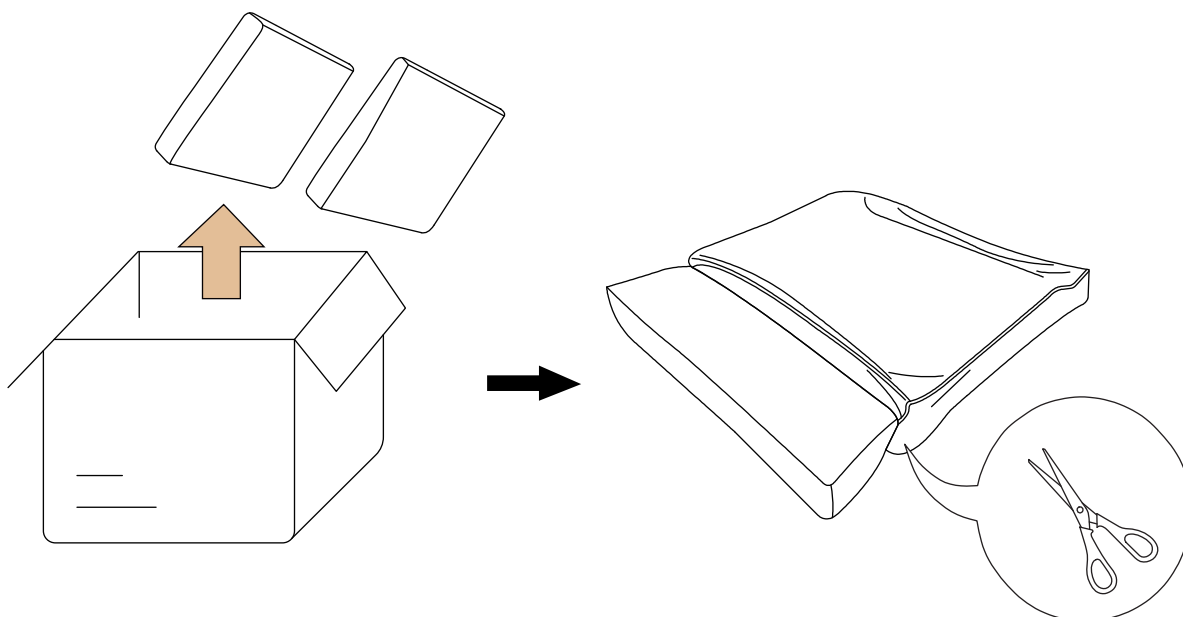


- 2 Insert the universal backrest (B) into the left armrest (A1) insert, install two armrest square tubes (L1) and the connecting tube (M) under the armrest, and finally install the front seat baffle (H).

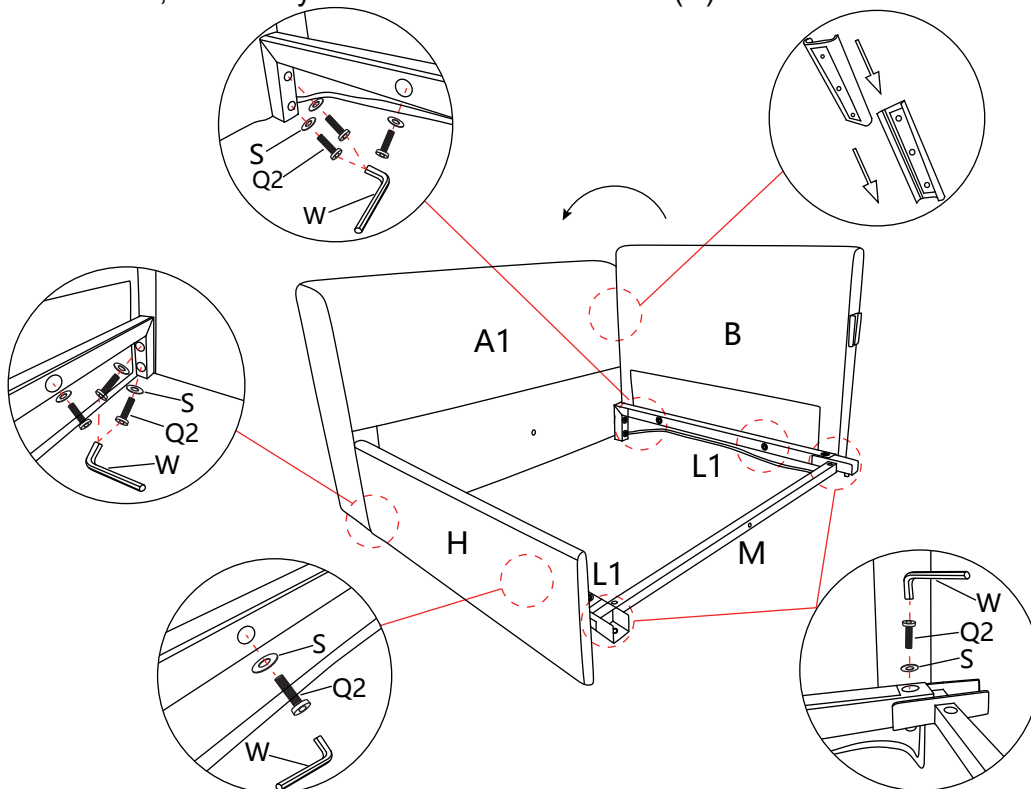


ASSEMBLY INSTRUCTIONS

- 3** Insert the backrest plug-in into the other backrest plug-ins, install two center square tubes (N) and one connecting tube (M), and finally install the seat front baffle.

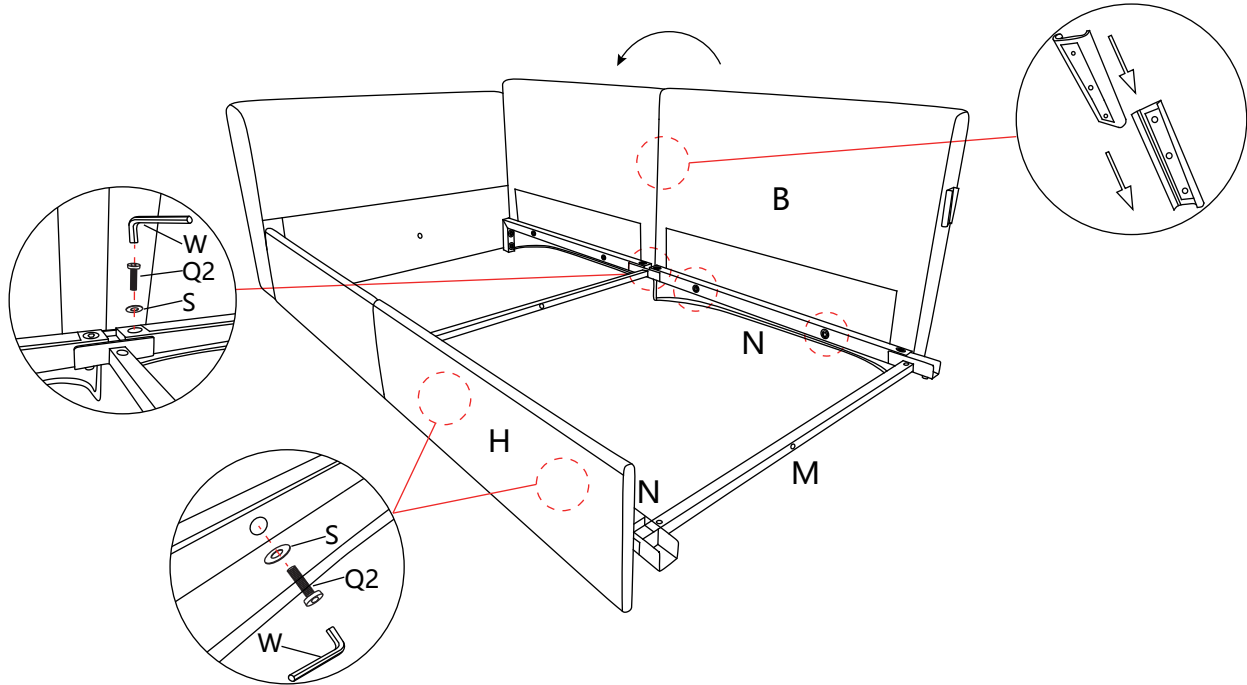


- 4** Find the two corner square tubes (L2) and the two backrests of the corner seat frame (C1&C2), and repeat step two to complete the installation of the corner seat frame.

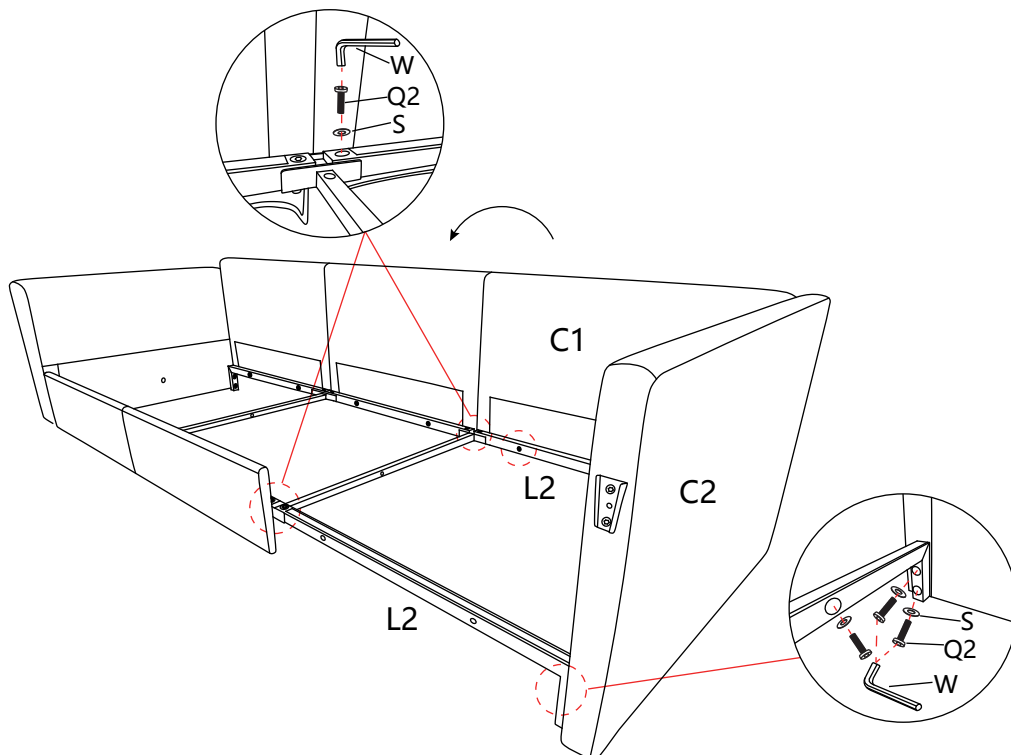


ASSEMBLY INSTRUCTIONS

- 5** As shown in the following figure, two types of support tubes (O&X) are installed. The handrail needs to be fastened with a handrail pad (Y) using M8*45 bolts (Q2), the middle support tube is fastened with M8*60 bolts (Q1) and a nut (R), and the corner is fastened with M8*30 (Q3). Note: Don't forget to use the gasket (S).

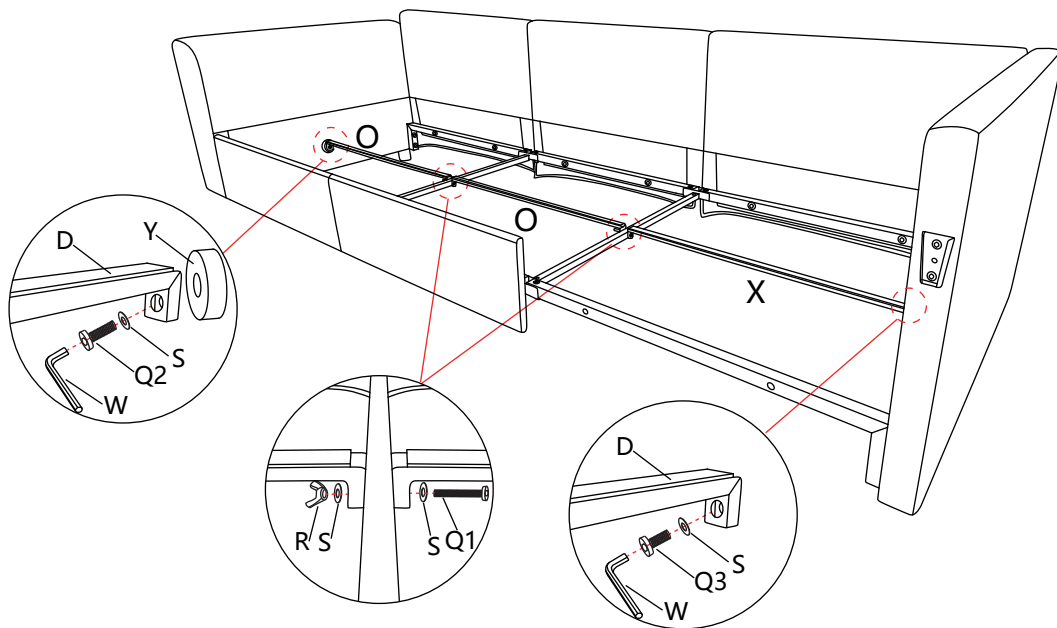


- 6** Flip the left armrest frame to the bottom, install the high feet (T2) on the connecting pipe, and install the low feet (T1) on the armrest and the corner backrest. Note: Plastic spacers (U) and felt pads (V) should be installed on all sofa legs.

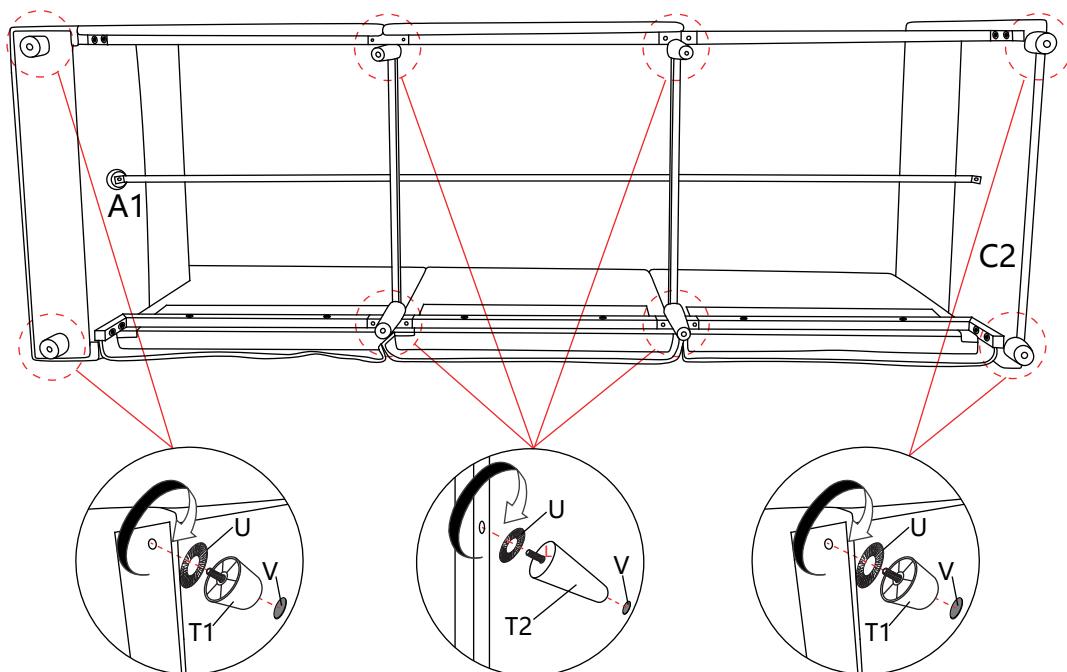


ASSEMBLY INSTRUCTIONS

- 7** Assemble the right handrail (A2) frame according to steps 2 and 3, and complete the assembly using L-shaped Angle iron (P) and seat connection plate (I). Note: When installing the seat frame connection plate (I), it is necessary to distinguish the front from the back

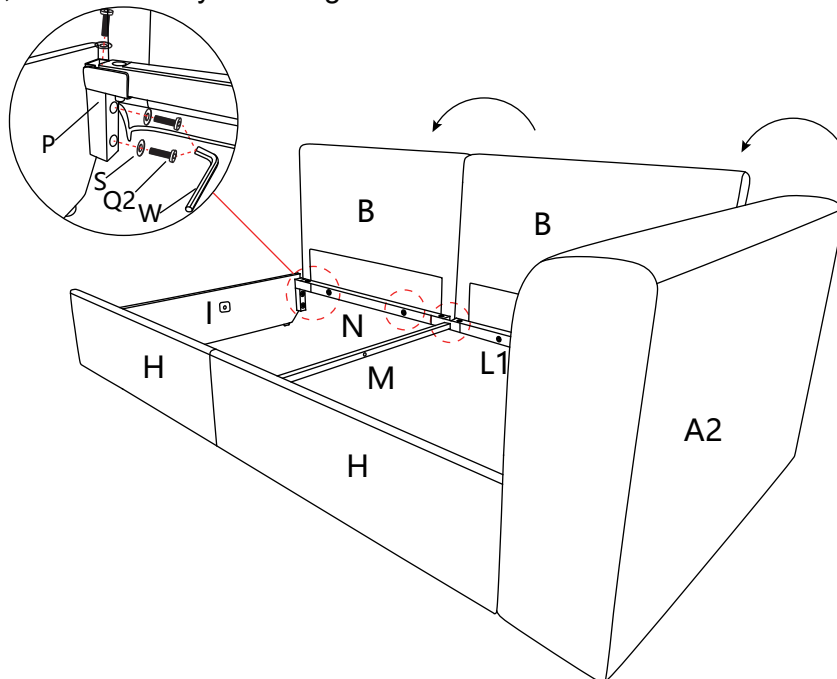


- 8** As shown in Figure 5, install the support tube (O) at a position close to the handrail support tube and handrail pad (Y), and fasten it with M8*45 bolts (Q2). Fasten the intermediate support pipe with M8*60 bolts (Q1) and butterfly nuts (R). The connection with the valve seat side plate (I) also needs to be tightened with the handrail pad (Y) and M8*45 bolts (Q2). Note: Don't forget to use the gasket (S) .

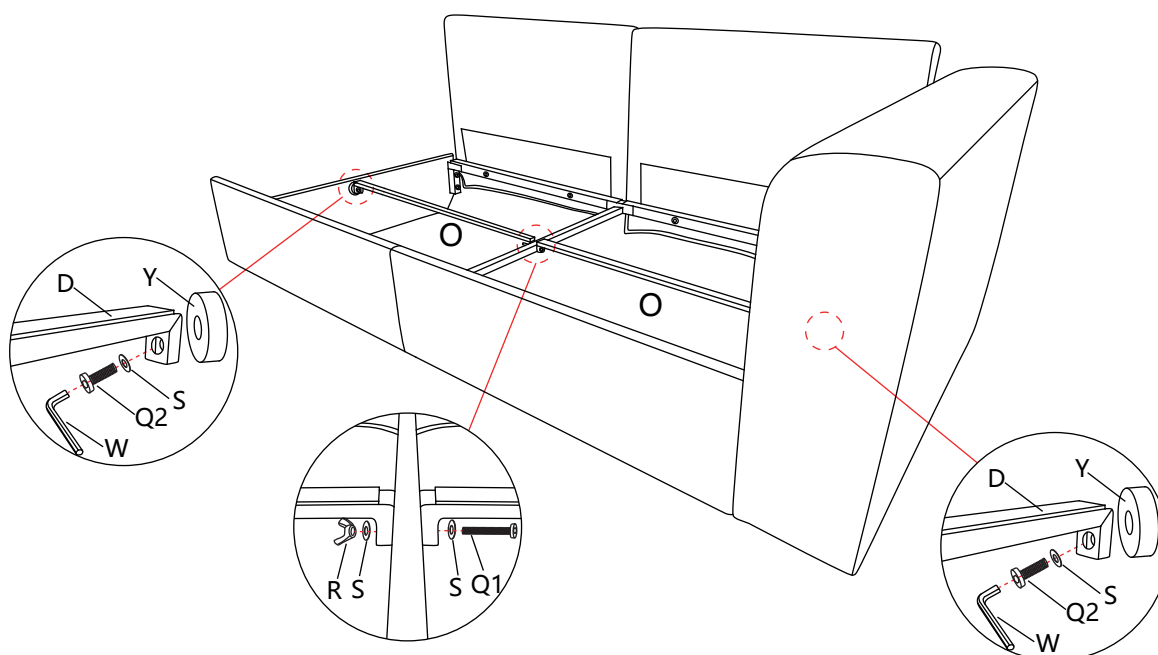


ASSEMBLY INSTRUCTIONS

- 9** Flip the right armrest frame to the bottom, install the high feet (T2) on the connecting pipe, and install the low feet (T1) on the armrest. Note: Plastic spacers (U) and felt pads (V) should be installed on all sofa legs.

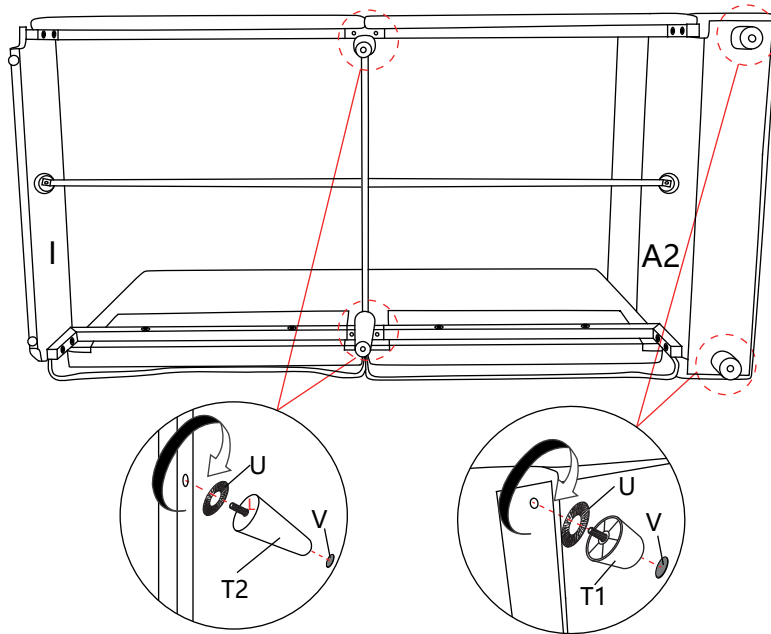


- 10** Insert the right seat frame insert into the left seat frame, turn it to the other side of the seat side baffle, and use M8*45 bolts to pass through the square tube and fasten it to the seat side baffle hole.

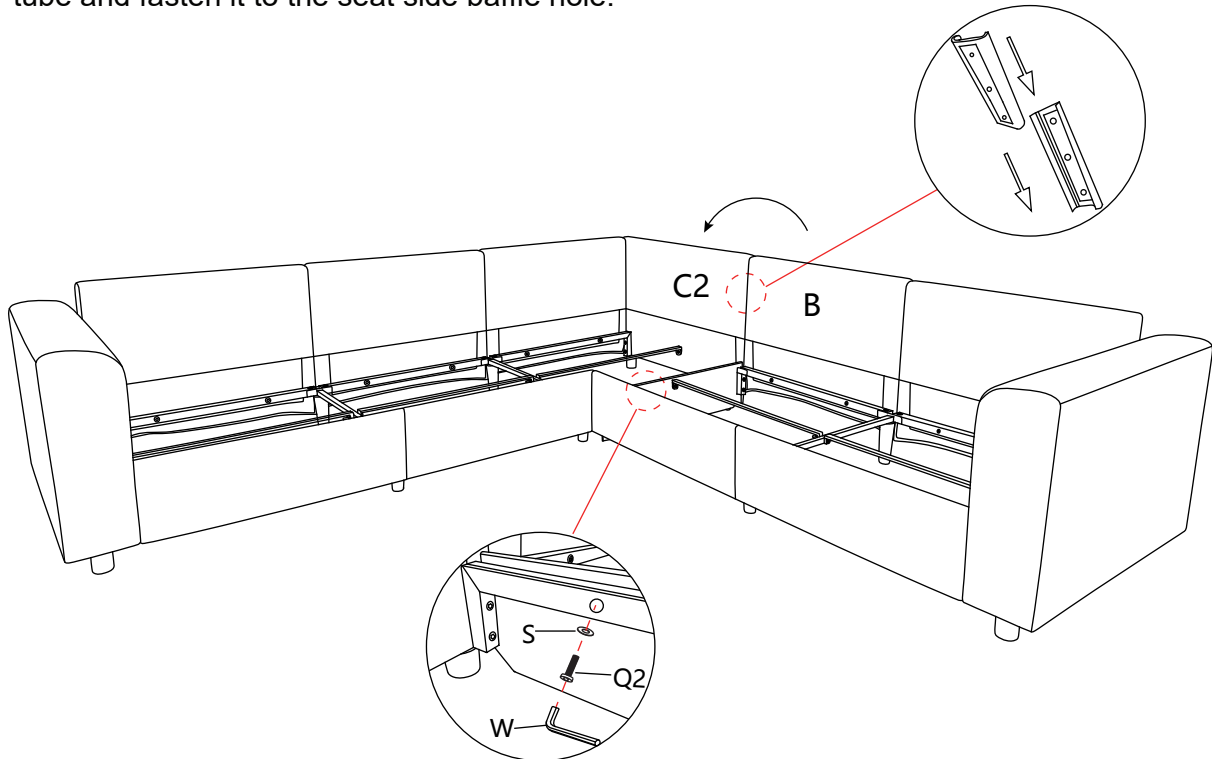


ASSEMBLY INSTRUCTIONS

- 11** Stick the adhesive cloth from the five ribs completely onto each square tube.

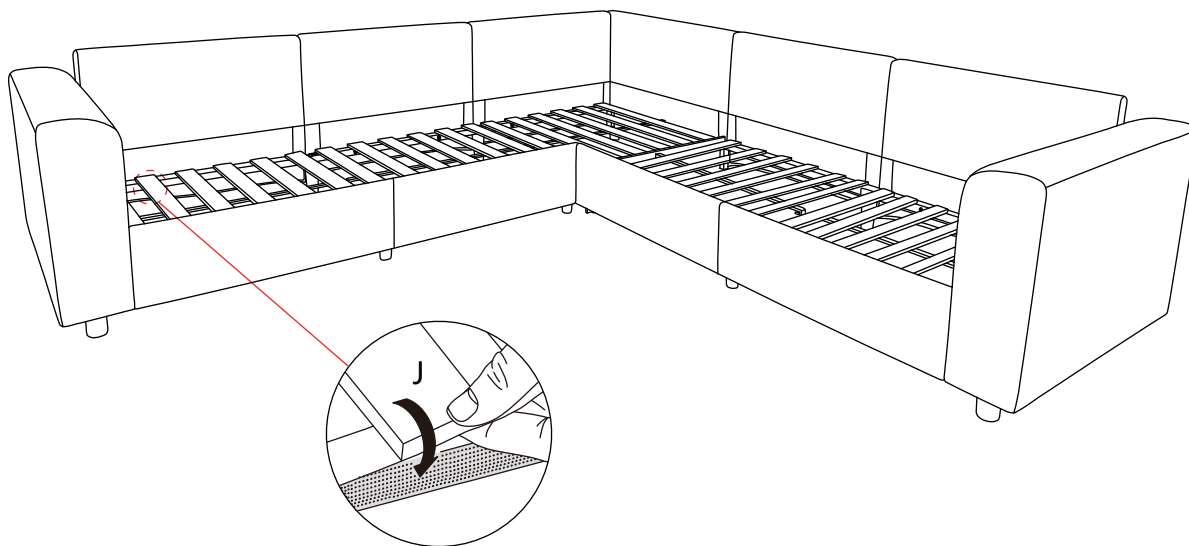


- 12** Place the corresponding secondary seat cushion above the ribs.

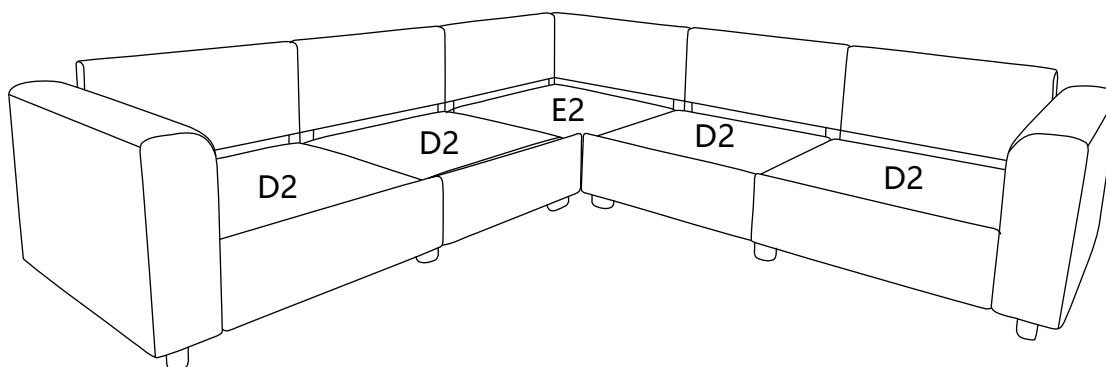


ASSEMBLY INSTRUCTIONS

- 13** Place the corresponding main seat cushion above the secondary seat cushion. Note: Place seat cushions to distinguish between the front and the back, The zipper end of the seat cushion should be placed in front of the backrest.

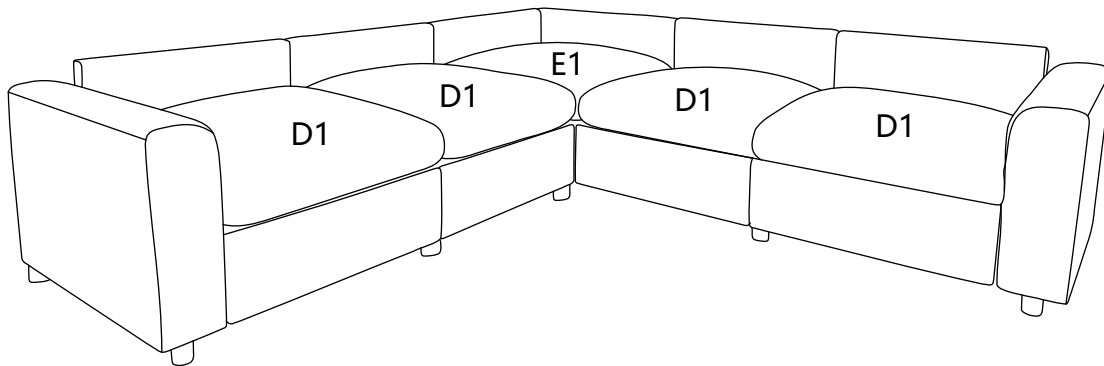


- 14** Place the corresponding back cushion on the main seat cushion. Note: The zipper end of the back cushion should be placed above the seat cushion.

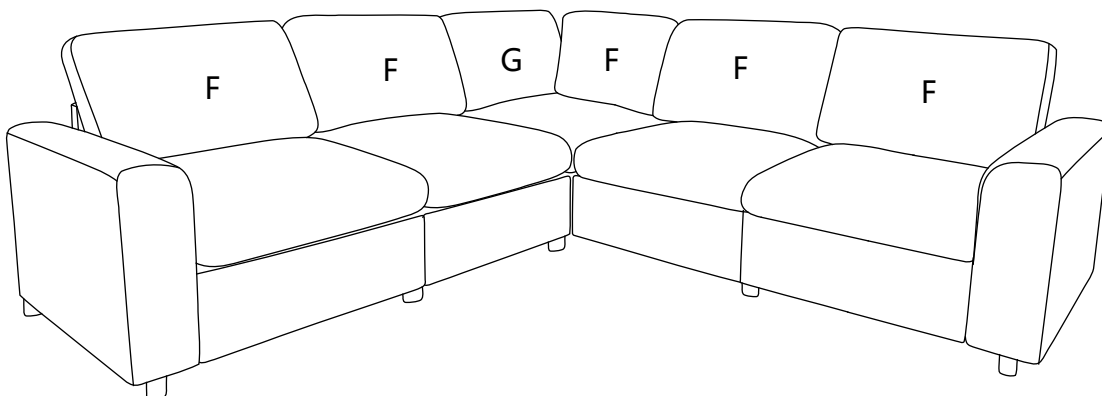

ASSEMBLY INSTRUCTIONS

- 15** Finally, place three throw pillows. Congratulations on completing the entire installation of the sofa.
NOTE: The FM67010-AC usage can be increased.

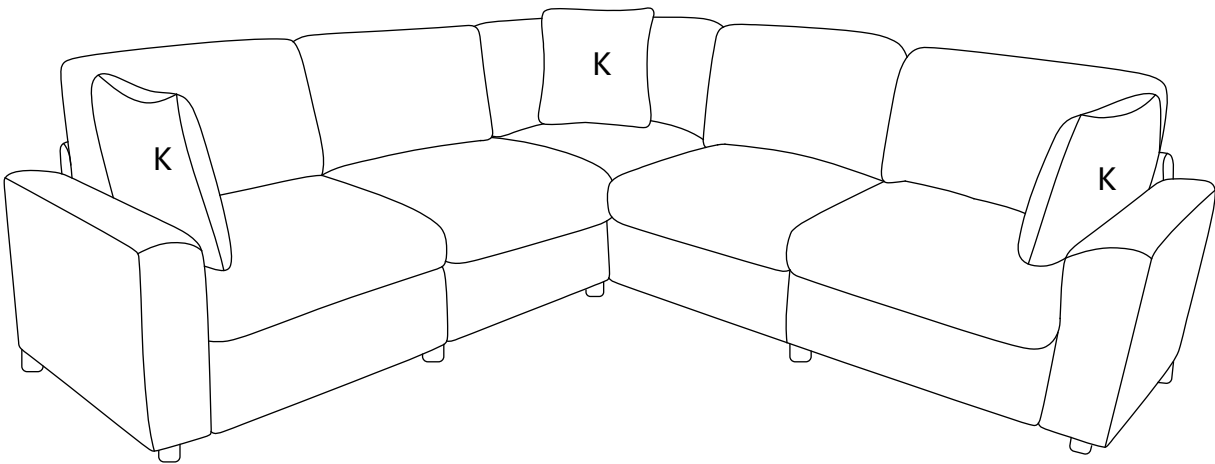

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.



Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.