
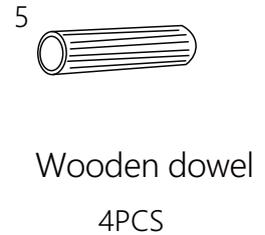
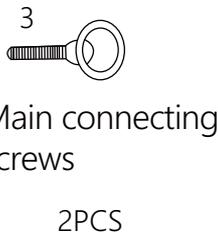
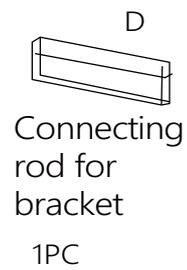



Jewelry Mirror Assembly Instructions

Note: 2 Person Assembly Recommended

Parts and hardware list



Please check and ensure you have the parts and hardware to assemble this product prior to assembly

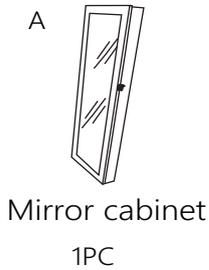

Steps to Assemble


STEP 1

Put (5) wooden dowel into the hole on each side of (C) connector. Align 2x(B) Brackets with (D) and (C) Connectors. Screw in place with (1) screws and (2) bolts. Insert (5) into each bracket as indicated.

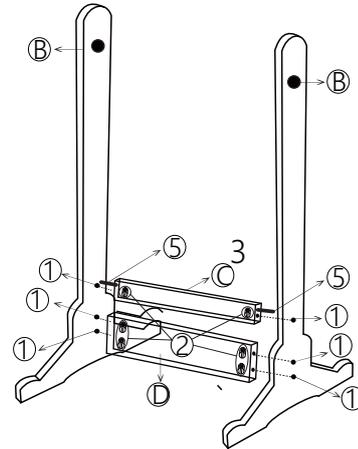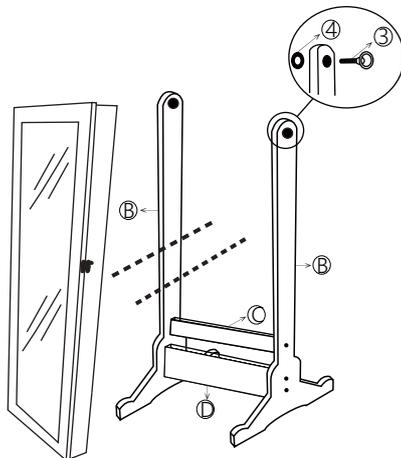

STEP 2

Before adding the main mirror cabinet, ensure the main mirror cabinet is already locked. Once aligned and in place, use (4) screws and (3) plastic washer to secure.

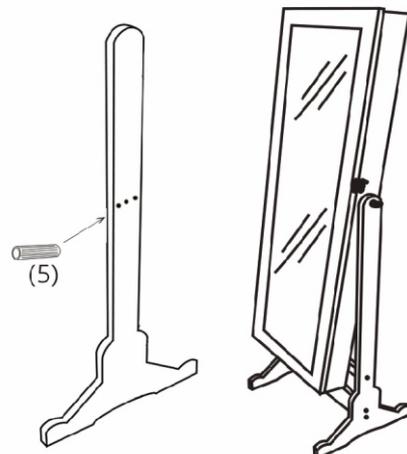

STEP 3

Once assembled, angle the cabinet to its desired position using (5) wooden dowel.

all the small fittings is in the drawers