











ASSEMBLY INTRODUCTION

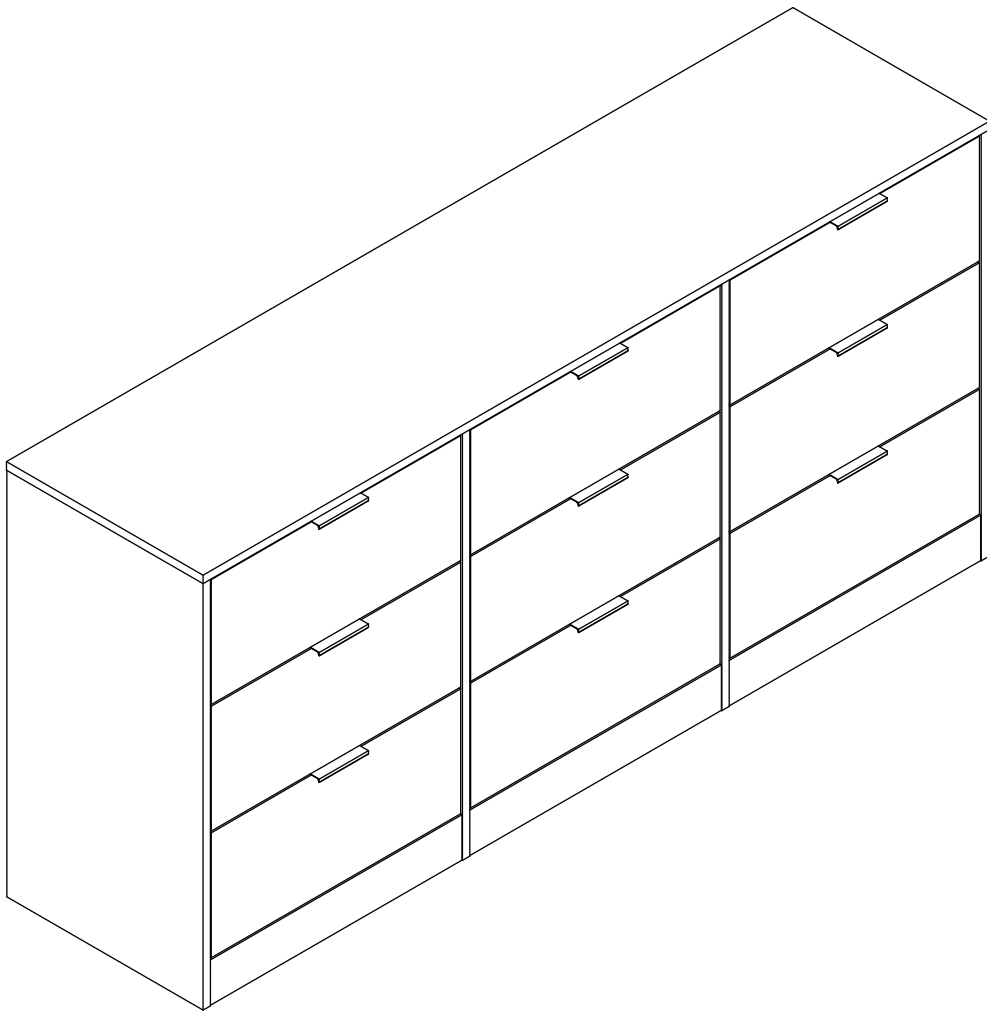


Exploded View

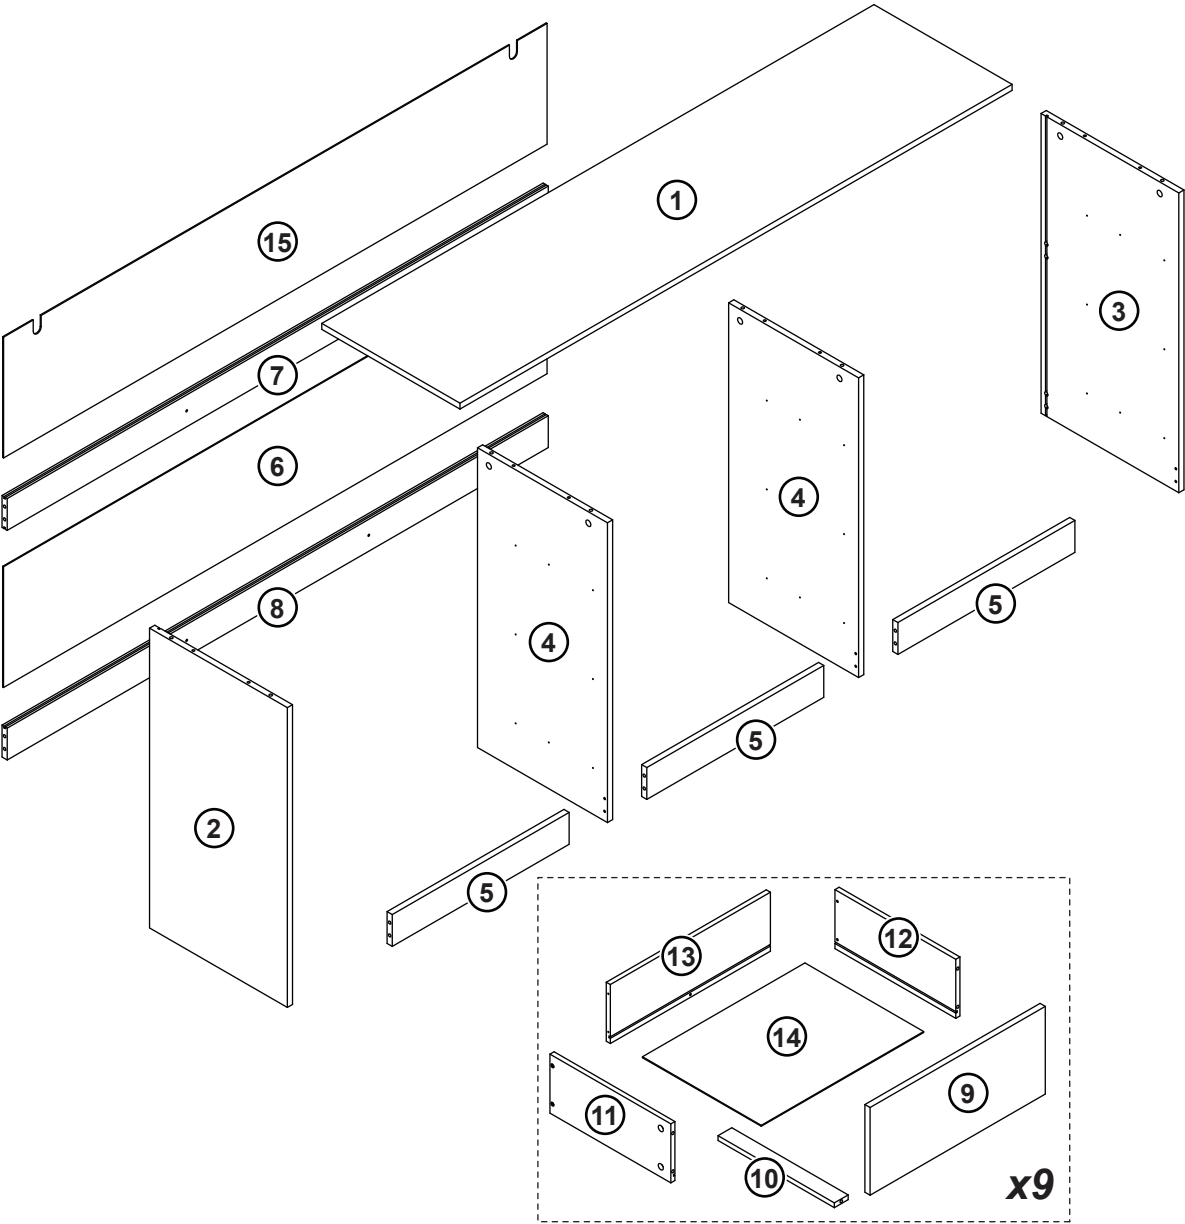


Fitting





Step 1

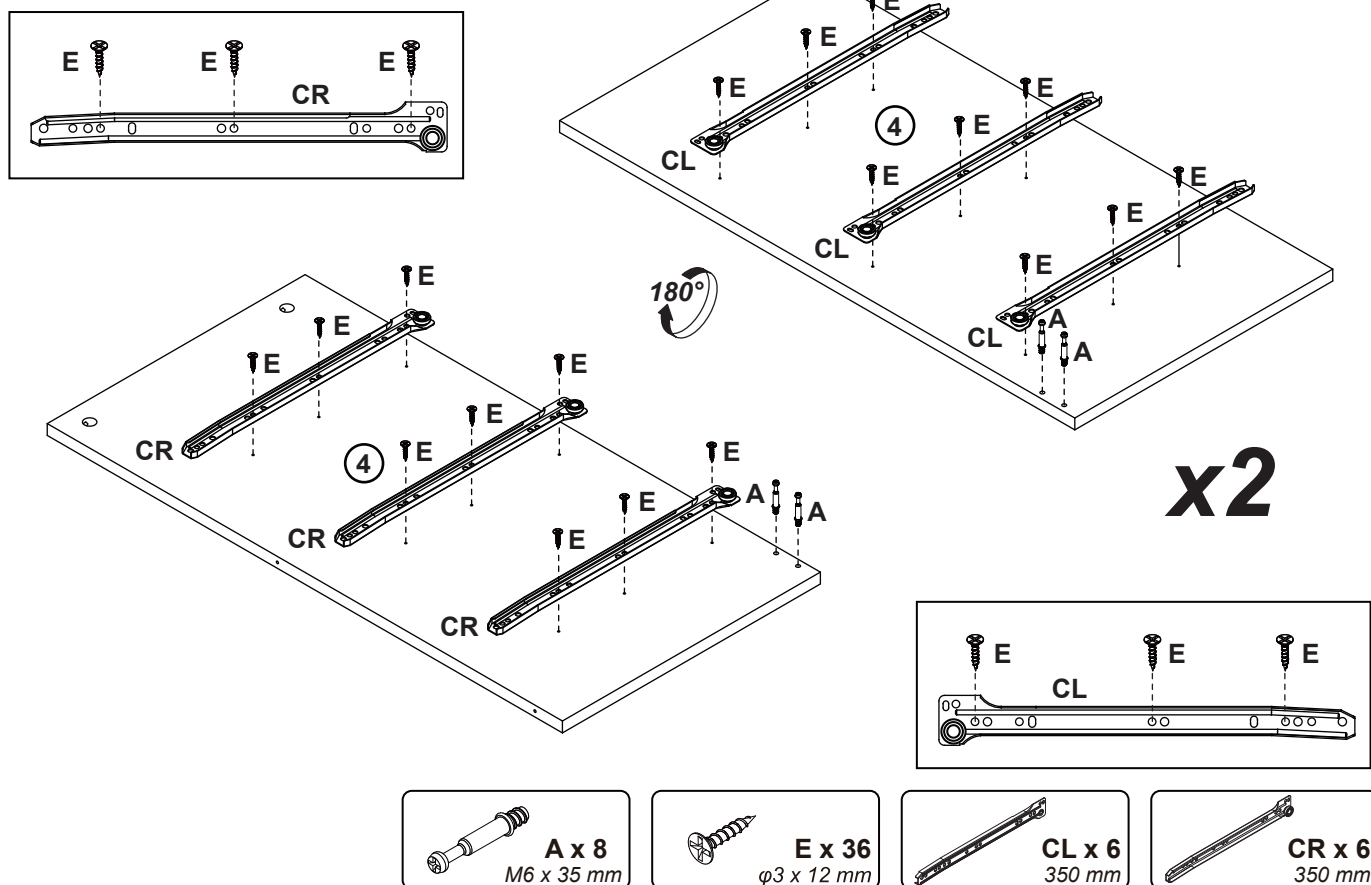



Step 2

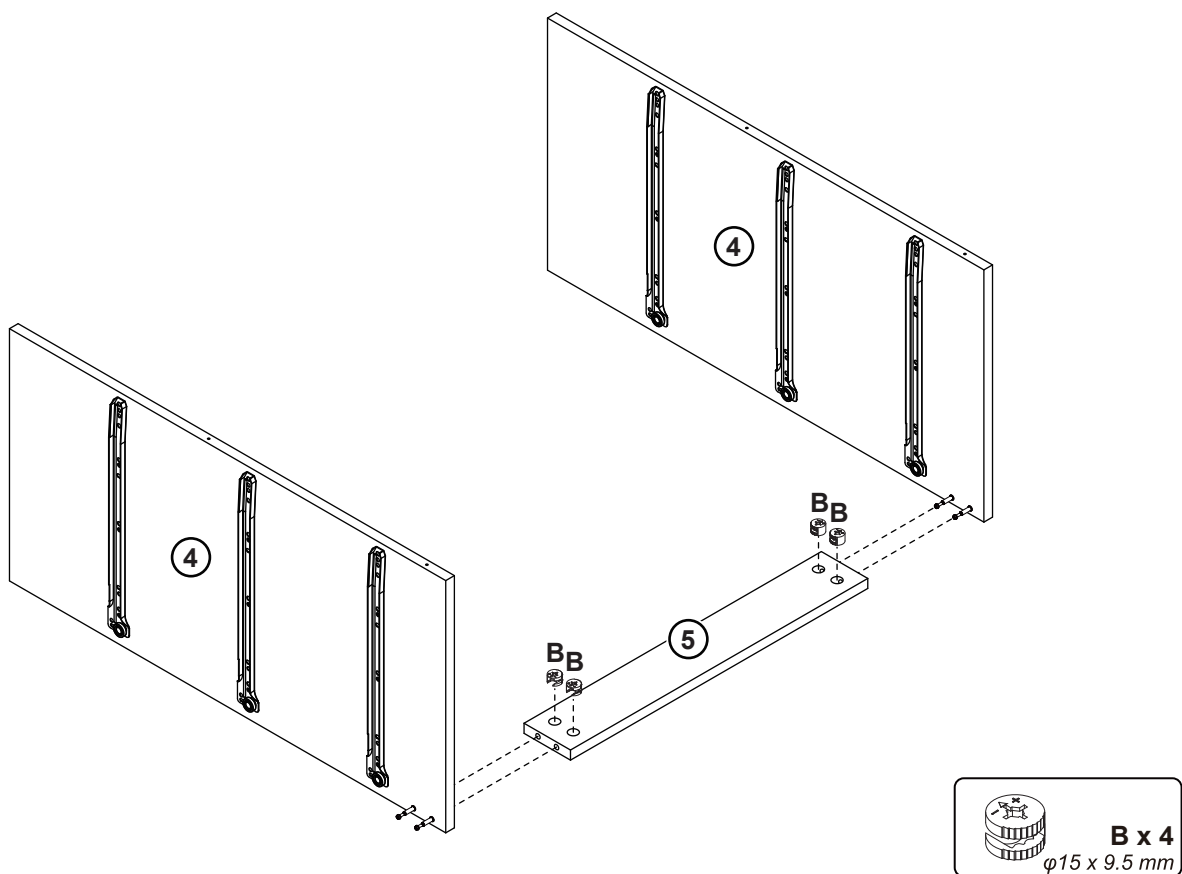


Step 3

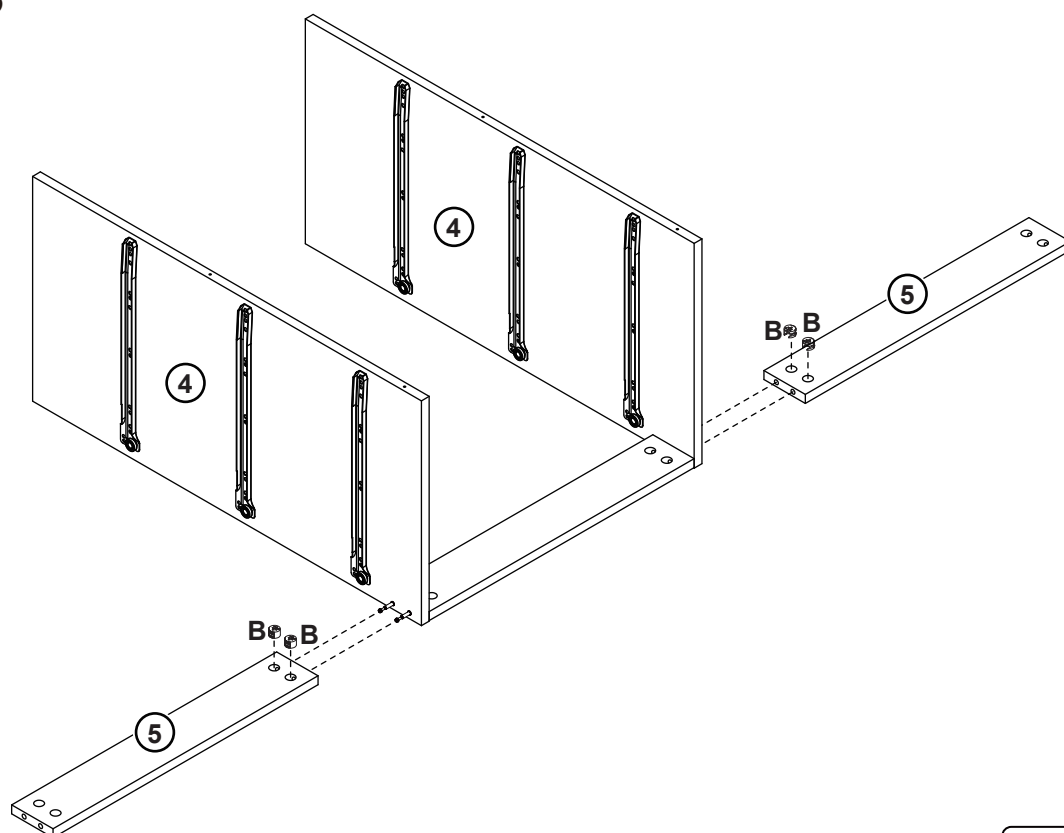



Step 4

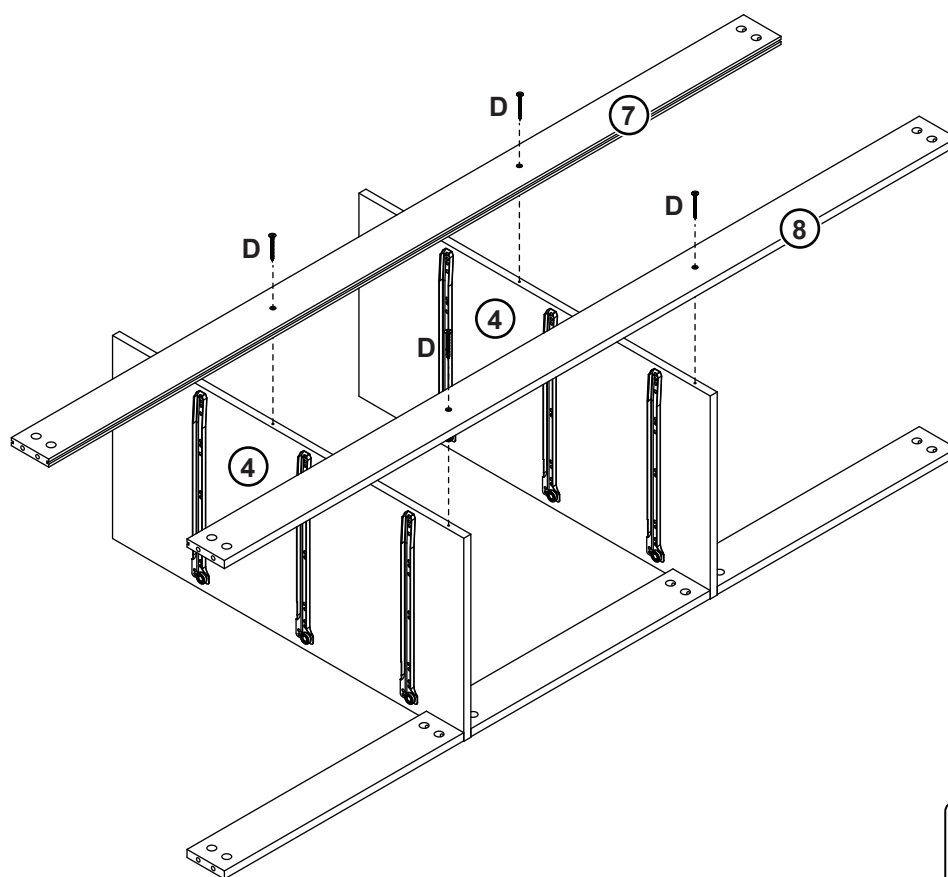


Step 5

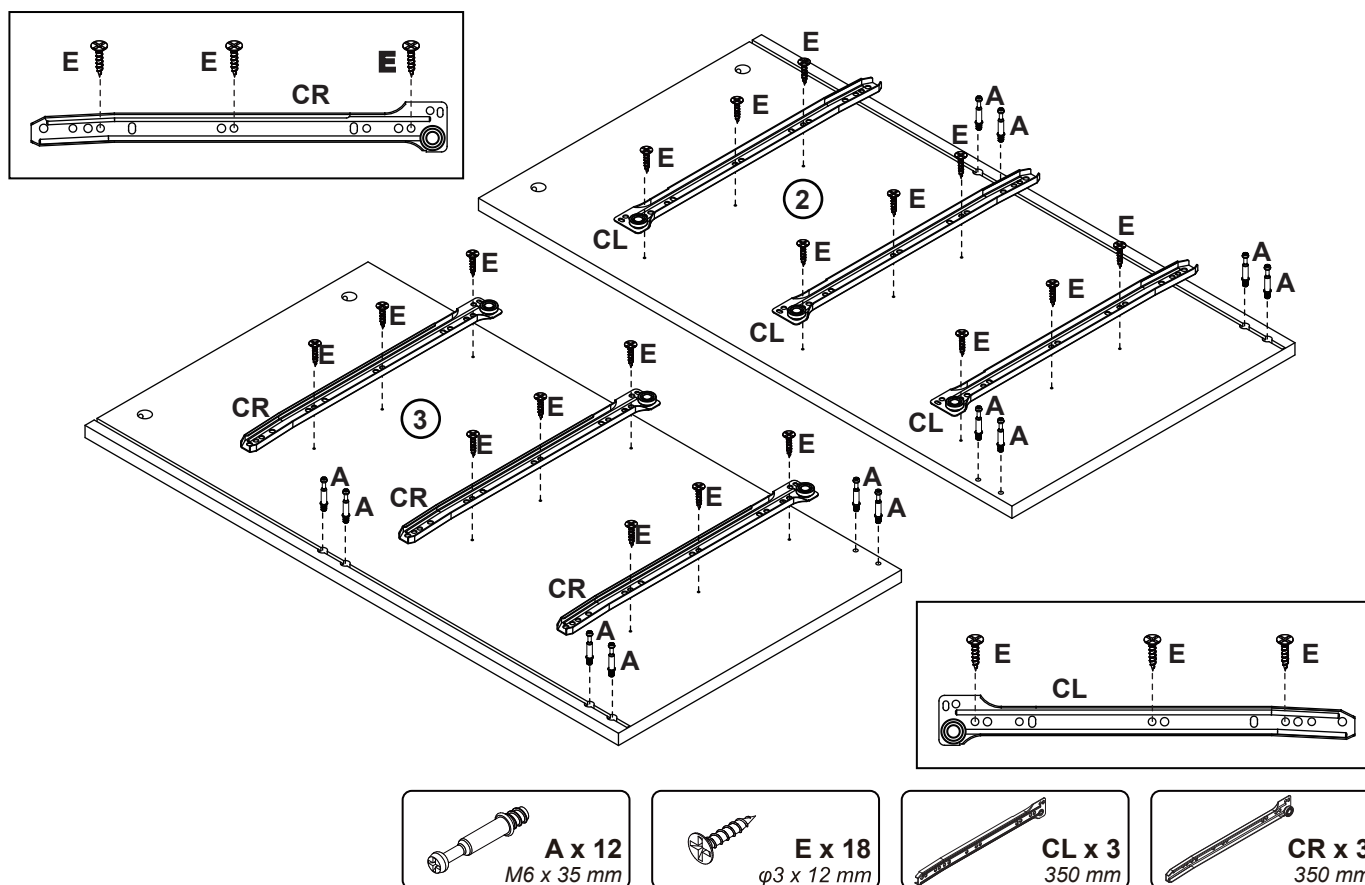



Step 6

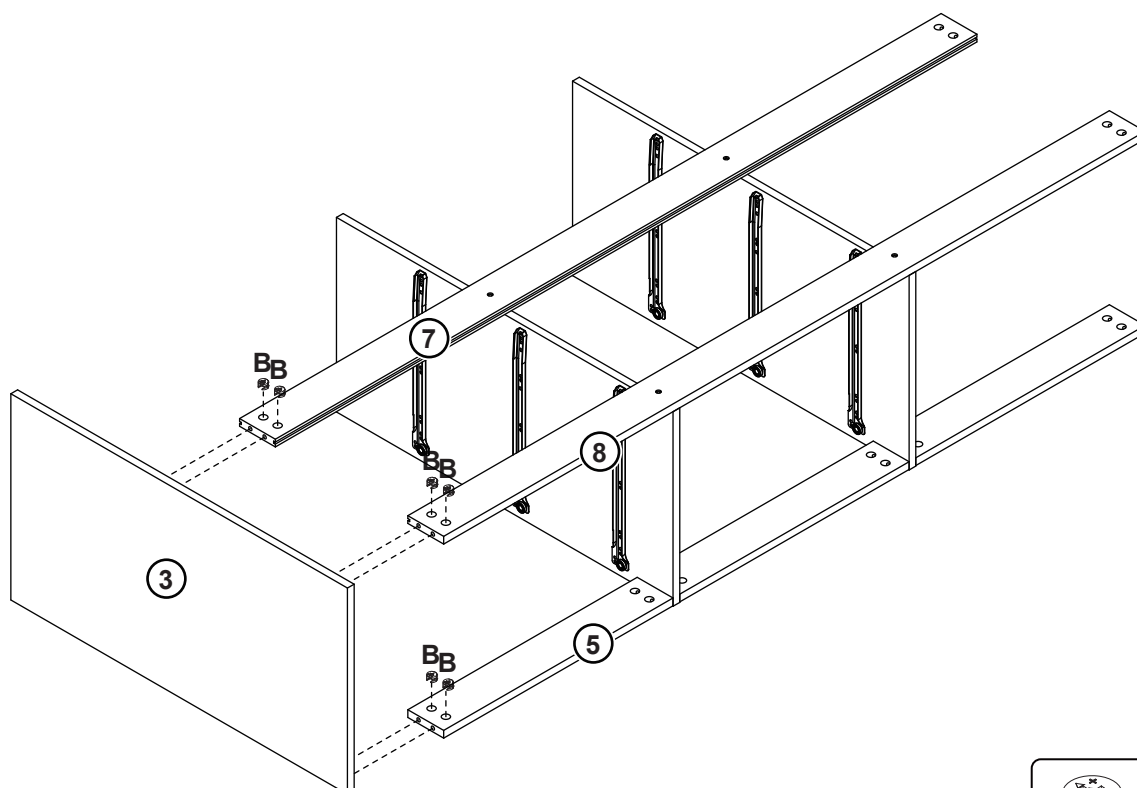


Step 7

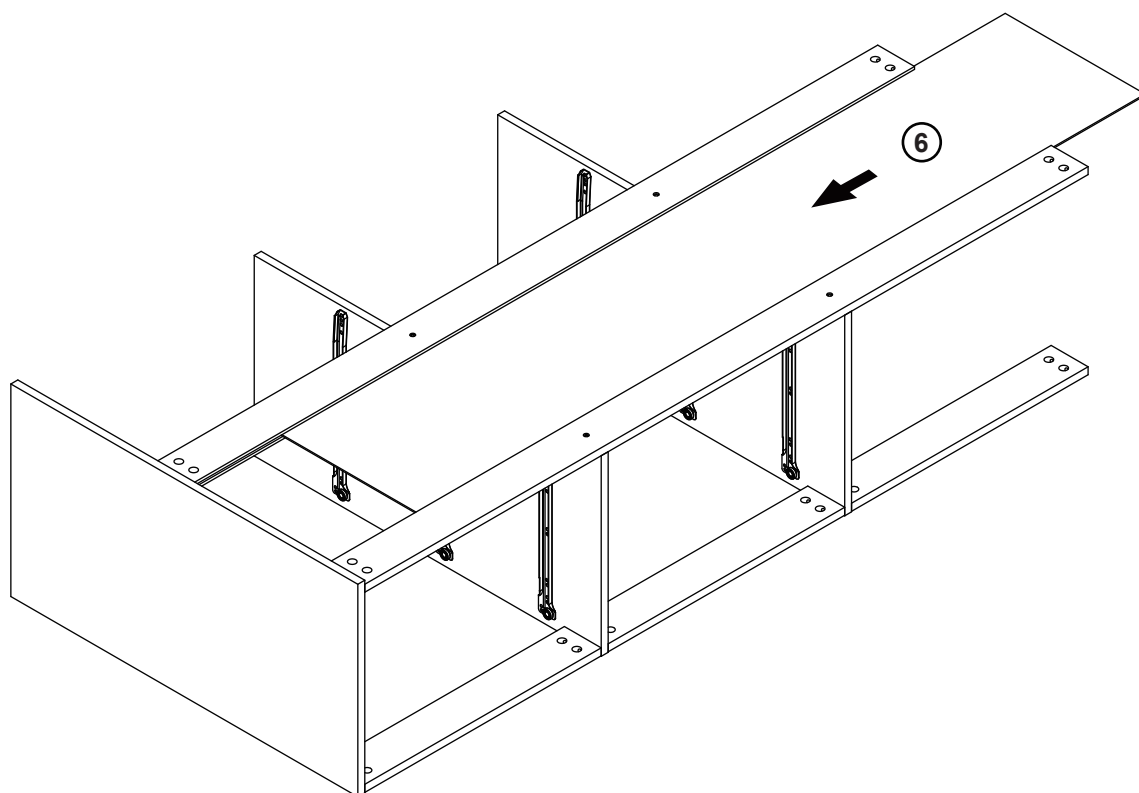



Step 8

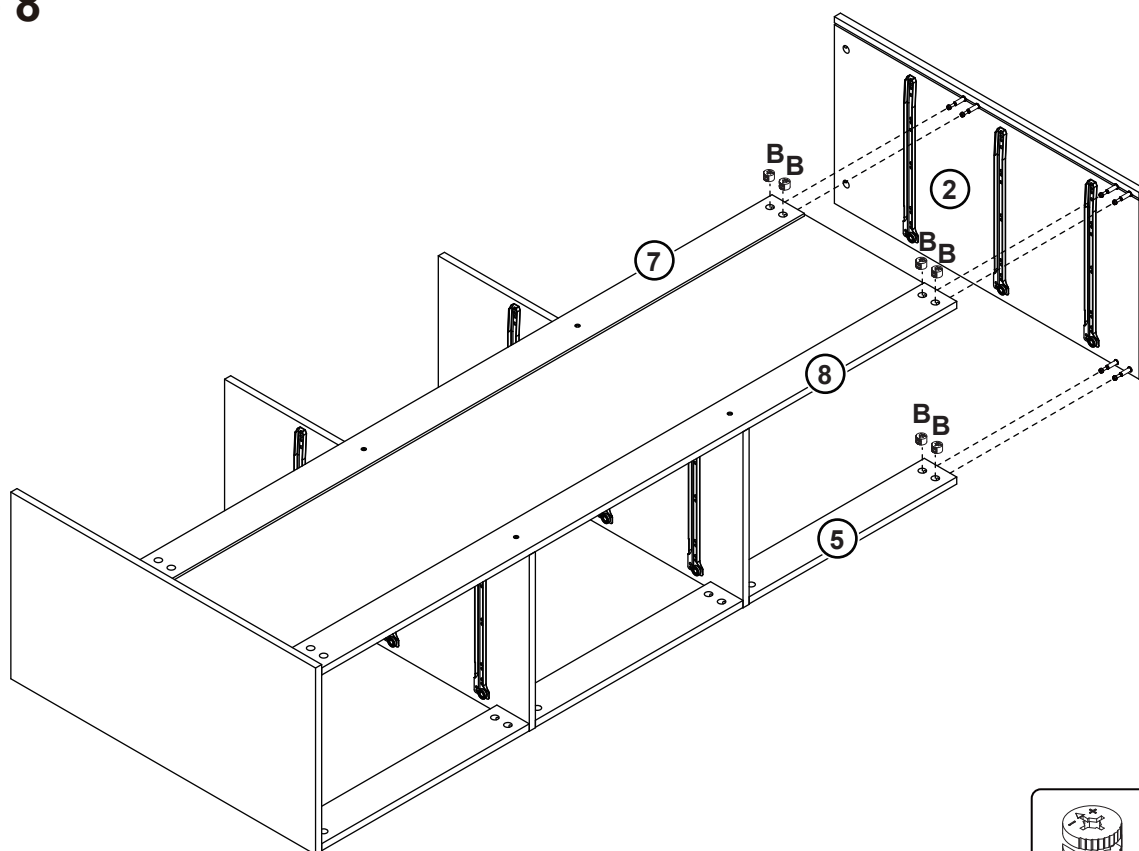

Step 9

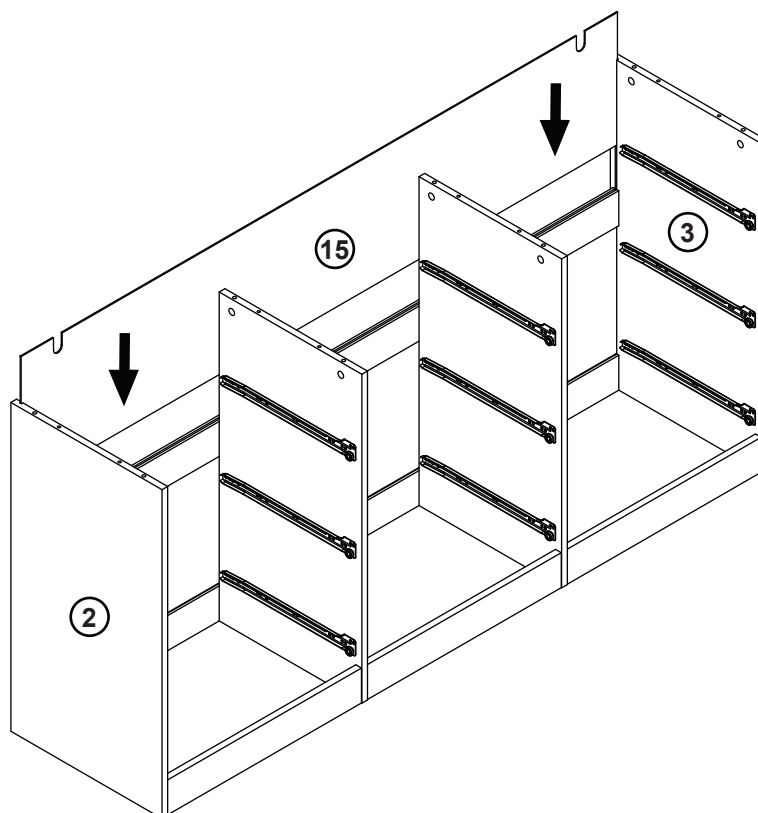

Step 10


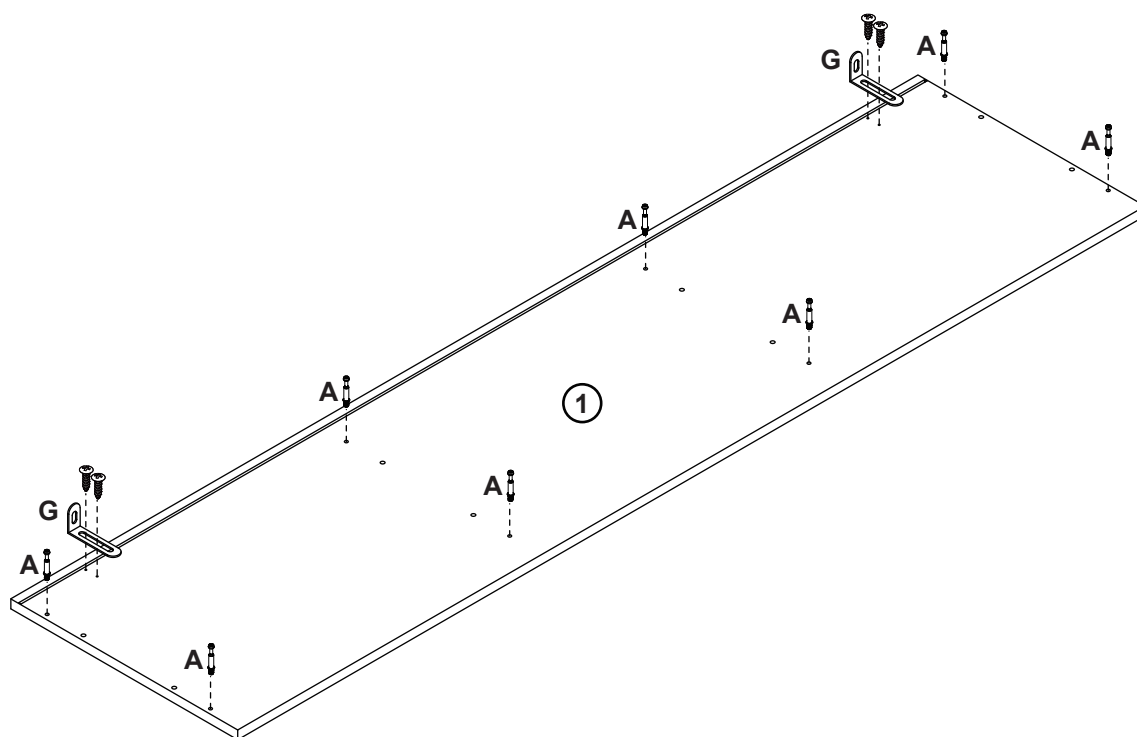


G x 2





A x 8
M6 x 35 mm

Step 11



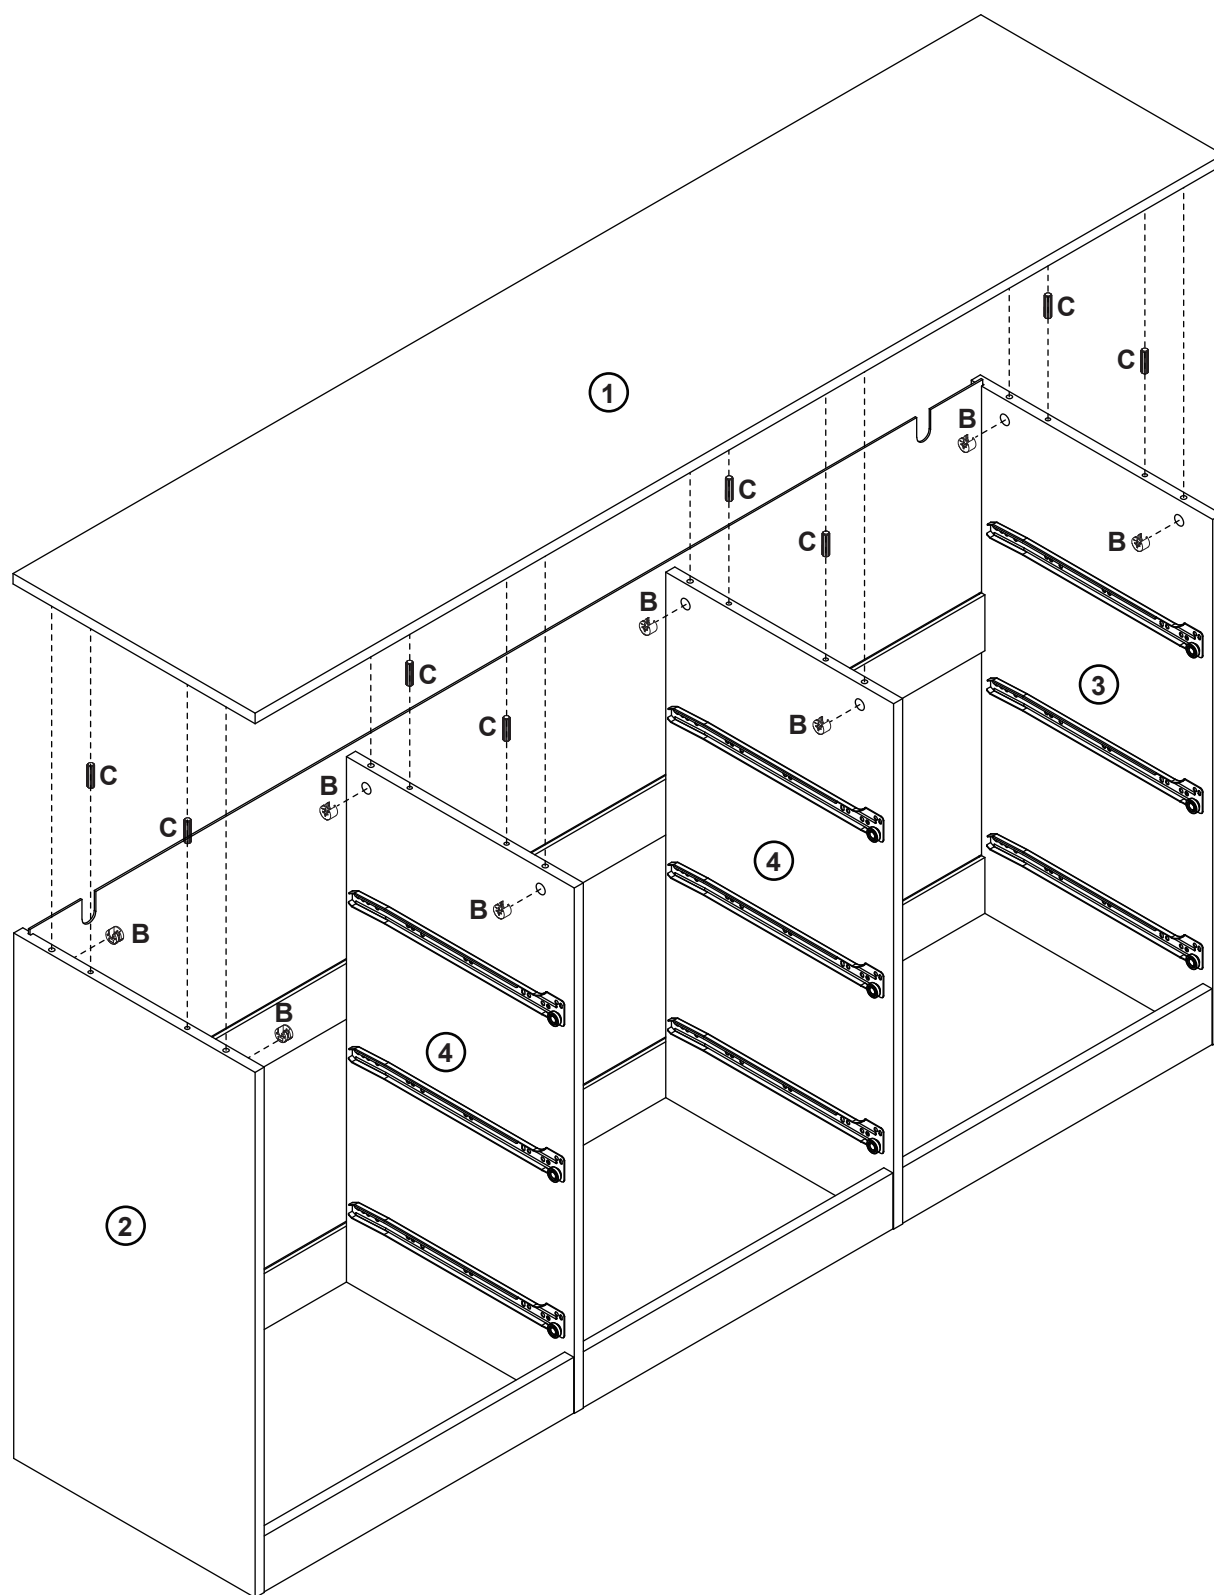


Step 12

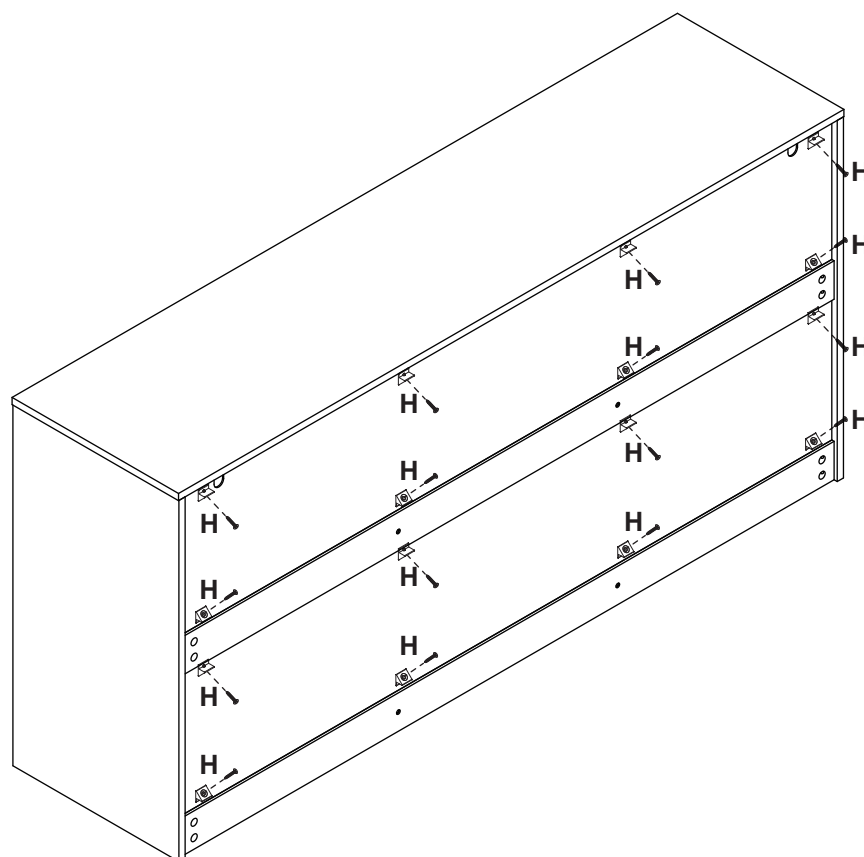


Step 13


Wall

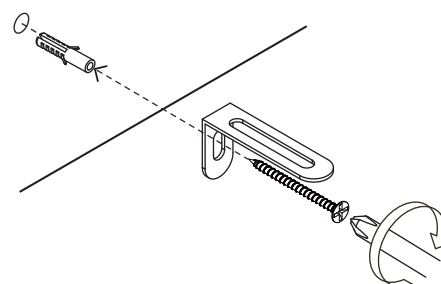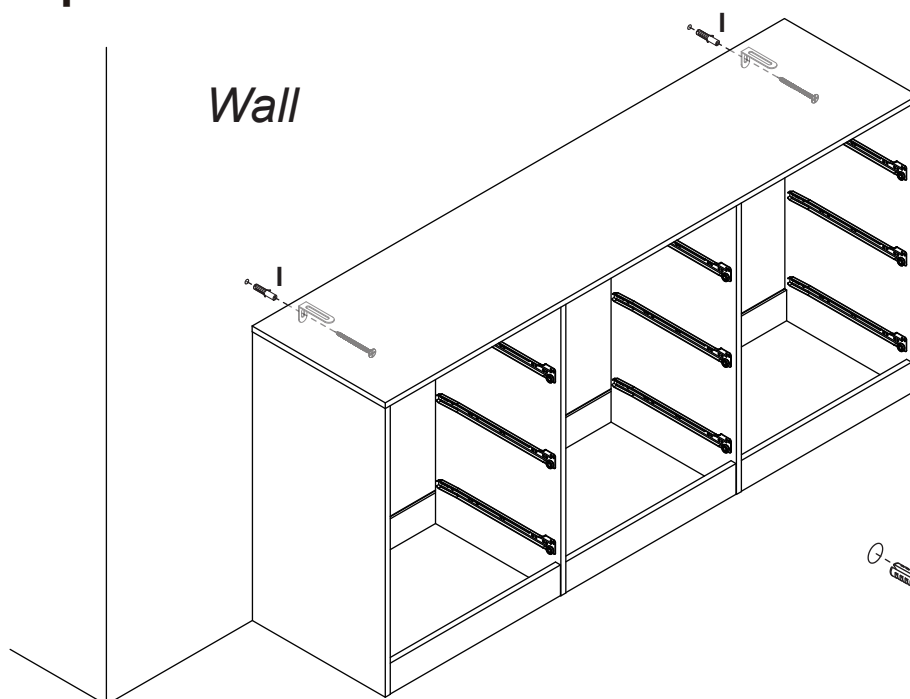


Step 14

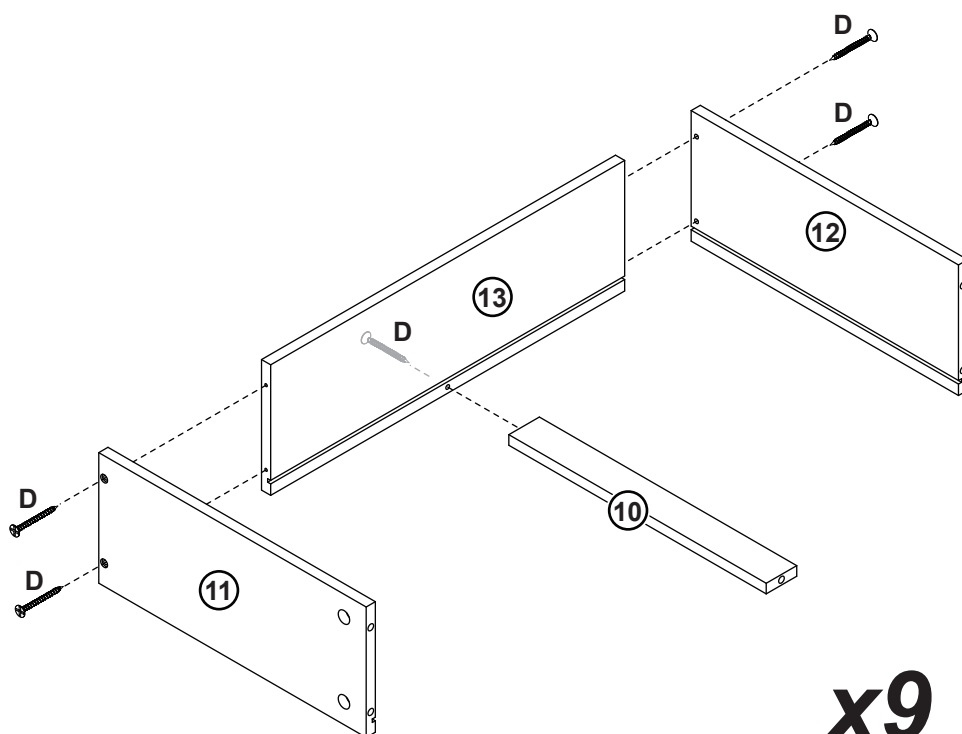


Step 15

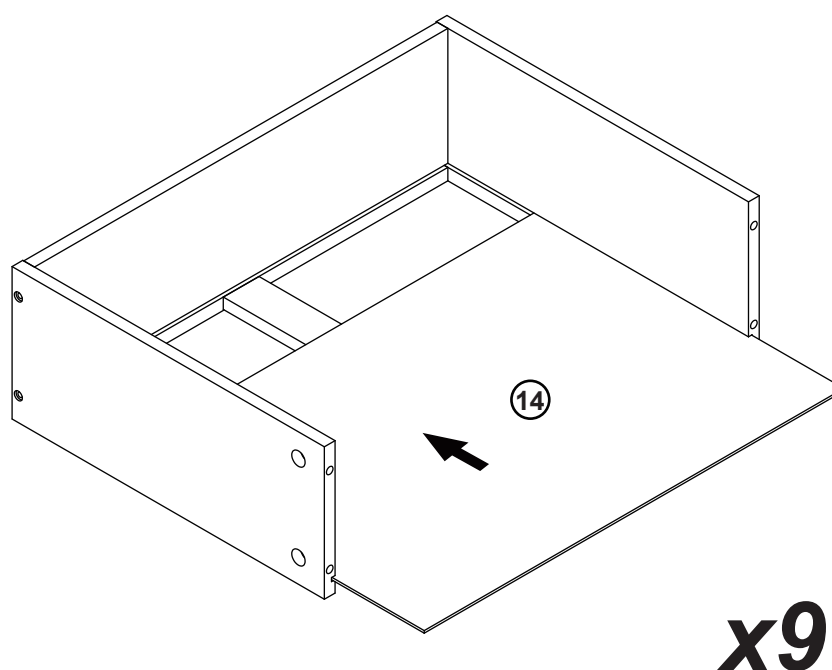


Step 16

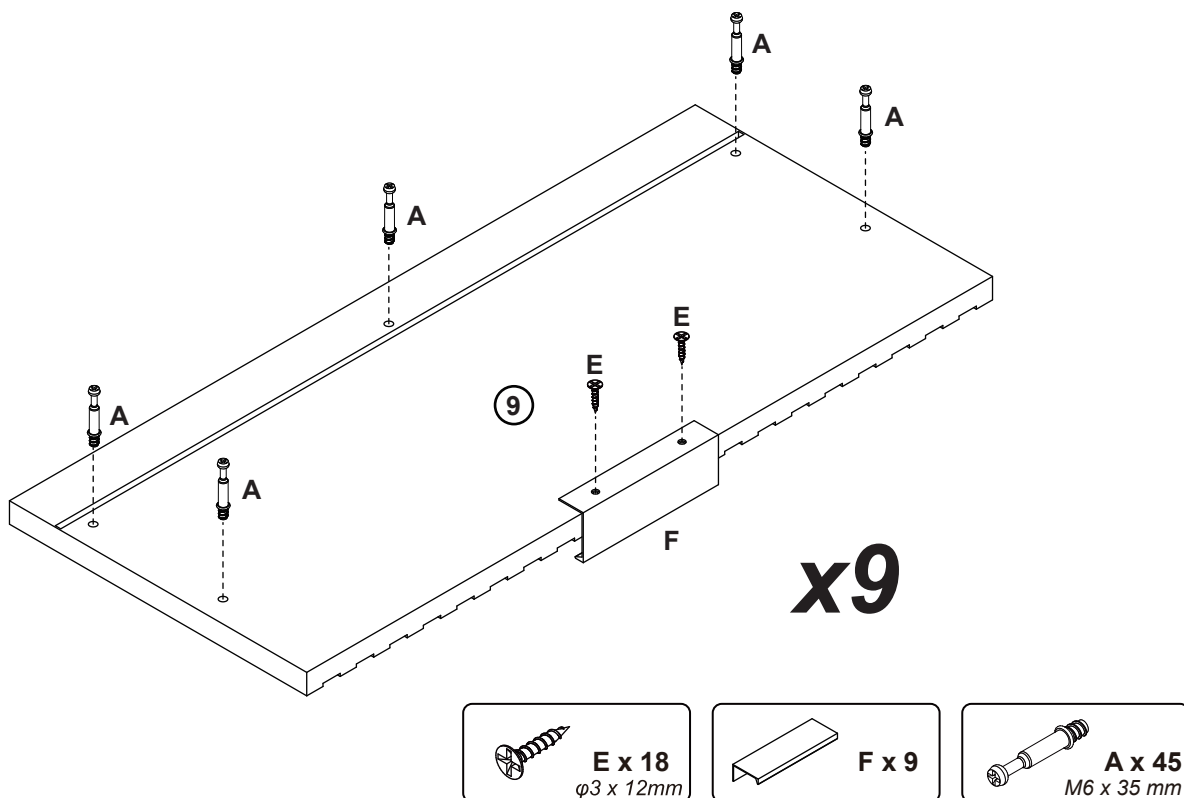


Step 17

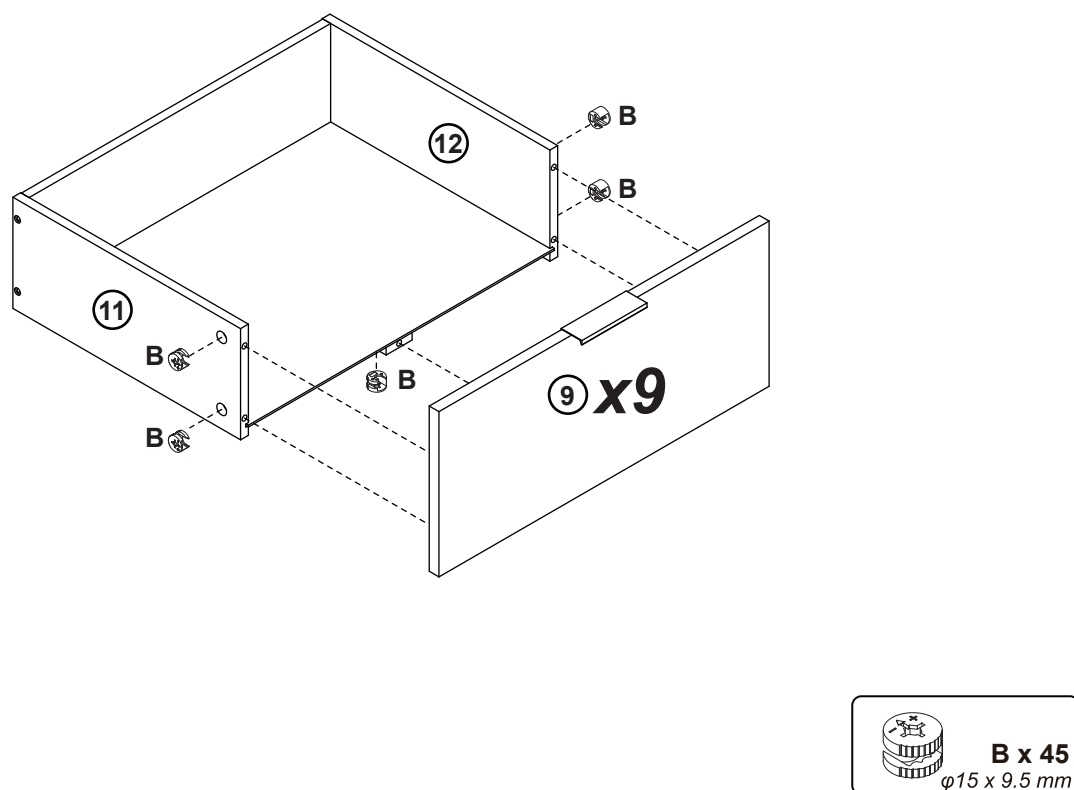

Step 18

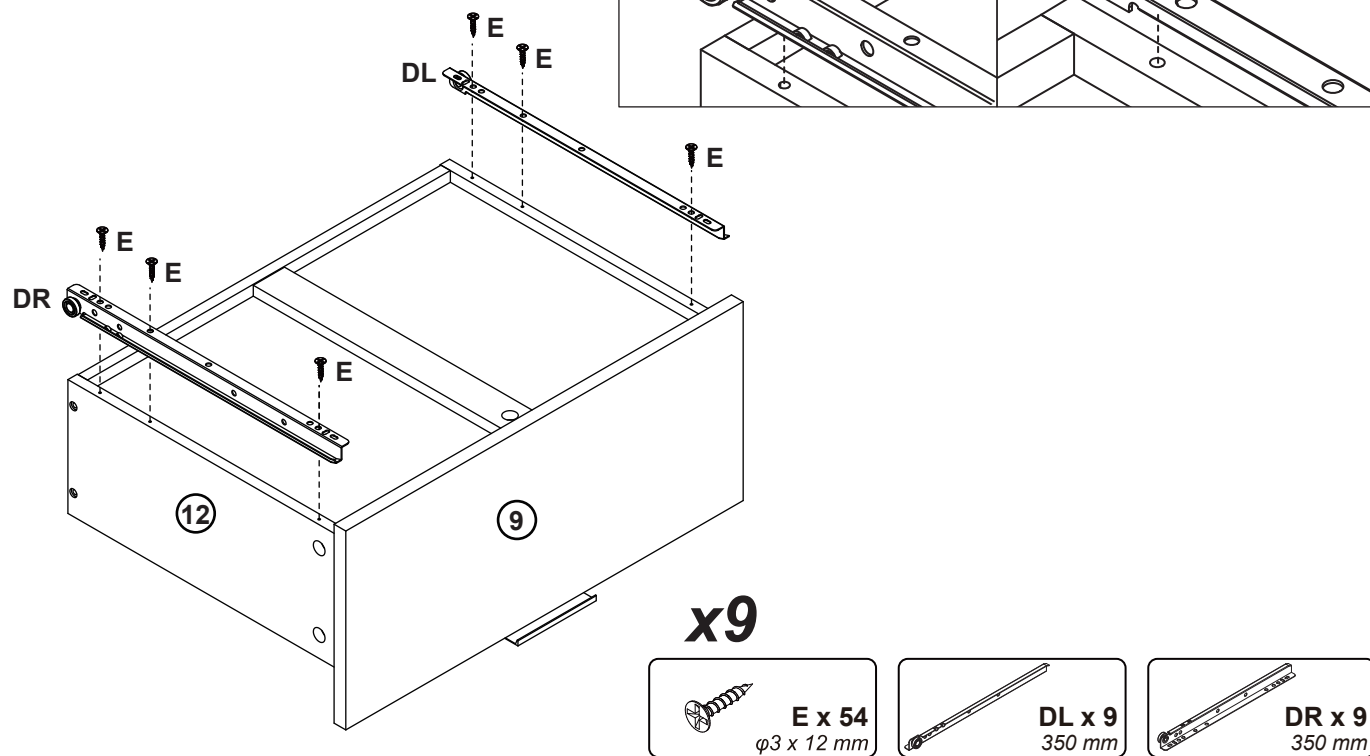

Step 19

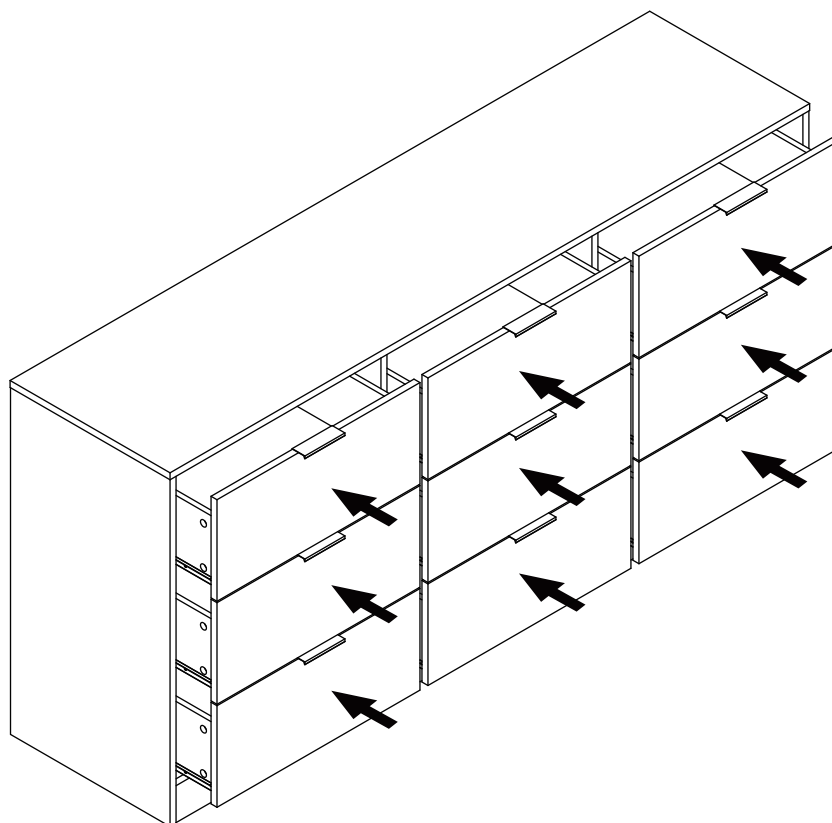

Step 20

