


Cushion Recovery Notice

For convenient packaging, the seat cushions, back cushions, and ottoman pads have been vacuum-compressed. After unpacking, please allow 5 to 7 days for them to fully expand and regain their original shape. Gently patting or fluffing the cushions can help speed up the recovery process, which typically takes between 72 hours and one week.

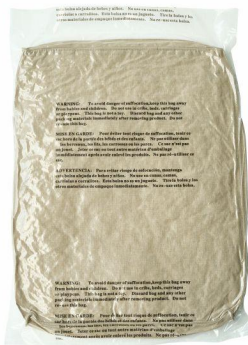

Back Cushion



Seat Cushion




Ottoman Cushion


Assembly Instruction

Advice:

- 1.Power tools are suggested to be used during installation.
- 2.More than one person may be required to assemble this product.
- 3.The best advice is not tightening up any screws until the whole piece is assembled.If having difficulty aligning holes,loosen the screws already installed and readjust the armrest.
- 4.To avoid mess-up or mismatch,please use the hardware of each box to install the furniture in the same box.

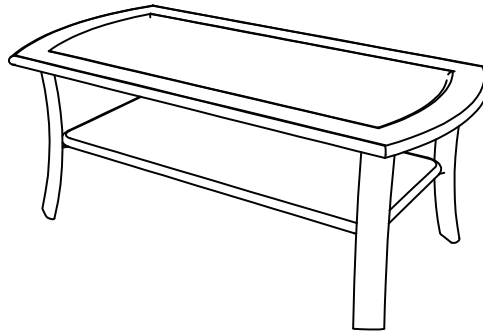


Table

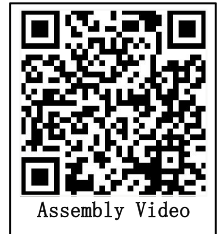

Parts List


NO.	Picture	Description	QTY
T-A		Desktop	1
T-B		Wicker Layer	1
T-C		Table Leg	4
N		Washer (M6)	12
Y		Screw (M6*18)	12
L		Allen Key	1

STEP 1

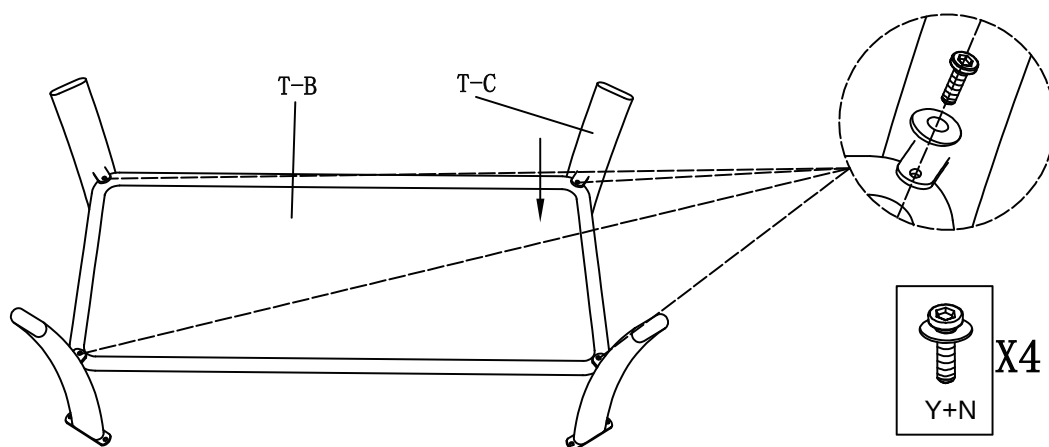


The best advice is not tightening up any screws until the whole piece is assembled.

STEP 2

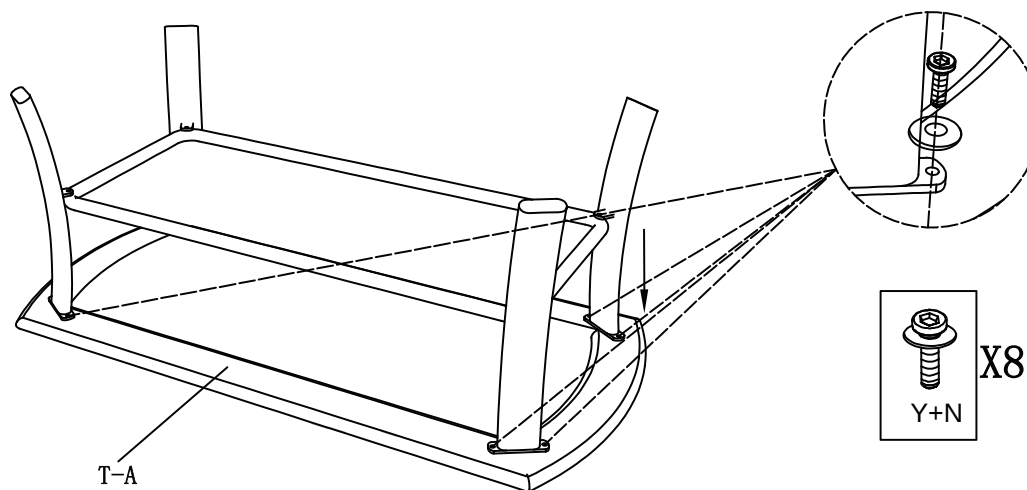


FINISH

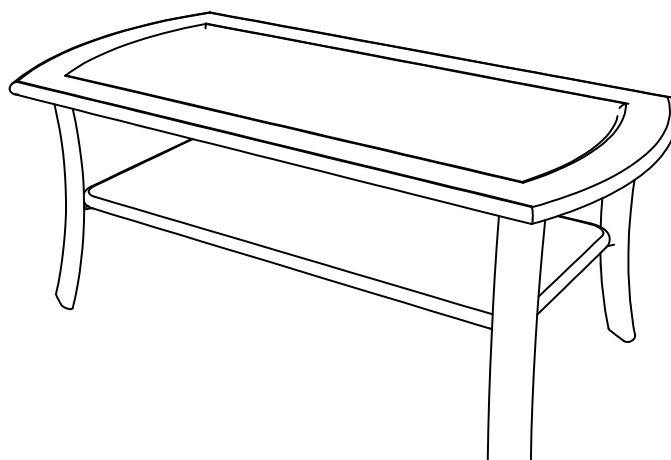


Assembly Instruction

Advice:



1. Power tools are suggested to be used during installation.
2. More than one person may be required to assemble this product.
3. The best advice is not tightening up any screws until the whole piece is assembled. If having difficulty aligning holes, loosen the screws already installed and readjust the armrest.
4. To avoid mess-up or mismatch, please use the hardware of each box to install the furniture in the same box.

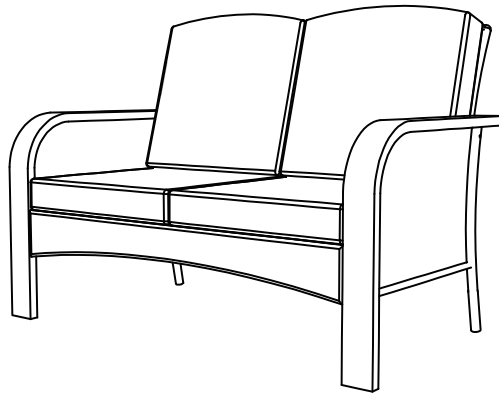


Loveseat

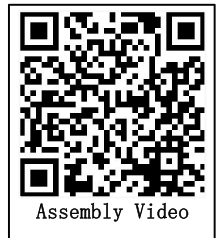


Parts List

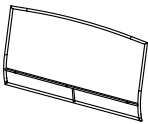NO.	Picture	Description	QTY	NO.	Picture	Description	QTY
L-A		Sofa Back	1	N		Washer (M6)	11
L-B		Sofa Seat	1	V		Screw (M6*35)	9
L-C		Right Arm	1	T		Screw (M6*45)	2
L-D		Left Arm	1	L		Allen Key	1
L-E		Seat and Back Cushion	2				

STEP 1

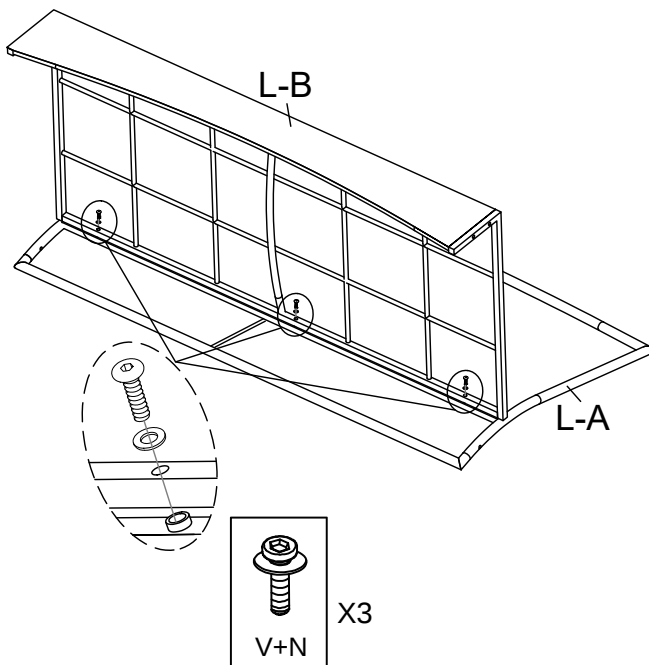


STEP 2

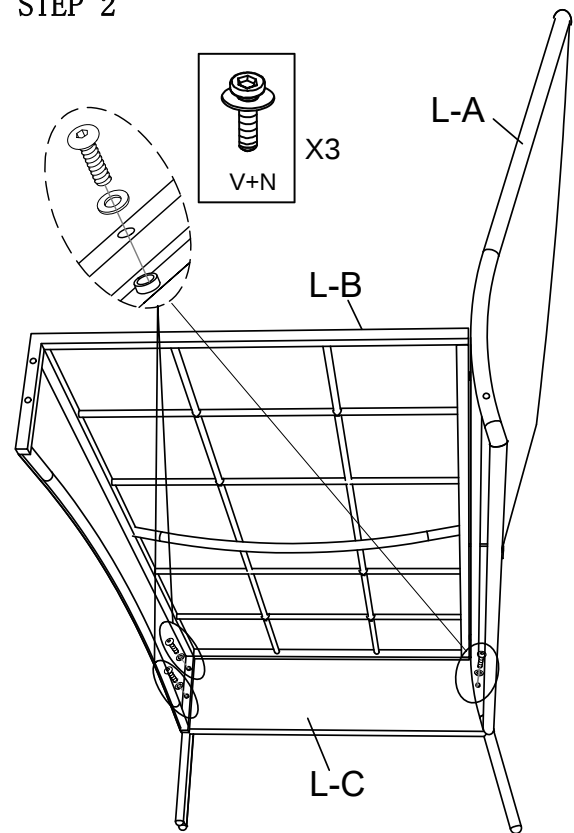


The best advice is not tightening up any screws until the whole piece is assembled.

STEP 3

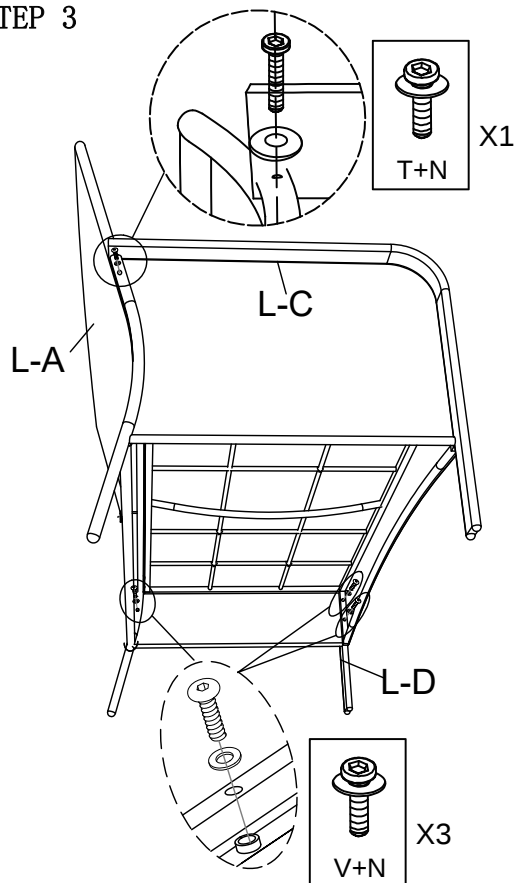

FINISH

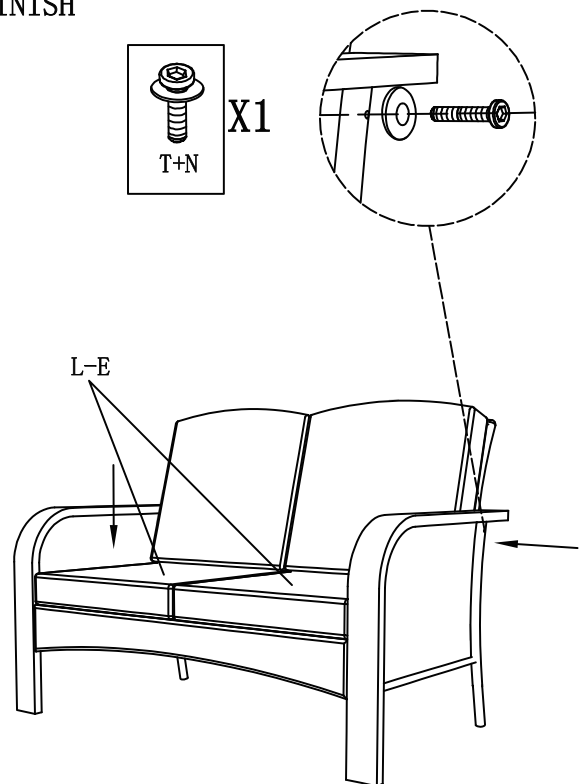

Please tap the cushions and wait 48 to 72 hours to fully rebound