

installation instructions:

WOOD DECORATIVE SLAT WALL

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear proper protective gear.

Follow fixture, power tools, and paint manufacturers' instructions and users manuals.

Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- | | |
|--|--|
| <input type="checkbox"/> Loctite power grab | <input type="checkbox"/> Fine sandpaper |
| <input type="checkbox"/> Adhesive | <input type="checkbox"/> Chalk line & measuring tape |
| <input type="checkbox"/> Small brad nails | <input type="checkbox"/> Miter or Table Saw |
| <input type="checkbox"/> Brad nailer | |
| <input type="checkbox"/> 100% acrylic paint | |
| <input type="checkbox"/> Paint brush or roller | |

IMPORTANT INFO

- Clean and prep the installation surface and each slat of any debris with a clean cloth.
- It is highly recommended that you paint or stain the panels before installation.
- It is recommended to use quality and stain for all wood species.
- Make sure the surface and the back of the panel are completely dry before installation.
- Before installing, acclimate the wood slats in the room where you will be installing them.
- In most applications you will have to trim some panels. Cut them with a standard power tool, such as a table saw or miter saw. Sand cut edge ends and clean away any debris.
- Depending on your installation method, use Loctite Power Grab adhesive and brad nails.

INSTALL INSTRUCTIONS:

1. Prep and stain Slats before installing or use quality stain for wood species other than MDF. Touch up paint or stain as needed after installation.
2. Smooth installation surface with sandpaper by removing excessive bumps or texture. Wipe wall clean to clear debris.
3. We recommend laying out the desired layout before installation as these are completely customizable and space is up to you. Mark the installation points using a chalk line or straight edge and level.
A.) For single panels, start at either the top or bottom corner at the edge of the wall and work towards the opposite corner (Diagram A).
B.) For 2-piece panel sets start at the center and work out (Diagram B).
4. Apply a small amount of adhesive to the back of the panel and secure with small brad nails. (Follow adhesive manufacturer's instructions for proper application.)
5. Once the first one is installed, repeat step 4 on the rest of the Slats

EXAMPLE DIAGRAM:

DIAGRAM A



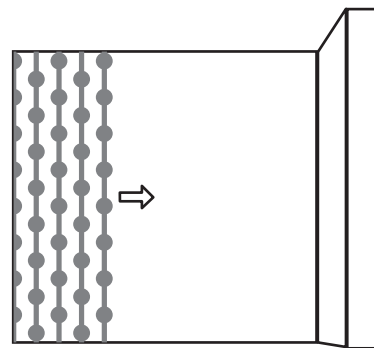


DIAGRAM B

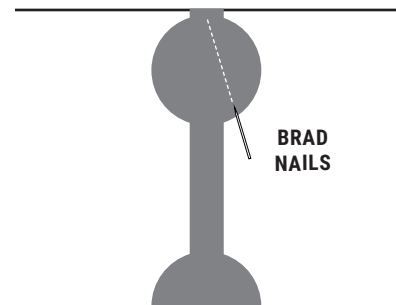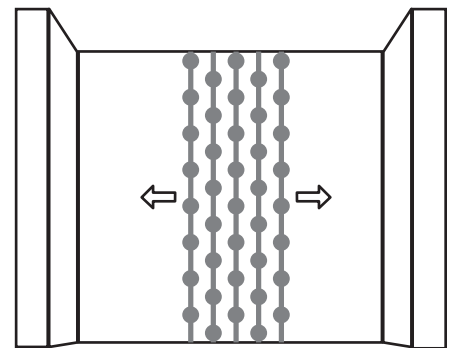

Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

We Can Help. Call (866) 607-0453

www.ekenamillwork.com