


Assembly Instructions

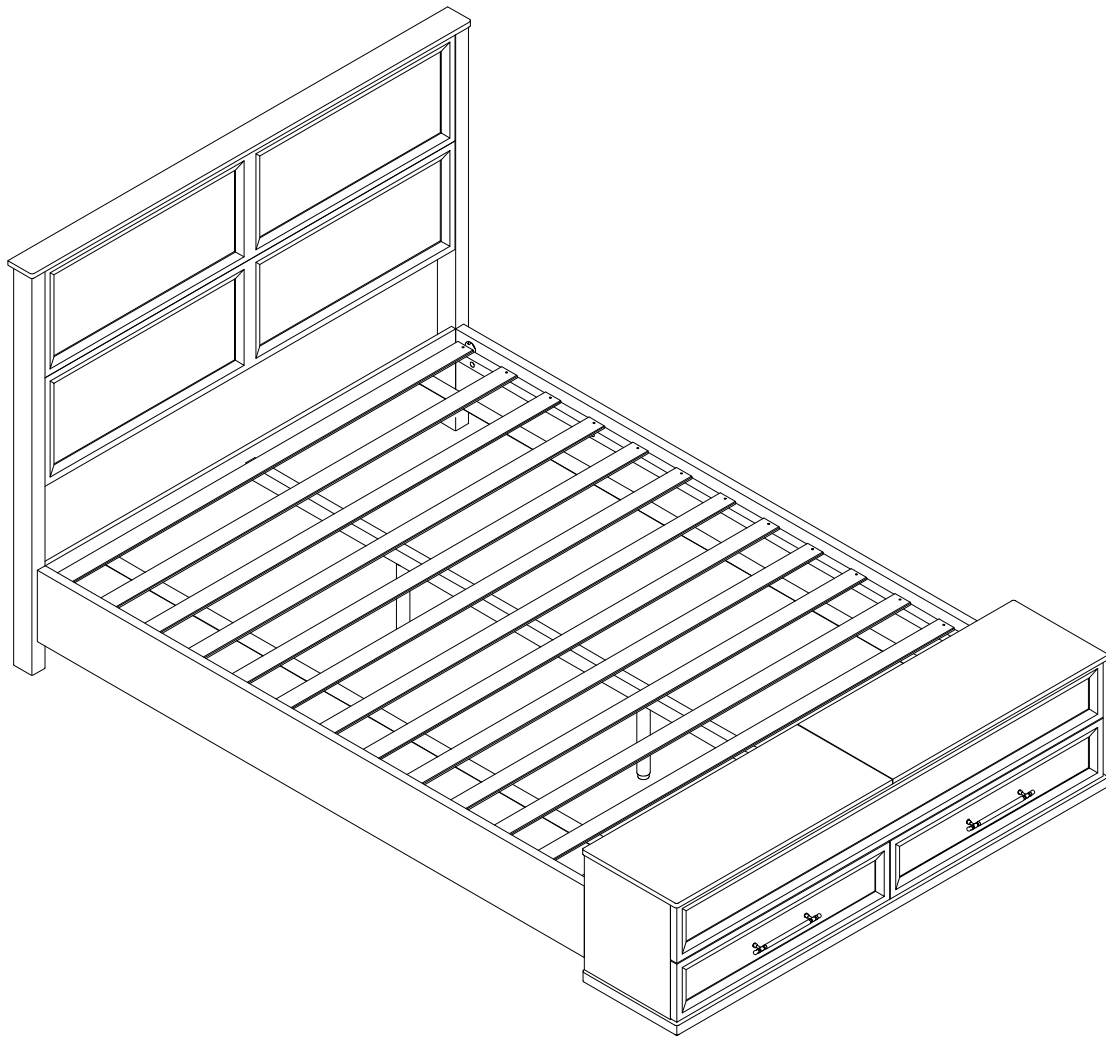

The product is packed in 2 boxes. If only a box was received, please wait for several business days or contact us for further help.

General Guidelines

- Please read the following instruction carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps. Please contact us when further information and help are needed.


Notes

- The product is intended for indoor use only. The product must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to product may occur if products are used outside of their intended purposes and/or if products have been changed/modified from their original design. The seller does not assume any responsibility or liability with respect to any injury/damage caused by incorrect assembly or improper use.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Please assemble the item on a spacious surface and do not place the unwrapped product directly on the ground to avoid product damage.
- Please do not stand or sit on the wooden boards.
- Please wear gloves during the assembly and/or disassembly process to avoid scratches from any sharp edges.
- Please match the corresponding part and fitting based on the part number in the manual.
- If the part does not match with the fitting, please check the piece as specified in this manual.
- During assembly, first loosely align all screws with the corresponding pre-drilled holes and then tighten the screws one by one.
- Periodically inspect screw tightness while the product is in use. If necessary, retighten to ensure structural integrity.
- If you accidentally spill water or another liquid on the surface, immediately wipe clean with a dry towel.
- Please keep the product away from sharp, pointed objects and corrosive substances to prevent product damage.
- Please place this item on level, solid ground during use.


Warnings

- During assembly, keep all small parts out of the reach of children. It may be fatal if swallowed or inhaled.
- Children should not climb or play on the product in order to avoid tipping over the furniture and causing serious injury.
- To avoid the potential dangers of suffocation, please keep all parts and packaging (film, plastic bags, foam, etc.) away from babies and children.
- Keep sharp objects and corrosive items away from the product to avoid any damage or injury.
- Do not shake or move violently during use to avoid tipping over the product.


Parts List (EN)

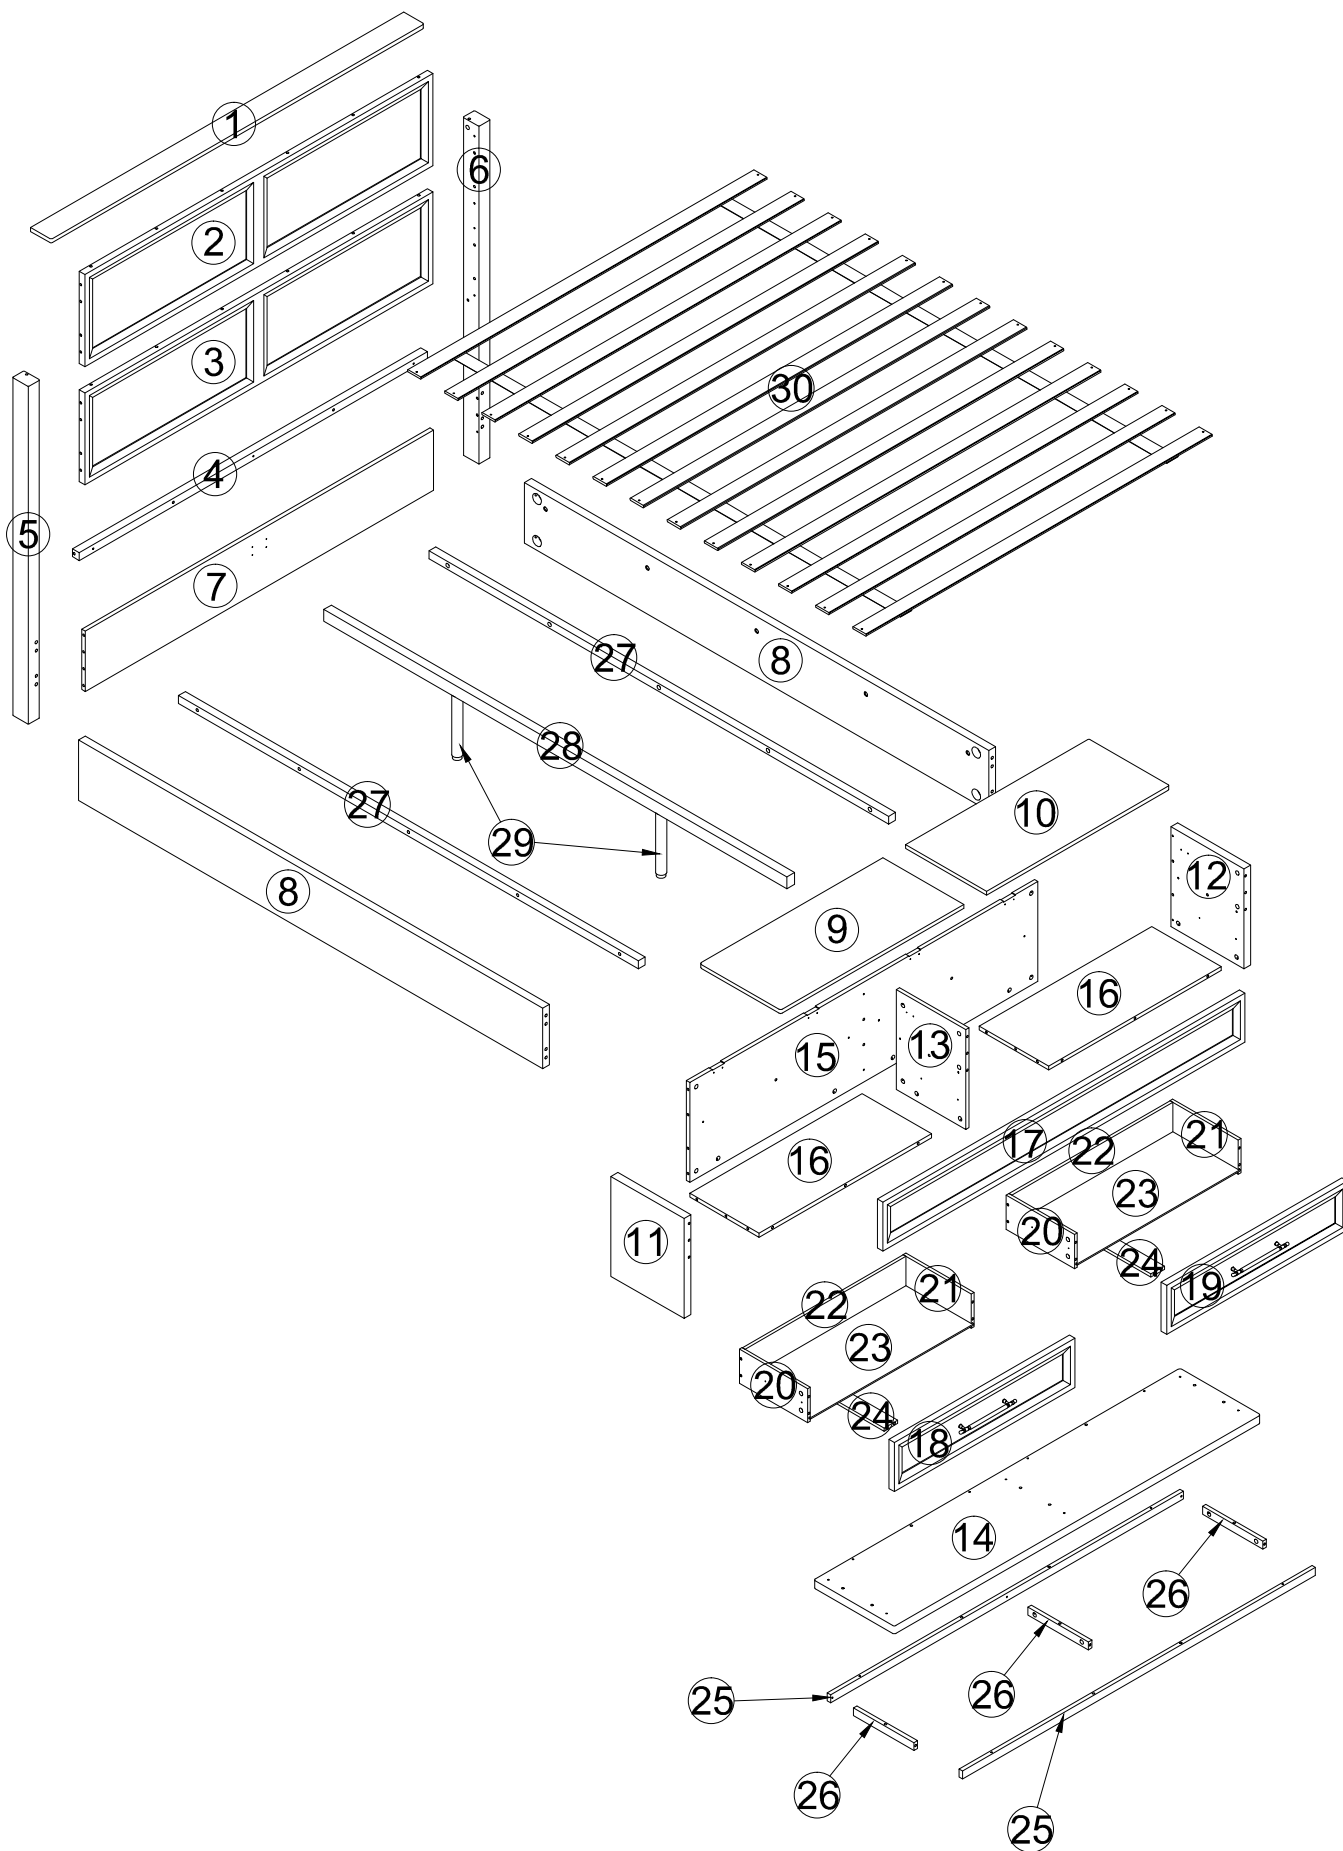


Parts List (EN)

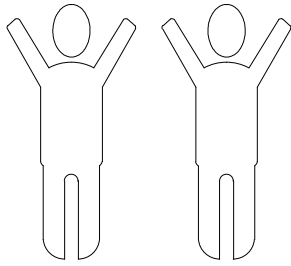


It takes two people to work together to assemble the product.

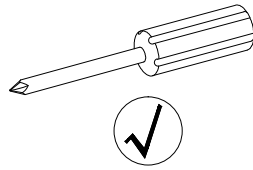

Recommended to use a screwdriver to assemble the product

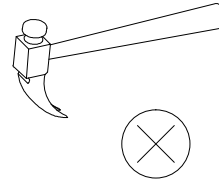














Do not use a hammer, it might damage the board.

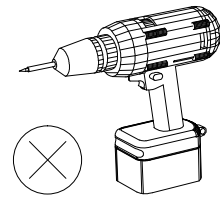












The use of an electric wrench is not recommended. If used, please set the torque to the minimum.

① 1PC	② 1PC	③ 1PC	④ 1PC
⑤ 1PC	⑥ 1PC	⑦ 1PC	⑧ 2PCS
⑨ 1PC	⑩ 1PC	⑪ 1PC	⑫ 1PC
⑬ 1PC	⑭ 1PC	⑮ 1PC	⑯ 2PCS





Parts List (EN)

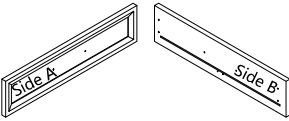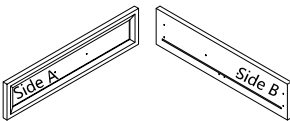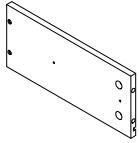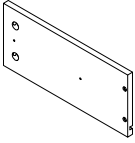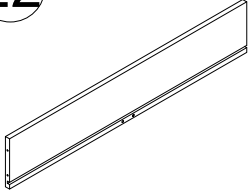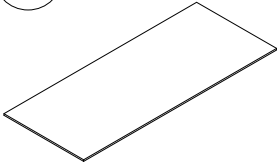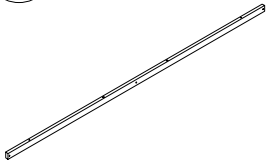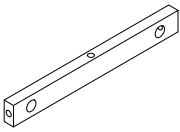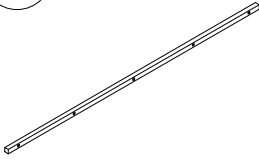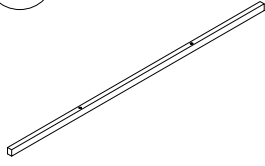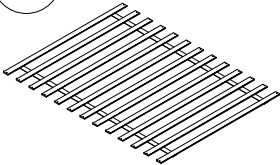17  1PC	18  1PC	19  1PC	20  2PCS
21  2PCS	22  2PCS	23  2PCS	24  2PCS
25  2PCS	26  3PCS	27  2PCS	28  1PC
29  2PCS	30  1PC		


Parts List (EN)

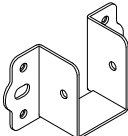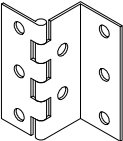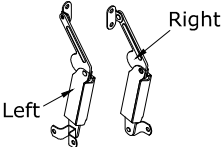No. A Quantity: 78+4 Pcs Cam Lock Dowel 8*28mm 	No. B Quantity: 86+4 Pcs Cam φ15 	No. C Quantity: 9+1 Pcs Sticker Ø20 	No. D Quantity: 48+3 Pcs Dowel 8*30mm 
No. E Quantity: 2 Sets Drawer Slider 10" 	No. F Quantity: 56+4 Pcs Screw M3.5*14mm 	No. G Quantity: 2+1 Pcs Screw M3.5*25mm 	No. H Quantity: 41+3 Pcs Screw M4*30mm 
No. I Quantity: 8+1 Pcs Foot Pad Ø20 	No. J Quantity: 4+1 Pcs Double-ended rod 6*64mm 	No. K Quantity: 8+1 Pcs Dowel 10*40mm 	No. L Quantity: 10+1 Pcs Screw M8*35mm 
No. M Quantity: 2 Pcs 	No. N Quantity: 4+1 Pcs Screw M4*18mm 	No. O Quantity: 2 Pcs Adjust The Foot 	No. P Quantity: 2+3 Pcs Rubber particles Ø10 
No. Q Quantity: 2 Pcs U-shaped hardware 86*45*30 	No. R Quantity: 4 Pcs Hinge 	No. S Quantity: 2 Sets Support rod 	No. T Quantity: 4+1 Pcs Full tooth screw M8*80mm 


Parts List (EN)

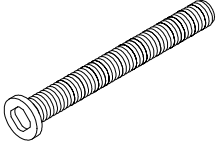No. U Quantity:8 Pcs Gasket 29*15*7 	No. V Quantity:8 Pcs Hex nut M8 	No. W Quantity:1 Pc Wrench 	No. X Quantity:1 Pc Allen Key 5# 
No. Y Quantity:4 Pcs Glove 	No. Z Quantity:1 Pc Screwdriver 	No. A-1 Quantity:8+1 Pcs Screw M3.5*12mm 	No. A-2 Quantity:4+1 Pcs Screw M8*130mm 
No. A-3 Quantity:4+1 Pcs Gasket 			

Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required




INSERTING AND TIGHTENING CAM-BOLT

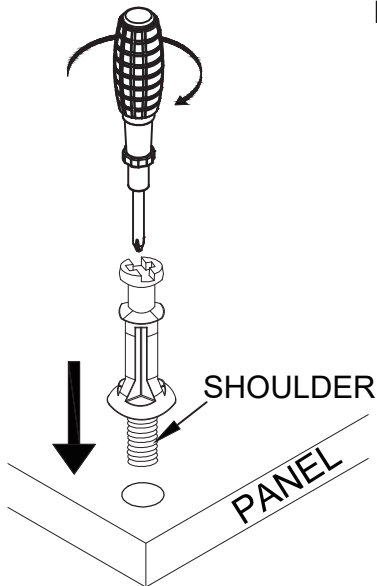

Place Cam-bolt on pre-drilled hole and screw in vertically

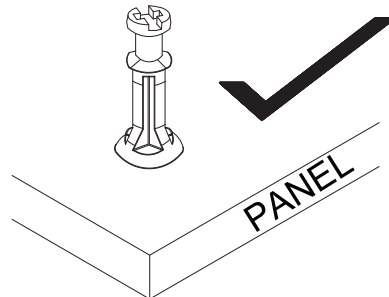


Shoulder is flushed (on the same level) with the panel.

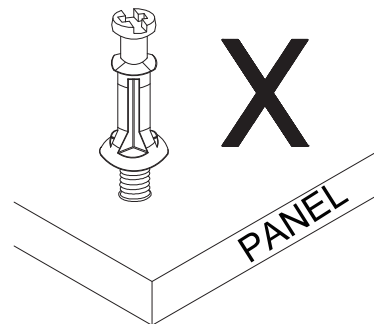

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.


INSERTING CAM-LOCK

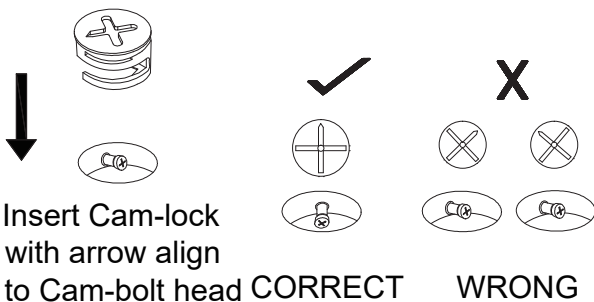

Insert Cam-lock with arrow align to Cam-bolt head **CORRECT** **WRONG**


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

TIGHTENING CAM-LOCK

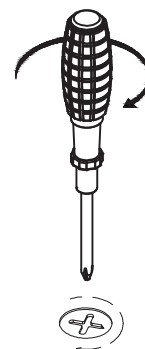


Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

STEP 1

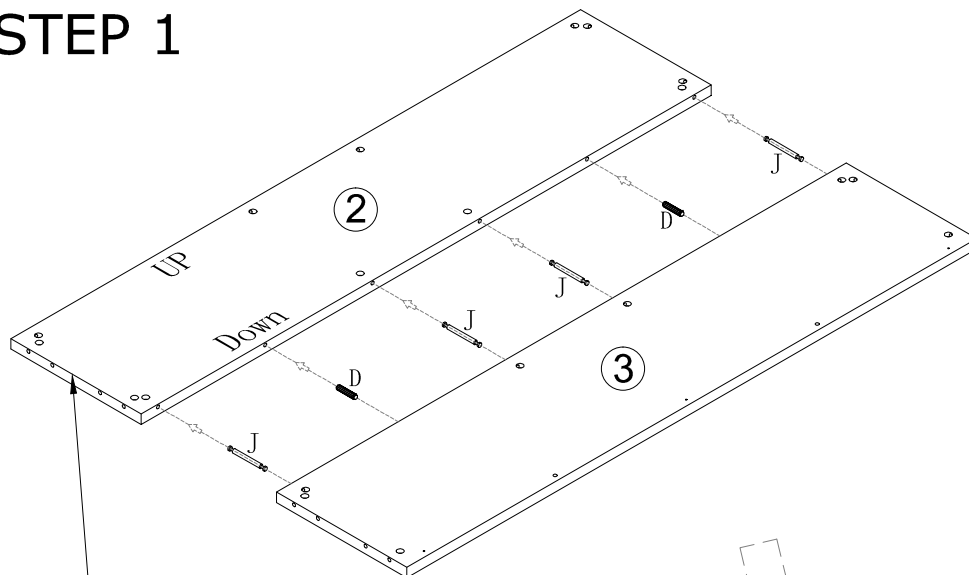

! Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

Please note that this board is assembled in an up-down manner, and there are labels on the components, assemble according to the marked direction.

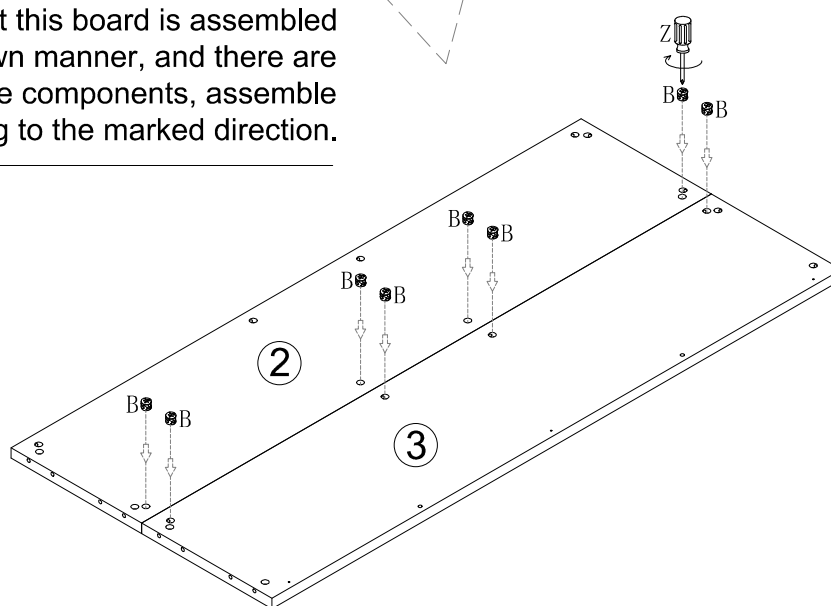


INSERTING AND TIGHTENING CAM-BOLT

Insert Cam-lock with arrow align to Cam-bolt head







CORRECT

WRONG

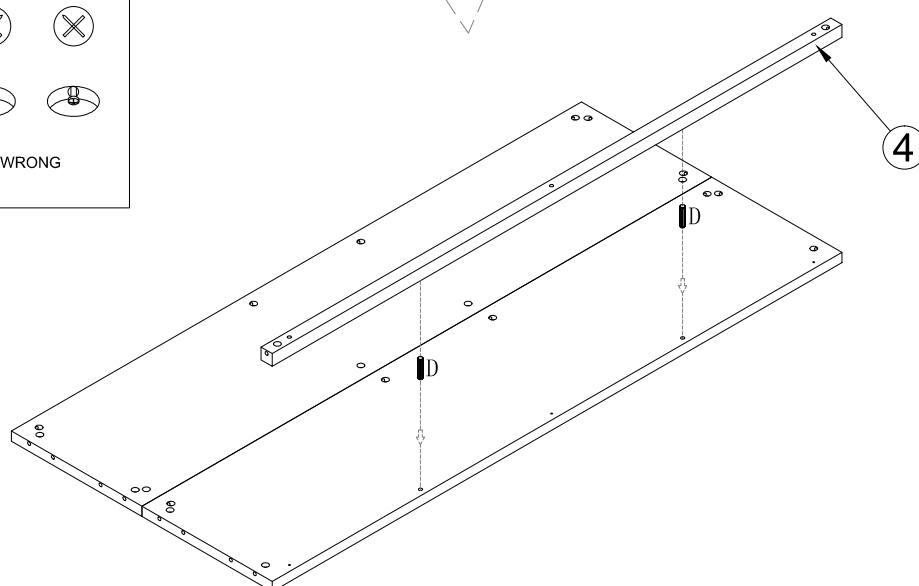

	B×8PCS
	D×4PCS
	J×4PCS


STEP 2

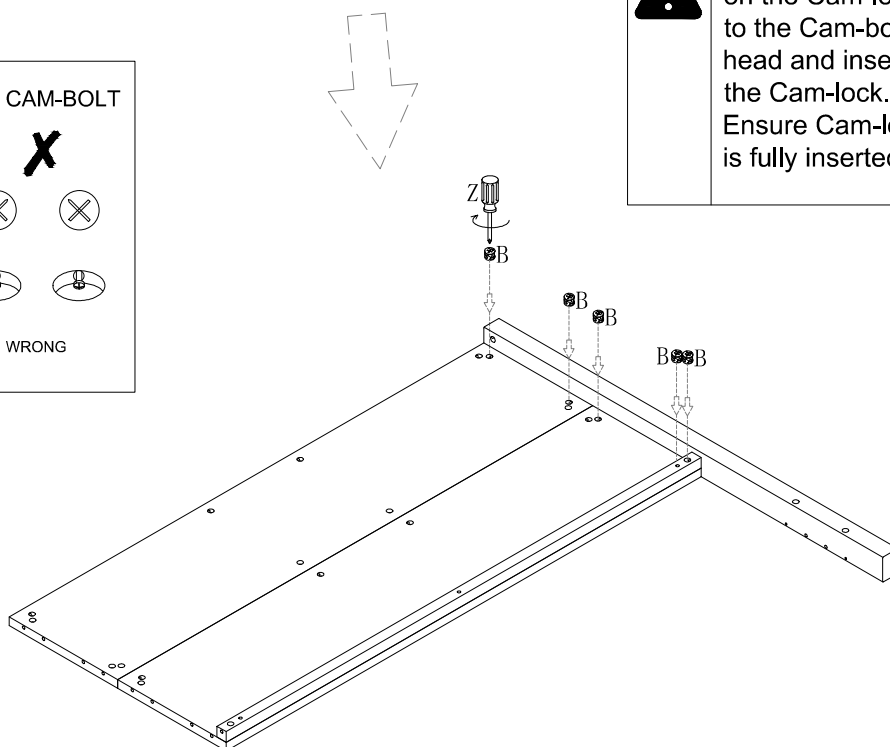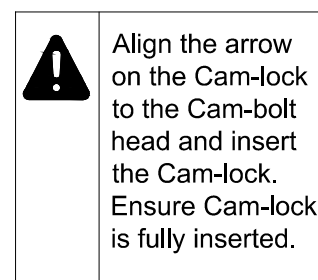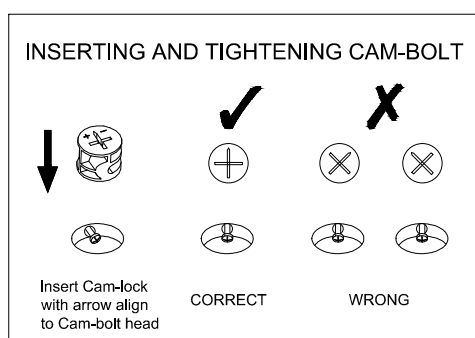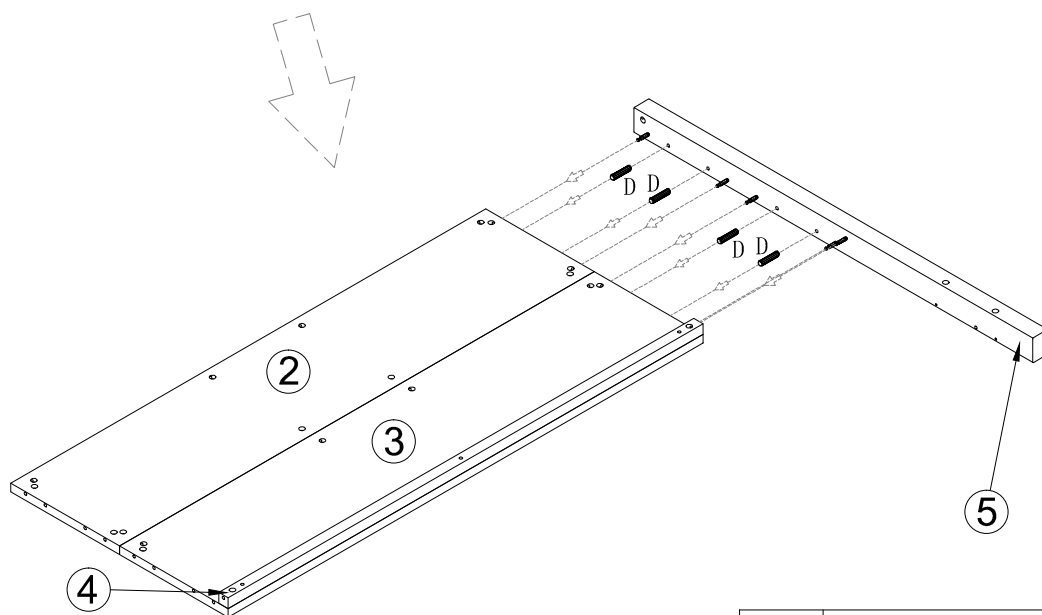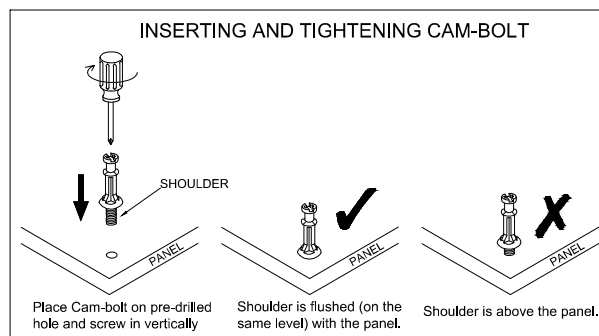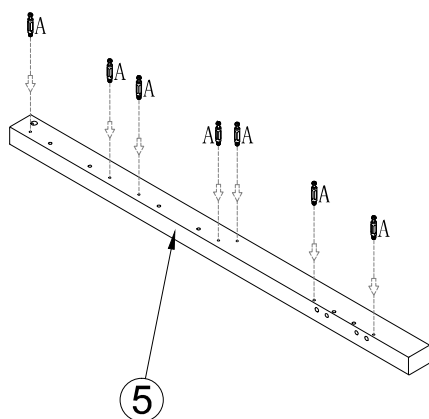




	A×7PCS
	B×5PCS
	D×4PCS

STEP 3

Note: After installation, the narrow edge of the hole margin should face upwards.

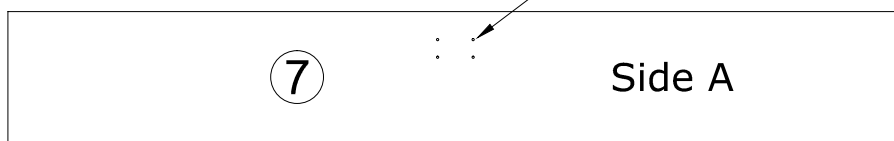


Note that when assembling the No.7 plate, the middle locating hole is facing down.



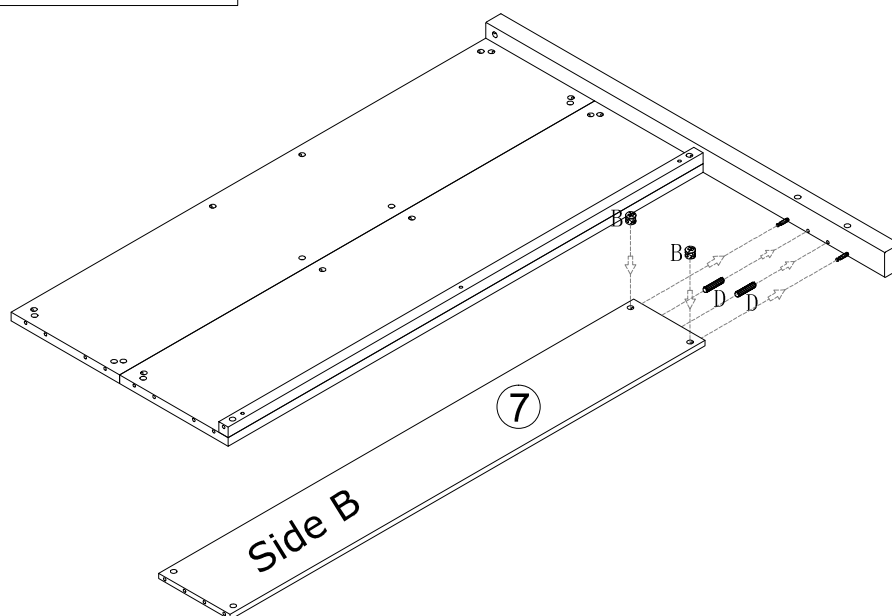
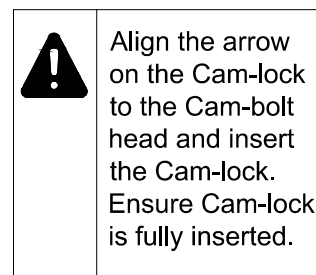
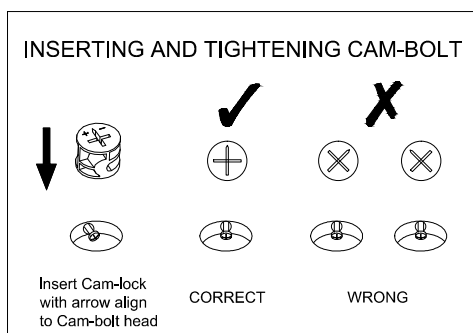


	B×2PCS
	D×2PCS

STEP 4






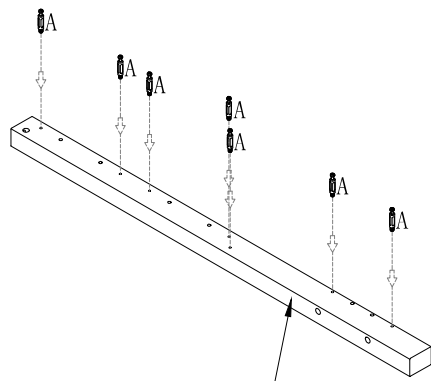


6

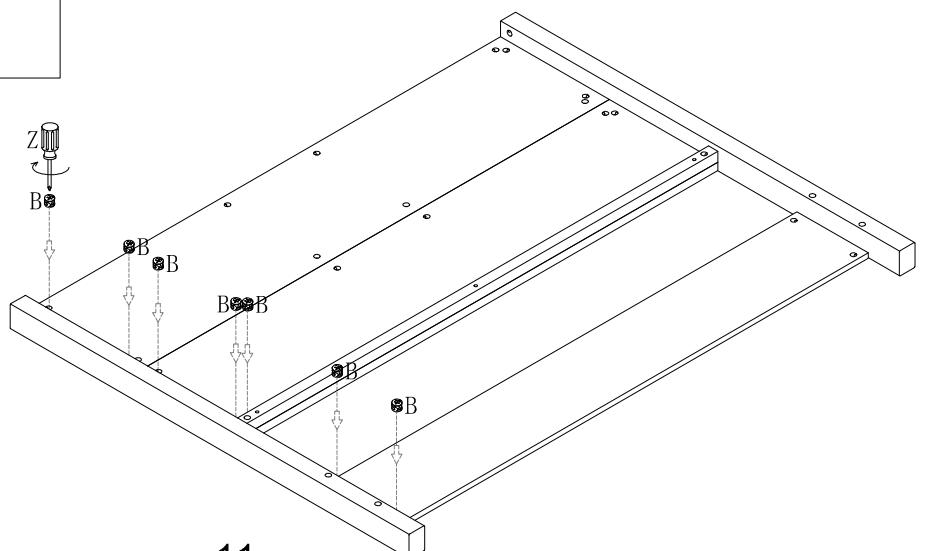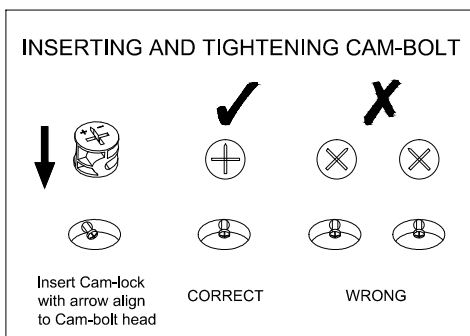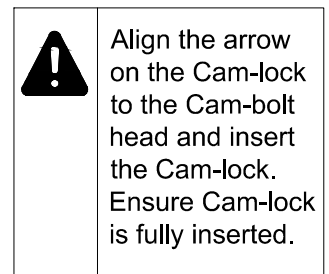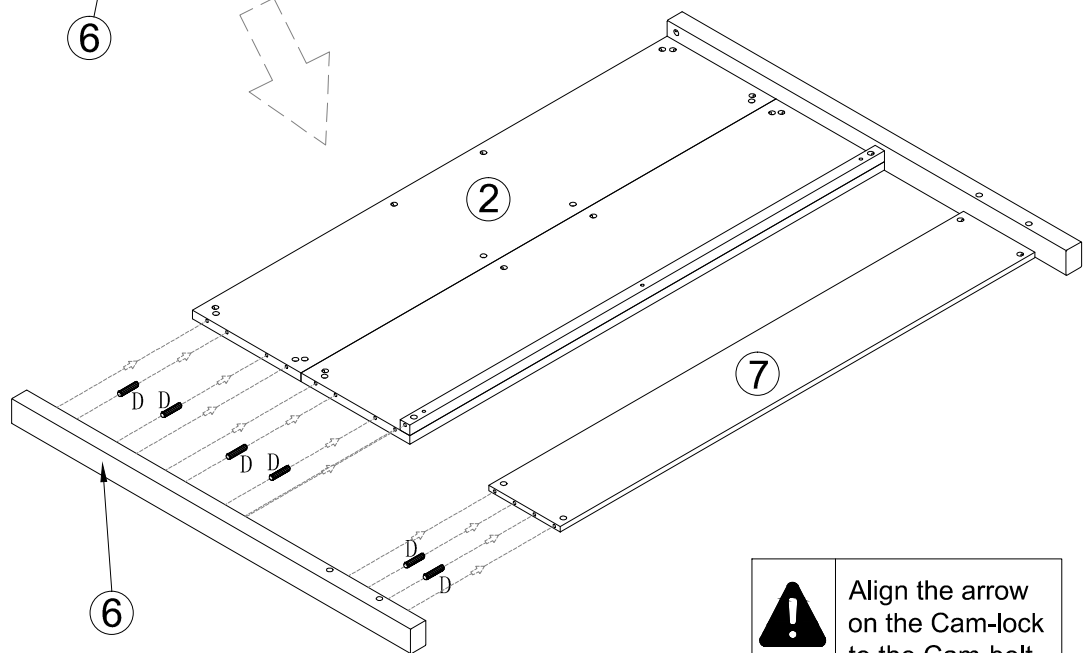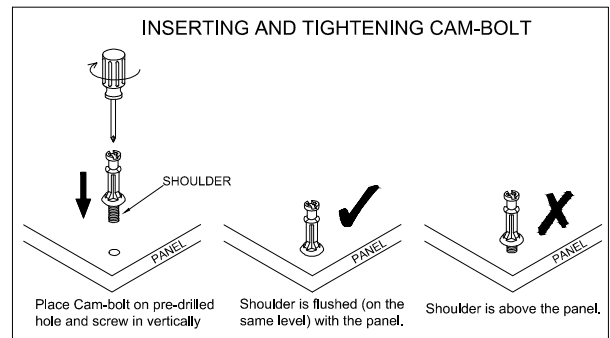


	A×7PCS
	B×7PCS
	D×6PCS


STEP 5

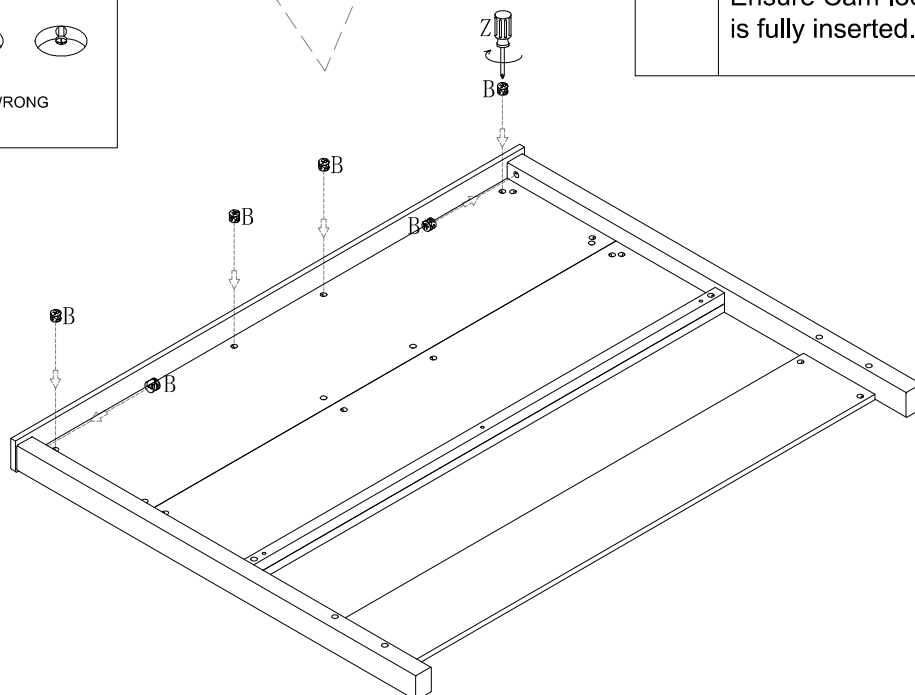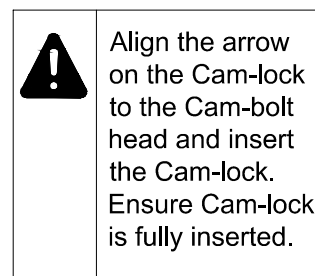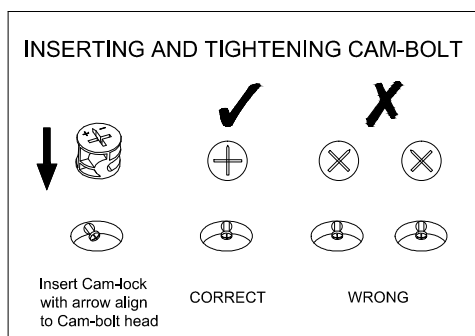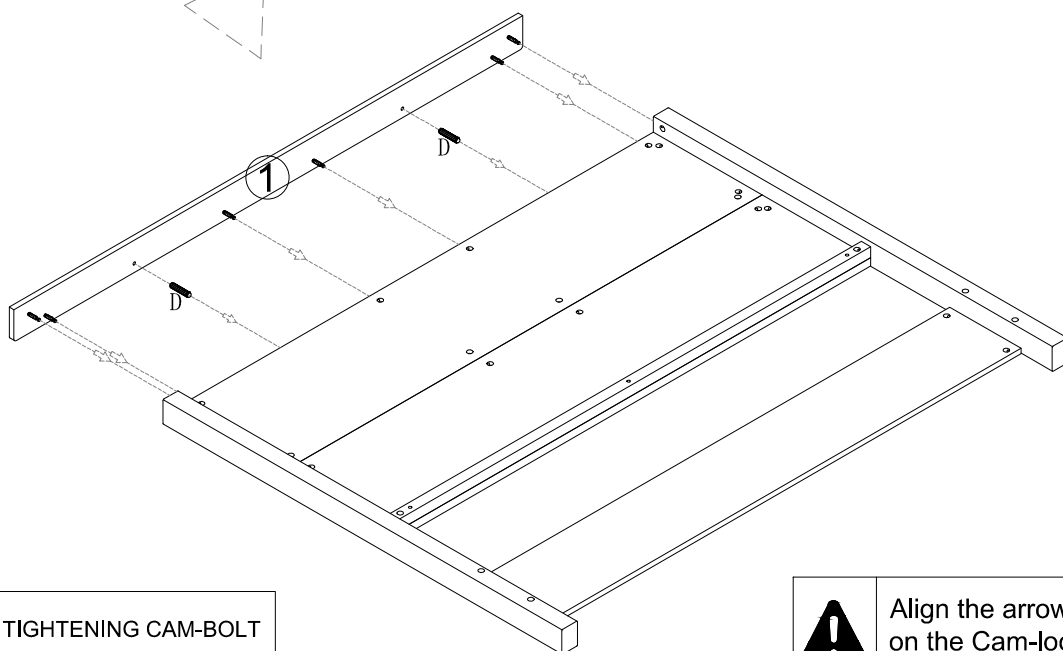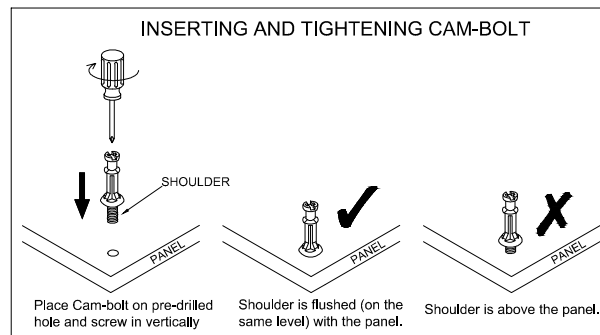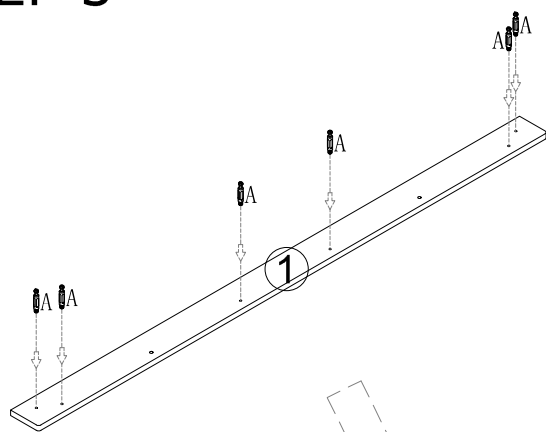

	A×6PCS
	B×6PCS
	D×2PCS

STEP 6

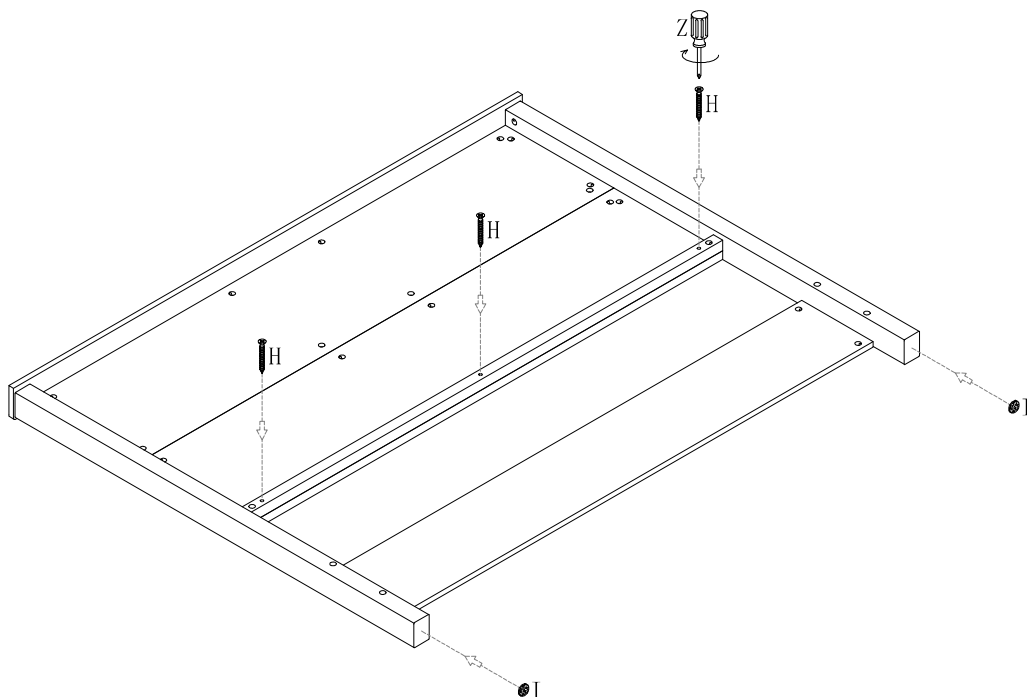


	H×3PCS
	I×2PCS

STEP 7

Before Assembly

Tips Before Your Start


How to separate the drawer slider:

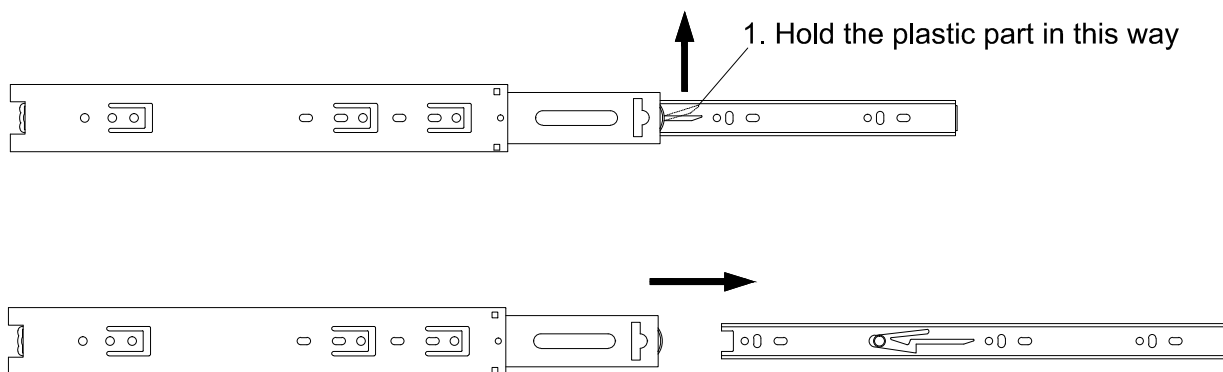

2. Pull out the inner slider for drawer box fixing

STEP 8


 Please pull the drawer slide out to a suitable position to install the screws.

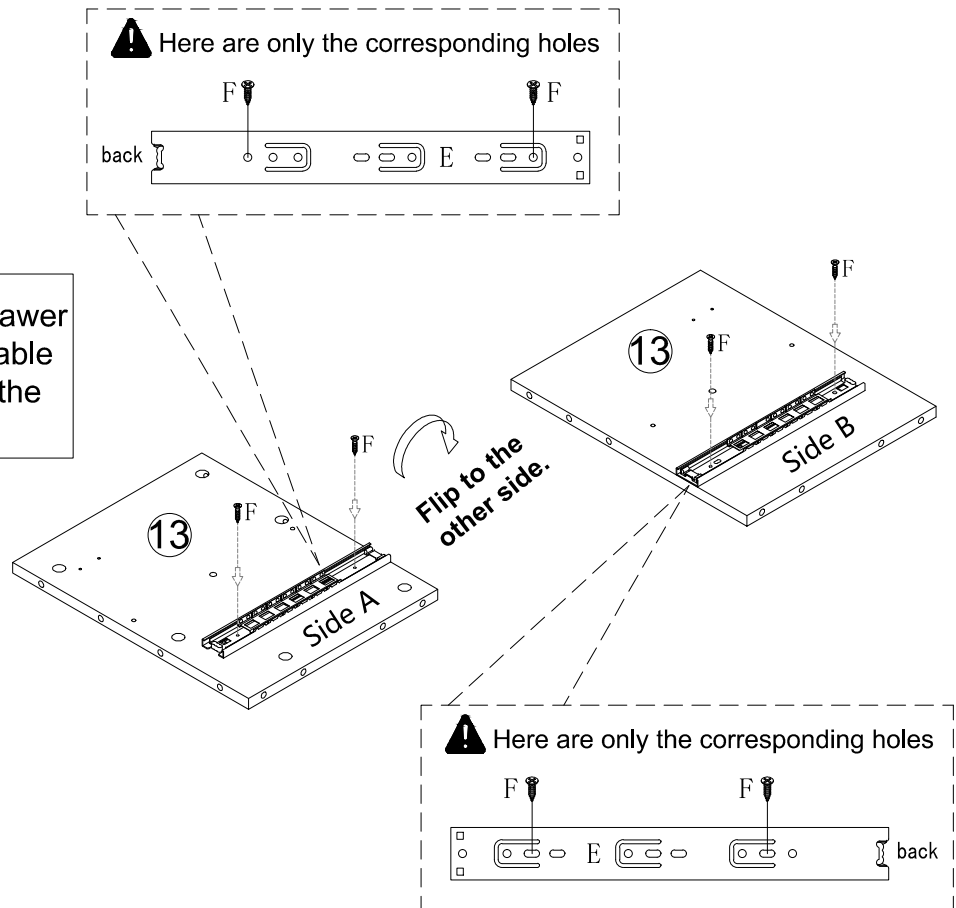

	E×1Sets
	F×4PCS



STEP 9

 Please pull the drawer slide out to a suitable position to install the screws.




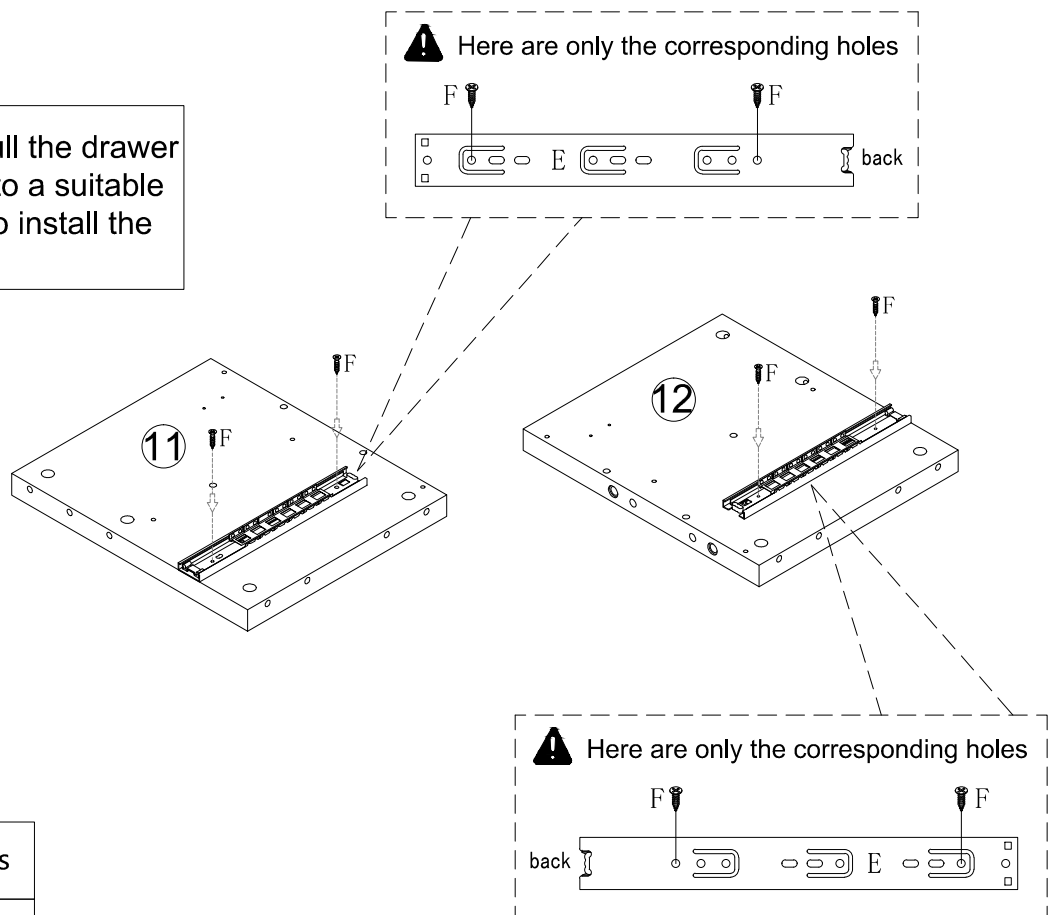


	E×1Sets
	F×4PCS

STEP 10

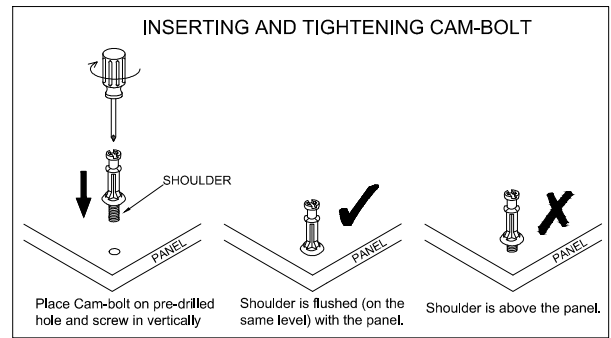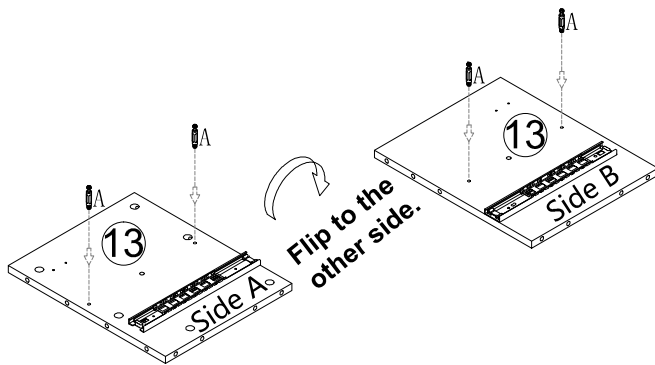







Please make sure to distinguish between left and right during installation; the hole on the right should be slightly lower than the one on the left.

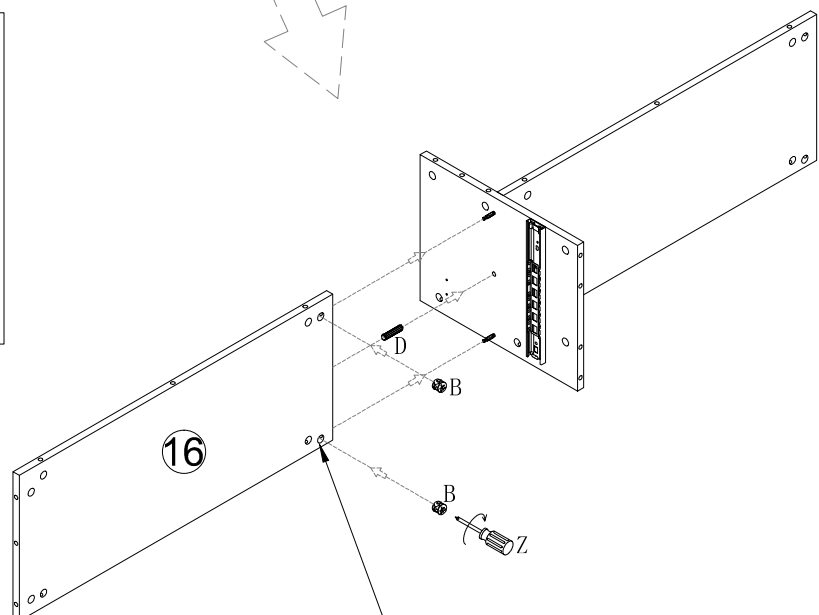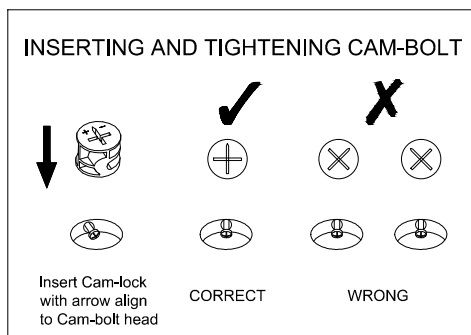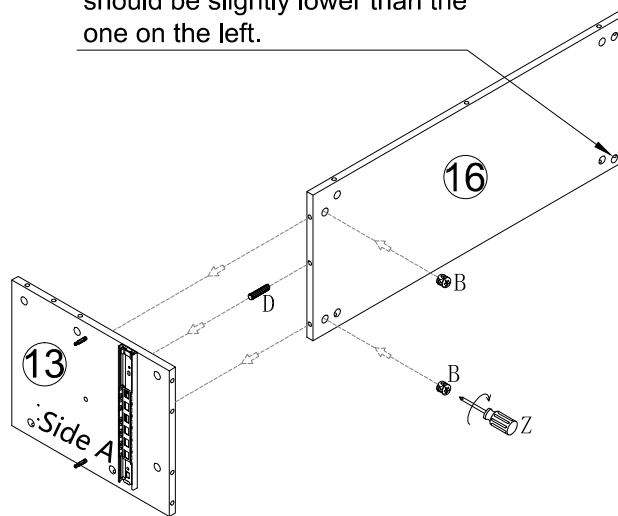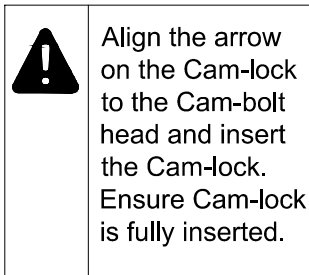

Please make sure to distinguish between left and right during installation; the hole on the right should be slightly lower than the one on the left.







	A×4PCS
	B×4PCS
	D×2PCS

STEP 11

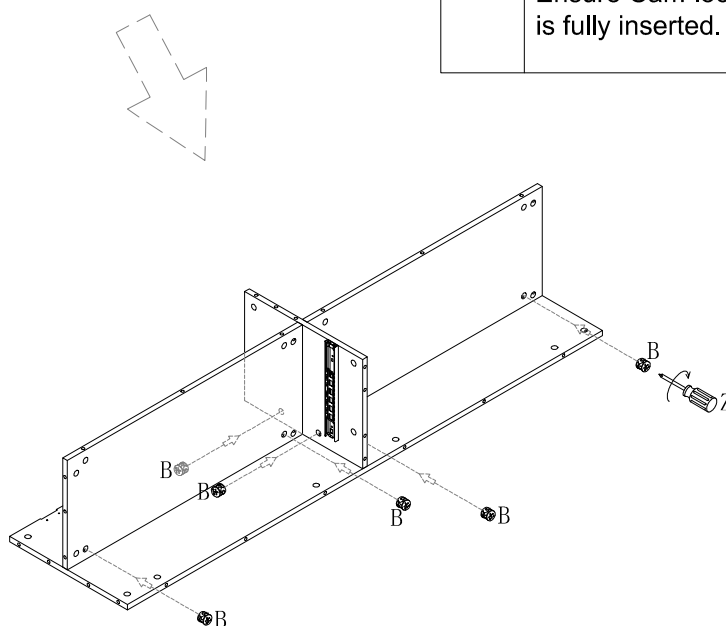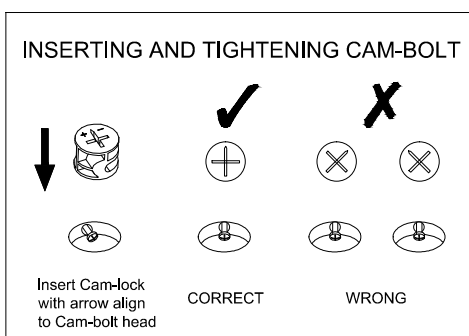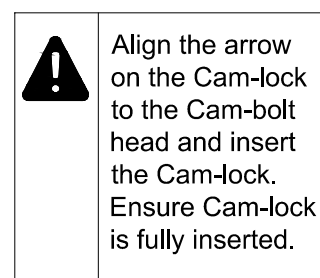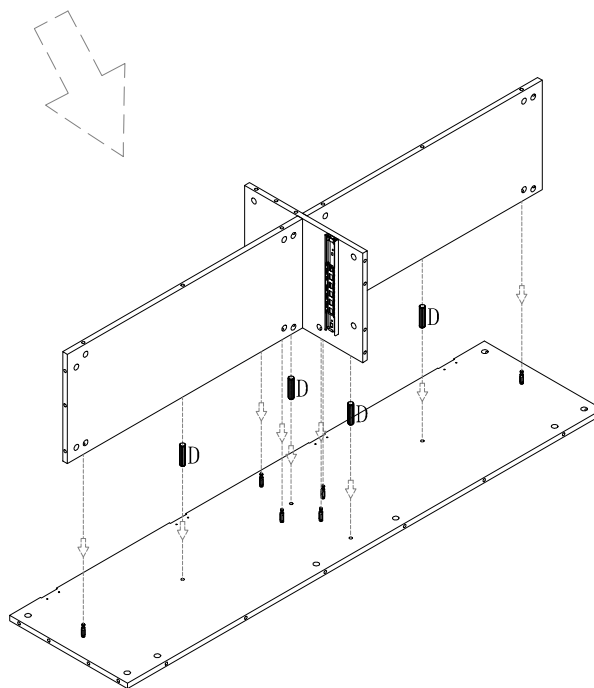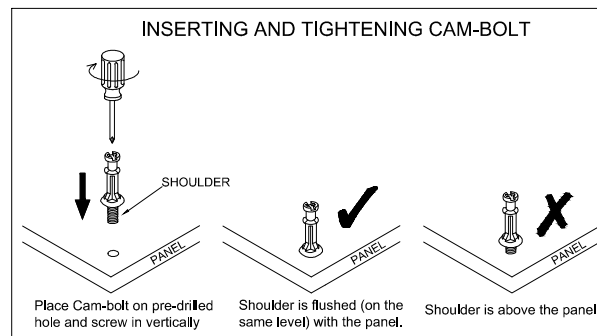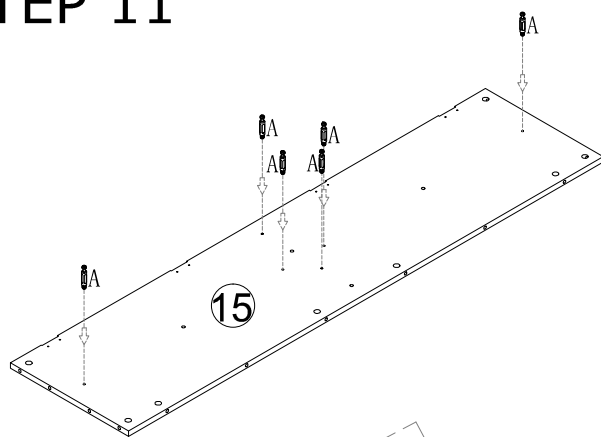







	A×4PCS
	B×4PCS
	D×2PCS

STEP 12

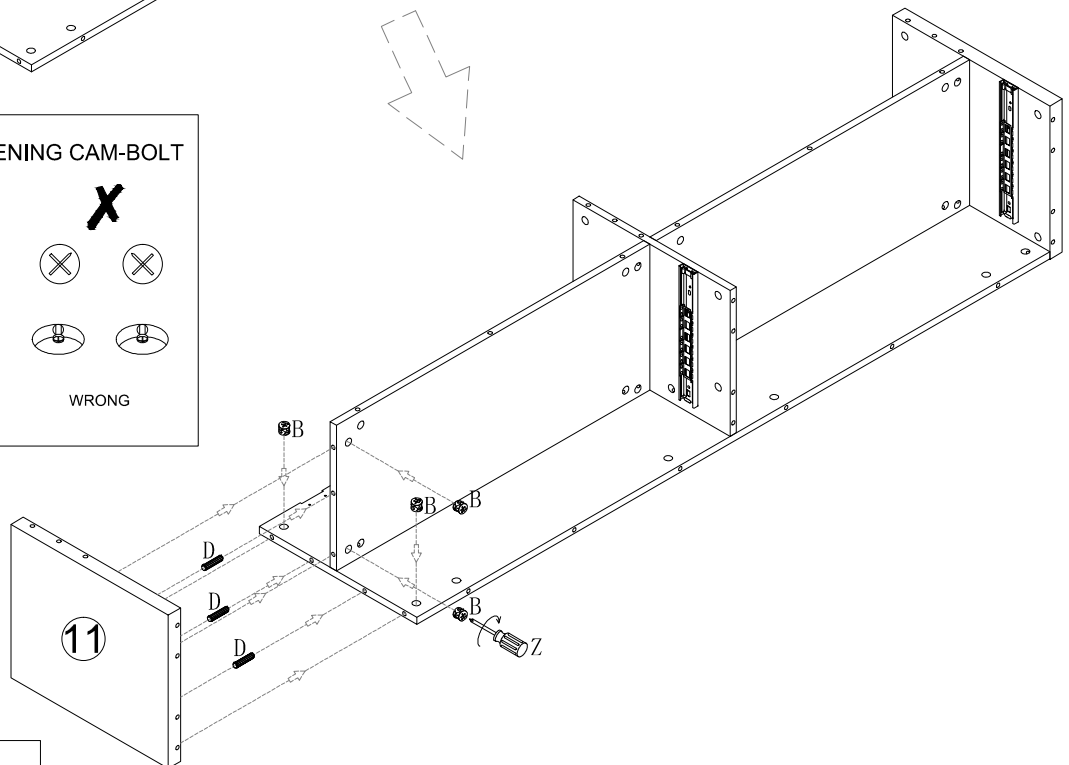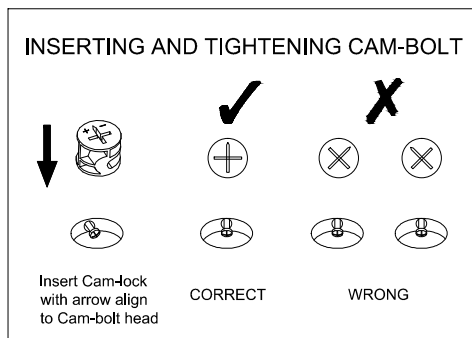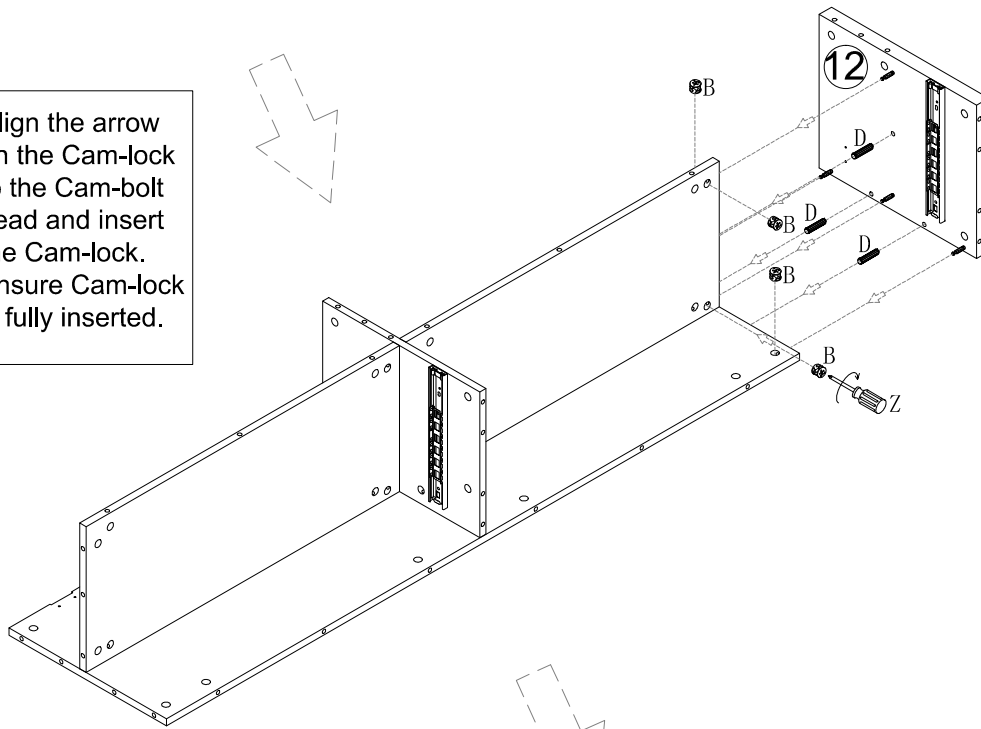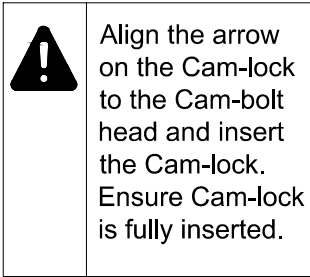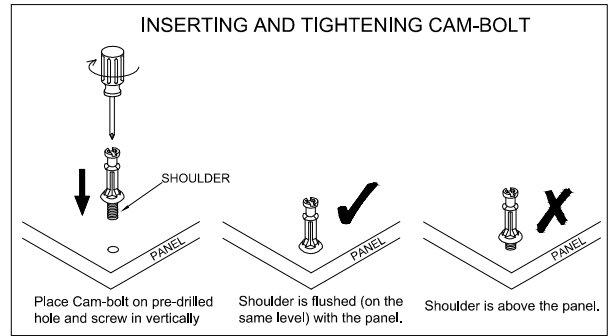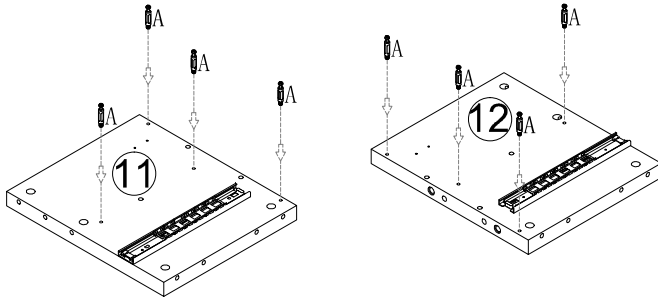







	A×8PCS
	B×8PCS
	D×6PCS

STEP 13

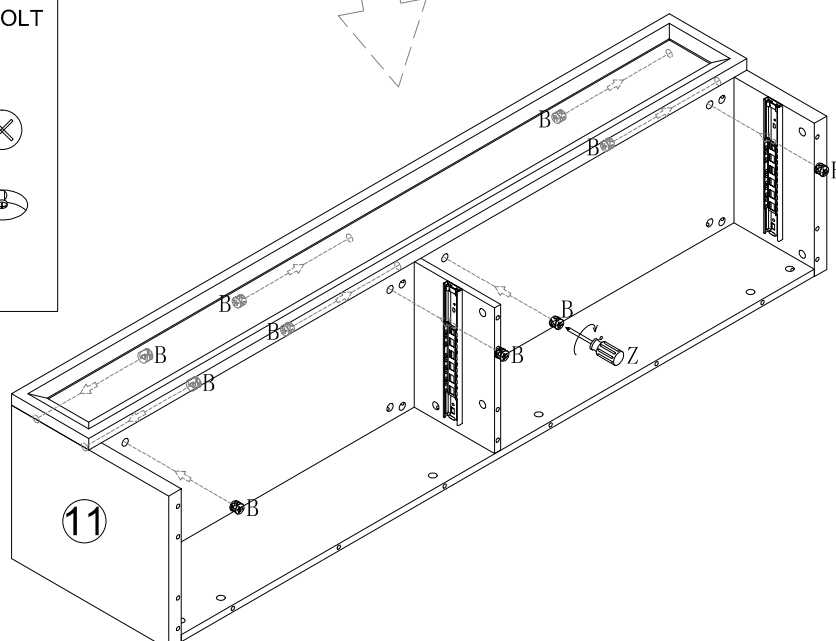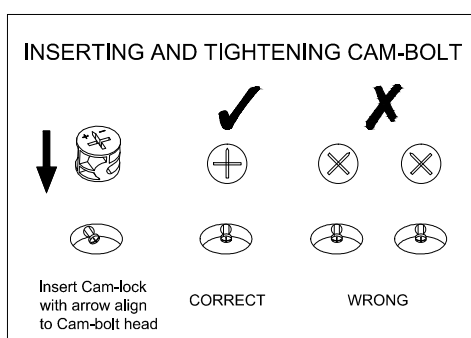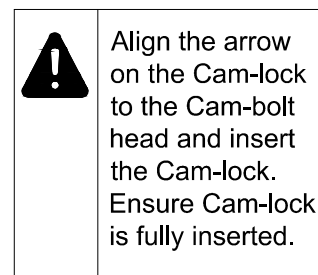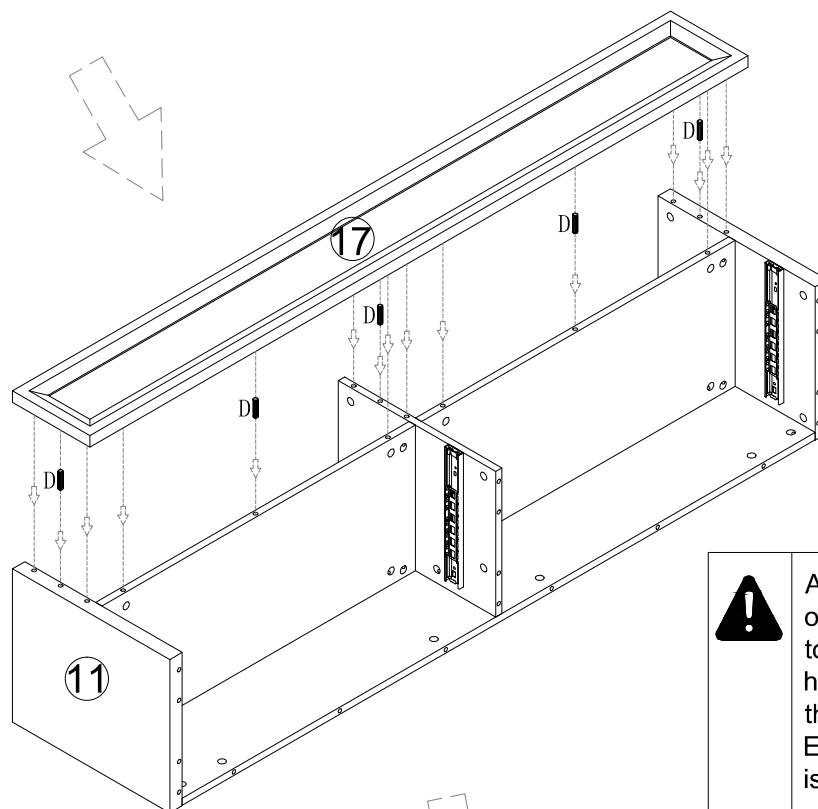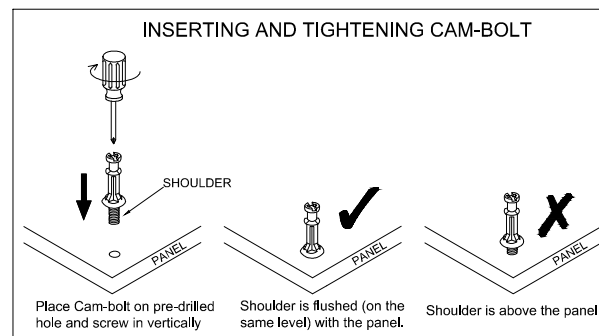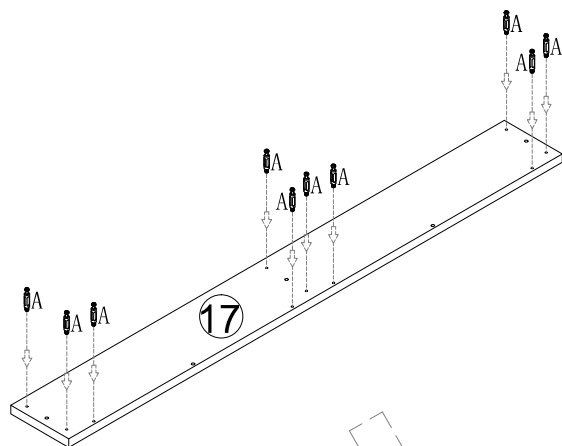


	A×10PCS
	B×10PCS
	D×5PCS

STEP 14

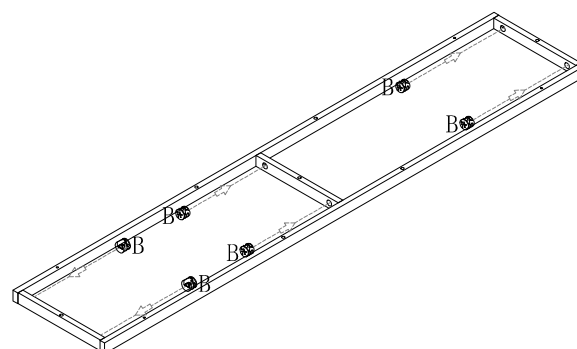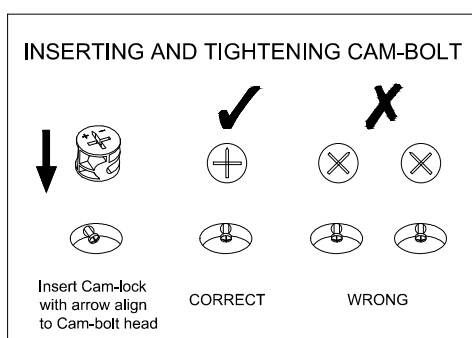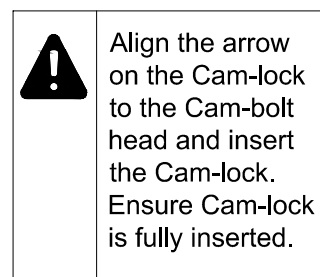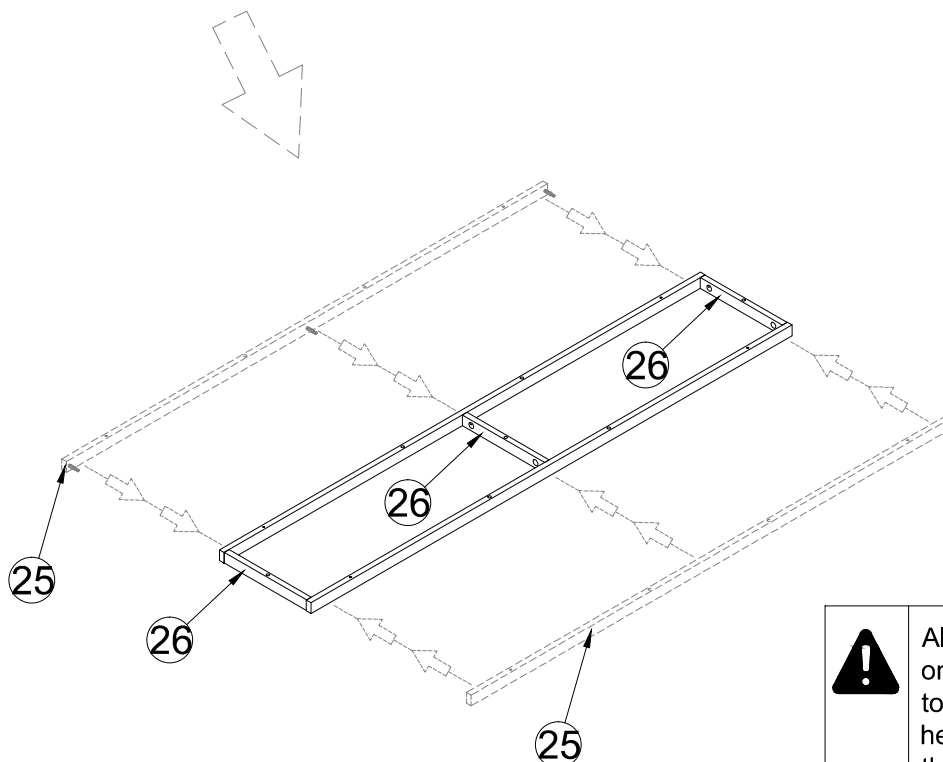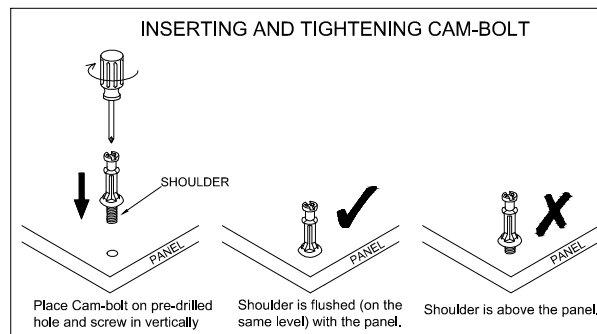
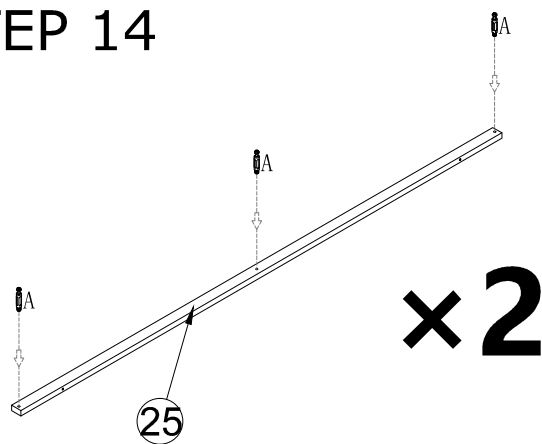



	A×6PCS
	B×6PCS

STEP 15



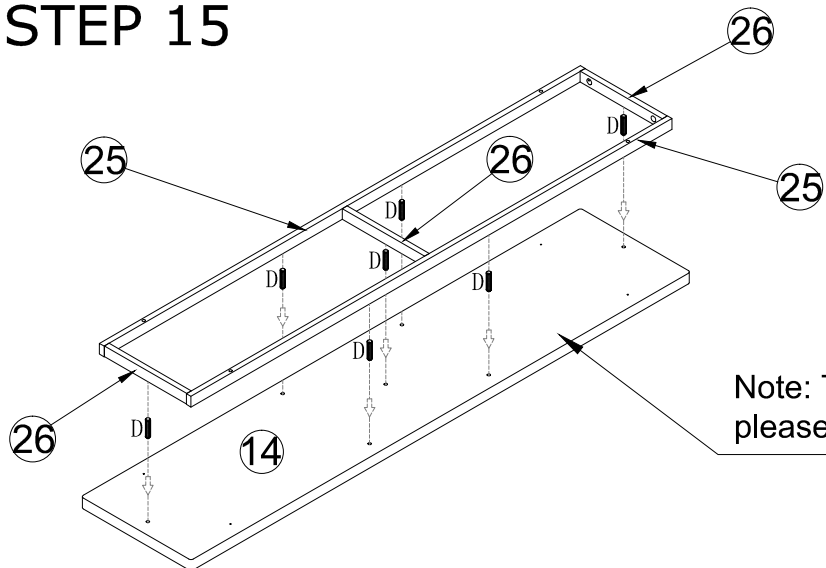


Note: This block has holes on both sides, please pay attention to the difference.

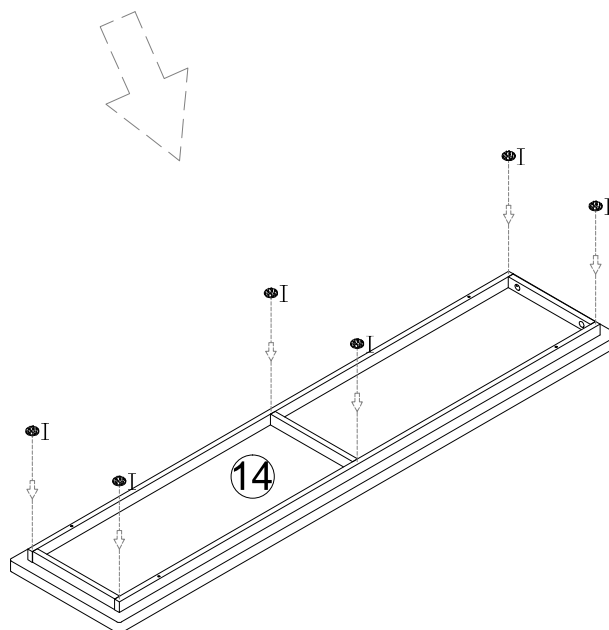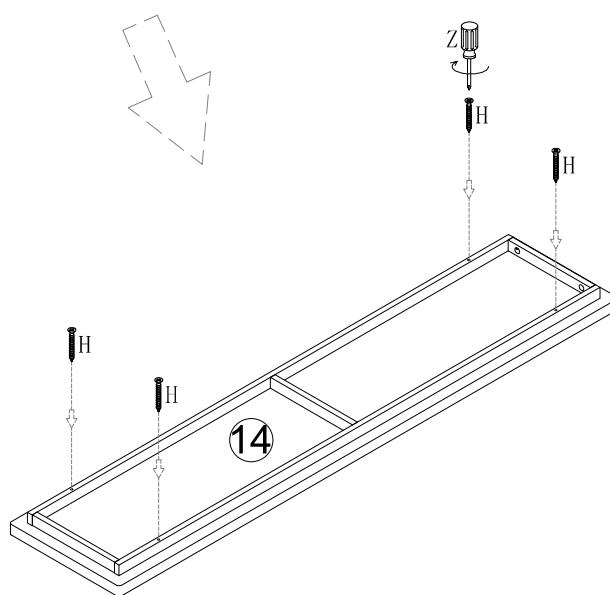


	D×7PCS
	H×4PCS
	I×6PCS

STEP 16

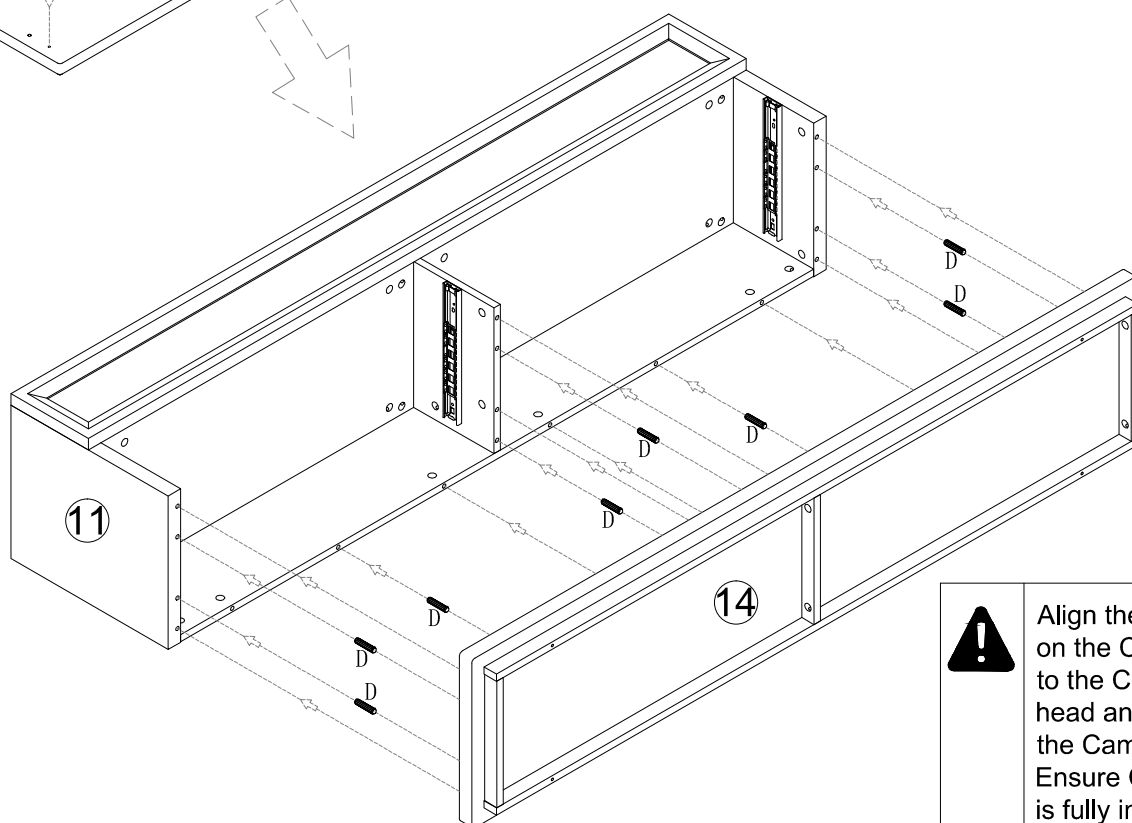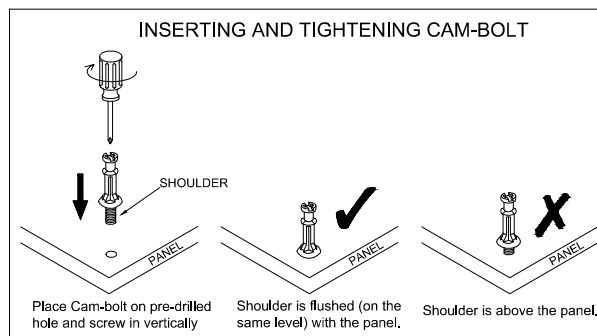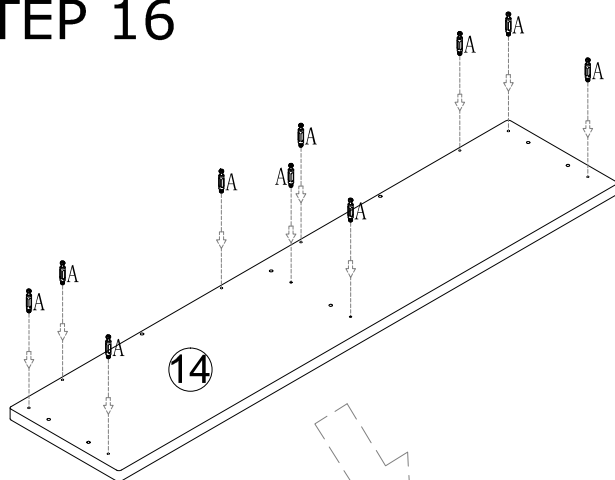

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

INSERTING AND TIGHTENING CAM-BOLT

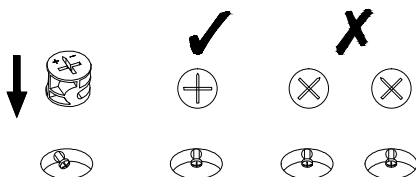








Insert Cam-lock with arrow align to Cam-bolt head

CORRECT

WRONG








	A×10PCS
	B×10PCS
	D×8PCS

STEP 17

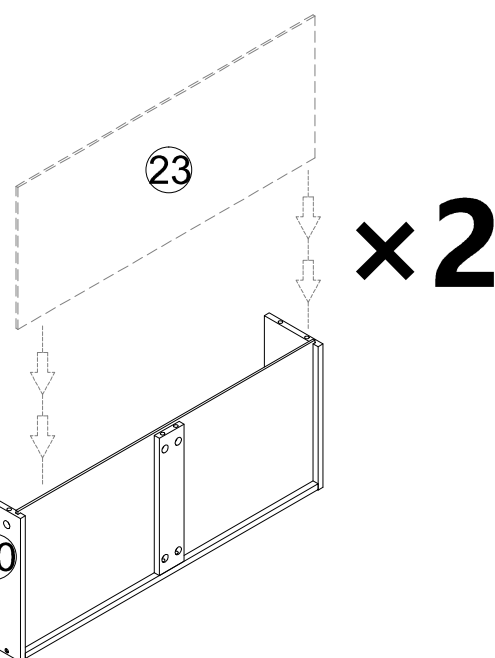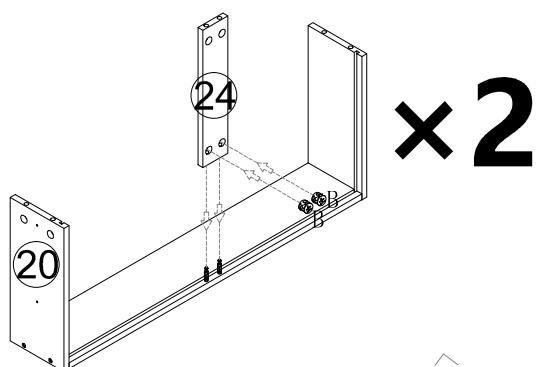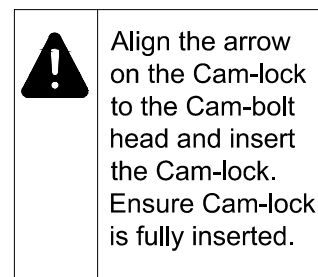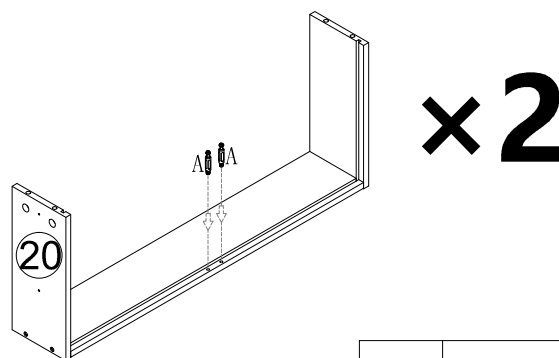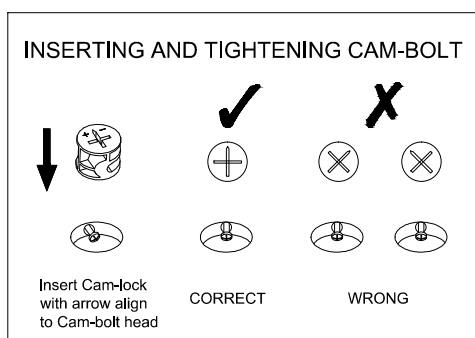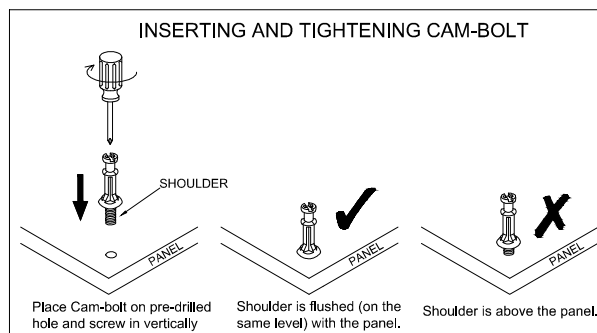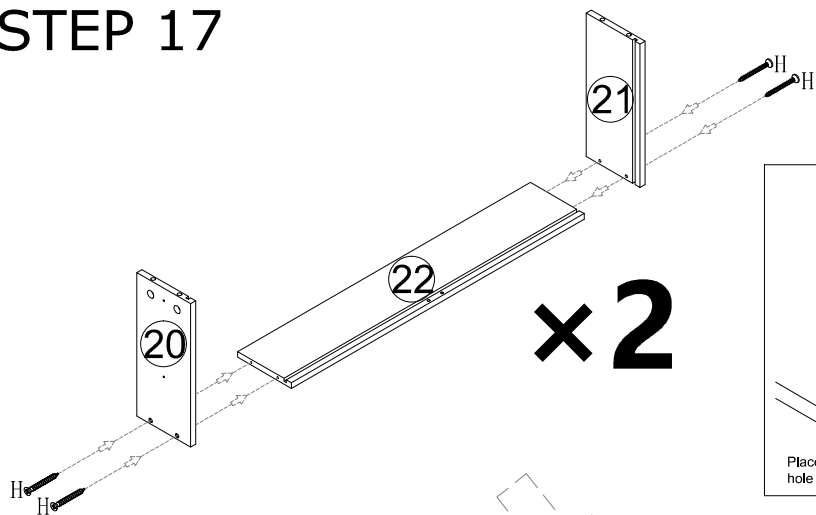


	A×4PCS
	B×4PCS
	H×8PCS

STEP 18

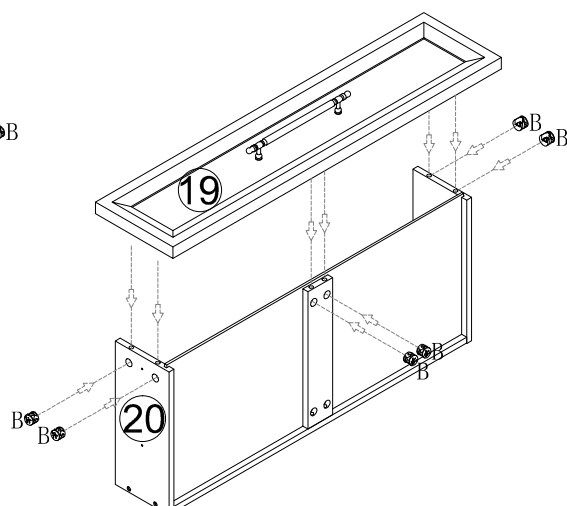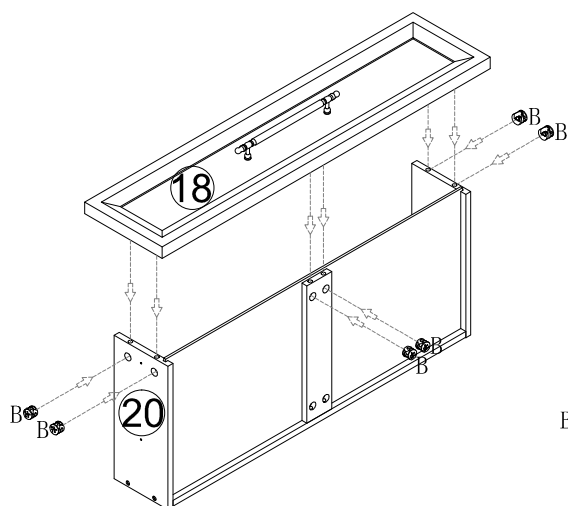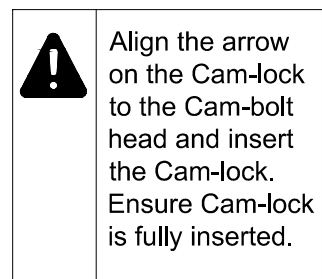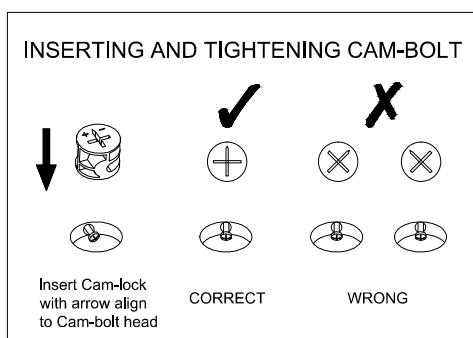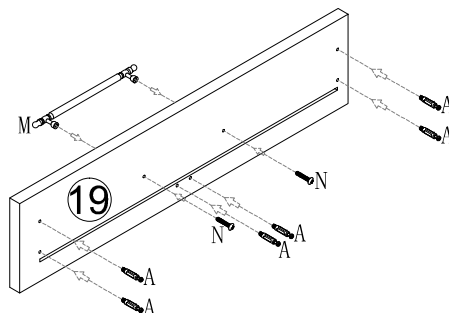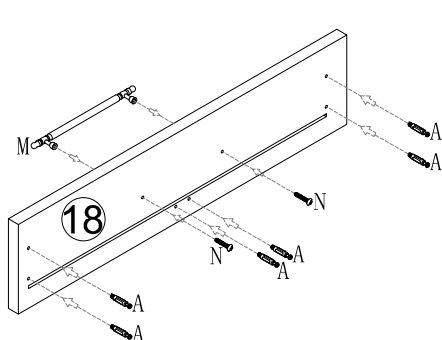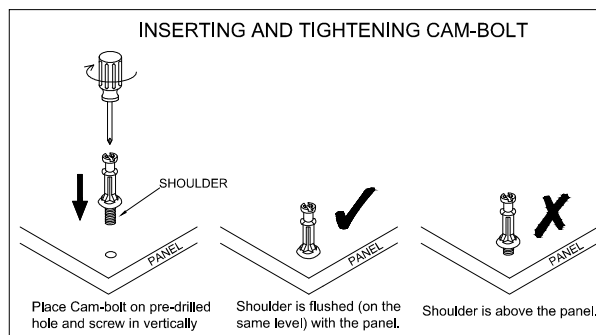


	A×12PCS
	B×12PCS
	M×2PCS
	N×4PCS

STEP 19

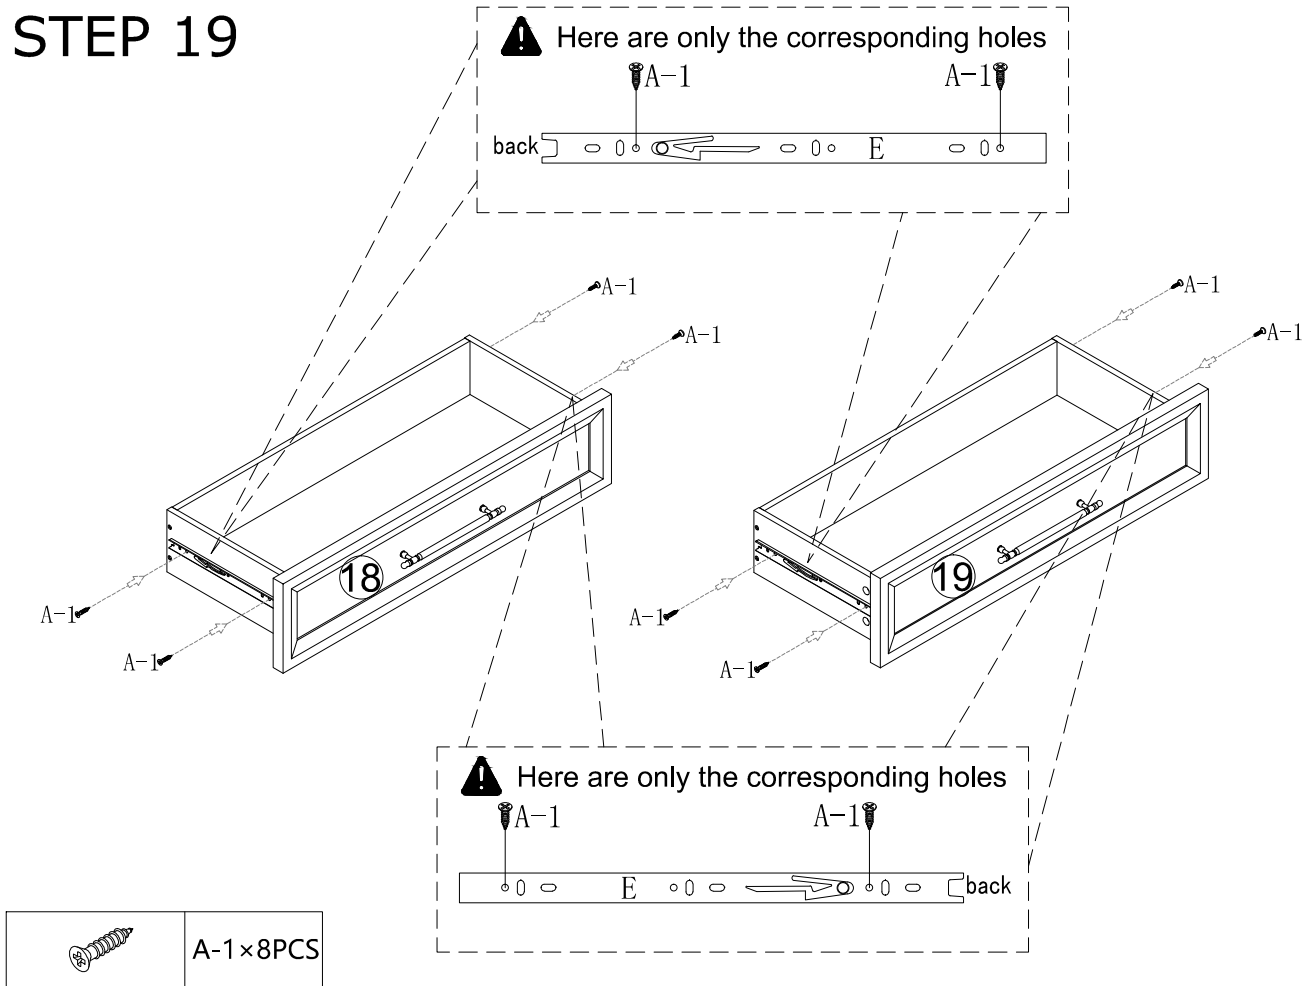


STEP 20

Drawer Front Alignment

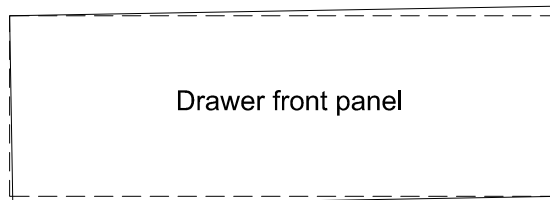


If the drawer front panel is NOT level after being assembled, then...

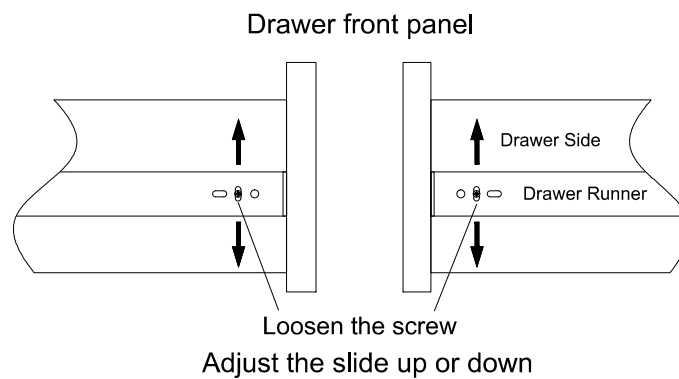


Loosen the screws on the left and right hand side, then adjust the drawer slide up or down, until the drawer fronts are even/level, then tighten the screws.

STEP 21

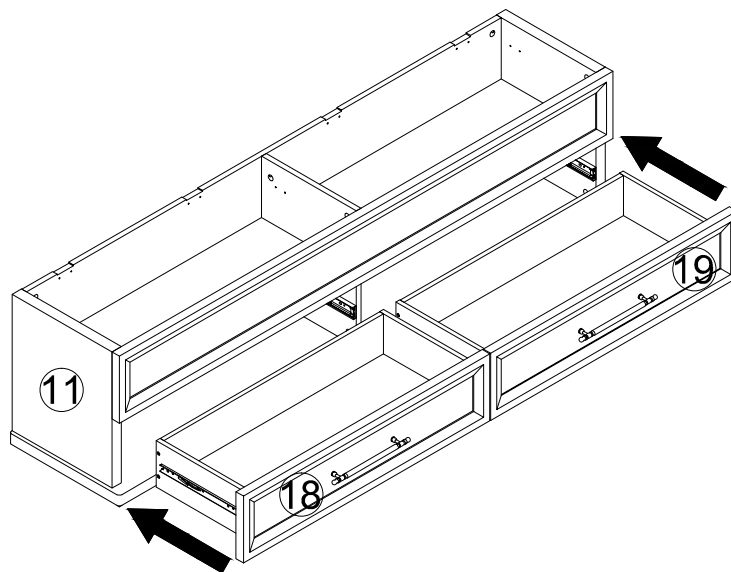


STEP 22


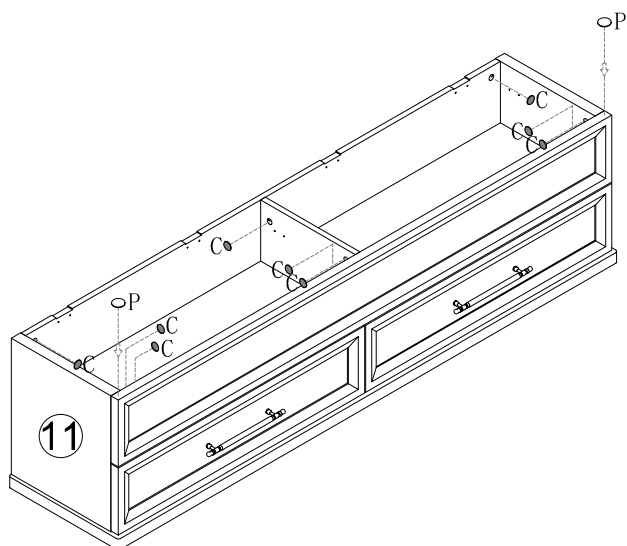


	C×9PCS
	P×2PCS


STEP 23

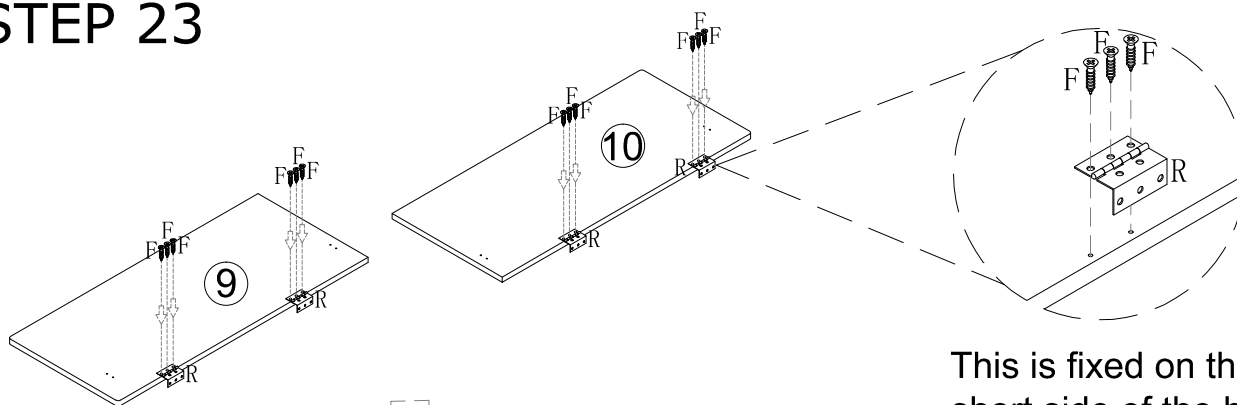


This is fixed on the short side of the hinge.

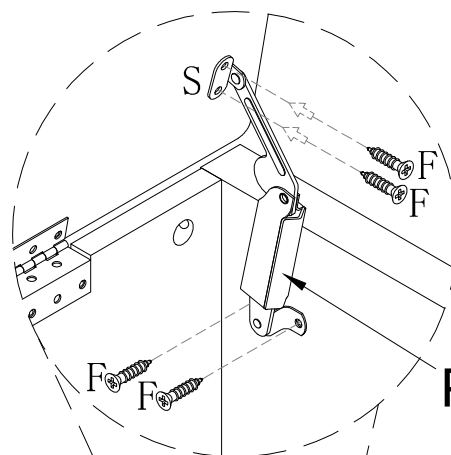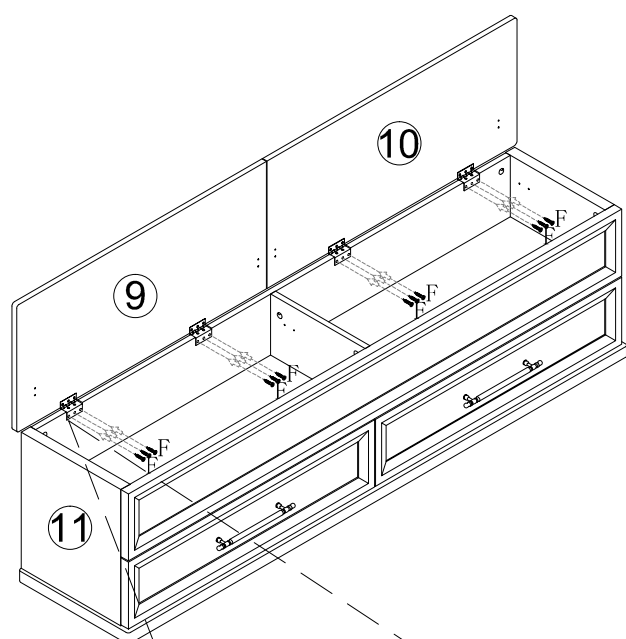

Right

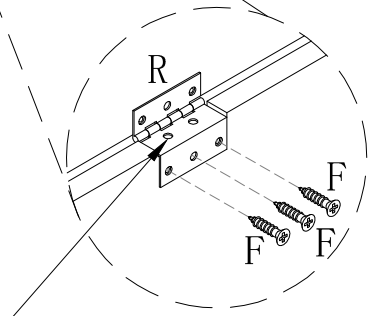

Note: The two holes above must not be secured with screws, otherwise it will cause the panel to be unable to close.


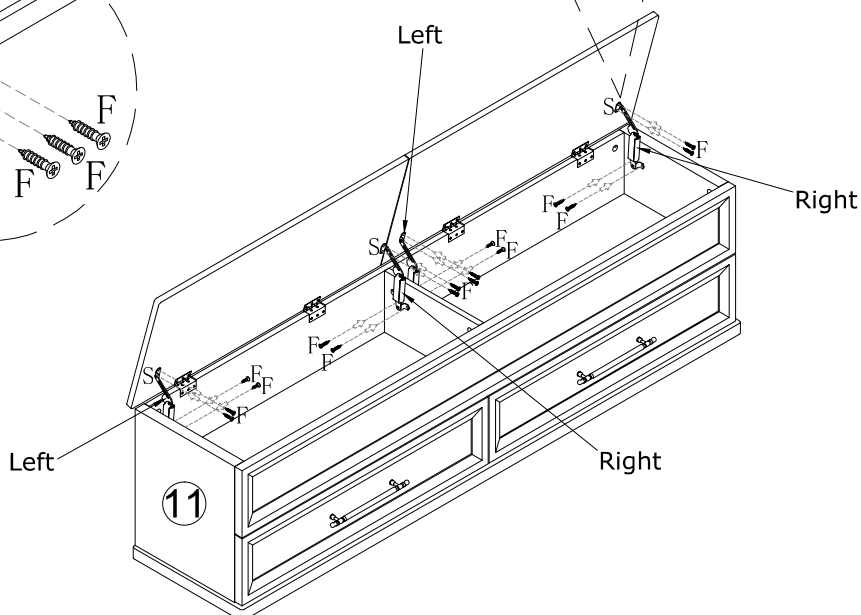


	F×40PCS
	R×4PCS
	S×2Sets




STEP 24



Reminder: The bed frame is heavy. From this step on, please place the accessories in the area where the bed will eventually be placed, and then proceed with subsequent assembly operations.

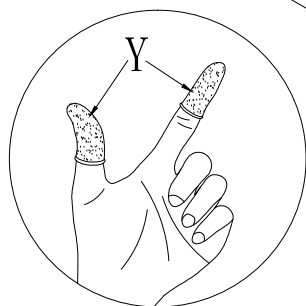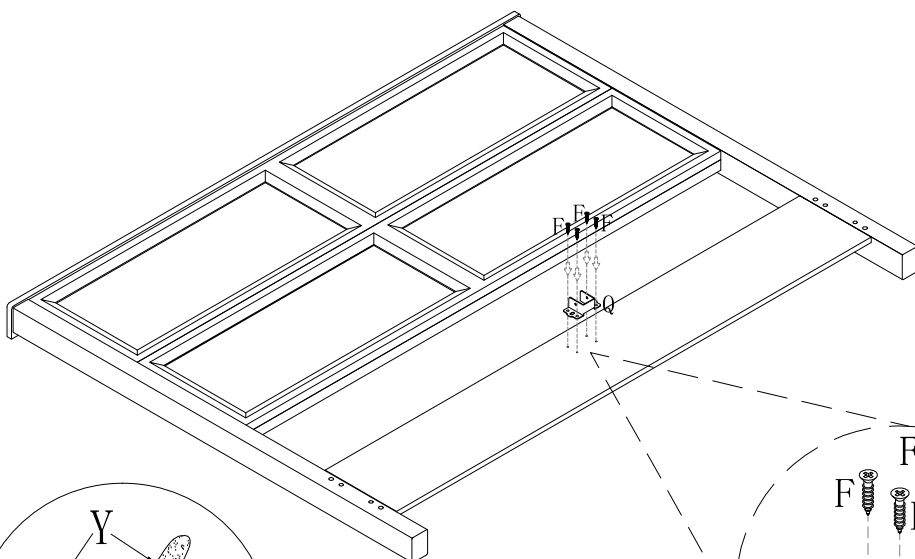


When installing the screw T, please wear finger cots for better grip and finger protection.

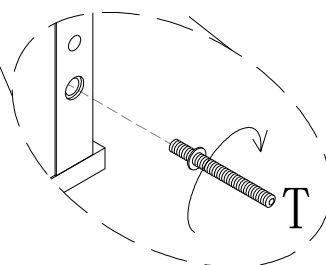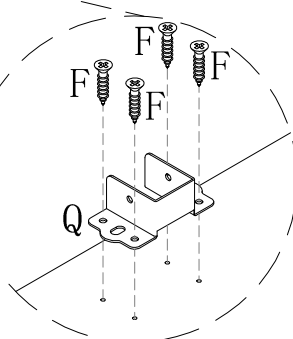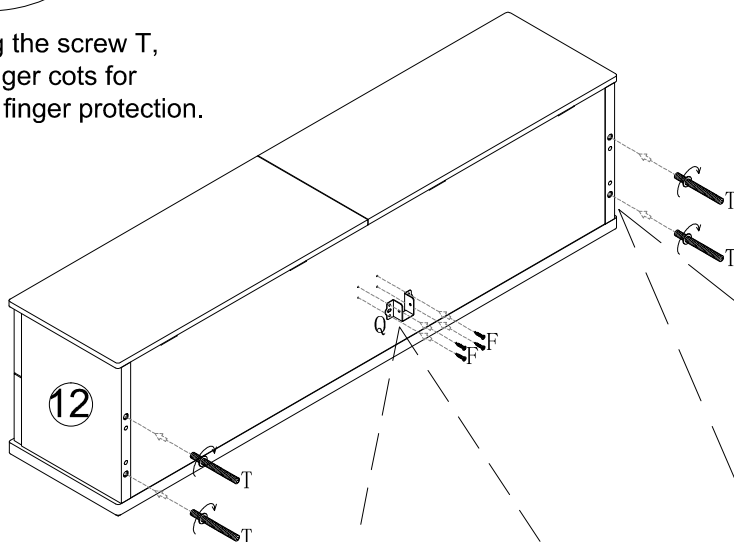


Note: Screw the shorter end of the screw into the board.

	F×8PCS
	Q×2PCS
	T×4PCS
	Y×4PCS

STEP 25

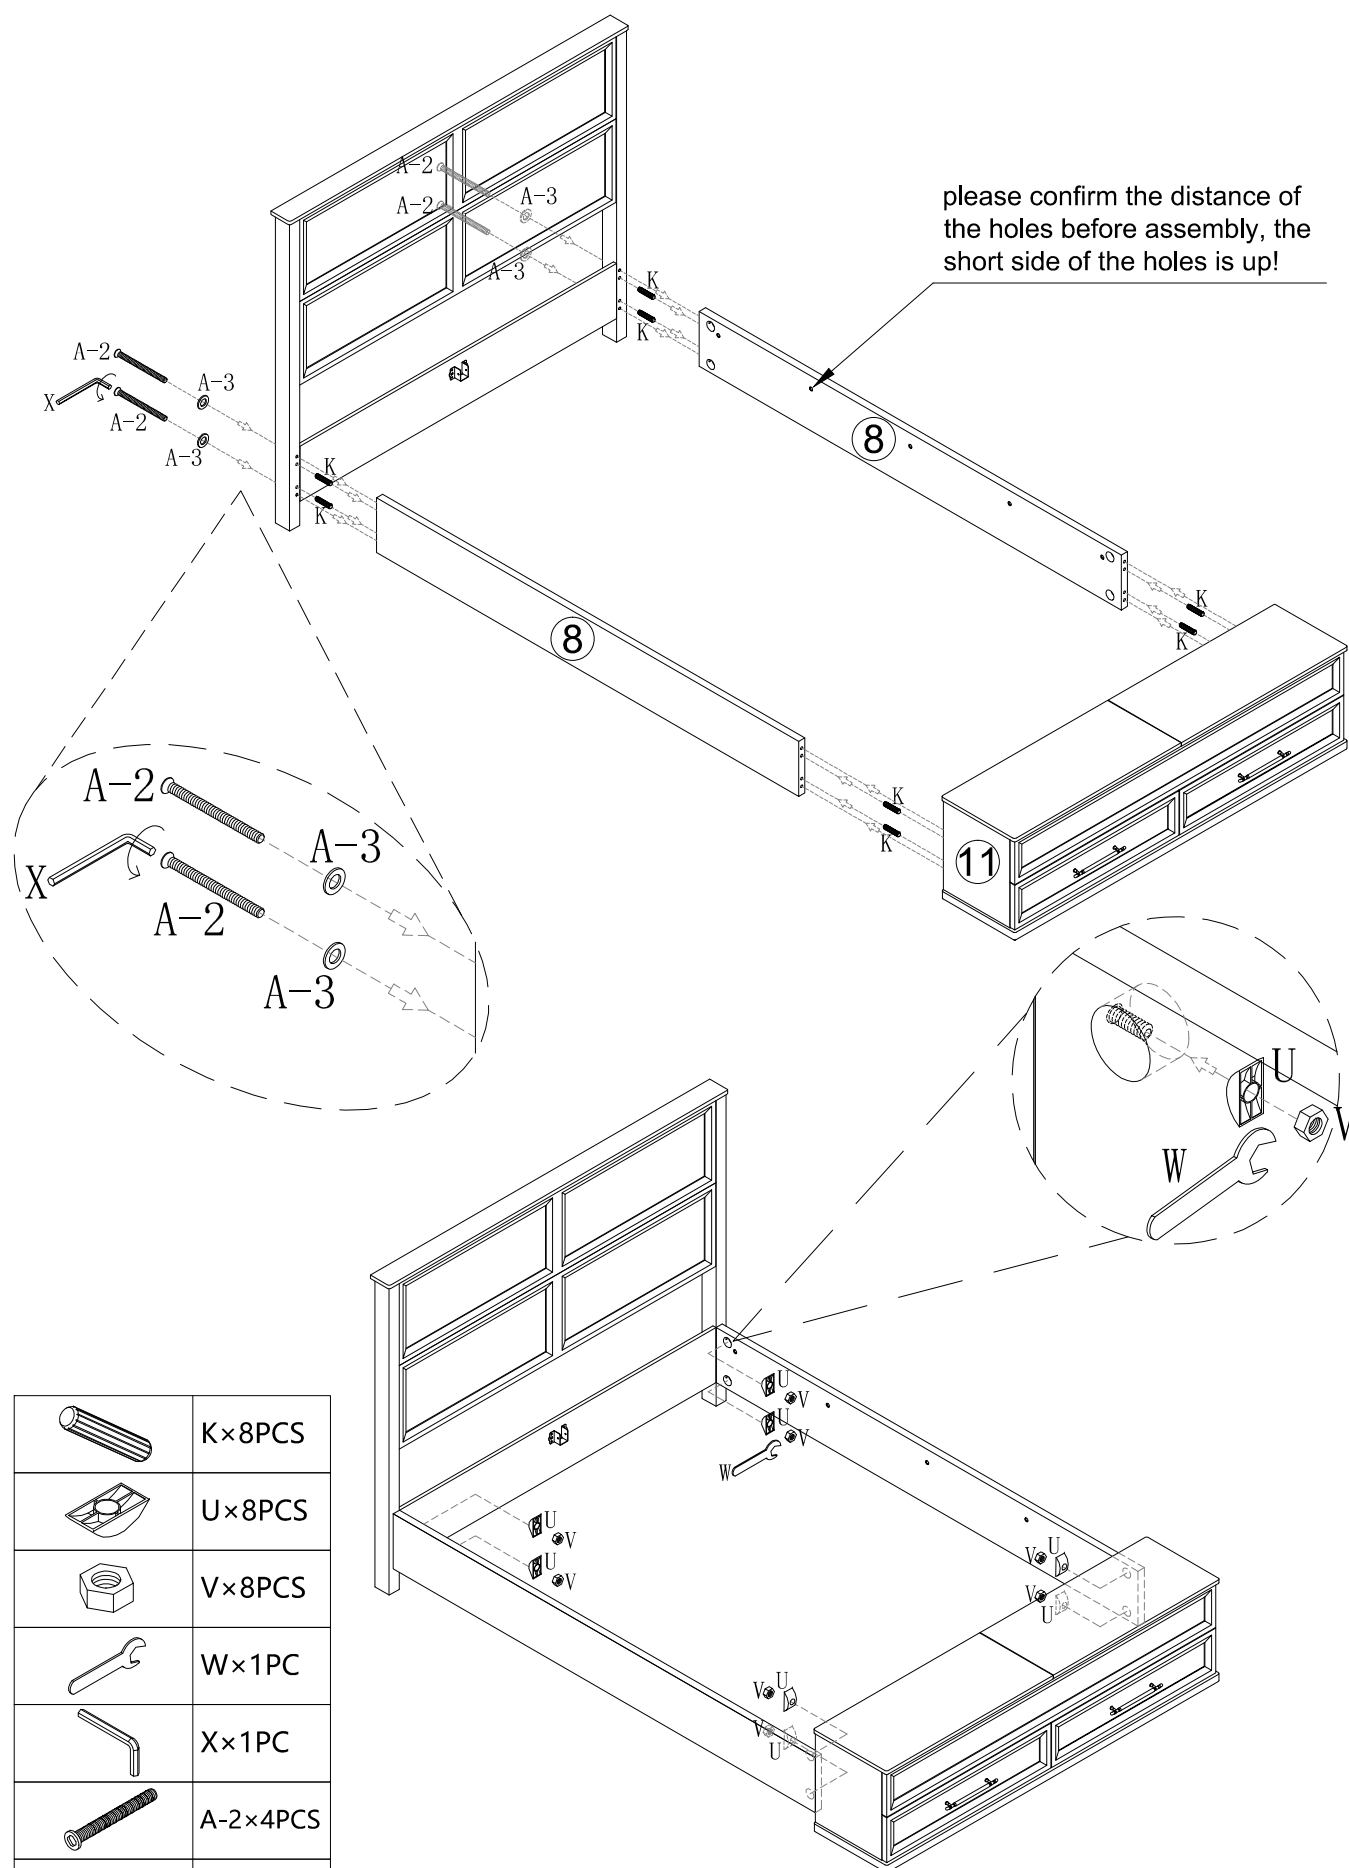


STEP 26

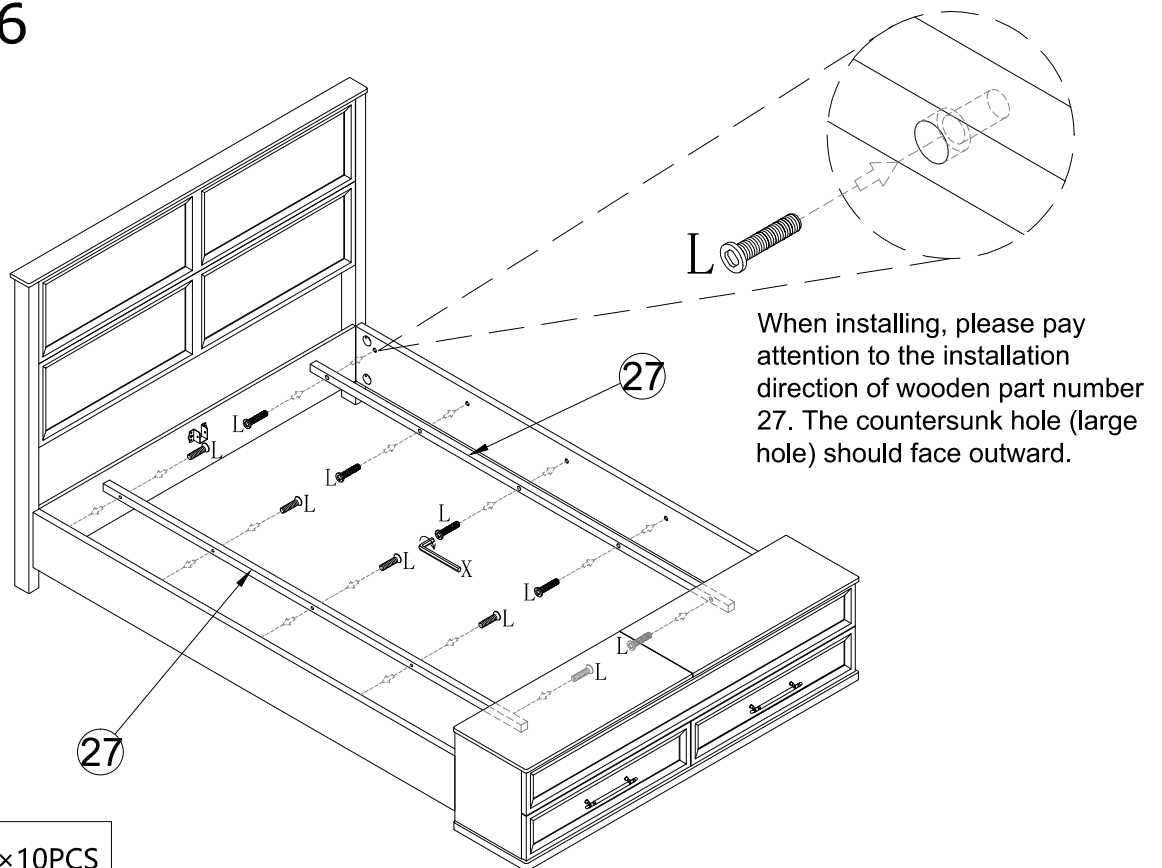



	L×10PCS
	X×1PC

STEP 27

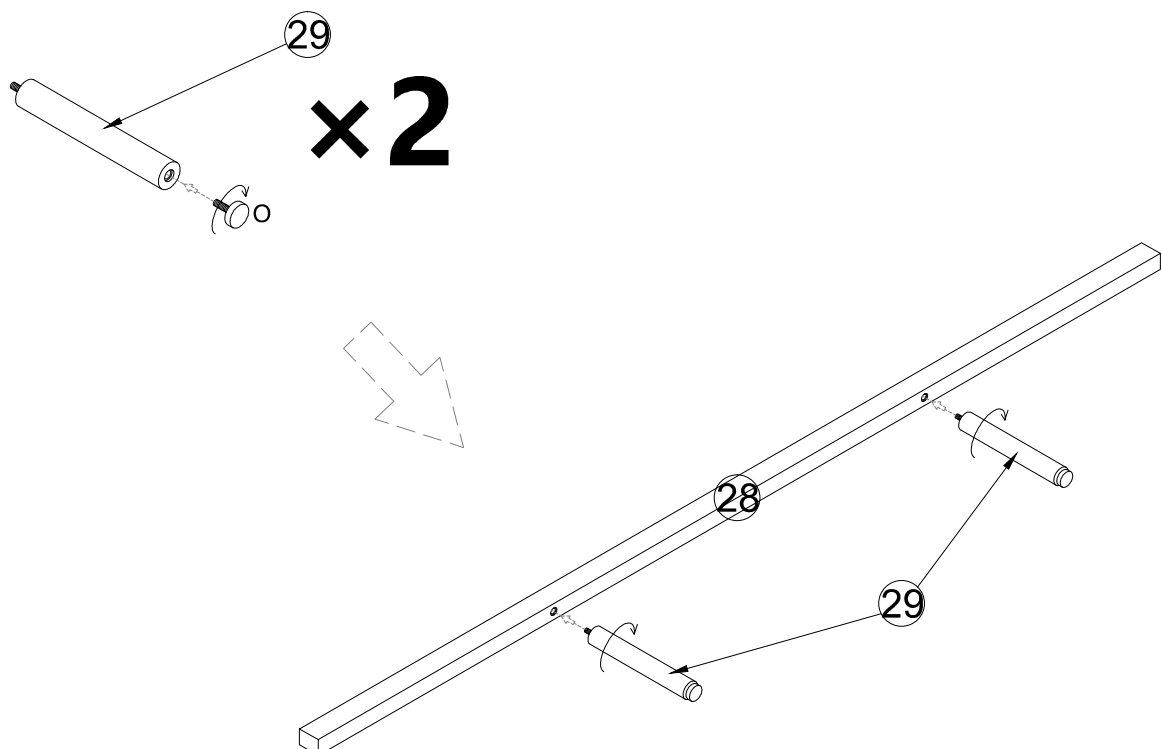

	O×2PCS
---	--------

STEP 28

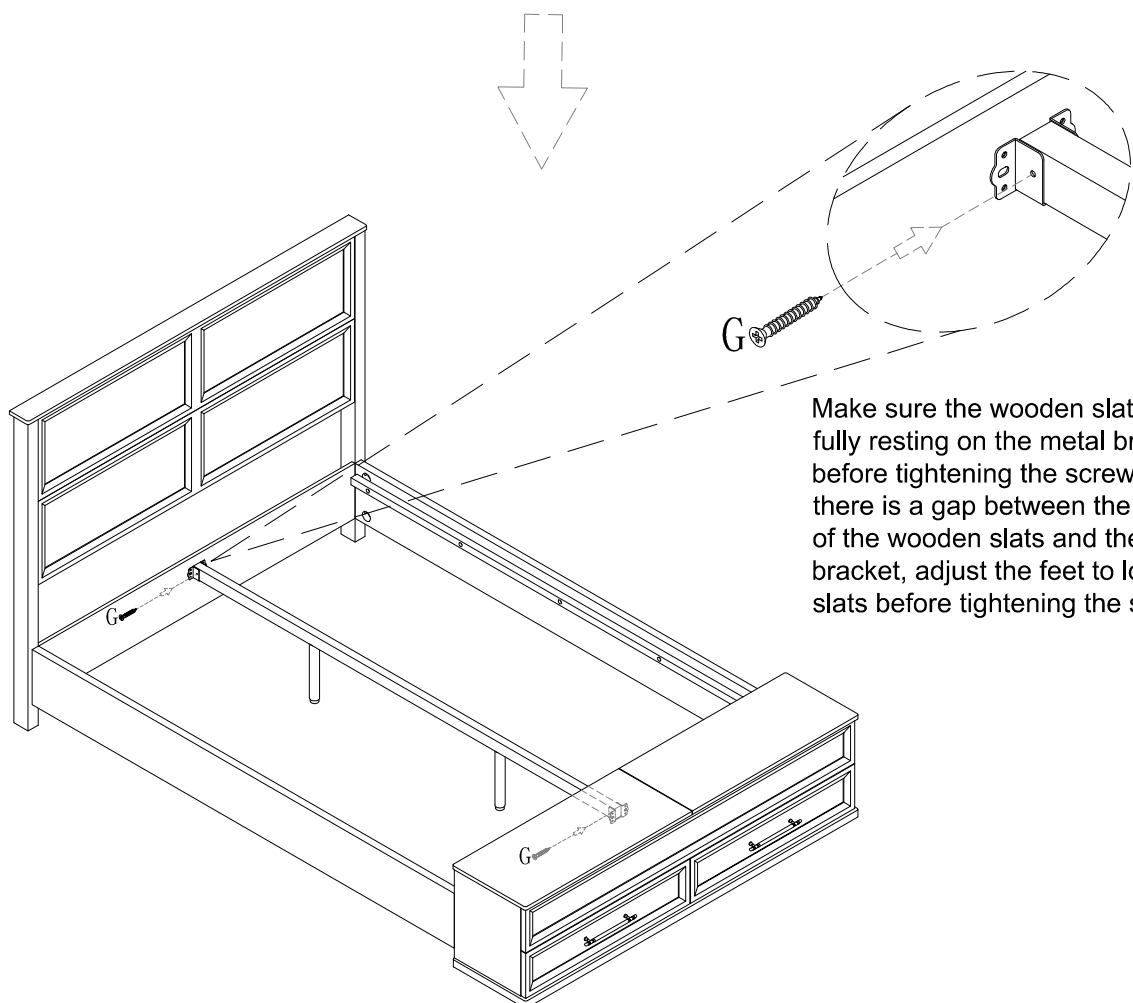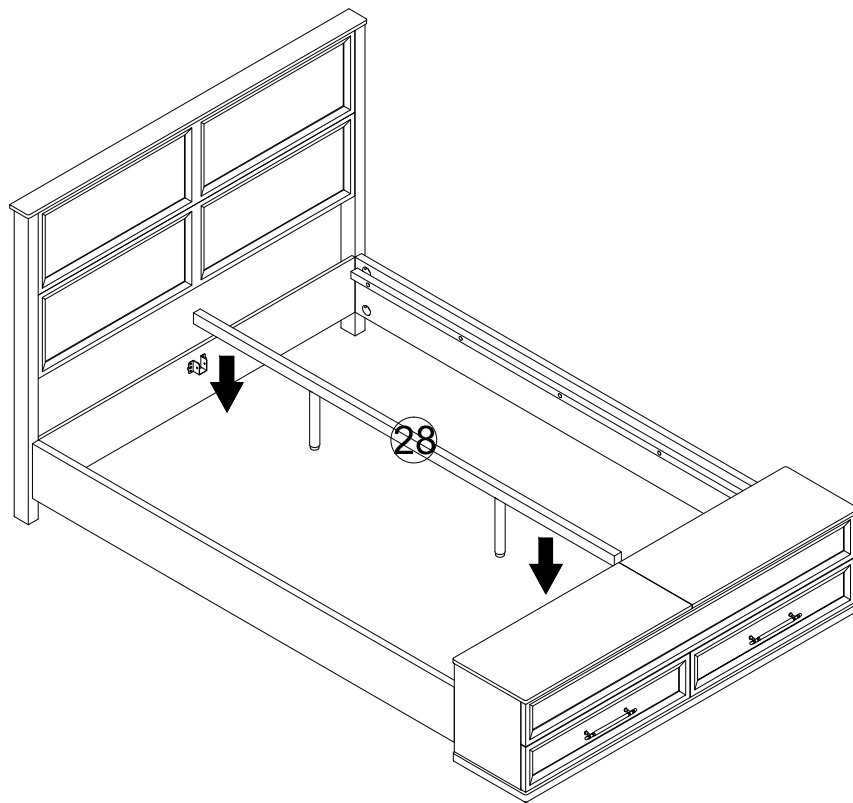


Make sure the wooden slats are fully resting on the metal bracket before tightening the screws. If there is a gap between the bottom of the wooden slats and the metal bracket, adjust the feet to lower the slats before tightening the screws.






G×2PCS

STEP 29

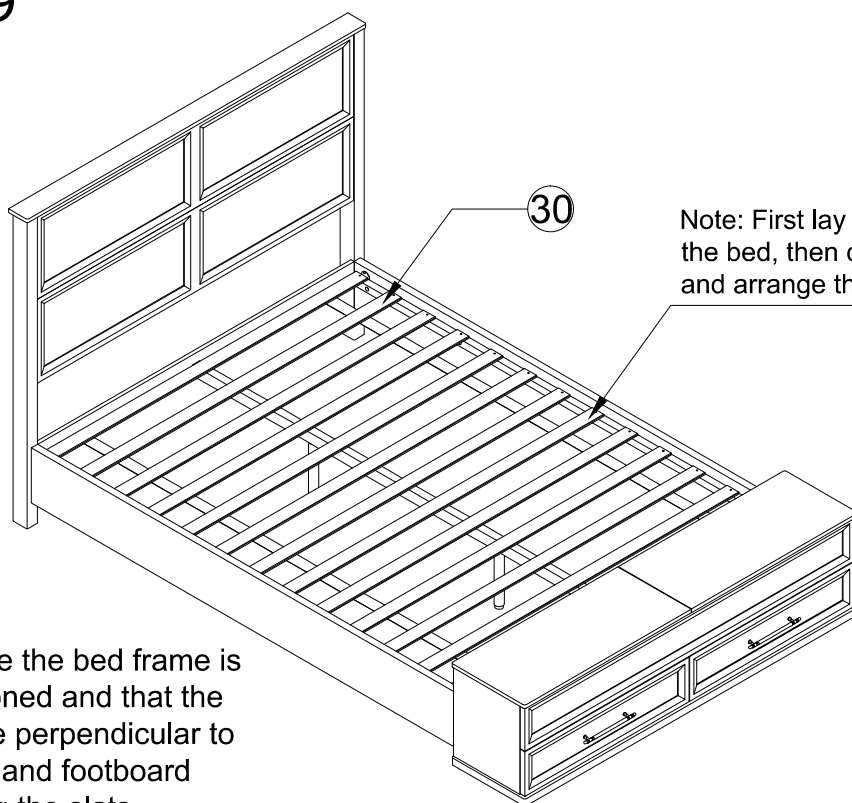


First, make sure the bed frame is properly positioned and that the side frames are perpendicular to the headboard and footboard before installing the slats.

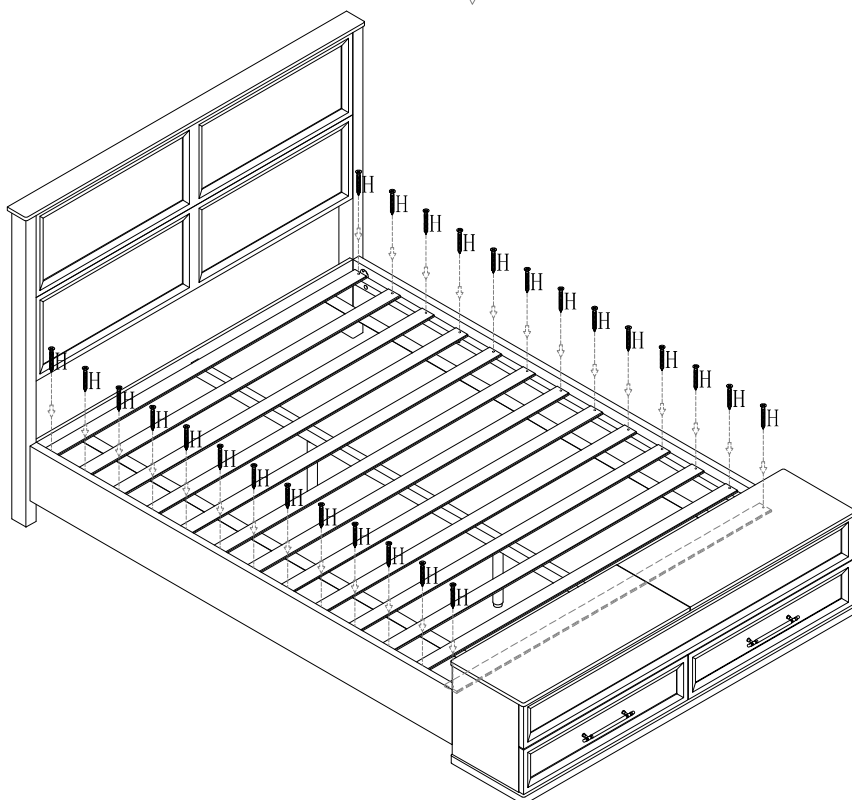

H×26PCS

STEP 30

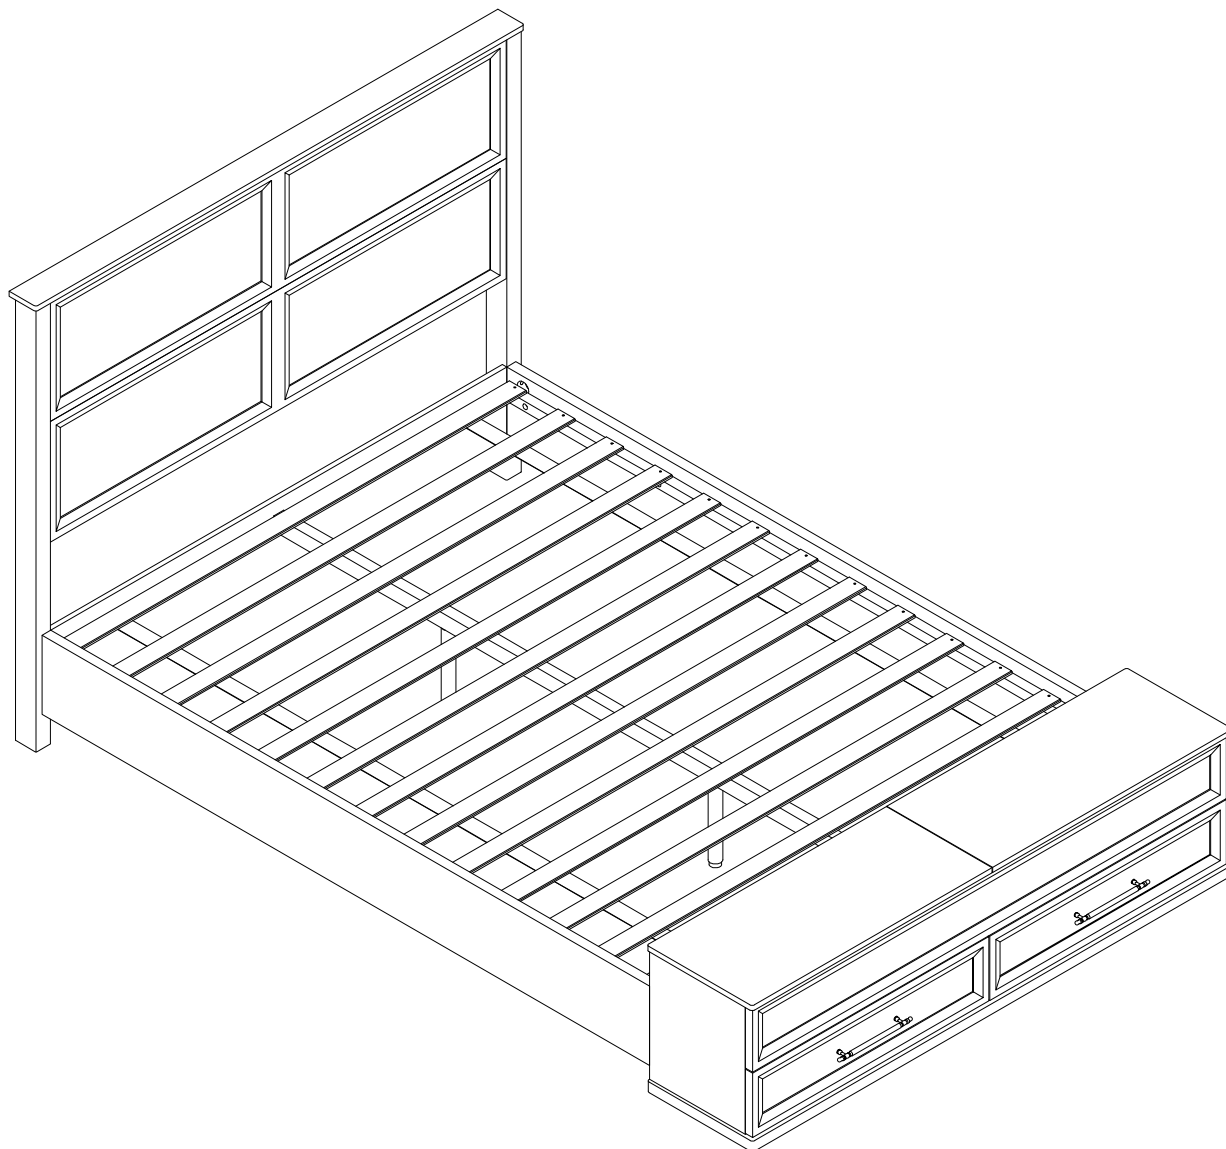

Assembly complete