
4. MOUNTING AND WIRING


1. Mount the Mounting Plate

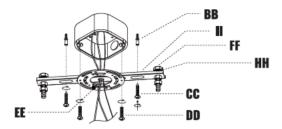

STEP 1: Loosen the cap nut (GG) from the canopy (A), take out the mounting plate (II).


STEP 2: Mark and drill screw holes in the ceiling, then insert the screw anchors (BB).

STEP 3: Take off the screws from outlet box, attach the mounting plate (II) to the box with screws taken off or provided (DD), and then fasten it with wood screws (CC).

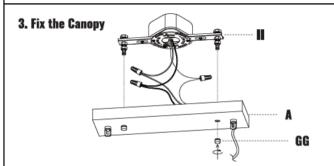

Fix the canopy (A) onto the mounting plate (II) with cap nuts (GG) taken off.


2. Connect the Wires

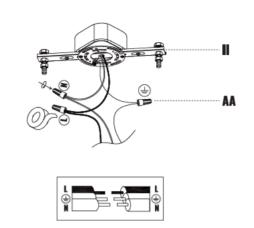

STEP 1: Connect the wires from the fixture to the house supply wires with wire nuts (AA), ground wire (green, green/yellow, or bare copper) to ground wire, neutral wire (white) to neutral wire, and hot wire (black) to hot wire. Wrap the connection with electrical tape.


STEP 2: Spread apart the wires so that the hot wires are on one side of the outlet box and the neutral wires are on the other side.

5. ATTACH THE GLASS AND INSTALL BULBS

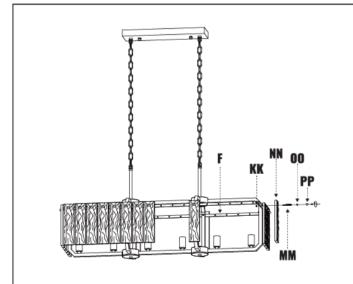


1.Screw the short fixed screws (MM) into the screw caps (PP), and fit the plastic washers (OO) onto them.

2.Attach the other pieces of glass (NN) to the glass holder (F) with screws assembled earlier and M4 nuts (KK) provided.

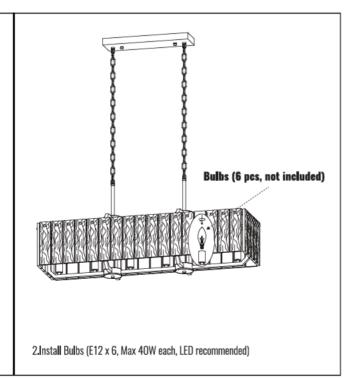

INSTALLATION MANUAL

CHANDELIER

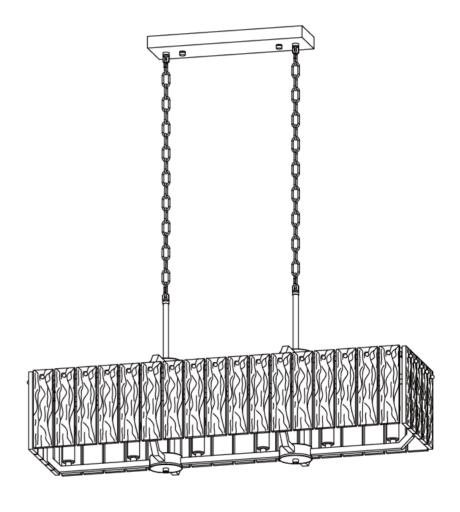

TOOLS REQUIRED












Wire Strippers



1. PACKING LIST

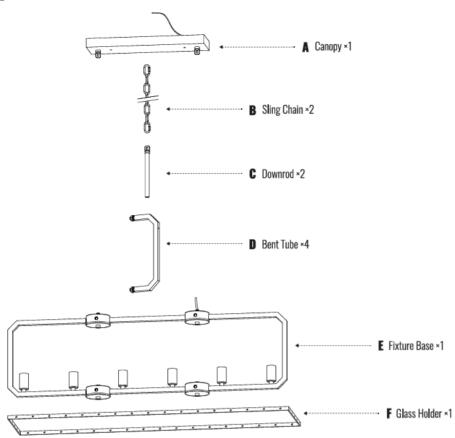

2. INSTALLATION KIT

		_			_			_							_		
AA	A 3	3×	BB	4,	CC	;	4×	DD		2×	EE	1×	FF	2×	GG		2×
	0			- Charles					(C) Departments								
Wire Nut		Screw Anchor			Wood Screw			ounting Scre	w	Ground Screw		Canopy Screw			Cap Nut		
Н	H 2	2×	II	1,	IJ		4×	KK		44×	ш	6×	мм	38×	NN	D-201	44×
0							•		CERTIFIE								
	Flat Washer		Mounting Plate			M6 Nut		M4 Nut		Long Fixed Screw		Short Fixed Screw		Glass			
00	D 44	4×	PP	44	QO	Į	8×	RR		8×	SS	4×	π	4×	UU	20.	1×
	0		0			8			~								
	Plastic Washer		Screw Cap			M10 Nut		Washer		Cover		Cover Nut		Gloves			

NOTE:

1.The glass parts (NN) are fragile and spare parts are included.


2.Parts "EE, FF, GG, HH, II, JJ" have already been pre-installed together with the canopy (A).

3.Parts "SS, TT" have already been installed together with the fixture base (E). You must loosen them before installation. (See STEP 1 in Fixture Assembly)


4.Parts "QQ, RR" have already been installed together with the bent tubes (D). You must loosen them before installation. (See STEP 2 in Fixture Assembly)

6.The light bulbs are not included in the packing list.


3. FIXTURE ASSEMBLY

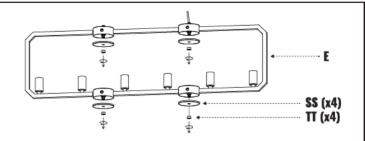


STEP 1: Loosen the cover nuts (TT) and remove the covers (SS) on the fixture base (E).

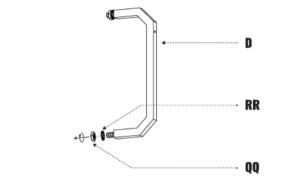


STEP 2: Loosen the M10 nuts (QQ) and remove the washers (RR) on the bent tube (D).

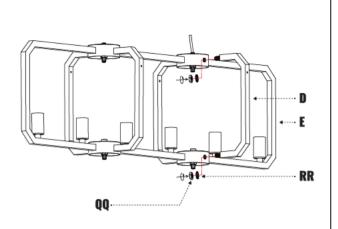

STEP 3: Insert the bent tubes (D) into the holes of the fixture base (E), tighten them with the washers (RR) and M10 nuts (QQ) that were previously removed.

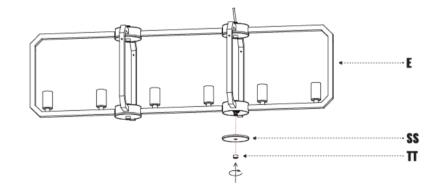


STEP 4: Reinstall the covers (SS) onto the fixture base (E) using the cover nuts (TT) previously removed.

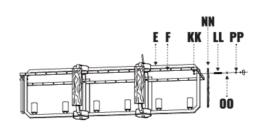

STEP 5: 1,Screw the long fixed screws (LL) into the screw caps (PP), and fit the plastic washers (OO) onto them.

2 Install the glass holder (F) onto the fixture base (E), aligning the holes of the glass holder (F) with those of the fixture base (E).

3.Attach 6 pieces of glass (NN) to the glass holder (F) with screws assembled earlier and M4 nuts (KK) provided.

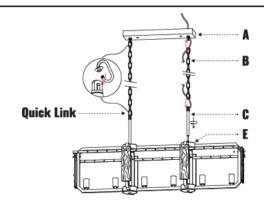

STEP 6: Thread the wires of the fixture through the downrod (C), sling chain (B) and canopy (A), and securely fasten the downrod (C) to the fixture base (E). Loosen the quick links at both ends of the sling chain (B) and attach them separately to the canopy (A) and the downrod (C).